Recessed Door Contact wc20-345



Operating Instructions

The WC20-345 is the industry's most flexible supervised recessed door/window contact, allowing a multitude of applications while hiding the transmitter within a door or window frame. The WC20-345 uses a replaceable lithium battery and should last 7 years under normal

Installation & Mounting Guidelines

It is important to select the proper placement of the recessed transmitter and magnet. The transmitter comes with two different tops, however, the screw mount is recommended for securing the sensor to the door frame. The magnet does not have a second top with a flange to screw it into place so you must be extra careful to ensure that the magnet is tightly in place once installed.

- 1. Install the recommended battery if it is not already installed (see Battery Installation & Replacement).
- 2. Select a location on the door or window frame for the WC20-345 transmitter and magnet to be installed. Use a marker to mark and ensure that the two holes you intend to drill are lined up directly across from each other.
- 3. Using an 11/16" drill bit, slowly drill the first hole for the transmitter. The WC20-345 was specifically designed to be slightly larger than an 11/16" hole so you will need to carefully drill to fit by slowly routing the hole little by little to ensure a snug fit. Use the flanged cap and use the included screws for mounting the transmitter to the door or window frame.
- Drill the matching hole for the magnet, directly opposite from the transmitter in the door, also using an 11/16" drill bit.

Programming

Refer to the 2GIG or Honevwell installation & Programming Instructions wireless devices for WC20-345 contacts.


2GIG panels allow a tamper to be sent to 'LEARN' the serial code of the transmitter. The WC20-345 sends a tamper Fault and Restore when the battery is installed. To learn the contact into a 2GIG panel insert the battery while the panel is in 'LEARN' mode. If inserting the battery does not learn in the contact to the panel, use the supplied magnet to learn in the contact.


Testina

Before mounting the sensor, verify that the sensor mounting location provides good RF communication to the panel. To verify, do the following:

- 1. Put the control panel into sensor test mode.
- Hold the magnet next to the removable cap on the sensor and then pull the magnet away from
- Listen for siren or keypad beeps to determine appropriate response (refer to the control panel installation instructions).
- 4. Exit sensor test mode.

Note: It is recommended that a system test be performed per the Operation & User's Guide at least once a year.

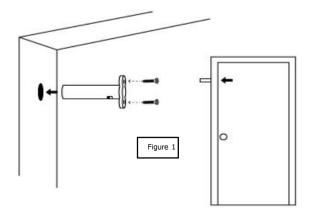

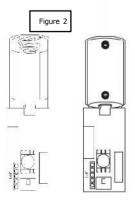

Battery Installation & Replacement

Use a flat head screw driver to pry open the top of the WC20-345 to change tops or access the battery

NOTICE: Before removing the circuit board. notice that it fits inside a channel on the inside of the case. When replacing the board. ensure you fit it back into the same channel for proper fit.



Use care when installing the battery and observe the correct polarity when the battery is inserted (see Figure 2). Use only the recommended replacement batteries (see Specifications).

WARNING! The polarity of the battery must be observed, as shown (see Figure 2). Improper handling of lithium batteries may result in heat generation, explosion or fire, which may lead to personal injuries. Replace only with the same or equivalent type of battery as recommended by the manufacturer. (see Specifications)

Batteries must not be recharged, disassembled or disposed of in fire. Disposal of used batteries must be made in accordance with the waste recovery and recycling regulations in your area.

Keep away from small children. If batteries are swallowed, promptly see a doctor.

California Only: This Perchlorate warning applies only to Manganese Dioxide Lithium cells sold or distributed ONLY in California, USA. Perchlorate Material-special handling may apply. See www.dtsc.ca.gov/hazardouswaste/perchlorate.

Specifications

Color

Wireless Signal Range 450 ft., open air, with 2GIG or Honeywell Wireless Alarm Control Panel

Code Outputs Alarm; Alarm Restore; Supervisory; Low Battery

Transmitter Frequency 345.000 MHz (crystal controlled)

Transmitter Frequency Tolerance ± 15 kHz Transmitter Bandwidth 24 kHz

Modulation Type Amplitude Shift Keying—On/Off Keying (ASK-OOK) Over one (1) million different code combinations Unique ID Codes

Supervisory Interval 70 minutes

Peak Field Strength Typical 50,000 uV/m at 3m

Reed Switch Magnetic Sensitivity 10 to 20 amp turns Reed Sensitivity

0.625 in. (1.59 cm) minimum gap, 0.85 in. (2.16 cm) typical Magnet Type Rare earth

Magnet Dimensions (HxD) 0.5 x 0.75 in. (1.27 x 1.9 cm) Sensor Dimensions (HxD) 2.57 x 0.75 in. (6.53 x 1.9 cm)

Weight (including battery & magnet) 1.25 oz. (35.4 q) Housing Material ABS plastic

White

Operating Temperature 32° to 120°F (0° to 49°C) Relative Humidity 5-95% Non-Condensing

Battery (included, not installed) One (1) Panasonic CR2, or equivalent Lithium battery

Regulatory Listing(s) FCC Part 15 Warranty*

Included Accessories Two magnetic cap styles (Normal and Screw type), two (2) Phillip's flat-head screws



Sentek Electronics Co., Ltd. www.sentek.cc

Rev. 0

Recessed Door Contact

WC20-345



FCC STATEMENT

- 1. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
- (1) This device may not cause harmful interference.
- (2) This device must accept any interference received, including interference that may cause undesired operation.
- 2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and

used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

