EXSOUND Pearl II Digital RF Wireless User's Guide





Pearl II Digital RF Wireless Manual Catalog

Package Contents	03
• Safety Notice	03
Product Features / Hardware Diagram	04
Product Operation & LED Indicator	07
Pearl II Digital RF Wireless Connects to XBOX360®	10
XBOX360®/XBOX Live® Voice Settings	11
Pearl II Digital RF Wireless Connects to XBOX Live	11
 Pearl II Digital RF Wireless Connects to PS3[™] 	12
PS3™ Audio Settings	12
Play Station Network Settings	13
Pearl II Digital RF Wireless Connects to DVD	14
Pearl II Digital RF Wireless Connects to PC	14
Pearl II Digital RF Wireless Connects to TV	15
• Pearl II Digital RF Wireless Connects to Wii™	16
Pearl II Digital RF Wireless Connects to iPhone/iPad/iPod	16
Important Information	17

Package Contents

- 1. One EXSOUND Pearl II Digital RF Wireless Headset
- 2. One EXSOUND Pearl II Digital RF Wireless Microphone
- 3. One EXSOUND Pearl II Digital RF Transmitter
- 4. One EXSOUND Pearl II Digital RF Receiver
- 5. AA Battery*2 (Note: These Bundle Batteries Can Not be Re-Charged.)
- 6. One USB Cable
- 7. One Optical Cable
- 8. One 3.5mm plug to RCA*2 plug Cable
- 9. One 3.5 mm plug to 2.5 mm plug Cable
- 10. One USB to Micro USB Re-Charge Cable
- 11. One Operation Manual























Safety Notice

WARNING: Continued exposure to high volumes of noise in headsets can cause long-term hearing damage. Your ears will adapt to loud volume levels over time and damage your hearing even if you don't feel any discomfort. Keeping the volume at a safe level is important while using the headset. The louder the sound is set, the less time it takes to affect your hearing.

When putting the headset on, it is advised to turn the volume to a low level, and then slowly increase it to a moderate and comfortable level.

Product Features / Hardware Diagram

Product Features

EXSOUND Pearl II Digital RF wireless - Experience Surrounding Your

XBOX360/PS3/Wii/LCDTV/iPhone/iPad/DVD Dolby Digital 5.1 Sound via Dolby Headphone with Digital RF

Wireless, Bundled XBOX360/PS3 Communication Function

- Connect with XBOX360/PS3/DVD with Digital Input (Optical); while Wii/iPhone/iPad/LCD TV with Analog Interface (RCA Jack); Optical Bypass Output Connect with Other Amplifier. Multi Platforms Supported
- Dolby Certification for Dolby Digital 5.1, Pro Logic II, Dolby Headphone
- Decode Dolby Digital 5.1, Pro Logic II to 5.1 Surrounding Sound. Play Original Sounds' Content, no Missing
- Empower Stereo Sound to 5.1 Channel Surrounding
- Output 5.1 Surrounding Sound through Stereo Headset via Dolby Headphone with Digital RF Wireless
- With Own New Technology IC, X6, & Amplifier IC to Bass Boost with Expander Stereo with Clearer Position for Every Single Sound. Perfect Gaming Sound Quality
- Using XBOX360/PS3 USB Power for Transmitter; While Using Re-chargeable Battery for Receiver.

 Last Than 10 Hours, No Lost Power Concern and Be Green
- Excellent Quality of Digital RF Transmission & Up to 15 Meters. No Distance Concern
- Connect up to 4 Receivers at Same Time. Sharing Gaming & Fun
- Receiver NOT at Headset Inside to Avoid RF too Close to Human Head. Health Care Consideration
- Build in Communication with XBOX360 via XBOX Live, & PS3. Enjoy Charting while Playing with Fingers
- Comfortable to Wear & Styling Headset Design

Hardware Diagram

- A. EXSOUND Pearl II Digital RF Wireless Headset
- B. EXSOUND Pearl II Digital RF Wireless Fuction Key Transmitter EXSOUND Pearl II Digital RF Wireless Fuction Key – Receiver

A. Pearl II Digital RF Wireless - Headset

- 1. High Quality & Soft Material Headband.
- 2. Easy to Adjust to Fit in Head Shape.
- 3. Omni-direction Microphone.
- 4. Soft Metal Material to Adjust Microphone Position.
- 5. Detachable Microphone with a Smart Lock (Note).



Note:




Connect & Remove Microphone with Headset by aligning two dots




Secure the Microphone by Rotating it 90 degrees counterclockwise

B. Pearl II Digital RF Wireless Fuction Key - Transmitter

- 1. Input Channel (Optical)
- 2. Output Channel (Optical Bypass)
- 3. Input Channel (RCA)
- 4. Slide Switch to select Digital or Analog Input
- 5. USB Port for Power

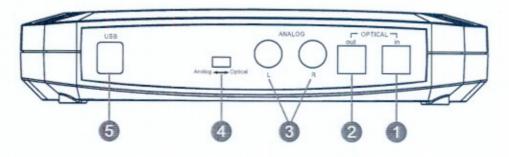



- 6. Power ON/OFF & RF Paring Button
- 7. Volume Up Button
- 8. Volume Down Button
- 9. PLII & DH2 Movie/Music ON/OFF Button

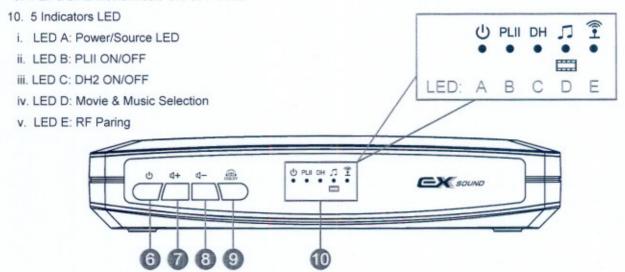


C. Pearl II Digital RF Wireless Fuction Key - Receiver


- 1. G6 Connector to Headset (Note.)
- 2. Volume Up/Down/Mute Control
- 3. Selection Button for Volume Control for Sound & Voice Heard
- 4. X6 Sound Effect ON/OFF Button
- 5. Mic Mute/Un-mute Selection Button
- 6. Jack for XBOX Live® & PS3™ Networking Communication
- 7. Micro USB Port for Battery Re-Charge
- 8. Receiver Unit ON/OFF
- 9. RF Pairing Button
- 10. LED1: Pairing & Volume Level Status Indicator
- 11. LED2: Battery & Re-Charging Status Indicator
- 12. Battery Case Cover

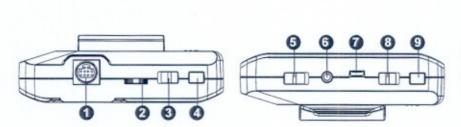

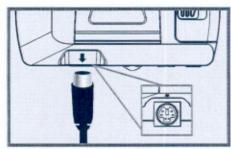

Note: Plug 6-pin round plug into Receiver with ARROW facing the right direction.

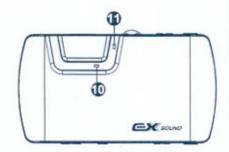

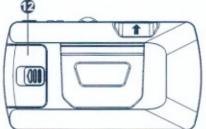

Product Operation & LED Indicator

Product Operation & LED Indicator - Transmitter

- 1. Connect XBOX360®/PS3™ with Optical Cable; Connect Wii, iPhone, iPad, LCDTV with RCA Cable
- 2. Slide Switch Selected to Right Input
- Connect to XBOX360[®]/PS3[™] or Other Device USB Port with USB Cable for Power.
- 4. Press Power Button to Power ON, Press Again is OFF
- 5. Set up Transmitter
 - i. VOL+ Button: Volume Up Switch
 - ii. VOL- Button: Volume Down Switch
 - iii. PLII/DH2 Button: Default PLII & DH2 ON with Movie Mode, Press again, PLII & DH2 ON with Music Mode, Press again, DH2 OFF, Press again neither DH2 Nor PLII OFF (Original sound), Press again, back to default
 - iv. Reset Button: Press Volume Up & Down together, then press Power will reset to OEM setting, all 4 LED will Flash 3 times with white color
- 6. Pairing RF between Transmitter & Receiving
 - i. Pressing Pairing Button at Transmitter for 2 Secs, then the Pairing LED will Flashing, then Press Paring Button at Receiver
 - ii. While Pairing, LED on Transmitter & Receiving Flash Fast.
 - iii. While Paired, LED on Transmitter will ON; While LED1 on Receiving will be OFF. If Not Paired Successfully, This LED1 will be Flashing, need to Re-Pairing.
- 7. 5 LEDs for Indicators
 - LED A Indicates Power/Source: Blue Color Means Power On; White Means Dolby Digital Source Played.
 - LED B Indicates PLII ON/OFF: ON with White Color, While OFF Would Turn Off LED
 - LED C Indicates DH2 ON/OFF: ON with White Color, While OFF Would Turn Off LED
 - LED D Indicates Movie & Music Mode Selection: Movie Mode with White Color, Music Mode with Green
 - LED E Inticates RF Pairing Stutas: While Paring Flashing, Paired Would be ON

Product Operation & LED Indicator - Receiver

- 1. Install Batteries into the Receiver.
- Volume Up/Down/Mute Control: Adjust Volume Level from Sound & Voice, Press Middle to Mute and Press Again
 Un-mute
- 3. Sound & Voice Selection Button: Select Sound or Voice to Adjust the Volume Up/Down/Mute by Volume Control.
- 4. X6 Sound Effect ON/OFF Button: Switch to ON/OFF of Super 3D Sound Effect.
- 5. Mic Mute/Un-mute Selection Button: Switch to Mic On/Off.
- 6. Jack for Communication Functions: Connect XBOX360® with XBOXLive® and PS3™ with Network.
- 7. Micro USB Port for Battery Re-Charge: Use Micro USB Cable to Re-Charge the Chargeable Battery.

Note: To Re-Charge the Chargeable Battery Must Power Off the Receiver Unit.

- 8. Receiver Unit ON/OFF: Switch Power On/Off for the Receiver.
- 9. LED1 Indicates Pairing & Volume Level Status in Green Color:
 - (i)While RF Signal is Pairing, LED Flashed Slowly; RF Signal Paired then LED off.
 - (ii)While Adjusting Volume, LED Flashed Quickly;

While the Volume Reaches Max Level, the LED Would be Always On Till Stop Pressing the Volume Control;

While the Volume Reaches Min Level, the LED Would be Off;

While the Volume Switch to Mute, the LED Flashes Slowly.

10. LED2 Indicates Battery & Re-Charging Status in Green Color:

While Battery is Re-Charging, the LED Would be Always On;

While Re-Charging Finished, the LED Would be off.


If Battery is Going to Out of Power or Re-Charging Failed, the LED Flashed. Ex. The Batteries in The Receiver is

NOT Chargeable or The Batteries Do Not Be Installed Well.

About Dolby Digital 5.1 / Pro Logic II / Dolby Headphone

- Most of Gaming/Movie Titles Are DVD Format, and Encoded with Dolby Digital 5.1 Technology, Multi Channels Sound. Need to Have Pearl II –C, with Dolby Digital 5.1 Decoder to Have Original Sound Play back.
- Sound with Analog Interface, with 2 Channels, Maybe Different Format, Like Pro logic II with Wii and Lt Rt from other Devices, Pro Logic II with simulate these 2 Channels into 5.1 Channels.
- 3. Dolby Headphone, either Multi-Channel Sounds from Dolby Digital 5.1 or Pro Logic II, Dolby Headphone Technology will Down Mix these Multi-Channels into 2 Channel without Lost Data, and Use 2 Speaker Drivers to Playback these Multi-Channels Sound with Surrounding Effect.

Dolby Surround Sound

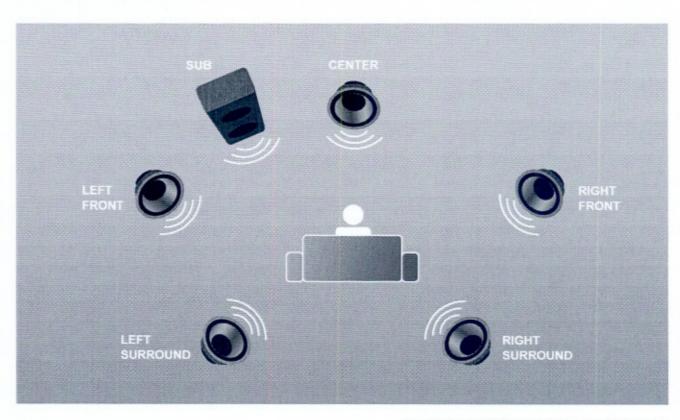


More Information Please Visit - www.Dolby.com.

Special Note:

- 1. Last More Than 10 Hours, Based on Using Re-Chargeable Battery Ni-MH AA 1.2V with 2050mAh.
- The Bundled Batteries Is NOT CHARGEABLE. Suggest to Purchase Another CHARGEABLE ones to Save Earth.
- Re-Charge Function: Plug the USB Connector into USB Port of XBOX360[®]/PS3[™] and the Receiver with MicroUSB Cable then Switch off the Power of Receiver, Start to Re-Charge.
- Please be Kindly Advised XBOX360[®] Still Deliver Power While System Power OFF But PS3[™] Does NOT;
 Suggest to Have Other Device to Recharge While PS3[™] System Turn Off.
- Re-Chargeable Batteries Must Be Ni-MH AA 1.2V, Can NOT Be 1.5V Re-Chargeable Alkaline Batteries(RAM).
 That Might Damage Batteries & Product.
- 6. To Connect to PS3™ Networking, Need to Use Our Optional BlueTooth® Stereo Dongle(A2DP). This Dongle Also Can Used with Other Devices, Like Notebook, Hand Phone...etc with BlueTooth® Embedded for Two-Ways Transmission.

Pearl II Digital RF Wireless Connects to XBOX360®

- 1. Plug the USB connector into the USB port of XBOX360® and the Transmitter.
- 2. Connect the Transmitter and XBOX360® with Optical cable and slide switch the input selection to Optical in
- 3. Plug round 6-pin plug (Male) from Pearl II headset into the Receiver.

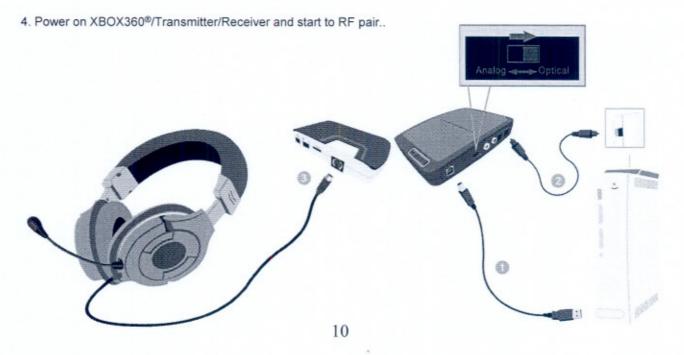

XBOX360® / XBOX Live® Voice Settings

■ XBOX360® Audio Settings

In The XBOX360® Dashboard Select :

System Settings -> Console Settings -> Audio ->

Digital Output -> Dolby Digital 5.1




■ XBOX Live® Voice Settings

Press the " XBOX® Global Button "and go to:


Settings -> Preferences -> Voice ->

Voice Output -> Play through Headset

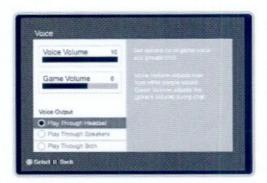

Pearl II Digital RF Wireless Connects to XBOX Live®

Connect XBOX Live® communication link cable (2.5 mm plug to 3.5 mm plug) to the Receiver and XBOX360® controller

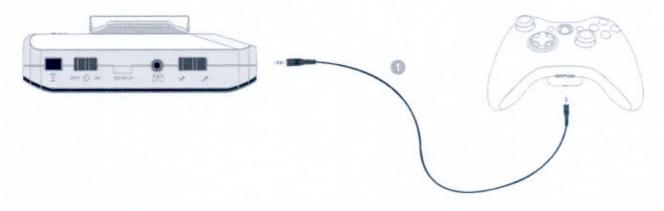



Pearl II Digital RF Wireless Connects to PS3™

- Connect USB cable to an USB port on PS3™ and the Transmitter.
- 2. Connect the Transmitter and PS3™ with Optical cable and slide switch the input selection to Optical in
- 3. Plug round 6-pin plug (Male) from Pearl II headset into the Receiver.
- 4. Power on PS3™/Transmitter/Receiver and start to RF pair.




PS3™ Audio Settings

Go to PS3™ Dashboard and select :

Settings -> Sound Settings -> Audio output settings

->Scart AV/Multi

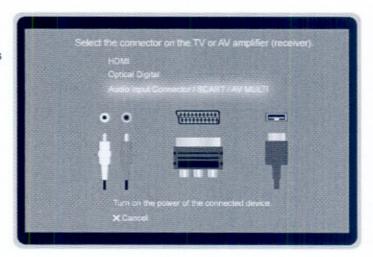


Play Station Network Settings

If you would like to use Play Station Network function, please also purchase the optional Bluetooth® product – EXSOUNDTM SeaHorse


■ SeaHorse Pairing to the PlayStation 3:

Go to PS3™ Dashboard and follow these steps :

- 1. Settings -> Accessory Settings -> Manage Bluetooth Device
- Choose "Yes" to register a device and start scanning; or choose "Start Scanning" directly if any other Bluetooth device have been paired before.
- 3. Press the Multi-Function Button on SeaHorse for 5 secs until the LED flashing blue to red. While PS3™ is finished scanning, select the "EXSD9712" from the list. Then finishing the pairing process by enter the password "0000" and select "OK"
- Back to Settings -> Accessory Settings -> Audio Device Settings and select "EXSD9712" as the input and output device

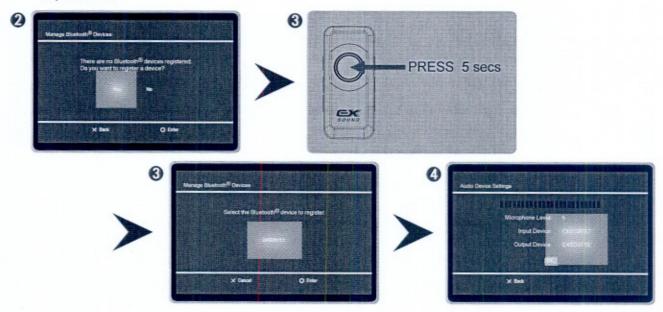

- Using the SeaHorse with Pearl II Digital RF Wireless:
 - Connect 3.5mm plug to 3.5mm plug cable to the Receiver of Pearl II Wireless and SeaHorse for PS3[™]
 Network communication.

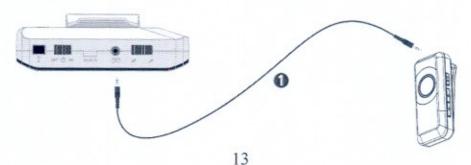

Pearl II Digital RF Wireless Connects to DVD

- 1. Connect the USB connector into an USB port of USB output AC adapter device and Transmitter.
- 2. Connect the Transmitter and DVD player with Optical cable and slide switch the input selection to Optical in
- 3. Plug round 6-pin plug (Male) from Pearl II headset into the Receiver.



Note: Please make sure the DVD Audio Output source setting have to selet to "S/PDIF Output"

Pearl II Digital RF Wireless Connects to PC

- Connect the USB connector to an available USB port on your PC and the Transmitter.
 You Can Select Your Source from Optical In or Analog In
- 2. If Select Analog In: Connect your PC and the Transmitter with 3.5 mm plug to RCA cable.

(Transmitter: switch to Analog input)



3. If Select Optical In: Connect your PC and the Transmitter with Optical cable.

(Transmitter: switch to optical input)



- 4. Plug round 6-pin plug (Male) from Pearl II headset into the Receiver.
- 5. Power on PC/Transmitter/Receiver and start to RF pair.



Pearl II Digital RF Wireless Connects to TV

- 1. Connect the USB connector to USB port of an USB AC adapter device and Transmitter.
- User needs to prepare one RCA*2 plug to RCA*2 plug connection cable, Connect the RCA plug to TV and the other side RCA plug to the input of Transmitter and slide switch the input selection to Analog in.
- 3. Plug round 6-pin plug (Male) from Pearl II headset into the Receiver.
- 4. Power on TV/Transmitter/Receiver and start to RF pair.



Pearl II Digital RF Wireless Connects to Wii™

- 1. Connect the USB connector into an available USB port of Wii™ and Transmitter.
- 2. Plug RCA Cable into RCA Input of Transmitter with Wii™ Standard Audio Cable and slide switch the input selection to Analog in
- 3. Plug round 6-pin plug (Male) from Pearl II headset into the Receiver.



Pearl II Digital RF Wireless Connects to iPhone/iPad/iPod

- 1. Connect the USB connector to USB port of an USB AC adapter device and Transmitter.
- Connect the 3.5mm plug to iPhone/iPad/iPod and the other side RCA plug to the input of Transmitter and slide switch the input selection to Analog in.
- 3. Plug round 6-pin plug (Male) from Pearl II headset into the Receiver.

4. Power on Transmitter/Receiver and start to RF pair.

Important Information

PlayStation, PlayStation 2, PlayStation 3, PS2, PS3 and the respective images/logos are registered trademarks of Sony Computer Entertainment Inc.

XOX, XBOX360, XBOX Advanced AV Pack, XBOX Communicator, XBOX Live and the respective images/logos are registered trademark or

trademarks of Microsoft Corporation in the U.S and/or other countries. All other trademarks are property of their respective owners.

Wli and the respective images/logos are registered trademarks or trademarks of Nintendo Phuten CO, Ltd.

iPod,iPhone,iPad and the respective images/logos are registered trademarks of Apple Computer Inc.

Manufactured under license from Dolby Laboratories. Dolby, Pro Logic, and the double-D symbol are trademarks of Dolby Laboratories.



Model: EXSD9711

FCC ID :ZPP-EX971101

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES.

OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS:

(1) THIS DEVICEMAY NOT CAUSE HARMFUL INTERFERENCE AND

(2) THIS DEVICE MUST ACCEPT ANY INTERFERENCERECEIVED,

INCLUDING INTERFERENCE THAT MAYCAUSE UNDESIRED

OPERATION.

Made in Taiwan

Brand Name: EXSOUND

Federal Communication Commission Interference Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- . Reorient or relocate the receiving antenna.
- . Increase the separation between the equipment and receiver.
- . Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- . Consult the dealer or an experienced radio/TV technician for help.

FCC Caution: To assure continued compliance, any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment. (Example - use only shielded interface cables when connecting to computer or peripheral devices).

FCC Radiation Exposure Statement

This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20 centimeters between the radiator and your body.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

The antennas used for this transmitter must be installed to provide a separation distance of at least 20 cm from all persons and must not be co-located or operating in conjunction with any other antenna or transmitter.