

Volkswagen Golf MK7 Facelift Blind Spot Assist Retrofit

PREREQUISITE: The blind spot assist uses the extended CAN bus, meaning that you must have the HIGH variant of the gateway. If not, you must upgrade it before retrofitting, otherwise it won't work.

IMPORTANT: You must disconnect both terminals of the battery, negative first and then the positive before starting this retrofit!


Note: this retrofit is much more complicated and longer than lane assist retrofit, so plan your time accordingly, you can split the work in multiple times because some tasks are not easy to do, but for sure with this guide they will be much easier than they were for me. In fact, I was unable to find a retrofit guide anywhere on internet on blind spot assist (only some hints) and all which is written here is the result of my research and my work.

Circuit Diagram

VW Golf

Current Flow Diagram

No. 70 / 2

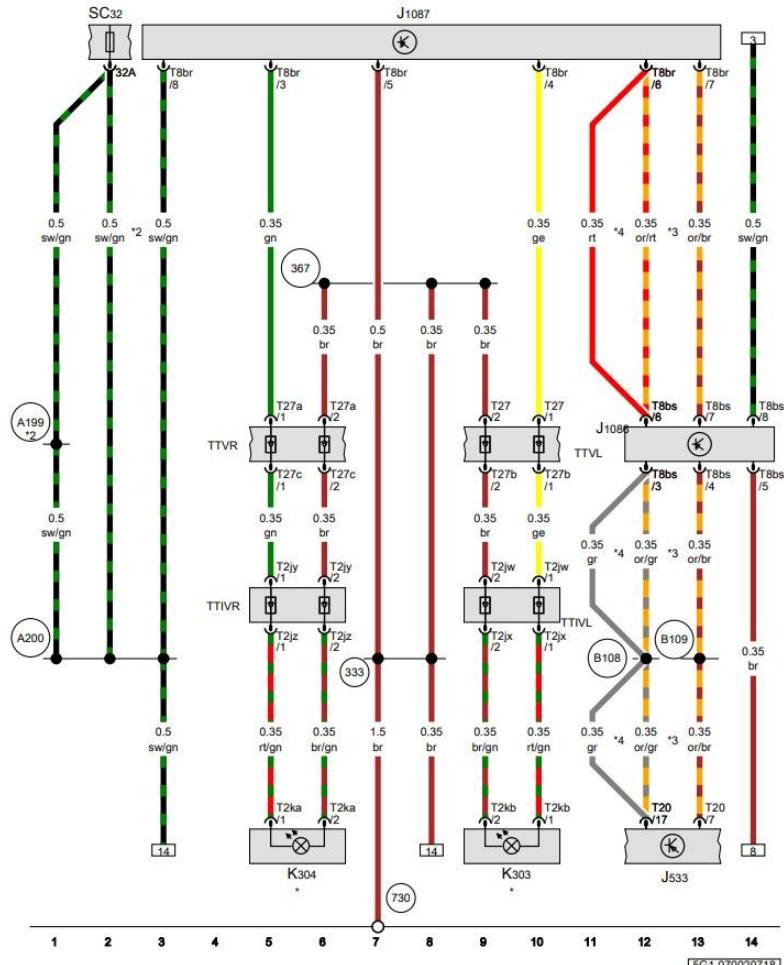


Data bus diagnostic interface, Blind Spot Monitor control unit, Blind Spot Monitor control unit 2, Blind Spot Monitor warning lamp in left exterior mirror, Blind Spot Monitor warning lamp in right exterior mirror, Fuse 32 on fuse holder C

J533	Data bus diagnostic interface
J1086	Blind Spot Monitor control unit
J1087	Blind Spot Monitor control unit 2
K303	Blind Spot Monitor warning lamp in left exterior mirror
K304	Blind Spot Monitor warning lamp in right exterior mirror
SC32	Fuse 32 on fuse holder C
T2jw	2-pin connector, black
T2jx	2-pin connector, black
T2jy	2-pin connector, black
T2jz	2-pin connector, black
T2ka	2-pin connector, black
T2kb	2-pin connector, black
T8br	8-pin connector, black
T8bs	8-pin connector, black
T20	20-pin connector
T27	27-pin connector, black
T27a	27-pin connector, black
T27b	27-pin connector, black
T27c	27-pin connector, black
TTIVL	Coupling point in front left door
TTIVR	Coupling point in front right door
TTVL	Coupling point for front left door
TTVR	Coupling point for front right door
333	Earth connection 5, in rear wiring harness
367	Earth connection 2, in main wiring harness
730	Earth point 1, on right rear wheel housing
A199	Positive connection 4 (15a) in dash panel wiring harness
A200	Positive connection 5 (15a) in dash panel wiring harness
B108	Connection 1 (CAN bus extended high), in main wiring harness
B109	Connection 1 (CAN bus extended low), in main wiring harness
*	Pre-wired component
*2	According to equipment
*3	Up to July 2018
*4	From July 2018

07.2018

12 wires to be connected:

- **1 brown wire** for the ground (near the front passenger side)
- **1 black/green wire** for the 12V power (in the fuse box on the left side of driver seat)
- **2 wires** from new side mirrors to external door connector (x2 for the two mirrors)
- **2 wires** to the internal door connector (x2 for the two mirrors)
- **1 connector** with 6 wires to the blind spot control units (x2 for the two control units)
- The **orange/gray and orange/brown wires** (extended CAN bus) have to be connected to the gateway unit (or the T17d/I black connector). Pin T20/17 and T20/7 of the gateway unit (J533) are also connected respectively to T17d-I/12 and T17d-I/13, you can connect the front camera wiring harness also here (easier)

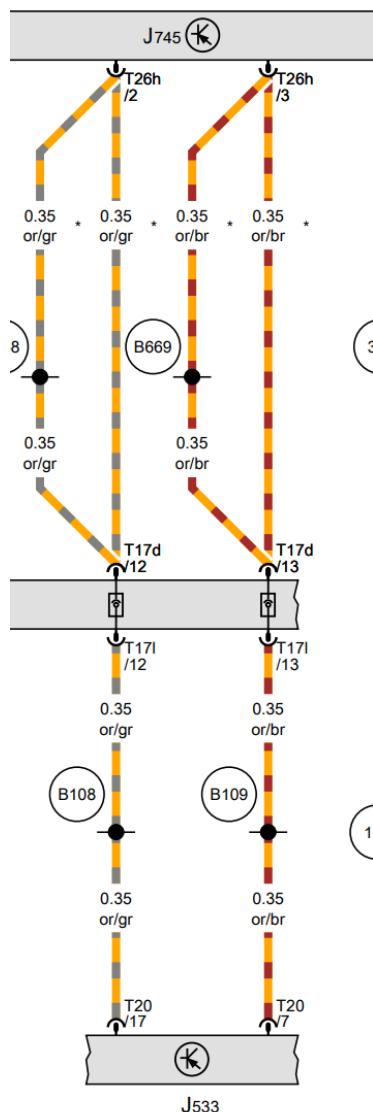

Moreover, there are 10 junction pins:


- **6 pins** to join the two parts of the wiring harness
 - **2 pins** to join the two parts of the door wiring harness (x2 for the two doors)

What you need to buy:

- Blind Spot Assist kit (2 Control Units, 2 mounting plates, 2 mirrors, wiring harness) from AliExpress:
https://www.aliexpress.com/item/1005003973166813.html?spm=a2g0o.order_list.order_list_main.153.14763696cTiTJi&gatewayAdapt=glo2ita
- A drill for drilling the original rivets of the two door speakers
- A riveter with 2x4 rivets for re-installing the two door speakers
- 2 M6 Hex collar nuts for mounting plates (they weren't provided in my kit)

Blind Spot Assist kit overview:

- Rear cable

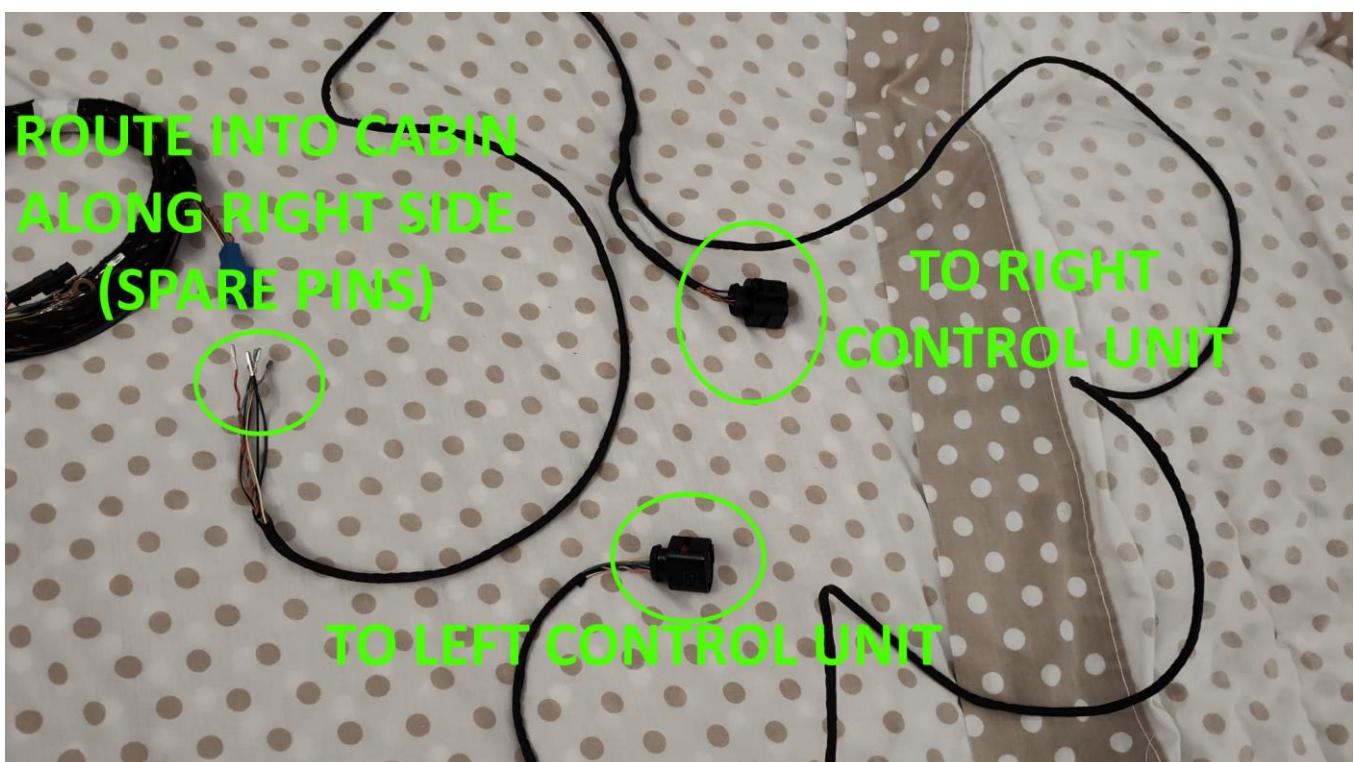

- Control unit connector detail



- Control Units

LEFT



RIGHT





- Junction rear / front cable




- Right door connection (vehicle cabin)





- Right door connection (external door)

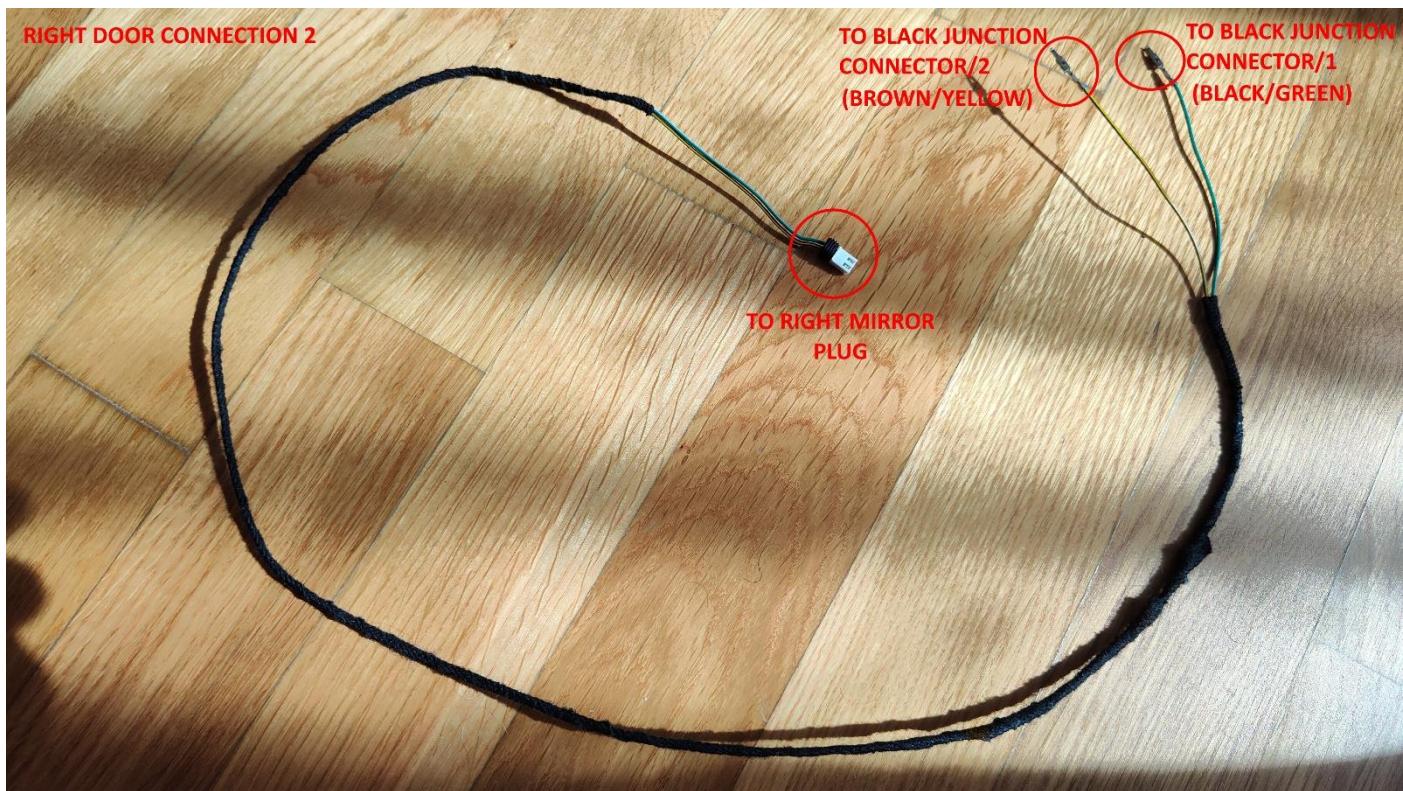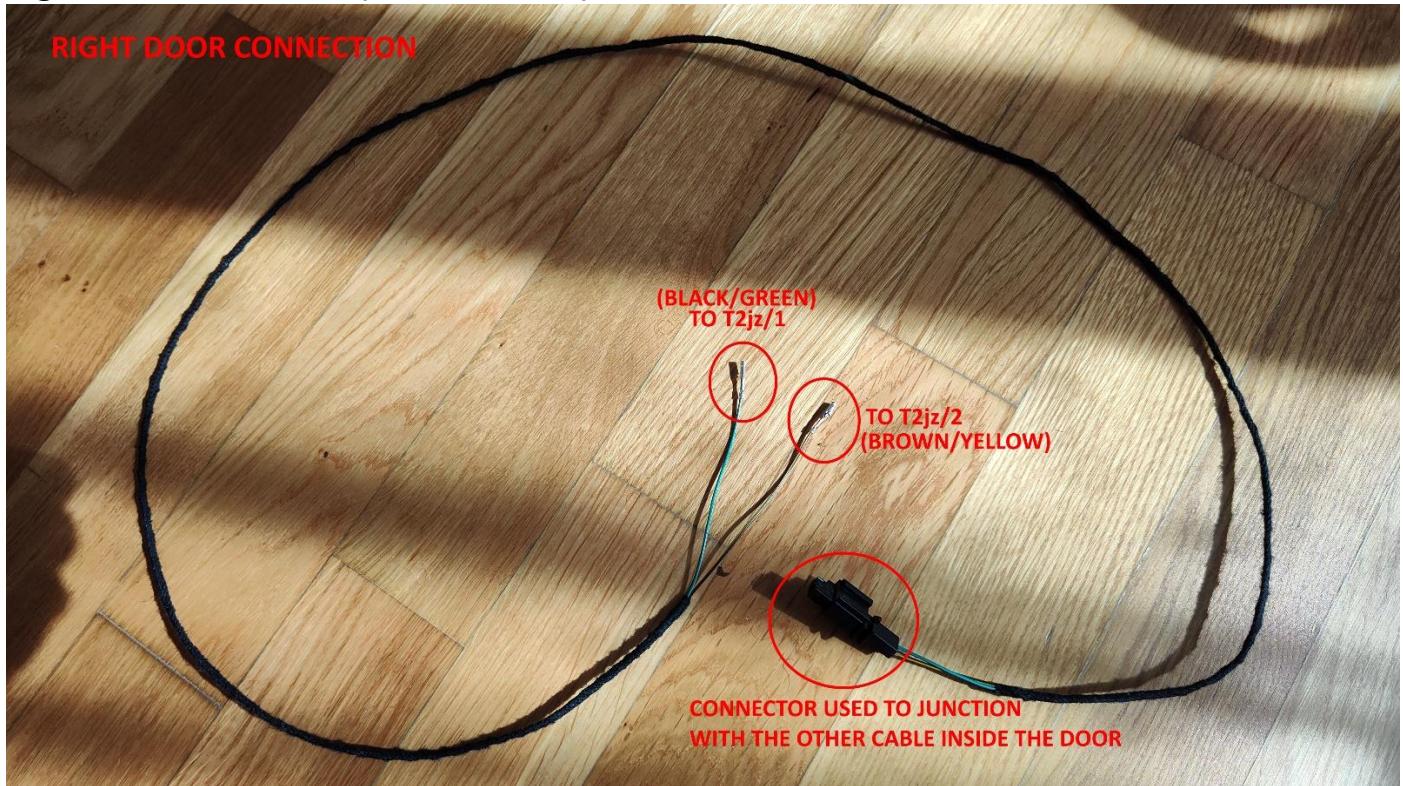

- Left door connection (vehicle cabin)

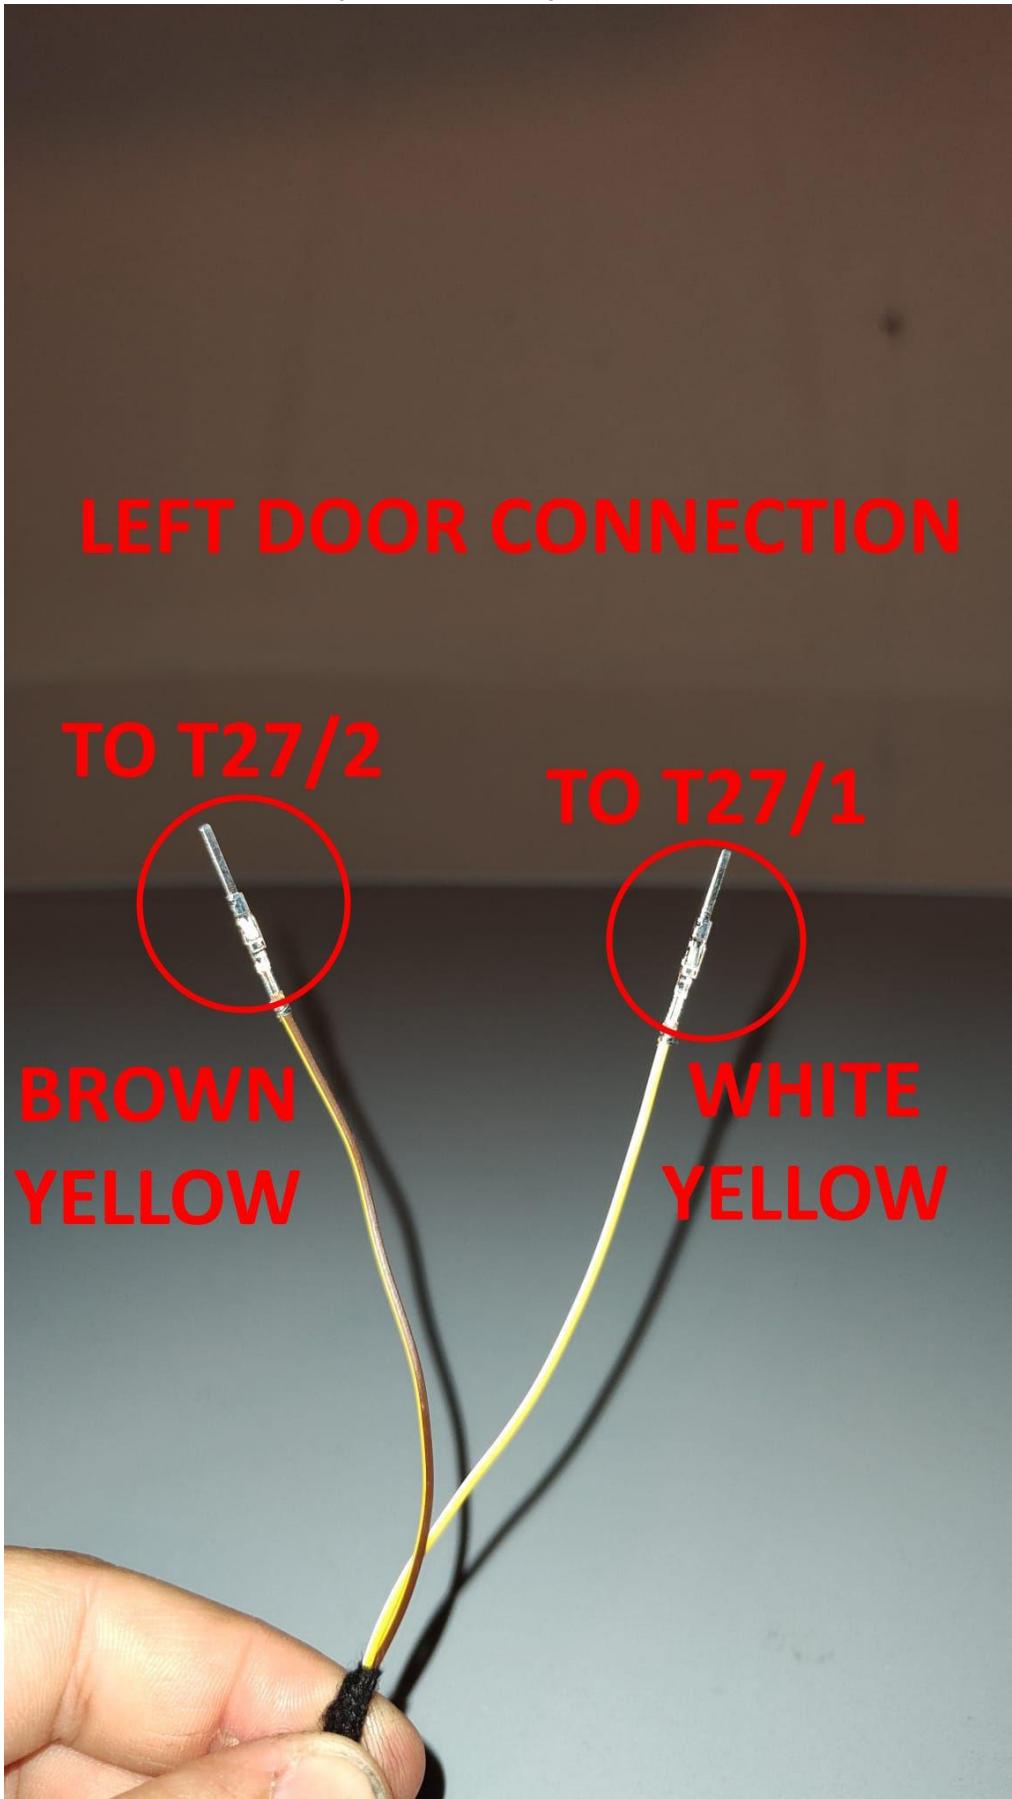

- **Left door connection (external door)**

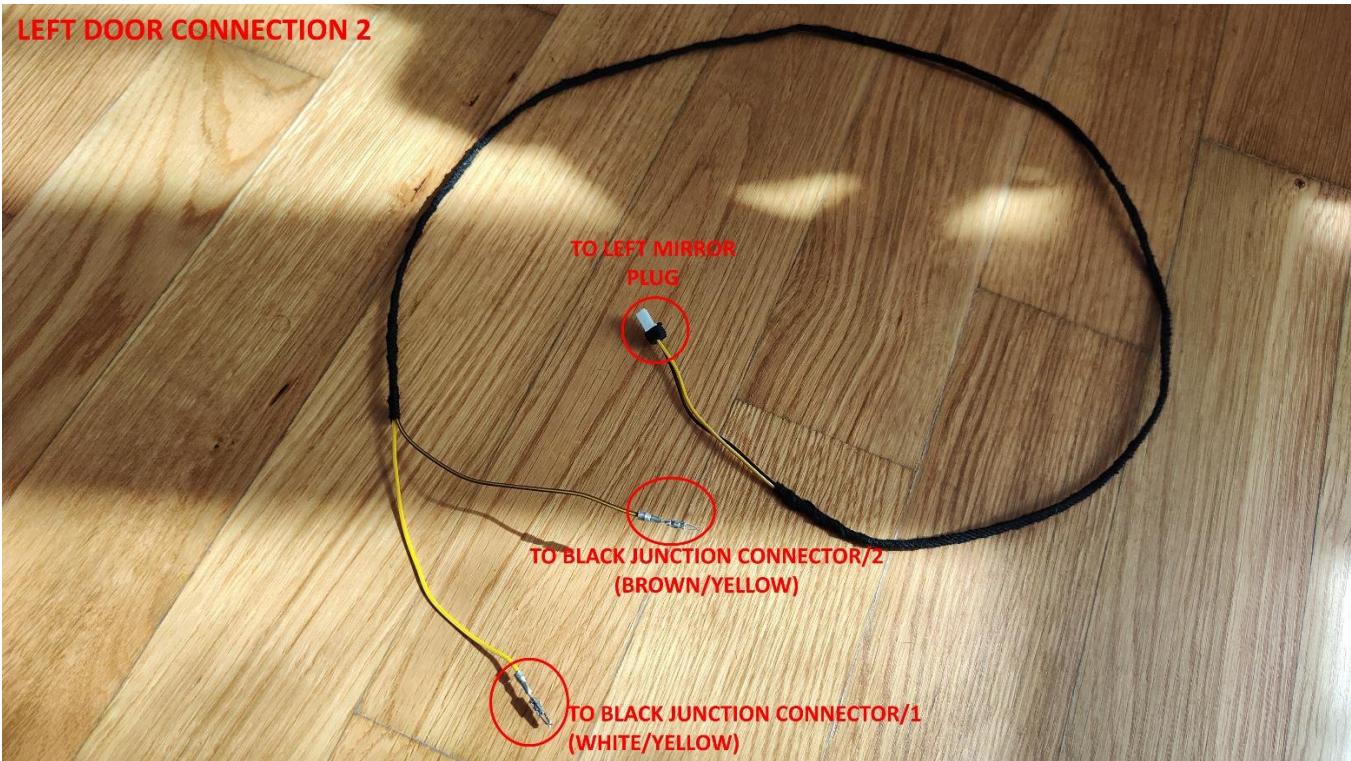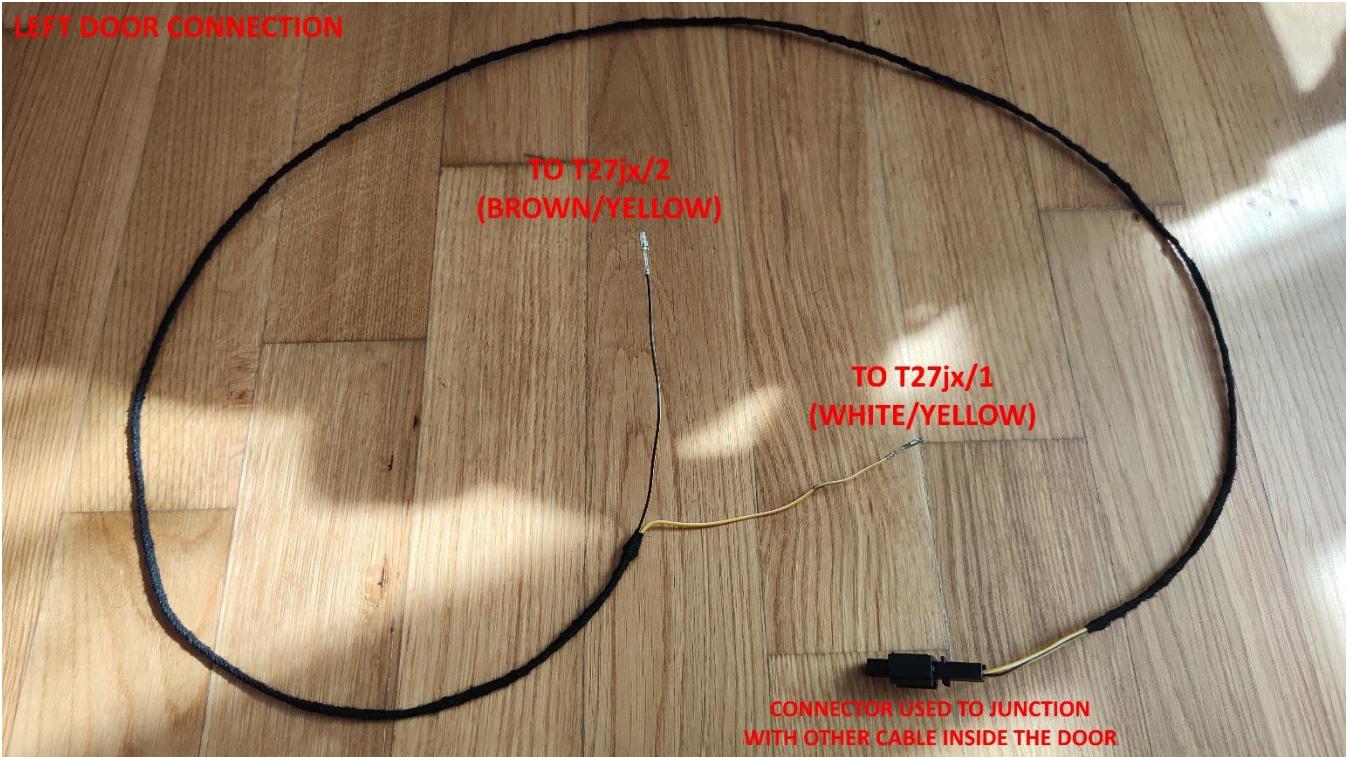

- +12V power to Fuse box C



+12V
FUSE BOX C
SC32
(GREEN/BLACK)

- **Ground**



**GROUND
(BROWN/YELLOW)**


- Extended CAN BUS wiring



Instructions:

- Disconnect and remove the battery (video: [Replacing the Battery - VW Golf MK7](#))
- Remove tail lights ([https://www.youtube.com/watch?v= 2K5eMGxkkM](https://www.youtube.com/watch?v=2K5eMGxkkM))

- Remove the back bumper (video: <https://youtu.be/5rms05hmLQk>)

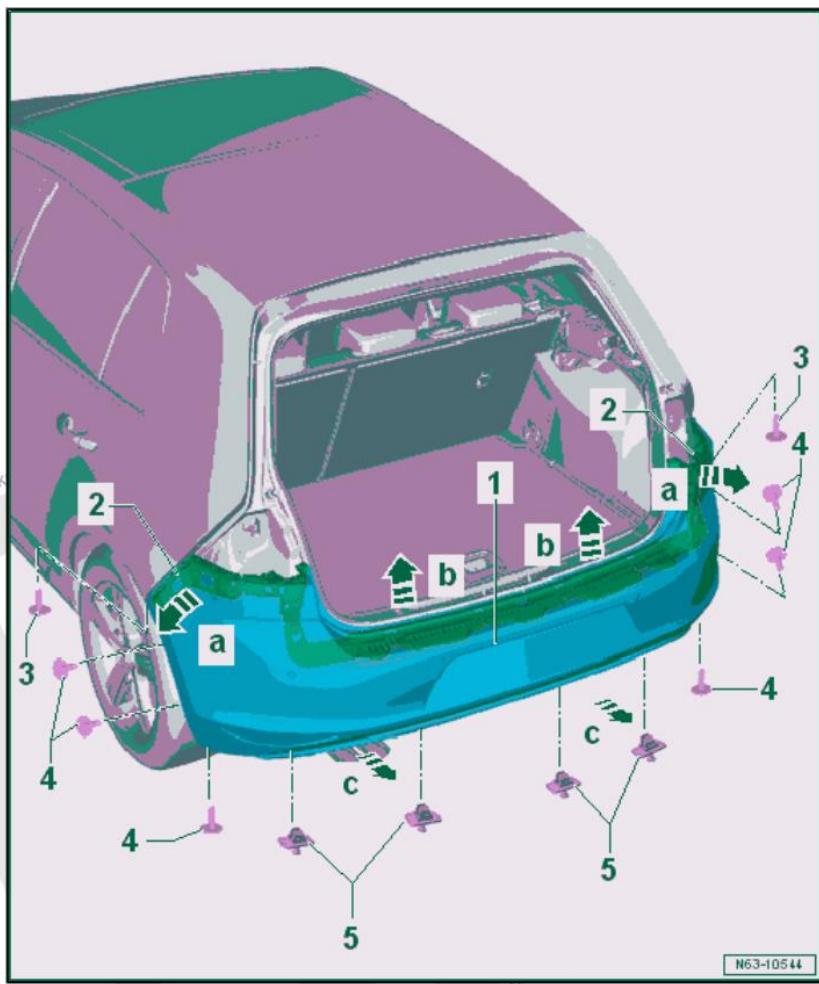

- Remove the side panel tail lamps. Refer to ⇒ Electrical Equipment; Rep. Gr. 94 ; Tail Lamps; Tail Lamp, Removing and Installing .
- Remove the screws -3- in the wheel housing (pointing upward) on the left and right sides.
- Remove the screws -4- near the wheel housing liner on the left and right sides.
- Remove the expanding rivets -5- from underneath.

A second technician is required for the rest of the removal procedure.

- Pull the bumper cover -1- out of the left and right guide retainers -2- on the side panel in direction of -a arrows-.
- Loosen the bumper cover -1- upward from the retainers in direction of -b arrows-.
- Remove the bumper cover -1- parallel from the vehicle in direction of -c arrows-.
- If equipped, disconnect the electrical component connections.

For notes and procedures regarding the parking aid. Refer to ⇒ Electrical Equipment; Rep. Gr. 94 ; Parking Aid .




- **Install left and right mounting plate:** unscrew the two bolts, installing the mounting, screw again the two bolts and the M6 hex collar nut.

Left mounting plate



Right mounting plate

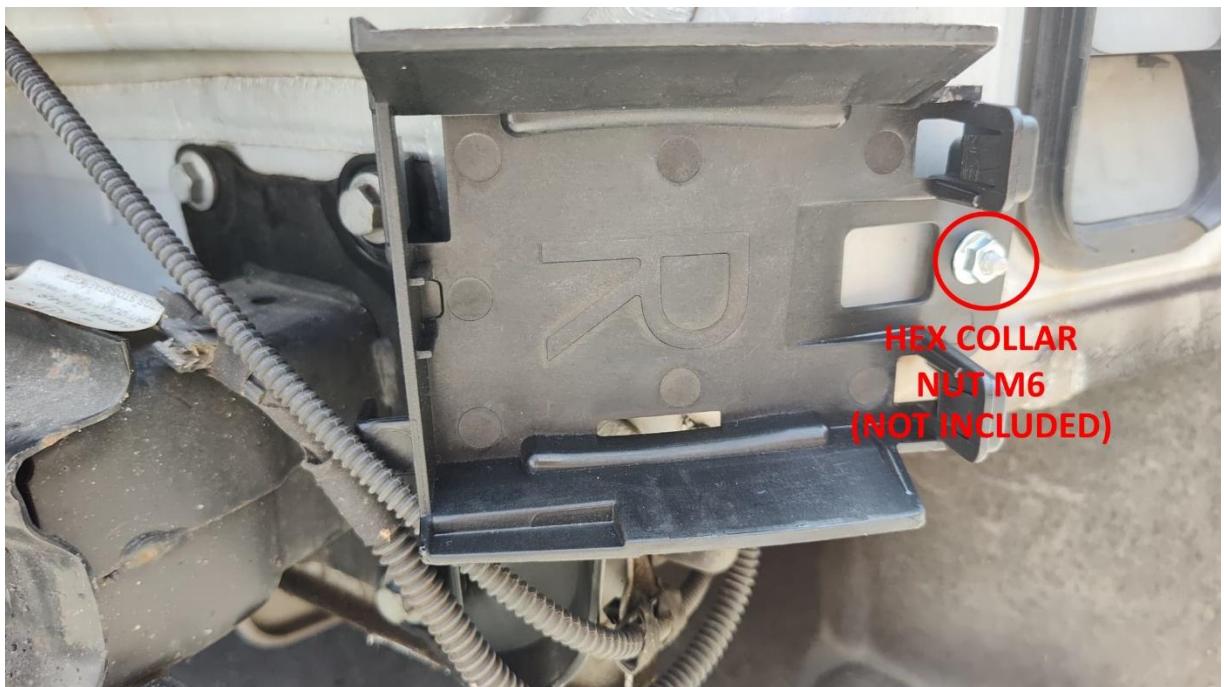

- Start from left: insert left control unit, plug its connector from the wiring harness and lay the cable along the rear crossbeam zip tying to existing cables till the right control unit, insert and connect it also to its plug.

Left control unit mounted




Right control unit mounted




Sorry I forgot to take a whole picture the first time, this one is from another day but it gives however the idea of the route



- Remove the internal lining on the right side of car inside the trunk
 - Remove rear luggage lock trim (<https://youtu.be/7KPS8Mr0jgU>)

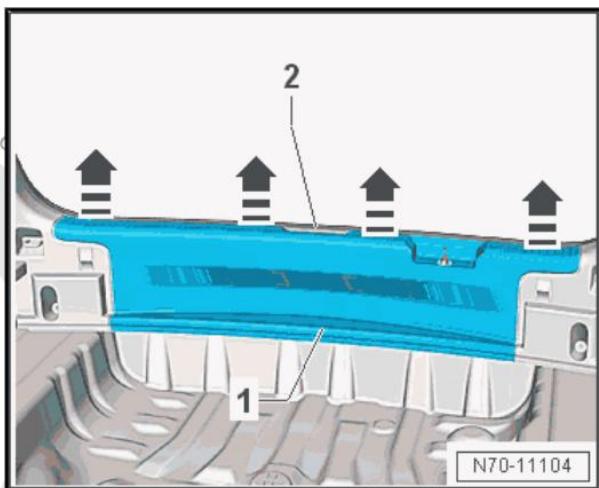

- Remove the right trim (instructions are for left side, for right side it is the same)

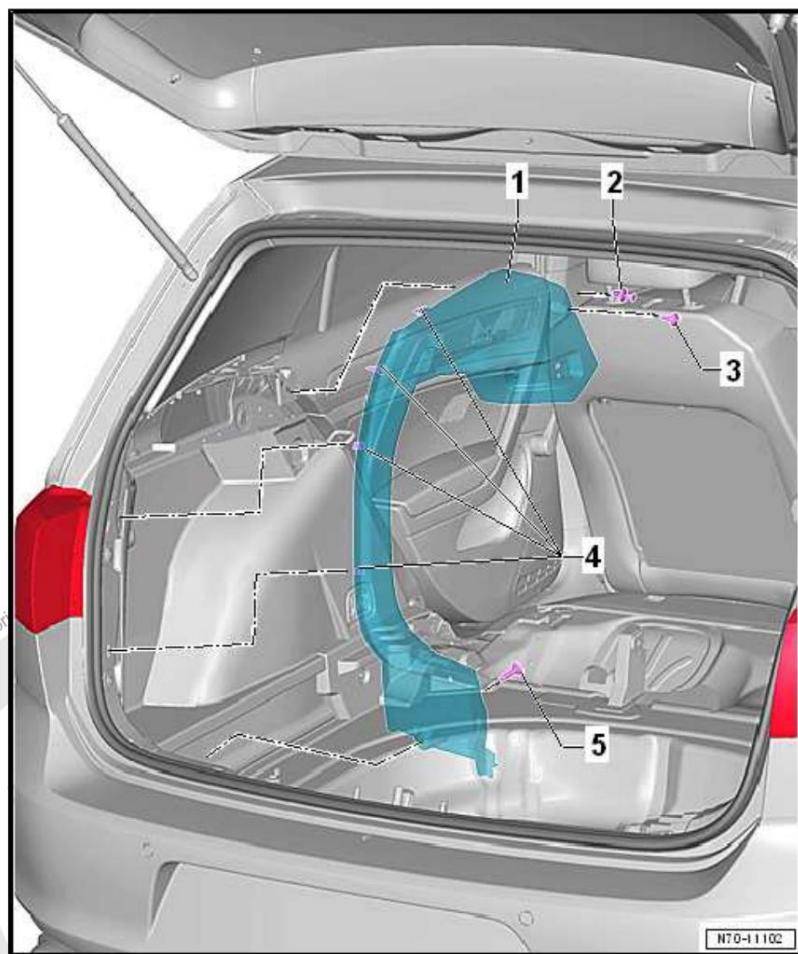


- Remove the bolts -3 and 5-.
- Remove the spreader plug -2-.
- Loosen the rear shelf compartment -1- near the clips -4- from the body mounts using the Pry Lever - 80-200- .
- If equipped, disconnect the connectors and remove the rear shelf compartment -1-.

- Lay wiring harness inside the vehicle cabin using the rubber grommet (sorry I forgot to take a picture)




Cable comes into vehicle cabin on right side of the trunk (**IMPORTANT: if you need to punch the grommet to enter the cable with spare pins remember to apply at the automotive silicone sealant to render it again waterproof**)

- Plug the spare pins inside the spare blue connector matching the wire colours

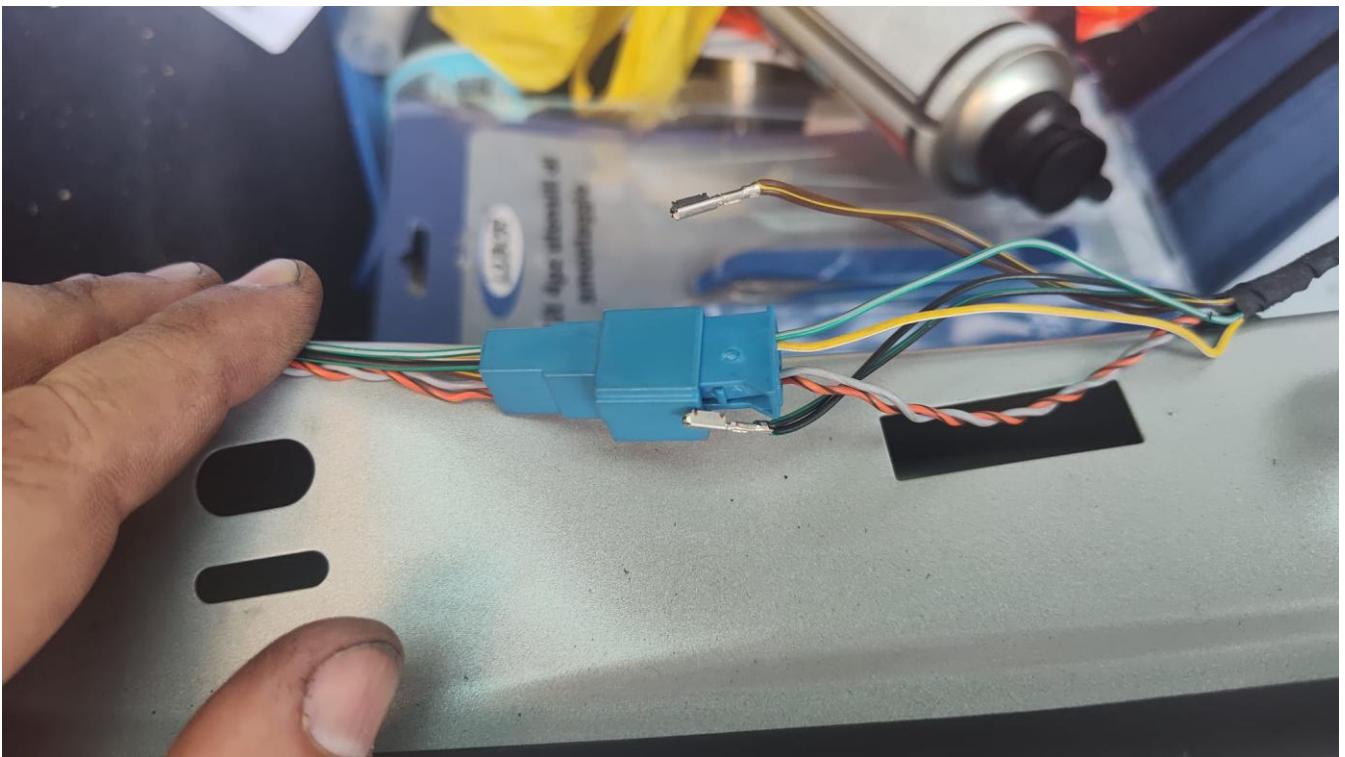

All pins plugged

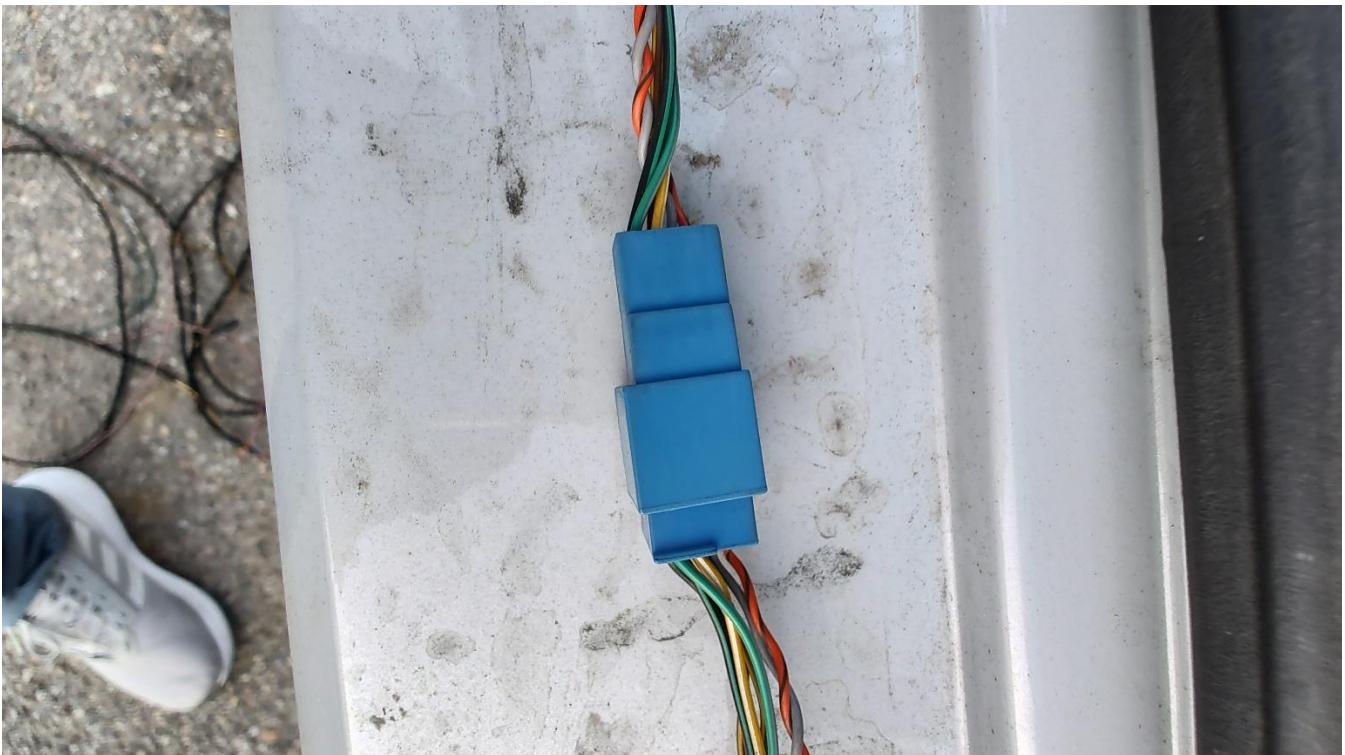

- Lay cable forward up to the right side and zip tie it (the tail light here is mounted, again I took this picture in another day)



- Lay cable forward down the right side of the rear seat and zip tie it



Coming down from the rear seat (zip tie it)



- Remove foot trims and lay cable forward along the right-side zip tying it



Laying and zip tying cable till front passenger seat



- Screw ground terminal to ground point



Ground point detail



- Leave the 2 male pins for right door connection (black/green and white/yellow) and route the remaining part of the cable to the driver seat after having removed the two side trim panels (<https://www.youtube.com/watch?v=orm7JaHVmmU>)









- **Remove the driver seat item compartment**
(<https://www.youtube.com/watch?v=mw4wC7yznSI>)
- **Remove lower A-Pillar trim near driver seat**
(<https://www.youtube.com/watch?v=dU00cH-WoZg>)

- Extended CAN BUS connection (here including the lane assist retrofit, if you do not have retrofitted lane assist, please see my lane assist retrofit guide for wiring)

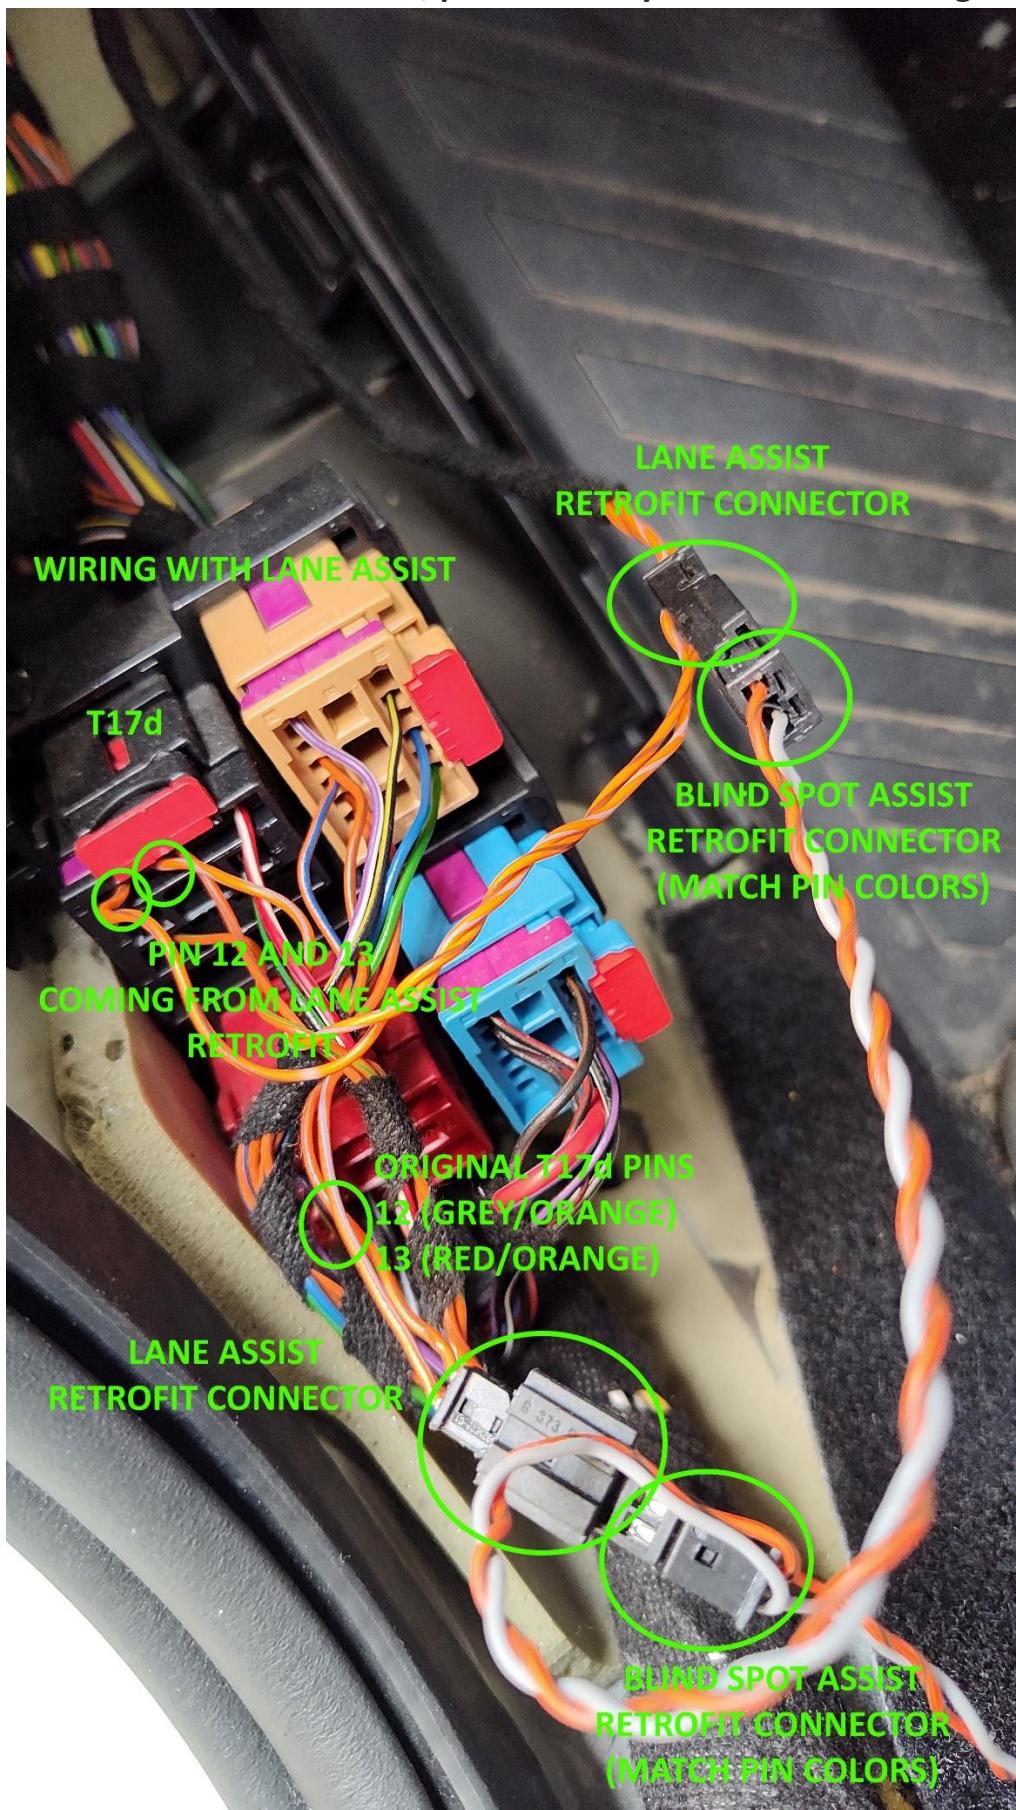

- **Power wiring, 2 possibilities**



- **Fuse TAP (easier and faster, used initially this for lane assist retrofit):** Connect the black green wire using a mini fuse tap to SC32 fuse or if unable due to space to another SWITCHED fuse (e.g. providing power only if the dashboard is turned on) in the same row (<https://www.youtube.com/watch?v=59uL9jNEI1k>).

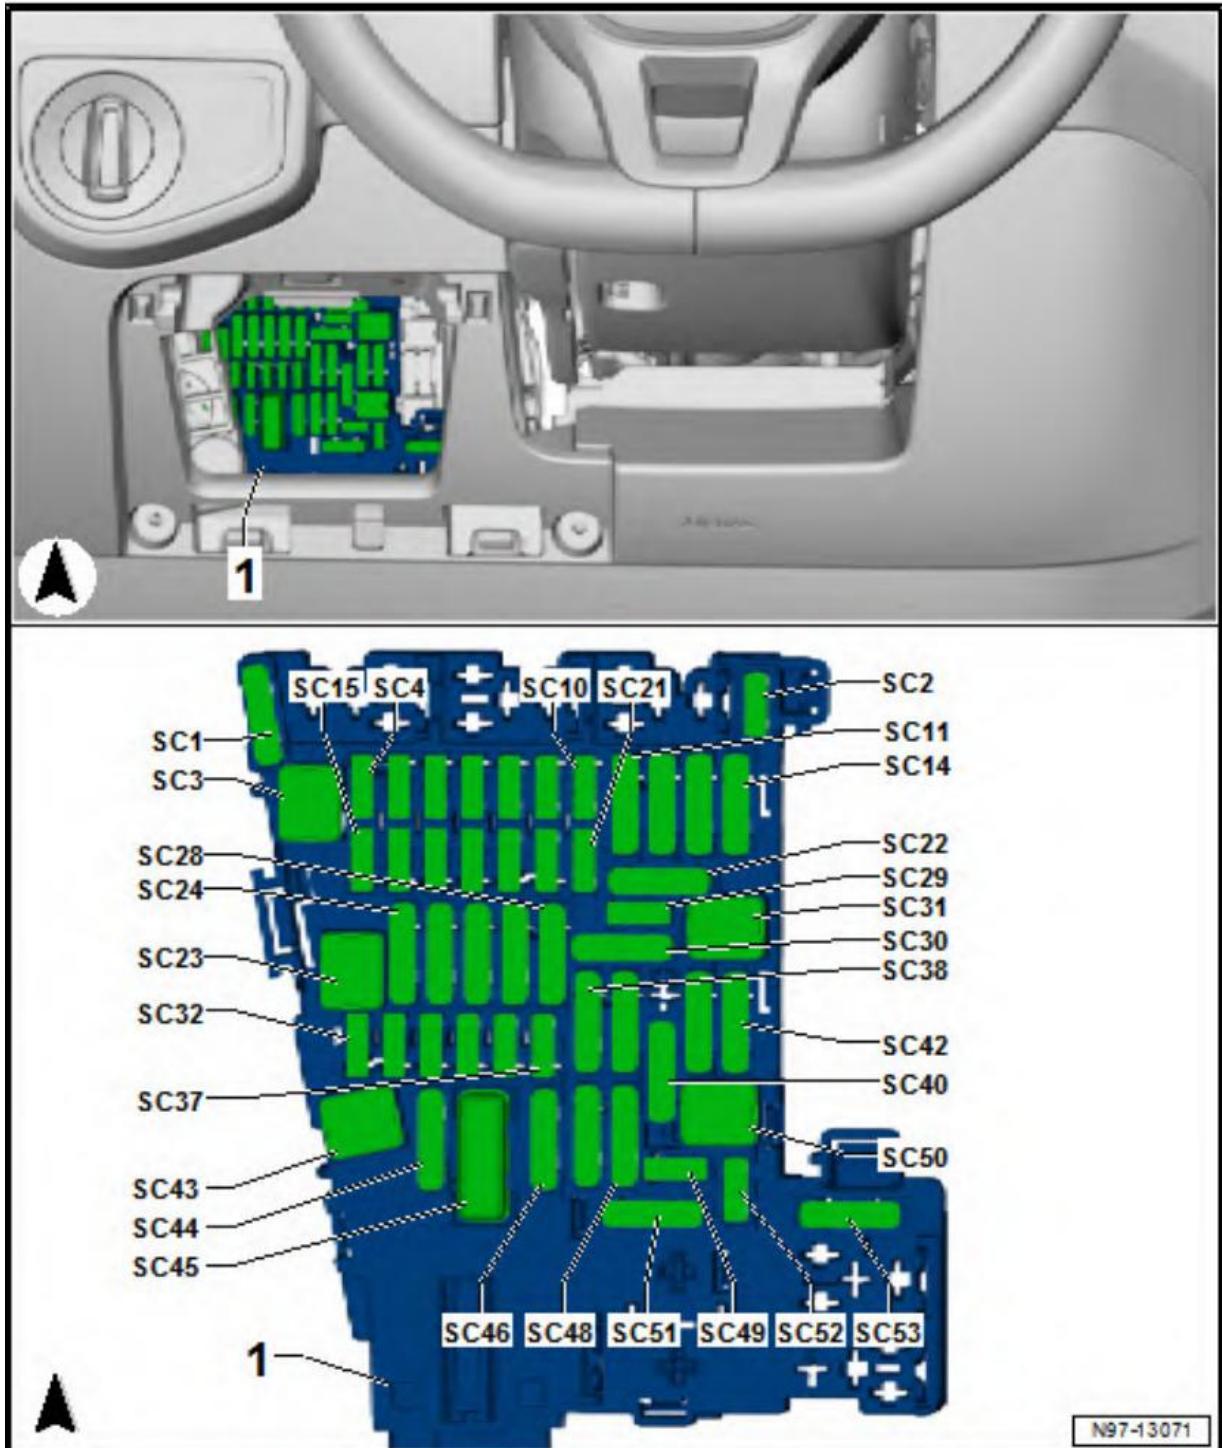

- **Wire a new empty fuse using a zip tie (strongly discouraged):** it is a real pain in the ass, I did this for blind spot assist but it is very difficult and requires a lot of attempts and patience (<https://www.youtube.com/watch?v=oYKR06io0nM>).


Some pictures:

All trims removed

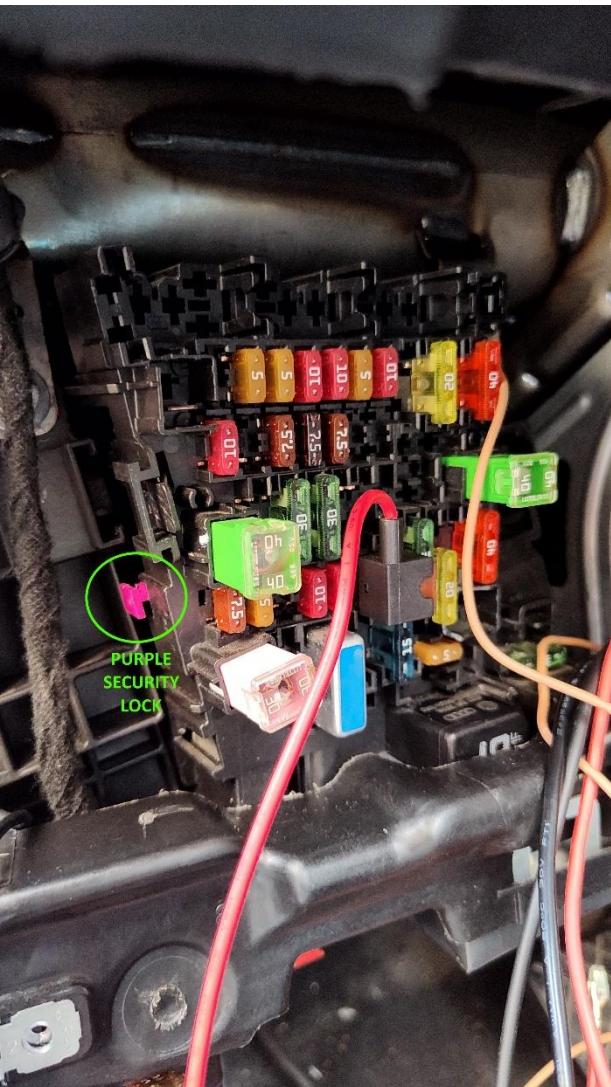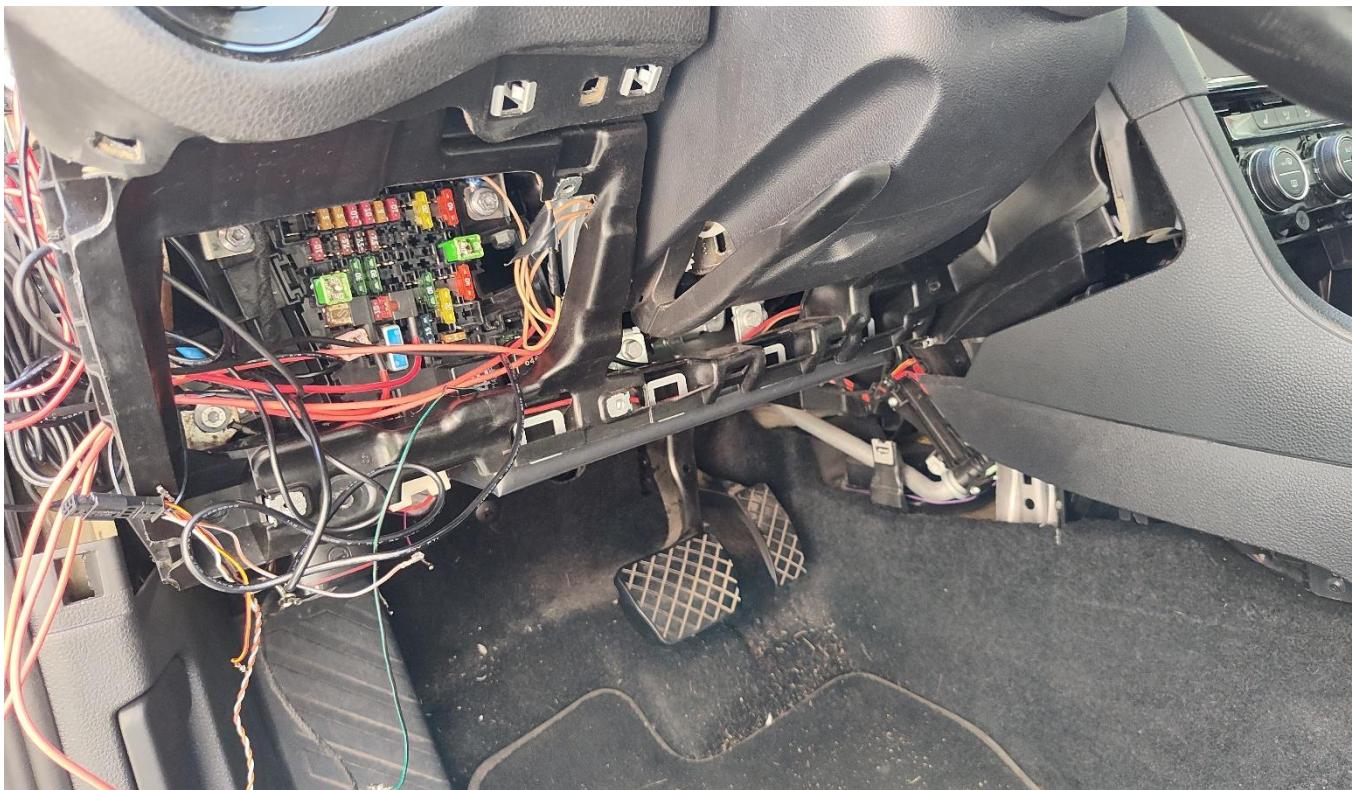

Fuse box holder pulled a little bit forward just to unlock it
(Note the existing wire tap for lane assist)


Purple security lock completely unlocked

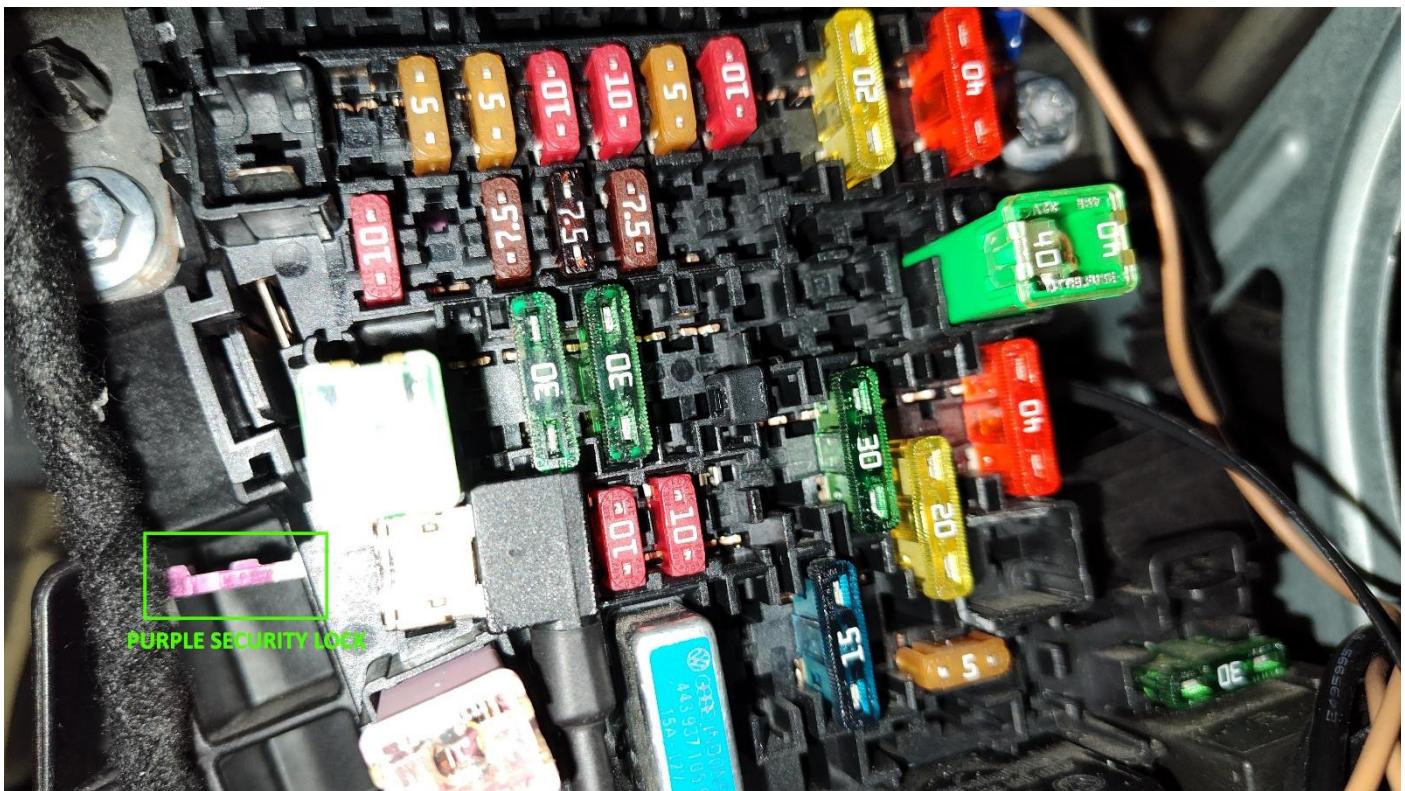

Wiring a new fuse with a zip tie




3 fuses wired here, actually I did 4 in order to have spare power for any future retrofit

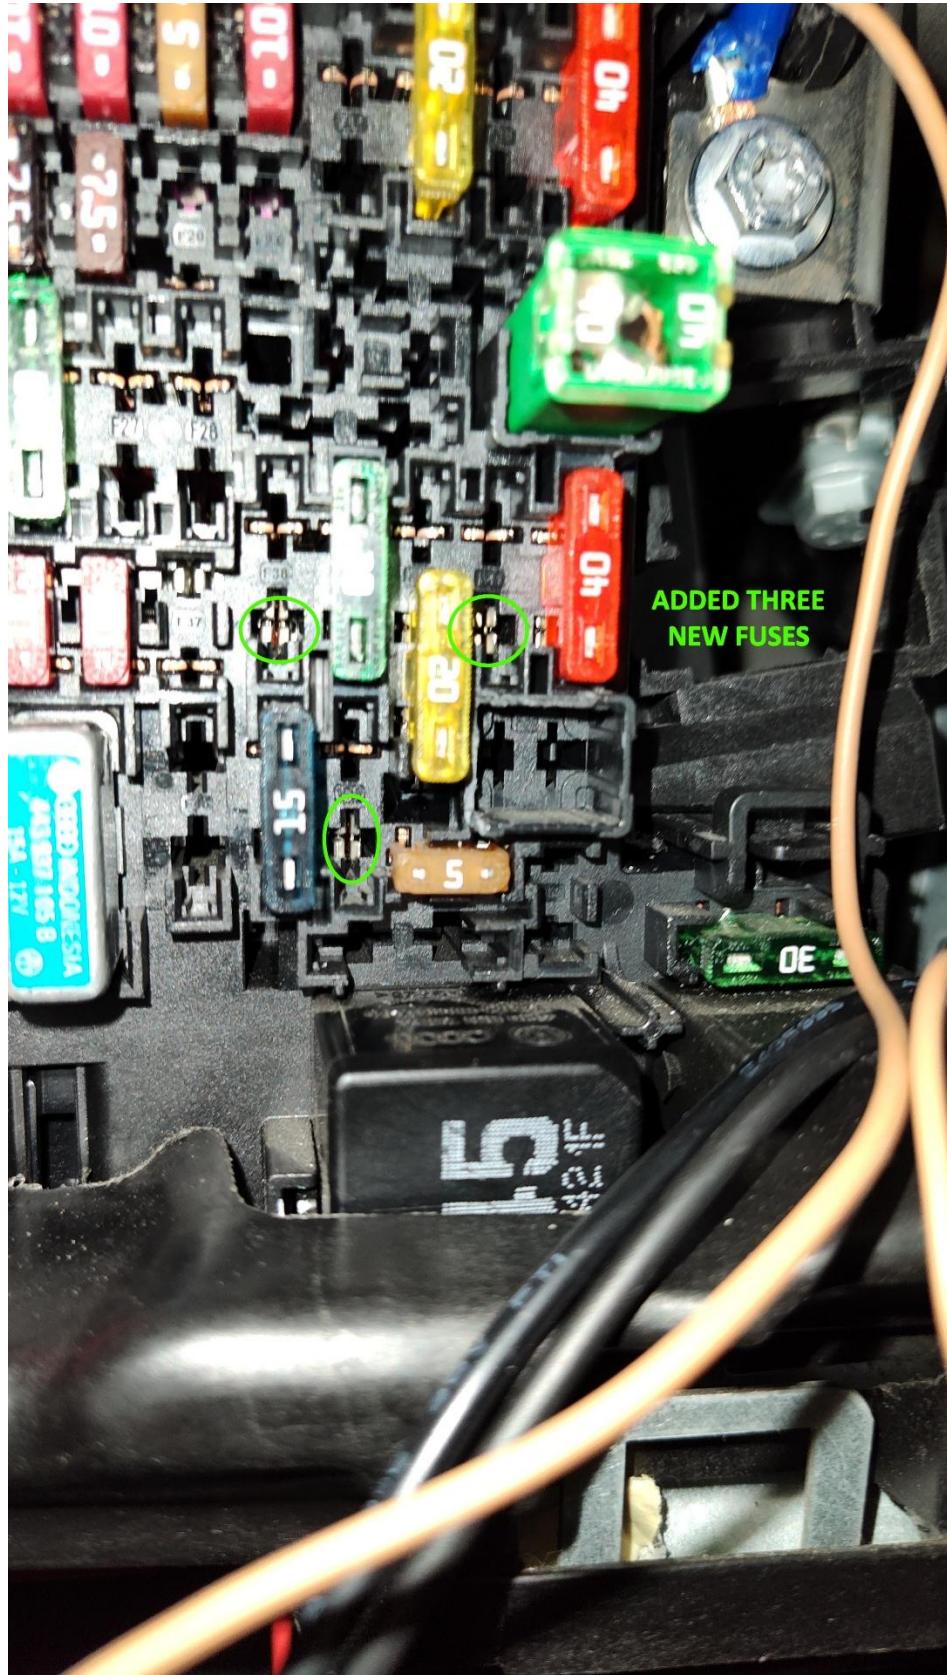


- Now you have to start working on the doors and it is the hardest part (yet easier than wiring a new fuse with the zip tie). Do all that follows for both doors.
- **Unlock the door connector**



- Disengage internal car connector


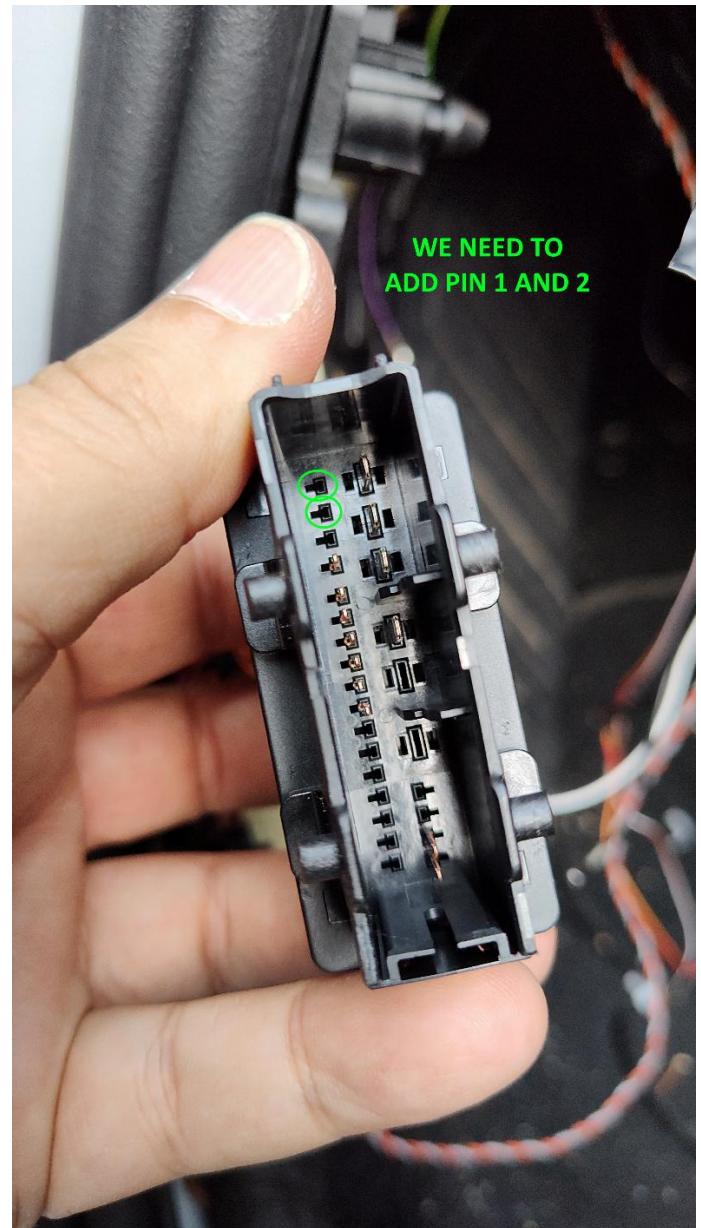


- Remove connector housing using pry points


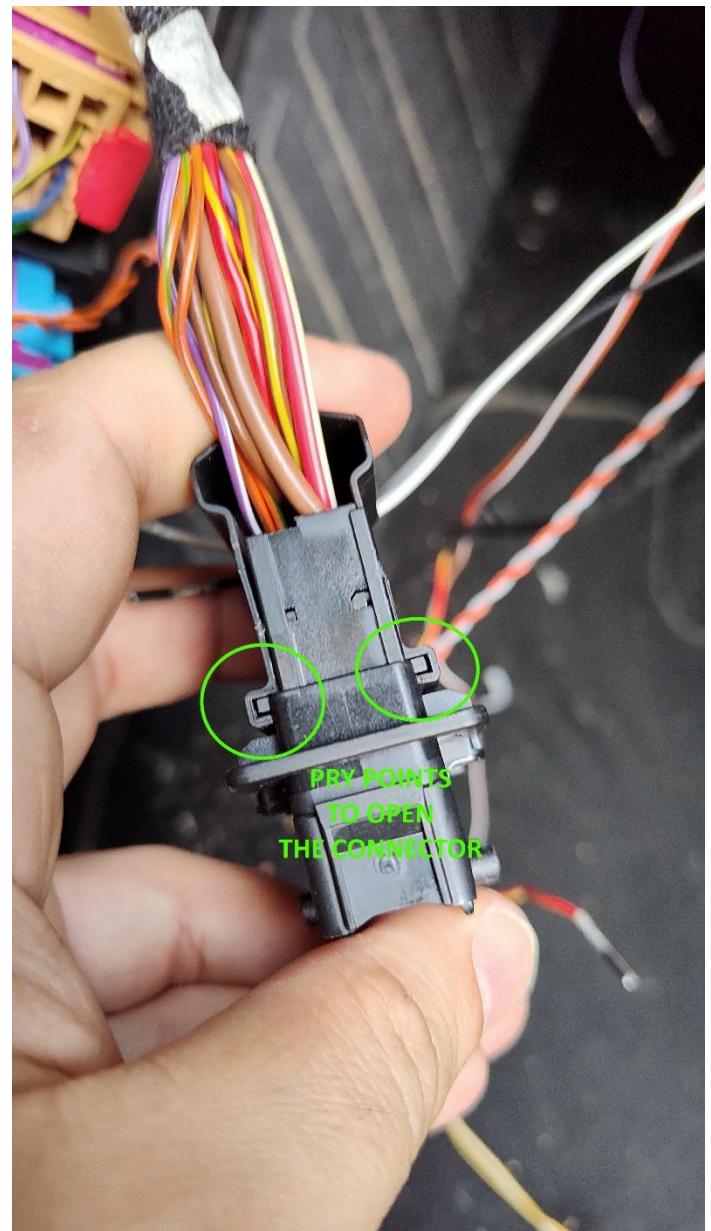


- Insert WHITE/YELLOW terminal into PIN1, BROWN/YELLOW terminal into PIN2 (left door)

Original connector

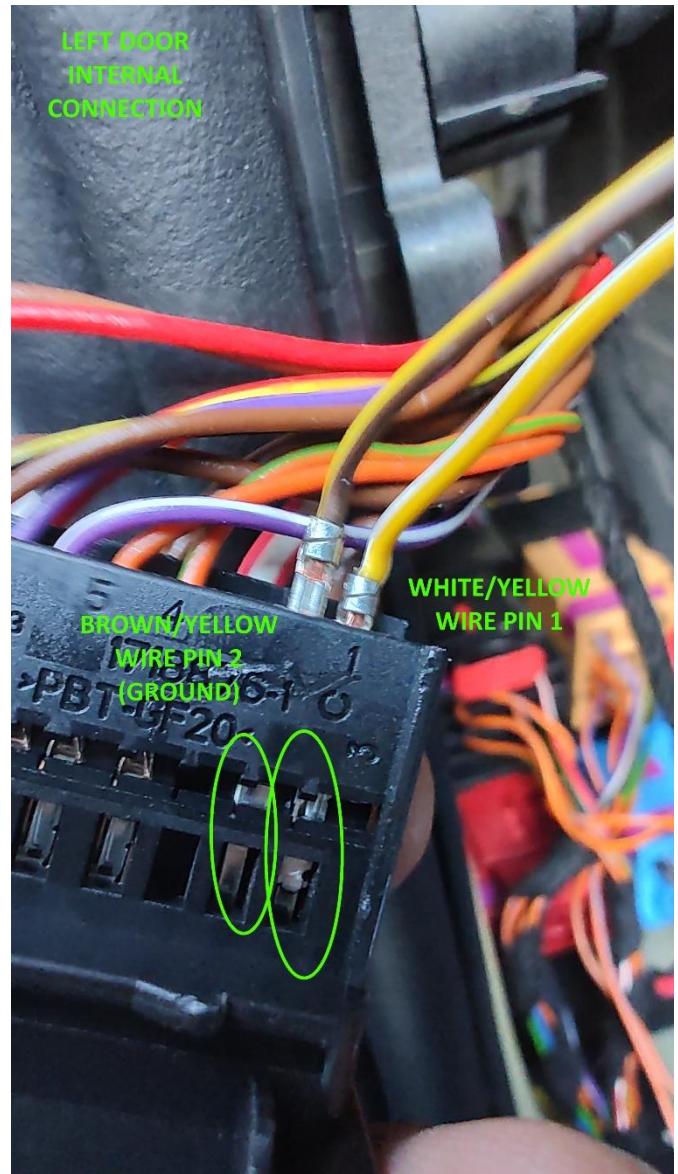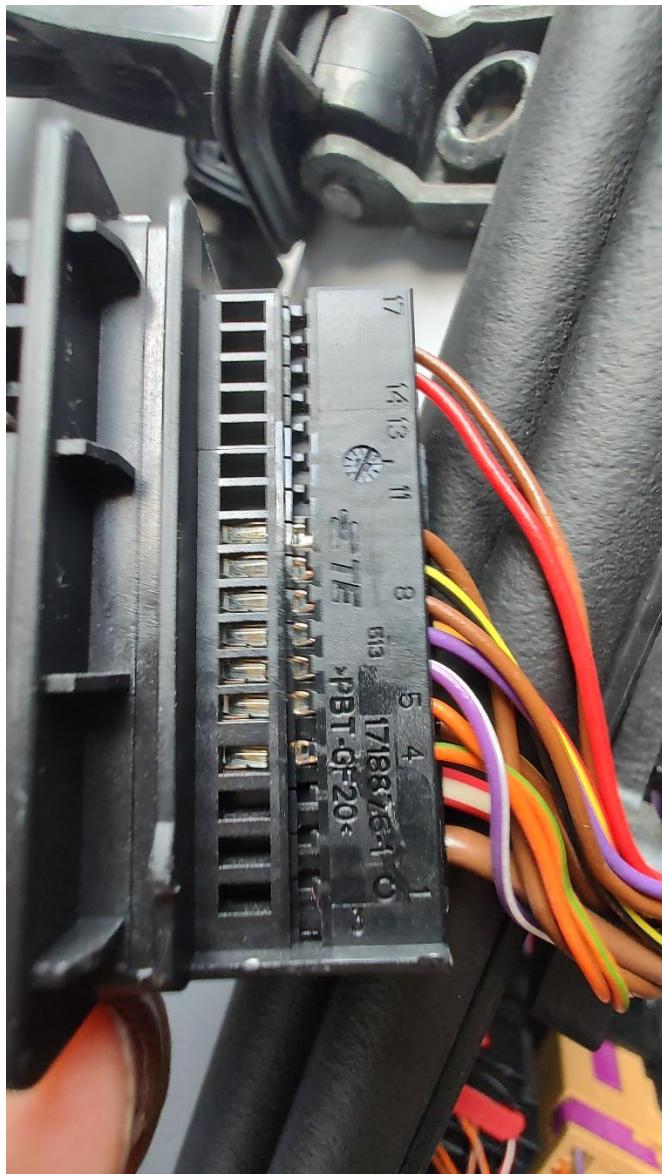



- 2 new pins inserted

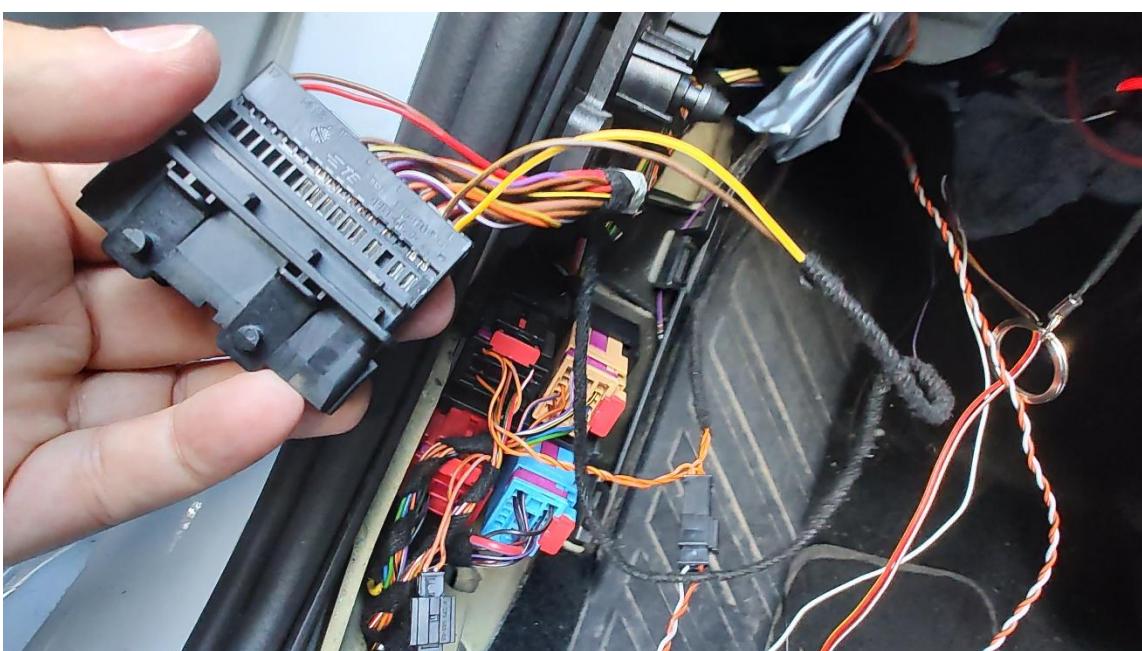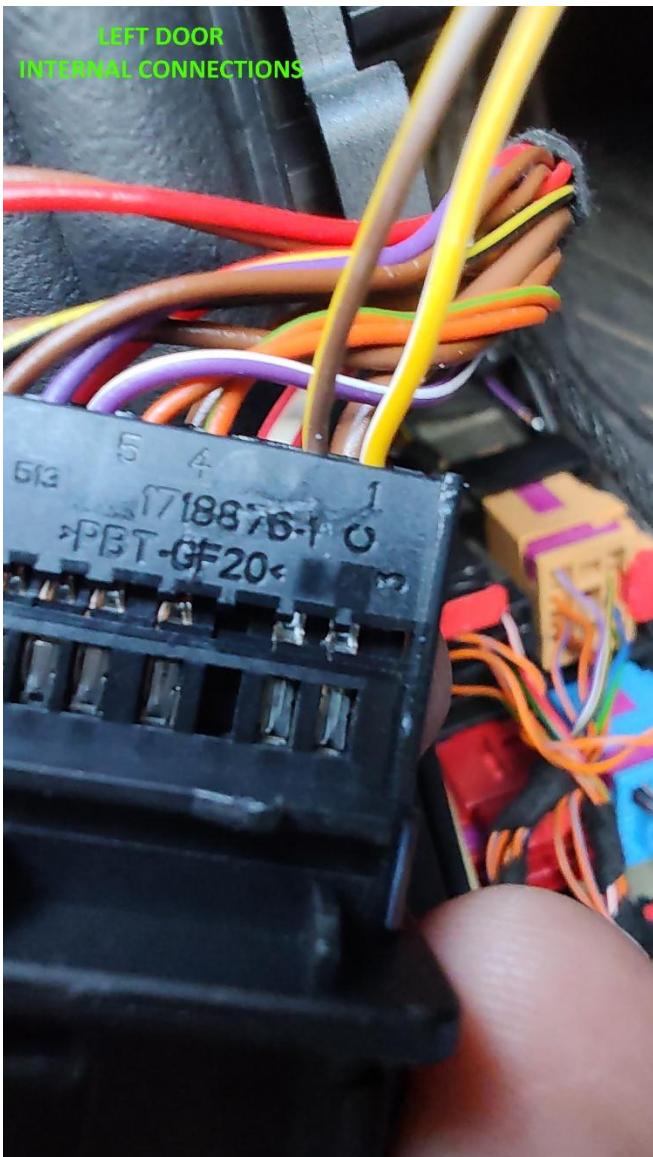


- Close again the connector and reinsert it into the external opening (the connector will wobble a little, it is normal it will become solid once it is connected back the its female part which pulls it outside with its locking mechanism)



- Do the same operation for the right door internal connector.
Insert WHITE/GREEN terminal into PIN1, BROWN/YELLOW terminal into PIN2 (right door)

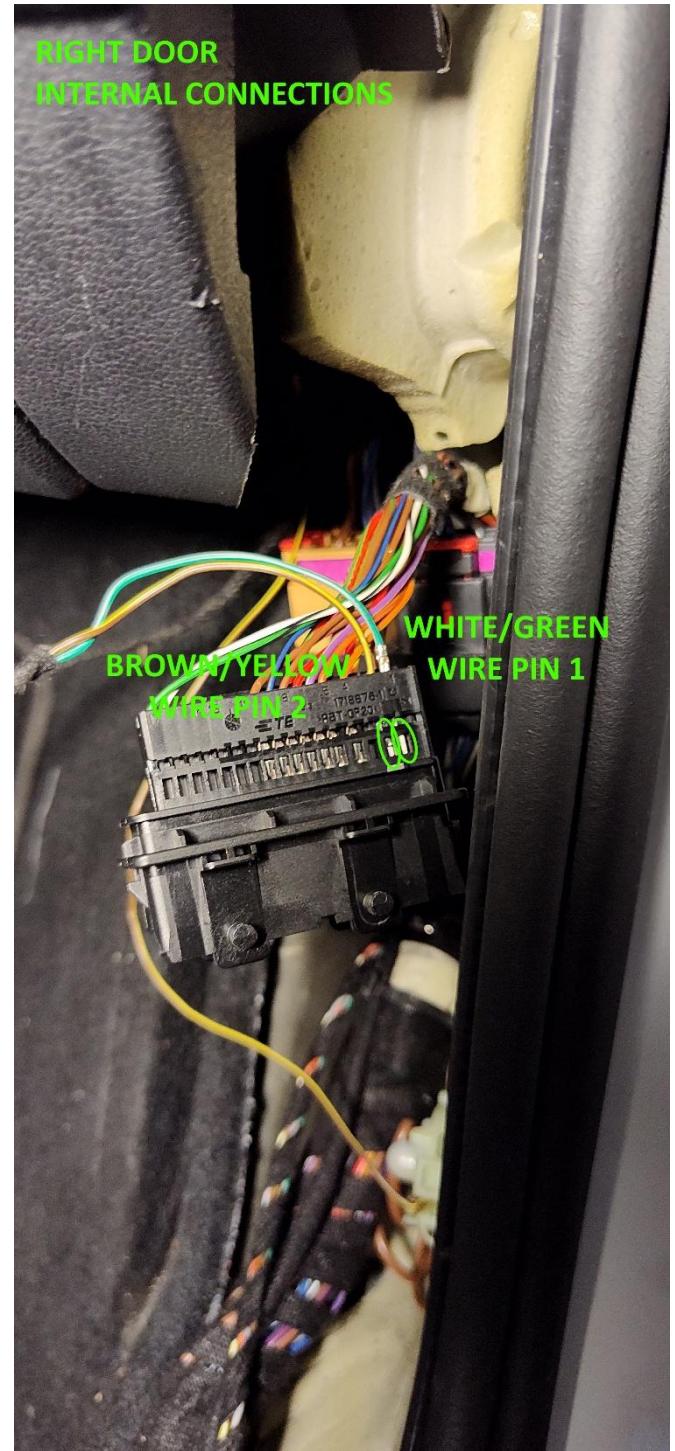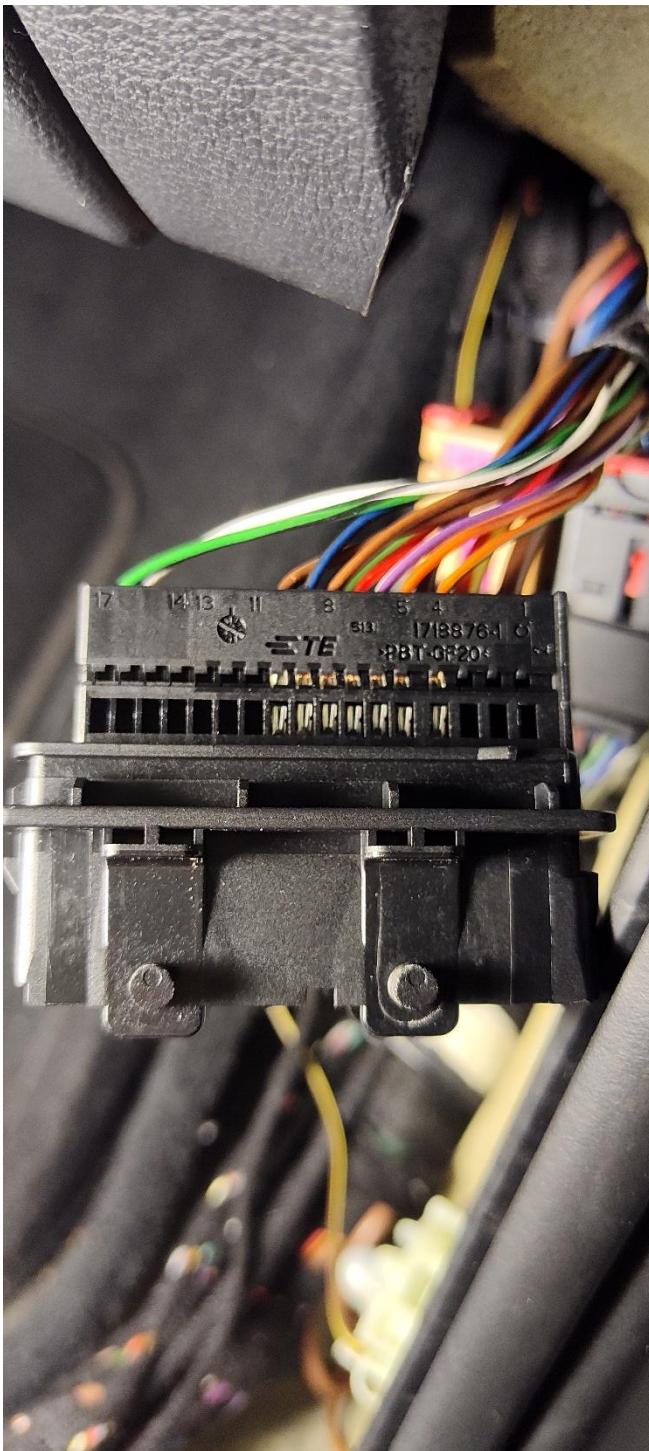


- 2 new pins inserted in the right door internal connector.

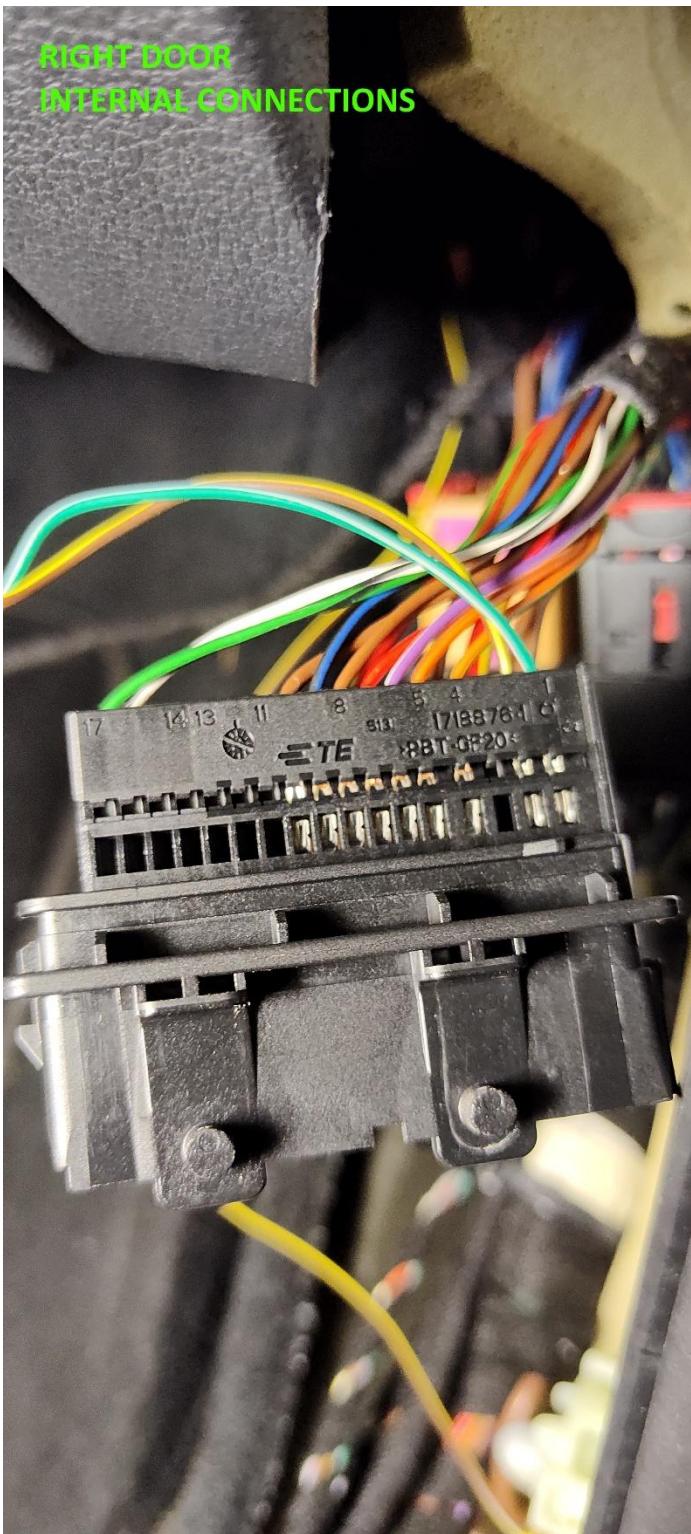


- Work in car has finished, now you have to start working on doors. Remove the door trim:

- Remove the handle molding upper section -1- with the Trim Removal Wedge - 3409- from the mounts in the door trim panel.

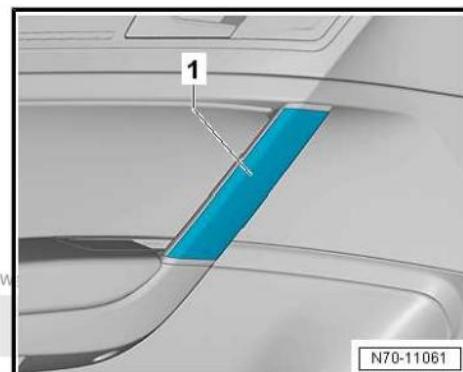


N70-11061

- Remove the bolts -1-.

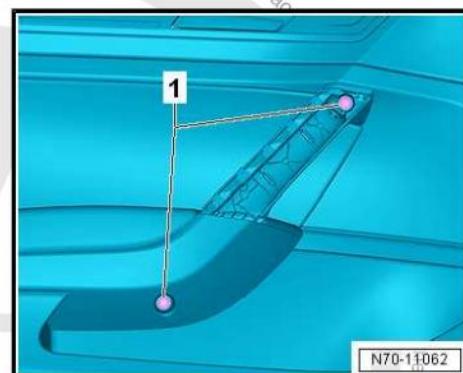


N70-11062

- Turn/release the clip -1- 90° in direction of the -arrow- ($\frac{1}{4}$ of a turn) using the open-end wrench (10 mm).

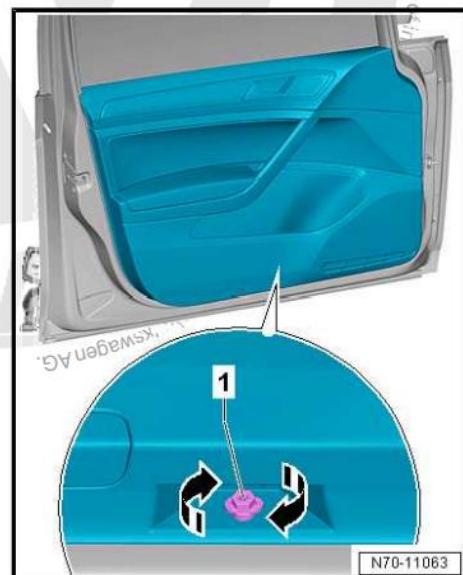

N70-11063

- Clip -arrow- is loosened.

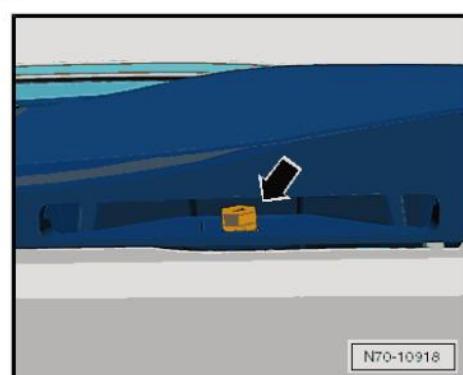


N70-10918

Door with panel removed




- Speaker removal

Disconnect the speaker connector and drill 4 rivets.

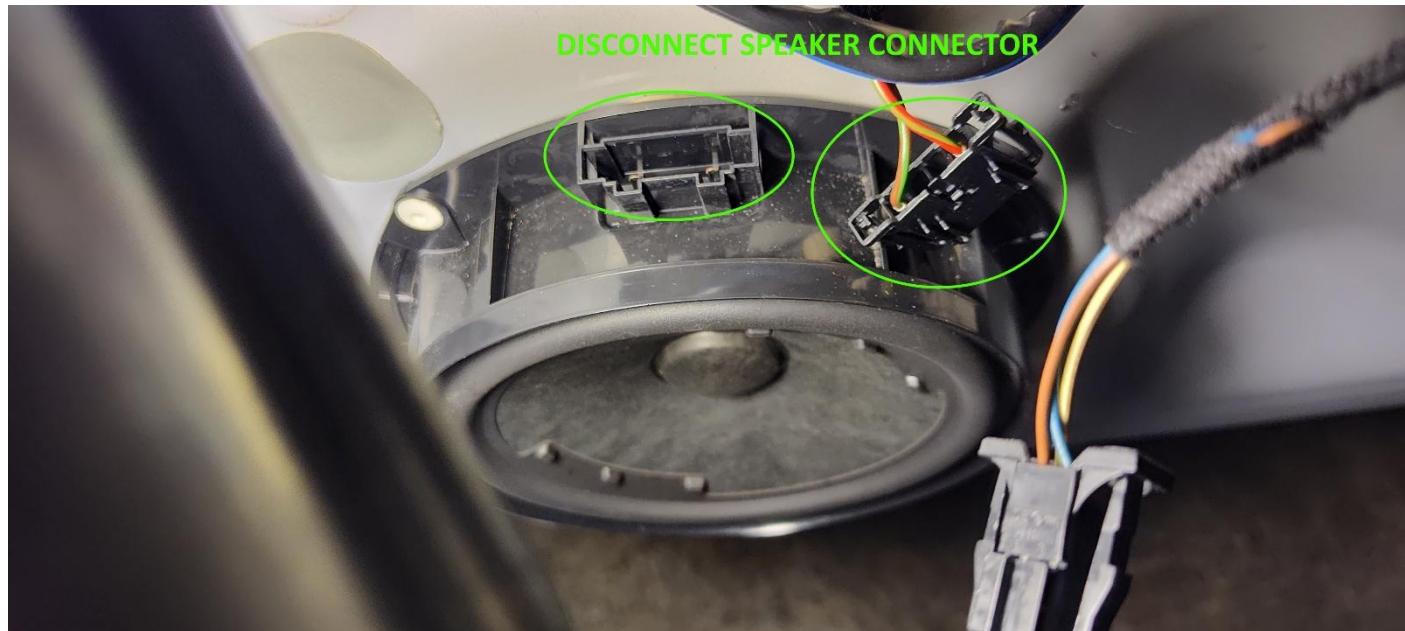



Remove the speaker

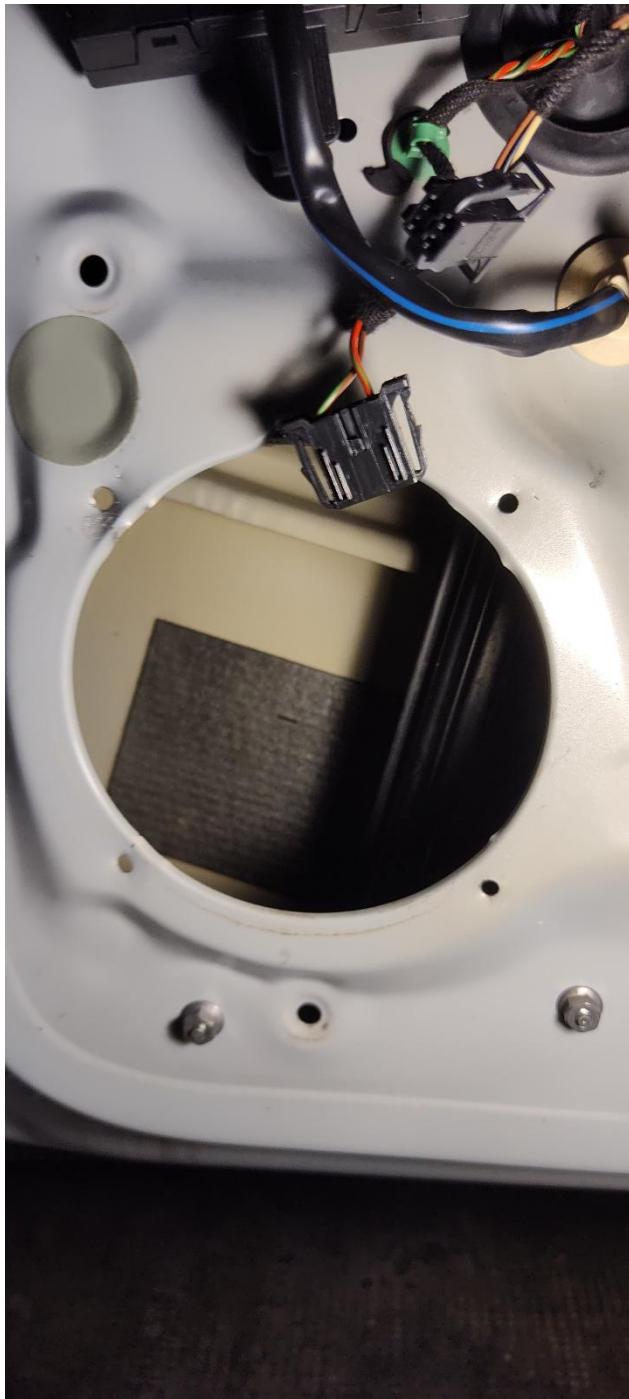

- Now it comes the hardest part laying out the cable from the side mirror inside the door. I used my own method which consists in dismounting the mirrors and disassembling them when they are out of car (in this way it is easy to lay the wire), others cut the insulation sheath in the passthrough hole (see following pages) and force the cable along it, pick the one which works best for you. Here follows my own way:

- Remove side mirror (<https://www.youtube.com/watch?v=g9XVXgCOLmY>)

Before removing disengage rubber and the little green clip under the control unit
(sorry there is a mixture of pictures from right / left door)




- Disassemble side mirror

Push the mirror in the bottom right corner



Remove mirror by pulling gently from top left corner, unplug heating ping

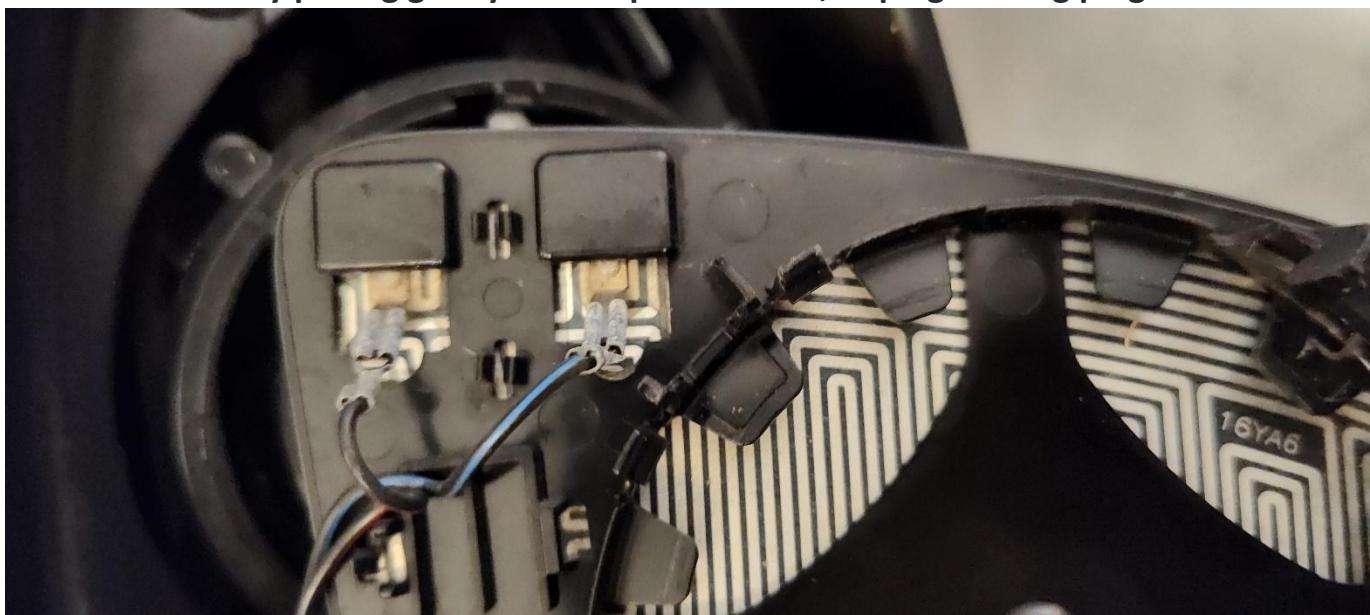

Mirror removed



Remove the top plastic cover



We need to remove 3 plastic covers.

Pry gently with a flat screwdriver the bottom plastic cover



Bottom plastic cover removed



Remove middle plastic cover

Left side (do nothing here)



Right side



Middle plastic cover removed



Remove top plastic cover



Top plastic cover removed



Lay wire into the mirror starting from white blind spot assist mirror light connector into the back of the side mirror



Lay the wire inside the passthrough hole (should be very easy now)



Wire coming outside the passthrough hole



Top plastic cover inserted again



Middle plastic cover inserted again (wedge into the 4 locking pins)

Left side



Right side (note the missing pin, if you want you can apply hot glue, but it is not needed, I manage to close everything without using it)



Bottom plastic cover inserted again (push gently). Cut




Add a new zip tie to secure both cables




Connect the new mirror provided with blind spot assist kit

Connect blind spot assist mirror light

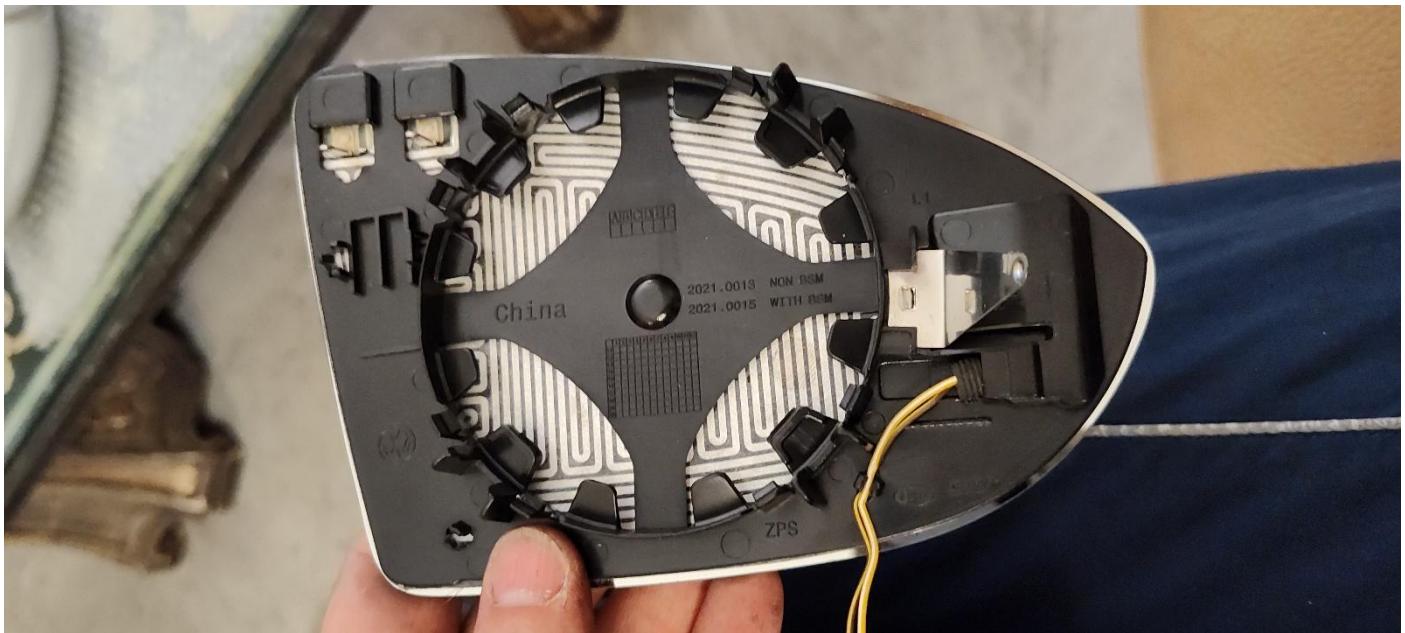

Connect heating element (check them when mounted on the car if mirror does not heat after 5 minutes remove again just the mirror and swap the connectors)

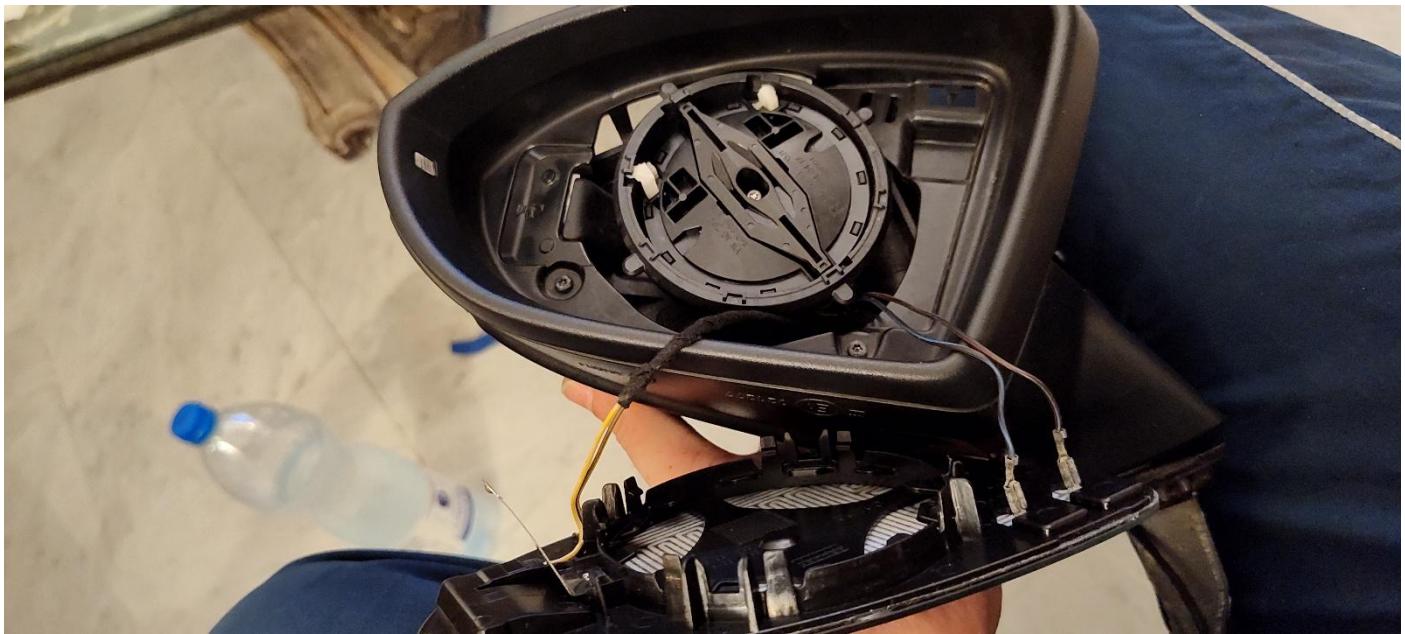


Mirror re-assembled



Join the two door cables

Insert pin into the connector (match colours)




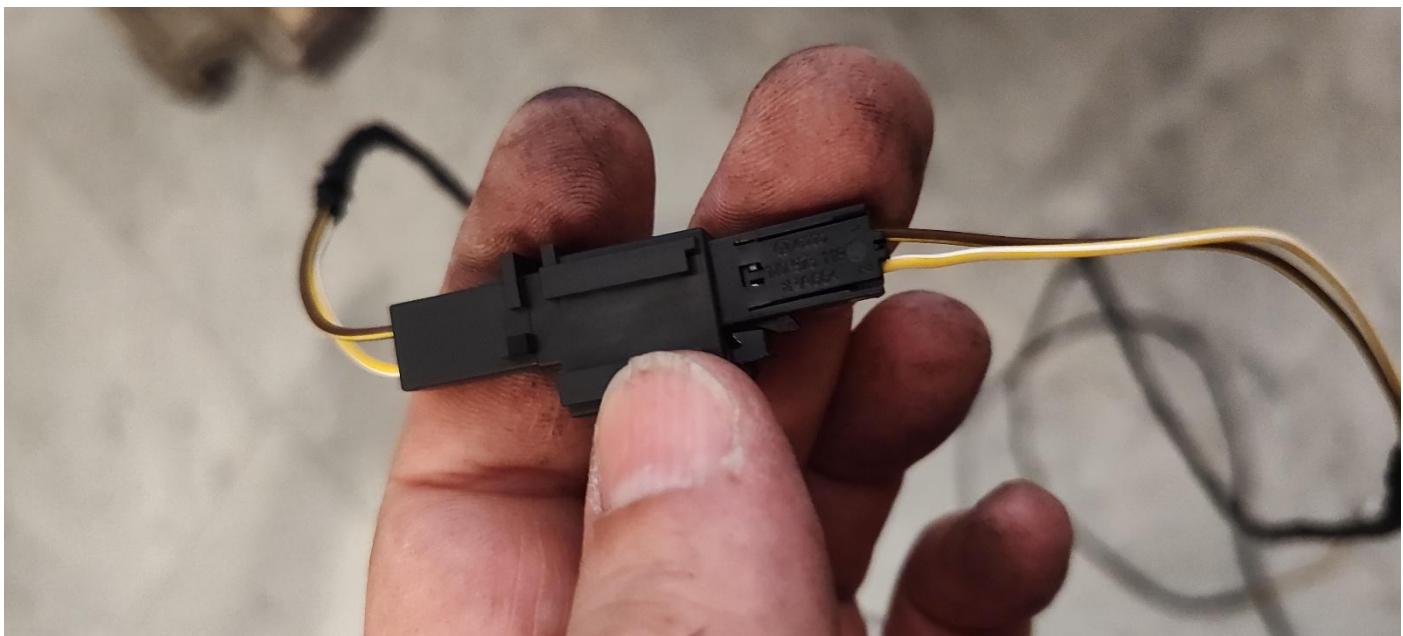

- Reassemble the side mirror on car. Note when inserting the side mirror cable inside the door there are two vertical halves, pass it through the one closer to the interior of the car, otherwise when you try to lower the windows, they will get stuck and you have to dismount everything again (mistake learnt from experience).



- Remove the door plastic clip (sorry the picture here is from right side door)
Internal view from inside the door

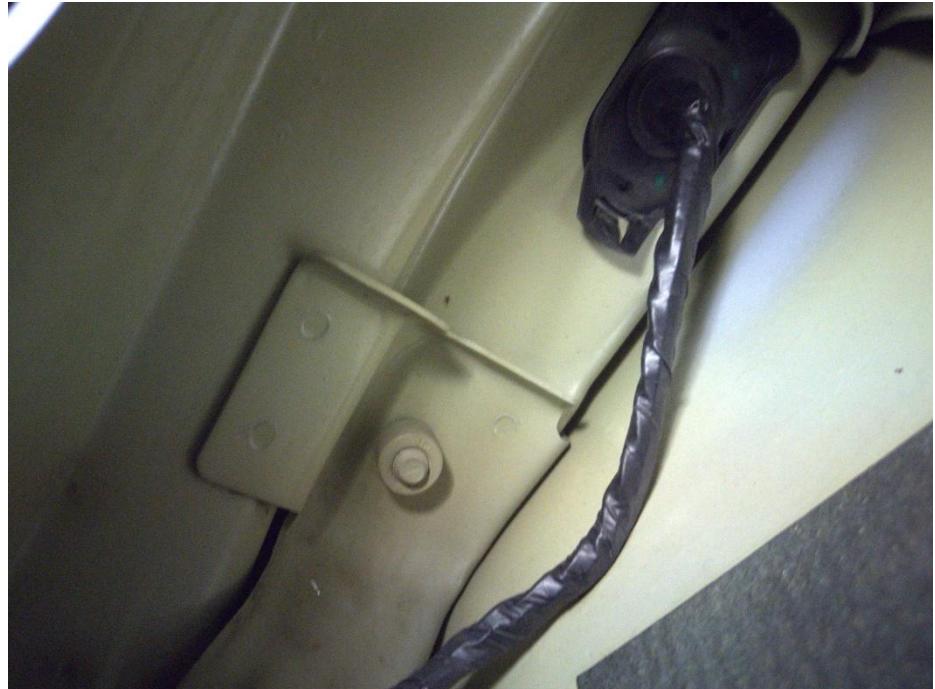


- Lay blind spot assist wire through door plastic clip



- Use a probe to lay the wire through the rubber





- Unlock the door female connector, push with a flat screwdriver and pull down
Connector unlocked

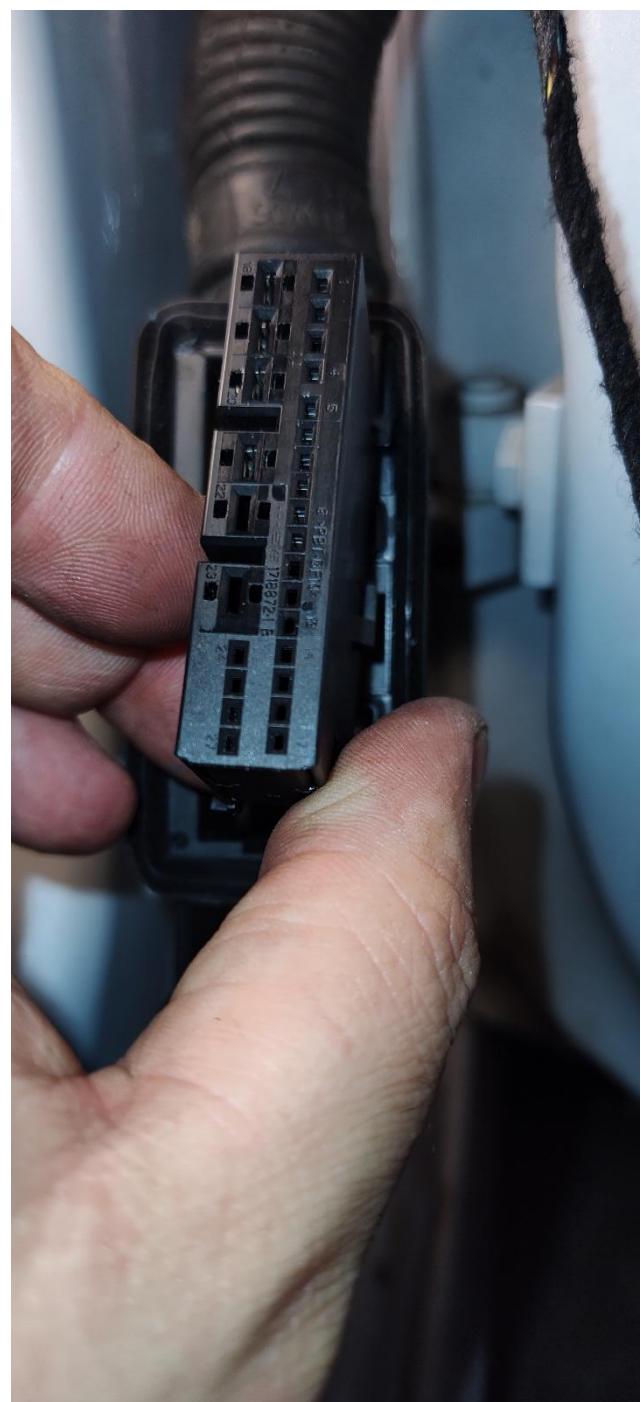


- Remove external door connector housing


External door connector housing removed

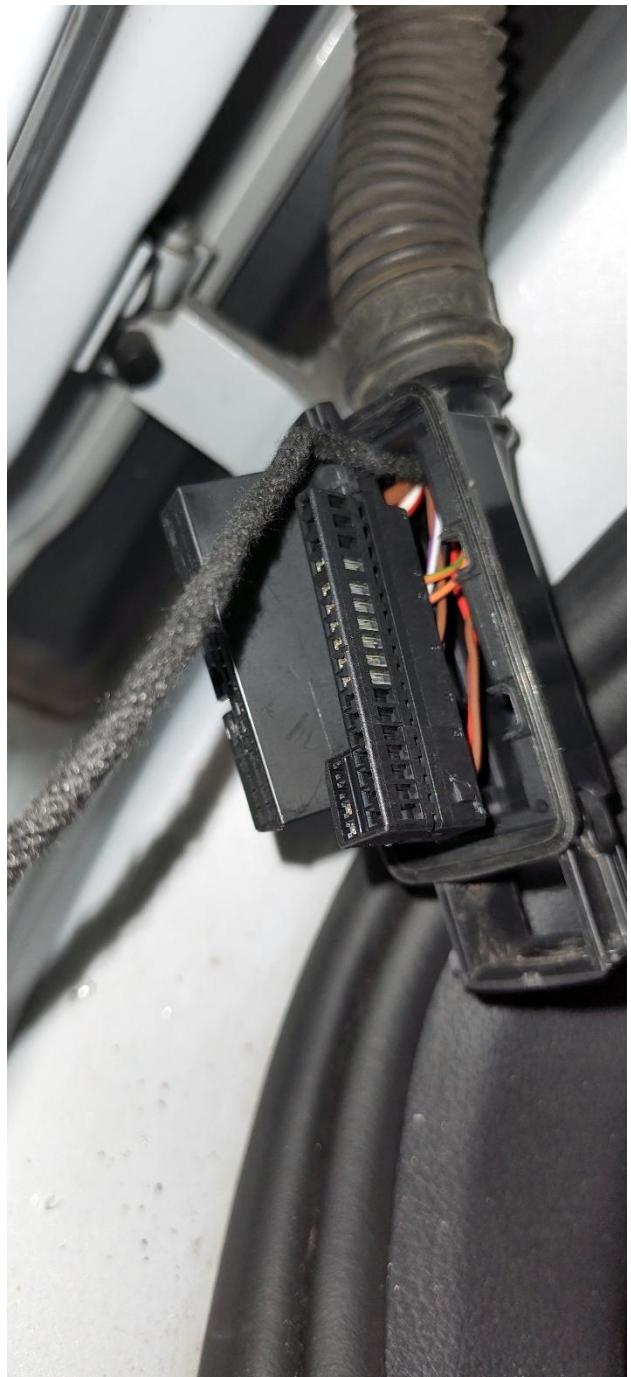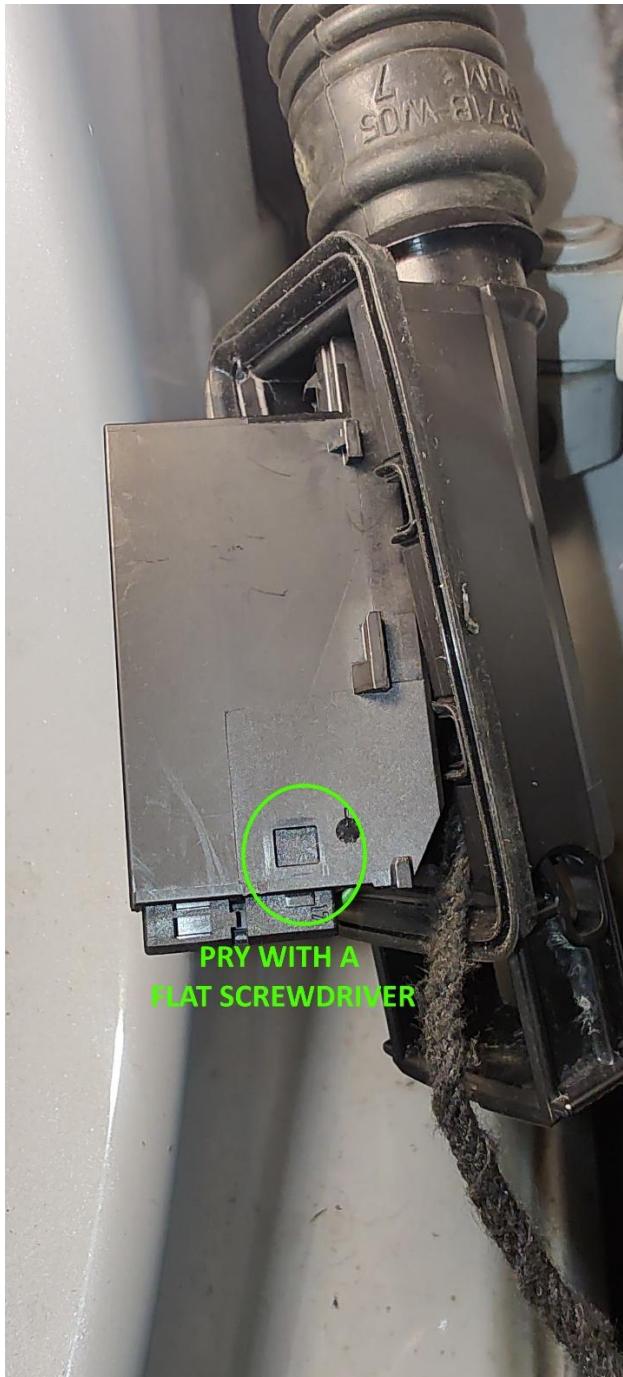


- Add WHITE/YELLOW wire to PIN1, BROWN/YELLOW wire to PIN2 (GROUND)

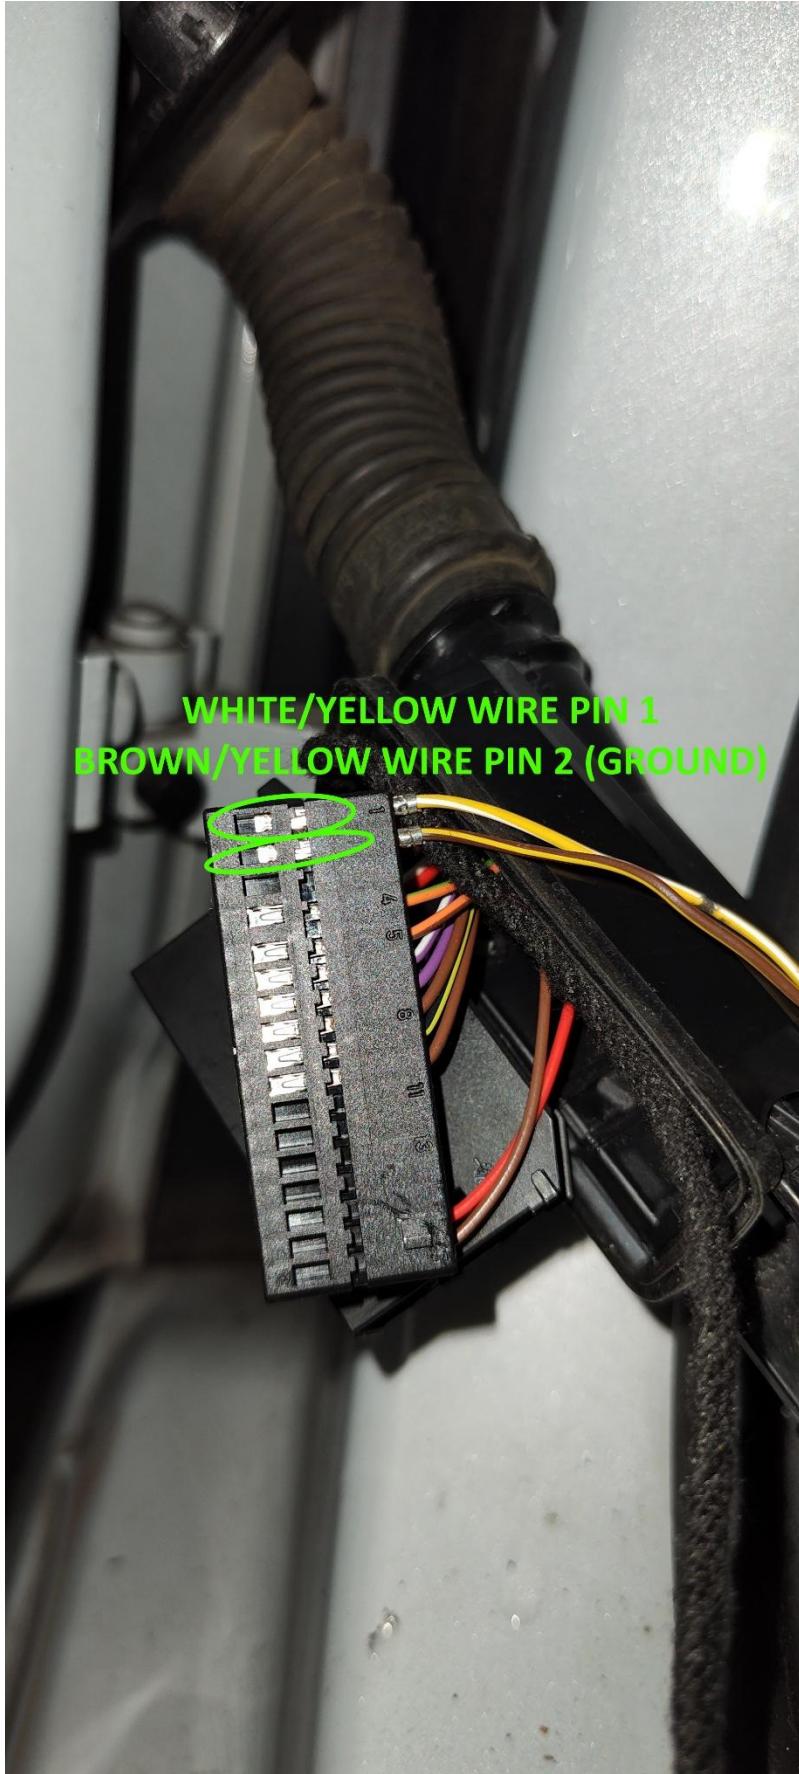

- Pins added and external door connector housing inserted again (left)
- External door connector reinserted into place and pulling back cable
- Pull back cable as much as possible, reapply rubber to external door connector and inserted again door plastic clip

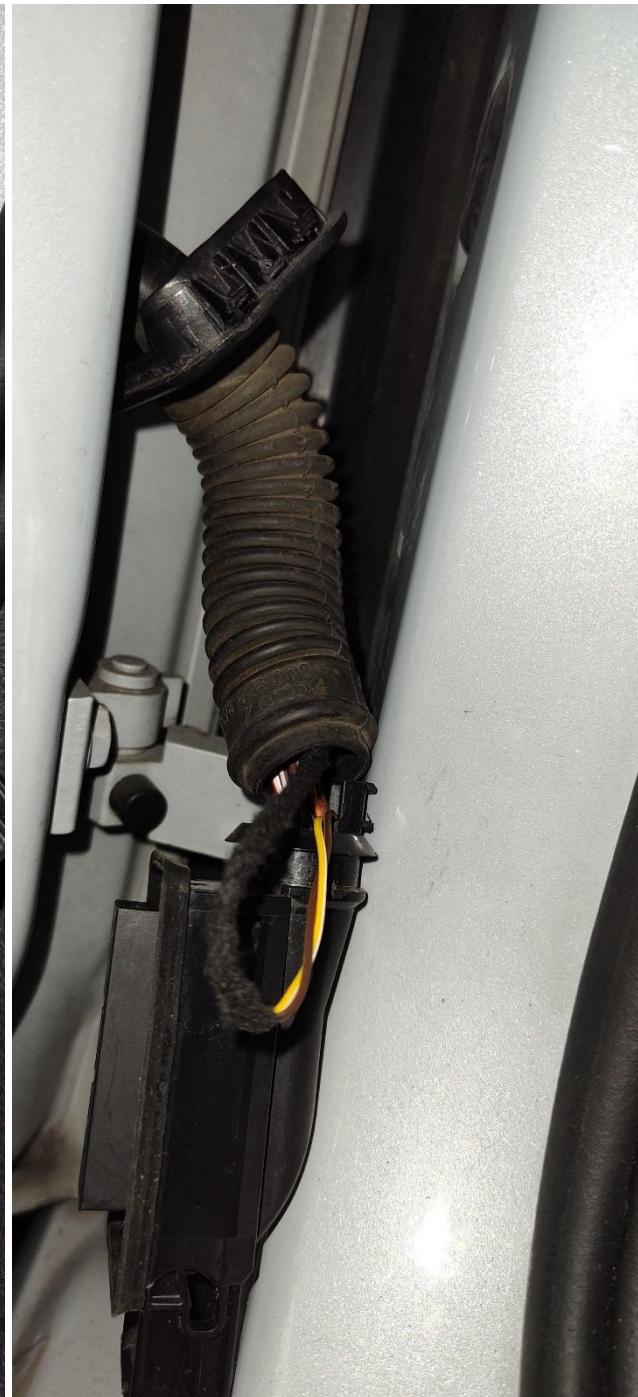


- Inside this space the windows get lowered so you can't leave cable floating around, otherwise they won't get down anymore. Zip tie the blind spot assist cable to the existing cable following its curved route as in the pictures

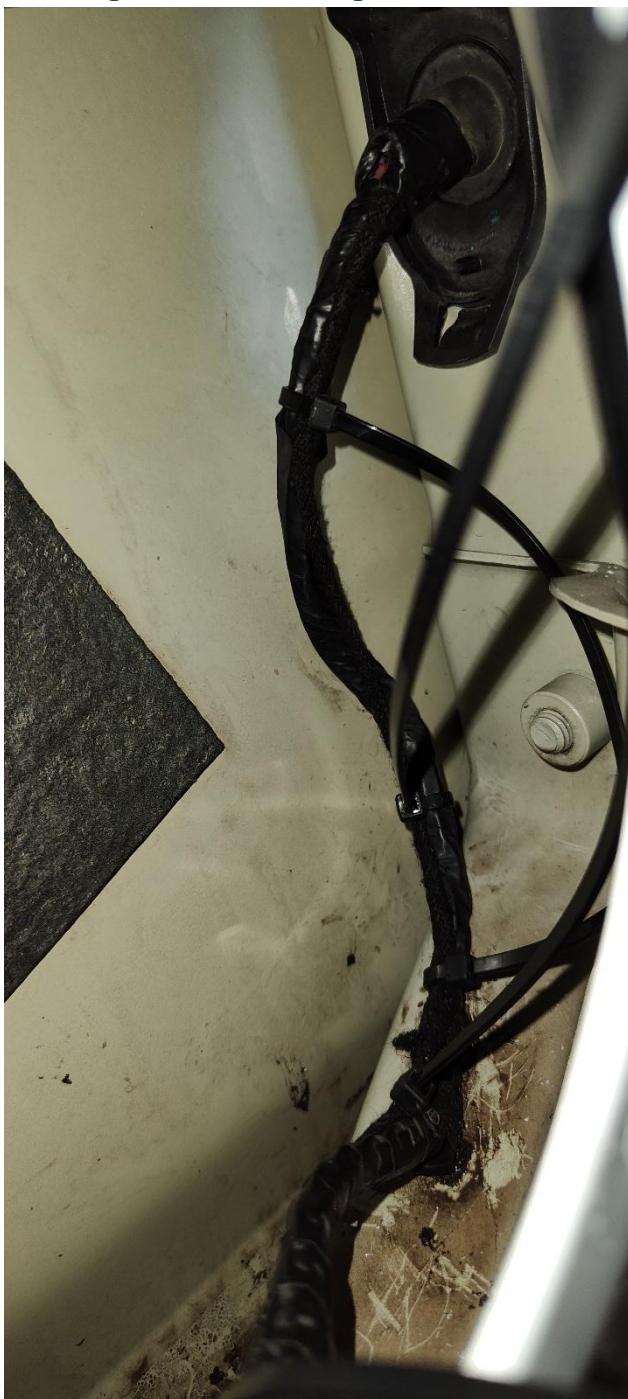

THIS IS THE RUBBER OF THE
SIDE MIRROR CABLE, I PASSED THE
BLIND SPOT ASSIST CABLE ON THE
OTHER OPENING AS IN TIMELAPSE RETROFIT
WITH THE MIND OF HINDSIGHT IT WOULD
HAVE BEEN BETTER TO PASS IT HERE INSTEAD
OF THE OTHER OPENING




- **Cable passed outside the door**

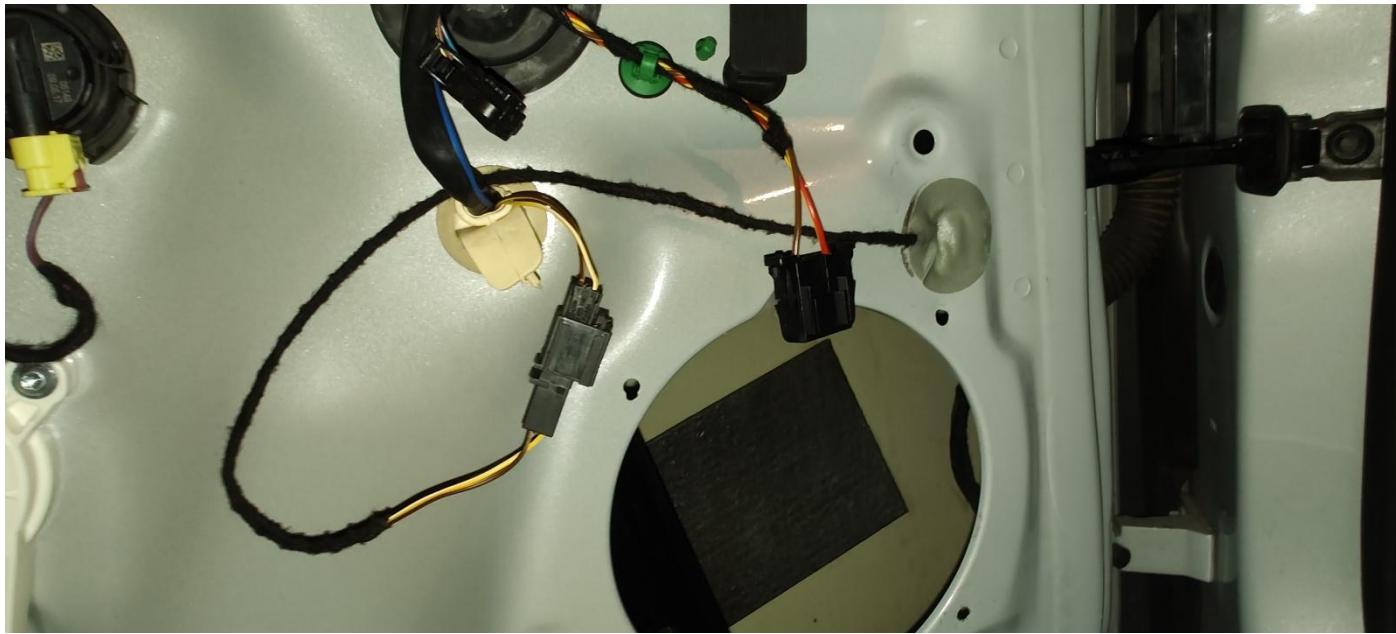

- Connect the door trim provisionally just to check that the electric window goes up and down without any hindrance. If everything is fine, remove again the door panel trim and mount again the speaker securing it with 4 rivets using the riveter.
- Congratulations work on first door finished, reassemble the door trim

- Do the same for the right door, remember BLACK/GREEN wire to PIN1, BROWN/YELLOW to PIN2.

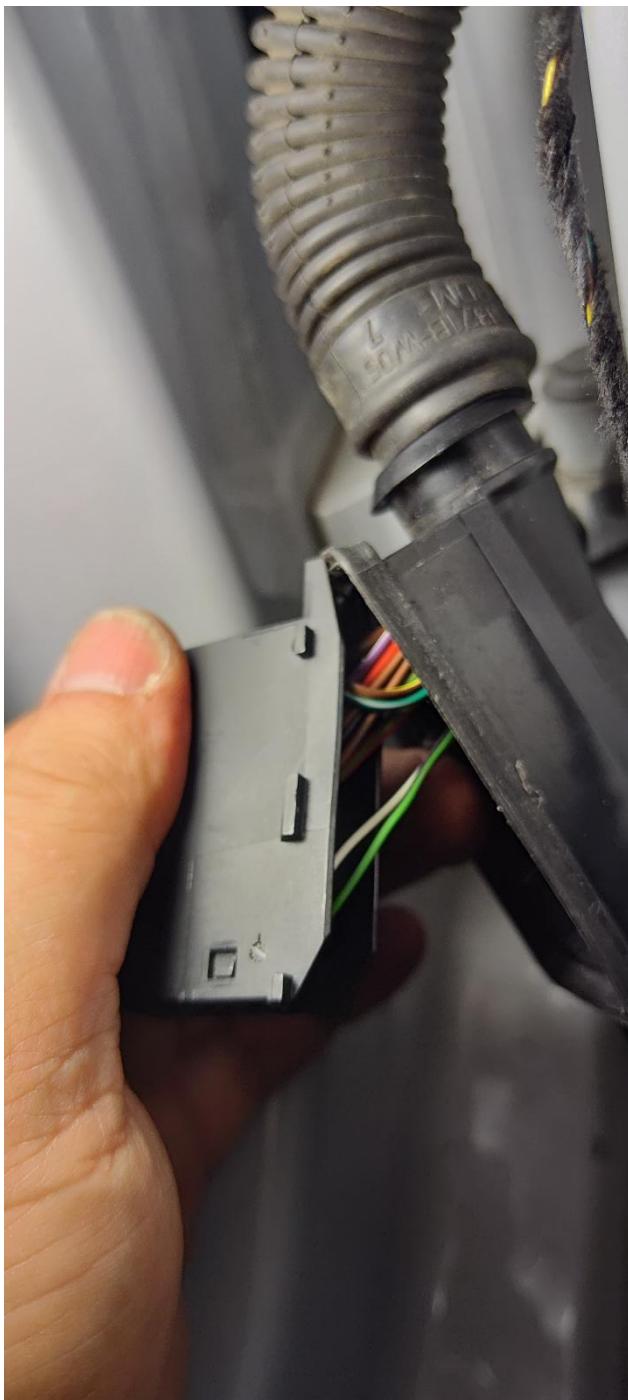

Congratulate yourself the installation and wiring are all done, you have now just to perform coding and test it!

Additional Videos:

- A full-time lapse video of a retrofit (<https://youtu.be/tp0105g8xt0>)
- A general overview video (<https://youtu.be/G5056ySYUGc>)