



SCYLAR INT 7

Communication description

Software Version 01





HYDROMETER



Contents

1	Introduction	3
2	Communication interfaces	3
	2.1 Communication priorities	3
	2.2 Telegram formats	3
	2.3 UART	3
	Baud rates	3
	Parity detection	3
	2.4 Protocol layer	4
	2.5 Connection set-up for optical ZVEI	4
	2.6 Connection set-up for M-Bus / RS-232	4
	2.7 Addressing	
	2.7.1 Selection (secondary address)	4
	2.7.2 Deselection	4
3		
	3.1 Standard data reading (Application Reset 0)	5
	3.2 Request response	5
	3.3 Interpretation of data	5
4		6
5	Parametrization of integrator	6
	5.1 Structure of instruction set	6
	5.2 Date and time	
	5.3 New primary address	
	5.4 Serial number / customer number	7
	5.5 New reading date 1	8
	5.6 New reading date 2	
	5.7 Pulse input counter 1	
	5.8 Pulse input counter 2	
	5.9 Clearing operating hours	
	5.10 Clearing error days counter	
	5.11 Monthly values (last month)	10
	5.11.1 Reading	
	5.11.2 Deleting	11
	5.12 Deleting error log	
	5.12.1 Reading	
	5.12.2 Setting read pointer	
6	rr	
7	Appendix 2	16

2







1 Introduction

The M-Bus (Meter Bus) is a European standard for remote reading of meters. It can be used for all types of consumption meters and for various sensors and actuators.

This document does not deal with the M-Bus protocol in detail. Further information about this can be found on the Internet at www.m-bus.com.

The RS-232 communication module is a serial interface for communication with external devices, e.g. a PC.

2 Communication interfaces

SCYLAR INT 7 is equipped with three communication interfaces:

- Optical ZVEI: In the ZVEI interface, a light pulse or a missing light pulse corresponds to each bit.
- M-BUS: M-Bus communication is over a two-wire line. This interface is an open-collector output, not a floating contact.
- RS-232: The module board contains a 3-pole terminal strip with terminals marked DAT, REQ and GND (ground). This connection can be used in conjunction with the HYD cable adapter for PC communication.

2.1 Communication priorities

Mutual influence of interfaces:

Interface	Priority
Optical ZVEI	1
M-Bus	2

Interface	Priority
Optical ZVEI	1
RS-232	2

The M-Bus and RS-232 interfaces can no longer be used during optical communication. Any communication in progress over the ZVEI interface is re-routed to the M-Bus when the M-Bus is detected.

2.2 Telegram formats

Communication complies with:

 IEC 870-5-1 Telecontrol equipment and systems; Transmission protocols; Section One -Transmission frame formats.

2.3 UART

Baud rates

M-Bus: 300 and 2400 bauds (300 bauds: transmission in Interrupt Mode),

3

no automatic baud rate switching

RS-232: 300 and 2400 bauds

ZVEI optical: 2400 bauds

Parity detection

to IEC 870-5-1; 8 data bits; even parity; 1 stop bit (8E1)



HYDROMETER



2.4 Protocol layer

- 1. IEC 870-5-1 corresponding to EN 1434-3
- 2. Data output (RSP_UD)
 - a) Variable protocol
 - b) Least Significant Byte first (mode 1) for multi-byte variables
 - c) All response telegrams also available for C1 errors

2.5 Connection set-up for optical ZVEI

To activate the optical ZVEI interface, a '0' - '1' bit pattern must be sent continuously at 2400 bauds for 2.2 s (= 480 bytes + \$55 + 8 data bits + no parity + 1 stop bit). The actual communication can be started after a pause of 11 to 330 bit times (2400 bauds).

2.6 Connection set-up for M-Bus / RS-232

After connection to the M-Bus/RS-232, the MSP430 interface module needs max. 590 ms before it is ready for reliable communication. => A wait time of 590 ms must be observed between connection to the M-Bus/RS-232 and the start of communication.

2.7 Addressing

The integrator can be addressed using two addressing variants: with a logic address (primary address) or by using a filter via its ex works identification (secondary address).

2.7.1 Selection (secondary address)

Request telegram: 68 0B 0B 68 53 FD 52 NN NN NN NN HH HH ID MM CS 16

Response: E5 (only if filter matches)

Structure of filter:

4-byte BCD NN (serial number) \$F digit joker 2-byte HST HH (manufacturer code) \$FF byte joker

1-byte ID (SCYLAR INT 7: \$01) ID (ident. code) \$FF joker

1-byte SMED MM (medium code) \$FF joker

After selection, the integrator behaves as if it also had the primary address \$FD and can therefore be operated via the primary address \$FD (response always with own primary address).

2.7.2 Deselection

Request telegram: 10 40 FD CS 16

Response: E5

To reliably end communication with the selected integrator, the integrator must be deselected. The primary address \$FD then becomes free again and can be used for communication with another integrator.

4







3 Reading integrator:


Procedure:

- 1. Define response "Define response values"
- 2. Request response
- 3. Interpretation of data

3.1 Standard data reading (Application Reset 0)

The integrator is always read using a long frame with the following structure:

To make sure the default value "0" (All) is obtained, an Application Reset should be carried out with subcode "0":

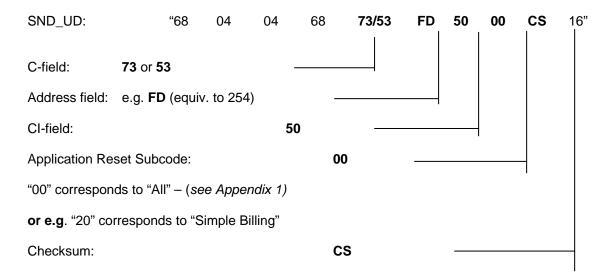

3.2 Request response

The following command must be sent to obtain a response from the integrator:

Request telegram		Response
REQ_UD2	10 7B AA CS 16	RSP_UD

3.3 Interpretation of data

The data received basically corresponds to the protocol structure of EN 1434-3. The units are defined in *Appendix 2*.







4 Customer telegram

Registers can be read or programmed direct in the integrator using subtables.

The IZAR-SET program from HYDROMETER can be used to set the customer telegram. This program can be downloaded from the HYDROMETER website:

http://www.hydrometer.com/systeme/download.html

5 Parametrization of integrator

The integrator is equipped with a number of registers that can be set without breaking the calibration seal.

5.1 Structure of instruction set

Byte	Meaning	Description/content/value
	Header Long Frame (HLF)	
HLF 1	1st start character	\$68
HLF 2	Long field	3 + x
HLF 3	Long field	3 + x
HLF 4	2nd start character	\$68
HLF 5	C-field	\$53 SND_UD
HLF 6	A-field	(Bus) address of integrator
HLF 7	CI-field	\$51 data send mode 1
	Variable Data Blocks (VDB)	
VDB 1		
VDB x		
	End of Long Frame (ALF)	
ALF 1	Checksum	
ALF 2	Stop character	\$16

5.2 Date and time

The date and time can be changed with the following telegram:

Send:

\$68 \$09 \$09 \$68 \$53 \$ FE \$51 **\$04 \$6D [Date Time (4-Byte Mbus Type F)]** Check \$16

Example: (15.05.2006):

\$68 \$09 \$09 \$68 \$53 \$FE \$51 \$04 \$6D \$0F \$0A \$CF \$05 \$00 \$16

Read: \$E5







5.3 New primary address

If VBD1 = \$01 and VDB2 = \$7A, VDB3 is used as new primary address.

Send: \$68 \$06 \$06 \$68 \$53 \$FE \$51 **\$01 \$7A [Address]** Check \$16

Example (address 5):

\$68 \$06 \$06 \$68 \$53 \$FE \$51 **\$01 \$7A \$05** \$22 \$16

Read: \$E5

Special cases:

A-field	Function	Use
\$FD	Code for secondary addressing	Secondary addressing
\$FE	Broadcast (to all) with response	Only one integrator connected
\$FF	Broadcast (to all) without response	System-wide control

5.4 Serial number / customer number

The new integrator number NNUM can be defined with the following telegram: 4-byte BCD

Send: \$68 \$09 \$09 \$68 \$53 \$FE \$51 **\$0C \$79 NNUM Check** \$16

Example (SN 12345678):

\$68 \$09 \$09 \$68 \$53 \$FE \$51 **\$0C \$79 \$78 \$56 \$34 \$12** \$3B \$16

Read: \$E5

Note: The NNUM is part of the secondary address.







5.5 New reading date 1

If VBD1 = \$44, VDB2 = \$ED and VDB3 = \$7E, VDB4 and VDB5 are used as new next reading date (data type F).

Send: \$68 \$10 \$10 \$68 \$53 \$FE \$51 [DATE] Check \$16

Example (01.05.2006):

\$68 \$10 \$10 \$68 \$53 \$FE \$51 **\$42 \$EC \$7E \$C1 \$05** \$17 \$16

Read: \$E5

5.6 New reading date 2

If VBD1 = \$84, VDB2 = \$ED and VDB3 = \$7E, VDB4 and VDB5 are used as new next reading date (data type F).

Send: \$68 \$10 \$10 \$68 \$53 \$FE \$51 [DATE] Check \$16

Example (31.12.2006):

\$68 \$11 \$11 \$68 \$53 \$FE \$51 **\$82 \$01 \$EC \$7E \$DF \$0C** \$7D \$16

Read: \$E5

5.7 Pulse input counter 1

If IMPIN1PL = 0, IMPCNT1 can be changed. This programming facility can be disabled by HYD! 4-byte BCD

Send: \$68 \$0B \$0B \$68 \$53 \$FE \$51 **\$8C \$40 \$FD \$3A IMPCNT1** Check \$16

Example (55667788):

\$68 \$0B \$0B \$68 \$53 \$FE \$51 **\$8C \$40 \$FD \$3A \$88 \$77 \$66 \$55** \$5F \$16

8

Read: \$E5







5.8 Pulse input counter 2

If IMPIN2PL = 0, IMPCNT2 can be changed. This programming facility can be disabled by HYD!

4-byte BCD

Send: \$68 \$0B \$0B \$68 \$53 \$FE \$51 **\$8C \$80 \$40 \$FD \$3A IMPCNT1** Check \$16

Example (66554433):

\$68 \$0B \$0B \$68 \$53 \$FE \$51 **\$8C \$80 \$40 \$FD 3A \$33 \$44 \$55 \$66** \$57 \$16

Read: \$E5

5.9 Clearing operating hours

If NCLROTC = 0, ONTIME can be cleared in the field by communication. 3-byte BCD

Send: \$68 \$08 \$08 \$68 \$53 \$FE \$51 **\$0B \$26 XX XX XX** Check \$16

Example (clearing):

\$68 \$08 \$08 \$68 \$53 \$FE \$51 **\$0B \$26 \$00 \$00 \$00** \$D3 \$16

Read: E5

5.10 Clearing error days counter

If NCLREDC = 0, ERRDAY can be cleared in the field by communication. 1-byte BCD

Send: \$68 \$06 \$06 \$68 \$53 \$FE \$51 **\$39 \$27 XX** Check \$16

Example (clearing):

\$68 \$06 \$06 \$68 \$53 \$FE \$51 **\$39 \$27 \$00** \$02 \$16

Read: E5







5.11 Monthly values (last month)

The monthly memory with a capacity of 24 months is located in the EEPROM at address 0x2300 to 0x28FF, with 64 bytes per month.

Address	Month
0x2300	January of even year
0x2340 February of even year	
0x2380	March of even year
0x23C0	April of even year
0x2400	May of even year
0x2440	June of even year
0x2480	July of even year
0x24C0	August of even year
0x2500	September of even year
0x2540	October of even year
0x2580	November of even year
0x25C0	December of even year
0x2600	January of odd year
0x2640	February of odd year
0x2680	March of odd year
0x26C0	April of odd year
0x2700	May of odd year
0x2740	June of odd year
0x2780	July of odd year
0x27C0	August of odd year
0x2800	September of odd year
0x2840	October of odd year
0x2880	November of odd year
0x28C0	December of odd year

Each entry has the following structure:

CHE	rilly rias the following structure.			
Value Date		Size	Type	Address
•	Date	2 bytes	M-Bus type G	0
•	Energy 1/10 display value	4 bytes	BCD	2
•	Tariff energy 1 1/10 display value	4 bytes	BCD	6
•	Tariff energy 2 1/10 display value	4 bytes	BCD	10
•	Tariff definition 1	2 bytes	HY spec.	14
•	Tariff definition 2	2 bytes	HY spec.	16
•	Volume 1/10 display value	4 bytes	BCD	18
•	Error days counter	1 byte	BCD	22
•	Maximum monthly flow rate	3 bytes	BCD	23
•	Maximum monthly power	4 bytes	BCD	27
•	Day of maximum monthly flow rate	1 byte	hex	28
•	Day of maximum monthly power	1 byte	hex	29
•	Pulse counter 1	4 bytes	BCD	30
•	Pulse counter 2	4 bytes	BCD	34
•	IMPIN1DEF	1 byte	HY spec.	35
•	IMPIN2DEF	1 byte	HY spec.	36
•	ONTIME	3 bytes	BCD	39





HYDROMETER



5.11.1 Reading

Write read pointer to address

AppResSubCode 0xC0

Collect data (read pointer is always incremented by data block size)

- · Check address, possibly wrong if communication error
- Interpret response

5.11.2 Deleting

Deletion is not possible in the field, so do not write.

5.12 Deleting error log

The event memory with a capacity of 31 entries is located in the EEPROM at address 0x2284 to 0x22FF, with 4 bytes per entry. The administration data is located at address 0x2280.

Address	Value	Туре
0x2280	Save next index	Hex mask = 0x7C
0x2282	Delete last date	M-Bus type G
0x2284	Index 0	
0x2288	Index 1	
0x22FC	Index 30	

Each entry has the following structure:

Byte 1:

Event byte

Mask	Source
0x01	RAM checksum error
0x02	Power supply back-up
0x04	Temperature measurement error
0x10	Change of PLEV
0xE0	Program start counter

Byte 2 and 3:

Date of saving (M-Bus data type G)

Byte 4:

Bit	Source
0x1F	Hour
0x20	Leak at In1
0x40	Leak at In2
0x80	Data change







5.12.1 Reading

Write read pointer to address

AppResSubCode 0xC0

Collect data:

- · Check address, possibly wrong if communication error
- Interpret response

5.12.2 Setting read pointer

Send:

\$68 \$0D \$0D \$68 \$53 \$FE \$51 \$2F \$0F **\$00 \$01 \$6E \$03 \$03 AdrLo AdrHi \$80**Check \$16

Example (0x2300):

\$68 \$0D \$0D \$68 \$53 \$FE \$51 \$2F \$0F **\$00 \$01 \$6E \$03 \$03 \$00 \$23 \$80** Check \$16

Read: \$E5







6 Appendix 1

Application Reset Subcode:

Application Reset Subcode	Telegram data
0	Current energy
"All"	Current tariff energy 1
	Current tariff energy 2
	Current volume
	Current power
	Current flow rate
	Current forward temperature T _H
	Current return temperature T _C
	Current temperature difference
	Current operating hours
	CURRENT DATE AND TIME
	Reading date 1 (memory number = 1)
	Energy
	Volume
	Tariff energy 1
	Tariff energy 2
	Date
	Next reading date 1
	Reading date 2 (memory number = 2)
	Energy
	Volume
	Tariff energy 1
	Tariff energy 2
	Date
	Next reading date 2
	Pulse IN register
	Current pulse input counter 1
	Current pulse input counter 2







Current energy Current tariff energy 1 Current tariff energy 2 Current volume Current power Current flow rate Current forward temperature T _H Current return temperature difference Current operating hours Current date and time Reading date 1 (memory number = 1) Energy Volume Tariff energy 1
Current tariff energy 2 Current volume Current power Current flow rate Current forward temperature T _H Current return temperature T _C Current temperature difference Current operating hours Current date and time Reading date 1 (memory number = 1) • Energy • Volume
Current volume Current power Current flow rate Current forward temperature T _H Current return temperature T _C Current temperature difference Current operating hours Current date and time Reading date 1 (memory number = 1) • Energy • Volume
Current volume Current power Current flow rate Current forward temperature T _H Current return temperature T _C Current temperature difference Current operating hours Current date and time Reading date 1 (memory number = 1) • Energy • Volume
Current flow rate Current forward temperature T _H Current return temperature T _C Current temperature difference Current operating hours Current date and time Reading date 1 (memory number = 1) • Energy • Volume
Current flow rate Current forward temperature T _H Current return temperature T _C Current temperature difference Current operating hours Current date and time Reading date 1 (memory number = 1) • Energy • Volume
Current forward temperature T _H Current return temperature T _C Current temperature difference Current operating hours Current date and time Reading date 1 (memory number = 1) • Energy • Volume
Current return temperature T _C Current temperature difference Current operating hours Current date and time Reading date 1 (memory number = 1) • Energy • Volume
Current temperature difference Current operating hours Current date and time Reading date 1 (memory number = 1) • Energy • Volume
Current operating hours Current date and time Reading date 1 (memory number = 1) • Energy • Volume
Current date and time Reading date 1 (memory number = 1) • Energy • Volume
Reading date 1 (memory number = 1) • Energy • Volume
EnergyVolume
Volume
Tariff energy 1
1º Iulii chordy i
Tariff energy 2
Date
Next reading date 1 Pading date 2 (magazina number 2)
Reading date 2 (memory number = 2)
• Energy
• Volume
Tariff energy 1
Tariff energy 2
Date
 Next reading date 2
Reading date 1 last year (memory number = 3)
Energy
Volume
Tariff energy 1
Tariff energy 2
Date
Reading date 2 last year (memory number = 4)
Energy
Volume
Tariff energy 1
Tariff energy 2
2 As 1
"Simple billing"
3 Current energy
"Enhanced billing" Current volume
Current flow rate
Current forward temperature T _H
Current return temperature T _C
Current tariff energy 1
Current error days counter
Current pulse input counter 1
Current pulse input counter 2
Tariff limit 2 reached







_	Γ-			
4	Current energy			
"Multi-tariff billing"	Current volume			
	Current tariff energy 1			
	Current tariff energy 2			
	Current pulse input counter 1			
	Current operating hours			
	Error days counter			
	Current flow rate			
	Current power			
	Current forward temperature T _H			
	Current return temperature T _C			
	Date of last monthly memory			
	Energy of last monthly memory			
	Volume of last monthly memory			
	Pulse counter 1 of last monthly memory			
	Tariff energy 1 of last monthly memory			
	Operating hours of last monthly memory			
	Error days counter of last monthly memory			
5	Current energy			
"Instantaneous values"	Current tariff energy 1			
	Current tariff energy 2			
	Current volume			
	Current power			
	Current flow rate			
	Current forward temperature T _H			
	Current return temperature T _C			
	Current operating hours			
	Current error days counter			
6	Proprietary data number:			
"Load management values	4 -> \$0F \$04 SWVER READPTR READLEN Bytes			
for management"	 Application Reset Subcode = 0x60 makes 			
	READPTR = 0x2900 and READLEN = maximum			
	possible length			
	READPTR is automatically incremented by			
	READLEN for every REQ_UD2			
7	As 1			
"Reserved"				
8	Current date and time (\$04 \$6D DTFZEIT)			
"Installation and startup"	Next reading date 1			
	Next reading date 2			
11	Proprietary data number:			
"Manufacturing"	4 -> \$0F \$04 SWVER READPTR READLEN Bytes			
1	 Application Reset Subcode = 0xB0 makes 			
	READPTR = 0x200 and READLEN = maximum			
	possible length			
	READPTR is automatically incremented by			
	READLEN for every REQ_UD2			
12	As 11 without Init READPTR and READLEN			
"Development"				
13	Current energy			
"Selftest"	Current date and time			
14	As 0			
"Reserved"				
15	RAMTEL			
"Reserved"				







7 Appendix 2

M-Bus units:

	DIV	VIF	Unit
Current energy	0x0C	0x05	0.1 kWh
	0x0C	0x06	1 kWh
	0x0C	0x07	10 kWh
	0x0C	0x86 0x75	1 kWh * 10 ⁻¹
	0x0C	0x FB 0x81 0x72	1 MWh * 10 ⁻⁴
	0x0C	0x FB 0x81 0x73	1 MWh * 10 ⁻³
	0x0C	0x FB 0x81 0x74	1 MWh * 10 ⁻²
	0x0C	0x0F	10 MJ
	0x0C	0x0E	1 MJ
	0x0C	0x0D	0.1 MJ
	0x0C	0x84 0x3D	10 kBtu
	0x0C	0x83 0x3D	1 kBtu
	0x0C	0x82 0x3D	0.1 kBtu
	0x0C	0xFB 0x0E	10 Mcal
	0x0C	0xFB 0x0D	1 Mcal
	0x0C	0xFB 0x0C	0.1 Mcal
Current volume	0x0C	0x12	0.1
	0x0C	0x13	11
	0x0C	0x14	10 I
Current flow rate	0x0B	0x3A	0.1 l/h
	0x0B	0x3B	1 l/h
	0x0B	0x3C	10 l/h
Current power	0x0C	0x2A	0.1 W
-	0x0C	0x2B	1 W
	0x0C	0x2C	10 W
Current time	0x04	0x6D	Type F
Current forward	0x0A	0x5A	0.1 °C
temperature			
	_		_
Current return	0x0A	0x5E	0.1 °C
temperature			
		0.00	0.4.00
Current temperature	0x0A	0x62	0.1 °C
difference			
Occurrent towiff and a second	000 0.40	005	0.4.134/5
Current tariff energy 1	0x8C 0x10	0x05	0.1 kWh
	0x8C 0x10	0x06	1 kWh
	0x8C 0x10	0x07	10 kWh
	0x8C 0x10	0x0F	10 MJ
	0x8C 0x10	0x0E	1 MJ
	0x8C 0x10	0x0D	0.1 MJ
	0x8C 0x10	0x84 0x3D	10 kBtu

HYDROMETER GmbH







			•
	0x8C 0x10	0x83 0x3D	1 kBtu
	0x8C 0x10	0x82 0x3D	0.1 kBtu
	0x8C 0x10	0xFB 0x0E	10 Mcal
	0x8C 0x10	0xFB 0x0D	1 Mcal
	0x8C 0x10	0xFB 0x0C	0.1 Mcal
Current tariff energy 2	0x8C 0x20	0x05	0.1 kWh
	0x8C 0x20	0x06	1 kWh
	0x8C 0x20	0x07	10 kWh
	0x8C 0x20	0x0F	10 MJ
	0x8C 0x20	0x0E	1 MJ
	0x8C 0x20	0x0D	0.1 MJ
	0x8C 0x20	0x84 0x3D	10 kBtu
	0x8C 0x20	0x83 0x3D	1 kBtu
	0x8C 0x20	0x82 0x3D	0.1 kBtu
	0x8C 0x20	0xFB 0x0E	10 Mcal
	0x8C 0x20	0xFB 0x0D	1 Mcal
	0x8C 0x20	0xFB 0x0C	0.1 Mcal
	0,000 0,20	OVI D OYOC	U. I IVICAI
Comment annuation become	0x0B	0x26	h
Current operating hours	UXUB	UX26	h
Desilies des des des services	010	005	0.4.1.30//-
Reading date 1 energy	0x4C	0x05	0.1 kWh
	0x4C	0x06	1 kWh
	0x4C	0x07	10 kWh
	0x4C	0x0F	10 MJ
	0x4C	0x0E	1 MJ
	0x4C	0x0D	0.1 MJ
	0x4C	0x84 0x3D	10 kBtu
	0x4C	0x83 0x3D	1 kBtu
	0x4C	0x82 0x3D	0.1 kBtu
	0x4C	0xFB 0x0E	10 Mcal
	0x4C	0xFB 0x0D	1 Mcal
	0x4C	0xFB 0x0C	0.1 Mcal
Reading date 1 volume	0x4C	0x12	0.1
	0x4C	0x13	11
	0x4C	0x14	10
Reading date 1 tariff energy 1	0xCC 0x10	0x05	0.1 kWh
	0xCC 0x10	0x06	1 kWh
	0xCC 0x10	0x07	10 kWh
	0xCC 0x10	0x0F	10 MJ
	0xCC 0x10	0x0E	1 MJ
	0xCC 0x10	0x0D	0.1 MJ
	0xCC 0x10	0x84 0x3D	10 kBtu
	0xCC 0x10	0x83 0x3D	1 kBtu
	0xCC 0x10	0x82 0x3D	0.1 kBtu
	0xCC 0x10	0xFB 0x0E	10 Mcal
	0xCC 0x10	0xFB 0x0D	1 Mcal
	0xCC 0x10	0xFB 0x0C	0.1 Mcal
	0,000 0,10	OVI D OVOC	o. i wicai
Reading date 1	0xCC 0x20	0x05	0.1 kWh
iveaning nate i	UXCC UXZU	0.000	U. I KVVII








('ff	T	T	T
tariff energy 2	0.000.00	0.00	4 1 1 1 1 1 1
	0xCC 0x20	0x06	1 kWh
	0xCC 0x20	0x07	10 kWh
	0xCC 0x20	0x0F	10 MJ
	0xCC 0x20	0x0E	1 MJ
	0xCC 0x20	0x0D	0.1 MJ
	0xCC 0x20	0x84 0x3D	10 kBtu
	0xCC 0x20	0x83 0x3D	1 kBtu
	0xCC 0x20	0x82 0x3D	0.1 kBtu
	0xCC 0x20	0xFB 0x0E	10 Mcal
	0xCC 0x20	0xFB 0x0D	1 Mcal
	0xCC 0x20	0xFB 0x0C	0.1 Mcal
Reading date 1 time	0x42	0x6c	Type G
Nove we alive what a	0.40	0	Turn o C
Next reading date 1	0x42	0xEC 0x7E	Type G
Reading date 1 last year energy	0xCC 0x01	0x05	0.1 kWh
	0xCC 0x01	0x06	1 kWh
	0xCC 0x01	0x07	10 kWh
	0xCC 0x01	0x0F	10 MJ
	0xCC 0x01	0x0E	1 MJ
	0xCC 0x01	0x0D	0.1 MJ
	0xCC 0x01	0x84 0x3D	10 kBtu
	0xCC 0x01	0x83 0x3D	1 kBtu
	0xCC 0x01	0x82 0x3D	0.1 kBtu
	0xCC 0x01	0xFB 0x0E	10 Mcal
	0xCC 0x01	0xFB 0x0D	1 Mcal
	0xCC 0x01	0xFB 0x0C	0.1 Mcal
Reading date 1 last year volume	0xCC 0x01	0x12	0.1
	0xCC 0x01	0x13	11
	0xCC 0x01	0x14	10 I
Reading date 1 last year tariff energy 1	0xCC 0x11	0x05	0.1 kWh
	0xCC 0x11	0x06	1 kWh
	0xCC 0x11	0x07	10 kWh
	0xCC 0x11	0x0F	10 MJ
	0xCC 0x11	0x0E	1 MJ
	0xCC 0x11	0x0D	0.1 MJ
	0xCC 0x11	0x84 0x3D	10 kBtu
	0xCC 0x11	0x83 0x3D	1 kBtu
	0xCC 0x11	0x82 0x3D	0.1 kBtu
	0xCC 0x11	0xFB 0x0E	10 Mcal
	0xCC 0x11	0xFB 0x0D	1 Mcal
	0000 0011		
	0xCC 0x11	0xFB 0x0C	0.1 Mcal
			0.1 Mcal
Reading date 1 last year tariff energy 2			0.1 Mcal 0.1 kWh





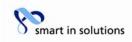

	1	T	
	0xCC 0x21	0x07	10 kWh
	0xCC 0x21	0x0F	10 MJ
	0xCC 0x21	0x0E	1 MJ
	0xCC 0x21	0x0D	0.1 MJ
	0xCC 0x21	0x84 0x3D	10 kBtu
	0xCC 0x21	0x83 0x3D	1 kBtu
	0xCC 0x21	0x82 0x3D	0.1 kBtu
	0xCC 0x21	0xFB 0x0E	10 Mcal
	0xCC 0x21	0xFB 0x0D	1 Mcal
	0xCC 0x21	0xFB 0x0C	0.1 Mcal
Reading date 1 last year time	0xC2 0x01	0x6c	Type G
Reading date 2 energy	0x8C 0x01	0x05	0.1 kWh
Reading date 2 energy	0x8C 0x01		1 kWh
		0x06	10 kWh
	0x8C 0x01	0x07	
	0x8C 0x01	0x0F	10 MJ
	0x8C 0x01	0x0E	1 MJ 0.1 MJ
	0x8C 0x01	0x0D	10.1 MJ 10 kBtu
	0x8C 0x01	0x84 0x3D	
	0x8C 0x01	0x83 0x3D	1 kBtu
	0x8C 0x01	0x82 0x3D	0.1 kBtu
	0x8C 0x01	0xFB 0x0E	10 Mcal
	0x8C 0x01	0xFB 0x0D	1 Mcal
	0x8C 0x01	0xFB 0x0C	0.1 Mcal
Reading date 2 volume	0x8C 0x01	0x12	0.1
Reading date 2 volume	0x8C 0x01	0x13	11
	0x8C 0x01	0x14	10
	OXOC OXOT	OXII	101
Reading date 2 tariff energy 1	0x8C 0x11	0x05	0.1 kWh
	0x8C 0x11	0x06	1 kWh
	0x8C 0x11	0x07	10 kWh
	0x8C 0x11	0x0F	10 MJ
	0x8C 0x11	0x0E	1 MJ
	0x8C 0x11	0x0D	0.1 MJ
	0x8C 0x11	0x84 0x3D	10 kBtu
	0x8C 0x11	0x83 0x3D	1 kBtu
	0x8C 0x11	0x82 0x3D	0.1 kBtu
	0x8C 0x11	0xFB 0x0E	10 Mcal
	0x8C 0x11	0xFB 0x0D	1 Mcal
	0x8C 0x11	0xFB 0x0C	0.1 Mcal
Reading date 2 tariff energy 2	0x8C 0x21	0x05	0.1 kWh
	0,000 0,01	0x06	1 kWh
	0x8C 0x21	0.100	
	0x8C 0x21	0x07	10 kWh
			10 kWh 10 MJ
	0x8C 0x21 0x8C 0x21	0x07	
	0x8C 0x21	0x07 0x0F	10 MJ







	T	T	1
	0x8C 0x21	0x83 0x3D	1 kBtu
	0x8C 0x21	0x82 0x3D	0.1 kBtu
	0x8C 0x21	0xFB 0x0E	10 Mcal
	0x8C 0x21	0xFB 0x0D	1 Mcal
	0x8C 0x21	0xFB 0x0C	0.1 Mcal
Reading date 2 time	0x82 0x01	0x6C	Type G
Trouding dato 2 time	0.02 0.01	0.000	1,750.0
Next reading date 2	0x82 0x01	0xEC 0x7E	Type G
Reading date 2 last year energy	0x8C 0x02	0x05	0.1 kWh
	0x8C 0x02	0x06	1 kWh
	0x8C 0x02	0x07	10 kWh
	0x8C 0x02	0x0F	10 MJ
	0x8C 0x02	0x0E	1 MJ
	0x8C 0x02	0x0D	0.1 MJ
	0x8C 0x02	0x84 0x3D	10 kBtu
	0x8C 0x02	0x83 0x3D	1 kBtu
	0x8C 0x02	0x82 0x3D	0.1 kBtu
	0x8C 0x02	0xFB 0x0E	10 Mcal
	0x8C 0x02	0xFB 0x0D	1 Mcal
	0x8C 0x02	0xFB 0x0C	0.1 Mcal
Reading date 2 last year volume	0x8C 0x02	0x12	0.1 I
	0x8C 0x02	0x13	11
	0x8C 0x02	0x14	10 I
Reading date 2 last year tariff energy 1	0x8C 0x12	0x05	0.1 kWh
	0x8C 0x12	0x06	1 kWh
	0x8C 0x12	0x07	10 kWh
	0x8C 0x12	0x0F	10 MJ
	0x8C 0x12	0x0E	1 MJ
	0x8C 0x12	0x0D	0.1 MJ
	0x8C 0x12	0x84 0x3D	10 kBtu
	0x8C 0x12	0x83 0x3D	1 kBtu
	0x8C 0x12	0x82 0x3D	0.1 kBtu
	0x8C 0x12	0xFB 0x0E	10 Mcal
	0x8C 0x12	0xFB 0x0D	1 Mcal
	0x8C 0x12	0xFB 0x0C	0.1 Mcal
Reading date 2 last year tariff energy 2	0x8C 0x22	0x05	0.1 kWh
	0x8C 0x22	0x06	1 kWh
	0x8C 0x22	0x07	10 kWh
	0x8C 0x22	0x0F	10 MJ
	0x8C 0x22	0x0E	1 MJ
	0x8C 0x22	0x0D	0.1 MJ
	0x8C 0x22	0x84 0x3D	10 kBtu
	0x8C 0x22	0x83 0x3D	1 kBtu
	0x8C 0x22	0x82 0x3D	0.1 kBtu







_	10.000.00	10 FD 0 0F	40 Mari
	0x8C 0x22	0xFB 0x0E	10 Mcal
	0x8C 0x22	0xFB 0x0D	1 Mcal
	0x8C 0x22	0xFB 0x0C	0.1 Mcal
Reading date 2 last year time	0x82 0x02	0x6c	Type G
Error days counter	0x09	0xA7 0x18	Days
Pulse input 1	0x8C 0x40	0x05	0.1 kWh
	0x8C 0x40	0x06	1 kWh
	0x8C 0x40	0x07	10 kWh
	0x8C 0x40	0x0F	10 MJ
	0x8C 0x40	0x0E	1 MJ
	0x8C 0x40	0x0D	0.1 MJ
	0x8C 0x40	0x84 0x3D	10 kBtu
	0x8C 0x40	0x83 0x3D	1 kBtu
	0x8C 0x40	0x82 0x3D	0.1 kBtu
	0x8C 0x40	0xFB 0x0E	10 Mcal
	0x8C 0x40	0xFB 0x0D	1 Mcal
	0x8C 0x40	0xFB 0x0C	0.1 Mcal
	0x8C 0x40	0x12	0.1
	0x8C 0x40	0x13	11
	0x8C 0x40	0x14	10 I
	0x8C 0x40	0x15	100 I
	0x8C 0x40	0xFD 0x3A	No unit
Pulse input 2	0x8C 0x80 0x40	0x05	0.1 kWh
	0x8C 0x80 0x40	0x06	1 kWh
	0x8C 0x80 0x40	0x07	10 kWh
	0x8C 0x80 0x40	0x0F	10 MJ
	0x8C 0x80 0x40	0x0E	1 MJ
	0x8C 0x80 0x40	0x0D	0.1 MJ
	0x8C 0x80 0x40	0x84 0x3D	10 kBtu
	0x8C 0x80 0x40	0x83 0x3D	1 kBtu
	0x8C 0x80 0x40	0x82 0x3D	0.1 kBtu
	0x8C 0x80 0x40	0xFB 0x0E	10 Mcal
	0x8C 0x80 0x40	0xFB 0x0D	1 Mcal
	0x8C 0x80 0x40	0xFB 0x0C	0.1 Mcal
	0x8C 0x80 0x40	0x12	0.1
	0x8C 0x80	0x13	11







	0x40		
	0x8C 0x80 0x40	0x14	10 I
	0x8C 0x80 0x40	0x15	100 I
	0x8C 0x80 0x40	0xFD 0x3A	No unit
Current tariff def. 1	0x82 0x10	0x7F	Proprietary
Current tariff def. 2	0x82 0x20	0x7F	Proprietary
Latest monthly memory date	0xC2 0x02	0x6C	Type G
Latest manthly manager			
Latest monthly memory	0xCC 0x02	0x05	0.1 kWh
energy	0xCC 0x02	0x06	1 kWh
	0xCC 0x02	0x07	10 kWh
	0xCC 0x02	0x0F	10 MJ
	0xCC 0x02	0x0E	1 MJ
	0xCC 0x02	0x0D	0.1 MJ
	0xCC 0x02	0x84 0x3D	10 kBtu
	0xCC 0x02	0x83 0x3D	1 kBtu
	0xCC 0x02	0x82 0x3D	0.1 kBtu
	0xCC 0x02	0xFB 0x0E	10 Mcal
	0xCC 0x02	0xFB 0x0D	1 Mcal
	0xCC 0x02	0xFB 0x0C	0.1 Mcal
Latest monthly memory volume	0xCC 0x02	0x12	0.1
	0xCC 0x02	0x13	11
	0xCC 0x02	0x14	10 l
Latest monthly memory tariff energy 1	0xCC 0x12	0x05	0.1 kWh
	0xCC 0x12	0x06	1 kWh
	0xCC 0x12	0x07	10 kWh
	0xCC 0x12	0x0F	10 MJ
	0xCC 0x12	0x0E	1 MJ
	0xCC 0x12	0x0D	0.1 MJ
	0xCC 0x12	0x84 0x3D	10 kBtu
	0xCC 0x12	0x83 0x3D	1 kBtu
	0xCC 0x12	0x82 0x3D	0.1 kBtu
	0xCC 0x12	0xFB 0x0E	10 Mcal
	0xCC 0x12	0xFB 0x0D	1 Mcal
	0xCC 0x12	0xFB 0x0C	0.1 Mcal
Latest monthly memory tariff energy 2	0xCC 0x22	0x05	0.1 kWh
	0xCC 0x22	0x06	1 kWh
	0xCC 0x22	0x07	10 kWh







	0xCC 0x22	0x0F	10 MJ
	0xCC 0x22	0x0E	1 MJ
	0xCC 0x22	0x0D	0.1 MJ
	0xCC 0x22	0x84 0x3D	10 kBtu
	0xCC 0x22	0x83 0x3D	1 kBtu
	0xCC 0x22	0x82 0x3D	0.1 kBtu
	0xCC 0x22	0xFB 0x0E	10 Mcal
	0xCC 0x22	0xFB 0x0D	1 Mcal
	0xCC 0x22	0xFB 0x0C	0.1 Mcal
Latest monthly memory max. flow rate	0xDB 0x02	0x3A	0.1 l/h
	0xDB 0x02	0x3B	1 l/h
	0xDB 0x02	0x3C	10 l/h
Latest monthly memory max. power	0xDC 0x02	0x2A	0.1 W
	0xDC 0x02	0x2B	1 W
	0xDC 0x02	0x2C	10 W
Latest monthly memory tariff def. 1	0xC2 0x12	0x7F	Proprietary
Latest monthly memory tariff def. 2	0xC2 0x22	0x7F	Proprietary
Latest monthly memory error days counter	0xC9 0x02	0xA7 0x18	Days
Latest monthly memory pulse input 1	0xCC 0x42	0x05	0.1 kWh
	0xCC 0x42	0x06	1 kWh
	0xCC 0x42	0x07	10 kWh
	0xCC 0x42	0x0F	10 MJ
	0xCC 0x42	0x0E	1 MJ
	0xCC 0x42	0x0D	0.1 MJ
	0xCC 0x42	0x84 0x3D	10 kBtu
	0xCC 0x42	0x83 0x3D	1 kBtu
	0xCC 0x42	0x82 0x3D	0.1 kBtu
	0xCC 0x42	0xFB 0x0E	10 Mcal
	0xCC 0x42	0xFB 0x0D	1 Mcal
	0xCC 0x42	0xFB 0x0C	0.1 Mcal
	0xCC 0x42	0x12	0.1
	0xCC 0x42	0x13	11
	0xCC 0x42	0x14	10 I
	0xCC 0x42	0x15	100 I
	0xCC 0x42	0xFD 0x3A	No unit
	0.00 0.42	ONI D ONON	140 01110
Latest monthly memory pulse input 2	0x8C 0x80 0x40	0x05	0.1 kWh
Parae mare a	0xCC 0x82 0x40	0x06	1 kWh
	0xCC 0x82	0x07	10 kWh









	0xCC 0x82	0x0F	10 MJ
	0x40		10 1110
	0xCC 0x82	0x0E	1 MJ
	0x40		
	0xCC 0x82	0x0D	0.1 MJ
	0x40		
	0xCC 0x82	0x84 0x3D	10 kBtu
	0x40		
	0xCC 0x82	0x83 0x3D	1 kBtu
	0x40		
	0xCC 0x82	0x82 0x3D	0.1 kBtu
	0x40		
	0xCC 0x82	0xFB 0x0E	10 Mcal
	0x40	0.50.00	4.84
	0xCC 0x82	0xFB 0x0D	1 Mcal
	0x40	0ED 000	0.4.141
	0xCC 0x82	0xFB 0x0C	0.1 Mcal
	0x40 0xCC 0x82	0x12	0.11
	0x40	UX1Z	0.11
	0xCC 0x82	0x13	11
	0x40	OXIO	
	0xCC 0x82	0x14	10
	0x40		
	0xCC 0x82	0x15	100 l
	0x40		
	0xCC 0x82	0xFD 0x3A	No unit
	0x40		
Latest monthly memory	0xCB 0x02	0x26	h
operating hours			
Current tariff enable 1	0x81 0x10	0xFD 0x1A	Digital output
Command taniff an ald a Q	0.04 0.20	0.40	Digital autout
Current tariff enable 2	0x81 0x20	0xFD 0x1A	Digital output
Error status	0x02	0xFD 0x17	ZVERRBI;
Lifoi status	UNUZ.	ON DON'T	leakage error
			Touring Office
Leakage flow rate	0x0B	0xBA 0x69	0.1 l/h
	0x0B	0xBB 0x69	1 l/h
	0x0B	0xBC 0x69	10 l/h