Computational Aircraft Prototype Syntheses



Training Session 3 CAPS Analysis ESP v1.18

Marshall Galbraith

Bob Haimes

galbramc@mit.edu

haimes@mit.edu

Massachusetts Institute of Technology

John F. Dannenhoffer, III

jfdannen@syr.edu Syracuse University

caps Overview


- Accessing/modifying analysis values
 - set/getAnalysisVal
- Analysis execution and outputs
 - pre/postAnalysis
 - getAnalysisOutVal
- DIRTY/CLEAN process
 - Tracking changes to inputs that impact outputs
- capsGroup attribute
 - Connecting geometry with analysis properties
- Suggested Exercises

session03/naca.csm

```
# NACA design paramters
DESPMTR
         thick
                   0.12
                              #frac of local chord
DESPMTR
         camber
                   0.00
                              #frac of local chord
```

Construct the airfoil UDPRIM naca Thickness thick Camber camber ATTRIBUTE capsAIM \$xfoilAIM; tsfoilAIM



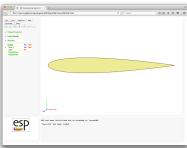

 Analysis values of an AIM are set or accessed with set/getAnalysisVal

session03/xfoil_1_AnalysisVal.py

• Analysis values can be tuples/lists and toggled

session03/xfoil_1_AnalysisVal.py

```
# Print the default value of None
print("\n==> Default Alpha =", xfoil.getAnalysisVal("Alpha"))

# Set Alpha number
xfoil.setAnalysisVal("Alpha", 2.5)
print("\n==> Modified Alpha =", xfoil.getAnalysisVal("Alpha"))

# Set list of Alpha
xfoil.setAnalysisVal("Alpha", [0.0, 3.0, 5.0, 7.0, 8.0])
print("\n==> Modified Alpha =", xfoil.getAnalysisVal("Alpha"))

# Unset Alpha back to None
xfoil.setAnalysisVal("Alpha", None)
print("\n==> Unset Alpha =", xfoil.getAnalysisVal("Alpha"))
```

• Available analysis values in xfoil AIM documentation

<u>caps</u> Overview

- Accessing/modifying analysis values
 - set/getAnalysisVal
- Analysis execution and outputs
 - pre/postAnalysis
 - getAnalysisOutVal
- DIRTY/CLEAN process
 - Tracking changes to inputs that impact outputs
- capsGroup attribute
 - Connecting geometry with analysis properties
- Suggested Exercises

• Load AIM and set analysis values

session03/xfoil_2_Analysis.py

```
print ("\n==> Loading xfoilAIM")
xfoil = myProblem.loadAIM(aim = "xfoilAIM",
                          analysisDir = "workDir_xfoil_2")
print ("\n==> Setting analysis values")
# Set Mach and Reynolds number
xfoil.setAnalysisVal("Mach", 0.5)
xfoil.setAnalysisVal("Re", 1.0E6)
# Set list of Alpha
xfoil.setAnalysisVal("Alpha", [0.0, 3.0, 5.0, 7.0, 8.0])
```

 \bullet Run $\underline{\text{preAnalysis}}$ to generate x foil input files

```
session03/workDir_xfoil_2/caps.xfoil
session03/workDir_xfoil_2/xfoilInput.txt
```

session03/xfoil_2_Analysis.py

```
# Run AIM pre-analysis
print ("\n==> Running preAnalysis")
xfoil.preAnalysis()
```

• Execute xfoil in session03/workDir_xfoil_2

session03/xfoil_2_Analysis.py

• Run postAnalysis to indicate completion and parse output files

session03/xfoil_2_Analysis.py

```
# Run AIM post-analysis
print ("\n==> Running postAnalysis")
xfoil.postAnalysis()
```

• Get results from the analysis with getAnalysisOutVal

```
# Retrieve Alpha, Cl and Cd
print ("\n==> Retrieve analysis results")
Alpha = xfoil.getAnalysisOutVal("Alpha")
     = xfoil.getAnalysisOutVal("CL")
     = xfoil.getAnalysisOutVal("CD")
print()
print("--> Alpha =", Alpha)
print("--> C1 =", C1)
print("--> Cd =". Cd)
```

• Helper function for running the analysis

session03/xfoil_3_Analysis.py

```
def run xfoil(xfoil):
   # Run AIM pre-analysis
   print ("\n==> Running preAnalysis")
   xfoil.preAnalysis()
   print ("\n\n==> Running xFoil.....")
   currentDirectory = os.getcwd() # Get current working directory
   os.chdir(xfoil.analysisDir) # Move into test directory
   # Run xfoil via system call
   os.system("xfoil < xfoilInput.txt > Info.out");
   os.chdir(currentDirectory)
                                # Move back to top directory
   # Run AIM post-analysis
   print ("\n==> Running postAnalysis")
   xfoil.postAnalysis()
```

• Compute polar for a range of angles of attack

session03/xfoil_3_Analysis.pv

```
print ("\n==> Setting analysis values")
# Set Mach and Reynolds number
xfoil.setAnalysisVal("Mach", 0.5)
xfoil.setAnalvsisVal("Re", 1.0E6)
# Set list of Alpha
xfoil.setAnalvsisVal("Alpha", [0.0, 3.0, 5.0, 7.0, 8.0])
# Run xfoil
run_xfoil(xfoil)
# Retrieve Alpha, Cl and Cd
print ("\n==> Retrieve analysis results")
Alpha = xfoil.getAnalvsisOutVal("Alpha")
Cl
     = xfoil.getAnalvsisOutVal("CL")
     = xfoil.getAnalysisOutVal("CD")
Cd
print()
print("--> Alpha =", Alpha)
print("--> C1 =", C1)
print("--> Cd =". Cd)
```

• Switch to compute polar for a range of lift coefficients

session03/xfoil_3_Analysis.py

```
# Unset Alpha, otherwise it will be included in the next analysis
xfoil.setAnalysisVal("Alpha", None )
# Set specific Cl values instead
xfoil.setAnalysisVal("CL", [0.0, 0.1, 0.15, 0.3, 0.4] )
# Run xfoil
run_xfoil(xfoil)
# Retrieve Alpha, Cl and Cd
print ("\n==> Retrieve analysis results")
Alpha = xfoil.getAnalvsisOutVal("Alpha")
     = xfoil.getAnalysisOutVal("CL")
Cl
     = xfoil.getAnalysisOutVal("CD")
print()
print("--> Alpha =", Alpha)
print("--> C1 =", C1)
print("--> Cd =". Cd)
```

caps

• Setup analysis values

session03/xfoil_4_Camber.py

Analysis with geometric changes: Camber

• Execute sequence of cambers

session03/xfoil_4_Camber.py

```
# List of cambers to analyze
Cambers = [0.00, 0.01, 0.04, 0.07]
Alpha = []; C1 = []; Cd = []
for camber in Cambers:
    # Modify the camber
    naca.setGeometrvVal("camber", camber)
    # Run xfoil
    run xfoil(xfoil)
    # Append Alpha, Cl and Cd
    print ("\n==> Retrieve analysis results")
    Alpha.append(xfoil.getAnalysisOutVal("Alpha"))
    Cl.append(xfoil.getAnalysisOutVal("CL"))
    Cd.append(xfoil.getAnalysisOutVal("CD"))
print()
print("--> Cambers =", Cambers)
print("--> Alpha =". Alpha)
print("--> C1 =", C1)
print("--> Cd =", Cd)
```

caps Overview

- Accessing/modifying analysis values
 - set/getAnalysisVal
- Analysis execution and outputs
 - pre/postAnalysis
 - getAnalysisOutVal
- DIRTY/CLEAN process
 - Tracking changes to inputs that impact outputs
- capsGroup attribute
 - Connecting geometry with analysis properties
- Suggested Exercises

- Calling setGeometryVal marks geometry as DIRTY
 - Geometry always built just-in-time
- Calling setAnalysisVal or setGeometryVal marks the AIM as DIRTY
- CAPS does not execute analysis, cannot execute just-in-time
- Errors reported accessing getAnalysisOutVal if AIM is DIRTY
- Errors reported running preAnalysis if AIM is CLEAN
 - Avoids inefficiencies with unnecessary calls to preAnalysis

Execution without errors

```
print("\n1. No Errors ", "-"*80)
# Set Mach and Reynolds number
xfoil.setAnalysisVal("Mach", 0.5)
xfoil.setAnalysisVal("Re", 1.0E6)
# Set list of Alpha
print("\n==> Setting alpha sequence")
xfoil.setAnalysisVal("Alpha", [0.0, 3.0, 5.0, 7.0, 8.0])
# Run xfoil
run xfoil(xfoil)
# Retrieve Cl
Cl = xfoil.getAnalvsisOutVal("CL")
print("\n--> Cl =", Cl)
```

• Trying call getAnalysisOutVal with DIRTY AIM due to setAnalysisVal

```
print("\n2. DIRTY AnalysisVal Error ", "-"*80)
# Set a new alphas
print("\n==> Setting new alpha sequence")
xfoil.setAnalysisVal("Alpha", [1.0, 2.0])
# Try to retrieve Cl without executing pre/postAnalysis
print("\n==> Attempting to get C1")
try:
    Cl = xfoil.getAnalvsisOutVal("CL")
    print("\n--> C1 =", C1)
except CAPSError as e:
    print("\n==> CAPSError =", e)
```

• Trying call getAnalysisOutVal with DIRTY AIM due to setGeometryVal

```
print("\n3. DIRTY GeometryVal Error ". "-"*80)
# Modify a geometric parameter
print("\n==> Modifying camber")
myProblem.geometry.setGeometryVal("camber", 0.07)
# Try to retrieve Cl without executing pre/postAnalysis
print("\n==> Attempting to get C1")
try:
    Cl = xfoil.getAnalvsisOutVal("CL")
    print("\n--> C1 =", C1)
except CAPSError as e:
    print("\n==> CAPSError =", e)
```

• Trying to call getAnalysisOutVal without calling postAnalysis

```
print("\n4. DIRTY pre- but no postAnalysis Error ", "-"*80)
# Modify mach number
print("\n==> Modifying Mach")
xfoil.setAnalvsisVal("Mach", 0.3)
# Run AIM pre-analysis
print ("\n==> Running preAnalysis but not running postAnalysis")
xfoil.preAnalysis()
# Retrieve Cl
print("\n==> Attempting to get Cl")
try:
    Cl = xfoil.getAnalysisOutVal("CL")
    print("\n--> C1 =", C1)
except CAPSError as e:
    print("\n==> CAPSError =", e)
```

• Calling preAnalysis with a CLEAN AIM

```
print("\n5. CLEAN Error ", "-"*80)
# Don't modify any analysis or geometry values
try:
    # Run xfoil
    run xfoil(xfoil)
except CAPSError as e:
    print("\n==> CAPSError =". e)
```

<u>Caps</u> Overview

- Accessing/modifying analysis values
 - set/getAnalysisVal
- Analysis execution and outputs
 - pre/postAnalysis
 - getAnalysisOutVal
- DIRTY/CLEAN process
 - Tracking changes to inputs that impact outputs
- capsGroup attribute
 - Connecting geometry with analysis properties
- Suggested Exercises

capsGroup attribute

- Tags groups of BODY/FACE/EDGE/NODE
 - Entities with same capsGroup value are in the group
- Specific use of capsGroup is AIM dependent

session03/masstran_6_f118_Wing.py

```
filename = "f118-C.csm"
print ("\n==> Loading geometry from file \""+filename+"\"...")
myProblem.loadCAPS(filename, verbosity=0)
# Load the masstran aim with the wing
masstran = myProblem.loadAIM(aim = "masstranAIM",
                             analysisDir = "workDir masstranWing".
                             capsIntent="wing")
```

The capsGroup attribute – Masstran Wing

- Wing FACEs tagged with "wing:faces"
- masstranAIM material and properties for "wing:faces"

session03/f118-C.csm

```
# Wing
SET wing:span sqrt(wing:aspect*wing:area)
SET wing:chord wing:area/wing:span

BOX wing:xroot -wing:span/2 wing:zroot wing:chord wing:span wing:chord*wing:thick
ATTRIBUTE capsGroup $wing:faces
```

session03/masstran_6_f118_Wing.py

• capsGroups on all FACEs

session03/f118-C.csm

```
BOX wing:xroot -wing:span/2 wing:zroot wing:chord wing:span wing:chord*wing:thick
   ATTRIBUTE capsGroup $wing:faces
```

```
BOX htail:xroot -htail:span/2 htail:zroot htail:chord htail:span htail:chord*htail:thick
   ATTRIBUTE capsGroup $htail:faces
```

```
BOX vtail:xroot 0 vtail:zroot vtail:chord vtail:chord*vtail:thick vtail:span
   ATTRIBUTE capsGroup $vtail:faces
```

```
BOX 0 -fuse:width/2 -fuse:height/2 fuse:length fuse:width fuse:height
SELECT face 1
   ATTRIBUTE capsGroup $fuse:nose
SELECT face 2
   ATTRIBUTE capsGroup $fuse:tail
SELECT face 3
   ATTRIBUTE capsGroup $fuse:side
SELECT face 4
   ATTRIBUTE capsGroup $fuse:side
SELECT face 5
   ATTRIBUTE capsGroup $fuse:side
SELECT face 6
   ATTRIBUTE capsGroup $fuse:side
```

• Properties assigned to capsGroups

session03/masstran_7_f118.py

```
# Define material properties
unobtainium = {"density" : 7850}
madeupium = {"density" : 6890}
# Set the materials
masstran.setAnalysisVal("Material", [("Unobtainium", unobtainium),
                                    ("Madeupium", madeupium)])
# Define shell properties
shell_1 = {"propertyType" : "Shell",
          "material"
                     : "unobtainium",
          "membraneThickness": 0.21
shell 2 = {"propertyType" : "Shell".
          "material"
                           : "madeupium",
          "membraneThickness": 0.3}
# Associate the shell property with capsGroups defined on the geometry
masstran.setAnalysisVal("Property", [("wing:faces", shell_1), ("htail:faces", shell_1),
                                    ("fuse:nose" , shell 1), ("fuse:tail"
                                                                          . shell 1).
                                    ("vtail:faces", shell_2), ("fuse:side"
                                                                          , shell_2)])
```

The capsGroup attribute – AVL Plane Vanilla

- AVL Vortex Lattice Method: Geometry defined by airfoils
- capsGroup groups airfoils into surfaces

session03/avlPlaneVanilla.csm

```
UDPRIM
         naca Thickness wing:thick Camber wing:camber
SCALE
          wing:croot
ROTATEX
TRANSLATE wing: xroot
                             wing:zroot
    ATTRIBUTE capsGroup
                                 $Wing
         naca Thickness wing:thick Camber wing:camber
UDPRIM
SCALE
ROTATEX
TRANSLATE htail:xroot
                              htail:zroot
    ATTRIBUTE capsGroup $Htail
UDPRIM
          naca Thickness vtail:thick
SCALE
          vtail:croot
TRANSLATE vtail:xroot
                         0 vtail:zroot
    ATTRIBUTE capsGroup $Vtail
```





• VLM meshing parameters defined via capsGroups

session03/avl_8_PlaneVanilla.py

```
# Load avl aim
print ("\n==> Loading avlAIM")
avl = mvProblem.loadAIM(aim = "avlAIM".
                       analysisDir = "workDir_avl")
print ("\n==> Setting analysis values")
avl.setAnalysisVal("Alpha", 1.0)
# Set meshing parameters for each surface
wing = {"numChord" : 4,
       "numSpanTotal" : 24}
htail = {"numChord" : 4.
        "numSpanTotal" : 16}
vtail = {"numChord" : 4.
        "numSpanTotal" : 10}
# Associate the surface parameters with capsGroups defined on the geometry
avl.setAnalysisVal("AVL_Surface", [("Wing", wing),
                                  ("Htail", htail),
                                  ("Vtail", vtail)])
```

Thickness

- Plot airfoil polars for a range of airfoil thicknesses
 - Start from a copy of session03/xfoil_4_Camber_Plot.py

New Shells and Material

- Change capsGroup value for the top and bottom faces of the fuselage for F-118C (either the same or two different values)
- Starting with session03/masstran_7_f118.py, create a new shell and/or material for the newly created capsGroup(s)

F-118C CG Location

- Using session03/masstran_7_f118.py, create an array of F-118C CG x-locations by modifying the wing:xroot location
- Create your own