Contents

lMre	corder		1
Installation			1
Sup	ported	l Devices	2
Ove	erview		2
Con 4.1 4.2	setti	ngs.json	3 4
Bas	ic Wor	ckflow	4
5.1	Pre-Re	ecording	4
			4
			5
			5
	5.1.4	, ,	5
5.2	Record		5
5.3			5
	5.3.1		5
	5.3.2	Extracting Frames from Video Files	5
Tro	ublesh	ooting	5
6.1	Knowi	n Limitations	5
6.2	Loggir	ng	5
	6.2.1	loggingconf.json	5
	Inst Sup Ove 4.1 4.2 Bas 5.1 5.2 5.3	Supported	Supported Devices Overview Configuration 4.1 settings.json 4.2 .pfs Files Basic Workflow 5.1 Pre-Recording 5.1.1 Checking Setup 5.1.2 Measurement Annotations 5.1.3 Applying Camera parameters 5.1.4 Real-Time Signal Modifications 5.2 Recording 5.3 Post-Recording 5.3.1 Locating Recorded Data 5.3.2 Extracting Frames from Video Files Troubleshooting 6.1 Known Limitations 6.2 Logging

FIMrecorder

 $FIMrecorder^1$ is a special-purpose video-recording application for FIM² experiments. This software is at the level of a prototype. It works reliably but has only been tested in a small scope (see Supported Devices). The features of this application have been designed to work well in conjunction with FIMTrack³ 4 .

1 Installation

See README.md 5 .

¹https://github.com/fncnt/fimrecorder

²https://www.uni-muenster.de/PRIA/en/FIM/index.html

³https://www.uni-muenster.de/PRIA/en/FIM/download.shtml

⁴https://github.com/i-git/FIMTrack

 $^{^5} https://github.com/fncnt/fimrecorder/blob/master/README.md\#prerequisites$

2 Supported Devices

Currently, only Basler USB3 vision cameras recording in Mono8 format are supported and only the model acA1920-40um actually has been tested.

3 Overview

Figure 1 provides an overview concering the UI of FIMrecorder.

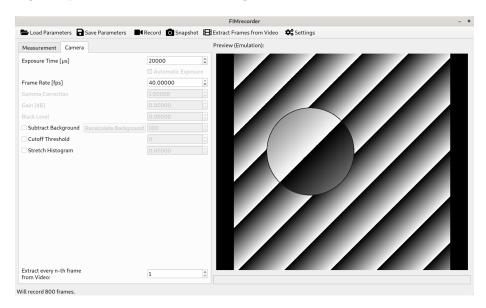


Figure 1: The main UI components of FIMrecorder

- (1) Loads parameters ((7) & (8)) from a previously saved .json file.
- (2) Saves parameters ((7) & (8)) to a new .json file.
- (3) Starts recording for the in (7) specified duration.
- (4) Saves a snapshot to Snapshot Directory
- (5) Extracts frames as single images from a specified video file (Required for FIMTrack).
- (6) Starts your favourite text editor to edit the settings file.
- (7) This tab houses information relevant to your experiment such as measurement duration, species or genotype.
- (8) Parameters in this tab modify the image signal your camera is acquiring.
- (9) model name of the camera you're using.
- (10) Live preview of the acquired image signal.
- (11) Zooms by scrolling with your mouse or trackpad.
- (12) When recording or extracting, the progress is displayed here.
- (13) Some relevant status messages appear in this area.

4 Configuration

To adjust settings not visible in the UI, click the button labelled *Settings* (6). This will launch your favourite text editor allowing you to edit the main configuration.

4.1 settings.json

settings.json is the primary configuration file and can be edited using any text editor. It contains data ("Parameters") relevant to your measurement (see Measurement Annotations for a detailed description). More importantly, it contains a "Settings" section controlling the behaviour of the application. The following options can be modified:

Background Frames to average: Number of Frames that should be used to construct an averaged static background image for background subtraction. This setting *is* available from the UI.

default: 100

Configuration Directory: Path of the directory where additional configurations files should be stored.

settings.json is not stored here.

default: "config"

Default Camera Parameters: This is the default .pfs file. See [#pfsfiles] for further information

default: "FIM_NodeMap.pfs"

Extract every n-th Frame: This value determines how many frames are skipped when extracting from video files.

Usually, a value half the framerate of the recorded footage is a good choice, therefore extracting a frame every 0.5 seconds.

This setting is available from the UI.

default: 1

Logging Configuration: The location of your logging configuration. There shouldn't be any need to modify this. See [#loggingconf] for more details. default: "loggingconf.json"

Recording Directory: Path of the directory where recorded video and auxiliary files should be stored.

default: "FIMrecordings"

Single Image Format: The format snapshots and extracted frames are saved in.

FIMTrack officially supports all three of these, however, ".png" may be problematic for FIMTrack in some cases.

```
supported: ".tif", ".tiff", ".png"
default: ".tif"
```

Snapshot Directory: The location where snapshots are being saved automatically.

default: "snapshots"

Video Codec: The codec in which recorded video files should be saved.

In principle, every four CC⁶ installed on your system and supported by ffmpeg and opency should work.

So far, only "XVID" has been tested and determined to be a safe choice. default: "XVID"

Video Container Format: The container format of your recorded video footage.

Only the default value has been tested. opencv has some limitations⁷.

default: ".avi"

Note: The default values for directories specify subdirectories of the application relative to itself. It is possible to specify absolute paths, though (e.g. "C:/Users/FIM User/Desktop/FIMrecordings"). Additionally, relative paths are not restricted to subdirectories; "../FIMrecordings" would correspond to a directory above the application.

FIMrecorder will fall back to hard-coded defaults and create a new configuration file if you happen to delete it.

4.2 .pfs Files

In addition to settings.json there are .pfs files in your Configuration Directory for every camera model you've used in *FIMrecorder*. Those text files are being generated when you use a device for the first time with *FIMrecorder* and include all the parameters of the specific model.

Those files can be used to modify the resolution, offset and binning parameters of your device. If in doubt, take a look at your Default Camera Parameters for a comparison. It is recommended to not change any other parameters in these files unless you've read the documentation for your camera model provided by Basler.

5 Basic Workflow

5.1 Pre-Recording

5.1.1 Checking Setup

- 1. Adjusting field of view.
- 2. Adjust aperture.
- 3. Adjust focus. Use the magnifying feature by scrolling on the preview for more control.

⁶https://fourcc.org/codecs.php

⁷https://docs.opencv.org/4.0.1/d7/d9e/tutorial_video_write.html

- 5.1.2 Measurement Annotations
- 5.1.3 Applying Camera parameters
- 5.1.4 Real-Time Signal Modifications
- 5.2 Recording
- 5.3 Post-Recording
- 5.3.1 Locating Recorded Data
- 5.3.2 Extracting Frames from Video Files

6 Troubleshooting

Feel free to open an issue on github⁸ if you have any trouble. Please make sure to include a recent debug log.

6.1 Known Limitations

Besides the limited set of supported devices, there are a few more limitations to this date:

- Only an aspect ratio of 1:1 is displayed correctly in the preview. This does not affect recording.
- Changing resolution requires editing .pfs files
- \bullet Only Mono8 image formats are supported
- Only the default codec and container format are supported

6.2 Logging

FIMrecorder generates debug.log files which may help track down possible culprits if you encounter any problems. Please make sure to copy your debug logs as soon as you encounter a problem. Otherwise the important information will be overwritten.

Older debug logs may still be helpful and are suffixed by ascending digits (e.g. debug.log.1).

6.2.1 loggingconf.json

To change the logging behaviour, loggingconf.json in your Configuration Directory can be edited. In most cases, you shouldn't be required to do so.

See $logging.config^9$ for further information.

⁸https://github.com/fncnt/fimrecorder/issues/new

⁹https://docs.python.org/3.6/howto/logging-cookbook.html#an-example-dictionary-based-configuration