PrintBasic:1 Service Template Version 1.01

- 3 For UPnP™ Version 1.0
- 4 Status: Approved Standard
- 5 **Date: August 8, 2002**

6

2

- 7 This Standardized DCP has been adopted as a Standardized DCP by the Steering Committee of
- 8 the UPnPTM Forum, pursuant to Section 2.1(c)(ii) of the UPnPTM Forum Membership
- 9 Agreement. UPnPTM Forum Members have rights and licenses defined by Section 3 of the
- 10 UPnPTM Forum Membership Agreement to use and reproduce the Standardized DCP in UPnPTM
- 11 Compliant Devices. All such use is subject to all of the provisions of the UPnPTM Forum
- 12 Membership Agreement.
- 13 THE UPNPTM FORUM TAKES NO POSITION AS TO WHETHER ANY INTELLECTUAL
- 14 PROPERTY RIGHTS EXIST IN THE STANDARDIZED DCPS. THE STANDARDIZED
- 15 DCPS ARE PROVIDED "AS IS" AND "WITH ALL FAULTS". THE UPNPTM FORUM
- 16 MAKES NO WARRANTIES, EXPRESS, IMPLIED, STATUTORY, OR OTHERWISE WITH
- 17 RESPECT TO THE STANDARDIZED DCPS, INCLUDING BUT NOT LIMITED TO ALL
- 18 IMPLIED WARRANTIES OF MERCHANTABILITY, NON-INFRINGEMENT AND
- 19 FITNESS FOR A PARTICULAR PURPOSE, OF REASONABLE CARE OR
- 20 WORKMANLIKE EFFORT, OR RESULTS OR OF LACK OF NEGLIGENCE.
- © 2002 Contributing Members of the UPnPTM Forum. All Rights Reserved.

Authors	Company
Shivaun Albright	Hewlett-Packard
Tom Hastings	Xerox
Harry Lewis	IBM
Paul Moore	Netreon
Peter Zehler	Xerox
Gerrie Shults	Hewlett-Packard

24 Contents

25	1. OVER	EVIEW AND SCOPE	5
26	2. SERV	ICE MODELING DEFINITIONS	5
		ERVICETYPE	
27			
28		ERMINOLOGY	
29	2.2.1.	Conformance Terminology	
30 31	2.2.2. 2.2.3.	Other terminology Notation: use of quotation marks	
32		Notation: use of quotation marks EFERENCES	
32 33		ITENT OF A PRINT JOB	
34	2.4. IN 2.4.1.	Production vs. Layout Job Attributes	
35	2.4.2.	Precedence of Production vs. Layout Job Attributes	
36		FATE VARIABLES	
37	2.5.1.	Derived data types	
38		ERVICE STATE TABLE	
39	2.6.1.	The Printer's supported and default values	
40	2.6.2.	The Distinguished Value used to avoid action override of PDL	
41	2.6.3.	Purposes of the SST State Variables	
42	2.6.4.	PrinterName	
43	2.6.5.	PrinterLocation	
44	2.6.6.	DeviceId	
45	2.6.7.	PrinterState	13
46	2.6.8.	PrinterStateReasons	14
47	2.6.9.	XHTMLImageSupported	15
48	2.6.10.	ColorSupported	16
49	2.6.11.	JobIdList	16
50	2.6.12.		
51	2.6.13.		
52	2.6.14.		
53	2.6.15.		
54	2.6.16.		
55	2.6.17.		
56	2.6.18.	-	
57	2.6.19.	- T	
58	2.6.20.	- · · · · · · · · · · · · · · · · · · ·	
59	2.6.21.		
60	2.6.22.	√ I	
61	2.6.23.	~ · · · •	
62	2.6.24.		
63	2.6.25.	1	
64	2.7. Ev	VENTING AND MODERATION	
65	2.7.1. 2.7.2.	Event ModelSynchronization of Evented Variables	
66 67		·	
67 68	2.8. At 2.8.1.	CTIONS	
69	2.8.2.	CancelJob	
70	2.8.3.	GetPrinterAttributes	
71	2.8.4.	GetJobAttributes	
72	2.8.5.	HTTP Post	
73	2.8.6.	Non-Standard Actions Implemented by a UPnP Vendor	
74	2.8.7.	Common Error Codes	

 $^{\ @\ 2002}$ Contributing Members of the UPnPTM Forum. All Rights Reserved.

75	2.9. THEORY OF OPERATION	
76	2.9.1. Jobs	
77 78	2.9.2. Actions	
79	2.9.3. Events	
80	2.9.5. Localization	
81	2.9.6. IPP Data Type mapping to UPnP Data Types	34
82	3. XML SERVICE DESCRIPTION	36
83	List of Tables	
84	List of Tables	
85	Table 1: Precedence of Production and Layout Job Attributes	
86	Table 2: State Variables	11
87	Table 2.1: allowedValueList for PrinterState	14
88	Table 2.2: allowedValueList for PrinterStateReasons	15
89	Table 2.3: allowedValueList for XHTMLImageSupported	16
90	Table 2.4: allowedValueList for ColorSupported	16
91	Table 2.5: allowedValueList for DocumentFormat	18
92	Table 2.6: allowedValueList for Sides	19
93	Table 2.7: allowedValueList for NumberUp	19
94	Table 2.8: allowedValueList for OrientationRequested	20
95	Table 2.9: allowedValueList for MediaSize	21
96	Table 2.10: allowedValueList for MediaType	22
97	Table 2.11: allowedValueList for PrintQuality	22
98	Table 3: Event Moderation	23
99	Table 4: Synchronization of Evented Variables	25
100	Table 5.: Transition Actions Used in Table 4	26
101	Table 6: Actions	27
102	Table 7: Arguments for CreateJob	28
103	Table 8: Arguments for CancelJob	29
104	Table 9: Arguments for GetPrinterAttributes	30
105	Table 10: Arguments for GetJobAttributes	30
106	Table 11: Common Error Codes	32
107	Table 12: Basic IPP data type mappings	34

 $[\]hbox{@ 2002}$ Contributing Members of the UPnP $^{\text{TM}}$ Forum. All Rights Reserved.

108	Table 13: Derived data type mappings	35
109	Table 14: Structured Data Type mapping	35
110	List of Figures	
111	Figure 1 - Printer Device and Services	33
112		

1. Overview and Scope

- This service definition is compliant with the UPnP Device Architecture version 1.0.
- 115 This service-type enables the following functions:
- 116 Printing

113

134 135

136

137

138

139

140

141

142

143144

- 117 This service template does not address:
- 118 *Faxing*

119 2. Service Modeling Definitions

120 2.1. ServiceType

- 121 A service that is compliant with this template is identified with the following service type: urn:schemas-upnp-
- org:service:*PrintBasic:1*.

123 **2.2. Terminology**

- This section defines terms that are used throughout this specification. These terms are always capitalized in order to
- indicate that they have the meaning defined in this section.

126 **2.2.1. Conformance Terminology**

- The following terms have special meaning relating to conformance and so are always indicated in all capital letters:
- a) MUST This word, or the term "REQUIRED", mean that the definition is an absolute requirement of the specification.
- b) MUST NOT This phrase means that the definition is an absolute prohibition of the specification.
- c) SHOULD This word, or the adjective "RECOMMENDED", mean that there may exist valid reasons in particular circumstances to ignore a particular item, but the full implications must be understood and carefully weighed before choosing a different course.
 - d) SHOULD NOT This phrase, or the phrase "NOT RECOMMENDED" mean that there may exist valid reasons in particular circumstances when the particular behavior is acceptable or even useful, but the full implications should be understood and the case carefully weighed before implementing any behavior described with this label.
 - e) MAY This word, or the adjective "OPTIONAL", mean that an item is truly optional. One vendor may choose to include the item because a particular marketplace requires it or because the vendor feels that it enhances the product while another vendor may omit the same item. An implementation which does not include a particular option MUST be prepared to interoperate with another implementation which does include the option, though perhaps with reduced functionality. An implementation which does include a particular option MUST be prepared to interoperate with another implementation which does not include the option

2.2.2. Other terminology

145

159

160

161

162163

174

- This document uses the terminology defined in the UPnP Architecture document, such as: action, SST variable, and
- 147 action parameter. This sub-section defines the following additional terms which are capitalized in order to indicate
- their specific meaning as defined in this section.
- a) Print Service (or Printer) the UPnP entity that accepts actions from UCP (clients), returns responses, and sends events.
- b) PDL Data Stream the stream of data to be printed as represented in a specified document format.
- 152 c) Production Job Attributes job attributes that are not inherent to the PDL Data Stream and so the UCP
 153 MAY override the PDL Data Stream instructions, if any, by supplying corresponding IN parameters when
 154 submitting the job (see section 2.4).
- d) Layout Job Attributes job attributes that are inherent to the PDL Data Stream and *cannot* be overridden by supplying corresponding IN parameters when submitting the job (see section 2.4).
- e) Comma Separated Value (CSV) a variable that contains multiple string values separated by the US-ASCII COMMA (',') character (see section 2.5.1.1).
 - f) Distinguished Value a special value defined by this specification for some action IN parameters. Use of Distinguished Value IN parameter allows a PDL Data Stream corresponding value to take effect when it would normally be overridden by the IN parameter. In the case where the Distinguished Value is absent in the PDL data stream and the IN parameter value is specified as 'device-setting', the Service uses its <defaultValue> value for the IN parameter. See section 2.6.2.
- g) Tracked Job a UPnP or non-UPnP job that is visible to a UPnP control point, i.e., has a JobId and appears in the JobIdList, and on which the control point can perform any of the Job operations defined in this document.
- h) Untracked Job a non-UPnP job that is not visible to a UPnP control point, i.e., does not have a JobId and does not appear in the JobIdList, and on which the control point cannot perform any of the Job operations defined in this document.

170 **2.2.3.** Notation: use of quotation marks

- 171 Throughout this document, single quotes (') are used around literal string and integer values in running text, but not
- in Tables. The single quotes are not part of the values. Double quotes (") are used around words in running text to
- indicate special English meanings. Variable names, parameters names, and action names are not quoted.

2.3. References

- 175 This section lists the references that this document refers to and the tag inside square brackets that is used for each
- such reference:
- 177 [DEVICE] UPnP Device Architecture, version 1.0.
- 178 [HTTP] RFC 2616 "Hypertext Transfer Protocol -- HTTP/1.1", R. Fielding, J. Gettys, J. Mogul, H. Frystyk, L.
- 179 Masinter, P. Leach, T. Berners-Lee. June 1999. (Format: TXT=422317, PS=5529857, PDF=550558 bytes)
- (Obsoletes RFC2068) (Updated by RFC2817) (Status: DRAFT STANDARD)
- 181 [MODEL] RFC 2566 "Internet Printing Protocol/1.0 Model and Semantics", March 1999 and RFC 2911 "Internet
- Printing Protocol/1.1 Model and Semantics", September 2000, standards. Available at: http://www.ietf.org

183 184	[PWG5101.1] IEEE-ISTO 5101.1-2001 Media Standardized Names <work in="" progress="">, ftp://ftp.pwg.org/pub/pwg/standards/pwg5101.1.pdf, .doc, .rtf for standardized names</work>
185 186	[UPnP-ENHANCED] - Albright, S., Hastings, T., Zehler, P., and G Shults, "PrintEnhancedLayout:0.10 Service Template For UPnP Version 1.0", work in progress, TBD, 2001.
187 188	[XHTML-PRINT] - "XHTML (tm) - Print", version 0.60, May 11, 2001, <work in="" progress="">, Available at: ftp://ftp.lexmark.com/pub/standards/xhtml-print.pdf</work>
189 190 191 192	[MULTIPLEXED] - R. Herriot, "The MIME Application/Multiplexed Content-type", June 26, 2001, available at: http://search.ietf.org/internet-drafts/draft-herriot-application-multiplexed-04.txt (Subsequent versions, if any, will be available from the same location with the "04" incremented, and eventually as an information RFC.)
193	2.4. Intent of a Print Job
194	The intent of a Print job is indicated by the job attributes as represented by either:
195	- the IN parameters of the CreateJob action and/or
196	- the print instructions in the PDL Data stream.
197 198	Many job attributes MAY be specified by either or both methods. This section defines the precedence between these two representations of the intent of a print job.
199	2.4.1. Production vs. Layout Job Attributes
200 201 202 203 204 205 206 207 208	This specification distinguishes two classes of such job attributes— <i>Production</i> and <i>Layout</i> . A Layout Job Attribute is one that is inherent to the print output and cannot be overridden by IN parameters when the job is created. A Production Job Attribute is one that can reasonably change at the different times when the job is printed without affecting important job characteristics. Obvious examples of Production Attributes are number of copies, number of sides and number of logical pages per physical sheet of paper, provided that when such Production Attributes are represented in the PDL Data Stream they are represented as print instructions. However, if number of copies or number of logical pages per physical sheet of paper is represented by repetitions of the PDL Data Stream, instead of a print instruction in the PDL Data Stream, such a representation is not considered a Production Job Attribute and so an IN parameter does not override such a representation.
209	Job attributes are partitioned between Production and Layout as follows:
210 211 212 213 214 215	Production Job Attributes (Job Attributes takes precedence): JobName JobOriginatingUserName Copies Sides NumberUp
216	PrintQuality

Layout Job Attributes (data stream takes precedence):

OrientationRequested

MediaSize

MediaType

217218

221

229

230

231232

233

234

235

236

238

2.4.2. Precedence of Production vs. Layout Job Attributes

- The UCP MUST supply an allowed value for each of the IN parameters defined for the CreateJob action (see
- section 2.8.1) or CreateEnhancedJob (see [UPnP-ENHANCED]). The PDL Data Stream MAY also have a value
- for any Production or Layout attribute represented as a print instruction. The UCP MAY supply the Distinguished
- Value defined by this document for each IN parameter to request the Printer to use its <defaultValue> value (see
- section 2.2.2, term f) and section 2.6.2) in case the corresponding print instruction in the PDL Data Stream is absent.
- The Printer SHOULD take the following action depending on the values supplied by the UCP in the CreateJob IN
- parameter and supplied in the PDL Data Stream for each given job attribute:

Table 1: Precedence of Production and Layout Job Attributes

Type of job attribute	IN parameter	PDL Data Stream	Printer SHOULD
Production attribute:	<distinguished value=""></distinguished>	absent	use <defaultvalue> in SCPD</defaultvalue>
	X	absent	use X
	<distinguished value=""></distinguished>	Y	use Y
	X	X	use X
	X	Y	use X (IN higher than PDL) **
Layout attribute:	<distinguished value=""></distinguished>	absent	use <defaultvalue> in SCPD</defaultvalue>
	X	absent	use X
	<distinguished value=""></distinguished>	Y	use Y
	X	X	use X
	X	Y	use Y (PDL higher than IN) **

^{**} Only when both are supplied, does the precedence depend on whether the attribute is a Production Attribute or a Layout Attribute. Production IN parameters take precedence, while Layout PDL print instructions take precedence.

NOTE: Even for Layout Attributes, the IN parameter value supplied in the CreateJob action will be used as long as no overriding value is found in the PDL Data Stream itself.

2.5. State Variables

2.5.1. Derived data types

This section defines some derived data types that are represented as UPnP string data types with special syntax.

2.5.1.1. Comma Separated Value (CSV) Lists

- The UPnP printer service uses variables that represent lists, or one-dimensional arrays, of values. Examples include
- 240 the supported sets of document formats and media stock. The UPnP Device Architecture, Version 1.0 [DEVICE],
- does not provide for either an array type or a list type, so a list type is defined here. Lists may either be
- homogeneous (all values are the same type) or heterogeneous (values of different types are allowed). The data type
- of a homogeneous list is string(CSVx), where x is the type of the individual values. The data type of a
- heterogeneous list is of the form *string (CSV x,y,z)*, where x, y and z are the types of individual element values. If
- 245 the number of elements in the heterogeneous list is too large to show each type individually, that variable type is
- represented as string (CSV heterogeneous), and the variable description includes additional information as to the
- expected sequence of values appearing in the list and their corresponding types.
 - © 2002 Contributing Members of the UPnPTM Forum. All Rights Reserved.

- 248 o A list is represented as a UPnP String type.
 - o Values within a list are separated by commas.
 - o Only three value types are used as CSV elements in this specification—string, integer and boolean.
 - o Integer values are represented in CSVs with the same syntax as the int data type specified in [DEVICE] (i.e., optional leading sign, optional leading zeroes)
 - o Boolean values are represented in CSVs as either '0' for false or '1' for true (which is a subset of the defined boolean data type values specified in [DEVICE]: '0', 'false', 'no', '1', 'true', 'yes'.
 - O String values are represented in CSVs with the same syntax as the string data types specified in [DEVICE] (i.e., any Unicode string), with two exceptions that are represented using a backslash escape character:
 - o The comma (',') is represented as '\,'.
 - o The backslash ('\') is represented as '\\'.
 - o Any white space before, after, or interior to a string value is part of that string value. White space before, after, or interior to any other data type is not allowed.

261 Examples:

249

250

251

252

253

254

255

256

257

258259

260

262

263

264

265

266

267

268

269270

271

272

Type refinement of string	Value	Comments
CSV string	text/xml,application/vnd.hp-	List of three document types
CSV int	PCL,application/postscript 1,-5,006,0,+7	List of 5 integers.
CSV boolean	0,1,1,0	List of 4 booleans
CSV string	Smith Fred,Jones Davey	List of 2 user names, "Smith, Fred" and "Jones, Davey"
CSV i4,string,u2	-29837, string with leading blanks,0	Note that the second value is "string with leading blanks"
CSV i4	3, 4	Illegal CSV. White space is not allowed as part of an integer value.
CSV string	,,	List of 3 empty string values
CSV heterogeneous	Alice,Marketing,5,Susan,R&D,21,David,Finance,7	List of unspecified number of people and associated attributes. Each person is described by 3 elements, a name <i>string</i> , a department <i>string</i> and years-of-service <i>u</i> 2.

2.5.1.2. State variables, actions and action parameters

All state variables, actions and action parameters are mixed case with the first letter of each word being capitalized. Most of these variables, actions and parameters are derived directly from IPP by removing the hyphens and upcasing the first letter of each word. Unless specified otherwise, all variable values and action parameter values are all lower case with hyphens, same as in IPP. See Internet Printing Protocol/1.0 Model and Semantics (RFC 2566) and Internet Printing Protocol/1.1 Model and Semantics (RFC 2911), hereafter referred to as [MODEL]. The action and attribute descriptions in these tables are only a brief summary. Implementations MUST conform to the complete semantics specified in these referenced documents for each attribute indicated with [MODEL] in order to achieve the kind of interoperability between client and Printer implementations of different vendors IPP has demonstrated. A full description of their meaning can be found in the indicated sections in [MODEL].

Service State Table 2.6.

273

277

292

- 274 A conforming UPnP Print Service implementation MUST support all of the Printer Service State Variables in the
- 275 Service State Table (SST). The first part of the Service State Table contains variables that represent Printer
- 276 attributes and the second part contains variables that represent Job attributes.

2.6.1. The Printer's supported and default values

- The table below defines "Allowed Values" for each SST variable. The values in a Service Description's 278
- 279 <allowedValueList> element are the actual values supported by the Print Service instance (Printer).
- 280 Each SST variable definition in this document specifies whether or not vendors in their Service Description MAY
- 281 subset and/or extend the <allowedValueList> element in their Service Description from those "Allowed Values"
- 282 values given in this document. The Printer's "current" <allowedValueList> and <defaultValue> values may or may
- not be the same as the factory supported and default values, respectively, for that parameter, i.e., someone may have 283
- 284 changed the settings from the factory-supplied values. Any <allowedValueList> and <defaultValue> element value
- 285 MAY be changed at any time after Service Discovery. Furthermore, the current <allowedValueList> and
- 286 <defaultValue> values for a job parameter could also possibly change between invocations of the action that uses it,
- 287 for example, if someone reconfigures the Printer's "current" device setting for that parameter. However, the UPnP
- 288 Device Architecture, version 1.0 [DEVICE], states that any change to the <allowedValueList> or <defaultValue>
- 289 element requires the printer to issue an "ssdp:byebye" and then re-advertise itself. Each of the values in the
- 290 <defaultValue> elements is implementation specific, but MUST be one of the values from the Service Description's
- 291 associated <allowedValueList> element, if present.

2.6.2. The Distinguished Value used to avoid action override of PDL

- 293 Some Print Service actions have IN parameters that will always override any corresponding value that might be
- 294 provided in the PDL data stream (see section 2.4.2). For those situations where the UCP prefers to let the PDL data
- stream value override the IN parameter, the PrintBasic Service has added the Distinguished Value 'device-setting' 295 296
- to the <allowedValueList> of the associated state variable. In the case where the Distinguished Value is absent in
- 297 the PDL data stream and the IN parameter value is specified as 'device-setting', the Service uses its <defaultValue>
- 298 value for the IN parameter. For example, see CreateJob action, section 2.8.1. When the UCP supplies the
- 299 Distinguished Value for such an IN parameter, the Print Service MUST process the action following the
- 300 corresponding print instruction in the PDL Data Stream, if present. If absent, the Print Service MUST process the
- 301 action as if the Service's then current <defaultValue> for that IN parameter value had been supplied by the UCP. In
- 302 other words, the Service's then current <defaultValue> value has lower precedence than the PDL Data Stream. All
- 303 implementations MUST support all Distinguished Value parameters defined herein. The two preceding
- 304 requirements also mean that the Distinguished Value for a variable MUST be included in the variable's allowed
- 305 value set, even if the vendor is subsetting the allowed value set. However, the Distinguished Value itself MUST
- 306 NOT be used for the actual value of the <defaultValue> element in the SCPD. Note: the Distinguished Values
- 307 defined herein for a variable/parameter are not otherwise valid values for the variable/parameter.
- 308 The value used as the Distinguished Value for a parameter, is specified in the definition of the parameter's
- 309 associated state variable. This guarantees uniqueness of the Distinguished Value across all actions that might use it.
- 310 Any vendor extensions to the set of Print Service actions that use IN parameters with an associated variable that has
- 311 a defined Distinguished Value SHOULD also support the use of Distinguished Values in their action invocations.
- Any vendor extension that does support such Distinguished Values in their actions MUST use the same 312
- 313 Distinguished Value that is defined in this document. While vendors may use the Distinguished Value concept in
- 314 their Print Service extensions, this specification provides no mechanism for indicating either that Distinguished
- 315 Values are supported or the actual Distinguished Value used for a specific variable/parameter.
- The Distinguished Value for all string variables defined herein is the string 'device-setting'. For any vendor 316
- 317 extensions, the Distinguished Value for all string variables MUST be 'device-setting'. The Distinguished Value for

all integer variables defined herein is the value '0'. For any vendor extensions, the Distinguished Value for integer variables SHOULD be '0' (or '-1' if '0' is otherwise a useful value).

2.6.3. Purposes of the SST State Variables

- The first part of the SST defines the Printer attributes. The second part of the SST defines the Job attributes. Many
- of the Job attributes in the SST are present solely for the purpose of meeting the UPnP Device Architecture
- 323 [DEVICE] requirement that all action parameters MUST have a related SST variable. The full specification for
- 324 such action parameters is given with the variable in the SST. Some of the Printer attributes can be queried with the
- GetPrinterAttributes action (see section 2.5.3) and some of the Job attributes can be queried for a specified job with
- 326 the GetJobAttributes action (see section 2.5.4)

320

Table 2: State Variables

Variable Name	Req. or Opt. ¹	Data Type	Allowed Value	Default Value	Eng. Units
		Print	er Attributes		
VariableName	R	<u>string</u>	TBD	DEFAULT	TBD
PrinterName	R	<u>string</u>		<implementation specific=""></implementation>	N/A
PrinterLocation	R	<u>string</u>		<implementation specific=""></implementation>	N/A
Deviceld	R	<u>string</u>		<implementation specific=""></implementation>	N/A
PrinterState	R	<u>string</u>	See section 2.6.7	idle	N/A
PrinterStateReasons	R	<u>string</u>	See section 2.6.8	none	N/A
XHTMLImageSupported	R	<u>string</u>	See section 2.6.9	image/jpeg	N/A
ColorSupported	R	<u>boolean</u>	See section 2.6.10	<implementation specific=""></implementation>	N/A
JobldList	R	string (CSV i4)	See section 2.6.11	<empty string=""></empty>	N/A
Jobld	R	<u>i4</u>	Range: 0 to 2 ³¹ -1	0	N/A
JobEndState	R	string (CSV i4,string, string,i4, string)	See section 2.6.13	<empty string=""></empty>	N/A

Variable Name	Req. or Opt. ¹	Data Type	Allowed Value	Default Value	Eng. Units
		Jo	b Attributes		
JobName	R	<u>string</u>		<empty string=""></empty>	N/A
JobOriginatingUserName	R	<u>string</u>		<empty string=""></empty>	N/A
DocumentFormat	R	<u>string</u>	See section 2.6.16	<pre><implementation specific=""> RECOMMENDED value: application/vnd.pwg-xhtml- print+xml See Note below.</implementation></pre>	N/A
Copies	R	<u>i4</u>	Range: 0 to 2 ³¹ -1	<pre><implementation specific=""> RECOMMENDED value: 1</implementation></pre>	N/A
Sides	R	string	See section 2.6.18	<pre><implementation specific=""> RECOMMENDED value: one-sided</implementation></pre>	N/A
NumberUp	R	<u>string</u>	See section 2.6.19	<pre><implementation specific=""> RECOMMENDED value: 1</implementation></pre>	N/A
OrientationRequested	R	<u>string</u>	See section 2.6.20	<pre><implementation specific=""> RECOMMENDED value: portrait</implementation></pre>	N/A
MediaSize	R	string	See section 2.6.21	<implementation specific=""></implementation>	N/A
MediaType	R	string	See section 2.6.22	<pre><implementation specific=""> RECOMMENDED value: Stationery (if supported)</implementation></pre>	N/A
PrintQuality	R	string	See section 2.6.23	<pre><implementation specific=""> RECOMMENDED value: normal</implementation></pre>	N/A
DataSink	R	<u>uri</u>		<empty string=""></empty>	N/A
JobMediaSheetsCompleted	R	<u>i4</u>	Range: -1 to 2 ³¹ -1	0	N/A
Non-standard state variables implemented by a UPnP vendor go here.	X	TBD	TBD	TBD	TBD

 $^{^{1}}$ R = REQUIRED, O = Optional, X = Non-standard.

- 329 NOTE: The value "application/vnd.pwg-xhtml-print+xml" MUST be shortened to 31 characters for
- interoperability reasons. This value MUST be: "application/vnd.pwg-xhtml-print". Any additional values that are
- used by a vendor MUST also be 31 characters or less for interoperability.

2.6.4. PrinterName

328

- 333 The administratively assigned user-friendly name of the Printer. How the Printer's Service Description
- 334 <defaultValue> element is configured with this value is implementation-specific, e.g., local console, Presentation
- 335 Service (web access). If the Device Service has only one device, then the Device's <friendlyName> and
- 336 PrinterName are recommended to have the same value. However, if the Device contains several devices, the
- 337 PrinterName identifies the Printer.
 - © 2002 Contributing Members of the UPnPTM Forum. All Rights Reserved.

338 (See [MODEL] section 4.4.4) 2.6.5. PrinterLocation 339 Indicates the location of the device. For example, "Bobby's room". How the Printer's Service Description 340 341 <defaultValue> element is configured with this value is implementation-specific, e.g., local console, Presentation 342 Service (web access). (See [MODEL] section 4.4.4) 343 2.6.6. Deviceld 344 345 The value of this variable MUST exactly match the IEEE 1284-2000 Device ID string, except the length field MUST 346 not be specified.. The value is assigned by the Printer vendor and MUST NOT be localized by the Print Service. 347 The IEEE 1284-2000 Device ID is a length field followed by a case-sensitive string of ASCII characters defining 348 peripheral characteristics and/or capabilities. For the purposes of this specification, the length bytes MUST NOT 349 be included. The Device ID sequence is composed of a series of keys and values of the form: 350 key: value {, value} repeated for each key 351 As indicated, each key will have one value, and MAY have more than one value. The minimum necessary keys (case-352 sensitive) are MANUFACTURER, COMMAND SET, and MODEL. (These keys MAY be abbreviated as MFG, 353 CMD, and MDL respectively.) Each implementation MUST supply these three keys and possibly additional ones as 354 well. Each key (and each value) is a string of characters. Any characters except colon (:), comma (,), and semi-355 colon (;) MAY be included as part of the key (or value) string. Any leading or trailing white space (SPACE[x'20'], TAB[x'09'], VTAB[x'0B'], CR[x'0D'], NL[x'0A'], or FF[x'0C']) in the string is ignored by the parsing program (but 356 357 is still counted as part of the overall length of the sequence). 358 An example ID String, showing optional comment and active command set keys and their associated values (the text 359 is actually all on one line): 360 361 MANUFACTURER: ACME Manufacturing; 362 COMMAND SET: PCL, PJL, PS, XHTML-Print+xml; 363 MODEL:LaserBeam 9; 364 COMMENT: Anything you like; 365 ACTIVE COMMAND SET: PCL; 366 (See IEEE 1284-2000 clause 7.6) 367 Note: One of the purposes of the DeviceId variable is to select a printer driver for those UCPs that need a printer 368 driver. The values of the COMMAND SET key are interpreted by the printer driver provided by the vendor and so 369 are vendor-defined, rather than being standardized. 2.6.7. PrinterState 370 371 Identifies the current state of the service. Values: idle - new jobs can start processing immediately without waiting. 372 373 processing - jobs (Tracked or Untracked) are processing; new jobs will wait before processing, i.e., are 374 said to be pending. 375 **stopped** - no jobs can be processed and intervention is needed. 376 (See [MODEL] section 4.4.11) 377 Vendors MUST NOT subset or extend allowed values.

Table 2.1: allowedValueList for PrinterState

Value	Req. or Opt.
idle	<u>R</u>
processing	<u>R</u>
stopped	<u>R</u>

379

380

378

2.6.8. PrinterStateReasons

- Indicates additional information about why the Printer is in its current state. Multiple conditions MAY exist. The vendor chooses the single value for PrinterStateReasons variable to indicate the most important condition.
- Note: some of these reasons describe state of the printer that cannot be entered on the basis of the currently defined
- 384 UPnP actions set. For example the printer can be 'paused'; there is no PausePrinter action. The reason these states
- are presented is because some other protocol (or console action) can have caused the printer to enter that state.
- 386 Reason values:
- 387 **none** Indicates that there are no current state reasons
- 388 attention-required The device has stopped for a reason other than the PrinterStateReasons listed here and
- requires human intervention before it can continue.
- 390 *media-jam* The device has a media jam.
- paused Someone has paused the printer and the PrinterState is 'stopped'. In this state, a Printer will not produce
 printed output.
- 393 *door-open* One or more covers on the device are open.
- 394 *media-low* At least one input tray is low on media.
- 395 *media-empty* At least one input tray is empty.
- 396 *output-area-almost-full* One or more output area is almost full (e.g. tray, stacker, collator).
- 397 *output-area-full* One or more output area is full, e.g., tray, stacker, collator.
- 398 *marker-supply-low-* The device is low on at least one marker supply, e.g., toner, ink, ribbon.
- 399 marker-supply-empty The device is out of at least one marker supply, e.g., toner, ink, ribbon.
- 400 marker-failure The device has at least one marking device which has failed and requires service or replacement.
- 401 **media-change-request** A job has been submitted that is requesting media that is currently not loaded. The job
- has specified a particular MediaSize and MediaType parameter value combination that is not loaded, although the
- 403 Printer supports that combination.
- 404 (See [MODEL] section 4.4.12. The IPP severity suffix MUST NOT be included and, unlike IPP, only one value
- 405 MUST occur at a time.)
- Vendors MUST support the values that represent conditions that are detectable in their implementation. Therefore,
- 407 *vendors MAY subset allowed values if specific PrinterStateReasons are undetectable in their implementation.*
- Vendors MAY extend allowed values. However, Printer vendors need to understand the implications of extending
- 409 this list on a UCP. The UCP usually localizes the PrinterStateReasons value (as with other string variable values)
- 410 to the human language of the user. However, such a Printer vendor extension value will not be recognized by the
- 411 UCP. As a Fallback presentation, the UCP MAY display the value received as is, which should be in English and
- 412 therefore, might not be understandable by the user. Alternatively, the vendor might use the general
- 413 PrinterStateReasons value: 'attention-required' and then explain the problem on the Printer console which the user
- 414 would see when they are by the Printer.

415 Table 2.2: allowedValueList for *PrinterStateReasons*

Value	Req. or Opt. ³
none	<u>R</u>
attention-required	<u>O</u>
media-jam	<u>O</u>
paused	<u>O</u>
door-open	<u>O</u>
media-low	<u>O</u>
media-empty	<u>O</u>
output-area-almost-full	<u>O</u>
output-area-full	<u>O</u>
marker-supply-low	<u>o</u>
marker-supply-empty	<u>o</u>
media-change-request	<u>o</u>
Vendor-defined	<u>O</u>

³ Vendors MUST support the values that represent conditions that are detectable in their implementation

2.6.9. XHTMLImageSupported

416

417

- Identifies the Image formats supported by the Printer. The image MUST be sent as part of an XHTML-Print
- 420 document[XHTML-PRINT], either interleaved within XHTML-Print using the MIME Application/Multiplexed
- 421 Content Type [MULTIPLEXED] or as a referenced object. The Printer MUST support both the inline and
- referenced object forms as defined in XHTML-Print [XHTML-PRINT]. A printer device vendor MAY choose to
- 423 support other XHTMLImageSupported formats, however, there is no requirement to support the MIME
- 424 Application/Multiplexed Content Type [MULTIPLEXED] for these other image formats.
- All UPnP printers MUST support at least the 'image/jpeg' image format.
- 426 *Vendors MAY extend the allowed values for this attribute.*
- Note: 'image/jpeg' is registered as a MIME Media Type with IANA.

Table 2.3: allowedValueList for XHTMLImageSupported

Value	Req. or Opt.
image/jpeg	<u>R</u>
Vendor-defined	<u>O</u>

430 **2.6.10. Color Supported**

428

429

440

441

455

- 431 Identifies whether or not the device is capable of multi-hued color printing. A printer that is capable of full color
- 432 output has a value of '1' (TRUE). A grayscale capable or business graphics capable printer has the value of '0'
- 433 (FALSE), as would a highlight printer.
- 434 (Note: though this variable is named the same as the corresponding IPP "color-supported" (boolean) Printer
- 435 attribute, the semantics differ: A UPnP Printer must be capable of full color output in order to have a '1' (TRUE)
- 436 value. See [MODEL] section 4.4.26)
- 437 All UPnP printers MUST support either the '0' or the '1' value.
- 438 *Vendors MUST NOT extend the allowed values for this attribute.*

439 Table 2.4: allowedValueList for ColorSupported

Value	Req. or Opt.
0	<u>O</u>
1	<u>O</u>

2.6.11. *JobldList*

- The list of JobId values for all tracked jobs known by the Print Service, i.e. all active and queued jobs, but NOT jobs
- that have completed, been aborted by the print service, or canceled. It is RECOMMENDED that jobs submitted to
- 444 the Printer by protocols other than UPnP be represented in JobIdList.
- The list is a sequence of Comma Separated i4 Values (CSV i4 see section 2.5.1.1). Each value is a JobId of a job
- on the printer. The values range from 1 to 2^{31} -1. The list is in the order that the jobs are expected to be completed.
- 447 The first job in the list is either currently printing, attempting to print (but the Printer is stopped), or is the next job
- 448 to print (if no jobs are currently printing or all jobs are in the 'pending-held' state). The last job in the list will be
- 449 printed last. The first JobId in the list is removed when the job completes or is aborted. The corresponding JobId
- in the list is removed when a job is canceled (see section 2.8.2).
- When all jobs are completed, cancelled or aborted, the JobIdList variable is an empty string.
- 452 The Print Service, on receipt of a new job, generates a JobId which identifies the new Job on that Print Service.
- 453 The JobId is placed in the appropriate place in the JobIdList. The Print Service returns the value of the JobId
- parameter as part of the response to a CreateJob action.

2.6.12. Jobld

- 456 The JobId of the current job, i.e., the job that has caused the PrinterState variable to be 'processing' or 'stopped'.
- 457 The JobId MUST be the first JobId in the JobIdList or 0. If there is no current job, i.e., the PrinterState is 'idle'
- 458 (there are no jobs, or all jobs are pending or held), then JobId contains a 0 which is an invalid JobId for a job). If
- JobId is 0, the printer is either idle OR a non-UPnP job is printing (and the Printer implementation has chosen
- 460 NOT to display non-UPnP jobs, i.e., the job is an Untracked Job).
- 461 (See [MODEL] section 4.3.2)
 - © 2002 Contributing Members of the UPnPTM Forum. All Rights Reserved.

462 **2.6.13.JobEndState**

- 463 This variable holds the "terminating" state of the job most recently removed from the JobIdList. It is evented; it is
- 464 triggered when any JobId is removed from the JobIdList. However, the JobEndState is not an OUT parameter of
- 465 any action, so it is not available to a client via polling.
- 466 JobEndState is a heterogeneous CSV list of five items: JobId, JobName, JobOriginatingUserName,
- JobMediaSheetsCompleted, job-completion-state (same order as the GetJobAttributes OUT parameters, plus the
- *job-completion-state*).
- 469 **JobId**: the JobId of the job being removed (see section 2.6.12)
- 470 **JobName**: The name of the job. See section 2.6.14.
- 471 **JobOriginatingUserName**: The name of the user that submitted the job. See section 2.6.15.
- 472 *JobMediaSheetsCompleted:* If JobId was the "active" job, i.e., the first job in JobIdList, this is the final value of JobMediaSheetsCompleted for the job. Otherwise, this value is '0'. See section 2.6.25.
- job-completion-state: One of 'aborted', 'canceled' or 'successful' as defined below:
- 475 **aborted**: The job did not complete successfully, for one of two reasons—either (1) the printer 476 encountered a non-recoverable error while processing the job or attempting to receive the data, 477 or (2) the job was created by the CreateEnhancedJob action (see [UPnP-ENHANCED]) and the
- 478 printer detected during processing that the job requirements could not be met.
- 479 successful: The job printed successfully all of the pages of the job and the sheets have been
- 480 stacked in the output bin.
- canceled: The job was canceled either by a CancelJob action or the equivalent in another
- 482 protocol

483 **2.6.14. JobName**

- 484 The user-friendly name of the job. It is RECOMMENDED that the client (UCP) supply a value to help a user easily
- 485 distinguish between the jobs that he/she has submitted.

486 **2.6.15. JobOriginatingUserName**

- 487 The name of the user that submitted the job. Either supplied by the client (UCP) or by the security infrastructure, if
- 488 any. It is RECOMMENDED that the client (UCP) supply a value to help a user easily distinguish between the jobs
- 489 that he/she has submitted and jobs that others have submitted.

490 **2.6.16. DocumentFormat**

- 491 Identifies the DocumentFormat of the job as a mime media type. One special value is 'application'octet-stream'. If
- 492 the Printer service supports this value, the Printer service MUST be capable of auto-sensing the format of the
- 493 document data.
- 494 Another special value is 'unknown'. This value is intended for the UCP to supply that does not know the document
- 495 format of the document data. The behavior of the Printer when receiving the 'unknown' value is
- 496 IMPLEMENTATION DEFINED. However, if the Printer can perform auto sensing of the data, (the
- 497 'application/octet-stream' behavior), it is RECOMMENDED that it do so.
- 498 If the UCP (client) does not know the document format, it SHOULD supply the 'application/octet-stream' value and
- 499 let the Printer determine the format, unless the Printer doesn't support the 'application/octet-stream' value, in
- 500 which case the UCP's only recourse is to supply the special 'unknown' value. All UPnP printers MUST support at
- least the 'application/vnd.pwg-xhtml-print' document format[XHTML-PRINT] and the 'unknown' value.
- 502 (See [MODEL] section 4.1.9)
- The vendors MAY extend the allowed values for this attribute, but MUST NOT support the 'device-setting'
- 504 Distinguished Value. The vendor MAY subset the allowed values as long as 'application/vnd.pwg-xhtml-print' and
- 505 'unknown' remain as supported values.
 - © 2002 Contributing Members of the UPnPTM Forum. All Rights Reserved.

Table 2.5: allowedValueList for DocumentFormat

Value	Req. or Opt.
unknown	<u>R</u>
application/vnd.pwg-xhtml-print+xml	<u>R</u>
See NOTE below.	
text/plain	<u>o</u>
text/plain;charset=utf-8	<u>o</u>
application/octet-stream	<u>o</u>
application/postscript	<u>o</u>
application/vnd.hp-PCL	<u>O</u>
Vendor-defined	<u>o</u>

NOTE: The value "application/vnd.pwg-xhtml-print+xml" MUST be shortened to 31 characters for

interoperability reasons. This value MUST be: "application/vnd.pwg-xhtml-print". Any additional values that are

used by a vendor MUST also be 31 characters or less for interoperability.

510 **2.6.17. Copies**

- Contains the number of copies of the document to be printed for the job. See [MODEL] section 4.2.5.
- 512 The '0' Distinguished Value indicates that the control point wants the Printer to use its <defaultValue> value for
- 513 Copies, which MUST be greater than 0, but to allow that value to be overridden if a corresponding value is
- 514 encountered in the PDL Data Stream.
- Vendors MAY subset the allowed values, but MUST support the '0' Distinguished Value.
- Vendors MUST NOT extend the allowed values.

517 **2.6.18.** Sides

518 Specifies how pages are to be imposed upon the sides of a selected medium for the job. Values:

519 one-sided 520 two-sided-long-edge 521 two-sided-short-edge 522 device-setting

523

- 524 (See [MODEL] section 4.2.8)
- 525 The 'device-setting' Distinguished Value indicates that the control point wants the Printer to use its <defaultValue>
- 526 value for Side, but to allow that value to be overridden if a corresponding value is encountered in the PDL Data
- 527 Stream
- 528 Vendors MAY subset allowed values, but MUST support the 'device-setting' Distinguished Value.
- 529 Vendors MUST NOT extend allowed values.

Table 2.6: allowedValueList for Sides

Value	Req. or Opt.
device-setting	<u>R</u>
one-sided	<u>R</u>
two-sided-long-edge	<u>0</u>
two-sided-short-edge	<u>0</u>

531

532

535

536

537

530

2.6.19. NumberUp

533 Description: Indicates the number of PDL Data Stream pages to impose upon a single side of an instance of a selected medium for the job. Examples: 534

1 - One page per side.

2 - Two pages per side.

4 - Four pages per side.

538 device-setting

539 The value is represented as ASCII decimal digits without leading zeros, so that the Allowed Values can be represented as individual integer (string) values in the range 1 to 2**31-1. 540

541 (See [MODEL] section 4.2.9)

542 The 'device-setting' Distinguished Value indicates that the control point wants the Printer to use its <defaultValue>

543 value for NumberUp, but to allow that value to be overridden if a corresponding value is encountered in the PDL

544 Data Stream.

545 Vendors MAY subset or extend allowed values, but MUST support the 'device-setting' Distinguished Value.

Table 2.7: allowedValueList for NumberUp 546

Value	Req. or Opt.
device-setting	<u>R</u>
1	<u>R</u>
2	<u>O</u>
4	<u>O</u>
Vendor-defined	<u>O</u>

547

548

549

550

551

2.6.20. **OrientationRequested**

Indicates the desired orientation for printed pages for any MIME type format of the job. Which MIME type formats a Printer is able to change the orientation depends on implementation and MAY depend on the actual document content. Values:

552 portrait 553 landscape reverse-landscape 554

555 reverse-portrait

device-setting 556

© 2002 Contributing Members of the UPnPTM Forum. All Rights Reserved.

- 557 (See [MODEL] section 4.2.10 which intends the "orientation-requested" attribute to apply to 'text' MIME types.)
- 558 The 'device-setting' Distinguished Value indicates that the control point wants the Printer to use its <defaultValue>
- 559 value for OrientationRequested, but to allow that value to be overridden if a corresponding value is encountered in
- 560 the PDL Data Stream.
- Vendors MAY subset allowed values, but MUST support the 'device-setting' Distinguished Value.
- Vendors MUST NOT extend allowed values.

Table 2.8: allowedValueList for OrientationRequested

Value	Req. or Opt.
device-setting	<u>R</u>
portrait	<u>R</u>
landscape	<u>O</u>
reverse-landscape	<u>O</u>
reverse-portrait	<u>O</u>

564

565566

567

568569

570

571

572

573

574

575

576

577

578

580

581

563

2.6.21. MediaSize

Identifies the medium size name and dimensions that the Printer Service uses for all sheets of the job. Each value MUST include the name of the size followed by the dimensions in inches or millimeters followed by the "in" or "mm" suffix to indicate the units. Both the Inch and Millimeter dimension MAY include a non-zero decimal fraction set off by a period (.). The name of the size consists of a class part and a name part separated by an underscore (_). The class part MUST be "na", "asme", or "oe" for inch units and "iso", "jis", "jpn", "prc", "roc", or "om" for metric units (see [PWG5101.1] for additional class names). The name part is set off by a second underscore (_) and the dimensions are separated by the lower case letter x. The shorter dimension MUST come first. See the Allowed Values for examples.

For sizes that do not have standard names, a UCP or a Print Service can create a customized name using the 'custom_xxx' class and name, where xxx indicates the custom name of the medium, followed by the dimensions in inches or millimeters as for standard names. For example, a custom 3.5 by 5.0 inch medium that, say, represents an index card, could be indicated by the string value:

custom_index-card_3.5x5in

579 The customized values configured for the Printer MUST be added to the Printer's <allowedValueList>.

If a Printer supports the control point supplying custom names that are not one of the values in the Printer's <allowedValueList> element, the Printer's <allowedValueList> element MUST include both the

582 'custom max IIIxJJJmm' and 'custom min IIIxJJJmm' (and/or 'custom max IIIxJJJin' and

'custom_min_IIIxJJJin') Allowed Values to indicate the minimum and maximum custom sizes that the Printer will allow the control point to supply.

(See [PWG5101.1] for suggested media size names and their dimensions. These names SHOULD NOT use the "custom" class name.)

The 'device-setting' Distinguished Value indicates that the control point wants the Printer to use its <defaultValue> value for MediaSize, but to allow that value to be overridden if a corresponding value is encountered in the PDL

589 Data Stream.

- 590 Vendors MAY subset and extend allowed values, but MUST support the 'device-setting' Distinguished Value.
- How the Printer's Service Description < defaultValue> and < allowedValueList> elements are configured with these
- 592 values is implementation-specific, e.g., local console, Presentation Service (web access).

Table 2.9: allowedValueList for MediaSize

593

594

595 596

605

606 607

Value ³	Req. or Opt.
device-setting	<u>R</u>
na_letter_8.5x11in	<u>0</u>
na_legal_8.5x14in	<u>0</u>
iso_a4_210x297mm	<u>0</u>
iso_c5_162x229mm	<u>0</u>
iso_dl_110x220mm	<u>0</u>
jis_b4_257x364mm	<u>0</u>
custom_xxx_IIIxJJJmm	<u>0</u>
custom_xxx_IIIxJJJin	<u>0</u>
custom_min_IIIxJJJmm	<u>0</u>
custom_max_IIIxJJJin	<u>0</u>
Vendor-defined (see [PWG5101.1]	<u>O</u>

³ These values represent examples and are not intended to be exhaustive (see [PWG5101.1].

2.6.22. *MediaType*

Identifies the medium type that the Printer Service uses for all impressions of the job. Example values:

597	stationery	Separately cut sheets of an opaque material
598	transparency	Separately cut sheets of a transparent material
599	envelope	Envelopes that can be used for conventional mailing purposes
600	labels	Label stock [For example, a sheet of peel-off labels].
601	photographic	Separately cut sheets of an opaque material to produce photographic quality images
602	cardstock	Separately cut sheets of an opaque material that is heavier and stiffer than stationery.
603	device-setting	Indicates that the control point wants the Printer to use its <defaultvalue> value for</defaultvalue>
604		MediaType.

The values are a subset of and the descriptions are a taken verbatim from the Media Type Names in [PWG5101.1].

The 'device-setting' Distinguished Value indicates that the control point wants the Printer to use its <defaultValue> value for MediaType, but to allow that value to be overridden if a corresponding value is encountered in the PDL

608 Data Stream.

Vendors MAY subset or extend allowed values, but MUST support the 'device-setting' Distinguished Value. See

610 [PWG5101.1] for additional example values.

How the Printer's Service Description < defaultValue> and < allowedValueList> elements are configured with these

values is implementation-specific, e.g., local console, Presentation Service (web access).

© 2002 Contributing Members of the UPnPTM Forum. All Rights Reserved.

613 Table 2.10: allowedValueList for MediaType

Value ³	Req. or Opt.
device-setting	<u>R</u>
stationery	<u>0</u>
stationery-inkjet	<u>O</u>
transparency	<u>O</u>
envelope	<u>O</u>
labels	<u>O</u>
photographic	<u>O</u>
cardstock	<u>O</u>
Vendor-defined (see [PWG5101.1]	<u>O</u>

These values represent examples and are not intended to be exhaustive (see [PWG5101.1].

2.6.23. **PrintQuality**

616 Specifies the print quality requested for the job. Values:

The 'device-setting' Distinguished Value indicates that the control point wants the Printer to use its <defaultValue> value for PrintQuality, but to allow that value to be overridden if a corresponding value is encountered in the PDL

624 Data Stream.

615

625 Vendors MAY subset allowed values, but MUST support the 'device-setting' Distinguished Value.

626 Vendors MUST NOT extend allowed values.

627 Table 2.11: allowedValueList for PrintQuality

Value	Req. or Opt.	
device-setting	<u>R</u>	
draft	<u>0</u>	
normal	<u>R</u>	
high	<u>O</u>	

2.6.24. **DataSink**

- 630 Contains the URL to which the UCP is to send the HTTP Post operation (see section 2.8.5) for the job. This value
- 631 is returned by the Printer in the CreateJob action response, rather than being supplied by the UCP in the CreateJob
- 632 action request.

629

633

646

648

649

650

2.6.25. JobMediaSheetsCompleted

- 634 The number of media sheets completed for the job so far. The JobMediaSheetsCompleted value includes
- completion of stacking the output. If a Printer implementation does not know the number of media sheets completed,
- 636 then it MUST return a -1 value to indicate "unknown". If JobId is 0, then JobMediaSheetsCompleted MUST be 0
- 637 (or -1, if the media sheets are unknown).
- 638 It is possible in some implementations that the final value of JobMediaSheetsCompleted is known, but that
- 639 intermediate values are not known. In this case the Printer SHOULD return 0 for a job that is not active, -1 for an
- 640 active job and the proper final value for completed jobs. The Printer MUST still return -1 for
- 641 JobMediaSheetsCompleted when it does not know the value, even in situations that it normally would know the
- value. A UCP MUST NOT conclude that receipt of a value of -1 for JobMediaSheetsCompleted means that the
- 643 Printer will always return -1. Even implementations that can never successfully count media sheets completed
- 644 might still know that a canceled or aborted job never marked any paper, so it could properly return a value of '0'
- 645 for JobMediaSheetsCompleted in the JobEndState variable.

2.7. Eventing and Moderation

647 Table 3: Event Moderation

Variable Name	Evented	Moderated Event	Max Event Rate ¹ (sec)	Logical Combination	Min Delta per Event ²
PrinterState	Yes	No	N/A		N/A
PrinterStateReasons	Yes	No	N/A		N/A
JobIdList	Yes	No	N/A		N/A
JobEndState	Yes	No	N/A		N/A
JobMediaSheetsCompleted :	Yes	Yes	5		N/A

¹ Events containing this variable value SHOULD occur no more often than once every MaxEventRate seconds.

2.7.1. Event Model

- The eventing model for the print service has three main purposes. First is to inform the UCP when there is a change
- in condition of the print device. Examples: the printer becomes idle, a paper jam occurs or the printer is low on
- paper. The PrinterState and PrinterStateReasons variables provide this information. Second is for job tracking.
- Events inform a UCP when a job is submitted, completed or removed from the job queue. The JobIdList and
- JobEndState provide this information. JobEndState indicates the final status of each job. It lets control points know
- 656 whether it completed successfully or was canceled or aborted. Third is to inform a UCP of the progress of the
- 657 current job. JobMediaSheetsCompleted is a moderated evented variable that updates an interested UCP on the
- number of impressions printed for the current job.

² See 4.4, Eventing: Augmenting the UPnP Template Language in [DEVICE].

2.7.2. Synchronization of Evented Variables

Table 4 below describes how internal printer state changes affect the values of the five evented state variables, plus 660 the non-evented variable, JobId. These state changes can be forced by any of: a UCP invoking one of the print 662 service actions documented herein, a non-UPnP external action or printer internal events and conditions. The effect 663 of some non-UPnP external actions is indirect, i.e., they affect internal printer state immediately, but, if they result 664 in any UPnP-visible effect, the affect appears later. All of these indirect effects have to do with management of untracked jobs. They are included in this table because their ultimate effect can be visible at some later time. A UCP should be aware of this to fully understand observed behavior. For print service implementers, the complete 666 table is a guideline to the information that must be kept and how it is synchronized to guarantee that the externally 668 visible state variables are always correct.

In Table 4, column 1 contains the current value of the variable PrinterState. Column 2 lists the events that can trigger an internal printer state change. Column 3 gives the new printer state and the complete set of actions taken by the printer on the transition that is triggered by the column 2 event. In several cases, the actions taken depend on other printer conditions in addition to the triggering event. Those situations are identified in the table by dividing the lower right portion of the corresponding event "cell" into multiple subcells, one for each condition or set of conditions that requires a different set of transition actions. The upper portion of the event cell is extended into column 3, signifying that no transition action(s) can be specified for this event except when the conditions in the event's subcells are also considered. The word *invisible* in column 3 means there is no state change that could be observed by a UPnP UCP. All of the actions listed in column 3 MUST be completed atomically relative to all external UPnP observations.

679 For purposes of this document, atomically means:

- 1. From the viewpoint of any UCP observer external to the Print Service, all of the values change at the same time. To achieve this, it is RECOMMENDED that all evented variables changed by this collected set of actions appear in a single event message.
- 2. It is not possible through any query action for a UCP to detect that any single state variable has changed unless it detects that all have changed and been properly updated to their new values.

To help understand the actions, let's follow one transition through the tables. Find the entry in column 2 "Terminate active job that was tracked. Its termination condition, T, is one of 'successful', 'canceled' or 'aborted'." Since it has subcell entries, there is no direct entry in column 3. Assume the normal situation of a busy printer with more jobs queued and that all of them are tracked. The relevant added condition is "Next job is tracked." That takes us to column 3 with actions of "J3, M0, E1(T)". Looking in Table 5 we see that J3 tells us to remove the first element of the JobIdList and set the new value of JobId to the new first element of JobIdList. M0 tells us to reset JobMediaSheetsCompleted to '0' if we track it, or leave it at '-1' if we don't. E1(T) tells us to set JobEndState with all the corresponding values for the job just completed, including the indicator whether it was 'successful', 'canceled' or 'aborted'. Also note that the M2 value inside JobEndState is set according to the actual final value of the sheets printed, if known.

659

661

665

667

669

670

671

672

673 674

675 676

677

678

680

681

682

683

684

685 686

687

688

689 690

691

692

695

Table 4: Synchronization of Evented Variables

State	te Transition events (and conditions) Transition a				
?	Initialize PrintBasic service I, R0, J0, M0, E0				
idle	CreateJob or CreateEnhancedJob or create non-UPnP tracked job	P, J1			
	Create untracked job — action invoked by non-UPnP entity	P			
	<pre><printer error=""></printer></pre>	S, R1			
	CreateJob or CreateEnhancedJob or create non-UPnP tracked job	P, J2			
	Create untracked job — action invoked by non-UPnP entity	invisible			
	Terminate active job that was tracked. Its termination condition, <i>T</i> , is one of 'successful', 'canceled' or 'aborted'.				
	No more jobs.	I, J0, M0, E1(T)			
	Next job is tracked.	J3, M0, E1(<i>T</i>)			
	Next job is untracked, and there are no more tracked jobs.	J0, M0, E1(T)			
	Next job is untracked, but there are still tracked jobs in the queue.	J4, M0, E1(T)			
	Terminate tracked job that was not active. Its termination condition, <i>T</i> , is one of 'canceled' or 'aborted'.	J5, E2(<i>T</i>)			
	Terminate active job that was untracked.				
مح	No more jobs.	I, M0			
processing	Next job is tracked.	J6, M0			
roce	Next job is untracked.	invisible			
d	Terminate inactive job that was untracked.	invisible			
	Drop a sheet into the output tray that is not the last sheet of the job.				
	Job is tracked.	M1			
	Job is untracked.	invisible			
	<pri><printer error=""></printer></pri>				
	No part of any job was lost.	S, R1			
	The active job was lost. It was tracked; the next job is tracked.	S, R1, J3, M0, E1(aborted)			
	The active job was lost. It was tracked; the next job is untracked.	S, R1, J4, M0, E1(aborted)			
	The active job was lost. It was untracked; the next job is tracked.	S, R1, J6, M0			
	The active job was lost. It was untracked; the next job is untracked.	S, R1			
	All problems corrected.				
	No jobs are queued.	I, R0			
	Jobs are queued.	P, R0			
stopped	The reported problem is fixed, but another problem still exists.	R2			
stop	CreateJob or CreateEnhancedJob or create non-UPnP tracked job				
	JobIdList is empty.	J1, M0			
	JobIdList is not empty.	J2			
	Create untracked job.	invisible			

Table 5.: Transition Actions Used in Table 4

∣ Ţ ˌ	Variable(s) affected				
	Label	New variable value(s)	Action Descriptions		
ter te	I	idle	Printer enters idle state.		
Printer State	P	processing	Printer enters processing state.		
	S	stopped	Printer enters stopped state.		
ဋ	R0	none	Printer is operating normally, there are no problems to report.		
PrinterState Reasons	R1	<reason></reason>	Old value was 'none'. New value is the reason the printer is in the current PrinterState (§ 2.6.7)		
Priir Re	R2	<new reason=""></new>	Old value was something other than 'none'. New value is still not 'none', but is different from old value.		
	J0	$JobIdList \leftarrow \{\}$	New list value is empty.		
		JobId $\leftarrow 0$			
	J1	$JobIdList \leftarrow \{id_1\}$	New list contains single job		
		$JobId \leftarrow id_1$			
obId	J2	$eq:continuous_continuous$	Old list may or may not have been empty. New list has same contents as old list <i>plus</i> one new job added. This job will normally be added at the end, but implementations are not required to do so.		
JobIdList, JobId	Ј3		Old list had at least two jobs. New list has same content <i>except</i> first job was removed. JobId is set to the new first element in JobIdList.		
of	J4	JobIdList $\leftarrow \{ id_2, \}$ JobId $\leftarrow 0$	Old list had at least two jobs. New list has same content <i>except</i> first job was removed. JobId is set to '0' since the new first element in JobIdList is not the active job.		
	J5		Old list had at least two jobs. New list has same contents as old $except$ the i^{th} job, where $i > 1$, has been removed.		
	J6	$<$ no change to JobIdList $>$ JobId \leftarrow id ₁	JobIdList is unchanged. JobId is set to the first element in JobIdList.		
ts	M0	'-1' or '0'	The value is '-1' if the printer never tracks this sheet count or if the current value is unknown. Otherwise, it is set to '0'.		
ediaSheets mpleted	M1	'-1' or newValue=oldValue+1	If the printer tracks sheet count for the active job, the value is incremented. Otherwise, the value is '-1', signifying unknown.		
JobMec Com	M2	'-1' or known final value for job	'-1' if the printer does not know final sheet count. Actual sheet count if it is known. Specifically, it could be '0' if the printer knows it never produced a sheet of paper for this job, even if the printer does not normally count sheets.		
	E0	{}	JobEndState is initialized to the empty list.		
JobEndState	E1(<i>T</i>)		The active job (first element in JobIdList) was terminated. <i>T</i> indicates the termination condition: one of 'successful', 'canceled' or 'aborted'.		
JobE	E2(<i>T</i>)	{ id _i , JobName_of_id _i , JobOriginatingUserName_of_id _i , M2, T}	The job in i^{th} position ($i > 1$)of JobIdList was terminated. T indicates the termination condition: either 'canceled' or 'aborted'.		

2.8. Actions

Immediately following this table is detailed information about these actions, including short descriptions of the actions, the effects of the actions on state variables, and error codes defined by the actions.

701 Table 6: Actions

Name	Req. or Opt. 1
CreateJob	R
CancelJob	R
GetPrinterAttributes	R
GetJobAttributes	R
Non-standard actions implemented by a UPnP vendor go here.	X

 1 R = REQUIRED, O = Optional, X = Non-standard.

Note: the error codes are derived from IPP status codes as follows (see [MODEL] for the detailed definition of each error code):

(Client Error minus 400_{16}) convert to decimal + 10 + 700(Server Error minus 400_{16}) convert to decimal + 60 + 700

Error codes are returned in the <SOAP:Fault> element. A vendor MAY subset or extend these error codes, first by supporting additional IPP error codes defined [MODEL] in the UPnP 700 range, and then by supporting private error codes in the UPnP 800 range, if no suitable IPP error code exists.

2.8.1. CreateJob

This action is the first step in submitting a job to the printer. The Printer returns a unique JobId to identify the job for this service. The Printer generates the JobId in an implementation-defined manner. The Printer MUST return values in the range 1 to 2³¹-1; 0 and negative values are invalid values to be returned as a result of a CreateJob action. Furthermore, the Printer SHOULD NOT re-use values recently assigned, since UCPs would confuse such jobs with older jobs.

The <allowedValueList> element of the Service Description indicates the values of the parameters that the Print Service instance (Printer) supports (see section 2.3). The Printer performs the following validation in the indicated order:

- 1. If the DocumentFormat is not supported, the Printer MUST reject the request and return the ClientErrorDocumentFormatNotSupported (720) error code.
- 2. If the client (UCP) supplies input parameters that are unsupported or their values are unsupported (except DocumentFormat), the Printer (1) MUST accept the CreateJob request, (2) MUST ignore or substitute supported values, respectively, and (3) MUST print the job. This behavior corresponds to the 'false' or omitted value of the IPP "ipp-attribute-fidelity" operation attribute. However, unlike IPP, the Printer does not return any indication that attributes are being ignored or that values are being substituted.
- 3. If a client (UCP) supplies a conflicting combination of MediaSize and MediaType (or any other set of IN parameters), the Printer MUST accept the CreateJob request, (2) MUST ignore or substitute the conflicting values, and (3) MUST print the job. Whether or not a Printer can detect combinations of different parameter values that are not supported, such as combinations of MediaType and MediaSize values that are not supported, is IMPLEMENTATION-DEPENDENT. If an implementation does detect combinations that are not supported, it substitutes values for one or more parameters to give a combination that is supported.

- 734 The client (UCP) MUST send print data to the print service via a separate HTTP Post operation to the DataSink 735 URL (see section 2.8.5) returned by the Printer in the CreateJob action response.
- 736 **2.8.1.1.** Arguments

737 Table 7: Arguments for *CreateJob*

Argument	Direction	relatedStateVariable
JobName	IN	JobName
JobOriginatingUserName	IN	JobOriginatingUserName
DocumentFormat	IN	DocumentFormat
Copies	IN	Copies
Sides	IN	Sides
NumberUp	IN	NumberUp
OrientationRequested	IN	OrientationRequested
MediaSize	IN	MediaSize
MediaType	IN	MediaType
PrintQuality	IN	PrintQuality
JobId	OUT	JobId
DataSink	OUT	DataSink

Section 2.5 describes the CreateJob action IN/OUT argument's related state variables. The State Variable Table provides a description and data type as well as the allowed and default values.

740 **2.8.1.2.** *Errors*

errorCode	errorDescription	Description
Codes 401, 402, 403, 501, 600-99 from the table Common Action Error Codes (below)	See the table Common Action Error Codes (below)	See the table Common Action Error Codes (below)
720	ClientErrorFormatNotSuppo rted	The supplied DocumentFormat parameter value is not supported by the Printer object.
		The Printer object MUST return this status code, even if there are other parameters that are not supported as well, since this error is a bigger problem than with other input parameters.
760	ServerErrorInternalError	The Printer encountered an unexpected condition that prevented it from fulfilling the request. This error differs from "server-error-temporary-error" in that it implies a more permanent type of internal error.
765	ServerErrorTemporaryError	A temporary error that occurs while the printer processes the action. The client MAY try the unmodified request again at some later point in time with an expectation that the temporary internal error condition MAY have been cleared. If there is a more specific 6xx errors defined that applies to a temporary error, such as disk full, that code SHOULD be used.

© 2002 Contributing Members of the UPnPTM Forum. All Rights Reserved.

741 **2.8.2. CancelJob**

- 742 This operation allows a client to cancel a print job from the time the job is created up to the time it is completed,
- 743 canceled or aborted.

744 **2.8.2.1.** Arguments

745 Table 8: Arguments for CancelJob

Argument	Direction	relatedStateVariable
JobId	<i>IN</i>	JobId

747 **2.8.2.2. Errors**

746

errorCode	errorDescription	Description
Codes 401, 402, 403, 501, 600-99 from the table Common Action Error Codes (below)	See the table Common Action Error Codes (below)	See the table Common Action Error Codes (below)
716	ClientErrorNotFound	The printer has not found a job matching the JobId parameter (including when the parameter was not in the range: 1 to 2 ³¹ -1).
760	ServerErrorInternalError	The Printer encountered an unexpected condition that prevented it from fulfilling the request. This error differs from "server-error-temporary-error" in that it implies a more permanent type of internal error.
765	ServerErrorTemporaryError	A temporary error that occurs while the printer processes the action. The client MAY try the unmodified request again at some later point in time with an expectation that the temporary internal error condition MAY have been cleared. If there is a more specific 6xx errors defined that applies to a temporary error, such as disk full, that code SHOULD be used.

748 **2.8.2.3.** *Effect on State*

- The specified job with a JobId from 1 to 2^{31} -1 is removed from the **JobIdList**. If the job was the current job (i.e.,
- JobId specified the current job), then JobId is set according to the transition actions described in Section 2.7.2.

751 2.8.3. GetPrinterAttributes

- 752 The GetPrinterAttributes action allows a client (UCP) to determine the state of the printer and values of certain state
- variables that represent Printer attributes. In particular, the UCP can determine the number of pending jobs. The
- 754 UCP can also determine the state of the Print Service, and which job, if any, is the current job.
- 755 Note: The GetPrinterAttributes action does not allow a client to discover the supported values of standard attributes.
- 756 The client can discover what is supported from the <allowedValueList> element in the Service Description (see
- 757 section 2.5). Neither does the GetPrinterAttributes action allow a client to discover vendor added attributes.
- 758 Vendors MUST define their own private actions to return such additional attributes.
 - © 2002 Contributing Members of the UPnPTM Forum. All Rights Reserved.

2.8.3.1. Arguments

Table 9: Arguments for GetPrinterAttributes

Argument	Direction	relatedStateVariable
PrinterState	OUT	PrinterState
PrinterStateReasons	OUT	PrinterStateReasons
JobIdList	OUT	JobIdList
JobId	OUT	JobId

2.8.3.2. *Errors*

errorCode	errorDescription	Description
Codes 401, 402, 403, 501, 600-99 from the table Common Action Error Codes (below)	See the table Common Action Error Codes (below)	See the table Common Action Error Codes (below)
760	ServerErrorInternalError	The Printer encountered an unexpected condition that prevented it from fulfilling the request. This error differs from "server-error-temporary-error" in that it implies a more permanent type of internal error.
765	ServerErrorTemporaryError	A temporary error that occurs while the printer processes the action. The client MAY try the unmodified request again at some later point in time with an expectation that the temporary internal error condition MAY have been cleared. If there is a more specific 6xx errors defined that applies to a temporary error, such as disk full, that code SHOULD be used.

2.8.4. GetJobAttributes

The GetJobAttributes action allows a client (UCP) to determine some of the values of job-related variables of the specified job with a JobId from 1 to 2^{31} -1. Only active and queued jobs can be queried since only these jobs are maintained in the JobIdList variable. These variables allow end users to identify their job (i.e., "JobName", "JobOriginatingUserName"). Other information can be derived from the GetJobAttributes action.

If the specified job is found, its parameters are returned whether the job is active or queued. If the specified job is not found, the ClientErrorNotFound (716) is returned. Any job not found either never existed or has reached its terminating state (i.e., completed, cancelled, aborted) and is no longer known to the Print Service. If the value of JobMediaSheetsCompleted is greater than 0, the referenced job is active and the printer has physically completed printing and stacking the number of media sheets indicated. If the value of JobMediaSheetsCompleted is 0 or -1, the client can determine whether the referenced job is active according to whether it is the first entry in JobIdList. The value of JobIdList can be retrieved either from its most recent evented value or from the action

775 GetPrinterAttributes.

2.8.4.1. Arguments

777 Table 10: Arguments for GetJobAttributes

© 2002 Contributing Members of the UPnPTM Forum. All Rights Reserved.

Argument	Direction	relatedStateVariable
JobId	<i>IN</i>	JobId
JobName	OUT	JobName
JobOriginatingUserName	OUT	JobOriginatingUserName
JobMediaSheetsCompleted	OUT	JobMediaSheetsCompleted

2.8.4.2. Errors

errorCode	errorDescription	Description
Codes 401, 402, 403, 501, 600-99 from the table Common Action Error Codes (below)	See the table Common Action Error Codes (below)	See the table Common Action Error Codes (below)
716	ClientErrorNotFound	The printer has not found a job matching the JobId parameter (including when the parameter was not in the range: 1 to 2 ³¹ -1).
760	ServerErrorInternalError	The Printer encountered an unexpected condition that prevented it from fulfilling the request. This error differs from "server-error-temporary-error" in that it implies a more permanent type of internal error.
765	ServerErrorTemporaryError	A temporary error that occurs while the printer processes the action. The client MAY try the unmodified request again at some later point in time with an expectation that the temporary internal error condition MAY have been cleared. If there is a more specific 6xx errors defined that applies to a temporary error, such as disk full, that code SHOULD be used.

2.8.5. HTTP Post

The client (UCP) sends the print data using an HTTP [HTTP] Post operation (with chunking if desired), to the URL returned as the DataSink output parameter of the CreateJob action. Having received this DataSink URL in the CreateJob response, the client MUST then open a connection to the device using the URL and send the data.

The client MUST open the data connection on the DataSink URL within 30 seconds after receiving the CreateJob response. Otherwise, the printer MUST time out, discard jobs for which no data has been received, and remove its JobId from the JobIdList variable. If no data at all is received for a job then the Printer SHOULD delete the job after a wait of at least 30 seconds and remove its JobId from the JobIdList variable. If data has been received for a job but a subsequent chunked HTTP POST operation does not arrive for an implementation-defined period of time (at least 30 seconds) then the data received so far is printed and the job completes as usual. If the Printer receives an HTTP Post for the DataSink URL after the timeout period, the Printer returns the HTTP 408 (Request Timeout) status code, if the job still exists, otherwise, the HTTP 404 (Not Found) status code.

If the Printer accepts the CreateJob action, but subsequently cannot accept the HTTP Post (because it is too busy or is accepting another job), the Printer MUST reject the HTTP Post and return the HTTP 503 (Service Unavailable). The Printer SHOULD reset the timer to 30 seconds or some other implementation-specific value and SHOULD return that value in the Retry-After HTTP header in the error response. The printer SHOULD ensure that the Retry-After value is less than the maximum amount of time that the device will timeout. If the Printer does not return

- Retry-After header, the HTTP spec [HTTP] says that the UCP assumes an HTTP 500 error (internal server error)
- and no retry is allowed and the printer aborts the job.
- An event will be sent to the client whenever the JobId is removed from the JobIdList.
- The URL MUST be a valid HTTP URL [HTTP]. The Printer MUST support HTTP/1.1 chunking [HTTP] for the
- 801 Post operation. The client MUST send the DocumentFormat MIME Media Type value in the HTTP Content-Type
- header (or the 'unknown' special value, if the client doesn't know the actual document format see section 2.6.16).

2.8.6. Non-Standard Actions Implemented by a UPnP Vendor

- To facilitate certification, non-standard actions implemented by UPnP vendors SHOULD be included in this service
- template. The UPnP Device Architecture lists naming requirements for non-standard actions (see the section on
- 806 Description).

803

807

811

2.8.7. Common Error Codes

- The following table lists error codes common to actions for this service type. If an action results in multiple errors,
- the most specific error SHOULD be returned.

810 Table 11: Common Error Codes

errorCode	errorDescription	Description
401	Invalid Action	See UPnP Device Architecture section on Control.
402	Invalid Args	See UPnP Device Architecture section on Control.
404	Invalid Var	See UPnP Device Architecture section on Control.
501	Action Failed	See UPnP Device Architecture section on Control.
600-699	TBD	Common action errors. Defined by UPnP Forum Technical Committee.
701-799		Common action errors defined by the UPnP Forum working committees.
800-899	TBD	(Specified by UPnP vendor.)

2.9. Theory of Operation

- The UPnP Printer device ('printer') has one REQUIRED service called PrintBasic Service. Optional services MAY
- include the PrintEnhancedLayout Service or basic power functions as illustrated below.
- The model presented is very simple, it is intended to allow a user to send a job to a printer, be informed when it has
- started printing and when it has finished printing. In addition, a user can cancel a previously submitted job. Also a
- client (UCP) can determine which CreateJob action parameter values a Print Service implementation supports using
- the values returned in the <allowedValueList> element of the Service Description.
- No optional SST variables or actions are specified. The standard UPnP print service MUST support all the variables
- and actions defined.

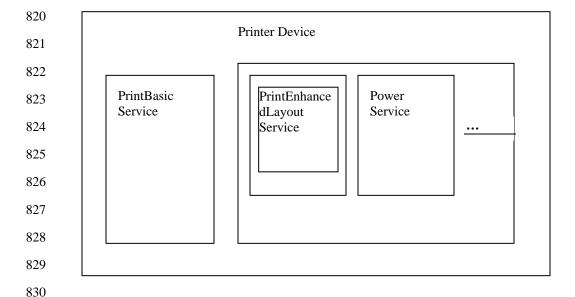


Figure 1 - Printer Device and Services

2.9.1. Jobs

831

832 833

834

835 836

838

839

840

841

842

843

844

845

846 847

848

849

850

851

The print service's main task is to accept print jobs from clients, queue them up (if the printer is capable of handling more than one job at a time) and then print them. A job is identified by an integer, the JobId, which is allocated by the device. The [MODEL] describes the rules for JobId production (1 to 2**31-1). The JobId is returned by the CreateJob action.

- The set of jobs that a printer has in its queue is exposed in a very simple way.
 - o The complete list of known jobs is made available as a state variable represented as CSV list (see section 2.5.1.1) called **JobIdList**.
 - o All waiting jobs appear in the **JobIdList** variable even those that the device has decided not to print for some reason (they are in the IPP 'pending' or 'pending-held' job state).
 - o The order of jobs in the **JobIdList** variable indicates the order in which the jobs will be initiated.
 - o The job that is actually printing at the moment (or for which the Print Service is stopped) is called the current job. If the current job is "Tracked" (see 2.2.2g), its job identifier is stored in the **JobId** Print Service state variableand that same JobId value is also the first **JobId** in the **JobIdList**. If there is no current job, i.e., there are no jobs, or all jobs are pending or held, or an Untracked Job (2.2.2h) is printing, the **JobId** is 0.
 - Once a job has been printed (or cancelled or aborted) it no longer appears in the **JobIdList**, whether or not the Printer has any other jobs to print.
 - o When the Print Service has no tracked jobs to print, the **JobIdList** state variable is an empty string.

2.9.2. Actions

- The following four actions are defined and MUST be supported by conforming PrintBasic Service implementations:
- o CreateJob. This action is used to submit a job to the printer. The allocated JobId is returned.
 - © 2002 Contributing Members of the UPnPTM Forum. All Rights Reserved.

- o CancelJob. This can be used to cancel a job using the JobId.
- o GetPrinterAttributes. This action can be used to query some of the printer attributes.
- o GetJobAttributes. This action can be used to query some of the job attributes of a specified job.

2.9.3. Events

857

880

- One of the primary goals of this specification is to allow a user to know when their print job has started and when it
- has finished. The UPnP eventing mechanism can be used for this purpose. There are five evented state variables,
- 860 JobIdList, JobEndState, PrinterState, PrinterStateReasons, and JobMediaSheetsCompleted that MAY change
- whenever a job stops or starts. A client implementation SHOULD therefore subscribe to UPnP events from the
- print service in order to monitor the progress of a job. A UCP can determine when a particular job that it submitted
- has started printing by matching the first entry of the evented JobIdList variable with the JobId value returned to it
- by the CreateJob action. Similarly a UCP can determine that a job has completed, whether successful of not, by
- matching the JobId for that job with the first element of the evented JobEndState variable.
- Four of the five evented variables are also available as OUT parameters of either GetPrinterAttributes or
- GetJobAttributes, so a UCP can obtain their values by polling. However, the JobEndState is not an OUT parameter
- of any action, so it is only available to a client by eventing, not by polling.

869 **2.9.4. Security**

- 870 In keeping with the lightweight approach to security taken by UPnP no security is defined by this specification.
- 871 If a vendor decides to include some form of security they are strongly encouraged to adopt the model that IPP uses –
- which is in fact fairly simple.

873 **2.9.5.** Localization

- A UPnP printer is assumed to be operating within the locale of the user. No other localization mechanism is defined
- for the Print Service. The UCP (client) is expected to localize the well-known string values (that correspond to IPP
- keyword values) to the locale of its user. The UCP (client) is expected to convert the enum integer values to human
- readable string values in the locale of the user.

2.9.6. IPP Data Type mapping to UPnP Data Types

Basic IPP data types are transformed as follows.

Table 12: Basic IPP data type mappings

IPP Type (see [MODEL] for details)	UPnP Variable Type
Text	string
OctetString	bin.base64
Boolean	boolean
Integer	int
integer (02**31 -1)	i4 qualified by an <allowedvaluerange></allowedvaluerange>

dateTime	dateTime.tz
----------	-------------

The derived types in IPP are mapped onto the following UPnP data types.

Table 13: Derived data type mappings

IPP Type	UPnP Type	Notes (see [MODEL] for details)
name	string	A Name is a string with limited length. It is intended to have machine-readable meaning (as opposed to a simple text string).
keyword	string	A keyword is a name that has a limited set of allowed values in US-English represented as lowercase letters ("a" - "z"), digits ("0" - "9"), hyphen ("-"), dot ("."), and underscore ("_").
enum	string	An equivalent keyword string is used for each value using the symbol in IPP for each enum value, since the representation is XML.
uri	uri	A URI.
uriScheme	string	A string that specifies a URI scheme (http, ipp, etc.).
naturalLanguage	-	Not supported.
charset	-	Not supported.
mimeMediaType	string	A MIME type ('text/plain' for example).

883

884

882

Table 14: Structured Data Type mapping

IPP Type	UPnP equivalent
resolution	This is represented as a pair of integers <attribute name="">X and <attribute name="">Y</attribute></attribute>
1setOf X	See the earlier discussion on arrays in section 2.5.1.1.

886

3. XML Service Description

```
887
      <?xml version="1.0"?>
888
      <scpd xmlns="urn:schemas-upnp-org:service-1-0">
889
        <specVersion>
890
          <major>1</major>
891
          <minor>0</minor>
892
        </specVersion>
893
        <actionList>
894
          <action>
895
          <name>CreateJob</name>
896
            <argumentList>
897
              <argument>
898
                <name>JobName</name>
899
                <direction>in</direction>
900
                <relatedStateVariable>JobName</relatedStateVariable>
901
              </argument>
902
              <argument>
903
                <name>JobOriginatingUserName</name>
904
                <direction>in</direction>
905
                <relatedStateVariable>JobOriginatingUserName</relatedStateVariable>
906
              </argument>
907
              <argument>
908
                <name>DocumentFormat</name>
909
                <direction>in</direction>
910
                <relatedStateVariable>DocumentFormat/relatedStateVariable>
911
              </argument>
912
              <argument>
913
                <name>Copies</name>
914
                <direction>in</direction>
915
                <relatedStateVariable>Copies</relatedStateVariable>
916
              </argument>
917
              <argument>
918
                <name>Sides</name>
919
                <direction>in</direction>
920
                <relatedStateVariable>Sides</relatedStateVariable>
921
              </argument>
922
              <argument>
923
                <name>NumberUp</name>
924
                <direction>in</direction>
925
                <relatedStateVariable>NumberUp</relatedStateVariable>
926
              </argument>
927
              <argument>
928
                <name>OrientationRequested</name>
929
                <direction>in</direction>
930
                <relatedStateVariable>OrientationRequested/relatedStateVariable>
931
              </argument>
932
              <argument>
933
                <name>MediaSize</name>
934
                <direction>in</direction>
935
                <relatedStateVariable>MediaSize</relatedStateVariable>
936
              </argument>
937
              <argument>
938
                <name>MediaType</name>
```

^{© 2002} Contributing Members of the UPnPTM Forum. All Rights Reserved.

```
939
                <direction>in</direction>
940
                <relatedStateVariable>MediaType</relatedStateVariable>
941
              </argument>
942
              <argument>
943
                <name>PrintQuality</name>
944
                <direction>in</direction>
945
                <relatedStateVariable>PrintQuality</relatedStateVariable>
946
              </argument>
              <argument>
947
948
                <name>JobId</name>
949
                <direction>out</direction>
                <relatedStateVariable>JobId</relatedStateVariable>
950
951
              </argument>
952
              <argument>
953
                <name>DataSink</name>
954
                <direction>out</direction>
955
                <relatedStateVariable>DataSink</relatedStateVariable>
956
              </argument>
957
            </argumentList>
958
          </action>
          <action>
959
960
          <name>CancelJob</name>
961
            <argumentList>
962
              <argument>
963
                <name>JobId</name>
964
                <direction>in</direction>
965
                <relatedStateVariable>JobId</relatedStateVariable>
966
              </argument>
967
            </argumentList>
          </action>
968
969
          <action>
970
          <name>GetPrinterAttributes</name>
971
            <argumentList>
972
              <argument>
973
                <name>PrinterState</name>
974
                <direction>out</direction>
975
                <relatedStateVariable>PrinterState</relatedStateVariable>
976
              </argument>
977
              <argument>
978
                <name>PrinterStateReasons</name>
979
                <direction>out</direction>
980
                <relatedStateVariable>PrinterStateReasons</relatedStateVariable>
981
              </argument>
              <argument>
982
983
                <name>JobIdList</name>
984
                <direction>out</direction>
985
                <relatedStateVariable>JobIdList</relatedStateVariable>
986
              </argument>
987
              <argument>
988
                <name>JobId</name>
989
                <direction>out</direction>
990
                <relatedStateVariable>JobId</relatedStateVariable>
991
              </argument>
992
            </argumentList>
993
          </action>
```

© 2002 Contributing Members of the UPnPTM Forum. All Rights Reserved.

```
994
           <action>
995
           <name>GetJobAttributes</name>
996
             <argumentList>
997
               <argument>
998
                 <name>JobId</name>
999
                 <direction>in</direction>
1000
                 <relatedStateVariable>JobId</relatedStateVariable>
1001
               </argument>
               <argument>
1002
1003
                 <name>JobName</name>
1004
                 <direction>out</direction>
1005
                 <relatedStateVariable>JobName</relatedStateVariable>
1006
               </argument>
1007
               <argument>
1008
                 <name>JobOriginatingUserName</name>
1009
                 <direction>out</direction>
1010
                 <relatedStateVariable>JobOriginatingUserName</relatedStateVariable>
1011
               </argument>
1012
               <argument>
1013
                 <name>JobMediaSheetsCompleted</name>
1014
                 <direction>out</direction>
1015
                 <relatedStateVariable>JobMediaSheetsCompleted/relatedStateVariable>
1016
               </argument>
1017
             </argumentList>
1018
          </action>
1019
        </actionList>
1020
        <serviceStateTable>
1021
           <stateVariable sendEvents="no">
1022
             <name>PrinterName</name>
1023
             <dataType>string</dataType>
1024
             <defaultValue></defaultValue>
1025
          </stateVariable>
1026
           <stateVariable sendEvents="no">
1027
             <name>PrinterLocation</name>
1028
             <dataType>string</dataType>
1029
             <defaultValue></defaultValue>
1030
           </stateVariable>
1031
           <stateVariable sendEvents="no">
1032
             <name>DeviceId</name>
1033
             <dataType>string</dataType>
1034
             <defaultValue></defaultValue>
1035
           </stateVariable>
1036
           <stateVariable sendEvents="yes">
1037
             <name>PrinterState</name>
1038
             <dataType>string</dataType>
1039
             <defaultValue>idle</defaultValue>
1040
             <allowedValueList>
1041
               <allowedValue>idle</allowedValue>
1042
               <allowedValue>processing</allowedValue>
               <allowedValue>stopped</allowedValue>
1043
1044
             </allowedValueList>
1045
           </stateVariable>
1046
           <stateVariable sendEvents="yes">
1047
             <name>PrinterStateReasons</name>
1048
             <dataType>string</dataType>
```

© 2002 Contributing Members of the UPnPTM Forum. All Rights Reserved.

```
1049
             <defaultValue>none</defaultValue>
1050
             <allowedValueList>
1051
               <allowedValue>none</allowedValue>
1052
               <allowedValue>attention-required</allowedValue>
1053
               <allowedValue>media-jam</allowedValue>
1054
               <allowedValue>paused</allowedValue>
1055
               <allowedValue>door-open</allowedValue>
1056
               <allowedValue>media-low</allowedValue>
1057
               <allowedValue>media-empty</allowedValue>
               <allowedValue>output-area-almost-full</allowedValue>
1058
1059
               <allowedValue>output-area-full</allowedValue>
               <allowedValue>marker-supply-low</allowedValue>
1060
1061
               <allowedValue>marker-supply-empty</allowedValue>
               <allowedValue>marker-failure</allowedValue>
1062
1063
               <allowedValue>media-change-request</allowedValue>
1064
             </allowedValueList>
1065
           </stateVariable>
1066
           <stateVariable sendEvents="no">
1067
             <name>XHTMLImageSupported</name>
1068
             <dataType>string</dataType>
1069
             <defaultValue>image/jpeg</defaultValue>
1070
             <allowedValueList>
1071
               <allowedValue>image/jpeg</allowedValue>
             </allowedValueList>
1072
1073
           </stateVariable>
1074
           <stateVariable sendEvents="no">
1075
             <name>ColorSupported</name>
1076
             <dataType>boolean</dataType>
1077
             <defaultValue></defaultValue>
1078
           </stateVariable>
           <stateVariable sendEvents="yes">
1079
             <name>JobIdList</name>
1080
1081
             <dataType>string</dataType>
1082
             <defaultValue></defaultValue>
1083
           </stateVariable>
1084
           <stateVariable sendEvents="no">
1085
             <name>JobId</name>
1086
             <dataType>i4</dataType>
1087
             <defaultValue>0</defaultValue>
1088
             <allowedValueRange>
1089
               <minimum>0</minimum>
1090
               <maximum>2147483647</maximum>
1091
               <step>1</step>
1092
             </allowedValueRange>
1093
           </stateVariable>
1094
           <stateVariable sendEvents="yes">
1095
             <name>JobEndState</name>
1096
             <dataType>string</dataType>
1097
             <defaultValue></defaultValue>
1098
           </stateVariable>
1099
           <stateVariable sendEvents="no">
1100
             <name>JobName</name>
1101
             <dataType>string</dataType>
1102
             <defaultValue></defaultValue>
1103
           </stateVariable>
```

^{© 2002} Contributing Members of the UPnPTM Forum. All Rights Reserved.

```
1104
           <stateVariable sendEvents="no">
1105
             <name>JobOriginatingUserName</name>
1106
             <dataType>string</dataType>
1107
             <defaultValue></defaultValue>
1108
           </stateVariable>
1109
           <stateVariable sendEvents="no">
1110
             <name>DocumentFormat</name>
1111
             <dataType>string</dataType>
1112
             <defaultValue>unknown</defaultValue>
1113
             <allowedValueList>
1114
               <allowedValue>unknown</allowedValue>
               <allowedValue>application/vnd.pwg-xhtml-print</allowedValue>
1115
1116
               <allowedValue>application/octet-stream</allowedValue>
1117
               <allowedValue>text/plain</allowedValue>
               <allowedValue>text/plain;charset=utf-8</allowedValue>
1118
1119
               <allowedValue>application/postscript</allowedValue>
1120
               <allowedValue>application/vnd.hp-PCL</allowedValue>
1121
             </allowedValueList>
1122
           </stateVariable>
1123
           <stateVariable sendEvents="no">
1124
             <name>Copies</name>
1125
             <dataType>i4</dataType>
1126
             <defaultValue>1</defaultValue>
1127
             <allowedValueRange>
1128
               <minimum>0</minimum>
1129
               <maximum>2147483647</maximum>
1130
               <step>1</step>
1131
             </allowedValueRange>
1132
           </stateVariable>
1133
           <stateVariable sendEvents="no">
1134
             <name>Sides</name>
1135
             <dataType>string</dataType>
1136
             <defaultValue>one-sided</defaultValue>
             <allowedValueList>
1137
1138
               <allowedValue>one-sided</allowedValue>
               <allowedValue>two-sided-long-edge</allowedValue>
1139
1140
               <allowedValue>two-sided-short-edge</allowedValue>
1141
               <allowedValue>device-setting</allowedValue>
1142
             </allowedValueList>
1143
           </stateVariable>
1144
           <stateVariable sendEvents="no">
1145
             <name>NumberUp</name>
1146
             <dataType>string</dataType>
1147
             <defaultValue>1</defaultValue>
1148
             <allowedValueList>
               <allowedValue>1</allowedValue>
1149
1150
               <allowedValue>2</allowedValue>
1151
               <allowedValue>4</allowedValue>
1152
               <allowedValue>device-setting</allowedValue>
             </alllowedValueList>
1153
1154
           </stateVariable>
1155
           <stateVariable sendEvents="no">
1156
             <name>OrientationRequested</name>
1157
             <dataType>string</dataType>
1158
             <defaultValue>portrait</defaultValue>
```

^{© 2002} Contributing Members of the UPnPTM Forum. All Rights Reserved.

```
1159
             <allowedValueList>
1160
               <allowedValue>portrait</allowedValue>
1161
               <allowedValue>landscape</allowedValue>
1162
               <allowedValue>reverse-landscape</allowedValue>
               <allowedValue>reverse-portrait</allowedValue>
1163
1164
               <allowedValue>device-setting</allowedValue>
1165
             </allowedValueList>
1166
           </stateVariable>
1167
           <stateVariable sendEvents="no">
1168
             <name>MediaSize</name>
1169
             <dataType>string</dataType>
             <defaultValue></defaultValue>
1170
             <allowedValueList>
1171
               <allowedValue>na_letter_8.5x11in</allowedValue>
1172
1173
               <allowedValue>na_legal_8.5x14in</allowedValue>
1174
               <allowedValue>iso_a4_210x297mm</allowedValue>
1175
               <allowedValue>iso c5 162x229mm</allowedValue>
1176
               <allowedValue>iso_dl_110x220mm</allowedValue>
1177
               <allowedValue>jis_b4_257x364mm</allowedValue>
1178
               <allowedValue>device-setting</allowedValue>
1179
             </allowedValueList>
1180
           </stateVariable>
1181
           <stateVariable sendEvents="no">
1182
             <<u>name</u>>MediaType</<u>name</u>>
1183
             <dataType>string</dataType>
1184
             <defaultValue></defaultValue>
1185
             <allowedValueList>
1186
               <allowedValue>stationery</allowedValue>
1187
               <allowedValue>transparency</allowedValue>
1188
               <allowedValue>envelope</allowedValue>
1189
               <allowedValue>labels</allowedValue>
               <allowedValue>photographic</allowedValue>
1190
1191
               <allowedValue>cardstock</allowedValue>
               <allowedValue>device-setting</allowedValue>
1192
1193
             </allowedValueList>
1194
           </stateVariable>
1195
           <stateVariable sendEvents="no">
             <name>PrintQuality</name>
1196
1197
             <dataType>string</dataType>
1198
             <defaultValue>normal</defaultValue>
1199
             <allowedValueList>
1200
               <allowedValue>draft</allowedValue>
1201
               <allowedValue>normal</allowedValue>
1202
               <allowedValue>high</allowedValue>
1203
               <allowedValue>device-setting</allowedValue>
1204
             </allowedValueList>
1205
           </stateVariable>
1206
           <stateVariable sendEvents="no">
1207
             <name>DataSink</name>
1208
             <dataType>uri</dataType>
1209
             <defaultValue></defaultValue>
1210
           </stateVariable>
1211
           <stateVariable sendEvents="yes">
1212
             <name>JobMediaSheetsCompleted</name>
1213
             <dataType>i4</dataType>
```

^{© 2002} Contributing Members of the UPnPTM Forum. All Rights Reserved.

```
1214
             <defaultValue>0</defaultValue>
1215
             <allowedValueRange>
1216
               <minimum>-1</minimum>
1217
               <maximum>2147483647</maximum>
1218
               <step>1</step>
1219
             </allowedValueRange>
1220
          </stateVariable>
         </serviceStateTable>
1221
1222
      </<u>scpd</u>>
```