DMA/DCMI using the OV7670 camera

Karthik Ganesan

Introduction

In this lab, you will be interfacing to an external camera model using the Nucleo platform. You will be using the OV7670 module, a board including a camera and configurable DSP functionalities. To interface with the OV7670, you will be using the I²C and DCMI protocols, and the Direct Memory Address (DMA) feature of the Nucleo platform. At the end of this lab document, you will find a list of items that you must show your TA when being marked during your in-lab demo.

1. The OV7670 module

The OV7670 is a versatile camera module that allows you to configure a number of features such as frame size, frame rate, and pixel format, as well as timing, clock polarity, and others. You can configure these settings by writing to the appropriate registers using the I^2C protocol, similar to the RTC module you used in Lab 4. The complete list of all 209 registers is available OV7670 datasheet, if you wish to take a look. However, for this lab, you will just use a preselected configuration, in which the camera outputs a stream of QCIF frames (which are 144×174 pixels in size) at 15 frames per second (fps), in the YCbCr color format. As you saw in class, the camera module transmits one full image (i.e., one frame) at a time. For each frame, the camera sends each 'row' of the image and for each row, it sends each pixel one after another. Our ultimate goal is to save each frame as one large 'array' in memory. This allows us to then operate on that image (e.g., if we want to post-process the image or send it somewhere over bluetooth).

The camera module uses a complex signalling format for sending each frame. For the OV7670, this includes signals such as:

- D0-D7: parallel data lines representing bits of a single pixel.
- Horizontal Sync (HSYNC): indicates when one line of the frame has been transmitted.
- Vertical Sync (VSYNC): indicates when an entire frame has been transmitted.
- Pixel Clock (PCLK): changes every time pixel data changes.

The Nucleo board must read these signals to understand what information is being sent. One option would be to write code to read these signals to manually figure out which row is being sent and how it should be saved in memory. However, this is **extremely** error-prone and does not make efficient use of the CPU. Fortunately, the Nucleo platform includes a dedicated peripheral called the *Digital Camera Interface* (DCMI) which handles this signalling for us. For this lab, you only need to configure the DCMI to connect to the camera to read images from it.

1.1 Color formats

For this lab, we will only be sending images in 8-bit grayscale. This means that each pixel will consist of 1 byte; 0×00 will represent a black pixel and $0 \times FF$ will represent a white pixel. The OV7670 camera does not support a grayscale mode. We will instead be using the YCbCr mode, where the Y component represents the image 'brightness'. Cb and Cr encode color information.

When reading a pixel from the camera in YCbCr mode, each pixel will be represented as 16-bits. However, to reduce bandwidth the Cb and Cr components are only sent for every second pixel. For example, if Y_i , Cb_i and Cr_i represents the Y, Cb and Cr components for pixel i, the bytes sent from the camera are as follows: $Cb_0, Y_0, Cr_0, Y_1, Cb_2, Y_2, Cr_2, Y_3, Cb_4, Y_4, Cr_4, Y_5$.

If we wanted to represent every pixel with full color, we would need to first re-arrange these bytes to be in the right order. However, we only want to display images in grayscale. This means that you can simply ignore every byte that is not a *Y* component. **NOTE:** But keep in mind that the camera still sends 16-bits per pixel. You must handle choosing the right byte in your code.

1.2 Set up HCLK

The OV7670 peripheral needs an external clock signal to function properly. We provide this clock from the Nucleo board by assigning one GPIO pin to a Pulse Width Modulated (PWM) signal generated with a timer. The use of a dedicated hardware timer allows the Nucleo board to generate a fast clock without overloading the CPU. For this lab, we use Timer 1 of the Nucleo Board with 8 MHz frequency, and 50 % duty cycle. If you are not familiar with PWM, you can easily learn about it by searching online.

Try it yourself: Look at the HCLK signal with an oscilloscope. Do you observe a square wave? Why or why not?

Try it yourself: Once you have a working setup, experiment varying the HCLK frequency. What are the performance trade-offs?

DMA

While the DCMI handles the signalling with the camera, we still need a way to copy the DCMI output to memory. For this we will use the Direct Memory Address (DMA) capability of the Nucleo platform. DMA is a dedicated hardware block which can read and write to memory without requiring the CPU. DMA is particularly helpful when you need to perform a long series of reads and writes, which is exactly what we are trying to do when copying an image from the camera to memory.

In this lab, you will use the DMA functionality to copy image frames captured through DCMI into system memory. When a new frame is available, the DMA interrupt is triggered to copy the frame to memory. The rest of the time, the CPU is free to work on other tasks.

2. Hardware Set Up

First, connect the OV7670 module to the Nucleo board. Using jumper cables, make the connections shown in Figures 1 and 2. The connections are also listed in the Table.

WARNING: Please take your time and make these connections **CAREFULLY**. A very common reason for the camera 'not working' is because the connections are not correct.

2.1 Sending Images Through Serial Port

When working with images, it is important to have a way to visualize the results. In this lab you will use the serial port to transmit image data from the Nucleo board to your computer, and visualize the images with the serial_monitor program provided with this hand out.

First, download serial_monitor.exe and make sure you have permissions to execute it. Open a command line interface and run .\serial_monitor.exe --help. You should see the following output:

```
> .\serial_monitor.exe --help
Usage: serial_monitor.py [OPTIONS]
  Display images transferred through serial port. Press 'q' to close.
Options:
                           Serial (COM) port of the target board
  -p, --port TEXT
  -br, --baudrate INTEGER Serial port baudrate
  --timeout INTEGER
                          Serial port timeout
  --rows INTEGER
                          Number of rows in the image
  --cols INTEGER
                          Number of columns in the image
  --preamble TEXT
                          Preamble string before the frame
  --suffix TEXT
                          Suffix string after receiving the frame
                          Show this message and exit.
  --help
```

Modify the main function in Keil μ Vision to send the following sequence through serial port:

- String "\r\nPREAMBLE!\r\n".
- The character $0 \times 00 25,056$ times (144×174) .

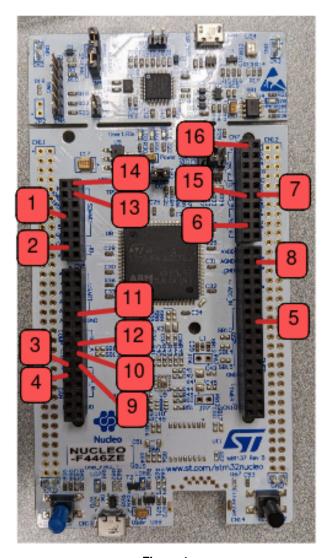


Figure 1

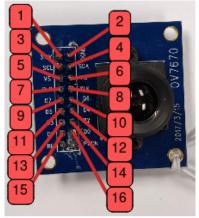


Figure 2

I/O Number	Camera I/O	I/O Label on Nucleo
1	3.3V	3V3
2	DGND	GND
3	SCL	I2C (top)
4	SDA	I2C (bottom)
5	VS	RX DO
6	HS	SPI_B (2nd from bottom)
7	PLK	D12
8	XLK	D6
9	D7	SAI_A (1st from bottom)
10	D6	SAI_A (2nd from bottom)
11	D5	USART (1st from bottom)
12	D4	SAI_A (2nd from top)
13	D3	SDMMC (2nd from top)
14	D2	SDMMC (1st from top)
15	D1	I2S_B (bottom)
16	D0	I2S_A (top)

On your computer, run .\serial_monitor.exe -p <Nucleo board COM port>. If your implementation is correct, a graphical window will open showing a black rectangle. Next, modify your code to output character 0xFF instead of 0x00. The serial_monitor should show a completely white rectangle. You may experiment with shades of gray, or alternating patterns.

When you can reliably send and visualize artificially generated images, you may proceed to the next section.

3. Taking a Snapshot on Command

In this section you will configure the OV7670 camera with I^2C , and use the camera to take a snapshot when button B1 is pressed. Here are the steps you must take to do this:

3.1 Writing to a register

First, complete functions ov7670_read() and ov7670_write() in file ov7670.c. To verify that you can read a register from the camera, try reading register $0 \times 0 A$ and verify that it contains the correct product number of 0×76 .

3.2 Configure the camera

Next, you must write code to configure the camera at the start. This involves writing to lots of registers that configure the camera to work the way we want. To make this part easier, the ov7670.c file contains a large array called $ov7670_reg[]$. This array lists the address of every register in the camera and what value that register needs to be set to. To initialize the camera, you must complete $ov7670_init()$ by writing the *value* to the *address* of each register in $ov7670_reg[]$. Since the camera does not run as fast as the CPU, you should leave a 10ms delay between writes (using HAL_Delay (10)).

3.3 Configuring the DMA

You must now complete ov7670_snapshot() to take one photo using the camera, and then copy that picture (or "frame") to memory. This requires starting the DMA using the HAL_DCMI_Start_DMA function. The description of this function is as follows:

Parameters:

- 1. hdcmi: pointer to a DCMI HandleTypeDef structure that contains the configuration information for DCMI.
- 2. DCMI_Mode: DCMI capture mode snapshot or continuous grab. You can use DCMI_MODE_SNAPSHOT for this lab.
- 3. pData: The destination memory Buffer address.
- 4. Length: The length of capture to be transferred.

Now, complete function ov7670_snapshot() by calling HAL_DCMI_Start_DMA() with the appropriate parameters. The DMA has been configured so that it fires the DMA2_Stream1 interrupt when it is done copying one frame.

3.4 Capturing one frame

Now, modify main () to capture a snapshot when button B1 is pressed. You should do this by calling the $0v7670_snapshot$ () function you completed above. However, since you are using interrupts, you need a way to tell when the DMA has finished transferring an image. For this, you should modify DMA2_Stream1_IRQHandler() in $stm32f4xx_it.c$ to set a flag that you can read in main(). You should include a small HAL_Delay() inside any loop where you are waiting for the DMA interrupt to trigger.

3.5 Sending one frame

When an image has been captured, you should then send it through the serial port. Remember that the raw image is in *YCbCr* format. To produce a grayscale image you must only send the odd-indexed bytes form the buffer (i.e. buff[1], buff[3], buff[5], etc.).

4. Producing a Video-Like Stream

Once you are able to capture one frame by pressing B1, you should modify your code to continuously capture and display images. You should do this using the following steps:

4.1 Using the continuous DCMI mode

Complete function ov7670_capture () by calling HAL_DCMI_Start_DMA() with the appropriate parameters to capture incoming data on a loop. The only change you need to make is to start the DMA in 'continuous' (i.e., DCMI_MODE_CONTINUOUS) instead of the 'snapshot' (i.e., DCMI MODE SNAPSHOT) mode you used earlier.

4.2 Modify main to work continuously

You must also modify main () to continuously capture snapshots and send them through the serial port. Take care to make your implementation as efficient as possible. Be careful about adding unnecessary delays in your code.

4.3 Avoiding tearing

Your code must run as fast as possible, without 'tearing' which occurs when you update the image buffer as you are transmitting it. You can see this as a horizontal 'tear' along the image; the part above the tear belongs to one frame and the part below belongs to another frame. One way to avoid screen tearing is by suspending the DCMI hardware when a new frame is captured, and resuming after it has been processed. You can do this by calling the HAL_DCMI_Suspend() and HAL_DCMI_Resume() functions. Both these functions take a single argument: the pointer to a DCMI_HandleTypeDef structure.

Try it yourself: Assuming that the UART communication is the bottleneck, what is the highest frame rate possible?

Try it yourself: Use a timer to profile your implementation. How long does it take to capture a frame and make it available by DMA? How long does it take to send it through serial port?

5. In-lab Demo

During your lab session, you must show your TA the following:

- 1. **Demo 1:** When B1 is pressed, capture a snapshot and send it to the computer through serial port. Visualize it with the provided serial_monitor tool.
- 2. **Demo 2:** Send a video-like continuous stream of images through the serial port. Comment on your results, including how many frames per second you achieved.

For full marks, your images should show little or no screen tearing.

Your TA may ask questions about your solution. Be prepared to explain your design decisions and your code.