Mark3 Realtime Kernel

Generated by Doxygen 1.8.8

Fri Jul 7 2017 01:40:39

Contents

1	The	Mark3 Realtime Kernel	1
2	Lice	ense	3
	2.1	License	3
3	Con	figuring The Mark3 Kernel	5
	3.1	Overview	5
	3.2	Timer Options	5
	3.3	Blocking Objects	6
	3.4	Inter-process/thread Communication	7
	3.5	Debug Features	7
	3.6	Enhancements, Security, Miscellaneous	7
4	Buile	lding Mark3	9
	4.1	Source Layout	9
	4.2	Toolchain Integration	9
	4.3	Installing Dependencies	9
	4.4	Building Mark3 Kernel and Libraries	10
	4.5	Exporting the kernel source	10
5	Gett	ting Started With The Mark3 API	13
	5.1	Kernel Setup	13
	5.2	Threads	14
		5.2.1 Thread Setup	14
		5.2.2 Entry Functions	15
	5.3	Timers	15
	5.4	Semaphores	16
	5.5	Mutexes	17
	5.6	Event Flags	17
	5.7	Messages	18
		5.7.1 Message Objects	18
		5.7.2 Global Message Pool	19
		5.7.3 Message Oueries	19

iv CONTENTS

		5.7.4	Messaging Example	19
	5.8	Mailbo	xes	20
		5.8.1	Mailbox Example	20
	5.9	Notifica	ation Objects	21
		5.9.1	Notification Example	21
	5.10	Sleep		21
	5.11	Round	-Robin Quantum	22
_	Miles	Marko		00
6	vviiy	Mark3		23
7	Whe	n shoul	d you use an RTOS?	25
	7.1	The re	ality of system code	25
	7.2	Superl	oops, and their limitations	26
		7.2.1	Intro to Superloops	26
		7.2.2	The simplest loop	26
		7.2.3	Interrupt-Driven Super-loop	27
		7.2.4	Cooperative multi-tasking	28
		7.2.5	Hybrid cooperative/preemptive multi-tasking	29
	7.3	Proble	ms with superloops	30
		7.3.1	Hidden Costs	30
		7.3.2	Tightly-coupled code	31
		7.3.3	No blocking Calls	31
		7.3.4	Difficult to guarantee responsiveness	31
		7.3.5	Limited preemption capability	31
8	Can	you aff	ord an RTOS?	33
	8.1	Intro .		33
	8.2	Applica	ation description	34
	8.3		ne Overhead	35
	8.4		is	36
9			gn Goals	37
	9.1	Overvi	ew	37
		9.1.1	Services Provided by an RTOS Kernel	37
		9.1.2	Guiding Principles of Mark3	37
		9.1.3	Be feature competitive	37
		9.1.4	Be highly configuration	37
		9.1.5	No external dependencies, no new language features	38
		9.1.6	Target the most popular hobbyist platforms available	38
		9.1.7	Maximize determinism – but be pragmatic	38
		9.1.8	Apply engineering principles – and that means discipline, measurement and verification	38

CONTENTS

		9.1.9	Use Virtualization For Verification	38
10	Mark	3 Kerne	el Architecture	41
	10.1	Overvie	ew	41
	10.2	Thread	s and Scheduling	43
		10.2.1	A Bit About Threads	43
		10.2.2	Thread States and ThreadLists	44
		10.2.3	Blocking and Unblocking	44
		10.2.4	Blocking Objects	45
	10.3	Inside t	the Mark3 Scheduler	46
		10.3.1	Considerations for Round-Robin Scheduling	47
		10.3.2	Context Switching	47
		10.3.3	Putting It All Together	48
	10.4	Timers		48
		10.4.1	Tick-based Timers	50
		10.4.2	Tickless Timers	50
		10.4.3	Timer Processing Algorithm	50
	10.5	Synchr	onization and IPC	51
	10.6	Blockin	g Objects	51
		10.6.1	Semaphores	52
		10.6.2	Mutex	52
		10.6.3	Event Flags	52
			Notification Objects	52
	10.7	Messag	ges and Global Message Queue	53
			Messages	53
			Message Objects	53
			Global Message Pool	53
			Message Queues	54
			Mailboxes	54
			Atomic Operations	54
			Drivers	55
	10.8		Proper and Porting	57
11	Mark	(3C - C-	language API bindings for the Mark3 Kernel.	65
	11.1	API Co	nventions	65
	11.2	Allocati	ing Objects	66
	11.3	Drivers	in Mark3C	66
12	Relea	ase Not	es	69
-			ease	69
			ease	69
				50

vi CONTENTS

12.4 R3 Release 7 12.5 R2 7 12.6 R1 - 2nd Release Candidate 7 12.7 R1 - 1st Release Candidate 7 13 Profiling Results 7 13.1 Date Performed 7 13.2 Compiler Information 7 13.3 Profiling Results 7 14 Code Size Profiling 7 14.1 Information 7 14.2 Compiler Version 7 14.3 Profiling Results 7 15 Hierarchical Index 7 15.1 Class Hierarchy 7 16 Class Index 7 16.1 Class List 7 17 File Index 8 18.1.1 Detailed Description 8 18.1.2 Member Function Documentation 8 18.1.2.1 Block 8 18.1.2.2 BlockPriority 8 18.2.1.2 Detailed Description 8 18.2.2 Instributedelefore 8 18.2.1 Detailed Description 8 18.2.2 Instributedelefore 8 18.2.2.1 Add 8 18.2.2.2 Instributedelefore 8 18.2.2.3 PivotBackward				
12.5 R2 7 12.6 R1 - 2nd Release Candidate 7 12.7 R1 - 1st Release Candidate 7 13 Profiling Results 7 13.1 Date Performed 7 13.2 Compiler Information 7 13.3 Profiling Results 7 14 Code Size Profiling 7 14.1 Information 7 14.2 Compiler Version 7 14.3 Profiling Results 7 15 Hierarchical Index 7 15.1 Class Hierarchy 7 16 Class Index 7 16.1 Class List 7 17 File Index 8 17.1 File List 8 18 Class Documentation 8 18.1 Detailed Description 8 18.1.2 Block 8 18.1.2 Block 8 18.1.2 Block 8 18.1.2.1 Block 8 18.2.2 Institution Documentation 8 18.2.1 Detailed Description 8 18.2.2 InsertNodeBefore 8 18.2.2.3 PivotBackward 8 18.2.2.5 Remove 8		12.3	R4 Release	70
12.6 R1 - 2nd Release Candidate 7 12.7 R1 - 1st Release Candidate 7 13 Profiling Results 7 13.1 Date Performed 7 13.2 Compiler Information 7 13.3 Profiling Results 7 14 Code Size Profiling 7 14.1 Information 7 14.2 Compiler Version 7 14.3 Profiling Results 7 15 Hierarchical Index 7 15.1 Class Hierarchy 7 16 Class Index 7 16.1 Class List 7 17 File Index 8 17.1 File List 8 18 Class Documentation 8 18.1 Detailed Description 8 18.1.2 Block 8 18.1.2.1 Block 8 18.1.2.2 IsockPrority 8 18.2.1 Detailed Description 8 18.2.2 Imacritical Index 8 18.2.2 Imacritical Index 8 18.2.2 InsertNodeBefore 8 18.2.2.3 PivotBackward 8 18.2.2.5 Remove 8		12.4	R3 Release	70
12.7 R1 - 1st Release Candidate 7 13 Profiling Results 7 13.1 Date Performed 7 13.2 Compiler Information 7 13.3 Profiling Results 7 14 Code Size Profiling 7 14.1 Information 7 14.2 Compiler Version 7 14.3 Profiling Results 7 15 Hierarchical Index 7 15.1 Class Hierarchy 7 16 Class Index 7 16.1 Class List 7 17 File Index 8 18.1 BlockingObject Class Reference 8 18.1.1 Detailed Description 8 18.1.2 Member Function Documentation 8 18.1.2.1 Block 8 18.1.2.2 BlockPriority 8 18.2.1 Detailed Description 8 18.2.2 UnBlock 8 18.2.2 Member Function Documentation 8 18.2.2 InsertNodeBefore 8 18.2.2.3 PivotBackward 8 18.2.2.5 Remove 8		12.5	R2	71
13 Profiling Results 7 13.1 Date Performed 7 13.2 Compiler Information 7 13.3 Profiling Results 7 14 Code Size Profiling 7 14.1 Information 7 14.2 Compiler Version 7 14.3 Profiling Results 7 15 Hierarchical Index 7 15.1 Class Hierarchy 7 16 Class Index 7 17 File Index 8 17.1 File List 8 18 Class Documentation 8 18.1.1 Detailed Description 8 18.1.2.1 Block 8 18.1.2.2 BlockPriority 8 18.1.2.2 Is BlockPriority 8 18.2.1 Detailed Description 8 18.2.2 Circular-LinkList Class Reference 8 18.2.1 Detailed Description 8 18.2.2 InsertNodeBefore 8 18.2.2.3 PivotBackward 8 18.2.2.5 Remove 8		12.6	R1 - 2nd Release Candidate	71
13.1 Date Performed 7 13.2 Compiler Information 7 13.3 Profiling Results 7 14 Code Size Profiling 7 14.1 Information 7 14.2 Compiler Version 7 14.3 Profiling Results 7 15 Hierarchical Index 7 15.1 Class Hierarchy 7 16 Class Index 7 16.1 Class List 7 17 File Index 8 17.1 File List 8 18 Class Documentation 8 18.1 Detailed Description 8 18.1.2 Member Function Documentation 8 18.1.2.1 Block 8 18.1.2.2 BlockPriority 8 18.1.2.2 In Detailed Description 8 18.2.1 Detailed Description 8 18.2.2 In Detailed Description 8 18.2.2 Intention Documentation 8 18.2.2 InsertNodeBefore 8 18.2.2.1 PrivotForward 8 18.2.2.5 Remove 8		12.7	R1 - 1st Release Candidate	71
13.1 Date Performed 7 13.2 Compiler Information 7 13.3 Profiling Results 7 14 Code Size Profiling 7 14.1 Information 7 14.2 Compiler Version 7 14.3 Profiling Results 7 15 Hierarchical Index 7 15.1 Class Hierarchy 7 16 Class Index 7 16.1 Class List 7 17 File Index 8 17.1 File List 8 18 Class Documentation 8 18.1 Detailed Description 8 18.1.2 Member Function Documentation 8 18.1.2.1 Block 8 18.1.2.2 BlockPriority 8 18.1.2.2 In Detailed Description 8 18.2.1 Detailed Description 8 18.2.2 In Detailed Description 8 18.2.2 Intention Documentation 8 18.2.2 InsertNodeBefore 8 18.2.2.1 PrivotForward 8 18.2.2.5 Remove 8	40	D 6	Non-Provide	70
13.2 Compiler Information 7 13.3 Profiling Results 7 14 Code Size Profiling 7 14.1 Information 7 14.2 Compiler Version 7 14.3 Profiling Results 7 15 Hierarchical Index 7 15.1 Class Hierarchy 7 16 Class Index 7 16.1 Class List 7 17 File Index 8 17.1 File List 8 18 Class Documentation 8 18.1 Detailed Description 8 18.1.2 Member Function Documentation 8 18.1.2.1 Block 8 18.1.2.2 BlockPriority 8 18.1.2.3 Isinitialized 8 18.1.2.4 UnBlock 8 18.2.5 Detailed Description 8 18.2.1 Detailed Description 8 18.2.2 Member Function Documentation 8 18.2.2 InsertNodeBefore 8 18.2.2.2 InsertNodeBefore 8 18.2.2.3 PivotBackward 8 18.2.2.5 Remove 8	13			73
13.3 Profiling Results 7 14 Code Size Profiling 7 14.1 Information 7 14.2 Compiler Version 7 14.3 Profiling Results 7 15 Hierarchical Index 7 15.1 Class Hierarchy 7 16 Class Index 7 16.1 Class List 7 17 File Index 8 17.1 File List 8 18 Class Documentation 8 18.1 BlockingObject Class Reference 8 18.1.1 Detailed Description 8 18.1.2.1 Block 8 18.1.2.2 BlockPriority 8 18.1.2.3 Ishirilalized 8 18.1.2.4 UnBlock 8 18.2.2 CircularLinkList Class Reference 8 18.2.2 Member Function Documentation 8 18.2.2.1 Add 8 18.2.2.2 InsertNodeBefore 8 18.2.2.3 PivotBackward 8 18.2.2.5 Remove 8				
14 Code Size Profiling 7 14.1 Information 7 14.2 Compiler Version 7 14.3 Profiling Results 7 15 Hierarchical Index 7 15.1 Class Hierarchy 7 16 Class Index 7 16.1 Class List 7 17 File Index 8 17.1 File List 8 18 Class Documentation 8 18.1 BlockingObject Class Reference 8 18.1.1 Detailed Description 8 18.1.2 Member Function Documentation 8 18.1.2.2 BlockPriority 8 18.1.2.3 Ishirilalized 8 18.2.4 UnBlock 8 18.2.2 CircularLinkList Class Reference 8 18.2.1 Detailed Description 8 18.2.2.1 Add 8 18.2.2.2 InsertNodeBefore 8 18.2.2.3 PivotBackward 8 18.2.2.5 Remove 8				
14.1 Information 7 14.2 Compiler Version 7 14.3 Profiling Results 7 15 Hierarchical Index 7 15.1 Class Hierarchy 7 16 Class Index 7 16.1 Class List 7 17 File Index 8 17.1 File List 8 18 Class Documentation 8 18.1.1 BlockingObject Class Reference 8 18.1.2 Member Function Documentation 8 18.1.2.1 Block 8 18.1.2.2 BlockPriority 8 18.1.2.3 Islnitialized 8 18.1.2.4 UnBlock 8 18.2. GircularLinkList Class Reference 8 18.2. Detailed Description 8 18.2. Member Function Documentation 8 18.2. Member Function Documentation 8 18.2. Member Function Documentation 8 18.2. Jack Member Function Documentation 8 <th></th> <th>13.3</th> <th>Profiling Results</th> <th>73</th>		13.3	Profiling Results	73
14.2 Compiler Version 7 14.3 Profiling Results 7 15 Hierarchical Index 7 15.1 Class Hierarchy 7 16 Class Index 7 16.1 Class List 7 17 File Index 8 17.1 File List 8 18 Class Documentation 8 18.1.1 Detailed Description 8 18.1.2 Member Function Documentation 8 18.1.2.1 Block 8 18.1.2.2 BlockPriority 8 18.1.2.3 IsInitialized 8 18.2.4 UnBlock 8 18.2. CircularLinkList Class Reference 8 18.2. Detailed Description 8 18.2. Member Function Documentation 8 18.2. Member Function Documentation 8 18.2. JesertNodeBefore 8 18.2. 2. InsertNodeBefore 8 18.2. 2. PivotBackward 8 18.2. 2. PivotForward 8 18.2. 2. Remove 8	14	Code	e Size Profiling	75
14.3 Profiling Results 7 15 Hierarchical Index 7 15.1 Class Hierarchy 7 16 Class Index 7 16.1 Class List 7 17 File Index 8 17.1 File List 8 18 Class Documentation 8 18.1.1 Detailed Description 8 18.1.2 Member Function Documentation 8 18.1.2.1 Block 8 18.1.2.2 BlockPriority 8 18.1.2.3 IsInitialized 8 18.1.2.4 UnBlock 8 18.2 CircularLinkList Class Reference 8 18.2.1 Detailed Description 8 18.2.2 Member Function Documentation 8 18.2.2 Member Function Documentation 8 18.2.2.1 Add 8 18.2.2.2 InsertNodeBefore 8 18.2.2.3 PivotBackward 8 18.2.2.4 PivotForward 8 18.2.2.5 Remove 8		14.1	Information	75
15 Hierarchical Index 7 15.1 Class Hierarchy 7 16 Class Index 7 16.1 Class List 7 17 File Index 8 17.1 File List 8 18 Class Documentation 8 18.1.1 BlockingObject Class Reference 8 18.1.1 Detailed Description 8 18.1.2 Member Function Documentation 8 18.1.2.1 Block 8 18.1.2.2 BlockPriority 8 18.1.2.3 IsInitialized 8 18.2 CircularLinkList Class Reference 8 18.2.1 Detailed Description 8 18.2.2 Member Function Documentation 8 18.2.2.1 Add 8 18.2.2.2 InsertNodeBefore 8 18.2.2.3 PivotBackward 8 18.2.2.4 PivotForward 8 18.2.2.5 Remove 8		14.2	Compiler Version	75
15.1 Class Hierarchy 7 16 Class Index 7 16.1 Class List 7 17 File Index 8 17.1 File List 8 18 Class Documentation 8 18.1 BlockingObject Class Reference 8 18.1.1 Detailed Description 8 18.1.2 Member Function Documentation 8 18.1.2.1 Block 8 18.1.2.2 BlockPriority 8 18.1.2.3 IsInitialized 8 18.1.2.4 UnBlock 8 18.2 CircularLinkList Class Reference 8 18.2.1 Detailed Description 8 18.2.2 Member Function Documentation 8 18.2.2.1 Add 8 18.2.2.2 InsertNodeBefore 8 18.2.2.3 PivotBackward 8 18.2.2.4 PivotForward 8 18.2.2.5 Remove 8		14.3	Profiling Results	75
15.1 Class Hierarchy 7 16 Class Index 7 16.1 Class List 7 17 File Index 8 17.1 File List 8 18 Class Documentation 8 18.1 BlockingObject Class Reference 8 18.1.1 Detailed Description 8 18.1.2 Member Function Documentation 8 18.1.2.1 Block 8 18.1.2.2 BlockPriority 8 18.1.2.3 IsInitialized 8 18.1.2.4 UnBlock 8 18.2 CircularLinkList Class Reference 8 18.2.1 Detailed Description 8 18.2.2 Member Function Documentation 8 18.2.2.1 Add 8 18.2.2.2 InsertNodeBefore 8 18.2.2.3 PivotBackward 8 18.2.2.4 PivotForward 8 18.2.2.5 Remove 8				
16 Class Index 7 16.1 Class List 7 17 File Index 8 17.1 File List 8 18 Class Documentation 8 18.1 BlockingObject Class Reference 8 18.1.1 Detailed Description 8 18.1.2 Member Function Documentation 8 18.1.2.1 Block 8 18.1.2.2 BlockPriority 8 18.1.2.3 Isinitialized 8 18.1.2.4 UnBlock 8 18.2 CircularLinkList Class Reference 8 18.2.1 Detailed Description 8 18.2.2 Member Function Documentation 8 18.2.2.1 Add 8 18.2.2.2 InsertNodeBefore 8 18.2.2.3 PivotBackward 8 18.2.2.4 PivotForward 8 18.2.2.5 Remove 8	15			77
16.1 Class List 7 17 File Index 8 17.1 File List 8 18 Class Documentation 8 18.1 BlockingObject Class Reference 8 18.1.1 Detailed Description 8 18.1.2. Member Function Documentation 8 18.1.2.1 Block 8 18.1.2.2 BlockPriority 8 18.1.2.3 IsInitialized 8 18.1.2.4 UnBlock 8 18.2 CircularLinkList Class Reference 8 18.2.1 Detailed Description 8 18.2.2.1 Add 8 18.2.2.2 InsertNodeBefore 8 18.2.2.3 PivotBackward 8 18.2.2.4 PivotForward 8 18.2.2.5 Remove 8		15.1	Class Hierarchy	77
17 File Index 8 17.1 File List 8 18 Class Documentation 8 18.1 BlockingObject Class Reference 8 18.1.1 Detailed Description 8 18.1.2 Member Function Documentation 8 18.1.2.1 Block 8 18.1.2.2 BlockPriority 8 18.1.2.3 IsInitialized 8 18.1.2.4 UnBlock 8 18.2. CircularLinkList Class Reference 8 18.2.1 Detailed Description 8 18.2.2.1 Add 8 18.2.2.2 InsertNodeBefore 8 18.2.2.3 PivotBackward 8 18.2.2.4 PivotForward 8 18.2.2.5 Remove 8	16	Class	s Index	79
17.1 File List 8 18 Class Documentation 8 18.1.1 BlockingObject Class Reference 8 18.1.2 Member Function Documentation 8 18.1.2.1 Block 8 18.1.2.2 BlockPriority 8 18.1.2.3 IsInitialized 8 18.1.2.4 UnBlock 8 18.2 CircularLinkList Class Reference 8 18.2.1 Detailed Description 8 18.2.2 Member Function Documentation 8 18.2.2.1 Add 8 18.2.2.2 InsertNodeBefore 8 18.2.2.3 PivotBackward 8 18.2.2.4 PivotForward 8 18.2.2.5 Remove 8		16.1	Class List	79
17.1 File List 8 18 Class Documentation 8 18.1.1 BlockingObject Class Reference 8 18.1.2 Member Function Documentation 8 18.1.2.1 Block 8 18.1.2.2 BlockPriority 8 18.1.2.3 IsInitialized 8 18.1.2.4 UnBlock 8 18.2 CircularLinkList Class Reference 8 18.2.1 Detailed Description 8 18.2.2 Member Function Documentation 8 18.2.2.1 Add 8 18.2.2.2 InsertNodeBefore 8 18.2.2.3 PivotBackward 8 18.2.2.4 PivotForward 8 18.2.2.5 Remove 8				
18 Class Documentation 8 18.1 BlockingObject Class Reference 8 18.1.1 Detailed Description 8 18.1.2 Member Function Documentation 8 18.1.2.1 Block 8 18.1.2.2 BlockPriority 8 18.1.2.3 IsInitialized 8 18.1.2.4 UnBlock 8 18.2 CircularLinkList Class Reference 8 18.2.1 Detailed Description 8 18.2.2 Member Function Documentation 8 18.2.2.1 Add 8 18.2.2.2 InsertNodeBefore 8 18.2.2.3 PivotBackward 8 18.2.2.4 PivotForward 8 18.2.2.5 Remove 8	17			81
18.1 BlockingObject Class Reference 8 18.1.1 Detailed Description 8 18.1.2 Member Function Documentation 8 18.1.2.1 Block 8 18.1.2.2 BlockPriority 8 18.1.2.3 IsInitialized 8 18.1.2.4 UnBlock 8 18.2 CircularLinkList Class Reference 8 18.2.1 Detailed Description 8 18.2.2 Member Function Documentation 8 18.2.2.1 Add 8 18.2.2.2 InsertNodeBefore 8 18.2.2.3 PivotBackward 8 18.2.2.4 PivotForward 8 18.2.2.5 Remove 8		17.1	File List	81
18.1.1 Detailed Description 8 18.1.2 Member Function Documentation 8 18.1.2.1 Block 8 18.1.2.2 BlockPriority 8 18.1.2.3 IsInitialized 8 18.1.2.4 UnBlock 8 18.2 CircularLinkList Class Reference 8 18.2.1 Detailed Description 8 18.2.2 Member Function Documentation 8 18.2.2.1 Add 8 18.2.2.2 InsertNodeBefore 8 18.2.2.3 PivotBackward 8 18.2.2.4 PivotForward 8 18.2.2.5 Remove 8	18	Class	s Documentation	85
18.1.1 Detailed Description 8 18.1.2 Member Function Documentation 8 18.1.2.1 Block 8 18.1.2.2 BlockPriority 8 18.1.2.3 IsInitialized 8 18.1.2.4 UnBlock 8 18.2 CircularLinkList Class Reference 8 18.2.1 Detailed Description 8 18.2.2 Member Function Documentation 8 18.2.2.1 Add 8 18.2.2.2 InsertNodeBefore 8 18.2.2.3 PivotBackward 8 18.2.2.4 PivotForward 8 18.2.2.5 Remove 8		18.1	BlockingObject Class Reference	85
18.1.2 Member Function Documentation 8 18.1.2.1 Block 8 18.1.2.2 BlockPriority 8 18.1.2.3 IsInitialized 8 18.1.2.4 UnBlock 8 18.2 CircularLinkList Class Reference 8 18.2.1 Detailed Description 8 18.2.2 Member Function Documentation 8 18.2.2.1 Add 8 18.2.2.2 InsertNodeBefore 8 18.2.2.3 PivotBackward 8 18.2.2.4 PivotForward 8 18.2.2.5 Remove 8			18.1.1 Detailed Description	86
18.1.2.2 BlockPriority 8 18.1.2.3 IsInitialized 8 18.1.2.4 UnBlock 8 18.2 CircularLinkList Class Reference 8 18.2.1 Detailed Description 8 18.2.2 Member Function Documentation 8 18.2.2.1 Add 8 18.2.2.2 InsertNodeBefore 8 18.2.2.3 PivotBackward 8 18.2.2.4 PivotForward 8 18.2.2.5 Remove 8				86
18.1.2.3 IsInitialized 8 18.1.2.4 UnBlock 8 18.2 CircularLinkList Class Reference 8 18.2.1 Detailed Description 8 18.2.2 Member Function Documentation 8 18.2.2.1 Add 8 18.2.2.2 InsertNodeBefore 8 18.2.2.3 PivotBackward 8 18.2.2.4 PivotForward 8 18.2.2.5 Remove 8			18.1.2.1 Block	86
18.1.2.4 UnBlock 8 18.2 CircularLinkList Class Reference 8 18.2.1 Detailed Description 8 18.2.2 Member Function Documentation 8 18.2.2.1 Add 8 18.2.2.2 InsertNodeBefore 8 18.2.2.3 PivotBackward 8 18.2.2.4 PivotForward 8 18.2.2.5 Remove 8			18.1.2.2 BlockPriority	86
18.2 CircularLinkList Class Reference 8 18.2.1 Detailed Description 8 18.2.2 Member Function Documentation 8 18.2.2.1 Add 8 18.2.2.2 InsertNodeBefore 8 18.2.2.3 PivotBackward 8 18.2.2.4 PivotForward 8 18.2.2.5 Remove 8			18.1.2.3 IsInitialized	86
18.2.1 Detailed Description 8 18.2.2 Member Function Documentation 8 18.2.2.1 Add 8 18.2.2.2 InsertNodeBefore 8 18.2.2.3 PivotBackward 8 18.2.2.4 PivotForward 8 18.2.2.5 Remove 8			18.1.2.4 UnBlock	86
18.2.2 Member Function Documentation 8 18.2.2.1 Add 8 18.2.2.2 InsertNodeBefore 8 18.2.2.3 PivotBackward 8 18.2.2.4 PivotForward 8 18.2.2.5 Remove 8		18.2	CircularLinkList Class Reference	87
18.2.2.1 Add 8 18.2.2.2 InsertNodeBefore 8 18.2.2.3 PivotBackward 8 18.2.2.4 PivotForward 8 18.2.2.5 Remove 8			18.2.1 Detailed Description	87
18.2.2.2 InsertNodeBefore 8 18.2.2.3 PivotBackward 8 18.2.2.4 PivotForward 8 18.2.2.5 Remove 8			18.2.2 Member Function Documentation	87
18.2.2.3 PivotBackward 8 18.2.2.4 PivotForward 8 18.2.2.5 Remove 8			18.2.2.1 Add	87
18.2.2.4 PivotForward 8 18.2.2.5 Remove 8			18.2.2.2 InsertNodeBefore	88
18.2.2.5 Remove			18.2.2.3 PivotBackward	88
			18.2.2.4 PivotForward	88
18.3 DoubleLinkList Class Reference			18.2.2.5 Remove	88
		18.3	DoubleLinkList Class Reference	88

CONTENTS vii

	18.3.1	Detailed Description	89
	18.3.2	Constructor & Destructor Documentation	89
		18.3.2.1 DoubleLinkList	89
	18.3.3	Member Function Documentation	89
		18.3.3.1 Add	89
		18.3.3.2 Remove	89
18.4	Driver (Class Reference	90
	18.4.1	Detailed Description	91
	18.4.2	Member Function Documentation	91
		18.4.2.1 Close	91
		18.4.2.2 Control	91
		18.4.2.3 GetPath	91
		18.4.2.4 Init	91
		18.4.2.5 Open	92
		18.4.2.6 Read	92
		18.4.2.7 SetName	92
		18.4.2.8 Write	92
18.5	DriverL	ist Class Reference	93
	18.5.1	Detailed Description	93
	18.5.2	Member Function Documentation	93
		18.5.2.1 Add	93
		18.5.2.2 FindByPath	93
		18.5.2.3 Init	94
		18.5.2.4 Remove	94
18.6	EventF	lag Class Reference	94
	18.6.1	Detailed Description	95
	18.6.2	Member Function Documentation	95
		18.6.2.1 Clear	95
		18.6.2.2 GetMask	95
		18.6.2.3 Set	95
		18.6.2.4 Wait	96
		18.6.2.5 Wait	96
		18.6.2.6 Wait_i	96
		18.6.2.7 WakeMe	97
18.7	FakeTh	rread_t Struct Reference	97
	18.7.1	Detailed Description	97
18.8	Globall	MessagePool Class Reference	98
	18.8.1	Detailed Description	98
	18.8.2	Member Function Documentation	98
		18.8.2.1 GetHead	98

viii CONTENTS

18.8.2.2	2 GetPool	. 99
18.8.2.3	3 Init	. 99
18.8.2.4	1 Pop	. 99
18.8.2.5	5 Push	. 99
18.9 Kernel Class Re	eference	. 99
18.9.1 Detailed	Description	. 101
18.9.2 Member	r Function Documentation	. 101
18.9.2.1	GetIdleThread	. 101
18.9.2.2	2 GetThreadContextSwitchCallout	. 101
18.9.2.3	3 GetThreadCreateCallout	. 101
18.9.2.4	4 GetThreadExitCallout	. 101
18.9.2.5	5 Init	. 102
18.9.2.6	S IsPanic	. 102
18.9.2.7	7 IsStarted	. 102
18.9.2.8	Panic	. 102
18.9.2.9	9 SetIdleFunc	. 102
18.9.2.1	10 SetPanic	. 103
18.9.2.1	11 SetThreadContextSwitchCallout	. 104
18.9.2.1	12 SetThreadCreateCallout	. 104
18.9.2.1	13 SetThreadExitCallout	. 104
	14 Start	
18.10KernelAware Cla	ass Reference	. 105
18.10.1 Detailed	d Description	. 106
18.10.2 Member	r Function Documentation	. 106
18.10.2.	.1 ExitSimulator	. 106
18.10.2.	.2 IsSimulatorAware	. 106
18.10.2.	.3 Print	. 106
18.10.2.	.4 ProfileInit	. 107
18.10.2.	.5 ProfileReport	. 107
	.6 ProfileStart	
18.10.2.	.7 ProfileStop	. 107
18.10.2.	.8 Trace	. 107
18.10.2.	.9 Trace	. 107
18.10.2.	.10Trace	. 108
18.10.2.	.11Trace_i	. 108
18.11 Kernel SWI Class	ss Reference	. 108
18.11.1 Detailed	Description	. 109
18.11.2 Member	r Function Documentation	. 109
18.11.2.	.1 Clear	. 109
18.11.2.	.2 Config	. 109

CONTENTS

18.11.2.3 DI	 109
18.11.2.4 RI	 109
18.11.2.5 Start	 109
18.11.2.6 Stop	 110
18.11.2.7 Trigger	 110
18.12KernelTimer Class Reference	 110
18.12.1 Detailed Description	 111
18.12.2 Member Function Documentation	 111
18.12.2.1 ClearExpiry	 111
18.12.2.2 Config	 111
18.12.2.3 DI	 111
18.12.2.4 El	 111
18.12.2.5 GetOvertime	 111
18.12.2.6 Read	 111
18.12.2.7 RI	 112
18.12.2.8 SetExpiry	 112
18.12.2.9 Start	 112
18.12.2.10Stop	 112
18.12.2.11SubtractExpiry	 112
18.12.2.12TimeToExpiry	 113
18.13LinkList Class Reference	 113
18.13.1 Detailed Description	 114
18.13.2 Member Function Documentation	 114
18.13.2.1 GetHead	 114
18.13.2.2 GetTail	 114
18.13.2.3 Init	 114
18.14LinkListNode Class Reference	 114
18.14.1 Detailed Description	 115
18.14.2 Member Function Documentation	 115
18.14.2.1 ClearNode	 115
18.14.2.2 GetNext	 116
18.14.2.3 GetPrev	 116
18.15Mailbox Class Reference	 116
18.15.1 Detailed Description	 117
18.15.2 Member Function Documentation	 118
18.15.2.1 CopyData	 118
18.15.2.2 GetHeadPointer	 118
18.15.2.3 GetTailPointer	
18.15.2.4 Init	
18.15.2.5 MoveHeadBackward	 119

CONTENTS

18.15.2.6 MoveHeadForward	 119
18.15.2.7 MoveTailBackward	 119
18.15.2.8 MoveTailForward	 119
18.15.2.9 Receive	 119
18.15.2.10Receive	 119
18.15.2.11Receive_i	 120
18.15.2.12ReceiveTail	 120
18.15.2.13ReceiveTail	 120
18.15.2.14Send	 120
18.15.2.15Send	 122
18.15.2.16Send_i	 122
18.15.2.17SendTail	 122
18.15.2.18SendTail	 123
18.15.3 Member Data Documentation	 123
18.15.3.1 m_clSendSem	 123
18.16Message Class Reference	 123
18.16.1 Detailed Description	 124
18.16.2 Member Function Documentation	 124
18.16.2.1 GetCode	 124
18.16.2.2 GetData	 124
18.16.2.3 Init	 125
18.16.2.4 SetCode	 125
18.16.2.5 SetData	 125
18.17MessagePool Class Reference	 125
18.17.1 Detailed Description	 126
18.17.2 Member Function Documentation	 126
18.17.2.1 GetHead	 126
18.17.2.2 Init	 126
18.17.2.3 Pop	 126
18.17.2.4 Push	 126
18.18MessageQueue Class Reference	 127
18.18.1 Detailed Description	 127
18.18.2 Member Function Documentation	 128
18.18.2.1 GetCount	 128
18.18.2.2 Init	 128
18.18.2.3 Receive	 128
18.18.2.4 Receive	 128
18.18.2.5 Receive_i	 128
18.18.2.6 Send	 129
18.19Mutex Class Reference	 129

CONTENTS xi

18.19.1 Detailed Description	130
18.19.2 Member Function Documentation	130
18.19.2.1 Claim	130
18.19.2.2 Claim	130
18.19.2.3 Claim_i	131
18.19.2.4 Init	131
18.19.2.5 Release	131
18.19.2.6 WakeMe	132
18.19.2.7 WakeNext	133
18.20 Notify Class Reference	133
18.20.1 Detailed Description	133
18.20.2 Member Function Documentation	134
18.20.2.1 Init	134
18.20.2.2 Signal	134
18.20.2.3 Wait	134
18.20.2.4 Wait	134
18.20.2.5 WakeMe	134
18.21 PriorityMap Class Reference	135
18.21.1 Detailed Description	135
18.21.2 Constructor & Destructor Documentation	135
18.21.2.1 PriorityMap	135
18.21.3 Member Function Documentation	135
18.21.3.1 Clear	135
18.21.3.2 HighestPriority	136
18.21.3.3 Set	136
18.22 Profile Timer Class Reference	136
18.22.1 Detailed Description	137
18.22.2 Member Function Documentation	137
18.22.2.1 ComputeCurrentTicks	137
18.22.2.2 GetAverage	137
18.22.2.3 GetCurrent	138
18.22.2.4 Init	138
18.22.2.5 Start	138
18.22.2.6 Stop	138
18.23 Quantum Class Reference	138
18.23.1 Detailed Description	139
18.23.2 Member Function Documentation	139
	139
18.23.2.2 ClearInTimer	139
18.23.2.3 RemoveThread	139

xii CONTENTS

18.23.2.4 SetInTimer	139
18.23.2.5 SetTimer	139
18.23.2.6 UpdateTimer	139
18.24Scheduler Class Reference	140
18.24.1 Detailed Description	140
18.24.2 Member Function Documentation	141
18.24.2.1 Add	141
18.24.2.2 GetCurrentThread	141
18.24.2.3 GetNextThread	141
18.24.2.4 GetStopList	141
18.24.2.5 GetThreadList	141
18.24.2.6 Init	142
18.24.2.7 IsEnabled	142
18.24.2.8 QueueScheduler	142
18.24.2.9 Remove	142
18.24.2.10Schedule	142
18.24.2.11SetScheduler	143
18.25Semaphore Class Reference	143
18.25.1 Detailed Description	144
18.25.2 Member Function Documentation	144
18.25.2.1 GetCount	144
18.25.2.2 Init	144
18.25.2.3 Pend	145
18.25.2.4 Pend	145
18.25.2.5 Pend_i	145
18.25.2.6 Post	145
18.25.2.7 WakeMe	146
18.25.2.8 WakeNext	146
18.26Thread Class Reference	146
18.26.1 Detailed Description	149
18.26.2 Member Function Documentation	149
18.26.2.1 ContextSwitchSWI	149
18.26.2.2 Exit	149
18.26.2.3 GetCurPriority	149
18.26.2.4 GetCurrent	149
18.26.2.5 GetEventFlagMask	150
18.26.2.6 GetEventFlagMode	150
18.26.2.7 GetExpired	150
18.26.2.8 GetExtendedContext	150
18.26.2.9 GetID	150

CONTENTS xiii

18.26.2.10GetOwner	51
18.26.2.11GetPriority	51
18.26.2.12GetQuantum	51
18.26.2.13GetStack	51
18.26.2.14GetStackSize	51
18.26.2.15GetStackSlack	52
18.26.2.16GetState	52
18.26.2.17InheritPriority	52
18.26.2.18nit	52
18.26.2.19nitIdle	53
18.26.2.20SetCurrent	53
18.26.2.21SetEventFlagMask	53
18.26.2.2SetEventFlagMode	53
18.26.2.23SetExpired	53
18.26.2.24SetExtendedContext	54
18.26.2.25SetID	54
18.26.2.26SetOwner	54
18.26.2.27SetPriority	54
18.26.2.28SetPriorityBase	54
18.26.2.29SetQuantum	55
18.26.2.30SetState	55
18.26.2.31Sleep	55
18.26.2.32Start	55
18.26.2.33Stop	56
18.26.2.34USleep	56
18.26.2.35Yield	56
18.27ThreadList Class Reference	56
18.27.1 Detailed Description	57
18.27.2 Constructor & Destructor Documentation	57
18.27.2.1 ThreadList	57
18.27.3 Member Function Documentation	57
18.27.3.1 Add	57
18.27.3.2 Add	58
18.27.3.3 AddPriority	58
18.27.3.4 HighestWaiter	58
18.27.3.5 Remove	58
18.27.3.6 SetMapPointer	58
18.27.3.7 SetPriority	59
18.28ThreadPort Class Reference	59
18.28.1 Detailed Description	59

xiv **CONTENTS**

18.28.2 Member Function Documentation	160
18.28.2.1 InitStack	160
18.28.2.2 StartThreads	160
18.29Timer Class Reference	160
18.29.1 Detailed Description	162
18.29.2 Constructor & Destructor Documentation	162
18.29.2.1 Timer	162
18.29.3 Member Function Documentation	162
18.29.3.1 GetInterval	162
18.29.3.2 Init	162
18.29.3.3 IsInitialized	162
18.29.3.4 SetCallback	162
18.29.3.5 SetData	163
18.29.3.6 SetFlags	163
18.29.3.7 SetIntervalMSeconds	163
18.29.3.8 SetIntervalSeconds	163
18.29.3.9 SetIntervalTicks	163
18.29.3.10SetIntervalUSeconds	164
18.29.3.11SetOwner	164
18.29.3.12SetTolerance	164
18.29.3.13Start	164
18.29.3.14Start	164
18.29.3.15Start	166
18.29.3.16Stop	166
18.30TimerList Class Reference	166
18.30.1 Detailed Description	167
18.30.2 Member Function Documentation	167
18.30.2.1 Add	167
18.30.2.2 Init	167
18.30.2.3 Process	167
18.30.2.4 Remove	167
18.31TimerScheduler Class Reference	168
18.31.1 Detailed Description	168
18.31.2 Member Function Documentation	168
18.31.2.1 Add	168
18.31.2.2 Init	168
18.31.2.3 Process	168
18.31.2.4 Remove	169
	4
File Documentation	171

19 File Documentation

CONTENTS xv

19.1 /media/usb/project/github/Mark3/kernel/atomic.cpp File Reference	71
19.1.1 Detailed Description	71
19.2 atomic.cpp	71
19.3 /media/usb/project/github/Mark3/kernel/autoalloc.cpp File Reference	73
19.3.1 Detailed Description	73
19.4 autoalloc.cpp	73
19.5 /media/usb/project/github/Mark3/kernel/blocking.cpp File Reference	75
19.5.1 Detailed Description	75
19.6 blocking.cpp	75
19.7 /media/usb/project/github/Mark3/kernel/cpu/avr/atmega328p/gcc/kernelprofile.cpp File Reference . 1	77
19.7.1 Detailed Description	77
19.8 kernelprofile.cpp	77
19.9 /media/usb/project/github/Mark3/kernel/cpu/avr/atmega328p/gcc/kernelswi.cpp File Reference 1	78
19.9.1 Detailed Description	78
19.10kernelswi.cpp	78
19.11/media/usb/project/github/Mark3/kernel/cpu/avr/atmega328p/gcc/kerneltimer.cpp File Reference 1	79
19.11.1 Detailed Description	80
19.12kerneltimer.cpp	80
19.13/media/usb/project/github/Mark3/kernel/cpu/avr/atmega328p/gcc/public/kernelprofile.h File Reference 10.13/media/usb/project/github/Mark3/kernel/cpu/avr/atmega328p/gcc/public/kernelprofile.h File Reference 10.13/media/usb/project/github/Mark3/kernelprofile.h File Reference 10.13/media/usb/project/github/mark3/media/usb/project/github/mark3/kernelprofile.h File Reference 10.13/media/usb/project/github/mark3/kernelprofile.h File Reference 10.13/media/usb/project/github/mark3/kernelprofile.h File Reference 10.13/media/usb/project/github/mark3/kernelprofile.h File Reference 10.13/media/usb/project/github/mark3/media/usb/project	82
19.13.1 Detailed Description	82
19.14kernelprofile.h	83
19.15/media/usb/project/github/Mark3/kernel/cpu/avr/atmega328p/gcc/public/kernelswi.h File Reference 19.15/media/usb/project/github/Mark3/kernel/cpu/avr/atmega328p/gcc/public/kernelswi.h File Reference	83
19.15.1 Detailed Description	83
19.16kernelswi.h	84
19.17/media/usb/project/github/Mark3/kernel/cpu/avr/atmega328p/gcc/public/kerneltimer.h File Reference 18.17/media/usb/project/github/Mark3/kernel/cpu/avr/atmega328p/gcc/public/kerneltimer.h File Reference 18.17/media/usb/project/github/mark3/kernel/cpu/avr/atmega328p/gcc/public/k	84
19.17.1 Detailed Description	84
19.18kerneltimer.h	84
19.19/media/usb/project/github/Mark3/kernel/cpu/avr/atmega328p/gcc/public/portcfg.h File Reference 18	85
19.19.1 Detailed Description	86
19.19.2 Macro Definition Documentation	86
19.19.2.1 AVR	86
19.19.2.2 K_WORD	86
19.19.2.3 PORT_PRIO_TYPE	86
19.19.2.4 PORT_SYSTEM_FREQ	87
19.19.2.5 PORT_TIMER_COUNT_TYPE	87
19.19.2.6 PORT_TIMER_FREQ	87
19.20portcfg.h	87
19.21/media/usb/project/github/Mark3/kernel/cpu/avr/atmega328p/gcc/public/threadport.h File Reference 19.21/media/usb/project/github/Mark3/kernel/cpu/avr/atmega328p/gcc/public/threadport.h File Reference	88
19.21.1 Detailed Description	88
19.21.2 Macro Definition Documentation	89

xvi CONTENTS

19.21.2.1 CS_ENTER	89
19.21.3 Function Documentation	89
19.21.3.1mark3_clz8	89
19.22threadport.h	89
19.23/media/usb/project/github/Mark3/kernel/cpu/avr/atmega328p/gcc/threadport.cpp File Reference 19	91
19.23.1 Detailed Description	92
19.24threadport.cpp	92
19.25/media/usb/project/github/Mark3/kernel/driver.cpp File Reference	94
19.25.1 Detailed Description	94
19.26driver.cpp	94
19.27/media/usb/project/github/Mark3/kernel/eventflag.cpp File Reference	95
19.27.1 Detailed Description	95
19.28 eventflag.cpp	96
19.29/media/usb/project/github/Mark3/kernel/kernel.cpp File Reference	00
19.29.1 Detailed Description	00
19.30kernel.cpp	00
19.31/media/usb/project/github/Mark3/kernel/kernelaware.cpp File Reference	01
19.31.1 Detailed Description	02
19.32kernelaware.cpp	02
19.33/media/usb/project/github/Mark3/kernel/ksemaphore.cpp File Reference	03
19.33.1 Detailed Description	04
19.34ksemaphore.cpp	04
19.35/media/usb/project/github/Mark3/kernel/II.cpp File Reference	07
19.35.1 Detailed Description	07
19.36ll.cpp	
19.37/media/usb/project/github/Mark3/kernel/mailbox.cpp File Reference	09
19.37.1 Detailed Description	
19.38mailbox.cpp	10
19.39/media/usb/project/github/Mark3/kernel/message.cpp File Reference	
19.39.1 Detailed Description	
19.40message.cpp	13
19.41/media/usb/project/github/Mark3/kernel/mutex.cpp File Reference	
19.41.1 Detailed Description	
19.42mutex.cpp	
19.43/media/usb/project/github/Mark3/kernel/notify.cpp File Reference	
19.43.1 Detailed Description	
19.44notify.cpp	
19.45/media/usb/project/github/Mark3/kernel/priomap.cpp File Reference	
19.45.1 Detailed Description	
19.46priomap.cpp	22

CONTENTS xvii

19.47/media/usb/project/github/Mark3/kernel/profile.cpp File Reference
19.47.1 Detailed Description
19.48profile.cpp
19.49/media/usb/project/github/Mark3/kernel/public/atomic.h File Reference
19.49.1 Detailed Description
19.50atomic.h
19.51/media/usb/project/github/Mark3/kernel/public/autoalloc.h File Reference
19.51.1 Detailed Description
19.52autoalloc.h
19.53/media/usb/project/github/Mark3/kernel/public/blocking.h File Reference
19.53.1 Detailed Description
19.54blocking.h
19.55/media/usb/project/github/Mark3/kernel/public/buffalogger.h File Reference
19.55.1 Detailed Description
19.56buffalogger.h
19.57/media/usb/project/github/Mark3/kernel/public/driver.h File Reference
19.57.1 Detailed Description
19.57.2 Intro
19.57.3 Driver Design
19.57.4 Driver API
19.58driver.h
19.59/media/usb/project/github/Mark3/kernel/public/eventflag.h File Reference
19.59.1 Detailed Description
19.60 eventflag.h
19.61/media/usb/project/github/Mark3/kernel/public/kernel.h File Reference
19.61.1 Detailed Description
19.62kernel.h
19.63/media/usb/project/github/Mark3/kernel/public/kernelaware.h File Reference
19.63.1 Detailed Description
19.63.2 Enumeration Type Documentation
19.63.2.1 KernelAwareCommand_t
19.64kernelaware.h
19.65/media/usb/project/github/Mark3/kernel/public/kerneldebug.h File Reference
19.65.1 Detailed Description
19.66kerneldebug.h
19.67/media/usb/project/github/Mark3/kernel/public/kerneltypes.h File Reference
19.67.1 Detailed Description
19.67.2 Enumeration Type Documentation
19.67.2.1 EventFlagOperation_t
19.68kerneltypes.h

xviii CONTENTS

19.69/media/usb/project/github/Mark3/kernel/public/ksemaphore.h File Reference
19.69.1 Detailed Description
19.70ksemaphore.h
19.71/media/usb/project/github/Mark3/kernel/public/II.h File Reference
19.71.1 Detailed Description
19.72II.h
19.73/media/usb/project/github/Mark3/kernel/public/mailbox.h File Reference
19.73.1 Detailed Description
19.74mailbox.h
19.75/media/usb/project/github/Mark3/kernel/public/manual.h File Reference
19.75.1 Detailed Description
19.76manual.h
19.77/media/usb/project/github/Mark3/kernel/public/mark3.h File Reference
19.77.1 Detailed Description
19.78mark3.h
19.79/media/usb/project/github/Mark3/kernel/public/mark3cfg.h File Reference
19.79.1 Detailed Description
19.79.2 Macro Definition Documentation
19.79.2.1 GLOBAL_MESSAGE_POOL_SIZE
19.79.2.2 KERNEL_AWARE_SIMULATION
19.79.2.3 KERNEL_EXTRA_CHECKS
19.79.2.4 KERNEL_NUM_PRIORITIES
19.79.2.5 KERNEL_TIMERS_MINIMUM_DELAY_US
19.79.2.6 KERNEL_TIMERS_THREADED
19.79.2.7 KERNEL_TIMERS_TICKLESS
19.79.2.8 KERNEL_USE_ATOMIC
19.79.2.9 KERNEL_USE_AUTO_ALLOC
19.79.2.10KERNEL_USE_DYNAMIC_THREADS
19.79.2.11KERNEL_USE_EVENTFLAG
19.79.2.12KERNEL_USE_IDLE_FUNC
19.79.2.13KERNEL_USE_MAILBOX
19.79.2.14KERNEL_USE_MESSAGE
19.79.2.15KERNEL_USE_PROFILER
19.79.2.16KERNEL_USE_QUANTUM
19.79.2.17KERNEL_USE_SEMAPHORE
19.79.2.18KERNEL_USE_STACK_GUARD
19.79.2.19KERNEL_USE_THREAD_CALLOUTS
19.79.2.20KERNEL_USE_THREADNAME
19.79.2.21KERNEL_USE_TIMEOUTS
19.79.2.22KERNEL_USE_TIMERS

CONTENTS xix

19.79.2.23SAFE_UNLINK
19.79.2.24THREAD_QUANTUM_DEFAULT
19.80mark3cfg.h
19.81/media/usb/project/github/Mark3/kernel/public/message.h File Reference
19.81.1 Detailed Description
19.81.2 using Messages, Queues, and the Global Message Pool
19.82message.h
19.83/media/usb/project/github/Mark3/kernel/public/mutex.h File Reference
19.83.1 Detailed Description
19.83.2 Initializing
19.83.3 Resource protection example
19.84mutex.h
19.85/media/usb/project/github/Mark3/kernel/public/notify.h File Reference
19.85.1 Detailed Description
19.86notify.h
19.87/media/usb/project/github/Mark3/kernel/public/paniccodes.h File Reference
19.87.1 Detailed Description
19.88paniccodes.h
19.89/media/usb/project/github/Mark3/kernel/public/priomap.h File Reference
19.89.1 Detailed Description
19.90priomap.h
19.91/media/usb/project/github/Mark3/kernel/public/profile.h File Reference
19.91.1 Detailed Description
19.92profile.h
19.93/media/usb/project/github/Mark3/kernel/public/quantum.h File Reference
19.93.1 Detailed Description
19.94quantum.h
19.95/media/usb/project/github/Mark3/kernel/public/scheduler.h File Reference
19.95.1 Detailed Description
19.96scheduler.h
19.97/media/usb/project/github/Mark3/kernel/public/thread.h File Reference
19.97.1 Detailed Description
19.98thread.h
19.99/media/usb/project/github/Mark3/kernel/public/threadlist.h File Reference
19.99.1 Detailed Description
19.10 c hreadlist.h
19.10/media/usb/project/github/Mark3/kernel/public/timer.h File Reference
19.101. Detailed Description
19.101.2Macro Definition Documentation
19.101.2.1TIMERLIST_FLAG_EXPIRED

CONTENTS

19.101.3Typedef Documentation	276
19.101.3.1TimerCallback_t	276
19.10 2 mer.h	276
19.102media/usb/project/github/Mark3/kernel/public/timerlist.h File Reference	278
19.103. Detailed Description	278
19.10 4 merlist.h	278
19.105media/usb/project/github/Mark3/kernel/public/timerscheduler.h File Reference	279
19.105. Detailed Description	279
19.10 6 merscheduler.h	280
19.107/media/usb/project/github/Mark3/kernel/public/tracebuffer.h File Reference	280
19.107. Detailed Description	280
19.10 8 *acebuffer.h	280
19.10@media/usb/project/github/Mark3/kernel/quantum.cpp File Reference	281
19.109. Detailed Description	281
19.11 q uantum.cpp	281
19.111/media/usb/project/github/Mark3/kernel/scheduler.cpp File Reference	283
19.111. Detailed Description	283
19.11 2 cheduler.cpp	284
19.112media/usb/project/github/Mark3/kernel/thread.cpp File Reference	285
19.113. Detailed Description	285
19.11#hread.cpp	285
19.115media/usb/project/github/Mark3/kernel/threadlist.cpp File Reference	292
19.115. Detailed Description	292
19.11 6 hreadlist.cpp	292
19.117/media/usb/project/github/Mark3/kernel/timer.cpp File Reference	294
19.117. Detailed Description	294
19.118mer.cpp	294
19.11@media/usb/project/github/Mark3/kernel/timerlist.cpp File Reference	297
19.119. Detailed Description	297
19.12 6 merlist.cpp	297
19.12/media/usb/project/github/Mark3/kernel/tracebuffer.cpp File Reference	300
19.121. Detailed Description	300
19.12Pracebuffer.cpp	301
19.123media/usb/project/github/Mark3/libs/mark3c/public/fake_types.h File Reference	302
19.123. Detailed Description	302
19.12 f ake_types.h	302
19.125media/usb/project/github/Mark3/libs/mark3c/public/mark3c.h File Reference	304
19.125. Detailed Description	305
19.125. Function Documentation	306
19.125.2.1Kernel_Init	306

CONTENTS xxi

	19.125.2.2Kernel_IsPanic	306
	19.125.2.3Kernel_lsStarted	306
	19.125.2.4Kernel_Panic	306
	19.125.2.5Kernel_SetPanic	306
	19.125.2.6Kernel_Start	307
	19.125.2.7Scheduler_Enable	307
	19.125.2.8Scheduler_GetCurrentThread	307
	19.125.2.9Scheduler_IsEnabled	307
	19.125.2.1 0 hread_GetCurPriority	307
	19.125.2.1Thread_GetID	308
	19.125.2.12hread_GetPriority	308
	19.125.2.18hread_GetStackSlack	308
	19.125.2.14hread_GetState	309
	19.125.2.1 B hread_Init	309
	19.125.2.16hread_SetID	309
	19.125.2.17/hread_SetPriority	309
	19.125.2.18hread_Start	310
	19.125.2.179hread_Stop	310
	19.125.2.20hread_Yield	310
	19.12 6 nark3c.h	310
20	Example Documentation	317
20	20.1 buffalogger/main.cpp	
	20.2 lab10_notifications/main.cpp	
	20.3 lab11_mailboxes/main.cpp	
	20.4 lab1_kernel_setup/main.cpp	
	20.5 lab2_idle_function/main.cpp	
	20.6 lab3_round_robin/main.cpp	
	20.7 lab4_semaphores/main.cpp	
	20.8 lab5_mutexes/main.cpp	
	20.9 lab6_timers/main.cpp	
	20.10lab7_events/main.cpp	
	20.11lab8_messages/main.cpp	
	20.12lab9_dynamic_threads/main.cpp	
	20.12.abb_ayriamio_uneado/mam.opp	. 555
Inc	lev	330

Chapter 1

The Mark3 Realtime Kernel



The Mark3 Realtime Kernel is a completely free, open-source, real-time operating system aimed at bringing powerful, easy-to-use multitasking to microcontroller systems without MMUs.

It uses modern programming languages and concepts to minimize code duplication, and its object-oriented design enhances readibility. The API is simple – in six function calls, you can set up the kernel, initialize two threads, and start the scheduler.

The source is fully-documented with example code provided to illustrate concepts. The result is a performant RTOS, which is easy to read, easy to understand, and easy to extend to fit your needs.

But Mark3 is bigger than just a real-time kernel, it also contains a number of class-leading features:

- Native implementation in C++, with C-language bindings.
- · Device driver HAL which provides a meaningful abstraction around device-specific peripherals.
- CMake-based build system which can be used to build all libraries, examples, tests, documentation, and user-projects for any number of targets from the command-line.
- Graphics and UI code designed to simplify the implementation of systems using displays, keypads, joysticks, and touchscreens
- · Robust and deterministic dynamic memory management libraries
- · A Variety of general-purpose libraries to speed up embedded app development
- Emulator-aware debugging via the flAVR AVR emulator
- A bulletproof, well-documented bootloader for AVR microcontrollers Support for kernel-aware simulators, incluing Funkenstein's own flAVR.

The	Mark3	Realtime	Kerne
1116	IVIAI NO	neamme	Keille

Chapter 2

License

2.1 License

Copyright (c) 2012 - 2017, Funkenstein Software Consulting All rights reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

- Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
- Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
- Neither the name of Funkenstein Software Consulting, nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission.

.

THIS SOFTWARE IS PROVIDED BY THE COPYRIGHT HOLDERS AND CONTRIBUTORS "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL FUNKENSTEIN SOFTWARE AND/OR ITS CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

License

Chapter 3

Configuring The Mark3 Kernel

3.1 Overview

The Mark3 Kernel features a large number of compile-time options that can be set by the user. In this way, the user can build a custom OS kernel that provides only the necessary feature set required by the application, and reduce the code and data requirements of the kernel.

Care has been taken to ensure that all valid combinations of features can be enabled or disabled, barring direct dependencies.

When Mark3 is built, the various compile-time definitions are used to alter how the kernel is compiled, and include or exclude various bits and pieces in order to satisfy the requirements of the selected features. As a result, the kernel must be rebuilt whenever changes are made to the configuration header.

Note that not all demos, libraries, and tests will build successfully if the prerequisite features are not included.

Kernel options are set by modifying mark3cfg.h, located within the /kernel/public folder.

In the following sections, we will discuss the various configuration options, grouped by functionality.

3.2 Timer Options

KERNEL_USE_TIMERS

This option is related to all kernel time-tracking:

- Timers provide a way for events to be periodically triggered in a lightweight manner. These can be periodic, or one-shot.
- Thread Quantum (usedd for round-robin scheduling) is dependent on this module, as is Thread Sleep functionality.

Setting this option to 0 disables all timer-based functionality within the kernel.

KERNEL_TIMERS_TICKLESS

If you've opted to use the kernel timers module, you have an option as to which timer implementation to use: Tick-based or Tick-less.

Tick-based timers provide a "traditional" RTOS timer implementation based on a fixed-frequency timer interrupt. While this provides very accurate, reliable timing, it also means that the CPU is being interrupted far more often than may be necessary (as not all timer ticks result in "real work" being done).

Tick-less timerLs still rely on a hardware timer interrupt, but uses a dynamic expiry interval to ensure that the interrupt is only called when the next timer expires. This increases the complexity of the timer interrupt handler, but reduces the number and frequency.

Note that the CPU port (kerneltimer.cpp) must be implemented for the particular timer variant desired.

Set this option to 1 to use the tickless timer implementation, 0 to use the traditional tick-based approach. Tickless timers are a bit more heavy weight (larger code footprint), but can yield significant power savings as the CPU does not need to wake up at a fixed, high frequency.

KERNEL USE TIMEOUTS

By default, if you opt to enable kernel timers, you also get timeout- enabled versions of the blocking object APIs along with it. This support comes at a small cost to code size, but a slightly larger cost to realtime performance - as checking for the use of timers in the underlying internal code costs some cycles.

As a result, the option is given to the user here to manually disable these timeout-based APIs if desired by the user for performance and code-size reasons.

Set this option to 1 to enable timeout-based APIs for blocking calls.

KERNEL USE QUANTUM

Do you want to enable time quanta? This is useful when you want to have tasks in the same priority group share time in a controlled way. This allows equal tasks to use unequal amounts of the CPU, which is a great way to set up CPU budgets per thread in a round-robin scheduling system. If enabled, you can specify a number of ticks that serves as the default time period (quantum). Unless otherwise specified, every thread in a priority will get the default quantum.

Set this option to 1 to enable round-robin scheduling.

THREAD_QUANTUM_DEFAULT

This value defines the default thread quantum when KERNEL_USE_QUANTUM is enabled. The value defined is a time in milliseconds.

KERNEL USE SLEEP

This define enables the Thread::Sleep() API, which allows a thread to suspend its operation for a defined length of time, specified in ms.

3.3 Blocking Objects

KERNEL_USE_NOTIFY

This is a simple blocking object, where a thread (or threads) are guaranteed to block until an asynchronous event signals the object.

KERNEL_USE_SEMAPHORE

Do you want the ability to use counting/binary semaphores for thread synchronization? Enabling this features provides fully-blocking semaphores and enables all API functions declared in semaphore.h. If you have to pick one blocking mechanism, this is the one to choose.

Note that all IPC mechanisms (mailboxes, messages) rely on semaphores, so keep in mind that this is a prerequisite for many other features in the kernel.

KERNEL_USE_MUTEX

Do you want the ability to use mutual exclusion semaphores (mutex) for resource/block protection? Enabling this feature provides mutexes, with priority inheritence, as declared in mutex.h.

KERNEL USE EVENTFLAG

Provides additional event-flag based blocking. This relies on an additional per-thread flag-mask to be allocated, which adds 2 bytes to the size of each thread object.

3.4 Inter-process/thread Communication

KERNEL USE MESSAGE

Enable inter-thread messaging using message queues. This is the preferred mechanism for IPC for serious multithreaded communications; generally anywhere a semaphore or event-flag is insufficient.

GLOBAL MESSAGE POOL SIZE

If Messages are enabled, define the size of the default kernel message pool. Messages can be manually added to the message pool, but this mechansims is more convenient and automatic. All message queues can share their message objects from this global pool to maximize efficiency and simplify data management.

KERNEL_USE_MAILBOX

Enable inter-thread messaging using mailboxes. A mailbox manages a blob of data provided by the user, that is partitioned into fixed-size blocks called envelopes. The size of an envelope is set by the user when the mailbox is initialized. Any number of threads can read-from and write-to the mailbox. Envelopes can be sent-to or received-from the mailbox at the head or tail. In this way, mailboxes essentially act as a circular buffer that can be used as a blocking FIFO or LIFO queue.

3.5 Debug Features

KERNEL USE THREADNAME

Provide Thread method to allow the user to set a name for each thread in the system. Adds a const char* pointer to the size of the thread object.

KERNEL USE DEBUG

Provides extra logic for kernel debugging, and instruments the kernel with extra asserts, and kernel trace functionality.

KERNEL_ENABLE_LOGGING

Set this to 1 to enable very chatty kernel logging. Since most important things in the kernel emit logs, a large log-buffer and fast output are required in order to keep up. This is a pretty advanced power-user type feature, so it's disabled by default.

KERNEL_ENABLE_USER_LOGGING

This enables a set of logging macros similar to the kernel-logging macros; however, these can be enabled or disabled independently. This allows for user-code to benefit from the built-in kernel logging macros without having to account for the super-high-volume of logs generated by kernel code.

KERNEL_EXTRA_CHECKS

This option provides extra safety checks within the kernel APIs in order to minimize the potential for unsafe operations. This is especially helpful during development, and can help catch problems at development time, instead of in the field.

KERNEL USE STACK GUARD

This feature, when enabled, tells the kernel to check whether any Thread's stack has been exhausted (or slack falls below a certain safety threshold) before executing each context switch. Enabling this is the most effective means to guard against stack corruption and stack overflow in the kernel, at the cost of increased context

3.6 Enhancements, Security, Miscellaneous

KERNEL_USE_DRIVER

Enabling device drivers provides a posix-like filesystem interface for peripheral device drivers.

KERNEL_USE_DYNAMIC_THREADS

Provide extra Thread methods to allow the application to create (and more importantly destroy) threads at runtime. useful for designs implementing worker threads, or threads that can be restarted after encountering error conditions.

KERNEL USE PROFILER

Provides extra classes for profiling the performance of code. useful for debugging and development, but uses an additional hardware timer.

KERNEL USE ATOMIC

Provides support for atomic operations, including addition, subtraction, set, and test-and-set. Add/Sub/Set contain 8, 16, and 32-bit variants.

SAFE_UNLINK

"Safe unlinking" performs extra checks on data to make sure that there are no consistencies when performing operations on linked lists. This goes beyond pointer checks, adding a layer of structural and metadata validation to help detect system corruption early.

KERNEL AWARE SIMULATION

Include support for kernel-aware simulation. Enabling this feature adds advanced profiling, trace, and environment-aware debugging and diagnostic functionality when Mark3-based applications are run on the flAVR AVR simulator.

KERNEL USE IDLE FUNC

Enabling this feature removes the necessity for the user to dedicate a complete thread for idle functionality. This saves a full thread stack, but also requires a bit extra static data. This also adds a slight overhead to the context switch and scheduler, as a special case has to be taken into account.

KERNEL USE AUTO ALLOC

This feature enables an additional set of APIs that allow for objects to be created on-the-fly out of a special heap, without having to explicitly allocate them (from stack, heap, or static memory). Note that auto-alloc memory cannot be reclaimed.

AUTO_ALLOC_SIZE

Size (in bytes) of the static pool of memory reserved from RAM for use by the auto allocator (if enabled).

KERNEL USE THREAD CALLOUTS

This feature provides additional kernel APIs to register callout functions that are activated when threads are created or exited. This is useful for implementing low-level instrumentation based on information held in the threads.

KERNEL_USE_EXTENDED_CONTEXT

Allocate an extra pointer's worth of storage within a Thread object (and corresponding accessor methods) to provide the user with a means to implement arbitrary Thread-local storage.

Chapter 4

Building Mark3

4.1 Source Layout

One key aspect of Mark3 is that system features are organized into their own separate modules. These modules are further grouped together into folders based on the type of features represented:

```
Base folder, contains license info and build system configuration
Root
  arduino
                 Arduino-specific headers and API documentation files
  bootloader
                  Mark3 Bootloader code for AVR microcontrollers
  build Device-specific toolchain configuration files for various platforms
docs Documentation (pdf + html)
  drivers
                  Device driver code for various supported devices
  example Example applications
                 Platform specific output folder, used when running export.sh
                Bitmap fonts converted from TTF, used by Mark3 graphics library
Build output directory
Basic Mark3 Components (the focus of this manual)
  fonts
  kbuild
  cpu CPU-specific porting code
scripts Scripts used to simplify build, documentation, and profiling
libs Utility code and services, extended system features
  libs
                Unit tests, written as C/C++ applications
Host utilities - including a ttf font converter and device programmer
  tests
  util
```

4.2 Toolchain Integration

Mark3 supports a variety of GCC ports out of the box - however, depending on your host OS and target processor, there may be some effort required to tie the toolchain into the build system.

After installing your toolchain of choice, you must make sure that the main toolchain binary paths are set in your systems PATH environment variable, ensuring that they are accessible directly from the command-line. Without this step, the build configuration step (cmake) will inevitably fail.

Depending on your toolchain, you may also be required to add toolchain-specific include directories to the build flags. These flags can be added to the cmake variables defined in /build/<cpu>/<variant>/<toolchain>/platform.cmake for your target architecture.

4.3 Installing Dependencies

The Mark3 build system uses CMake (3.4.2 or above) for configuration management, and Ninja to execute the build steps. The combination of these two tools results in exceptionally fast builds - so fast that the previous makefile build system was scrapped in its favor.

These tools are readily available for most common host operating systems.

10 Building Mark3

CMake can be found here: https://cmake.org Ninja can be found here: https://ninja-build.org

4.4 Building Mark3 Kernel and Libraries

Once a sane environment has been created, the kernel, libraries, examples and tests can be built by running ./scripts/build.sh from the root directory. By default, Mark3 builds for the atmega328p target, but the target can be selected by manually configuring the above environment variables, or by running the included ./scripts/set_target.sh script as follows:

```
./scripts/set target.sh <architecture> <variant> <toolchain>
```

Where:

```
<architecture> is the target CPU architecture(i.e. avr, msp430, cm0, cm3, cm4f)
<variant> is the part name (i.e. atmega328p, msp430f2274, generic)
<toolchain> is the build toolchain (i.e. gcc)
```

This script is a thin wrapper for the cmake configuration commands, and clears the kbuild output directory before re-initializing cmake for the selected target.

To build the Mark3 kernel and middleware libraries for a generic ARM Cortex-M0 using a pre-configured arm-none-eabi-gcc toolchain, one would run the following commands:

```
./scripts/set_target.sh cm0 generic gcc
./scripts/build.sh
```

To peform an incremental build, go into the cmake build directory (kbuild) and simply run 'ninja'.

Note that not all libraries/tests/examples will build in all kernel configurations. The default kernel configuration may need adjustment/tweaking to support a specific part. See CMakeLists.txt and mark3cfg.h respectively for more information

4.5 Exporting the kernel source

While the build system is flexible enough to adapt to any toolchain, it may be desireable to integrate the Mark3 kernel and associated drivers/libraries into another build system.

Mark3 provides a script (the aptly-named export.sh) which allow for the source for any supported port to be exported for this purpose. This script will also generate appropriate doxygen documentation, and package the whole of it together in a zip file. The files in the archive are placed in a "flat" heirarchy, and do not require any specific path structure to be maintained when imported into another build system.

As a special feature, if the "arduino" AVR target is specified, additional pre-processing is done on the source to turn the standard Mark3 kernel into a library that can be imported directly into Arudino IDE. This is also how the official Mark3 arduino-compatible releases are generated (hosted on mark3os.com and sourceforge.net)

To exercise the build system, type the following from the main mark3 embedded source directory:

```
> ./scripts/export.sh <target>
```

Where:

Target is one of the following:

```
atmega328p
atmega644
atmega1280
atmega2560
atmega1284p
```

atxmega256a3 arduino arduino2560 cortex_m0 cortex_m3 cortex_m4f msp430f2274

If successful, the generated artifacats will be placed in an output folder under the ./export directory.

Additionally, if doxygen is found on the host system's PATH, a copy of the manual (using the specific port's source code) will be generated and archived with the source release. If pdflatex is also found on the host's PATH, a PDF copy of the manual will be generated, tailored to the selected target.

12 **Building Mark3**

Chapter 5

Getting Started With The Mark3 API

5.1 Kernel Setup

This section details the process of defining threads, initializing the kernel, and adding threads to the scheduler.

If you're at all familiar with real-time operating systems, then these setup and initialization steps should be familiar. I've tried very hard to ensure that as much of the heavy lifting is hidden from the user, so that only the bare minimum of calls are required to get things started.

The examples presented in this chapter are real, working examples taken from the ATmega328p port.

First, you'll need to create the necessary data structures and functions for the threads:

- 1. Create a Thread object for all of the "root" or "initial" tasks.
- 2. Allocate stacks for each of the Threads
- 3. Define an entry-point function for each Thread

This is shown in the example code below:

```
#include "thread.h"
#include "kernel.h"

//1) Create a thread object for all of the "root" or "initial" tasks
static Thread AppThread;
static Thread IdleThread;

//2) Allocate stacks for each thread
#define STACK_SIZE_APP (192)
#define STACK_SIZE_IDLE (128)

static uint8_t aucAppStack[STACK_SIZE_APP];
static uint8_t aucIdleStack[STACK_SIZE_IDLE];

//3) Define entry point functions for each thread
void AppThread(void);
void IdleThread(void);
```

Next, we'll need to add the required kernel initialization code to main. This consists of running the Kernel's init routine, initializing all of the threads we defined, adding the threads to the scheduler, and finally calling Kernel::

Start(), which transfers control of the system to the RTOS.

These steps are illustrated in the following example.

```
AppThread. Init ( aucAppStack,
                                     // Pointer to the stack
                STACK_SIZE_APP, // Size of
1, // Thread priority
                                      // Size of the stack
                 (void*)AppEntry, // Entry function
                                     // Entry function argument
                NULL );
                  IdleThread.Init( aucIdleStack,
                  O, // Thread priority
(void*)IdleEntry, // Entry function
NULL); // Entry function argument
                 NULL );
//3) Add the threads to the scheduler
AppThread.Start();
                            // Actively schedule the threads
IdleThread.Start();
//4) Give control of the system to the kernel
Kernel::Start();
                             // Start the kernel!
```

Not much to it, is there? There are a few noteworthy points in this code, though.

In order for the kernel to work properly, a system must always contain an idle thread; that is, a thread at priority level 0 that never blocks. This thread is responsible for performing any of the low-level power management on the CPU in order to maximize battery life in an embedded device. The idle thread must also never block, and it must never exit. Either of these operations will cause undefined behavior in the system.

The App thread is at a priority level greater-than 0. This ensures that as long as the App thread has something useful to do, it will be given control of the CPU. In this case, if the app thread blocks, control will be given back to the Idle thread, which will put the CPU into a power-saving mode until an interrupt occurs.

Stack sizes must be large enough to accommodate not only the requirements of the threads, but also the requirements of interrupts - up to the maximum interrupt-nesting level used. Stack overflows are super-easy to run into in an embedded system; if you encounter strange and unexplained behavior in your code, chances are good that one of your threads is blowing its stack.

5.2 Threads

Mark3 Threads act as independent tasks in the system. While they share the same address-space, global data, device-drivers, and system peripherals, each thread has its own set of CPU registers and stack, collectively known as the thread's **context**. The context is what allows the RTOS kernel to rapidly switch between threads at a high rate, giving the illusion that multiple things are happening in a system, when really, only one thread is executing at a time.

5.2.1 Thread Setup

Each instance of the Thread class represents a thread, its stack, its CPU context, and all of the state and metadata maintained by the kernel. Before a Thread will be scheduled to run, it must first be initialized with the necessary configuration data.

The Init function gives the user the opportunity to set the stack, stack size, thread priority, entry-point function, entry-function argument, and round-robin time quantum:

Thread stacks are pointers to blobs of memory (usually char arrays) carved out of the system's address space. Each thread must have a stack defined that's large enough to handle not only the requirements of local variables in the thread's code path, but also the maximum depth of the ISR stack.

Priorities should be chosen carefully such that the shortest tasks with the most strict determinism requirements are executed first - and are thus located in the highest priorities. Tasks that take the longest to execute (and require the least degree of responsiveness) must occupy the lower thread priorities. The idle thread must be the only thread occupying the lowest priority level.

The thread quantum only aplies when there are multiple threads in the ready queue at the same priority level. This interval is used to kick-off a timer that will cycle execution between the threads in the priority list so that they each get a fair chance to execute.

5.3 Timers 15

The entry function is the function that the kernel calls first when the thread instance is first started. Entry functions have at most one argument - a pointer to a data-object specified by the user during initialization.

An example thread initallization is shown below:

Once a thread has been initialized, it can be added to the scheduler by calling:

```
clMyThread.Start();
```

The thread will be placed into the Scheduler's queue at the designated priority, where it will wait its turn for execution.

5.2.2 Entry Functions

Mark3 Threads should not run-to-completion - they should execute as infinite loops that perform a series of tasks, appropriately partitioned to provide the responsiveness characteristics desired in the system.

The most basic Thread loop is shown below:

Threads can interact with eachother in the system by means of synchronization objects (Semaphore), mutual-exclusion objects (Mutex), Inter-process messaging (MessageQueue), and timers (Timer).

Threads can suspend their own execution for a predetermined period of time by using the static Thread::Sleep() method. Calling this will block the Thread's executin until the amount of time specified has ellapsed. Upon expiry, the thread will be placed back into the ready queue for its priority level, where it awaits its next turn to run.

5.3 Timers

Timer objects are used to trigger callback events periodic or on a one-shot (alarm) basis.

While extremely simple to use, they provide one of the most powerful execution contexts in the system. The timer callbacks execute from within the timer callback ISR in an interrupt-enabled context. As such, timer callbacks are considered higher-priority than any thread in the system, but lower priority than other interrupts. Care must be taken to ensure that timer callbacks execute as quickly as possible to minimize the impact of processing on the throughput of tasks in the system. Wherever possible, heavy-lifting should be deferred to the threads by way of semaphores or messages.

Below is an example showing how to start a periodic system timer which will trigger every second:

5.4 Semaphores

Semaphores are used to synchronized execution of threads based on the availability (and quantity) of application-specific resources in the system. They are extremely useful for solving producer-consumer problems, and are the method-of-choice for creating efficient, low latency systems, where ISRs post semaphores that are handled from within the context of individual threads. (Yes, Semaphores can be posted - but not pended - from the interrupt context).

The following is an example of the producer-consumer usage of a binary semaphore:

```
Semaphore clSemaphore; // Declare a semaphore shared between a producer and a consumer thread.

void Producer()
{
    clSemaphore.Init(0, 1);
    while(1)
    {
        // Do some work, create something to be consumed

            // Post a semaphore, allowing another thread to consume the data
            clSemaphore.Post();
    }
}

void Consumer()
{
    // Assumes semaphore initialized before use...
    While(1)
    {
            // Wait for new data from the producer thread
            clSemaphore.Pend();

            // Consume the data!
    }
}
```

And an example of using semaphores from the ISR context to perform event- driven processing.

```
Semaphore clSemaphore;
__interrupt__ MyISR()
{
    clSemaphore.Post(); // Post the interrupt. Lightweight when uncontested.
}

void MyThread()
{
    clSemaphore.Init(0, 1); // Ensure this is initialized before the MyISR interrupt is enabled.
    while(1)
    {
        // Wait until we get notification from the interrupt
        clSemaphore.Pend();
        // Interrupt has fired, do the necessary work in this thread's context
        HeavyLifting();
    }
}
```

5.5 Mutexes 17

5.5 Mutexes

Mutexes (Mutual exclusion objects) are provided as a means of creating "protected sections" around a particular resource, allowing for access of these objects to be serialized. Only one thread can hold the mutex at a time - other threads have to wait until the region is released by the owner thread before they can take their turn operating on the protected resource. Note that mutexes can only be owned by threads - they are not available to other contexts (i.e. interrupts). Calling the mutex APIs from an interrupt will cause catastrophic system failures.

Note that these objects are also not recursive- that is, the owner thread can not attempt to claim a mutex more than once.

Priority inheritence is provided with these objects as a means to avoid priority inversions. Whenever a thread at a priority than the mutex owner blocks on a mutex, the priority of the current thread is boosted to the highest-priority waiter to ensure that other tasks at intermediate priorities cannot artificically prevent progress from being made.

Mutex objects are very easy to use, as there are only three operations supported: Initialize, Claim and Release. An example is shown below.

```
Mutex clMutex; // Create a mutex globally.
void Init()
    // Initialize the mutex before use.
    clMutex.Init();
// Some function called from a thread
void Thread1Function()
    clMutex.Claim();
    \ensuremath{//} Once the mutex is owned, no other thread can
    \ensuremath{//} enter a block protect by the same mutex
    my_protected_resource.do_something();
   my_protected_resource.do_something_else();
    clMutex.Release();
// Some function called from another thread
void Thread2Function()
    clMutex.Claim();
    // Once the mutex is owned, no other thread can
    // enter a block protect by the same mutex
    my_protected_resource.do_something();
    my_protected_resource.do_different_things();
    clMutex.Release();
```

5.6 Event Flags

Event Flags are another synchronization object, conceptually similar to a semaphore.

Unlike a semaphore, however, the condition on which threads are unblocked is determined by a more complex set of rules. Each Event Flag object contains a 16-bit field, and threads block, waiting for combinations of bits within this field to become set.

A thread can wait on any pattern of bits from this field to be set, and any number of threads can wait on any number of different patterns. Threads can wait on a single bit, multiple bits, or bits from within a subset of bits within the field

As a result, setting a single value in the flag can result in any number of threads becoming unblocked simultaneously. This mechanism is extremely powerful, allowing for all sorts of complex, yet efficient, thread synchronization schemes that can be created using a single shared object.

Note that Event Flags can be set from interrupts, but you cannot wait on an event flag from within an interrupt.

Examples demonstrating the use of event flags are shown below.

```
/\!/ Simple example showing a thread blocking on a multiple bits in the /\!/ fields within an event flag.
EventFlag clEventFlag;
int main()
    clEventFlag.Init(); // Initialize event flag prior to use
void MyInterrupt()
    // Some interrupt corresponds to event 0x0020
    clEventFlag.Set (0x0020);
void MyThreadFunc()
    while(1)
        uint16 t u16WakeCondition;
        // Allow this thread to block on multiple flags
        u16WakeCondition = clEventFlag.Wait(0x00FF, EVENT_FLAG_ANY);
         // Clear the event condition that caused the thread to wake (in this case,
        \ensuremath{//} ul6WakeCondtion will equal 0x20 when triggered from the interrupt above)
        clEventFlag.Clear(u16WakeCondition);
        // <do something>
```

5.7 Messages

Sending messages between threads is the key means of synchronizing access to data, and the primary mechanism to perform asynchronous data processing operations.

Sending a message consists of the following operations:

- Obtain a Message object from the global message pool
- · Set the message data and event fields
- · Send the message to the destination message queue

While receiving a message consists of the following steps:

- Wait for a messages in the destination message queue
- · Process the message data
- · Return the message back to the global message pool

These operations, and the various data objects involved are discussed in more detail in the following section.

5.7.1 Message Objects

Message objects are used to communicate arbitrary data between threads in a safe and synchronous way.

The message object consists of an event code field and a data field. The event code is used to provide context to the message object, while the data field (essentially a void * data pointer) is used to provide a payload of data corresponding to the particular event.

5.7 Messages 19

Access to these fields is marshalled by accessors - the transmitting thread uses the SetData() and SetCode() methods to seed the data, while the receiving thread uses the GetData() and GetCode() methods to retrieve it.

By providing the data as a void data pointer instead of a fixed-size message, we achieve an unprecedented measure of simplicity and flexibility. Data can be either statically or dynamically allocated, and sized appropriately for the event without having to format and reformat data by both sending and receiving threads. The choices here are left to the user - and the kernel doesn't get in the way of efficiency.

It is worth noting that you can send messages to message queues from within ISR context. This helps maintain consistency, since the same APIs can be used to provide event-driven programming facilities throughout the whole of the OS.

5.7.2 Global Message Pool

To maintain efficiency in the messaging system (and to prevent over-allocation of data), a global pool of message objects is provided. The size of this message pool is specified in the implementation, and can be adjusted depending on the requirements of the target application as a compile-time option.

Allocating a message from the message pool is as simple as calling the GlobalMessagePool::Pop() Method.

Messages are returned back to the GlobalMessagePool::Push() method once the message contents are no longer required.

One must be careful to ensure that discarded messages always are returned to the pool, otherwise a resource leak can occur, which may cripple the operating system's ability to pass data between threads.

5.7.3 Message Queues

Message objects specify data with context, but do not specify where the messages will be sent. For this purpose we have a MessageQueue object. Sending an object to a message queue involves calling the MessageQueue::Send() method, passing in a pointer to the Message object as an argument.

When a message is sent to the queue, the first thread blocked on the queue (as a result of calling the Message Queue Receive() method) will wake up, with a pointer to the Message object returned.

It's worth noting that multiple threads can block on the same message queue, providing a means for multiple threads to share work in parallel.

5.7.4 Messaging Example

```
// Message queue object shared between threads
MessageQueue clMsgQ;
// Function that initializes the shared message queue
void MsqQInit()
    clMsgQ.Init();
// Function called by one thread to send message data to
// another
void TxMessage()
    // Get a message, initialize its data
   Message *pclMesg = GlobalMessagePool::Pop();
    pclMesg->SetCode(0xAB);
   pclMesg->SetData((void*)some_data);
    // Send the data to the message queue
    clMsgQ.Send(pclMesg);
// Function called in the other thread to block until
// a message is received in the message queue.
void RxMessage()
    Message *pclMesg;
```

```
// Block until we have a message in the queue
pclMesg = clMsgQ.Receive();

// Do something with the data once the message is received
pclMesg->GetCode();

// Free the message once we're done with it.
GlobalMessagePool::Push(pclMesg);
```

5.8 Mailboxes

Another form of IPC is provided by Mark3, in the form of Mailboxes and Envelopes.

Mailboxes are similar to message queues in that they provide a synchronized interface by which data can be transmitted between threads.

Where Message Queues rely on linked lists of lightweight message objects (containing only message code and a void* data-pointer), which are inherently abstract, Mailboxes use a dedicated blob of memory, which is carved up into fixed-size chunks called Envelopes (defined by the user), which are sent and received. Unlike message queues, mailbox data is copied to and from the mailboxes dedicated pool.

Mailboxes also differ in that they provide not only a blocking "receive" call, but also a blocking "send" call, providing the opportunity for threads to block on "mailbox full" as well as "mailbox empty" conditions.

All send/receive APIs support an optional timeout parameter if the KERNEL_USE_TIMEOUTS option has been configured in mark3cfg.h

5.8.1 Mailbox Example

```
// Create a mailbox object, and define a buffer that will be used to store the
// mailbox' envelopes.
static Mailbox clMbox;
static uint8_t aucMBoxBuffer[128];
void InitMailbox(void)
    // Initialize our mailbox, telling it to use our defined buffer for envelope
    // storage. Pass in the size of the buffer, and set the size of each
    // envelope to 16 bytes. This gives u16 a mailbox capacity of (128 / 16) = 8
    // envelopes.
    clMbox.Init((void*)aucMBoxBuffer, 128, 16);
}
void SendThread(void)
    // Define a buffer that we'll eventually send to the
    // mailbox. Note the size is the same as that of an
    // envelope.
    uint8_t aucTxBuf[16];
    while(1)
        // Copy some data into aucTxBuf, a 16-byte buffer, the
        // same size as a mailbox envelope.
        // Deliver the envelope (our buffer) into the mailbox
        clMbox.Send((void*)aucTxBuf);
void RecvThred(void)
    uint8_t aucRxBuf[16];
    while(1)
        // Wait until there's a message in our mailbox. Once
// there is a message, read it into our local buffer.
        cmMbox.Receive((void*)aucRxBuf);
```

```
// Do something with the contents of aucRxBuf, which now
// contains an envelope of data read from the mailbox.
...
}
```

5.9 Notification Objects

Notification objects are the most lightweight of all blocking objects supplied by Mark3.

using this blocking primative, one or more threads wait for the notification object to be signalled by code elsewhere in the system (i.e. another thread or interrupt). Once the the notification has been signalled, all threads currently blocked on the object become unblocked.

5.9.1 Notification Example

```
static Notify clNotifier;
void MyThread(void *unused_)
     // Initialize our notification object before use
     clNotifier.Init();
     while (1)
          // Wait until our thread has been notified that it
          // can wake up.
         clNotify.Wait();
          // Thread has woken up now -- do something!
}
void SignalCallback (void)
     // Something in the system (interrupt, thread event, IPC,
     // etc.,) has called this function. As a result, we need
// our other thread to wake up. Call the Notify object's
// Signal() method to wake the thread up. Note that this
     // will have no effect if the thread is not presently
     // blocked.
     clNotify.Signal();
```

5.10 Sleep

There are instances where it may be necessary for a thread to poll a resource, or wait a specific amount of time before proceeding to operate on a peripheral or volatile piece of data.

While the Timer object is generally a better choice for performing time-sensitive operations (and certainly a better choice for periodic operations), the Thread::Sleep() method provides a convenient (and efficient) mechanism that allows for a thread to suspend its execution for a specified interval.

Note that when a thread is sleeping it is blocked, during which other threads can operate, or the system can enter its idle state.

```
int GetPeripheralData();
{
    int value;
    // The hardware manual for a peripheral specifies that
    // the "foo()" method will result in data being generated
    // that can be captured using the "bar()" method.
    // However, the value only becomes valid after 10ms
    peripheral.foo();
    Thread::Sleep(10); // Wait 10ms for data to become valid
    value = peripheral.bar();
```

```
return value;
```

5.11 Round-Robin Quantum

Threads at the same thread priority are scheduled using a round-robin scheme. Each thread is given a timeslice (which can be configured) of which it shares time amongst ready threads in the group. Once a thread's timeslice has expired, the next thread in the priority group is chosen to run until its quantum has expired - the cycle continues over and over so long as each thread has work to be done.

By default, the round-robin interval is set at 4ms.

This value can be overridden by calling the thread's SetQuantum() with a new interval specified in milliseconds.

Chapter 6

Why Mark3?

My first job after graduating from university in 2005 was with a small company that had a very old-school, low-budget philosophy when it came to software development.

Every make-or-buy decision ended with "make" when it came to tools. It was the kind of environment where vendors cost us money, but manpower was free. In retrospect, we didn't have a ton of business during the time that I worked there, and that may have had something to do with the fact that we were constantly short on ready cash for things we could code ourselves.

Early on, I asked why we didn't use industry-standard tools - like JTAG debuggers or IDEs. One senior engineer scoffed that debuggers were tools for wimps - and something that a good programmer should be able to do without. After all - we had serial ports, GPIOs, and a bi-color LED on our boards. Since these were built into the hardware, they didn't cost us a thing. We also had a single software "build" server that took 5 minutes to build a 32k binary on its best days, so when we had to debug code, it was a painful process of trial and error, with lots of Youtube between iterations. We complained that tens of thousands of dollars of productivity was being flushed away that could have been solved by implementing a proper build server - and while we eventually got our wish, it took far more time than it should have.

Needless to say, software development was painful at that company. We made life hard on ourselves purely out of pride, and for the right to say that we walked "up-hills both ways through 3 feet of snow, everyday". Our code was tied ever-so-tightly to our hardware platform, and the system code was indistinguishable from the application. While we didn't use an RTOS, we had effectively implemented a 3-priority threading scheme using a carefully designed interrupt nesting scheme with event flags and a while(1) superloop running as a background thread. Nothing was abstracted, and the code was always optimized for the platform, presumably in an effort to save on code size and wasted cycles. I asked why we didn't use an RTOS in any of our systems and received dismissive scoffs - the overhead from thread switching and maintaining multiple threads could not be tolerated in our systems according to our chief engineers. In retrospect, our ad-hoc system was likely as large as my smallest kernel, and had just as much context switching (althrough it was hidden by the compiler).

And every time a new iteration of our product was developed, the firmware took far too long to bring up, because the algorithms and data structures had to be re-tooled to work with the peripherals and sensors attached to the new boards. We worked very hard in an attempt to reinvent the wheel, all in the name of producing "efficient" code.

Regardless, I learned a lot about embedded software development.

Most important, I learned that good design is the key to good software; and good design doesn't have to come at a price. In all but the smallest of projects, the well-designed, well-abstracted code is not only more portable, but it's usually smaller, easier to read, and easier to reuse.

Also, since we had all the time in the world to invest in developing our own tools, I gained a lot of experience building them, and making use of good, free PC tools that could be used to develop and debug a large portion of our code. I ended up writing PC-based device and peripheral simulators, state-machine frameworks, and abstractions for our horrible ad-hoc system code. At the end of the day, I had developed enough tools that I could solve a lot of our development problems without having to re-inventing the wheel at each turn. Gaining a background in how these tools worked gave me a better understanding of how to use them - making me more productive at the jobs that I've had since.

24 Why Mark3?

I am convinced that designing good software takes honest effort up-front, and that good application code cannot be written unless it is based on a solid framework. Just as the wise man builds his house on rocks, and not on sand, wise developers write applications based on a well-defined platforms. And while you can probably build a house using nothing but a hammer and sheer will, you can certainly build one a lot faster with all the right tools.

This conviction lead me to development my first RTOS kernel in 2009 - FunkOS. It is a small, yet surprisingly full-featured kernel. It has all the basics (semaphores, mutexes, round-robin and preemptive scheduling), and some pretty advanced features as well (device drivers and other middleware). However, it had two major problems - it doesn't scale well, and it doesn't support many devices.

While I had modest success with this kernel (it has been featured on some blogs, and still gets around 125 downloads a month), it was nothing like the success of other RTOS kernels like uC/OS-II and FreeRTOS. To be honest, as a one-man show, I just don't have the resources to support all of the devices, toolchains, and evaluation boards that a real vendor can. I had never expected my kernel to compete with the likes of them, and I don't expect Mark3 to change the embedded landscape either.

My main goal with Mark3 was to solve the technical shortfalls in the FunkOS kernel by applying my experience in kernel development. As a result, Mark3 is better than FunkOS in almost every way; it scales better, has lower interrupt latency, and is generally more thoughtfully designed (all at a small cost to code size).

Another goal I had was to create something easy to understand, that could be documented and serve as a good introduction to RTOS kernel design. The end result of these goals is the kernel as presented in this book - a full source listing of a working OS kernel, with each module completely documented and explained in detail.

Finally, I wanted to prove that a kernel written entirely in C++ could perform just as well as one written in C. Mark3 is fully benchmarked and profiled – you can see exactly how much it costs to call certain APIs or include various features in the kernel.

And in addition, the code is more readable and easier to understand as a result of making use of object-oriented concepts provided by C++. Applications are easier to write because common concepts are encapsulated into objects (Threads, Semaphores, Mutexes, etc.) with their own methods and data, as opposed to APIs which rely on lots of explicit pointer or handle-passing, type casting, and other operations that are typically considered "unsafe" or "advaned" topics in C.

Chapter 7

When should you use an RTOS?

7.1 The reality of system code

System code can be defined as the program logic required to manage, synchronize, and schedule all of the resources (CPU time, memory, peripherals, etc.) used by the application running on the CPU. And it's true that a significant portion of the code running on an embedded system will be system code. No matter how simple a system is, whether or not this logic is embedded directly into the application (bare-metal system), or included as part of a well-defined stack on which an application is written (RTOS-based); system code is still present, and it comes with a cost.

As an embedded systems is being designed, engineers have to decide which approach to take: Bare-metal, or RTOS. There are advantages and disadvantages to each – and a reasonable engineer should always perform a thorough analysis of the pros and cons of each - in the context of the given application - before choosing a path.

The following figure demonstrates the differences between the architecture of a bare-metal system and RTOS based system at a high level:

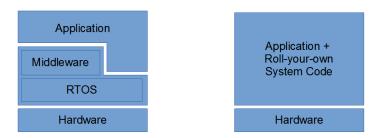


Figure 7.1: Arch

As can be seen, the RTOS (And associated middleware + libraries) captures a certain fixed size.

As a generalization, bare-metal systems typically have the advantage in that the system code overhead is small to start – but grows significantly as the application grows in complexity. At a certain point, it becomes extremely difficult and error-prone to add more functionality to an application running on such a system. There's a tipping point, where the cost of the code used to work-around the limitations of a bare-metal system outweigh the cost of a capable RTOS. Bare-metal systems also generally take longer to implement, because the system code has to be written from scratch (or derived from existing code) for the application. The resulting code also tend to be less portable, as it takes serious discipline to keep the system-specific elements of the code separated – in an RTOS-based system, once the kernel and drivers are ported, the application code is generally platform agnostic.

Conversely, an RTOS-based system incurs a slightly higher fixed cost up-front, but scales infinitely better than a bare-metal system as application's complexity increases. Using an RTOS for simple systems reduces application development time, but may cause an application not to fit into some extremely size-constrained microcontroller. An

RTOS can also cause the size of an application to grow more slowly relative to a bare-metal system – especially as a result of applying synchronization mechanisms and judicious IPC. As a result, an RTOS makes it significantly easier to "go agile" with an application – iteratively adding features and functionality, without having to consider refactoring the underlying system at each turn.

Some of these factors may be more important than others. Requirements, specifications, schedules, chip-selection, and volume projections for a project should all be used to feed into the discussions to decide whether or to go bare-metal or RTOS as a result.

Consider the following questions when making that decision:

- · What is the application?
- · How efficient is efficient enough?
- · How fast is fast enough?
- · How small is small enough?
- · How responsive is responsive enough?
- · How much code space/RAM/etc is available on the target system?
- How much code space/RAM do I need for an RTOS?
- How much code space/RAM do I think I'll need for my application?
- · How much time do I have to deliver my system?
- · How many units do we plan to sell?

7.2 Superloops, and their limitations

7.2.1 Intro to Superloops

Before we start taking a look at designing a real-time operating system, it's worthwhile taking a look through one of the most-common design patterns that developers use to manage task execution in bare-metal embedded systems - Superloops.

Systems based on superloops favor the system control logic baked directly into the application code, usually under the guise of simplicity, or memory (code and RAM) efficiency. For simple systems, superloops can definitely get the job done. However, they have some serious limitations, and are not suitable for every kind of project. In a lot of cases you can squeak by using superloops - especially in extremely constrained systems, but in general they are not a solid basis for reusable, portable code.

Nonetheless, a variety of examples are presented here- from the extremely simple, to cooperative and liimted-preemptive multitasking systems, all of which are examples are representative of real-world systems that I've either written the firmware for, or have seen in my experience.

7.2.2 The simplest loop

Let's start with the simplest embedded system design possible - an infinite loop that performs a single task repeatedly:

```
int main()
{
    while(1)
    {
         Do_Something();
    }
}
```

Here, the code inside the loop will run a single function forever and ever. Not much to it, is there? But you might be surprised at just how much embedded system firmware is implemented using essentially the same mechanism - there isn't anything wrong with that, but it's just not that interesting.

Despite its simplicity we can see the beginnings of some core OS concepts. Here, the while(1) statement can be logically seen as the he operating system kernel - this one control statement determines what tasks can run in the system, and defines the constraints that could modify their execution. But at the end of the day, that's a big part of what a kernel is - a mechanism that controls the execution of application code.

The second concept here is the task. This is application code provided by the user to perform some useful purpose in a system. In this case Do_something() represents that task - it could be monitoring blood pressure, reading a sensor and writing its data to a terminal, or playing an MP3; anything you can think of for an embedded system to do. A simple round-robin multi-tasking system can be built off of this example by simply adding additional tasks in sequence in the main while-loop. Note that in this example the CPU is always busy running tasks - at no time is the CPU idle, meaning that it is likely burning a lot of power.

While we conceptually have two separate pieces of code involved here (an operating system kernel and a set of running tasks), they are not logically separate. The OS code is indistinguishable from the application. It's like a single-celled organism - everything is crammed together within the walls of an indivisible unit; and specialized to perform its given function relying solely on instinct.

7.2.3 Interrupt-Driven Super-loop

In the previous example, we had a system without any way to control the execution of the task- it just runs forever. There's no way to control when the task can (or more importantly can't) run, which greatly limits the usefulness of the system. Say you only want your task to run every 100 miliseconds - in the previous code, you have to add a hard-coded delay at the end of your task's execution to ensure your code runs only when it should.

Fortunately, there is a much more elegant way to do this. In this example, we introduce the concept of the synchronization object. A Synchronization object is some data structure which works within the bounds of the operating system to tell tasks when they can run, and in many cases includes special data unique to the synchronization event.

There are a whole family of synchronization objects, which we'll get into later. In this example, we make use of the simplest synchronization primitive

· the global flag.

With the addition of synchronization brings the addition of event-driven systems. If you're programming a microcontroller system, you generally have scores of peripherals available to you - timers, GPIOs, ADCs, UARTs, ethernet, USB, etc. All of which can be configured to provide a stimulus to your system by means of interrupts. This stimulus gives us the ability not only to program our micros to do_something(), but to do_something() if-and-only-if a corresponding trigger has occurred.

The following concepts are shown in the example below:

```
volatile K_BOOL something_to_do = false;
__interrupt__ My_Interrupt_Source(void)
{
    something_to_do = true;
}
int main()
{
    while (1)
{
        if (something_to_do)
        {
            Do_something();
            something_to_do = false;
        }
        else
        {
             Idle();
        }
}
```

So there you have it - an event driven system which uses a global variable to synchronize the execution of our task based on the occurrence of an interrupt. It's still just a bare-metal, OS-baked-into-the-application system, but it's introduced a whole bunch of added complexity (and control!) into the system.

The first thing to notice in the source is that the global variable, something_to_do, is used as a synchronization object. When an interrupt occurs from some external event, triggering the My_Interrupt_Source() ISR, program flow in main() is interrupted, the interrupt handler is run, and something_to_do is set to true, letting us know that when we get back to main(), that we should run our Do_something() task.

Another new concept at play here is that of the idle function. In general, when running an event driven system, there are times when the CPU has no application tasks to run. In order to minimize power consumption, CPUs usually contain instructions or registers that can be set up to disable non-essential subsets of the system when there's nothing to do. In general, the sleeping system can be re-activated quickly as a result of an interrupt or other external stimulus, allowing normal processing to resume.

Now, we could just call Do_something() from the interrupt itself - but that's generally not a great solution. In general, the more time we spend inside an interrupt, the more time we spend with at least some interrupts disabled. As a result, we end up with interrupt latency. Now, in this system, with only one interrupt source and only one task this might not be a big deal, but say that Do_something() takes several seconds to complete, and in that time several other interrupts occur from other sources. While executing in our long-running interrupt, no other interrupts can be processed - in many cases, if two interrupts of the same type occur before the first is processed, one of these interrupt events will be lost. This can be utterly disastrous in a real-time system and should be avoided at all costs. As a result, it's generally preferable to use synchronization objects whenever possible to defer processing outside of the ISR.

Another OS concept that is implicitly introduced in this example is that of task priority. When an interrupt occurs, the normal execution of code in main() is preempted: control is swapped over to the ISR (which runs to completion), and then control is given back to main() where it left off. The very fact that interrupts take precedence over what's running shows that main is conceptually a "low-priority" task, and that all ISRs are "high-priority" tasks. In this example, our "high-priority" task is setting a variable to tell our "low-priority" task that it can do something useful. We will investigate the concept of task priority further in the next example.

Preemption is another key principle in embedded systems. This is the notion that whatever the CPU is doing when an interrupt occurs, it should stop, cache its current state (referred to as its context), and allow the high-priority event to be processed. The context of the previous task is then restored its state before the interrupt, and resumes processing. We'll come back to preemption frequently, since the concept comes up frequently in RTOS-based systems.

7.2.4 Cooperative multi-tasking

Our next example takes the previous example one step further by introducing cooperative multi-tasking:

```
// Bitfield values used to represent three distinct tasks
#define TASK_1_EVENT (0x01)
#define TASK_2_EVENT (0x02)
#define TASK_3_EVENT (0x04)

volatile K_UCHAR event_flags = 0;

// Interrupt sources used to trigger event execution
__interrupt__ My_Interrupt_1(void)
{
    event_flags |= TASK_1_EVENT;
}
__interrupt__ My_Interrupt_2(void)
{
    event_flags |= TASK_2_EVENT;
}
__interrupt__ My_Interrupt_3(void)
{
    event_flags |= TASK_3_EVENT;
}
// Main tasks
int main(void)
{
```

```
while(1)
{
    while(event_flags)
    {
        if( event_flags & TASK_1_EVENT)
        {
            Do_Task_1();
            event_flags &= ~TASK_1_EVENT;
        } else if( event_flags & TASK_2_EVENT) {
            Do_Task_2();
            event_flags &= ~TASK_2_EVENT;
        } else if( event_flags & TASK_3_EVENT) {
            Do_Task_3();
            event_flags &= ~TASK_3_EVENT;
        }
    }
    Idle();
}
```

This system is very similar to what we had before - however the differences are worth discussing. First, we have stimulus from multiple interrupt sources: each ISR is responsible for setting a single bit in our global event flag, which is then used to control execution of individual tasks from within main().

Next, we can see that tasks are explicitly given priorities inside the main loop based on the logic of the if/else if structure. As long as there is something set in the event flag, we will always try to execute Task1 first, and only when Task1 isn't set will we attempt to execute Task2, and then Task3. This added logic provides the notion of priority. However, because each of these tasks exist within the same context (they're just different functions called from our main control loop), we don't have the same notion of preemption that we have when dealing with interrupts.

That means that even through we may be running Task2 and an event flag for Task1 is set by an interrupt, the CPU still has to finish processing Task2 to completion before Task1 can be run. And that's why this kind of scheduling is referred to as cooperative multitasking: we can have as many tasks as we want, but unless they cooperate by means of returning back to main, the system can end up with high-priority tasks getting starved for CPU time by lower-priority, long-running tasks.

This is one of the more popular Os-baked-into-the-application approaches, and is widely used in a variety of real-time embedded systems.

7.2.5 Hybrid cooperative/preemptive multi-tasking

The final variation on the superloop design utilizes software-triggered interrupts to simulate a hybrid cooperative/preemptive multitasking system. Consider the example code below.

```
// Bitfields used to represent high-priority tasks. Tasks in this group
// can preempt tasks in the group below - but not eachother.
#define HP_TASK_1(0x01)
#define HP_TASK_2(0x02)
volatile K_UCHAR hp_tasks = 0;
// Bitfields used to represent low-priority tasks.
#define LP_TASK_1(0x01)
#define LP_TASK_2(0x02)
volatile K_UCHAR lp_tasks = 0;
// Interrupt sources, used to trigger both high and low priority tasks.
 _interrupt__ System_Interrupt_1(void)
    // Set any of the other tasks from here...
    hp_tasks |= HP_TASK_1;
       Trigger the SWI that calls the High_Priority_Tasks interrupt handler
 _interrupt__ System_Interrupt_n...(void)
   Set any of the other tasks from here...
// Interrupt handler that is used to implement the high-priority event context
 _interrupt__ High_Priority_Tasks(void)
```

```
// Enabled every interrupt except this one
    Disable_My_Interrupt();
    Enable_Interrupts();
    while( hp_tasks)
        if ( hp_tasks & HP_TASK_1)
            HP_Task1();
            hp_tasks &= ~HP_TASK_1;
       else if (hp_tasks & HP_TASK 2)
            HP_Task2();
            hp_tasks &= ~HP_TASK_2;
    Restore Interrupts():
    Enable_My_Interrupt();
// Main loop, used to implement the low-priority events
int main (void)
    // Set the function to run when a SWI is triggered
    Set_SWI(High_Priority_Tasks);
    // Run our super-loop
    while(1)
        while (lp_tasks)
            if (lp_tasks & LP_TASK_1)
                LP_Task1();
                lp_tasks &= ~LP_TASK_1;
            else if (lp tasks & LP TASK 2)
                LP_Task2();
                lp_tasks &= ~LP_TASK_2;
        Tdle():
```

In this example, High_Priority_Tasks() can be triggered at any time as a result of a software interrupt (SWI),. When a high-priority event is set, the code that sets the event calls the SWI as well, which instantly preempts whatever is happening in main, switching to the high-priority interrupt handler. If the CPU is executing in an interrupt handler already, the current ISR completes, at which point control is given to the high priority interrupt handler.

Once inside the HP ISR, all interrupts (except the software interrupt) are re-enabled, which allows this interrupt to be preempted by other interrupt sources, which is called interrupt nesting. As a result, we end up with two distinct execution contexts (main and HighPriorityTasks()), in which all tasks in the high-priority group are guaranteed to preempt main() tasks, and will run to completion before returning control back to tasks in main(). This is a very basic preemptive multitasking scenario, approximating a "real" RTOS system with two threads of different priorities.

7.3 Problems with superloops

As mentioned earlier, a lot of real-world systems are implemented using a superloop design; and while they are simple to understand due to the limited and obvious control logic involved, they are not without their problems.

7.3.1 Hidden Costs

It's difficult to calculate the overhead of the superloop and the code required to implement workarounds for blocking calls, scheduling, and preemption. There's a cost in both the logic used to implement workarounds (usually involving state machines), as well as a cost to maintainability that comes with breaking up into chunks based on execution time instead of logical operations. In moderate firmware systems, this size cost can exceed the overhead of a reasonably well-featured RTOS, and the deficit in maintainability is something that is measurable in terms of lost productivity through debugging and profiling.

7.3.2 Tightly-coupled code

Because the control logic is integrated so closely with the application logic, a lot of care must be taken not to compromise the separation between application and system code. The timing loops, state machines, and architecture-specific control mechanisms used to avoid (or simulate) preemption can all contribute to the problem. As a result, a lot of superloop code ends up being difficult to port without effectively simulating or replicating the underlying system for which the application was written. Abstraction layers can mitigate the risks, but a lot of care should be taken to fully decouple the application code from the system code.

7.3.3 No blocking Calls

In a super-loop environment, there's no such thing as a blocking call or blocking objects. Tasks cannot stop midexecution for event-driven I/O from other contexts - they must always run to completion. If busy-waiting and polling are used as a substitute, it increases latency and wastes cycles. As a result, extra code complexity is often times necessary to work-around this lack of blocking objects, often times through implementing additional state machines. In a large enough system, the added overhead in code size and cycles can add up.

7.3.4 Difficult to guarantee responsiveness

Without multiple levels of priority, it may be difficult to guarantee a certain degree of real-time responsiveness without added profiling and tweaking. The latency of a given task in a priority-based cooperative multitasking system is the length of the longest task. Care must be taken to break tasks up into appropriate sized chunks in order to ensure that higher- priority tasks can run in a timely fashion - a manual process that must be repeated as new tasks are added in the system. Once again, this adds extra complexity that makes code larger, more difficult to understand and maintain due to the artificial subdivision of tasks into time-based components.

7.3.5 Limited preemption capability

As shown in the example code, the way to gain preemption in a superloop is through the use of nested interrupts. While this isn't unwiedly for two levels of priority, adding more levels beyond this is becomes complicated. In this case, it becomes necessary to track interrupt nesting manually, and separate sets of tasks that can run within given priority loops - and deadlock becomes more difficult to avoid.

When should	vou use an	RTOS?
-------------	------------	-------

Chapter 8

Can you afford an RTOS?

8.1 Intro

Of course, since you're reading the manual for an RTOS that I've been developing over the course of the several years, you can guess that the conclusion that I draw.

If your code is of any sort of non-trivial complexity (say, at least a few- thousand lines), then a more appropriate question would be "can you afford not* to use an RTOS in your system?".

In short, there are simply too many benefits of an RTOS to ignore, the most important being:

Threading, along with priority and time-based scheduling Sophisticated synchronization objects and IPC Flexible, powerful Software Timers Ability to write more portable, decoupled code

Sure, these features have a cost in code space and RAM, but from my experience the cost of trying to code around a lack of these features will cost you as much - if not more. The results are often far less maintainable, error prone, and complex. And that simply adds time and cost. Real developers ship, and the RTOS is quickly becoming one of the standard tools that help keep developers shipping.

One of the main arguments against using an RTOS in an embedded project is that the overhead incurred is too great to be justified. Concerns over "wasted" RAM caused by using multiple stacks, added CPU utilization, and the "large" code footprint from the kernel cause a large number of developers to shun using a preemptive RTOS, instead favoring a non-preemptive, application-specific solution.

I believe that not only is the impact negligible in most cases, but that the benefits of writing an application with an RTOS can lead to savings around the board (code size, quality, reliability, and development time). While these other benefits provide the most compelling case for using an RTOS, they are far more challenging to demonstrate in a quantitative way, and are clearly documented in numerous industry-based case studies.

While there is some overhead associated with an RTOS, the typical arguments are largely unfounded when an RTOS is correctly implemented in a system. By measuring the true overhead of a preemptive RTOS in a typical application, we will demonstrate that the impact to code space, RAM, and CPU usage is minimal, and indeed acceptable for a wide range of CPU targets.

To illustrate just how little an RTOS impacts the size of an embedded software design we will look at a typical microcontroller project and analyze the various types of overhead associated with using a pre-emptive realtime kernel versus a similar non-preemptive event-based framework.

RTOS overhead can be broken into three distinct areas:

- · Code space: The amount of code space eaten up by the kernel (static)
- Memory overhead: The RAM associated with running the kernel and application threads.
- Runtime overhead: The CPU cycles required for the kernel's functionality (primarily scheduling and thread switching)

While there are other notable reasons to include or avoid the use of an RTOS in certain applications (determinism,

responsiveness, and interrupt latency among others), these are not considered in this discussion - as they are difficult to consider for the scope of our "canned" application.

8.2 Application description

For the purpose of this comparison, we first create an application using the standard preemptive Mark3 kernel with 2 system threads running: A foreground thread and a background thread. This gives three total priority levels in the system - the interrupt level (high), and two application priority threads (medium and low), which is quite a common paradigm for microcontroller firmware designs. The foreground thread processes a variety of time-critical events at a fixed frequency, while the background thread processes lower priority, aperiodic events. When there are no background thread events to process, the processor enters its low-power mode until the next interrupt is acknowledged.

The contents of the threads themselves are unimportant for this comparison, but we can assume they perform a variety of realtime I/O functions. As a result, a number of device drivers are also implemented.

Code Space and Memory Overhead:

The application is compiled for an ATMega328p processor which contains 32kB of code space in flash, and 2kB of RAM, which is a lower-mid-range microcontroller in Atmel's 8-bit AVR line of microcontrollers. Using the AVR GCC compiler with -Os level optimizations, an executable is produced with the following code/RAM utilization:

Program: 27914 bytes Data: 1313 bytes

An alternate version of this project is created using a custom "super-loop" kernel, which uses a single application thread and provides 2 levels of priority (interrupt and application). In this case, the event handler processes the different priority application events to completion from highest to lowest priority.

This approach leaves the application itself largely unchanged. Using the same optimization levels as the preemptive kernel, the code compiles as follows:

Program: 24886 bytes Data: 750 bytes

At first glance, the difference in RAM utilization seems quite a lot higher for the preemptive mode version of the application, but the raw numbers don't tell the whole story.

The first issue is that the cooperative-mode total does not take into account the system stack - whereas these values are included in the totals for RTOS version of the project. As a result, some further analysis is required to determine how the stack sizes truly compare.

In cooperative mode, there is only one thread of execution - so considering that multiple event handlers are executed in turn, the stack requirements for cooperative mode is simply determined by those of the most stack-intensive event handler (ignoring stack use contributions due to interrupts).

In contrast, the preemptive kernel requires a separate stack for each active thread, and as a result the stack usage of the system is the sum of the stacks for all threads.

Since the application and idle events are the same for both preemptive and cooperative mode, we know that their (independent) stack requirements will be the same in both cases.

For cooperative mode, we see that the idle thread stack utilization is lower than that of the application thread, and so the application thread's determines the stack size requirement. Again, with the preemptive kernel the stack utilization is the sum of the stacks defined for both threads.

As a result, the difference in overhead between the two cases becomes the extra stack required for the idle thread - which in our case is (a somewhat generous) 128 bytes.

The numbers still don't add up completely, but looking into the linker output we see that the rest of the difference comes from the extra data structures used to manage the kernel in preemptive mode, and the kernel data itself.

Fixed kernel data costs:

8.3 Runtime Overhead 35

```
--- 134 Bytes Kernel data
--- 26 Bytes Kernel Vtables
```

Application (Variable) data costs:

```
--- 24 Bytes Driver Vtables
--- 123 Bytes - statically-allocated kernel objects (semaphores, timers, etc.)
```

With this taken into account, the true memory cost of a 2-thread system ends up being around 428 bytes of $R \leftarrow AM$ - which is about 20% of the total memory available on this particular microcontroller. Whether or not this is reasonable certainly depends on the application, but more importantly, it is not so unreasonable as to eliminate an RTOS-based solution from being considered. Also note that by using the "simulated idle" feature provided in Mark3 R3 and onward, the idle thread (and its associated stack) can be eliminated altogether to reduce the cost in constrained devices.

The difference in code space overhead between the preemptive and cooperative mode solutions is less of an issue. Part of this reason is that both the preemptive and cooperative kernels are relatively small, and even an average target device (like the Atmega328 we've chosen) has plenty of room.

Mark3 can be configured so that only features necessary for the application are included in the RTOS - you only pay for the parts of the system that you use. In this way, we can measure the overhead on a feature-by-feature basis, which is shown below for the kernel as configured for this application:

The configuration tested in this comparison uses the thread/port module with timers, drivers, and semaphores, and mutexes, for a total kernel size of 5052 Bytes, with the rest of the code space occupied by the application.

As can be seen from the compiler's output, the difference in code space between the two versions of the application is 3028 bytes - or about 9% of the available code space on the selected processor. While nearly all of this comes from the added overhead of the kernel, the rest of the difference comes the changes to the application necessary to facilitate the different frameworks. This also demonstrates that the system-software code size in the cooperative case is about 2024 bytes.

8.3 Runtime Overhead

On the cooperative kernel, the overhead associated with running the thread is the time it takes the kernel to notice a pending event flag and launch the appropriate event handler, plus the timer interrupt execution time.

Similarly, on the preemptive kernel, the overhead is the time it takes to switch contexts to the application thread, plus the timer interrupt execution time.

The timer interrupt overhead is similar for both cases, so the overhead then becomes the difference between the following:

Preemptive mode:

- · Posting the semaphore that wakes the high-priority thread
- Performing a context switch to the high-priority thread

Cooperative mode:

- Setting the event flag from the timer interrupt
- Acknowledging the event from the event loop

coop - 438 cycles preempt - 764 cycles

Using a cycle-accurate AVR simulator (flAVR) running with a simulated speed of 16MHz, we find the end-to-end event sequence time to be 27us for the cooperative mode scheduler and 48us for the preemptive, and a raw difference of 20us.

With a fixed high-priority event frequency of 30Hz, we achieve a runtime overhead of 611us per second, or 0.06% of the total available CPU time. Now, obviously this value would expand at higher event frequencies and/or slower CPU frequencies, but for this typical application we find the difference in runtime overhead to be neglible for a preemptive system.

8.4 Analysis

For the selected test application and platform, including a preemptive RTOS is entirely reasonable, as the costs are low relative to a non-preemptive kernel solution. But these costs scale relative to the speed, memory and code space of the target processor. Because of these variables, there is no "magic bullet" environment suitable for every application, but Mark3 attempts to provide a framework suitable for a wide range of targets.

On the one hand, if these tests had been performed on a higher-end microcontroller such as the ATMega1284p (containing 128kB of code space and 16kB of RAM), the overhead would be in the noise. For this type of resource-rich microcontroller, there would be no reason to avoid using the Mark3 preemptive kernel.

Conversely, using a lower-end microcontroller like an ATMega88pa (which has only 8kB of code space and $1k \leftarrow B$ of RAM), the added overhead would likely be prohibitive for including a preemptive kernel. In this case, the cooperative-mode kernel would be a better choice.

As a rule of thumb, if one budgets 25% of a microcontroller's code space/RAM for system code, you should only require at minimum a microcontroller with 16k of code space and 2kB of RAM as a base platform for an RTOS. Unless there are serious constraints on the system that require much better latency or responsiveness than can be achieved with RTOS overhead, almost any modern platform is sufficient for hosting a kernel. In the event you find yourself with a microprocessor with external memory, there should be no reason to avoid using an RTOS at all.

Chapter 9

Mark3 Design Goals

9.1 Overview

9.1.1 Services Provided by an RTOS Kernel

At its lowest-levels, an operating system kernel is responsible for managing and scheduling resources within a system according to the application. In a typical thread-based RTOS, the resources involved is CPU time, and the kernel manages this by scheduling threads and timers. But capable RTOS kernels provide much more than just threading and timers.

In the following section, we discuss the Mark3 kernel architecture, all of its features, and a thorough discussion of how the pieces all work together to make an awesome RTOS kernel.

9.1.2 Guiding Principles of Mark3

Mark3 was designed with a number of over-arching principles, coming from years of experience designing, implementing, refining, and experimenting with RTOS kernels. Through that process I not only discovered what features I wanted in an RTOS, but how I wanted to build those features to look, work, and "feel". With that understanding, I started with a clean slate and began designing a new RTOS. Mark3 is the result of that process, and its design goals can be summarized in the following guiding principles.

9.1.3 Be feature competitive

To truly be taken seriously as more than just a toy or educational tool, an RTOS needs to have a certain feature suite. While Mark3 isn't a clone of any existing RTOS, it should at least attempt parity with the most common software in its class.

Looking at its competitors, Mark3 as a kernel supports most, if not all of the compelling features found in modern RTOS kernels, including dynamic threads, tickless timers, efficient message passing, and multiple types of synchronization primatives.

9.1.4 Be highly configuration

Mark3 isn't a one-size-fits-all kernel – and as a result, it provides the means to build a custom kernel to suit your needs. By configuring the kernel at compile-time, Mark3 can be built to contain the optimal feature set for a given application. And since features can be configured individually, you only pay the code/RAM footprint for the features you actually use.

38 Mark3 Design Goals

9.1.5 No external dependencies, no new language features

To maximize portability and promote adoption to new platforms, Mark3 is written in a widely supported subset of C++ that lends itself to embedded applications. It avoids RTTI, exceptions, templates, and libraries (C standard, STL, etc.), with all fundamental data structures and types implemented completely for use by the kernel. As a result, the portable parts of Mark3 should compile for any capable C++ toolchain.

9.1.6 Target the most popular hobbyist platforms available

Realistically, this means supporting the various Arduino-compatible target CPUs, including AVR and ARM Cortex-M series microcontrollers. As a result, the current default target for Mark3 is the atmega328p, which has 32KB of flash and 2KB of RAM. All decisions regarding default features, code size, and performance need to take that target system into account.

Mark3 integrates cleanly as a library into the Arduino IDE to support atmega328-based targets. Other AVR and Cortex-M targets can be supported using the port code provided in the source package.

9.1.7 Maximize determinism – but be pragmatic

Guaranteeing deterministic and predictable behavior is tough to do in an embedded system, and often comes with a heavy price tag in either RAM or code-space. With Mark3, we strive to keep the core kernel APIs and features as lightweight as possible, while avoiding algorithms that don't scale to large numbers of threads. We also achieve minimal latency by keeping interrupts enabled (operating out of the critical section) wherever possible.

In Mark3, the most important parts of the kernel are fixed-time, including thread scheduling and context switching. Operations that are not fixed time can be characterized as a function of their dependent data data. For instances, the Mutex and Semaphore APIs operate in fixed time in the uncontested case, and execute in linear time for the contested case – where the speed of execution is dependent on the number of threads currently waiting on that object.

The caveat here is that while we want to minimize latency and time spent in critical sections, that has to be balanced against increases in code size, and uncontested-case performance.

9.1.8 Apply engineering principles – and that means discipline, measurement and verification

My previous RTOS, FunkOS, was designed to be very ad-hoc. The usage instructions were along the lines of "drag and drop the source files into your IDE and compile". There was no regression/unit testing, no code size/speed profiling, and all documentation was done manually. It worked, but the process was a bit of a mess, and resulted in a lot of re-spins of the software, and a lot of time spent stepping through emulators to measure parameters.

We take a different approach in Mark3. Here, we've designed not only the kernel-code, but the build system, unit tests, profiling code, documentation and reporting that supports the kernel. Each release is built and tested using automation in order to ensure quality and correctness, with supporting documentation containing all critical metrics. Only code that passes testing is submitted to the repos and public forums for distribution. These metrics can be traced from build-to-build to ensure that performance remains consistent from one drop to the next, and that no regressions are introduced by new/refactored code.

And while the kernel code can still be exported into an IDE directly, that takes place with the knowledge that the kernel code has already been rigorously tested and profiled. Exporting source in Mark3 is also supported by scripting to ensure reliable, reproducible results without the possibility for human-error.

9.1.9 Use Virtualization For Verification

Mark3 was designed to work with automated simulation tools as the primary means to validate changes to the kernel, due to the power and flexibility of automatic tests on virtual hardware. I was also intrigued by the thought of extending the virtual target to support functionality useful for a kernel, but not found on real hardware.

9.1 Overview 39

When the project was started, simavr was the tool of choice- however, its simulation was found to be incorrect compared to execution on a real MCU, and it did not provide the degree of extension that I desired for use with kernel development.

The flAVR AVR simulator was written to replace the dependency on that tool, and overcome those limitations. It also provides a GDB interface, as well as its own built-in debugger, profilers, and trace tools.

The example and test code relies heavily on flAVR kernel aware messaging, so it is recommended that you familiarize yourself with that tool if you intend to do any sort of customizations or extensions to the kernel.

flAVR is hosted on sourceforge at http://www.sourceforge.net/projects/flavr/. In its basic configuration, it builds with minimal external dependencies.

- · On linux, it requires only pthreads.
- On Windows, it rquires pthreads and ws2 32, both satisfied via MinGW.
- Optional SDL builds for both targets (featuring graphics and simulated joystick input) can be built, and rely on libSDL.

10	Mark3 Design Goals

Chapter 10

Mark3 Kernel Architecture

10.1 Overview

At a high level, the Mark3 RTOS is organized into the following features, and layered as shown below:

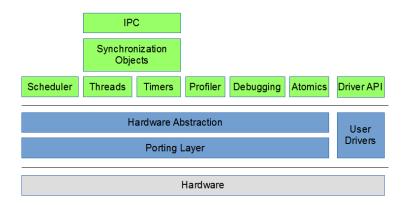


Figure 10.1: Overview

Everything in the "green" layer represents the Mark3 public API and classes, beneath which lives all hardware abstraction and CPU-specific porting and driver code, which runs on a given target CPU.

The features and concepts introduced in this diagram can be described as follows:

Threads: The ability to multiplex the CPU between multiple tasks to give the perception that multiple programs are running simultaneously. Each thread runs in its own context with its own stack.

Scheduler: Algorithm which determines the thread that gets to run on the CPU at any given time. This algorithm takes into account the priorites (and other execution parameters) associated with the threads in the system.

IPC: Inter-process-communications. Message-passing and Mailbox interfaces used to communicate between threads synchronously or asynchronously.

Synchronization Objects: Ability to schedule thread execution relative to system conditions and events, allowing for sharing global data and resources safely and effectively.

Timers: High-resolution software timers that allow for actions to be triggered on a periodic or one-shot basis.

Profiler: Special timer used to measure the performance of arbitrary blocks of code.

Debugging: Realitme logging and trace functionality, facilitating simplified debugging of systems using the OS.

Atomics: Support for UN-interruptble arithmatic operations.

Driver API: Hardware abstraction interface allowing for device drivers to be written in a consistent, portable manner.

Hardware Abstraction Layer: Class interface definitions to represent threading, context-switching, and timers in a generic, abstracted manner.

Porting Layer: Class interface implementation to support threading, context-switching, and timers for a given CPU.

User Drivers: Code written by the user to implement device-specific peripheral drivers, built to make use of the Mark3 driver API.

Each of these features will be described in more detail in the following sections of this chapter.

The concepts introduced in the above architecture are implemented in a variety of source modules, which are logically broken down into classes (or in some cases, groups of functions/macros). The relationship between objects in the Mark3 kernel is shown below:

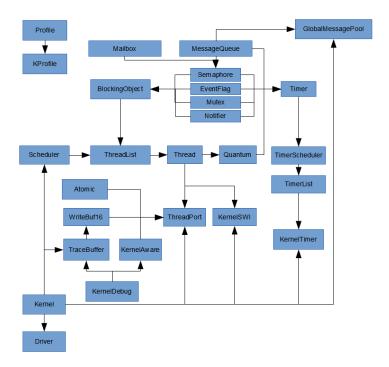


Figure 10.2: Overview

The objects shown in the preceding table can be grouped together by feature. In the table below, we group each feature by object, referencing the source module in which they can be found in the Mark3 source tree.

Feature	Kernel Object	Source Files
Profiling	ProfileTimer	profile.cpp/.h
Threads + Scheduling	Thread	thread.cpp/.h
	Scheduler	scheduler.cpp/.h
	PriorityMap	priomap.cpp/.h
	Quantum	quantum.cpp/.h
	ThreadPort	threadport.cpp/.h **
	KernelSWI	kernelswi.cpp/.h **
Timers	Timer	timer.h/timer.cpp
	TimerScheduler	timerscheduler.h
	TimerList	timerlist.h/cpp

	KernelTimer	kerneltimer.cpp/.h **
Synchronization	BlockingObject	blocking.cpp/.h
	Semaphore	ksemaphore.cpp/.h
	EventFlag	eventflag.cpp/.h
	Mutex	mutex.cpp/.h
	Notify	notify.cpp/.h
IPC/Message-passing	Mailbox	mailbox.cpp/.h
	MessageQueue	message.cpp/.h
	GlobalMessagePool	message.cpp/.h
Debugging	Miscellaneous Macros	kerneldebug.h
	KernelAware	kernelaware.cpp/.h
	TraceBuffer	tracebuffer.cpp/.h
	Buffalogger	buffalogger.h
Device Drivers	Driver	driver.cpp/.h
Atomic Operations	Atomic	atomic.cpp/.h
Kernel	Kernel	kernel.cpp/.h

^{**} implementation is platform-dependent, and located under the kernel's

10.2 Threads and Scheduling

The classes involved in threading and scheudling in Mark3 are highlighted in the following diagram, and are discussed in detail in this chapter:

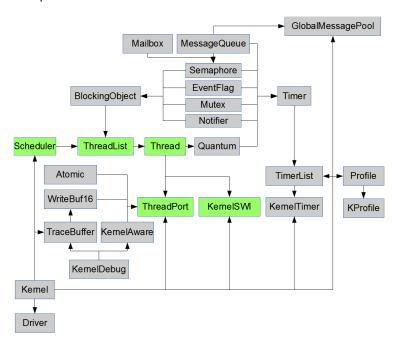


Figure 10.3: Threads and Scheduling

10.2.1 A Bit About Threads

Before we get started talking about the internals of the Mark3 scheduler, it's necessary to go over some background material - starting with: what is a thread, anyway?

^{** /}cpu/<arch>/<variant>/<toolchain> folder in the source tree

Let's look at a very basic CPU without any sort of special multi-threading hardware, and without interrupts. When the CPU is powered up, the program counter is loaded with some default location, at which point the processor core will start executing instructions sequentially - running forever and ever according to whatever has been loaded into program memory. This single instance of a simple program sequence is the only thing that runs on the processor, and the execution of the program can be predicted entirely by looking at the CPU's current register state, its program, and any affected system memory (the CPU's "context").

It's simple enough, and that's exactly the definition we have for a thread in an RTOS.

Each thread contains an instance of a CPU's register context, its own stack, and any other bookkeeping information necessary to define the minimum unique execution state of a system at runtime. It is the job of a RTOS to multiplex the execution of multiple threads on a single physical CPU, thereby creating the illusion that many programs are being executed simultaneously. In reality there can only ever be one thread truly executing at any given moment on a CPU core, so it's up to the scheduler to set and enforce rules about what thread gets to run when, for how long, and under what conditions. As mentioned earlier, any system without an RTOS exeuctes as a single thread, so at least two threads are required for an RTOS to serve any useful purpose.

Note that all of this information is is common to pretty well every RTOS in existence - the implementation details, including the scheduler rules, are all part of what differentiates one RTOS from another.

10.2.2 Thread States and ThreadLists

Since only one thread can run on a CPU at a time, the scheduler relies on thread information to make its decisions. Mark3's scheduler relies on a variety of such information, including:

- · The thread's current priority
- · Round-Robin execution quanta
- · Whether or not the thread is blocked on a synchronization object, such as a mutex or semaphore
- · Whether or not the thread is currently suspended

The scheduler further uses this information to logically place each thread into 1 of 4 possible states:

```
Ready - The thread is currently running
Running - The thread is able to run
Blocked - The thread cannot run until a system condition is met
Stopped - The thread cannot run because its execution has been suspended
```

In order to determine a thread's state, threads are placed in "buckets" corresponding to these states. Ready and running threads exist in the scheduler's buckets, blocked threads exist in a bucket belonging to the object they're blocked on, and stopped threads exist in a separate bucket containing all stopped threads.

In reality, the various buckets are just doubly-linked lists of Thread objects - implemented in something called the ThreadList class. To facilitate this, the Thread class directly inherits from a LinkListNode class, which contains the node pointers required to implement a doubly-linked list. As a result, Threads may be effortlessly moved from one state to another using efficient linked-list operations built into the ThreadList class.

10.2.3 Blocking and Unblocking

While many developers new to the concept of an RTOS assume that all threads in a system are entirely separate from eachother, the reality is that practical systems typically involve multiple threads working together, or at the very least sharing resources. In order to synchronize the execution of threads for that purpose, a number of synchronization primatives (blocking objects) are implemented to create specific sets of conditions under which threads can continue execution. The concept of "blocking" a thread until a specific condition is met is fundamental to understanding RTOS applications design, as well as any highly-multithreaded applications.

10.2.4 Blocking Objects

Blocking objects and primatives provided by Mark3 include:

- · Semaphores (binary and counting)
- Mutexes
- · Event Flags
- · Thread Notification Objects
- Thread Sleep
- Message Queues
- Mailboxes

The relationship between these objects in the system are shown below:

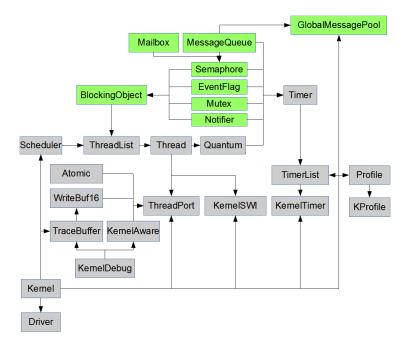


Figure 10.4: Blocking Objects

Each of these objects inherit from the BlockingObject class, which itself contains a ThreadList object. This class contains methods to Block() a thread (remove it from the Scheduler's "Ready" or "Running" ThreadLists), as well as UnBlock() a thread (move a thread back to the "Ready" lists). This object handles transitioning threads from list-to-list (and state-to-state), as well as taking care of any other Scheduler bookkeeping required in the process. While each of the Blocking types implement a different condition, they are effectively variations on the same theme. Many simple Blocking objects are also used to build complex blocking objects - for instance, the Thread Sleep mechanism is essentially a binary semaphore and a timer object, while a message queue is a linked-list of message objects combined with a semaphore.

10.3 Inside the Mark3 Scheduler

At this point we've covered the following concepts:

- Threads
- Thread States and Thread Lists
- · Blocking and Un-Blocking Threads

Thankfully, this is all the background required to understand how the Mark3 Scheduler works. In technical terms, Mark3 implements "strict priority scheduling, with round-robin scheduling among threads in each priority group". In plain English, this boils down to a scheduler which follows a few simple rules:

```
Find the highest-priority "Ready" list that has at least one Threads. If the first thread in that bucket is not the current thread, select it to run next. Otherwise, rotate the linked list, and choose the next thread in the list to run
```

Since context switching is one of the most common and frequent operation performed by an RTOS, this needs to be as fast and deterministic as possible. While the logic is simple, a lot of care must be put into optimizing the scheduler to achieve those goals. In the section below we discuss the optimization approaches taken in Mark3.

There are a number of ways to find the highest-priority thread. The naive approach would be to simply iterate through the scheduler's array of ThreadLists from highest to lowest, stopping when the first non-empty list is found, such as in the following block of code:

```
for (prio = num_prio - 1; prio >= 0; prio--)
{
    if (thread_list[prio].get_head() != NULL)
    {
        break;
    }
}
```

While that would certainly work and be sufficient for a variety of systems, it's a non-deterministic approach (complexity O(n)) whose cost varies substantially based on how many priorities have to be evaluated. It's simple to read and understand, but it's non-optimal.

Fortunatley, a functionally-equivalent and more deterministic approach can be implemented with a few tricks.

In addition to maintaining an array of ThreadLists, Mark3 also maintains a bitmap (one bit per priority level) that indicates which thread lists have ready threads. This bitmap is maintained automatically by the ThreadList class, and is updated every time a thread is moved to/from the Scheduler's ready lists.

By inspecting this bitmap using a technique to count the leading zero bits in the bitmap, we determine which threadlist to choose in fixed time.

Now, to implement the leading-zeros check, this can once again be performed iteratively using bitshifts and compares (which isn't any more efficient than the raw list traversal), but it can also be evaluated using either a lookup table, or via a special CPU instruction to count the leading zeros in a value. In Mark3, we opt for the lookup-table approach since we have a limited number of priorities and not all supported CPU architectures support a count leading zero instruction. To achieve a balance between performance and memory use, we use a 4-bit lookup table (costing 16 bytes) to perform the lookup.

(As a sidenote - this is actually a very common approach in OS schedulers. It's actually part of the reason why modern ARM cores implement a dedicated count-leading-zeros [CLZ] instruction!)

With a 4-bit lookup table and an 8-bit priority-level bitmap, the priority check algorithm looks something like this:

```
// Check the highest 4 priority levels, represented in the
// upper 4 bits in the bitmap
priority = priority_lookup_table[(priority_bitmap >> 4)];
// priority is non-zero if we found something there
if( priority )
```

```
// Add 4 because we were looking at the higher levels
priority += 4;
}
else
{
    // Nothing in the upper 4, look at the lowest 4 priority levels
    // represented by the lowest 4 bits in the bitmap
priority = priority_lookup_table[priority_bitmap & 0x0F];
}
```

Deconstructing this algorithm, you can see that the priority lookup will have on O(1) complexity - and is extremely low-cost.

This operation is thus fully deterministic and time bound - no matter how many threads are scheduled, the operation will always be time-bound to the most expensive of these two code paths. Even with only 8 priority levels, this is still much faster than iteratively checking the thread lists manually, compared with the previous example implementation.

Once the priority level has been found, selecting the next thread to run is trivial, consisting of something like this:

next thread = thread list[prio].get head();

In the case of the get_head() calls, this evaluates to an inline-load of the "head" pointer in the particular thread list.

One important thing to take away from this analysis is that the scheduler is only responsible for selecting the next-torun thread. In fact, these two operations are totally decoupled - no context switching is performed by the scheduler, and the scheduler isn't called from the context switch. The scheduler simply produces new "next thread" values that are consumed from within the context switch code.

10.3.1 Considerations for Round-Robin Scheduling

One thing that isn't considered directly from the scheduler algorithm is the problem of dealing with multiple threads within a single priority group; all of the alorithms that have been explored above simply look at the first Thread in each group.

Mark3 addresses this issue indirectly, using a software timer to manage round-robin scheduling, as follows.

In some instances where the scheduler is run by the kernel directly (typically as a result of calling Thread::Yield()), the kernel will perfom an additional check after running the Scheduler to determine whether or there are multiple ready Threadsin the priority of the next ready thread.

If there are multiple threads within that priority, the kernel adds a one-shot software timer which is programmed to expire at the next Thread's configured quantum. When this timer expires, the timer's callback function executes to perform two simple operations:

"Pivot" the current Thread's priority list. Set a flag telling the kernel to trigger a Yield after exiting the main Timer

Scheduler processing loop

Pivoting the thread list basically moves the head of a circular-linked-list to its next value, which in our case ensures that a new thread will be chosen the next time the scheduler is run (the scheduler only looks at the head node of the priority lists). And by calling Yield, the system forces the scheduler t run, a new round-robin software timer to be installed (if necssary), and triggers a context switch SWI to load the newly-chosen thread. Note that if the thread attached to the round-robin timer is pre-empted, the kernel will take steps to abort and invalidate that round-robin software timer, installing a new one tied to the next thread to run if necessary.

Because the round-robin software timer is dynamically installed when there are multiple ready threads at the highest ready priority level, there is no CPU overhead with this feature unless that condition is met. The cost of round-robin scheduling is also fixed - no matter how many threads there are, and the cost is identical to any other one-shot software timer in the system.

10.3.2 Context Switching

There's really not much to say about the actual context switch operation at a high level. Context switches are triggered whenever it has been determined that a new thread needs to be swapped into the CPU core when the scheduler is run. Mark3 implements also context switches as a call to a software interrupt - on AVR platforms, we

typically use INT0 or INT2 for this (although any pin-change GPIO interrupt can be used), and on ARM we achieve this by triggering a PendSV exception.

However, regardless of the architecture, the contex-switch ISR will perform the following three operations:

Save the current Thread's context to the current Thread stack Make the "next to run" thread the "currently running" thread Restore the context of the next Thread from the Thread stack

The code to implement the context switch is entirely architecture-specific, so it won't be discussed in detail here. It's almost always gory inline-assembly which is used to load and store various CPU registers, and is highly-optimized for speed. We dive into an example implementation for the ARM Cortex-M0 microcontroller in a later section of this book.

10.3.3 Putting It All Together

In short, we can say that the Mark3 scheduler works as follows:

- The scheduler is run whenever a Thread::Yield() is called by a user, as part of blocking calls, or whenever a
 new thread is started
- The Mark3 scheduler is deterministic, selecting the next thread to run in fixed-time
- The scheduler only chooses the next thread to run, the context switch SWI consumes that information to get that thread running
- Where there are multiple ready threads in the highest populated priority level, a software timer is used to manage round-robin scheduling

While we've covered a lot of ground in this section, there's not a whole lot of code involved. However, the code that performs these operations is nuanced and subtle. If you're interested in seeing how this all works in practice, I suggest reading through the Mark3 source code (which is heavily annotated), and stepping through the code with a simulator/emulator.

10.4 Timers

Mark3 implements one-shot and periodic software-timers via the Timer class. The user configures the timer for duration, repetition, and action, at which point the timer can be activated. When an active timer expires, the kernel calls a user-specified callback function, and then reloads the timer in the case of periodic timers. The same timer objects exposed to the user are also used within the kernel to implement round-robin scheduling, and timeout-based APIs for seamphores, mutexes, events, and messages.

Timers are implemented using the following components in the Mark3 Kernel:

10.4 Timers 49

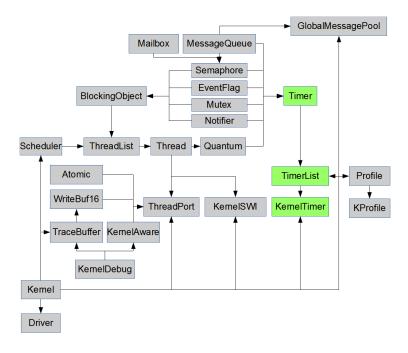


Figure 10.5: Timers

The Timer class provides the basic periodic and one-shot timer functionality used by application code, blocking objects, and IPC.

The TimerList class implements a doubly-linked list of Timer objects, and the logic required to implement a timer tick (tick-based kernel) or timer expiry (tickless kernel) event.

The TimerScheduler class contains a single TimerList object, implementing a single, system-wide list of Timer objects within the kernel. It also provides hooks for the hardware timer, such that when a timer tick or expiry event occurs, the TimerList expiry handler is run.

The KernelTimer class (kerneltimer.cpp/.h) implements the CPU specific hardware timer driver that is used by the kernel and the TimerScheduler to implement software timers.

While extremely simple to use, they provide one of the most powerful execution contexts in the system.

The software timers implemented in Mark3 use interrupt-nesting within the kernel timer's interrupt handler. This context is be considered higher-priority than the highest priority user thread, but lower-priority than other interrupts in the system. As a result, this minimizes critical interrupt latency in the system, albeit at the expense of responsiveness of the user-threads.

For this reason, it's critical to ensure that all timer callback events are kept as short as possible to prevent adding thread-level latency. All heavy-lifting should be left to the threads, so the callback should only implement signalling via IPC or synchronization object.

The time spent in this interrupt context is also dependent on the number of active timers at any given time. However, Mark3 also can be used to minimize the frequency of these interrupts wakeups, by using an optional "tolerance" parameter in the timer API calls. In this way, periodic tasks that have less rigorous real-time constraints can all be grouped together – executing as a group instead of one-after-another.

Mark3 also contains two different timer implementations that can be configured at build-time, each with their own advantages.

10.4.1 Tick-based Timers

In a tick-based timing scheme, the kernel relies on a system-timer interrupt to fire at a relatively-high frequency, on which all kernel timer events are derived. On modern CPUs and microcontrollers, a 1kHz system tick is common, although quite often lower frequencies such as 60Hz, 100Hz, or 120Hz are used. The resolution of this timer also defines the maximum resolution of timer objects as a result. That is, if the timer frequency is 1kHz, a user cannot specify a timer resolution lowerthan 1ms.

The advantage of a tick-based timer is its sheer simplicity. It typically doesn't take much to set up a timer to trigger an interrupt at a fixed-interval, at which point, all system timer intervals are decremented by 1 count. When each system timer interval reaches zero, a callback is called for the event, and the events are either reset and restarted (repeated timers) or cleared (1-shot).

Unfortunately, that simplicity comes at a cost of increased interrupt count, which cause frequent CPU wakeups and utilization, and power consumption.

10.4.2 Tickless Timers

In a tickless system, the kernel timer only runs when there are active timers pending expiry, and even then, the timer module only generates interrupts when a timer expires, or a timer reaches its maximum count value. Additionally, when there are no active timer objects, the timer can is completely disabled – saving even more cycles, power, and CPU wakeups. These factors make the tickless timer approach a highly-optimal solution, suitable for a wide array of low-power applications.

Also, since tickless timers do not rely on a fixed, periodic clock, they can potentially be higher resolution. The only limitation in timer resolution is the precision of the underlying hardware timer as configured. For example, if a 32kHz hardware timer is being used to drive the timer scheduler, the resolution of timer objects would be in the \sim 33us range.

The only downside of the tickless timer system is an added complexity to the timer code, requiring more code space, and slightly longer execution of the timer routines when the timer interrupt is executed.

10.4.3 Timer Processing Algorithm

Timer interrupts occur at either a fixed-frequency (tick-based), or at the next timer expiry interval (tickless), at which point the timer processing algorithm runs. While the timer count is reset by the timer-interrupt, it is still allowed to accumulate ticks while this algorithm is executed in order to ensure that timer-accuracy is kept in real-time. It is also important to note that round-robin scheduling changes are disabled during the execution of this algorithm to prevent race conditions, as the round-robin code also relies on timer objects.

All active timer objects are stored in a doubly-linked list within the timer-scheduler, and this list is processed in two passes by the alogirthm which runs from the timer-interrupt (with interrupt nesting enabled). The first pass determines which timers have expired and the next timer interval, while the second pass deals with executing the timer callbacks themselves. Both phases are discussed in more detail below.

In the first pass, the active timers are decremented by either 1 tick (tick-based), or by the duration of the last elapsed timer interval (tickless). Timers that have zero (or less-than-zero) time remaining have a "callback" flag set, telling the algorithm to call the timer's callback function in the second pass of the loop. In the event of a periodic timer, the timer's interval is reset to its starting value.

For the tickless case, the next timer interval is also computed in the first-pass by looking for the active timer with the least amount of time remaining in its interval. Note that this calculation is irrelevant in the tick-based timer code, as the timer interrupt fires at a fixed-frequency.

In the second pass, the algorithms loops through the list of active timers, looking for those with their "callback" flag set in the first pass. The callback function is then executed for each expired timer, and the "callback" flag cleared. In the event that a non-periodic (one-shot) timer expires, the timer is also removed from the timer scheduler at this time.

In a tickless system, once the second pass of the loop has been completed, the hardware timer is checked to see if the next timer interval has expired while processing the expired timer callbacks. In that event, the complete

algorithm is re-run to ensure that no expired timers are missed. Once the algorithm has completed without the next timer expiring during processing, the expiry time is programmed into the hardware timer. Round-robin scheduling is re-enabled, and if a new thread has been scheduled as a result of action taken during a timer callback, a context switch takes place on return from the timer interrupt.

10.5 Synchronization and IPC

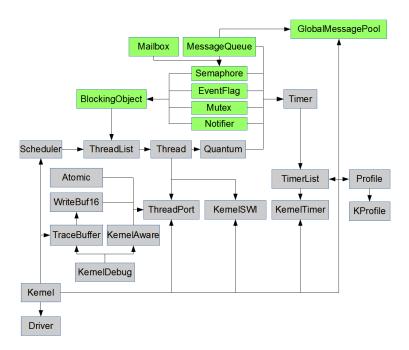


Figure 10.6: Synchronization and IPC

10.6 Blocking Objects

A Blocking object in Mark3 is essentially a thread list. Any blocking object implementation (being a semaphore, mutex, event flag, etc.) canbe built on top of this class, utilizing the provided functions to manipulate thread location within the Kernel.

Blocking a thread results in that thread becoming de-scheduled, placed in the blocking object's own private list of threads which are waiting on the object.

Unblocking a thread results in the reverse: The thread is moved back to its original location from the blocking list.

The only difference between a blocking object based on this class is the logic used to determine what consitutes a Block or Unblock condition.

For instance, a semaphore Pend operation may result in a call to the Block() method with the currently-executing thread in order to make that thread wait for a semaphore Post. That operation would then invoke the UnBlock() method, removing the blocking thread from the semaphore's list, and back into the appropriate thread inside the scheduler.

Care must be taken when implementing blocking objects to ensure that critical sections are used judiciously, otherwise asynchronous events like timers and interrupts could result in non-deterministic and often catastrophic behavior.

Mark3 implements a variety of blocking objects including semaphores, mutexes, event flags, and IPC mechanisms that all inherit from the basic Blocking-object class found in blocking.h/cpp, ensuring consistency and a high degree of code-reuse between components.

10.6.1 Semaphores

Semaphores are used to synchronized execution of threads based on the availability (and quantity) of application-specific resources in the system. They are extremely useful for solving producer-consumer problems, and are the method-of-choice for creating efficient, low latency systems, where ISRs post semaphores that are handled from within the context of individual threads. Semaphores can also be posted (but not pended) from within the interrupt context.

10.6.2 Mutex

Mutexes (Mutual exclusion objects) are provided as a means of creating "protected sections" around a particular resource, allowing for access of these objects to be serialized. Only one thread can hold the mutex at a time

• other threads have to wait until the region is released by the owner thread before they can take their turn operating on the protected resource. Note that mutexes can only be owned by threads - they are not available to other contexts (i.e. interrupts). Calling the mutex APIs from an interrupt will cause catastrophic system failures.

Note that these objects are recursive in Mark3 - that is, the owner thread can claim a mutex more than once. The caveat here is that a recursively-held mutex will not be released until a matching "release" call is made for each "claim" call.

Prioritiy inheritence is provided with these objects as a means to avoid priority inversions. Whenever a thread at a priority than the mutex owner blocks on a mutex, the priority of the current thread is boosted to the highest-priority waiter to ensure that other tasks at intermediate priorities cannot artificically prevent progress from being made.

10.6.3 Event Flags

Event Flags are another synchronization object, conceptually similar to a semaphore.

Unlike a semaphore, however, the condition on which threads are unblocked is determined by a more complex set of rules. Each Event Flag object contains a 16-bit field, and threads block, waiting for combinations of bits within this field to become set.

A thread can wait on any pattern of bits from this field to be set, and any number of threads can wait on any number of different patterns. Threads can wait on a single bit, multiple bits, or bits from within a subset of bits within the field.

As a result, setting a single value in the flag can result in any number of threads becoming unblocked simultaneously. This mechanism is extremely powerful, allowing for all sorts of complex, yet efficient, thread synchronization schemes that can be created using a single shared object.

Note that Event Flags can be set from interrupts, but you cannot wait on an event flag from within an interrupt.

10.6.4 Notification Objects

Notification objects are the most lightweight of all blocking objects supplied by Mark3.

using this blocking primative, one or more threads wait for the notification object to be signalled by code elsewhere in the system (i.e. another thread or interrupt). Once the notification has been signalled, all threads currently blocked on the object become unblocked and moved into the ready list.

Signalling a notification object that has no actively-waiting threads has no effect.

10.7 Messages and Global Message Queue

10.7.1 Messages

Sending messages between threads is the key means of synchronizing access to data, and the primary mechanism to perform asynchronous data processing operations.

Sending a message consists of the following operations:

- · Obtain a Message object from the global message pool
- · Set the message data and event fields
- · Send the message to the destination message queue

While receiving a message consists of the following steps:

- · Wait for a messages in the destination message queue
- · Process the message data
- Return the message back to the global message pool

These operations, and the various data objects involved are discussed in more detail in the following section.

10.7.2 Message Objects

Message objects are used to communicate arbitrary data between threads in a safe and synchronous way.

The message object consists of an event code field and a data field. The event code is used to provide context to the message object, while the data field (essentially a void * data pointer) is used to provide a payload of data corresponding to the particular event.

Access to these fields is marshalled by accessors - the transmitting thread uses the SetData() and SetCode() methods to seed the data, while the receiving thread uses the GetData() and GetCode() methods to retrieve it.

By providing the data as a void data pointer instead of a fixed-size message, we achieve an unprecedented measure of simplicity and flexibility. Data can be either statically or dynamically allocated, and sized appropriately for the event without having to format and reformat data by both sending and receiving threads. The choices here are left to the user - and the kernel doesn't get in the way of efficiency.

It is worth noting that you can send messages to message queues from within ISR context. This helps maintain consistency, since the same APIs can be used to provide event-driven programming facilities throughout the whole of the OS.

10.7.3 Global Message Pool

To maintain efficiency in the messaging system (and to prevent over-allocation of data), a global pool of message objects is provided. The size of this message pool is specified in the implementation, and can be adjusted depending on the requirements of the target application as a compile-time option.

Allocating a message from the message pool is as simple as calling the

GlobalMessagePool::Pop() Method.

Messages are returned back to the GlobalMessagePool::Push() method once the message contents are no longer required.

One must be careful to ensure that discarded messages always are returned to the pool, otherwise a resource leak will occur, which may cripple the operating system's ability to pass data between threads.

10.7.4 Message Queues

Message objects specify data with context, but do not specify where the messages will be sent. For this purpose we have a MessageQueue object. Sending an object to a message queue involves calling the MessageQueue::Send() method, passing in a pointer to the Message object as an argument.

When a message is sent to the queue, the first thread blocked on the queue (as a result of calling the Message Queue Receive() method) will wake up, with a pointer to the Message object returned.

It's worth noting that multiple threads can block on the same message queue, providing a means for multiple threads to share work in parallel.

10.7.5 Mailboxes

Another form of IPC is provided by Mark3, in the form of Mailboxes and Envelopes. Mailboxes are similar to message queues in that they provide a synchronized interface by which data can be transmitted between threads.

Where Message Queues rely on linked lists of lightweight message objects (containing only message code and a void* data-pointer), which are inherently abstract, Mailboxes use a dedicated blob of memory, which is carved up into fixed-size chunks called Envelopes (defined by the user), which are sent and received. Unlike message queues, mailbox data is copied to and from the mailboxes dedicated pool.

Mailboxes also differ in that they provide not only a blocking "receive" call, but also a blocking "send" call, providing the opportunity for threads to block on "mailbox full" as well as "mailbox empty" conditions.

All send/receive APIs support an optional timeout parameter if the KERNEL_USE_TIMEOUTS option has been configured in mark3cfg.h

10.7.6 Atomic Operations

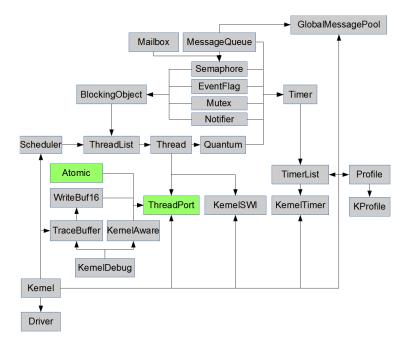


Figure 10.7: Atomic operations

This utility class provides primatives for atomic operations - that is, operations that are guaranteed to execute uninterrupted. Basic atomic primatives provided here include Set/Add/Delete for 8, 16, and 32-bit integer types, as well as an atomic test-and-set.

10.7.7 Drivers

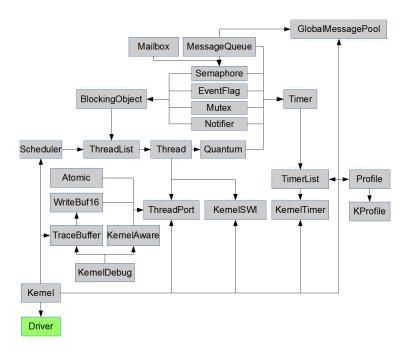


Figure 10.8: Drivers

This is the basis of the driver framework. In the context of Mark3, drivers don't necessarily have to be based on physical hardware peripherals. They can be used to represent algorithms (such as random number generators), files, or protocol stacks. Unlike FunkOS, where driver IO is protected automatically by a mutex, we do not use this kind of protection - we leave it up to the driver implementor to do what's right in its own context. This also frees up the driver to implement all sorts of other neat stuff, like sending messages to threads associated with the driver. Drivers are implemented as character devices, with the standard array of posix-style accessor methods for reading, writing, and general driver control.

A global driver list is provided as a convenient and minimal "filesystem" structure, in which devices can be accessed by name.

Driver Design

A device driver needs to be able to perform the following operations:

- · Initialize a peripheral
- · Start/stop a peripheral
- Handle I/O control operations
- · Perform various read/write operations

At the end of the day, that's pretty much all a device driver has to do, and all of the functionality that needs to be presented to the developer.

We abstract all device drivers using a base-class which implements the following methods:

- · Start/Open
- · Stop/Close
- Control
- Read
- · Write

A basic driver framework and API can thus be implemented in five function calls - that's it! You could even reduce that further by handling the initialize, start, and stop operations inside the "control" operation.

Driver API

In C++, we can implement this as a class to abstract these event handlers, with virtual void functions in the base class overridden by the inherited objects.

To add and remove device drivers from the global table, we use the following methods:

```
void DriverList::Add( Driver *pclDriver_);
void DriverList::Remove( Driver *pclDriver_);
```

DriverList::Add()/Remove() takes a single argument - the pointer to the object to operate on.

Once a driver has been added to the table, drivers are opened by NAME using DriverList::FindByName("/dev/name"). This function returns a pointer to the specified driver if successful, or to a built in /dev/null
device if the path name is invalid. After a driver is open, that pointer is used for all other driver access functions.

This abstraction is incredibly useful - any peripheral or service can be accessed through a consistent set of APIs, that make it easy to substitute implementations from one platform to another. Portability is ensured, the overhead is negligible, and it emphasizes the reuse of both driver and application code as separate entities.

Consider a system with drivers for I2C, SPI, and UART peripherals - under our driver framework, an application can initialize these peripherals and write a greeting to each using the same simple API functions for all drivers:

```
pclI2C = DriverList::FindByName("/dev/i2c");
pclUART = DriverList::FindByName("/dev/tty0");
pclSPI = DriverList::FindByName("/dev/spi");
pclI2C->Write(12, "Hello World!");
pclUART->Write(12, "Hello World!");
pclSPI->Write(12, "Hello World!");
```

10.8 Kernel Proper and Porting

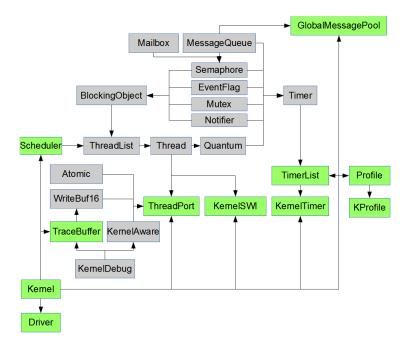


Figure 10.9: Kernel Proper and Porting

The Kernel class is a static class with methods to handle the initialization and startup of the RTOS, manage errors, and provide user-hooks for fatal error handling (functions called when Kernel::Panic() conditions are encountered), or when the Idle function is run.

Internally, Kernel::Init() calls the initialization routines for various kernel objects, providing a single interface by which all RTOS-related system initialization takes place.

Kernel::Start() is called to begin running OS funcitonality, and does not return. Control of the CPU is handed over to the scheduler, and the highest-priority ready thread begins execution in the RTOS environment.

Harware Abstraction Layer

Almost all of the Mark3 kernel (and middleware) is completely platform independent, and should compile cleanly on any platform with a modern C++ compiler. However, there are a few areas within Mark3 that can only be implemented by touching hardware directly.

These interfaces generally cover four features:

- · Thread initializaiton and context-switching logic
- · Software interrupt control (used to generate context switches)
- Hardware timer control (support for time-based functionlity, such as Sleep())
- · Code-execution profiling timer (not necessary to port if code-profiling is not compiled into the kernel)

The hardware abstraction layer in Mark3 provides a consistent interface for each of these four features. Mark3 is ported to new target architectures by providing an implementation for all of the interfaces declared in the abstraction layer. In the following section, we will explore how this was used to port the kernel to ARM Cortex-M0.

Real-world Porting Example - Cortex M0

58 Mark3 Kernel Architecture

This section serves as a real-world example of how Mark3 can be ported to new architectures, how the Mark3 abstraction layer works, and as a practical reference for using the RTOS support functionality baked in modern A← RM Cortex-M series microcontrollers. Most of this documentation here is taken directly from the source code found in the /kernel/cpu/cm0/ ports directory, with additional annotations to explain the port in more detail. Note that a familiarity with Cortex-M series parts will go a long way to understanding the subject matter presented, especially a basic understanding of the ARM CPU registers, exception models, and OS support features (PendSV, SysTick and SVC). If you're unfamiliar with ARM architecture, pay attention to the comments more than the source itself to illustrate the concepts.

Porting Mark3 to a new architecture consists of a few basic pieces; for developers familiar with the target architecture and the porting process, it's not a tremendously onerous endeavour to get Mark3 up-and-running somewhere new. For starters, all non-portable components are completely isolated in the source-tree under:

/embedded/kernel/CPU/VARIANT/TOOLCHAIN/,

where CPU is the architecture, VARIANT is the vendor/part, and TOOLCHAIN is the compiler tool suite used to build the code.

From within the specific port folder, a developer needs only implement a few classes and headers that define the port-specific behavior of Mark3:

- KernelSWI (kernelswi.cpp/kernelswi.h) Provides a maskable software-triggered interrupt used to perform context switching.
- KernelTimer (kerneltimer.cpp/kerneltimer.h) Provides either a fixed-frequency or programmable-interval timer, which triggers an interrupt on expiry. This is used for implementing round-robin scheduling, thread-sleeps, and generic software timers.
- Profiler (kprofile.cpp/kprofile.h) Contains code for runtime code-profiling. This is optional and may be stubbed out if left unimplemented (we won't cover profiling timers here).
- ThreadPort (threadport.cpp/threadport.h) The meat-and-potatoes of the port code lives here. This class contains architecture/part-specific code used to initialize threads, implement critical-sections, perform context-switching, and start the kernel. Most of the time spent in this article focuses on the code found here.

Summarizing the above, these modules provide the following list of functionality:

```
Thread stack initialization
Kernel startup and first thread entry
Context switch and SWI
Kernel timers
Critical Sections
```

The implementation of each of these pieces will be analyzed in detail in the sections that follow.

Thread Stack Initialization

Before a thread can be used, its stack must first be initialized to its default state. This default state ensures that when the thread is scheduled for the first time and its context restored, that it will cause the CPU to jump to the user's specified entry-point function.

All of the platform independent thread setup is handled by the generic kernel code. However, since every CPU architecture has its own register set, and stacks different information as part of an interrupt/exception, we have to implement this thread setup code for each platform we want the kernel to support (Combination of Architecture + Variant + Toolchain).

In the ARM Cortex-M0 architecture, the stack frame consists of the following information:

a) Exception Stack Frame

Contains the 8 registers which the ARM Cortex-M0 CPU automatically pushes to the stack when entering an exception. The following registers are included (in stack'd order):

```
[ XPSR ] <-- Highest address in context [ PC ]
```

```
[ LR ]
[ R12 ]
[ R3 ]
[ R2 ]
[ R1 ]
[ R0 ]
```

XPSR – This is the CPU's status register. We need to set this to 0x01000000 (the "T" bit), which indicates that the CPU is executing in "thumb" mode. Note that ARMv6m and ARMv7m processors only run thumb2 instructions, so an exception is liable to occur if this bit ever gets cleared.

PC – Program Counter. This should be set with the initial entry point (function pointer) for that the user wishes to start executing with this thread.

LR - The base link register. Normally, this register contains the return address of the calling function, which is where the CPU jumps when a function returns. However, our threads generally don't return (and if they do, they're placed into the stop state). As a result we can leave this as 0.

The other registers in the stack frame are generic working registers, and have no special meaning, with the exception that R0 will hold the user's argument value passed into the entrypoint.

b) Complimentary CPU Register Context

```
[ R11 ]
...
[ R4 ] <-- Lowest address in context</pre>
```

These are the other general-purpose CPU registers that need to be backed up/ restored on a context switch, but aren't stacked by default on a Cortex-M0 exception. If there were any additional hardware registers to back up, then we'd also have to include them in this part of the context as well.

As a result, these registers all need to be manually pushed to the stack on stack creation, and will need to be explicitly pushed and pop as part of a normal context switch.

With this default exception state in mind, the following code is used to initialize a thread's stack for a Cortex-M0.

```
void ThreadPort::InitStack(Thread *pclThread)
   K_ULONG *pulStack;
   K_ULONG *pulTemp;
   K ULONG ulAddr;
   K USHORT i:
   // Get the entrypoint for the thread
   ulAddr = (K_ULONG) (pclThread_->m_pfEntryPoint);
   // Get the top-of-stack pointer for the thread
   pulStack = (K_ULONG*)pclThread_->m_pwStackTop;
      Initialize the stack to all FF's to aid in stack depth checking
   pulTemp = (K_ULONG*)pclThread_->m_pwStack;
   for (i = 0; i < pclThread_->m_usStackSize / sizeof(K_ULONG); i++)
       pulTemp[i] = 0xFFFFFFF;
   PUSH_TO_STACK(pulStack, 0);
                                         // Apply one word of padding
   //-- Simulated Exception Stack Frame --
   PUSH_TO_STACK (pulStack, 0x01000000);
                                         // XSPR; set "T" bit for thumb-mode
   PUSH_TO_STACK(pulStack, ulAddr);
                                          // LR
   PUSH TO STACK (pulStack, 0);
   PUSH_TO_STACK (pulStack, 0x12);
   PUSH_TO_STACK(pulStack, 0x3);
   PUSH_TO_STACK(pulStack, 0x2);
   PUSH_TO_STACK(pulStack, 0x1);
   //-- Simulated Manually-Stacked Registers --
   PUSH_TO_STACK(pulStack, 0x11);
   PUSH_TO_STACK(pulStack, 0x10);
   PUSH_TO_STACK (pulStack, 0x09);
   PUSH_TO_STACK (pulStack, 0x08);
   PUSH_TO_STACK(pulStack, 0x07);
   PUSH_TO_STACK (pulStack, 0x06);
   PUSH_TO_STACK (pulStack, 0x05);
```

```
PUSH_TO_STACK(pulStack, 0x04);
pulStack++;

pclThread_->m_pwStackTop = pulStack;
```

Kernel Startup

The same general process applies to starting the kernel on an ARM Cortex-M0 as on other platforms. Here, we initialize and start the platform specific timer and software-interrupt modules, find the first thread to run, and then jump to that first thread.

Now, to perform that last step, we have two options:

1) Simulate a return from an exception manually to start the first thread, or.. 2) Use a software interrupt to trigger the first "Context Restore/Return from Interrupt"

For 1), we basically have to restore the whole stack manually, not relying on the CPU to do any of this for us. That's certainly doable, but not all Cortex parts support this (other members of the family support privileged modes, etc.). That, and the code required to do this is generally more complex due to all of the exception-state simulation. So, we will opt for the second option instead.

To implement a software to start our first thread, we will use the SVC instruction to generate an exception. From that exception, we can then restore the context from our first thread, set the CPU up to use the right "process" stack, and return-from-exception back to our first thread. We'll explore the code for that later.

But, before we can call the SVC exception, we're going to do a couple of things.

First, we're going to reset the default MSP stack pointer to its original top-of-stack value. The rationale here is that we no longer care about the data on the MSP stack, since calling the SVC instruction triggers a chain of events from which we never return. The MSP is also used by all exception-handling, so regaining a few words of stack here can be useful. We'll also enable all maskable exceptions at this point, since this code results in the kernel being started with the CPU executing the RTOS threads, at which point a user would expect interrupts to be enabled.

Note, the default stack pointer location is stored at address 0x00000000 on all ARM Cortex M0 parts. That explains the code below...

```
void ThreadPort_StartFirstThread( void )
{
    asm(
        " ldr r1, [r0] \n" // Reset the MSP to the default base address
        " msr msp, r1 \n"
        " cpsie i \n" // Enable interrupts
        " svc 0 \n" // Jump to SVC Call
    );
}
```

First Thread Entry

This handler has the job of taking the first thread object's stack, and restoring the default state data in a way that ensures that the thread starts executing when returning from the call.

We also keep in mind that there's an 8-byte offset from the beginning of the thread object to the location of the thread stack pointer. This offset is a result of the thread object inheriting from the linked-list node class, which has 8-bytes of data. This is stored first in the object, before the first element of the class, which is the "stack top" pointer.

The following assembly code shows how the SVC call is implemented in Mark3 for the purpose of starting the first thread.

```
mov r11, r7
    mov r10, r6
    mov r9, r5
    mov r8, r4
set psp:
    ; Since r2 is coincidentally back to where the stack pointer should be,
    ; Set the program stack pointer such that returning from the exception handler
   msr psp, r2
load_manually_placed_context_r7_r4:
    ; Get back to the bottom of the manually stacked registers and pop.
    sub r2, #32
    ldmia r2!, {r4-r7} ; Register r4-r11 are restored.
set_thread_and_privilege_modes:
    ; Also modify the control register to force use of thread mode as well
    ; For CM3 forward-compatibility, also set user mode.
    mrs r0, control
    mov r1, #0x03
    orr r0, r1
    control, r0
set_lr:
    ; Set up the link register such that on return, the code operates
    ; in thread mode using the PSP. To do this, we or 0x0D to the value stored
    ; in the lr by the exception hardware EXC_RETURN. Alternately, we could
    ; just force lr to be <code>OxFFFFFFFD</code> (we know that's what we want from the
    ; hardware, anyway)
   mov r0, #0x0D
mov r1, lr
   orr r0, r1
exit_exception:
    ; Return from the exception handler.
    ; The CPU will automagically unstack R0-R3, R12, PC, LR, and xPSR \,
               If all goes well, our thread will start execution at the
    ; entrypoint, with the us-specified argument.
```

On ARM Cortex parts, there's dedicated hardware that's used primarily to support RTOS (or RTOS-like) funcationlity. This functionality includes the SysTick timer, and the PendSV Exception. SysTick is used for a tick-based kernel timer, while the PendSV exception is used for performing context switches. In reality, it's a "special SVC" call that's designed to be lower-overhead, in that it isn't mux'd with a bunch of other system or application functionality.

So how do we go about actually implementing a context switch here? There are a lot of different parts involved, but it essentially comes down to 3 steps:

1) Saving the context.

```
Thread's top-of-stack value is stored, all registers are stacked. We're good to go!
```

2) Swap threads

```
We swap the Scheduler's "next" thread with the "current" thread.
```

3) Restore Context

```
This is more or less identical to what we did when restoring the first context. Some operations may be optimized for data already stored in registers.
```

The code used to implement these steps on Cortex-M0 is presented below:

```
void PendSV_Handler(void)
{
    ASM(
    // Thread_SaveContext()
    " ldr r1, CURR_ \n"
    " ldr r1, [r1] \n "
    " mov r3, r1 \n "
    " add r3, #8 \n "

    // Grab the psp and adjust it by 32 based on extra registers we're going
    // to be manually stacking.
    " mrs r2, psp \n "
```

```
" sub r2, #32 \n "
// While we're here, store the new top-of-stack value
" str r2, [r3] \n '
// And, while r2 is at the bottom of the stack frame, stack r7-r4
" stmia r2!, {r4-r7} \n "
// Stack r11-r8
" mov r7, r11 \n '
" mov r6, r10 \n "
" mov r5, r9 \n "
" mov r4, r8 \n "
" stmia r2!, {r4-r7} \n "
// Equivalent of Thread_Swap() - performs g_pstCurrent = g_pstNext
" ldr r1. CURR \n"
 ldr r1, CURR_ \n"
" ldr r0, NEXT_ \n"
" ldr r0, [r0] \n"
" ldr r0, [r0]
" str r0, [r1] \n"
// Thread_RestoreContext()
// Get the pointer to the next thread's stack " add r0, #8 \n " ldr r2, [r0] \n " \,
// Stack pointer is in r2, start loading registers from
// the "manually-stacked" set
// Start with r11-r8, since these can't be accessed directly.
 add r2, #16 \n "
" ldmia r2!, {r4-r7} \n "
" mov r11, r7
               \n '
" mov r10, r6 \n "
" mov r9, r5 \n "
" mov r8, r4 \n "
// After subbing R2 #16 manually, and #16 through ldmia, our PSP is where it
// needs to be when we return from the exception handler
" msr psp, r2 \n "
// Pop manually-stacked R4-R7
 sub r2, #32 \n "
" ldmia r2!, {r4-r7} \n "
// lr contains the proper EXC_RETURN value
// we're done with the exception, so return back to newly-chosen thread
" bx lr \n"
" nop \n
// Must be 4-byte aligned.
 NEXT_: .word g_pstNext \n"
" CURR_: .word g_pstCurrent \n"
);
```

Kernel Timers

ARM Cortex-M series microcontrollers each contain a SysTick timer, which was designed to facilitate a fixed-interval RTOS timer-tick. This timer is a precise 24-bit down-count timer, run at the main CPU clock frequency, that can be programmed to trigger an exception when the timer expires. The handler for this exception can thus be used to drive software timers throughout the system on a fixed interval.

Unfortunately, this hardware is extremely simple, and does not offer the flexibility of other timer hardware commonly implemented by MCU vendors - specifically a suitable timer prescalar that can be used to generate efficient, long-counting intervals. As a result, while the "generic" port of Mark3 for Cortex-M0 leverages the common SysTick timer interface, it only supports the tick-based version of the kernel's timer (note that specific Cortex-M0 ports such as the Atmel SAMD20 do have tickless timers).

Setting up a tick-based KernelTimer class to use the SysTick timer is, however, extremely easy, as is illustrated below:

```
void KernelTimer::Start(void)
{
    SysTick_Config(PORT_SYSTEM_FREQ / 1000); // 1KHz fixed clock...
    NVIC_EnableIRQ(SysTick_IRQn);
}
In this instance, the call to SysTick_Config() generates a 1kHz system-tick
signal, and the NVIC_EnableIRQ() call ensures that a SysTick exception is
generated for each tick. All other functions in the Cortex version of the
KernelTimer class are essentially stubbed out (see the source for more details).
```

```
Note that the functions used in this call are part of the ARM Cortex
Microcontroller Software Interface Standard (cmsis), and are supplied by all
parts vendors selling Cortex hardware. This greatly simplifies the design
of our port-code, since we can be reasonably assured that these APIs will
work the same on all devices.
The handler code called when a SysTick exception occurs is basically the
same as on other platforms (such as AVR), except that we explicitly clear the "exception pending" bit before returning. This is implemented in the
following code:
\code{.cpp}
void SysTick_Handler (void)
#if KERNEL_USE_TIMERS
    TimerScheduler::Process();
#endif
#if KERNEL_USE_QUANTUM
    Quantum::UpdateTimer();
    // Clear the systick interrupt pending bit.
    SCB->ICSR |= SCB_ICSR_PENDSTCLR_Msk;
```

Critical Sections

A "critical section" is a block of code whose execution cannot be interrupted by means of context switches or an interrupt. In a traditional single-core operating system, it is typically implemented as a block of code where the interrupts are disabled - this is also the approach taken by Mark3. Given that every CPU has its own means of disabling/enabling interrupts, the implementation of the critical section APIs is also non-portable.

In the Cortex-M0 port, we implement the two critical section APIs (CS_ENTER() and CS_EXIT()) as function-like macros containing inline assembly. All uses of these calls are called in pairs within a function and must take place at the same level-of-scope. Also, as nesting may occur (critical section within a critical section), this must be taken into account in the code.

In general, CS_ENTER() performs the following tasks:

```
    Cache the current interrupt-enabled state within a local variable in the thread's state
    Disable interrupts
    Conversely, CS_EXIT() performs the following tasks:
```

```
    Read the original interrupt-enabled state from the cached value
    Restore interrupts to the original value
```

On Cortex-M series microontrollers, the PRIMASK special register contains a single status bit which can be used to enable/disable all maskable interrupts at once. This register can be read directly to examine or modify its state. For convenience, ARMv6m provides two instructions to enable/disable interrupts

• cpsid (disable interrupts) and cpsie (enable interrupts). Mark3 Implements these steps according to the following code:

```
: \
: [STATUS] "r" (__ulRegState) \
); \
```

Summary

In this section we have investigated how the main non-portable areas of the Mark3 RTOS are implemented on a Cortex-M0 microcontroller. Mark3 leverages all of the hardware blocks designed to enable RTOS functionality on ARM Cortex-M series microcontrollers: the SVC call provides the mechanism by which we start the kernel, the PendSV exception provides the necessary software interrupt, and the SysTick timer provides an RTOS tick. As a result, Mark3 is a perfect fit for these devices - and as a result of this approach, the same RTOS port code should work with little to no modification on all ARM Cortex-M parts.

We have discussed what functionality in the RTOS is not portable, and what interfaces must be implemented in order to complete a fully-functional port. The five specific areas which are non-portable (stack initialization, kernel startup/entry, kernel timers, context switching, and critical sections) have been discussed in detail, with the platform-specific source provided as a practical reference to ARM-specific OS features, as well as Mark3's porting infrastructure. From this example (and the accompanying source), it should be possible for an experienced developers to create a port Mark3 to other microcontroller targets.

Mark3C - C-language API bindings for the Mark3 Kernel.

Mark3 now includes an optional additional library with C language bindings for all core kernel APIs, known as Mark3C.

This library alllows applications to be written in C, while still enjoying all of the benefits of the clean, modular design of the core RTOS kernel.

The C-language Mark3C APIs map directly to their Mark3 counterparts using a simple set of conventions, documented below. As a result, explicit API documentation for Mark3C is not necessary, as the functions map 1-1 to their C++ counterparts.

11.1 API Conventions

1) Static Methods:

2) Kernel Object Methods:

In short, any class instance is represented using an object handle, and is always passed into the relevant APIs as the first argument. Further, any method that returns a pointer to an object in the C++ implementation now returns a handle to that object.

3) Overloaded Methods:

a) Methods overloaded with a Timeout parameter:

b) Methods overloaded based on number of arguments:

c) Methods overloaded base on parameter types:

d) Allocate-once memory allocation APIs

```
AutoAlloc::New<ObjectName> Becomes Alloc_<ObjectName> AutoAlloc::Allocate(uint16_t u16Size_) Becomes AutoAlloc(uint16_t u16Size_)
```

11.2 Allocating Objects

Aside from the API name translations, the object allocation scheme is the major different between Mark3C and Mark3. Instead of instantiating objects of the various kernel types, kernel objects must be declared using Declaration macros, which serve the purpose of reserving memory for the kernel object, and provide an opaque handle to that object memory. This is the case for statically-allocated objects, and objects allocated on the stack.

Example: Declaring a thread

```
#include "mark3c.h"

// Statically-allocated
DECLARE_THREAD(hMyThread1);
...

// On stack
int main(void)
{
    DECLARE_THREAD(hMyThread2);
    ...
}

Where:

hMyThread1 - is a handle to a statically-allocated thread
hMyThread2 - is a handle to a thread allocated from the main stack.
```

Alternatively, the AutoAlloc APIs can be used to dynamically allocate objects, as demonstrated in the following example.

```
void Allocate_Example(void)
{
    Thread_t hMyThread = AutoAlloc_Thread();

    Thread_Init(hMyThread, awMyStack, sizeof(awMyStack), 1, MyFunction, 0);
}
```

Note that the relevant kernel-object Init() function *must* be called prior to using any kernel object, whether or not they have been allocated statically, or dynamically.

11.3 Drivers in Mark3C

Because the Mark3 driver framework makes extensive use of inheritence and virtual functions in C++, it is difficult to wrap for use with C. In addition, all derived drivers types would still need to have their custom interfaces wrapped

11.3 Drivers in Mark3C 67

with C-language bindings in order to be accessible from C, which is cumbersome and inelegant, and duplicates large portions of code. As a result, it's probably less work to write a Mark3C specific driver module with a similar interface to Mark3, on which drivers can be ported where necessary, or implemented directly on for efficiency. The APIs presented in driver3c.h provide such an interface for use in Mark3c.

68	Mark3C - C-language API bindings for the Mark3 Kernel.
	Congreted on Eri. Jul 7 2017 01:40:20 for Mark? Pooltime Kernel by Devygon

Release Notes

12.1 R6 Release

- · New: Replace recursive-make build system with CMake and Ninja
- · New: Transitioned version control to Git from Subversion.
- · New: Socket library, implementing named "domain-socket" style IPC
- · New: State Machine framework library
- · New: Software I2C library completed, with demo app
- · New: Kernel Timer loop can optionally be run within its own thread instead of a nested interrupt
- · New: UART drivers are all now abstracted throught UartDriver base class for portability
- · Experimental: Process library, allowing for the creation of resource-isolated processes
- Removed: Bare-metal support for Atmel SAMD20 (generic port still works)
- · Cleanup all compiler warnings on atmega328p
- · Various Bugfixes and optimizations
- · Various Script changes related to automating the build + release process

12.2 R5 Release

- New: Shell library for creating responsive CLIs for embedded applications (M3Shell)
- · New: Stream library for creating thread-safe buffered streams (streamer)
- New: Blocking UART implementation for AVR (drvUARTplus)
- New: "Extended context" kernel feature, which is used to implement thread-local storage
- New: "Extra Checks" kernel feature, which enforces safe API usage under pain of Kernel Panic
- New: Realtime clock library
- New: Example application + bsp for the open-hardware Mark3no development board (mark3no)
- · New: Kernel objects descoped/destroyed while still in active use will now cause kernel panic
- New: Kernel callouts for thread creation/destruction/context switching, used for time tracking
- New: Simple power management class

70 Release Notes

- New: WIP software-based I2C + SPI drivers
- · Optimized thread scheduling via target-optimized "count-leading-zero" macros
- · Expanded memutil library
- · Various optimizations of ARM Cortex-M assembly code
- · Various bugfixes to Timer code
- Improved stack overflow checking + warning (stack guard kernel feature)
- · AVR bootloader now supports targets with more than 64K of flash
- · Moved some port configuration out of platform.mak into header files in the kernel port code
- · The usual minor bugfixes and "gentle refactoring"

12.3 R4 Release

- · New: C-language bindings for Mark3 kernel (mark3c library)
- · New: Support for ARM Cortex-M3 and Cortex-M4 (floating point) targets
- · New: Support for Atmel AVR atmega2560 and arduino pro mega
- · New: Full-featured, lightweight heap implementation
- · New: Mailbox IPC class
- · New: Notification object class
- · New: lighweight tracelogger/instrumentation implementation (buffalogger), with sample parser
- New: High-performance AVR Software UART implementation
- · New: Allocate-once "AutoAlloc" memory allocator
- · New: Fixed-time blocking/unblocking operations added to ThreadList/Blocking class
- · Placement-new supported for all kernel objects
- Scheduler now supports up to 1024 levels of thread priority, up from 8 (configurable at build-time)
- Kernel now uses stdint.h types for standard integers (instead of K_CHAR, K_ULONG, etc.)
- · Greatly expanded documentation, with many new examples covering all key kernel features
- · Expanded unit test coverage on AVR
- · Updated build system and scripts for easier kernel configuration
- · Updated builds to only attempt to build tests for supported platforms

12.4 R3 Release

- New: Added support for MSP430 microcontrollers
- · New: Added Kernel Idle-Function hook to eliminate the need for a dedicated idle-thread (where supported)
- · New: Support for kernel-aware simulation and testing via flAVR AVR simulator
- · Updated AVR driver selection
- · General bugfixes and maintenance
- Expanded documentation and test coverage

12.5 R2 71

12.5 R2

- Experimental release, using a "kernel transaction queue" for serializing kernel calls
- Works as a proof-of-concept, but abandoned due to overhead of the transaction mechanism in the general case.

12.6 R1 - 2nd Release Candidate

- New: Added support for ARM Cortex-M0 targets
- · New: Added support for variuos AVR targets
- · New: Timers now support a "tolerance" parameter for grouping timers with close expiry times
- Expanded scripts and auotmation used in build/test
- · Updated and expanded graphics APIs
- · Large number of bugfixes

12.7 R1 - 1st Release Candidate

· Initial release, with support for AVR microcontrollers

72 **Release Notes**

Profiling Results

The following profiling results were obtained using an ATMega328p @ 16MHz.

The test cases are designed to make use of the kernel profiler, which accurately measures the performance of the fundamental system APIs, in order to provide information for user comparison, as well as to ensure that regressions are not being introduced into the system.

13.1 Date Performed

Fri 7 Jul 01:40:14 UTC 2017

13.2 Compiler Information

The kernel and test code used in these results were built using the following compiler:

13.3 Profiling Results

```
- Semaphore Initialization: 40 cycles (averaged over 100 iterations)
- Semaphore Post (uncontested): 120 cycles (averaged over 100 iterations)
- Semaphore Pend (uncontested): 32 cycles (averaged over 100 iterations)
- Semaphore Flyback Time (Contested Pend): 2272 cycles (averaged over 100 iterations)
- Mutex Init: 000004294967272 cycles (averaged over 100 iterations)
- Mutex Claim: 216 cycles (averaged over 100 iterations)
- Mutex Release: 120 cycles (averaged over 100 iterations)
- Thread Initialize: 8312 cycles (averaged over 100 iterations)
- Thread Start: 1096 cycles (averaged over 100 iterations)
- Context Switch: 168 cycles (averaged over 100 iterations)
- Thread Schedule: 32 cycles (averaged over 100 iterations)
```

Profiling Results 74

Code Size Profiling

The following report details the size of each module compiled into the kernel.

The size of each component is dependent on the flags specified in mark3cfg.h at compile time. Note that these sizes represent the maximum size of each module before dead code elimination and any additional link-time optimization, and represent the maximum possible size that any module can take.

The results below are for profiling on Atmel AVR atmega328p-based targets using gcc. Results are not necessarily indicative of relative or absolute performance on other platforms or toolchains.

14.1 Information

Date Profiled: Fri 7 Jul 01:40:15 UTC 2017

14.2 Compiler Version

avr-gcc (GCC) 4.8.1 Copyright (C) 2013 Free Software Foundation, Inc. This is free software; see the source for copying conditions. There is NO warranty; not even for MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE.

14.3 Profiling Results

Mark3 Module Size Report:

```
- Atomic Operations.....: 0 Bytes
 Allocate-once Heap......: 0 Bytes
Synchronization Objects - Base Class....: 126 Bytes
  Device Driver Framework (including /dev/null)...: 212 Bytes
  Synchronization Object - Event Flag.....: 754 Bytes
 Mark3 Kernel Base Class.....: 163 Bytes
 Atmel AVR - Kernel Aware Simulation Support.....: 190 Bytes
  Semaphore (Synchronization Object).....: 530 Bytes
  Fundamental Kernel Linked-List Classes..... : 458 Bytes
  Mailbox IPC Support.....: 862 Bytes
  Message-based IPC.....: 384 Bytes
  Mutex (Synchronization Object).....: 712 Bytes
 Notification Blocking Object...: 580 Bytes
2D Priority Map Object - Scheduler...: 116 Bytes
  Performance-profiling timers..... : 474 Bytes
  Round-Robin Scheduling Support.....: 261 Bytes
  Thread Scheduling.....: 318 Bytes
  Thread Implementation.....: 1665 Bytes
  Fundamental Kernel Thread-list Data Structures.. : 250 Bytes
  Software Timer Kernel Object . . . . 508 Bytes
Software Timer Management . . . . 645 Bytes
  Runtime Kernel Trace Implementation.....: 0 Bytes
```

76 Code Size Profiling

```
- Atmel AVR - Profiling Timer Implementation. : 216 Bytes
- Atmel AVR - Kernel Interrupt Implementation. : 56 Bytes
- Atmel AVR - Kernel Timer Implementation. : 382 Bytes
- Atmel AVR - Basic Threading Support. : 526 Bytes
```

Mark3 Kernel Size Summary:

- Kernel : 3096 Bytes
- Synchronization Objects : 2380 Bytes
- Port : 2812 Bytes
- Features : 2100 Bytes
- Total Size : 10388 Bytes

Hierarchical Index

15.1 Class Hierarchy

This inheritance list is sorted roughly, but not completely, alphabetically:

BlockingObject
EventFlag
Mutex
Notify
Semaphore
DriverList
FakeThread_t
GlobalMessagePool
Kernel
KernelAware
KernelSWI
KernelTimer
LinkList
CircularLinkList
ThreadList
DoubleLinkList
TimerList
LinkListNode
Driver
Message
Thread
Timer
Mailbox
MessagePool
MessageQueue
PriorityMap
ProfileTimer
Quantum
Scheduler
ThreadPort
TimerScheduler

78 **Hierarchical Index**

Class Index

16.1 Class List

Here are the classes, structs, unions and interfaces with brief descriptions:

BlockingObject		
Class implementing thread-blocking primatives		85
CircularLinkList		
Circular-linked-list data type, inherited from the base LinkList type		87
DoubleLinkList		
Doubly-linked-list data type, inherited from the base LinkList type		88
Driver		
Base device-driver class used in hardware abstraction		90
DriverList		
List of Driver objects used to keep track of all device drivers in the system		93
EventFlag		
Blocking object, similar to a semaphore or mutex, commonly used for synchronizing threcution based on events occurring within the system		94
FakeThread_t		
If the kernel is set up to use an idle function instead of an idle thread, we use a placehol structure to "simulate" the effect of having an idle thread in the system		97
GlobalMessagePool		
Implements a list of message objects shared between all threads		98
Kernel		
Class that encapsulates all of the kernel startup functions		99
KernelAware		
The KernelAware class		105
KernelSWI		
Class providing the software-interrupt required for context-switching in the kernel		108
KernelTimer		
Hardware timer interface, used by all scheduling/timer subsystems		110
LinkList		
Abstract-data-type from which all other linked-lists are derived		113
LinkListNode		
Basic linked-list node data structure		114
Mailbox		
Implements an IPC mechnism based on envelopes containing data of a fixed size (confinitialization) that reside within a buffer of memory provided by the user	•	116
Message		
Class to provide message-based IPC services in the kernel		123
MessagePool		
Implements a list of message objects		125

80 Class Index

Messag	eQueue	
	List of messages, used as the channel for sending and receiving messages between threads .	127
Mutex		
	Mutual-exclusion locks, based on BlockingObject	129
Notify		
	Blocking object type, that allows one or more threads to wait for an event to occur before resuming operation	133
Priority N	Лар	
	The PriorityMap class	135
ProfileTi	imer	
	Profiling timer	136
Quantur	n	
	Static-class used to implement Thread quantum functionality, which is a key part of round-robin scheduling	138
Schedul	er	
	Priority-based round-robin Thread scheduling, using ThreadLists for housekeeping	140
Semaph	nore	
	Binary & Counting semaphores, based on BlockingObject base class	143
Thread		
	Object providing fundamental multitasking support in the kernel	146
ThreadL	ist	
	This class is used for building thread-management facilities, such as schedulers, and blocking objects	156
ThreadF	Port	
	Class defining the architecture specific functions required by the kernel	159
Timer		
	Kernel-managed software timers	160
TimerLis	st en	
	TimerList class - a doubly-linked-list of timer objects	166
TimerSc	cheduler	
	"Static" Class used to interface a global TimerList with the rest of the kernel	168

File Index

17.1 File List

Here is a list of all documented files with brief description	Here	is a lis	t of all	documented	files with	brief	description	s:
---	------	----------	----------	------------	------------	-------	-------------	----

/media/usb/project/github/Mark3/kernel/atomic.cpp	
Basic Atomic Operations	71
/media/usb/project/github/Mark3/kernel/autoalloc.cpp	
Automatic memory allocation for kernel objects	73
/media/usb/project/github/Mark3/kernel/blocking.cpp	
Implementation of base class for blocking objects	75
/media/usb/project/github/Mark3/kernel/driver.cpp	
Device driver/hardware abstraction layer	94
/media/usb/project/github/Mark3/kernel/eventflag.cpp	
Event Flag Blocking Object/IPC-Object implementation	95
/media/usb/project/github/Mark3/kernel/kernel.cpp	
Kernel initialization and startup code	00
/media/usb/project/github/Mark3/kernel/kernelaware.cpp	
Kernel aware simulation support	01
/media/usb/project/github/Mark3/kernel/ksemaphore.cpp	
Semaphore Blocking-Object Implemenation	03
/media/usb/project/github/Mark3/kernel/II.cpp	
Core Linked-List implementation, from which all kernel objects are derived	07
/media/usb/project/github/Mark3/kernel/mailbox.cpp	
Mailbox + Envelope IPC mechanism	09
/media/usb/project/github/Mark3/kernel/message.cpp	
Inter-thread communications via message passing	13
/media/usb/project/github/Mark3/kernel/mutex.cpp	
· · ·	16
/media/usb/project/github/Mark3/kernel/notify.cpp	
	19
/media/usb/project/github/Mark3/kernel/priomap.cpp	
· · · · · · · · · · · · · · · · · · ·	22
/media/usb/project/github/Mark3/kernel/profile.cpp	
	24
/media/usb/project/github/Mark3/kernel/quantum.cpp	
	81
/media/usb/project/github/Mark3/kernel/scheduler.cpp	
	83
/media/usb/project/github/Mark3/kernel/thread.cpp	
, , ,	85
/media/usb/project/github/Mark3/kernel/threadlist.cpp	
	92

82 File Index

/media/usb/project/github/Mark3/kernel/timer.cpp	
Timer implementations	294
/media/usb/project/github/Mark3/kernel/timerlist.cpp	
Implements timer list processing algorithms, responsible for all timer tick and expiry logic	297
/media/usb/project/github/Mark3/kernel/tracebuffer.cpp	
Kernel trace buffer class definition	300
/media/usb/project/github/Mark3/kernel/cpu/avr/atmega328p/gcc/kernelprofile.cpp	
ATMega328p Profiling timer implementation	177
/media/usb/project/github/Mark3/kernel/cpu/avr/atmega328p/gcc/kernelswi.cpp	
Kernel Software interrupt implementation for ATMega328p	178
/media/usb/project/github/Mark3/kernel/cpu/avr/atmega328p/gcc/kerneltimer.cpp	
Kernel Timer Implementation for ATMega328p	179
/media/usb/project/github/Mark3/kernel/cpu/avr/atmega328p/gcc/threadport.cpp	
ATMega328p Multithreading	191
/media/usb/project/github/Mark3/kernel/cpu/avr/atmega328p/gcc/public/kernelprofile.h	
Profiling timer hardware interface	182
/media/usb/project/github/Mark3/kernel/cpu/avr/atmega328p/gcc/public/kernelswi.h	
Kernel Software interrupt declarations	183
/media/usb/project/github/Mark3/kernel/cpu/avr/atmega328p/gcc/public/kerneltimer.h	
Kernel Timer Class declaration	184
/media/usb/project/github/Mark3/kernel/cpu/avr/atmega328p/gcc/public/portcfg.h	
Mark3 Port Configuration	185
/media/usb/project/github/Mark3/kernel/cpu/avr/atmega328p/gcc/public/threadport.h	
ATMega328p Multithreading support	188
/media/usb/project/github/Mark3/kernel/public/atomic.h	
Basic Atomic Operations	225
/media/usb/project/github/Mark3/kernel/public/autoalloc.h	
Automatic memory allocation for kernel objects	226
/media/usb/project/github/Mark3/kernel/public/blocking.h	
Blocking object base class declarations	228
/media/usb/project/github/Mark3/kernel/public/buffalogger.h	
Super-efficient, super-secure logging routines	229
/media/usb/project/github/Mark3/kernel/public/ dbg_file_list.h	??
/media/usb/project/github/Mark3/kernel/public/driver.h	
Driver abstraction framework	230
/media/usb/project/github/Mark3/kernel/public/eventflag.h	
Event Flag Blocking Object/IPC-Object definition	232
/media/usb/project/github/Mark3/kernel/public/kernel.h	
Kernel initialization and startup class	234
/media/usb/project/github/Mark3/kernel/public/kernelaware.h	
	235
/media/usb/project/github/Mark3/kernel/public/kerneldebug.h	
Macros and functions used for assertions, kernel traces, etc	237
/media/usb/project/github/Mark3/kernel/public/kerneltypes.h	
	243
/media/usb/project/github/Mark3/kernel/public/ksemaphore.h	
Semaphore Blocking Object class declarations	244
/media/usb/project/github/Mark3/kernel/public/II.h	
Core linked-list declarations, used by all kernel list types	246
/media/usb/project/github/Mark3/kernel/public/mailbox.h	
· · · ·	248
/media/usb/project/github/Mark3/kernel/public/manual.h	
/brief Ascii-format documentation, used by doxygen to create various printable and viewable	
forms	250
/media/usb/project/github/Mark3/kernel/public/mark3.h	
Single include file given to users of the Mark3 Kernel API	251
/media/usb/project/github/Mark3/kernel/public/mark3cfg.h	
Mark3 Kernel Configuration	252

17.1 File List 83

/media/usb/project/github/Mark3/kernel/public/message.h
Inter-thread communication via message-passing
/media/usb/project/github/Mark3/kernel/public/mutex.h
Mutual exclusion class declaration
/media/usb/project/github/Mark3/kernel/public/notify.h
Lightweight thread notification - blocking object
/media/usb/project/github/Mark3/kernel/public/paniccodes.h
Defines the reason codes thrown when a kernel panic occurs
/media/usb/project/github/Mark3/kernel/public/priomap.h
Priority map data structure
/media/usb/project/github/Mark3/kernel/public/profile.h
High-precision profiling timers
/media/usb/project/github/Mark3/kernel/public/ profiling_results.h
/media/usb/project/github/Mark3/kernel/public/quantum.h
Thread Quantum declarations for Round-Robin Scheduling
/media/usb/project/github/Mark3/kernel/public/scheduler.h
Thread scheduler function declarations
/media/usb/project/github/Mark3/kernel/public/sizeprofile.h
/media/usb/project/github/Mark3/kernel/public/thread.h
Platform independent thread class declarations
/media/usb/project/github/Mark3/kernel/public/threadlist.h
Thread linked-list declarations
/media/usb/project/github/Mark3/kernel/public/timer.h
Timer object declarations
/media/usb/project/github/Mark3/kernel/public/timerlist.h
Timer list declarations
/media/usb/project/github/Mark3/kernel/public/timerscheduler.h
Timer scheduler declarations
/media/usb/project/github/Mark3/kernel/public/tracebuffer.h
Kernel trace buffer class declaration
/media/usb/project/github/Mark3/libs/mark3c/public/ driver3c.h
/media/usb/project/github/Mark3/libs/mark3c/public/fake_types.h
C-struct definitions that mirror
/media/usb/project/github/Mark3/libs/mark3c/public/mark3c.h
Header providing C-language API bindings for the Mark3 kernel

84 File Index


Class Documentation

18.1 BlockingObject Class Reference

Class implementing thread-blocking primatives.

#include <blocking.h>

Inheritance diagram for BlockingObject:

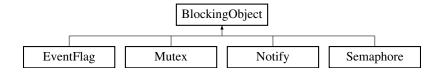

Protected Member Functions

void Block (Thread *pclThread_)

Block.

void BlockPriority (Thread *pclThread_)

BlockPriority.

void UnBlock (Thread *pclThread_)

UnBlock.

• void SetInitialized (void)

SetInitialized.

• bool IsInitialized (void)

IsInitialized.

Protected Attributes

• ThreadList m_clBlockList

ThreadList which is used to hold the list of threads blocked on a given object.

• uint8_t m_u8Initialized

Token used to check whether or not the object has been initialized prior to use.

86 Class Documentation

18.1.1 Detailed Description

Class implementing thread-blocking primatives.

used for implementing things like semaphores, mutexes, message queues, or anything else that could cause a thread to suspend execution on some external stimulus.

Definition at line 71 of file blocking.h.

18.1.2 Member Function Documentation

```
18.1.2.1 void BlockingObject::Block ( Thread * pclThread_ ) [protected]
```

Block.

Blocks a thread on this object. This is the fundamental operation performed by any sort of blocking operation in the operating system. All semaphores/mutexes/sleeping/messaging/etc ends up going through the blocking code at some point as part of the code that manages a transition from an "active" or "waiting" thread to a "blocked" thread.

The steps involved in blocking a thread (which are performed in the function itself) are as follows;

1) Remove the specified thread from the current owner's list (which is likely one of the scheduler's thread lists) 2) Add the thread to this object's thread list 3) Setting the thread's "current thread-list" point to reference this object's threadlist.

Parameters

pclThread_ Pointer to the thread object that will be blocked.

18.1.2.2 void BlockingObject::BlockPriority (Thread * *pclThread_* **)** [protected]

BlockPriority.

Same as Block(), but ensures that threads are added to the block-list in priority-order, which optimizes the unblock procedure.

Parameters

pclThread_ Pointer to the Thread to Block.

18.1.2.3 bool BlockingObject::IsInitialized (void) [inline], [protected]

IsInitialized.

Returns

Definition at line 147 of file blocking.h.

18.1.2.4 void BlockingObject::UnBlock (Thread * *pclThread_* **)** [protected]

UnBlock.

Unblock a thread that is already blocked on this object, returning it to the "ready" state by performing the following steps:

Parameters

pclThread Pointer to the thread to unblock.

1) Removing the thread from this object's threadlist 2) Restoring the thread to its "original" owner's list

The documentation for this class was generated from the following file:


/media/usb/project/github/Mark3/kernel/public/blocking.h

18.2 CircularLinkList Class Reference

Circular-linked-list data type, inherited from the base LinkList type.

#include <ll.h>

Inheritance diagram for CircularLinkList:

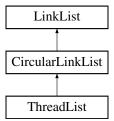

Public Member Functions

void Add (LinkListNode *node_)

Add the linked list node to this linked list.

• void Remove (LinkListNode *node_)

Remove.

• void PivotForward ()

PivotForward.

void PivotBackward ()

PivotBackward.

void InsertNodeBefore (LinkListNode *node_, LinkListNode *insert_)

InsertNodeBefore.

Additional Inherited Members

18.2.1 Detailed Description

Circular-linked-list data type, inherited from the base LinkList type.

Definition at line 187 of file II.h.

18.2.2 Member Function Documentation

18.2.2.1 void CircularLinkList::Add (LinkListNode * node_)

Add the linked list node to this linked list.

Parameters

node_	Pointer to the node to add
-------	----------------------------

Definition at line 98 of file II.cpp.

18.2.2.2 void CircularLinkList::InsertNodeBefore (LinkListNode * node_, LinkListNode * insert_)

InsertNodeBefore.

Insert a linked-list node into the list before the specified insertion point.

Parameters

node_	Node to insert into the list
insert_	Insert point.

Definition at line 172 of file II.cpp.

18.2.2.3 void CircularLinkList::PivotBackward ()

PivotBackward.

Pivot the head of the circularly linked list backward (Head = Head->prev, Tail = Tail->prev)

Definition at line 163 of file II.cpp.

18.2.2.4 void CircularLinkList::PivotForward ()

PivotForward.

Pivot the head of the circularly linked list forward (Head = Head->next, Tail = Tail->next)

Definition at line 154 of file II.cpp.

18.2.2.5 void CircularLinkList::Remove (LinkListNode * node_)

Remove.

Add the linked list node to this linked list

Parameters

node_ Pointer to the node to remove

Definition at line 120 of file II.cpp.

The documentation for this class was generated from the following files:


- /media/usb/project/github/Mark3/kernel/public/II.h
- /media/usb/project/github/Mark3/kernel/II.cpp

18.3 DoubleLinkList Class Reference

Doubly-linked-list data type, inherited from the base LinkList type.

#include <ll.h>

Inheritance diagram for DoubleLinkList:

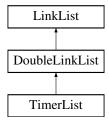

Public Member Functions

• DoubleLinkList ()

DoubleLinkList.

void Add (LinkListNode *node_)

Add.

void Remove (LinkListNode *node_)

Remove.

Additional Inherited Members

18.3.1 Detailed Description

Doubly-linked-list data type, inherited from the base LinkList type.

Definition at line 149 of file II.h.

18.3.2 Constructor & Destructor Documentation

18.3.2.1 DoubleLinkList::DoubleLinkList() [inline]

DoubleLinkList.

Default constructor - initializes the head/tail nodes to NULL

Definition at line 158 of file II.h.

18.3.3 Member Function Documentation

18.3.3.1 void DoubleLinkList::Add (LinkListNode * node_)

Add.

Add the linked list node to this linked list

Parameters

node Pointer to the node to add

Definition at line 47 of file II.cpp.

18.3.3.2 void DoubleLinkList::Remove (LinkListNode * node_)

Remove.

Add the linked list node to this linked list

Parameters

node_ Pointer to the node to remove

Definition at line 68 of file II.cpp.

The documentation for this class was generated from the following files:

- /media/usb/project/github/Mark3/kernel/public/ll.h
- /media/usb/project/github/Mark3/kernel/ll.cpp

18.4 Driver Class Reference

Base device-driver class used in hardware abstraction.

```
#include <driver.h>
```

Inheritance diagram for Driver:



Public Member Functions

• virtual void Init ()=0

Init.

• virtual uint8_t Open ()=0

Open.

• virtual uint8_t Close ()=0

Close.

• virtual uint16_t Read (uint16_t u16Bytes_, uint8_t *pu8Data_)=0

Read.

• virtual uint16_t Write (uint16_t u16Bytes_, uint8_t *pu8Data_)=0

Write

virtual uint16_t Control (uint16_t u16Event_, void *pvDataIn_, uint16_t u16SizeIn_, void *pvDataOut_

 , uint16_t u16SizeOut_)=0

Control.

void SetName (const char *pcName_)

SetName.

const char * GetPath ()

GetPath.

Private Attributes

• const char * m_pcPath

string pointer that holds the driver path (name)

18.4 Driver Class Reference 91

Additional Inherited Members

18.4.1 Detailed Description

Base device-driver class used in hardware abstraction.

All other device drivers inherit from this class

Definition at line 121 of file driver.h.

18.4.2 Member Function Documentation

```
18.4.2.1 virtual uint8_t Driver::Close( ) [pure virtual]
```

Close.

Close a previously-opened device driver.

Returns

Driver-specific return code, 0 = OK, non-0 = error

```
18.4.2.2 virtual uint16_t Driver::Control ( uint16_t u16Event_, void * pvDataln_, uint16_t u16Sizeln_, void * pvDataOut_, uint16_t u16SizeOut_ ) [pure virtual]
```

Control.

This is the main entry-point for device-specific io and control operations. This is used for implementing all "side-channel" communications with a device, and any device-specific IO operations that do not conform to the typical POSIX read/write paradigm. use of this funciton is analagous to the non-POSIX (yet still common) devctl() or ioctl().

Parameters

u16Event_	Code defining the io event (driver-specific)
pvDataIn_	Pointer to the intput data
u16SizeIn_	Size of the input data (in bytes)
pvDataOut_	Pointer to the output data
u16SizeOut_	Size of the output data (in bytes)

Returns

Driver-specific return code, 0 = OK, non-0 = error

```
18.4.2.3 const char* Driver::GetPath() [inline]
```

GetPath.

Returns a string containing the device path.

Returns

pcName_ Return the string constant representing the device path

Definition at line 221 of file driver.h.

```
18.4.2.4 virtual void Driver::Init() [pure virtual]
```

Init.

Initialize a driver, must be called prior to use

```
18.4.2.5 virtual uint8_t Driver::Open() [pure virtual]
```

Open.

Open a device driver prior to use.

Returns

Driver-specific return code, 0 = OK, non-0 = error

```
18.4.2.6 virtual uint16_t Driver::Read ( uint16_t u16Bytes_, uint8_t * pu8Data_ ) [pure virtual]
```

Read.

Read a specified number of bytes from the device into a specific buffer. Depending on the driver-specific implementation, this may be a number less than the requested number of bytes read, indicating that there there was less input than desired, or that as a result of buffering, the data may not be available.

Parameters

u16Bytes_	Number of bytes to read (<= size of the buffer)
pu8Data_	Pointer to a data buffer receiving the read data

Returns

Number of bytes actually read

```
18.4.2.7 void Driver::SetName (const char * pcName_) [inline]
```

SetName.

Set the path for the driver. Name must be set prior to access (since driver access is name-based).

Parameters

pcName_	String constant containing the device path

Definition at line 213 of file driver.h.

```
18.4.2.8 virtual uint16_t Driver::Write ( uint16_t u16Bytes_, uint8_t * pu8Data_ ) [pure virtual]
```

Write.

Write a payload of data of a given length to the device. Depending on the implementation of the driver, the amount of data written to the device may be less than the requested number of bytes. A result less than the requested size may indicate that the device buffer is full, indicating that the user must retry the write at a later point with the remaining data.

Parameters

u16Bytes_	Number of bytes to write (<= size of the buffer)
pu8Data_	Pointer to a data buffer containing the data to write

Returns

Number of bytes actually written

The documentation for this class was generated from the following file:

/media/usb/project/github/Mark3/kernel/public/driver.h

18.5 DriverList Class Reference

List of Driver objects used to keep track of all device drivers in the system.

```
#include <driver.h>
```

Static Public Member Functions

• static void Init ()

Init.

• static void Add (Driver *pclDriver_)

Add

static void Remove (Driver *pclDriver_)

Remove.

static Driver * FindByPath (const char *m_pcPath)

FindByPath.

Static Private Attributes

static DoubleLinkList m_clDriverList

LinkedList object used to implementing the driver object management.

18.5.1 Detailed Description

List of Driver objects used to keep track of all device drivers in the system.

By default, the list contains a single entity, "/dev/null".

Definition at line 232 of file driver.h.

18.5.2 Member Function Documentation

```
18.5.2.1 static void DriverList::Add ( Driver * pclDriver_ ) [inline], [static]
```

Add.

Add a Driver object to the managed global driver-list.

Parameters

pclDriver_ | pointer to the driver object to add to the global driver list.

Examples:

buffalogger/main.cpp.

Definition at line 252 of file driver.h.

```
18.5.2.2 static Driver* DriverList::FindByPath ( const char * m_pcPath ) [static]
```

FindByPath.

Look-up a driver in the global driver-list based on its path. In the event that the driver is not found in the list, a pointer to the default "/dev/null" object is returned. In this way, unimplemented drivers are automatically stubbed out.

```
18.5.2.3 static void DriverList::Init() [static]
```

Init.

Initialize the list of drivers. Must be called prior to using the device driver library.

```
18.5.2.4 static void DriverList::Remove ( Driver * pclDriver_ ) [inline], [static]
```

Remove.

Remove a driver from the global driver list.

Parameters

```
pclDriver_ Pointer to the driver object to remove from the global table
```

Definition at line 261 of file driver.h.

The documentation for this class was generated from the following file:


/media/usb/project/github/Mark3/kernel/public/driver.h

18.6 EventFlag Class Reference

The EventFlag class is a blocking object, similar to a semaphore or mutex, commonly used for synchronizing thread execution based on events occurring within the system.

```
#include <eventflag.h>
```

Inheritance diagram for EventFlag:

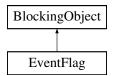

Public Member Functions

• void Init ()

Init Initializes the EventFlag object prior to use.

uint16_t Wait (uint16_t u16Mask_, EventFlagOperation_t eMode_)

Wait - Block a thread on the specific flags in this event flag group.

• uint16_t Wait (uint16_t u16Mask_, EventFlagOperation_t eMode_, uint32_t u32TimeMS_)

Wait - Block a thread on the specific flags in this event flag group.

void WakeMe (Thread *pclChosenOne_)

WakeMe.

void Set (uint16_t u16Mask_)

Set - Set additional flags in this object (logical OR).

void Clear (uint16_t u16Mask_)

ClearFlags - Clear a specific set of flags within this object, specific by bitmask.

• uint16 t GetMask ()

GetMask Returns the state of the 16-bit bitmask within this object.

Private Member Functions

uint16_t Wait_i (uint16_t u16Mask_, EventFlagOperation_t eMode_, uint32_t u32TimeMS_)
 Wait i.

Private Attributes

uint16_t m_u16SetMask
 Event flags currently set in this object.

Additional Inherited Members

18.6.1 Detailed Description

The EventFlag class is a blocking object, similar to a semaphore or mutex, commonly used for synchronizing thread execution based on events occurring within the system.

Each EventFlag object contains a 16-bit bitmask, which is used to trigger events on associated threads. Threads wishing to block, waiting for a specific event to occur can wait on any pattern within this 16-bit bitmask to be set. Here, we provide the ability for a thread to block, waiting for ANY bits in a specified mask to be set, or for ALL bits within a specific mask to be set. Depending on how the object is configured, the bits that triggered the wakeup can be automatically cleared once a match has occurred.

Examples:

lab7_events/main.cpp.

Definition at line 46 of file eventflag.h.

18.6.2 Member Function Documentation

```
18.6.2.1 void EventFlag::Clear ( uint16_t u16Mask_ )
```

ClearFlags - Clear a specific set of flags within this object, specific by bitmask.

Parameters

```
u16Mask_ - Bitmask of flags to clear
```

Examples:

```
lab7_events/main.cpp.
```

```
18.6.2.2 uint16_t EventFlag::GetMask()
```

GetMask Returns the state of the 16-bit bitmask within this object.

Returns

The state of the 16-bit bitmask

```
18.6.2.3 void EventFlag::Set ( uint16_t u16Mask_ )
```

Set - Set additional flags in this object (logical OR).

This API can potentially result in threads blocked on Wait() to be unblocked.

Parameters

u16Mask_	- Bitmask of flags to set.

Examples:

lab7_events/main.cpp.

18.6.2.4 uint16_t EventFlag::Wait (uint16_t u16Mask_, EventFlagOperation_t eMode_)

Wait - Block a thread on the specific flags in this event flag group.

Parameters

u16Mask_	- 16-bit bitmask to block on
eMode_	- EVENT_FLAG_ANY: Thread will block on any of the bits in the mask
	EVENT_FLAG_ALL: Thread will block on all of the bits in the mask

Returns

Bitmask condition that caused the thread to unblock, or 0 on error or timeout

Examples:

lab7_events/main.cpp.

18.6.2.5 uint16_t EventFlag::Wait (uint16_t u16Mask_, EventFlagOperation_t eMode_, uint32_t u32TimeMS_)

Wait - Block a thread on the specific flags in this event flag group.

Parameters

u16Mask_	- 16-bit bitmask to block on
eMode_	- EVENT_FLAG_ANY: Thread will block on any of the bits in the mask
	EVENT_FLAG_ALL: Thread will block on all of the bits in the mask
u32TimeMS_	- Time to block (in ms)

Returns

Bitmask condition that caused the thread to unblock, or 0 on error or timeout

18.6.2.6 uint16_t EventFlag::Wait_i (uint16_t u16Mask_, EventFlagOperation_t eMode_, uint32_t u32TimeMS_) [private]

Wait_i.

Interal abstraction used to manage both timed and untimed wait operations

Parameters

i didiliotoro

u16Mask_	- 16-bit bitmask to block on
eMode_	- EVENT_FLAG_ANY: Thread will block on any of the bits in the mask
	EVENT_FLAG_ALL: Thread will block on all of the bits in the mask
u32TimeMS_	- Time to block (in ms)

Returns

Bitmask condition that caused the thread to unblock, or 0 on error or timeout

18.6.2.7 void EventFlag::WakeMe (Thread * pclChosenOne_)

WakeMe.

Wake the given thread, currently blocking on this object

Parameters

pclOwner_	Pointer to the owner thread to unblock.
-----------	---

The documentation for this class was generated from the following file:

• /media/usb/project/github/Mark3/kernel/public/eventflag.h

18.7 FakeThread_t Struct Reference

If the kernel is set up to use an idle function instead of an idle thread, we use a placeholder data structure to "simulate" the effect of having an idle thread in the system.

#include <thread.h>

Public Attributes

K_WORD * m_pwStackTop

Pointer to the top of the thread's stack.

K_WORD * m_pwStack

Pointer to the thread's stack.

uint8_t m_u8ThreadID

Thread ID.

PORT_PRIO_TYPE m_uXPriority

Default priority of the thread.

PORT_PRIO_TYPE m_uXCurPriority

Current priority of the thread (priority inheritence)

• ThreadState_t m_eState

Enum indicating the thread's current state.

void * m_pvExtendedContext

Pointer provided to a Thread to implement thread-local storage.

18.7.1 Detailed Description

If the kernel is set up to use an idle function instead of an idle thread, we use a placeholder data structure to "simulate" the effect of having an idle thread in the system.

When cast to a Thread, this data structure will still result in GetPriority() calls being valid, which is all that is needed to support the tick-based/tickless times – while saving a fairly decent chunk of RAM on a small micro.

Note that this struct must have the same memory layout as the Thread class up to the last item.

Definition at line 533 of file thread.h.

The documentation for this struct was generated from the following file:

• /media/usb/project/github/Mark3/kernel/public/thread.h

18.8 GlobalMessagePool Class Reference

Implements a list of message objects shared between all threads.

```
#include <message.h>
```

Static Public Member Functions

```
• static void Init ()
```

Init

static void Push (Message *pclMessage_)

Push.

• static Message * Pop ()

Pop

static Message * GetHead ()

GetHead.

static MessagePool * GetPool ()

GetPool.

Static Private Attributes

• static Message m_aclMessagePool [GLOBAL_MESSAGE_POOL_SIZE]

Array of message objects that make up the message pool.

18.8.1 Detailed Description

Implements a list of message objects shared between all threads.

Definition at line 208 of file message.h.

18.8.2 Member Function Documentation

```
18.8.2.1 static Message* GlobalMessagePool::GetHead() [static]
```

GetHead.

Return a pointer to the first element in the message list

Returns

Pointer to head message element, or NULL if empty

18.9 Kernel Class Reference 99

```
18.8.2.2 static MessagePool* GlobalMessagePool::GetPool() [static]

GetPool.

Get the pointer to the underlying message pool object

Returns
Pointer to message pool.

18.8.2.3 static void GlobalMessagePool::Init() [static]

Init.

Initialize the message queue prior to use

18.8.2.4 static Message* GlobalMessagePool::Pop() [static]

Pop.

Pop a message from the global queue, returning it to the user to be popu32ated before sending by a transmitter.

Returns
Pointer to a Message object
```

Examples:

lab8_messages/main.cpp.

```
18.8.2.5 static void GlobalMessagePool::Push ( Message * pclMessage_ ) [static]
```

Push.

Return a previously-claimed message object back to the global queue. used once the message has been processed by a receiver.

Parameters

pclMessage_ Pointer to the Message object to return back to the global queue

Examples:

lab8 messages/main.cpp.

The documentation for this class was generated from the following file:

• /media/usb/project/github/Mark3/kernel/public/message.h

18.9 Kernel Class Reference

Class that encapsulates all of the kernel startup functions.

```
#include <kernel.h>
```

Static Public Member Functions

· static void Init (void)

Kernel Initialization Function, call before any other OS function.

static void Start (void)

Start the operating system kernel - the current execution context is cancelled, all kernel services are started, and the processor resumes execution at the entrypoint for the highest-priority thread.

static bool IsStarted ()

IsStarted.

static void SetPanic (PanicFunc_t pfPanic_)

SetPanic Set a function to be called when a kernel panic occurs, giving the user to determine the behavior when a catastrophic failure is observed.

static bool IsPanic ()

IsPanic Returns whether or not the kernel is in a panic state.

static void Panic (uint16_t u16Cause_)

Panic Cause the kernel to enter its panic state.

• static void SetIdleFunc (IdleFunc t pfIdle)

SetIdleFunc Set the function to be called when no active threads are available to be scheduled by the scheduler.

static void IdleFunc (void)

IdleFunc Call the low-priority idle function when no active threads are available to be scheduled.

static Thread * GetIdleThread (void)

GetIdleThread Return a pointer to the Kernel's idle thread object to the user.

static void SetThreadCreateCallout (ThreadCreateCallout t pfCreate)

SetThreadCreateCallout.

static void SetThreadExitCallout (ThreadExitCallout_t pfExit_)

SetThreadExitCallout.

static void SetThreadContextSwitchCallout (ThreadContextCallout_t pfContext_)

Set Thread Context Switch Callout.

static ThreadCreateCallout_t GetThreadCreateCallout (void)

GetThreadCreateCallout.

static ThreadExitCallout_t GetThreadExitCallout (void)

GetThreadExitCallout.

static ThreadContextCallout_t GetThreadContextSwitchCallout (void)

GetThreadContextSwitchCallout.

Static Private Attributes

· static bool m blsStarted

true if kernel is running, false otherwise

• static bool m blsPanic

true if kernel is in panic state, false otherwise

• static PanicFunc t m pfPanic

set panic function

static IdleFunc_t m_pfldle

set idle function

static FakeThread_t m_clldle

Idle thread object (note: not a real thread)

• static ThreadCreateCallout_t m_pfThreadCreateCallout

Function to call on thread creation.

static ThreadExitCallout t m pfThreadExitCallout

Function to call on thread exit.

static ThreadContextCallout t m pfThreadContextCallout

Function to call on context switch.

18.9 Kernel Class Reference 101

18.9.1 Detailed Description

Class that encapsulates all of the kernel startup functions.

Definition at line 44 of file kernel.h.

18.9.2 Member Function Documentation

```
18.9.2.1 static Thread* Kernel::GetIdleThread(void) [inline],[static]
```

GetIdleThread Return a pointer to the Kernel's idle thread object to the user.

Note that the Thread object involved is to be used for comparisons only – the thread itself is "virtual", and doesn't represent a unique execution context with its own stack.

Returns

Pointer to the Kernel's idle thread object

Definition at line 122 of file kernel.h.

```
18.9.2.2 static ThreadContextCallout_t Kernel::GetThreadContextSwitchCallout(void) [inline], [static]
```

GetThreadContextSwitchCallout.

Return the current function called on every Thread::ContextSwitchSWI()

Returns

Pointer to the currently-installed callout function, or NULL if not set.

Definition at line 190 of file kernel.h.

```
18.9.2.3 static ThreadCreateCallout_t Kernel::GetThreadCreateCallout(void) [inline], [static]
```

GetThreadCreateCallout.

Return the current function called on every Thread::Init();

Returns

Pointer to the currently-installed callout function, or NULL if not set.

Definition at line 172 of file kernel.h.

```
18.9.2.4 static ThreadExitCallout_t Kernel::GetThreadExitCallout(void) [inline], [static]
```

GetThreadExitCallout.

Return the current function called on every Thread::Exit();

Returns

Pointer to the currently-installed callout function, or NULL if not set.

Definition at line 181 of file kernel.h.

```
18.9.2.5 void Kernel::Init( void ) [static]
```

Kernel Initialization Function, call before any other OS function.

Initializes all global resources used by the operating system. This must be called before any other kernel function is invoked.

Examples:

buffalogger/main.cpp, lab10_notifications/main.cpp, lab11_mailboxes/main.cpp, lab1_kernel_setup/main.cpp, lab2_idle_function/main.cpp, lab3_round_robin/main.cpp, lab4_semaphores/main.cpp, lab5_mutexes/main.cpp, cpp, lab6_timers/main.cpp, lab7_events/main.cpp, lab8_messages/main.cpp, and lab9_dynamic_ \leftarrow threads/main.cpp.

Definition at line 67 of file kernel.cpp.

```
18.9.2.6 static bool Kernel::IsPanic() [inline], [static]
```

IsPanic Returns whether or not the kernel is in a panic state.

Returns

Whether or not the kernel is in a panic state

Definition at line 90 of file kernel.h.

```
18.9.2.7 static bool Kernel::IsStarted ( ) [inline], [static]
```

IsStarted.

Returns

Whether or not the kernel has started - true = running, false = not started

Definition at line 77 of file kernel.h.

```
18.9.2.8 void Kernel::Panic ( uint16_t u16Cause_ ) [static]
```

Panic Cause the kernel to enter its panic state.

Parameters

```
u16Cause Reason for the kernel panic
```

Definition at line 110 of file kernel.cpp.

```
18.9.2.9 static void Kernel::SetIdleFunc ( IdleFunc_t pfldle_ ) [inline], [static]
```

SetIdleFunc Set the function to be called when no active threads are available to be scheduled by the scheduler.

Parameters

```
pfldle_ Pointer to the idle function
```

Examples:

lab2_idle_function/main.cpp.

Definition at line 103 of file kernel.h.

18.9 Kernel Class Reference 103

18.9.2.10 static void Kernel::SetPanic (PanicFunc_t pfPanic_) [inline], [static]

SetPanic Set a function to be called when a kernel panic occurs, giving the user to determine the behavior when a catastrophic failure is observed.

Parameters

pfPanic_ Panic function pointer

Definition at line 85 of file kernel.h.

18.9.2.11 static void Kernel::SetThreadContextSwitchCallout (ThreadContextCallout_t pfContext_) [inline], [static]

SetThreadContextSwitchCallout.

Set a function to be called on each context switch.

A callout is only executed if this method has been called to set a valid handler function.

Parameters

pfContext	Pointer to a function to call on context switch

Examples:

lab9_dynamic_threads/main.cpp.

Definition at line 159 of file kernel.h.

18.9.2.12 static void Kernel::SetThreadCreateCallout (ThreadCreateCallout_t pfCreate_) [inline], [static]

SetThreadCreateCallout.

Set a function to be called on creation of a new thread. This callout is executed on the successful completion of a Thread::Init() call. A callout is only executed if this method has been called to set a valid handler function.

Parameters

pfCreate_	Pointer to a function to call on thread creation

Examples:

lab9_dynamic_threads/main.cpp.

Definition at line 136 of file kernel.h.

18.9.2.13 static void Kernel::SetThreadExitCallout(ThreadExitCallout_t pfExit_) [inline], [static]

SetThreadExitCallout.

Set a function to be called on thread exit. This callout is executed from the beginning of Thread::Exit().

A callout is only executed if this method has been called to set a valid handler function.

Parameters

pfCreate_	Pointer to a function to call on thread exit

Examples:

lab9_dynamic_threads/main.cpp.

Definition at line 148 of file kernel.h.

```
18.9.2.14 void Kernel::Start (void ) [static]
```

Start the operating system kernel - the current execution context is cancelled, all kernel services are started, and the processor resumes execution at the entrypoint for the highest-priority thread.

You must have at least one thread added to the kernel before calling this function, otherwise the behavior is undefined. The exception to this is if the system is configured to use the threadless idle hook, in which case the kernel is allowed to run without any ready threads.

Examples:

buffalogger/main.cpp, lab10_notifications/main.cpp, lab11_mailboxes/main.cpp, lab1_kernel_setup/main.cpp, lab2_idle_function/main.cpp, lab3_round_robin/main.cpp, lab4_semaphores/main.cpp, lab5_mutexes/main.cpp, cpp, lab6_timers/main.cpp, lab7_events/main.cpp, lab8_messages/main.cpp, and lab9_dynamic_cthreads/main.cpp.

Definition at line 101 of file kernel.cpp.

The documentation for this class was generated from the following files:

- /media/usb/project/github/Mark3/kernel/public/kernel.h
- /media/usb/project/github/Mark3/kernel/kernel.cpp

18.10 KernelAware Class Reference

```
The KernelAware class.
```

```
#include <kernelaware.h>
```

Static Public Member Functions

```
• static void ProfileInit (const char *szStr_)
```

ProfileInit.

static void ProfileStart (void)

ProfileStart.

• static void ProfileStop (void)

ProfileStop.

• static void ProfileReport (void)

ProfileReport.

static void ExitSimulator (void)

ExitSimulator.

static void Print (const char *szStr_)

Print.

static void Trace (uint16_t u16File_, uint16_t u16Line_)

Trace

static void Trace (uint16_t u16File_, uint16_t u16Line_, uint16_t u16Arg1_)

Trace.

static void Trace (uint16_t u16File_, uint16_t u16Line_, uint16_t u16Arg1_, uint16_t u16Arg2_)

Trace.

static bool IsSimulatorAware (void)

IsSimulatorAware.

Static Private Member Functions

static void Trace_i (uint16_t u16File_, uint16_t u16Line_, uint16_t u16Arg1_, uint16_t u16Arg2_, Kernel
 — AwareCommand_t eCmd_)

Trace i.

18.10.1 Detailed Description

The KernelAware class.

This class contains functions that are used to trigger kernel-aware functionality within a supported simulation environment (i.e. flAVR).

These static methods operate on a singleton set of global variables, which are monitored for changes from within the simulator. The simulator hooks into these variables by looking for the correctly-named symbols in an elf-formatted binary being run and registering callbacks that are called whenever the variables are changed. On each change of the command variable, the kernel-aware data is analyzed and interpreted appropriately.

If these methods are run in an unsupported simulator or on actual hardware the commands generally have no effect (except for the exit-on-reset command, which will result in a jump-to-0 reset).

Definition at line 64 of file kernelaware.h.

18.10.2 Member Function Documentation

18.10.2.1 static void KernelAware::ExitSimulator (void) [static]

ExitSimulator.

Instruct the kernel-aware simulator to terminate (destroying the virtual CPU).

18.10.2.2 static bool KernelAware::IsSimulatorAware(void) [static]

IsSimulatorAware.

use this function to determine whether or not the code is running on a simulator that is aware of the kernel.

Returns

true - the application is being run in a kernel-aware simulator. false - otherwise.

18.10.2.3 static void KernelAware::Print (const char * szStr_) [static]

Print.

Instruct the kernel-aware simulator to print a char string

Parameters

szStr_

Examples:

lab10_notifications/main.cpp, lab11_mailboxes/main.cpp, lab1_kernel_setup/main.cpp, lab2_idle_function/main.cpp, lab3_round_robin/main.cpp, lab4_semaphores/main.cpp, lab5_mutexes/main.cpp, lab6_timers/main.cpp, lab7_events/main.cpp, lab8_messages/main.cpp, and lab9_dynamic_threads/main.cpp.

18.10.2.4 static void KernelAware::ProfileInit (const char * szStr_) [static]

ProfileInit.

Initializes the kernel-aware profiler. This function instructs the kernel-aware simulator to reset its accounting variables, and prepare to start counting profiling data tagged to the given string. How this is handled is the responsibility of the simulator.

Parameters

szStr_	String to use as a tag for the profilng session.

18.10.2.5 static void KernelAware::ProfileReport (void) [static]

ProfileReport.

Instruct the kernel-aware simulator to print a report for its current profiling data.

18.10.2.6 static void KernelAware::ProfileStart (void) [static]

ProfileStart.

Instruct the kernel-aware simulator to begin counting cycles towards the current profiling counter.

18.10.2.7 static void KernelAware::ProfileStop (void) [static]

ProfileStop.

Instruct the kernel-aware simulator to end counting cycles relative to the current profiling counter's iteration.

18.10.2.8 static void KernelAware::Trace (uint16_t u16File_, uint16_t u16Line_) [static]

Trace.

Insert a kernel trace statement into the kernel-aware simulator's debug data stream.

Parameters

u16File_	16-bit code representing the file
u16Line_	16-bit code representing the line in the file

Examples:

lab11 mailboxes/main.cpp, lab8 messages/main.cpp, and lab9 dynamic threads/main.cpp.

18.10.2.9 static void KernelAware::Trace (uint16_t u16File_, uint16_t u16Line_, uint16_t u16Arg1_) [static]

Trace.

Insert a kernel trace statement into the kernel-aware simulator's debug data stream.

Parameters

u16File_	16-bit code representing the file
u16Line_	16-bit code representing the line in the file

u16Arg1_	16-bit argument to the format string.
----------	---------------------------------------

18.10.2.10 static void KernelAware::Trace (uint16_t u16File_, uint16_t u16Line_, uint16_t u16Arg1_, uint16_t u16Arg2_) [static]

Trace.

Insert a kernel trace statement into the kernel-aware simulator's debug data stream.

Parameters

u16File_	16-bit code representing the file
u16Line_	16-bit code representing the line in the file
u16Arg1_	16-bit argument to the format string.
u16Arg2_	16-bit argument to the format string.

18.10.2.11 static void KernelAware::Trace_i (uint16_t u16File_, uint16_t u16Line_, uint16_t u16Arg1_, uint16_t u16Arg2_, KernelAwareCommand_t eCmd_) [static], [private]

Trace_i.

Private function by which the class's Trace() methods are reflected, which allows u16 to realize a modest code saving.

Parameters

u16File_	16-bit code representing the file
u16Line_	16-bit code representing the line in the file
u16Arg1_	16-bit argument to the format string.
u16Arg2_	16-bit argument to the format string.
eCmd_	Code indicating the number of arguments to emit.

The documentation for this class was generated from the following file:

• /media/usb/project/github/Mark3/kernel/public/kernelaware.h

18.11 KernelSWI Class Reference

Class providing the software-interrupt required for context-switching in the kernel.

#include <kernelswi.h>

Static Public Member Functions

• static void Config (void)

Config.

static void Start (void)

Start.

• static void Stop (void)

Stop.

static void Clear (void)

Clear.

• static void Trigger (void)

Trigger.

```
    static uint8_t DI ()
        DI.
    static void RI (bool bEnable_)
```

18.11.1 Detailed Description

Class providing the software-interrupt required for context-switching in the kernel.

Definition at line 31 of file kernelswi.h.

18.11.2 Member Function Documentation

```
18.11.2.1 void KernelSWI::Clear (void ) [static]
```

Clear.

Clear the software interrupt

Definition at line 68 of file kernelswi.cpp.

```
18.11.2.2 void KernelSWI::Config(void) [static]
```

Config.

Configure the software interrupt - must be called before any other software interrupt functions are called.

Definition at line 29 of file kernelswi.cpp.

```
18.11.2.3 uint8_t KernelSWI::DI() [static]
```

DI.

Disable the SWI flag itself

Returns

previous status of the SWI, prior to the DI call

Definition at line 50 of file kernelswi.cpp.

```
18.11.2.4 void KernelSWI::RI (bool bEnable_) [static]
```

RI.

Restore the state of the SWI to the value specified

Parameters

```
bEnable_ true - enable the SWI, false - disable SWI
```

Definition at line 58 of file kernelswi.cpp.

```
18.11.2.5 void KernelSWI::Start (void ) [static]
```

Start

Enable ("Start") the software interrupt functionality

Definition at line 37 of file kernelswi.cpp.

```
18.11.2.6 void KernelSWI::Stop (void ) [static]
Stop.
Disable the software interrupt functionality
Definition at line 44 of file kernelswi.cpp.
18.11.2.7 void KernelSWI::Trigger ( void ) [static]
Trigger.
Call the software interrupt
Definition at line 74 of file kernelswi.cpp.
The documentation for this class was generated from the following files:
    • /media/usb/project/github/Mark3/kernel/cpu/avr/atmega328p/gcc/public/kernelswi.h

    /media/usb/project/github/Mark3/kernel/cpu/avr/atmega328p/gcc/kernelswi.cpp

         KernelTimer Class Reference
18.12
Hardware timer interface, used by all scheduling/timer subsystems.
#include <kerneltimer.h>
Static Public Member Functions
    · static void Config (void)
          Config.
    • static void Start (void)
          Start.

    static void Stop (void)

         Stop.
    • static uint8 t DI (void)

    static void RI (bool bEnable_)

    static void El (void)

    • static PORT TIMER COUNT TYPE SubtractExpiry (PORT TIMER COUNT TYPE uInterval )
         SubtractExpiry.

    static PORT_TIMER_COUNT_TYPE TimeToExpiry (void)

          TimeToExpiry.

    static PORT_TIMER_COUNT_TYPE SetExpiry (uint32_t u32Interval_)

          SetExpiry.
    • static PORT_TIMER_COUNT_TYPE GetOvertime (void)
          GetOvertime.

    static void ClearExpiry (void)

         ClearExpiry.
    • static PORT_TIMER_COUNT_TYPE Read (void)
```

Read.

18.12.1 Detailed Description

Hardware timer interface, used by all scheduling/timer subsystems.

Definition at line 31 of file kerneltimer.h.

```
18.12.2 Member Function Documentation
```

```
18.12.2.1 void KernelTimer::ClearExpiry (void ) [static]
```

ClearExpiry.

Clear the hardware timer expiry register

Definition at line 196 of file kerneltimer.cpp.

```
18.12.2.2 void KernelTimer::Config(void) [static]
```

Config.

Initializes the kernel timer before use

Definition at line 83 of file kerneltimer.cpp.

```
18.12.2.3 uint8_t KernelTimer::Dl( void ) [static]
```

DI.

Disable the kernel timer's expiry interrupt

Definition at line 204 of file kerneltimer.cpp.

```
18.12.2.4 void KernelTimer::El ( void ) [static]
```

EI.

Enable the kernel timer's expiry interrupt

Definition at line 217 of file kerneltimer.cpp.

```
18.12.2.5 PORT_TIMER_COUNT_TYPE KernelTimer::GetOvertime(void) [static]
```

GetOvertime.

Return the number of ticks that have elapsed since the last expiry.

Returns

Number of ticks that have elapsed after last timer expiration

Definition at line 172 of file kerneltimer.cpp.

```
18.12.2.6 PORT_TIMER_COUNT_TYPE KernelTimer::Read(void) [static]
```

Read.

Safely read the current value in the timer register

Returns

Value held in the timer register

Examples:

```
lab9_dynamic_threads/main.cpp.
```

Definition at line 126 of file kerneltimer.cpp.

```
18.12.2.7 void KernelTimer::RI(bool bEnable_) [static]
```

RI.

Retstore the state of the kernel timer's expiry interrupt.

Parameters

```
bEnable_ 1 enable, 0 disable
```

Definition at line 223 of file kerneltimer.cpp.

```
18.12.2.8 PORT_TIMER_COUNT_TYPE KernelTimer::SetExpiry ( uint32_t u32Interval_ ) [static]
```

SetExpiry.

Resets the kernel timer's expiry interval to the specified value

Parameters

```
u32Interval_ Desired interval in ticks to set the timer for
```

Returns

Actual number of ticks set (may be less than desired)

Definition at line 178 of file kerneltimer.cpp.

```
18.12.2.9 void KernelTimer::Start (void ) [static]
```

Start.

Starts the kernel time (must be configured first)

Definition at line 99 of file kerneltimer.cpp.

```
18.12.2.10 void KernelTimer::Stop (void ) [static]
```

Stop.

Shut down the kernel timer, used when no timers are scheduled

Definition at line 114 of file kerneltimer.cpp.

```
18.12.2.11 PORT_TIMER_COUNT_TYPE KernelTimer::SubtractExpiry ( PORT_TIMER_COUNT_TYPE uInterval_ ) [static]
```

SubtractExpiry.

Subtract the specified number of ticks from the timer's expiry count register. Returns the new expiry value stored in the register.

Parameters

u32Interval_	Time (in HW-specific) ticks to subtract
--------------	---

Returns

Value in ticks stored in the timer's expiry register

Definition at line 144 of file kerneltimer.cpp.

18.12.2.12 PORT_TIMER_COUNT_TYPE KernelTimer::TimeToExpiry(void) [static]

TimeToExpiry.

Returns the number of ticks remaining before the next timer expiry.

Returns

Time before next expiry in platform-specific ticks

Definition at line 155 of file kerneltimer.cpp.

The documentation for this class was generated from the following files:


- /media/usb/project/github/Mark3/kernel/cpu/avr/atmega328p/gcc/public/kerneltimer.h
- /media/usb/project/github/Mark3/kernel/cpu/avr/atmega328p/gcc/kerneltimer.cpp

18.13 LinkList Class Reference

Abstract-data-type from which all other linked-lists are derived.

#include <11.h>

Inheritance diagram for LinkList:

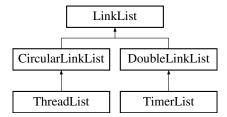

Public Member Functions

• void Init ()

Init.

LinkListNode * GetHead ()

GetHead.

LinkListNode * GetTail ()

GetTail.

Protected Attributes

LinkListNode * m_pstHead

Pointer to the head node in the list.

LinkListNode * m_pstTail

Pointer to the tail node in the list.

18.13.1 Detailed Description

Abstract-data-type from which all other linked-lists are derived.

Definition at line 109 of file II.h.

18.13.2 Member Function Documentation

```
18.13.2.1 LinkListNode* LinkList::GetHead( ) [inline]
```

GetHead.

Get the head node in the linked list

Returns

Pointer to the head node in the list

Definition at line 134 of file II.h.

```
18.13.2.2 LinkListNode* LinkList::GetTail() [inline]
```

GetTail.

Get the tail node of the linked list

Returns

Pointer to the tail node in the list

Definition at line 142 of file II.h.

```
18.13.2.3 void LinkList::Init (void ) [inline]
```

Init.

Clear the linked list.

Definition at line 121 of file II.h.

The documentation for this class was generated from the following file:


/media/usb/project/github/Mark3/kernel/public/II.h

18.14 LinkListNode Class Reference

Basic linked-list node data structure.

```
#include <ll.h>
```

Inheritance diagram for LinkListNode:

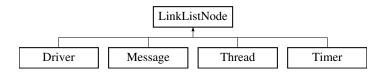

Public Member Functions

LinkListNode * GetNext (void)

GetNext.

LinkListNode * GetPrev (void)

GetPrev.

Protected Member Functions

• void ClearNode ()

ClearNode.

Protected Attributes

LinkListNode * next

Pointer to the next node in the list.

LinkListNode * prev

Pointer to the previous node in the list.

Friends

- class LinkList
- · class DoubleLinkList
- class CircularLinkList
- · class ThreadList

18.14.1 Detailed Description

Basic linked-list node data structure.

This data is managed by the linked-list class types, and can be used transparently between them.

Definition at line 68 of file II.h.

18.14.2 Member Function Documentation

18.14.2.1 void LinkListNode::ClearNode() [protected]

ClearNode.

Initialize the linked list node, clearing its next and previous node.

Definition at line 40 of file II.cpp.

```
18.14.2.2 LinkListNode* LinkListNode::GetNext(void) [inline]
```

GetNext.

Returns a pointer to the next node in the list.

Returns

a pointer to the next node in the list.

Definition at line 90 of file II.h.

```
18.14.2.3 LinkListNode* LinkListNode::GetPrev(void) [inline]
```

GetPrev.

Returns a pointer to the previous node in the list.

Returns

a pointer to the previous node in the list.

Definition at line 98 of file II.h.

The documentation for this class was generated from the following files:

- /media/usb/project/github/Mark3/kernel/public/II.h
- /media/usb/project/github/Mark3/kernel/ll.cpp

18.15 Mailbox Class Reference

The Mailbox class implements an IPC mechnism based on envelopes containing data of a fixed size (configured at initialization) that reside within a buffer of memory provided by the user.

```
#include <mailbox.h>
```

Public Member Functions

```
    void Init (void *pvBuffer_, uint16_t u16BufferSize_, uint16_t u16ElementSize_)
```

Init.

bool Send (void *pvData_)

Send

bool SendTail (void *pvData_)

SendTail.

bool Send (void *pvData_, uint32_t u32TimeoutMS_)

Send

bool SendTail (void *pvData , uint32 t u32TimeoutMS)

SendTail.

void Receive (void *pvData_)

Receive.

void ReceiveTail (void *pvData_)

ReceiveTail.

bool Receive (void *pvData_, uint32_t u32TimeoutMS_)

Receive.

bool ReceiveTail (void *pvData_, uint32_t u32TimeoutMS_)

ReceiveTail.

Private Member Functions

void * GetHeadPointer (void)

GetHeadPointer.

void * GetTailPointer (void)

GetTailPointer.

void CopyData (const void *src , const void *dst , uint16 t len)

CopyData.

void MoveTailForward (void)

MoveTailForward.

void MoveHeadForward (void)

MoveHeadForward.

void MoveTailBackward (void)

MoveTailBackward.

· void MoveHeadBackward (void)

MoveHeadBackward.

bool Send_i (const void *pvData_, bool bTail_, uint32_t u32TimeoutMS_)

• bool Receive_i (const void *pvData_, bool bTail_, uint32_t u32WaitTimeMS_)

Receive_i.

Private Attributes

uint16_t m_u16Head

Current head index.

• uint16_t m_u16Tail

Current tail index.

• uint16_t m_u16Count

Count of items in the mailbox.

volatile uint16_t m_u16Free

Current number of free slots in the mailbox.

uint16_t m_u16ElementSize

Size of the objects tracked in this mailbox.

const void * m_pvBuffer

Pointer to the data-buffer managed by this mailbox.

Semaphore m_clRecvSem

Counting semaphore used to synchronize threads on the object.

• Semaphore m_clSendSem

Binary semaphore for send-blocked threads.

18.15.1 Detailed Description

The Mailbox class implements an IPC mechnism based on envelopes containing data of a fixed size (configured at initialization) that reside within a buffer of memory provided by the user.

Examples:

lab11_mailboxes/main.cpp.

Definition at line 36 of file mailbox.h.

18.15.2 Member Function Documentation

18.15.2.1 void Mailbox::CopyData (const void * src_, const void * dst_, uint16_t len_) [inline], [private]

CopyData.

Perform a direct byte-copy from a source to a destination object.

Parameters

src_	Pointer to an object to read from
dst_	Pointer to an object to write to
len_	Length to copy (in bytes)

Definition at line 239 of file mailbox.h.

```
18.15.2.2 void* Mailbox::GetHeadPointer(void) [inline], [private]
```

GetHeadPointer.

Return a pointer to the current head of the mailbox's internal circular buffer.

Returns

pointer to the head element in the mailbox

Definition at line 208 of file mailbox.h.

```
18.15.2.3 void * Mailbox::GetTailPointer(void) [inline], [private]
```

GetTailPointer.

Return a pointer to the current tail of the mailbox's internal circular buffer.

Returns

pointer to the tail element in the mailbox

Definition at line 223 of file mailbox.h.

```
18.15.2.4 void Mailbox::Init ( void * pvBuffer_, uint16_t u16BufferSize_, uint16_t u16ElementSize_ )
```

Init.

Initialize the mailbox object prior to its use. This must be called before any calls can be made to the object.

Parameters

pvBuffer_	Pointer to the static buffer to use for the mailbox
u16BufferSize←	Size of the mailbox buffer, in bytes
_	
u16Element⊷	Size of each envelope, in bytes
Size_	

Examples:

lab11_mailboxes/main.cpp.

```
18.15.2.5 void Mailbox::MoveHeadBackward (void ) [inline], [private]

MoveHeadBackward.
```

Move the head index backward one element

Definition at line 292 of file mailbox.h.

```
18.15.2.6 void Mailbox::MoveHeadForward(void) [inline], [private]
```

MoveHeadForward.

Move the head index forward one element

Definition at line 266 of file mailbox.h.

```
18.15.2.7 void Mailbox::MoveTailBackward (void ) [inline], [private]
```

MoveTailBackward.

Move the tail index backward one element

Definition at line 279 of file mailbox.h.

```
18.15.2.8 void Mailbox::MoveTailForward (void ) [inline], [private]
```

MoveTailForward.

Move the tail index forward one element

Definition at line 253 of file mailbox.h.

```
18.15.2.9 void Mailbox::Receive ( void * pvData_ )
```

Receive.

Read one envelope from the head of the mailbox. If the mailbox is currently empty, the calling thread will block until an envelope is delivered.

Parameters

```
pvData_ Pointer to a buffer that will have the envelope's contents copied into upon delivery.
```

Examples:

lab11_mailboxes/main.cpp.

```
18.15.2.10 bool Mailbox::Receive ( void * pvData_, uint32_t u32TimeoutMS_ )
```

Receive.

Read one envelope from the head of the mailbox. If the mailbox is currently empty, the calling thread will block until an envelope is delivered, or the specified time has elapsed without delivery.

Parameters

pvData_ Pointer to a buffer that will have the envelope's contents copied into upon delivery.

u32TimeoutM⇔	Maximum time to wait for delivery.
S_	

Returns

true - envelope was delivered, false - delivery timed out.

18.15.2.11 bool Mailbox::Receive_i (const void * pvData_, bool bTail_, uint32_t u32WaitTimeMS_) [private]

Receive_i.

Internal method which implements all Read() methods in the class.

Parameters

pvData_	Pointer to the envelope data
bTail_	true - read from tail, false - read from head
u32WaitTimeM⇔	Time to wait before timeout (in ms).
S_	

Returns

true - read successfully, false - timeout.

18.15.2.12 void Mailbox::ReceiveTail (void * pvData_)

ReceiveTail.

Read one envelope from the tail of the mailbox. If the mailbox is currently empty, the calling thread will block until an envelope is delivered.

Parameters

uffer that will have the envelope's contents copied into upon delivery.	pvData_	
---	---------	--

18.15.2.13 bool Mailbox::ReceiveTail (void * pvData_, uint32_t u32TimeoutMS_)

ReceiveTail.

Read one envelope from the tail of the mailbox. If the mailbox is currently empty, the calling thread will block until an envelope is delivered, or the specified time has elapsed without delivery.

Parameters

pvData_	Pointer to a buffer that will have the envelope's contents copied into upon delivery.
u32TimeoutM⇔	Maximum time to wait for delivery.
<i>S_</i>	

Returns

true - envelope was delivered, false - delivery timed out.

18.15.2.14 bool Mailbox::Send (void * pvData_)

Send.

Send an envelope to the mailbox. This safely copies the data contents of the datastructure to the previously-initialized mailbox buffer. If there is a thread already blocking, awaiting delivery to the mailbox, it will be unblocked at this time.

This method delivers the envelope at the head of the mailbox.

Parameters

pvData_	Pointer to the data object to send to the mailbox.
---------	--

Returns

true - envelope was delivered, false - mailbox is full.

Examples:

lab11_mailboxes/main.cpp.

18.15.2.15 bool Mailbox::Send (void * pvData_, uint32_t u32TimeoutMS_)

Send.

Send an envelope to the mailbox. This safely copies the data contents of the datastructure to the previously-initialized mailbox buffer. If there is a thread already blocking, awaiting delivery to the mailbox, it will be unblocked at this time.

This method delivers the envelope at the head of the mailbox.

Parameters

pvData_	Pointer to the data object to send to the mailbox.
u32TimeoutM⇔	Maximum time to wait for a free transmit slot
S_	

Returns

true - envelope was delivered, false - mailbox is full.

18.15.2.16 bool Mailbox::Send_i (const void * pvData_, bool bTail_, uint32_t u32TimeoutMS_) [private]

Send_i.

Internal method which implements all Send() methods in the class.

Parameters

pvData_	Pointer to the envelope data
bTail_	true - write to tail, false - write to head
u32WaitTimeM←	Time to wait before timeout (in ms).
S_	

Returns

true - data successfully written, false - buffer full

18.15.2.17 bool Mailbox::SendTail (void * pvData_)

SendTail.

Send an envelope to the mailbox. This safely copies the data contents of the datastructure to the previously-initialized mailbox buffer. If there is a thread already blocking, awaiting delivery to the mailbox, it will be unblocked at this time.

This method delivers the envelope at the tail of the mailbox.

pvData_	Pointer to the data object to send to the mailbox.

Returns

true - envelope was delivered, false - mailbox is full.

18.15.2.18 bool Mailbox::SendTail (void * pvData_, uint32_t u32TimeoutMS_)

SendTail.

Send an envelope to the mailbox. This safely copies the data contents of the datastructure to the previously-initialized mailbox buffer. If there is a thread already blocking, awaiting delivery to the mailbox, it will be unblocked at this time.

This method delivers the envelope at the tail of the mailbox.

Parameters

	pvData_	Pointer to the data object to send to the mailbox.
Ī	u32TimeoutM⇔	Maximum time to wait for a free transmit slot
	S_	

Returns

true - envelope was delivered, false - mailbox is full.

18.15.3 Member Data Documentation

18.15.3.1 Semaphore Mailbox::m_clSendSem [private]

Binary semaphore for send-blocked threads.

Definition at line 361 of file mailbox.h.

The documentation for this class was generated from the following file:

• /media/usb/project/github/Mark3/kernel/public/mailbox.h

18.16 Message Class Reference

Class to provide message-based IPC services in the kernel.

#include <message.h>

Inheritance diagram for Message:



Public Member Functions

void Init ()

```
Init.
```

void SetData (void *pvData_)

SetData.

void * GetData ()

GetData.

void SetCode (uint16_t u16Code_)

SetCode.

• uint16_t GetCode ()

GetCode.

Private Attributes

void * m_pvData

Pointer to the message data.

• uint16_t m_u16Code

Message code, providing context for the message.

Additional Inherited Members

18.16.1 Detailed Description

Class to provide message-based IPC services in the kernel.

Examples:

lab8_messages/main.cpp.

Definition at line 99 of file message.h.

18.16.2 Member Function Documentation

```
18.16.2.1 uint16_t Message::GetCode( ) [inline]
```

GetCode.

Return the code set in the message upon receipt

Returns

user code set in the object

Examples:

lab8_messages/main.cpp.

Definition at line 146 of file message.h.

```
18.16.2.2 void* Message::GetData() [inline]
```

GetData.

Get the data pointer stored in the message upon receipt

Returns

Pointer to the data set in the message object

Examples:

```
lab8_messages/main.cpp.
```

Definition at line 130 of file message.h.

```
18.16.2.3 void Message::Init (void ) [inline]
```

Init.

Initialize the data and code in the message.

Definition at line 108 of file message.h.

```
18.16.2.4 void Message::SetCode ( uint16_t u16Code_ ) [inline]
```

SetCode.

Set the code in the message before transmission

Parameters

```
u16Code_ Data code to set in the object
```

Examples:

lab8_messages/main.cpp.

Definition at line 138 of file message.h.

```
18.16.2.5 void Message::SetData (void * pvData_) [inline]
```

SetData.

Set the data pointer for the message before transmission.

Parameters

pvData Pointer to the data object to send in the message
--

Examples:

lab8_messages/main.cpp.

Definition at line 122 of file message.h.

The documentation for this class was generated from the following file:

/media/usb/project/github/Mark3/kernel/public/message.h

18.17 MessagePool Class Reference

Implements a list of message objects.

```
#include <message.h>
```

Public Member Functions

```
    void Init ()
        Init.
    void Push (Message *pclMessage_)
        Push.
    Message * Pop ()
        Pop.
    Message * GetHead ()
        GetHead.
```

Private Attributes

· DoubleLinkList m clList

Linked list used to manage the Message objects.

18.17.1 Detailed Description

Implements a list of message objects.

Definition at line 159 of file message.h.

18.17.2 Member Function Documentation

```
18.17.2.1 Message* MessagePool::GetHead()
```

GetHead.

Return a pointer to the first element in the message list

Returns

```
18.17.2.2 void MessagePool::Init ( )
```

Init.

Initialize the message queue prior to use

```
18.17.2.3 Message* MessagePool::Pop()
```

Pop.

Pop a message from the queue, returning it to the user to be popu32ated before sending by a transmitter.

Returns

Pointer to a Message object

```
18.17.2.4 void MessagePool::Push ( Message * pclMessage_ )
```

Push.

Return a previously-claimed message object back to the queue. used once the message has been processed by a receiver.

pclMessage_ Pointer to the Message object to return back to the queue

The documentation for this class was generated from the following file:

/media/usb/project/github/Mark3/kernel/public/message.h

18.18 MessageQueue Class Reference

List of messages, used as the channel for sending and receiving messages between threads.

```
#include <message.h>
```

Public Member Functions

```
• void Init ()
```

Init.

• Message * Receive ()

Receive.

Message * Receive (uint32_t u32TimeWaitMS_)

Receive.

void Send (Message *pclSrc_)

Send.

• uint16_t GetCount ()

GetCount.

Private Member Functions

```
    Message * Receive_i (uint32_t u32TimeWaitMS_)
    Receive_i.
```

Private Attributes

• Semaphore m_clSemaphore

Counting semaphore used to manage thread blocking.

• DoubleLinkList m_clLinkList

List object used to store messages.

18.18.1 Detailed Description

List of messages, used as the channel for sending and receiving messages between threads.

Examples:

lab8_messages/main.cpp.

Definition at line 269 of file message.h.

18.18.2 Member Function Documentation

18.18.2.1 uint16_t MessageQueue::GetCount ()

GetCount.

Return the number of messages pending in the "receive" queue.

Returns

Count of pending messages in the queue.

```
18.18.2.2 void MessageQueue::Init ( )
```

Init.

Initialize the message queue prior to use.

Examples:

lab8_messages/main.cpp.

```
18.18.2.3 Message * Message Queue::Receive ( )
```

Receive.

Receive a message from the message queue. If the message queue is empty, the thread will block until a message is available.

Returns

Pointer to a message object at the head of the queue

Examples:

lab8_messages/main.cpp.

```
18.18.2.4 Message* MessageQueue::Receive ( uint32_t u32TimeWaitMS_ )
```

Receive.

Receive a message from the message queue. If the message queue is empty, the thread will block until a message is available for the duration specified. If no message arrives within that duration, the call will return with NULL.

Parameters

u32TimeWaitM⇔	The amount of time in ms to wait for a message before timing out and unblocking the waiting
S_	thread.

Returns

Pointer to a message object at the head of the queue or NULL on timeout.

```
18.18.2.5 Message* MessageQueue::Receive_i(uint32_t u32TimeWaitMS_) [private]
```

Receive i.

Internal function used to abstract timed and un-timed Receive calls.

u32TimeWaitM⊷	Time (in ms) to block, 0 for un-timed call.
S	

Returns

Pointer to a message, or 0 on timeout.

```
18.18.2.6 void MessageQueue::Send ( Message * pclSrc_ )
```

Send.

Send a message object into this message queue. Will un-block the first waiting thread blocked on this queue if that occurs.

Parameters

```
pclSrc_ Pointer to the message object to add to the queue
```

Examples:

lab8_messages/main.cpp.

The documentation for this class was generated from the following file:


• /media/usb/project/github/Mark3/kernel/public/message.h

18.19 Mutex Class Reference

Mutual-exclusion locks, based on BlockingObject.

```
#include <mutex.h>
```

Inheritance diagram for Mutex:

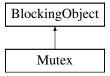

Public Member Functions

• void Init ()

Init.

• void Claim ()

Claim.

• bool Claim (uint32 t u32WaitTimeMS)

Claim

void WakeMe (Thread *pclOwner_)

WakeMe.

• void Release ()

Release.

Private Member Functions

```
    uint8_t WakeNext ()
        WakeNext.
    bool Claim_i (uint32_t u32WaitTimeMS_)
        Claim_i.
```

Private Attributes

• uint8 t m u8Recurse

The recursive lock-count when a mutex is claimed multiple times by the same owner.

· bool m_bReady

State of the mutex - true = ready, false = claimed.

• uint8 t m u8MaxPri

Maximum priority of thread in queue, used for priority inheritence.

Thread * m_pclOwner

Pointer to the thread that owns the mutex (when claimed)

Additional Inherited Members

18.19.1 Detailed Description

Mutual-exclusion locks, based on BlockingObject.

Examples:

```
lab5 mutexes/main.cpp.
```

Definition at line 64 of file mutex.h.

18.19.2 Member Function Documentation

```
18.19.2.1 void Mutex::Claim ( )
```

Claim.

Claim the mutex. When the mutex is claimed, no other thread can claim a region protected by the object. If another Thread currently holds the Mutex when the Claim method is called, that Thread will block until the current owner of the mutex releases the Mutex.

If the calling Thread's priority is lower than that of a Thread that currently owns the Mutex object, then the priority of that Thread will be elevated to that of the highest-priority calling object until the Mutex is released. This property is known as "Priority Inheritence"

Note: A single thread can recursively claim a mutex up to a count of

1. Attempting to claim a mutex beyond that will cause a kernel panic.

Examples:

```
lab5_mutexes/main.cpp.
```

```
18.19.2.2 bool Mutex::Claim ( uint32_t u32WaitTimeMS_ )
```

Claim.

Claim a mutex, with timeout.

```
u32WaitTimeM↔ S_
```

Returns

true - mutex was claimed within the time period specified false - mutex operation timed-out before the claim operation.

```
18.19.2.3 bool Mutex::Claim_i ( uint32_t u32WaitTimeMS_ ) [private]
```

Claim_i.

Abstracts out timed/non-timed mutex claim operations.

Parameters

u32WaitTimeM⇔	Time in MS to wait, 0 for infinite
S_	

Returns

true on successful claim, false otherwise

```
18.19.2.4 void Mutex::Init ( )
```

Init.

Initialize a mutex object for use - must call this function before using the object.

Examples:

lab5_mutexes/main.cpp.

```
18.19.2.5 void Mutex::Release ( )
```

Release.

Release the mutex. When the mutex is released, another object can enter the mutex-protected region.

If there are Threads waiting for the Mutex to become available, then the highest priority Thread will be unblocked at this time and will claim the Mutex lock immediately - this may result in an immediate context switch, depending on relative priorities.

If the calling Thread's priority was boosted as a result of priority inheritence, the Thread's previous priority will also be restored at this time.

Note that if a Mutex is held recursively, it must be Release'd the same number of times that it was Claim'd before it will be availabel for use by another Thread.

Examples:

lab5_mutexes/main.cpp.

18.19.2.6 void Mutex::WakeMe (Thread * pclOwner_)

WakeMe.

Wake a thread blocked on the mutex. This is an internal function used for implementing timed mutexes relying on timer callbacks. Since these do not have access to the private data of the mutex and its base classes, we have to wrap this as a public method - do not use this for any other purposes.

pclOwner_ Thread to unblock from this object.

18.19.2.7 uint8_t Mutex::WakeNext() [private]

WakeNext.

Wake the next thread waiting on the Mutex.

The documentation for this class was generated from the following file:


• /media/usb/project/github/Mark3/kernel/public/mutex.h

18.20 Notify Class Reference

The Notify class is a blocking object type, that allows one or more threads to wait for an event to occur before resuming operation.

```
#include <notify.h>
```

Inheritance diagram for Notify:

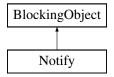

Public Member Functions

void Init (void)

Init.

• void Signal (void)

Signal.

void Wait (bool *pbFlag_)

Wait

bool Wait (uint32_t u32WaitTimeMS_, bool *pbFlag_)

Wait

void WakeMe (Thread *pclChosenOne_)

WakeMe.

Additional Inherited Members

18.20.1 Detailed Description

The Notify class is a blocking object type, that allows one or more threads to wait for an event to occur before resuming operation.

Examples:

lab10_notifications/main.cpp.

Definition at line 33 of file notify.h.

18.20.2 Member Function Documentation

```
18.20.2.1 void Notify::Init (void)
```

Init.

Initialze the Notification object prior to use.

Examples:

lab10_notifications/main.cpp.

```
18.20.2.2 void Notify::Signal (void)
```

Signal.

Signal the notification object. This will cause the highest priority thread currently blocking on the object to wake. If no threads are currently blocked on the object, the call has no effect.

Examples:

lab10_notifications/main.cpp.

```
18.20.2.3 void Notify::Wait ( bool * pbFlag_ )
```

Wait.

Block the current thread, waiting for a signal on the object.

Parameters

- [Flore and to folio and blook and two common conferences
pbFlaa	Flag set to false on block, and true upon wakeup.
ρωωg_	riag out to laise on bloom, and the open manage.

Examples:

lab10_notifications/main.cpp.

```
18.20.2.4 bool Notify::Wait ( uint32_t u32WaitTimeMS_, bool * pbFlag_ )
```

Wait.

Block the current thread, waiting for a signal on the object.

Parameters

u32WaitTimeM⊷	Time to wait for the notification event.
S_	
pbFlag_	Flag set to false on block, and true upon wakeup.

Returns

true on notification, false on timeout

```
18.20.2.5 void Notify::WakeMe ( Thread * pclChosenOne_ )
```

WakeMe.

Wake the specified thread from its current blocking queue. Note that this is only public in order to be accessible from a timer callack.

pclChosenOne←	Thread to wake up
_	

The documentation for this class was generated from the following file:

• /media/usb/project/github/Mark3/kernel/public/notify.h

18.21 PriorityMap Class Reference

```
The PriorityMap class.
```

```
#include <priomap.h>
```

Public Member Functions

• PriorityMap ()

PriorityMap.

void Set (PORT_PRIO_TYPE uXPrio_)

Set Set the priority map bitmap data, at all levels, for the given priority.

void Clear (PORT_PRIO_TYPE uXPrio_)

Clear Clear the priority map bitmap data, at all levels, for the given priority.

PORT_PRIO_TYPE HighestPriority (void)

HighestPriority.

18.21.1 Detailed Description

The PriorityMap class.

Definition at line 70 of file priomap.h.

18.21.2 Constructor & Destructor Documentation

```
18.21.2.1 PriorityMap::PriorityMap ( )
```

PriorityMap.

Initialize the priority map object, clearing the bitamp data to all 0's.

Definition at line 51 of file priomap.cpp.

18.21.3 Member Function Documentation

```
18.21.3.1 void PriorityMap::Clear ( PORT_PRIO_TYPE uXPrio_ )
```

Clear Clear the priority map bitmap data, at all levels, for the given priority.

Parameters

uXPrio	Priority level to clear the bitmap data for.
U/ (1 / 10	i nonty lovor to oloar the bitmap data ion

Definition at line 78 of file priomap.cpp.

```
18.21.3.2 PORT_PRIO_TYPE PriorityMap::HighestPriority (void)
```

HighestPriority.

Computes the numeric priority of the highest-priority thread represented in the priority map.

Returns

Highest priority ready-thread's number.

Definition at line 94 of file priomap.cpp.

```
18.21.3.3 void PriorityMap::Set ( PORT PRIO TYPE uXPrio_ )
```

Set Set the priority map bitmap data, at all levels, for the given priority.

Parameters

```
uXPrio_ Priority level to set the bitmap data for.
```

Definition at line 64 of file priomap.cpp.

The documentation for this class was generated from the following files:

- /media/usb/project/github/Mark3/kernel/public/priomap.h
- /media/usb/project/github/Mark3/kernel/priomap.cpp

18.22 ProfileTimer Class Reference

```
Profiling timer.
```

```
#include file.h>
```

Public Member Functions

```
void Init ()
```

Init.

• void Start ()

Start.

void Stop ()

Stop.

• uint32_t GetAverage ()

GetAverage.

• uint32_t GetCurrent ()

GetCurrent.

Private Member Functions

uint32_t ComputeCurrentTicks (uint16_t u16Current_, uint32_t u32Epoch_)

ComputeCurrentTicks.

Private Attributes

• uint32_t m_u32Cumulative

Cumulative tick-count for this timer.

uint32_t m_u32CurrentIteration

Tick-count for the current iteration.

• uint16_t m_u16Initial

Initial count.

• uint32_t m_u32InitialEpoch

Initial Epoch.

• uint16_t m_u16Iterations

Number of iterations executed for this profiling timer.

• bool m_bActive

Wheter or not the timer is active or stopped.

18.22.1 Detailed Description

Profiling timer.

This class is used to perform high-performance profiling of code to see how int32_t certain operations take. useful in instrumenting the performance of key algorithms and time-critical operations to ensure real-timer behavior.

Definition at line 69 of file profile.h.

18.22.2 Member Function Documentation

18.22.2.1 uint32_t ProfileTimer::ComputeCurrentTicks(uint16_t u16Current_, uint32_t u32Epoch_) [private]

ComputeCurrentTicks.

Figure out how many ticks have elapsed in this iteration

Parameters

u16Count_	Current timer count
u32Epoch_	Current timer epoch

Returns

Current tick count

18.22.2.2 uint32_t ProfileTimer::GetAverage ()

GetAverage.

Get the average time associated with this operation.

Returns

Average tick count normalized over all iterations

```
18.22.2.3 uint32_t ProfileTimer::GetCurrent ( )
```

GetCurrent.

Return the current tick count held by the profiler. Valid for both active and stopped timers.

Returns

The currently held tick count.

```
18.22.2.4 void ProfileTimer::Init ( )
```

Init.

Initialize the profiling timer prior to use. Can also be used to reset a timer that's been used previously.

```
18.22.2.5 void ProfileTimer::Start ( )
```

Start.

Start a profiling session, if the timer is not already active. Has no effect if the timer is already active.

```
18.22.2.6 void ProfileTimer::Stop ( )
```

Stop.

Stop the current profiling session, adding to the cumulative time for this timer, and the total iteration count.

The documentation for this class was generated from the following file:

/media/usb/project/github/Mark3/kernel/public/profile.h

18.23 Quantum Class Reference

Static-class used to implement Thread quantum functionality, which is a key part of round-robin scheduling.

```
#include <quantum.h>
```

Static Public Member Functions

static void UpdateTimer ()

UpdateTimer.

static void AddThread (Thread *pclThread_)

AddThread.

• static void RemoveThread ()

RemoveThread.

• static void SetInTimer (void)

SetInTimer.

• static void ClearInTimer (void)

ClearInTimer.

Static Private Member Functions

static void SetTimer (Thread *pclThread_)
 SetTimer.

18.23.1 Detailed Description

Static-class used to implement Thread quantum functionality, which is a key part of round-robin scheduling. Definition at line 41 of file quantum.h.

18.23.2 Member Function Documentation

```
18.23.2.1 static void Quantum::AddThread ( Thread * pclThread_ ) [static]
```

AddThread.

Add the thread to the quantum timer. Only one thread can own the quantum, since only one thread can be running on a core at a time.

```
18.23.2.2 static void Quantum::ClearInTimer (void ) [inline], [static]
```

ClearInTimer.

Clear the flag once the timer callback function has been completed.

Definition at line 83 of file quantum.h.

```
18.23.2.3 static void Quantum::RemoveThread() [static]
```

RemoveThread.

Remove the thread from the quantum timer. This will cancel the timer.

```
18.23.2.4 static void Quantum::SetInTimer ( void ) [inline], [static]
```

SetInTimer.

Set a flag to indicate that the CPU is currently running within the timer-callback routine. This prevents the Quantum timer from being updated in the middle of a callback cycle, potentially resulting in the kernel timer becoming disabled.

Definition at line 77 of file quantum.h.

```
18.23.2.5 static void Quantum::SetTimer( Thread * pclThread_) [static], [private]
```

SetTimer.

Set up the quantum timer in the timer scheduler. This creates a one-shot timer, which calls a static callback in quantum.cpp that on expiry will pivot the head of the threadlist for the thread's priority. This is the mechanism that provides round-robin scheduling in the system.

Parameters

pclThread_ Pointer to the thread to set the Quantum timer on

```
18.23.2.6 static void Quantum::UpdateTimer() [static]
```

UpdateTimer.

This function is called to update the thread quantum timer whenever something in the scheduler has changed. This can result in the timer being re-loaded or started. The timer is never stopped, but if may be ignored on expiry.

The documentation for this class was generated from the following file:

/media/usb/project/github/Mark3/kernel/public/quantum.h

18.24 Scheduler Class Reference

```
Priority-based round-robin Thread scheduling, using ThreadLists for housekeeping.
```

```
#include <scheduler.h>
```

Static Public Member Functions

```
· static void Init ()
```

Init.

• static void Schedule ()

Schedule.

static void Add (Thread *pclThread_)

Add.

• static void Remove (Thread *pclThread_)

Remove

static bool SetScheduler (bool bEnable_)

SetScheduler.

static Thread * GetCurrentThread ()

GetCurrentThread.

static volatile Thread * GetNextThread ()

GetNextThread.

static ThreadList * GetThreadList (PORT_PRIO_TYPE uXPriority_)

GetThreadList.

static ThreadList * GetStopList ()

GetStopList.

• static bool IsEnabled ()

IsEnabled.

• static void QueueScheduler ()

QueueScheduler.

Static Private Attributes

static bool m bEnabled

Scheduler's state - enabled or disabled.

• static bool m bQueuedSchedule

Variable representing whether or not there's a queued scheduler operation.

static ThreadList m_clStopList

ThreadList for all stopped threads.

static ThreadList m_aclPriorities [KERNEL_NUM_PRIORITIES]

ThreadLists for all threads at all priorities.

static PriorityMap m_clPrioMap

Priority bitmap lookup structure, 1-bit per thread priority.

18.24.1 Detailed Description

Priority-based round-robin Thread scheduling, using ThreadLists for housekeeping.

Definition at line 62 of file scheduler.h.

18.24.2 Member Function Documentation

```
18.24.2.1 void Scheduler::Add ( Thread * pclThread_ ) [static]
```

Add.

Add a thread to the scheduler at its current priority level.

Parameters

```
pclThread Pointer to the thread to add to the scheduler
```

Definition at line 89 of file scheduler.cpp.

```
18.24.2.2 static Thread* Scheduler::GetCurrentThread() [inline], [static]
```

GetCurrentThread.

Return the pointer to the currently-running thread.

Returns

Pointer to the currently-running thread

Examples:

lab9_dynamic_threads/main.cpp.

Definition at line 121 of file scheduler.h.

```
18.24.2.3 static volatile Thread* Scheduler::GetNextThread() [inline], [static]
```

GetNextThread.

Return the pointer to the thread that should run next, according to the last run of the scheduler.

Returns

Pointer to the next-running thread

Definition at line 130 of file scheduler.h.

```
18.24.2.4 static ThreadList* Scheduler::GetStopList() [inline], [static]
```

GetStopList.

Return the pointer to the list of threads that are in the scheduler's stopped state.

Returns

Pointer to the ThreadList containing the stopped threads

Definition at line 150 of file scheduler.h.

```
18.24.2.5 static ThreadList* Scheduler::GetThreadList( PORT PRIO TYPE uXPriority_) [inline], [static]
```

GetThreadList.

Return the pointer to the active list of threads that are at the given priority level in the scheduler.

Parameters

uXPriority_ Priority level of the threadlist

Returns

Pointer to the ThreadList for the given priority level

Definition at line 141 of file scheduler.h.

```
18.24.2.6 void Scheduler::Init (void ) [static]
```

Init.

Intiailize the scheduler, must be called before use.

Definition at line 54 of file scheduler.cpp.

```
18.24.2.7 static bool Scheduler::IsEnabled ( ) [inline], [static]
```

IsEnabled.

Return the current state of the scheduler - whether or not scheddling is enabled or disabled.

Returns

true - scheduler enabled, false - disabled

Definition at line 159 of file scheduler.h.

```
18.24.2.8 static void Scheduler::QueueScheduler( ) [inline], [static]
```

QueueScheduler.

Tell the kernel to perform a scheduling operation as soon as the scheduler is re-enabled.

Definition at line 166 of file scheduler.h.

```
18.24.2.9 void Scheduler::Remove ( Thread * pclThread_ ) [static]
```

Remove.

Remove a thread from the scheduler at its current priority level.

Parameters

```
pclThread_ Pointer to the thread to be removed from the scheduler
```

Definition at line 95 of file scheduler.cpp.

```
18.24.2.10 void Scheduler::Schedule() [static]
```

Schedule.

Run the scheduler, determines the next thread to run based on the current state of the threads. Note that the next-thread chosen from this function is only valid while in a critical section.

Definition at line 63 of file scheduler.cpp.

18.24.2.11 bool Scheduler::SetScheduler(bool bEnable_) [static]

SetScheduler.

Set the active state of the scheduler. When the scheduler is disabled, the *next thread* is never set; the currently running thread will run forever until the scheduler is enabled again. Care must be taken to ensure that we don't end up trying to block while the scheduler is disabled, otherwise the system ends up in an unusable state.

Parameters

```
bEnable_ true to enable, false to disable the scheduler
```

Definition at line 101 of file scheduler.cpp.

The documentation for this class was generated from the following files:


- /media/usb/project/github/Mark3/kernel/public/scheduler.h
- /media/usb/project/github/Mark3/kernel/scheduler.cpp

18.25 Semaphore Class Reference

Binary & Counting semaphores, based on BlockingObject base class.

```
#include <ksemaphore.h>
```

Inheritance diagram for Semaphore:

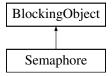

Public Member Functions

- void Init (uint16_t u16InitVal_, uint16_t u16MaxVal_)
 Initialize a semaphore before use.
- bool Post ()

Increment the semaphore count.

• void Pend ()

Decrement the semaphore count.

uint16_t GetCount ()

Return the current semaphore counter.

bool Pend (uint32_t u32WaitTimeMS_)

Decrement the semaphore count.

void WakeMe (Thread *pclChosenOne_)

Wake a thread blocked on the semaphore.

Private Member Functions

uint8 t WakeNext ()

Wake the next thread waiting on the semaphore.

bool Pend_i (uint32_t u32WaitTimeMS_)

Pend_i.

Private Attributes

• uint16_t m_u16Value

Current count held by the semaphore.

• uint16_t m_u16MaxValue

Maximum count that can be held by this semaphore.

Additional Inherited Members

18.25.1 Detailed Description

Binary & Counting semaphores, based on BlockingObject base class.

Examples:

buffalogger/main.cpp, lab4_semaphores/main.cpp, lab6_timers/main.cpp, and lab9_dynamic_threads/main.cpp. cpp.

Definition at line 37 of file ksemaphore.h.

18.25.2 Member Function Documentation

```
18.25.2.1 uint16_t Semaphore::GetCount ( )
```

Return the current semaphore counter.

This can be usedd by a thread to bypass blocking on a semaphore - allowing it to do other things until a non-zero count is returned, instead of blocking until the semaphore is posted.

Returns

The current semaphore counter value.

```
18.25.2.2 void Semaphore::Init ( uint16_t u16InitVal_, uint16_t u16MaxVal_ )
```

Initialize a semaphore before use.

Must be called before attempting post/pend operations on the object.

This initialization is required to configure the behavior of the semaphore with regards to the initial and maximum values held by the semaphore. By providing access to the raw initial and maximum count elements of the semaphore, these objects are able to be used as either counting or binary semaphores.

To configure a semaphore object for use as a binary semaphore, set values of 0 and 1 respectively for the initial/maximum value parameters.

Any other combination of values can be used to implement a counting semaphore.

Parameters

u16InitVal_	Initial value held by the semaphore
u16MaxVal_	Maximum value for the semaphore. Must be nonzero.

Examples:

buffalogger/main.cpp, lab4_semaphores/main.cpp, lab6_timers/main.cpp, and lab9_dynamic_threads/main. ← cpp.

18.25.2.3 void Semaphore::Pend ()

Decrement the semaphore count.

If the count is zero, the calling Thread will block until the semaphore is posted, and the Thread's priority is higher than that of any other Thread blocked on the object.

Examples:

buffalogger/main.cpp, lab4_semaphores/main.cpp, lab6_timers/main.cpp, and lab9_dynamic_threads/main.cpp, cpp.

18.25.2.4 bool Semaphore::Pend (uint32_t u32WaitTimeMS_)

Decrement the semaphore count.

If the count is zero, the thread will block until the semaphore is pended. If the specified interval expires before the thread is unblocked, then the status is returned back to the user.

Returns

true - semaphore was acquired before the timeout false - timeout occurred before the semaphore was claimed.

18.25.2.5 bool Semaphore::Pend_i (uint32_t u32WaitTimeMS_) [private]

Pend_i.

Internal function used to abstract timed and untimed semaphore pend operations.

Parameters

u32WaitTimeM⇔	Time in MS to wait
S_	

Returns

true on success, false on failure.

18.25.2.6 bool Semaphore::Post ()

Increment the semaphore count.

If the semaphore count is zero at the time this is called, and there are threads blocked on the object, this will immediately unblock the highest-priority blocked Thread.

Note that if the priority of that Thread is higher than the current thread's priority, a context switch will occur and control will be relinquished to that Thread.

Returns

true if the semaphore was posted, false if the count is already maxed out.

Examples:

buffalogger/main.cpp, lab4_semaphores/main.cpp, lab6_timers/main.cpp, and lab9_dynamic_threads/main. ← cpp.

```
18.25.2.7 void Semaphore::WakeMe ( Thread * pclChosenOne_ )
```

Wake a thread blocked on the semaphore.

This is an internal function used for implementing timed semaphores relying on timer callbacks. Since these do not have access to the private data of the semaphore and its base classes, we have to wrap this as a public method - do not used this for any other purposes.

```
18.25.2.8 uint8_t Semaphore::WakeNext( ) [private]
```

Wake the next thread waiting on the semaphore.

Used internally.

The documentation for this class was generated from the following file:

/media/usb/project/github/Mark3/kernel/public/ksemaphore.h

18.26 Thread Class Reference

Object providing fundamental multitasking support in the kernel.

```
#include <thread.h>
```

Inheritance diagram for Thread:



Public Member Functions

```
    void Init (K_WORD *pwStack_, uint16_t u16StackSize_, PORT_PRIO_TYPE uXPriority_, ThreadEntry_
        t pfEntryPoint_, void *pvArg_)
```

Init.

• void Start ()

Start.

• void Stop ()

Stop.

ThreadList * GetOwner (void)

GetOwner.

ThreadList * GetCurrent (void)

GetCurrent.

PORT_PRIO_TYPE GetPriority (void)

GetPriority.

PORT_PRIO_TYPE GetCurPriority (void)

GetCurPriority.

void SetQuantum (uint16_t u16Quantum_)

SetQuantum.

• uint16_t GetQuantum (void)

GetQuantum.

void SetCurrent (ThreadList *pclNewList_)

```
SetCurrent.

    void SetOwner (ThreadList *pclNewList_)

          SetOwner.

    void SetPriority (PORT PRIO TYPE uXPriority )

           SetPriority.

    void InheritPriority (PORT PRIO TYPE uXPriority )

           InheritPriority.
    • void Exit ()
          Fxit.

    void SetID (uint8 t u8ID )

          SetID.
    uint8_t GetID ()
           GetID.

    uint16_t GetStackSlack ()

           GetStackSlack.

    uint16_t GetEventFlagMask ()

          GetEventFlagMask returns the thread's current event-flag mask, which is used in conjunction with the EventFlag
          blocking object type.

    void SetEventFlagMask (uint16_t u16Mask_)

           SetEventFlagMask Sets the active event flag bitfield mask.

    void SetEventFlagMode (EventFlagOperation t eMode )

           SetEventFlagMode Sets the active event flag operation mode.

    EventFlagOperation_t GetEventFlagMode ()

          GetEventFlagMode Returns the thread's event flag's operating mode.

    Timer * GetTimer ()

           Return a pointer to the thread's timer object.

    void SetExpired (bool bExpired_)

           SetExpired.

    bool GetExpired ()

           GetExpired.

    void InitIdle ()

          InitIdle Initialize this Thread object as the Kernel's idle thread.

    void * GetExtendedContext ()

           GetExtendedContext.

    void SetExtendedContext (void *pvData )

           SetExtendedContext.
    • ThreadState_t GetState ()
           GetState Returns the current state of the thread to the caller.

    void SetState (ThreadState_t eState_)

           SetState Set the thread's state to a new value.

    K_WORD * GetStack ()

           GetStack.

    uint16 t GetStackSize ()

           GetStackSize.
Static Public Member Functions

    static void Sleep (uint32_t u32TimeMs_)

    • static void USleep (uint32_t u32TimeUs_)
           USleep.

    static void Yield (void)
```

Yield.

Private Member Functions

void SetPriorityBase (PORT_PRIO_TYPE uXPriority_)
 SetPriorityBase.

Static Private Member Functions

· static void ContextSwitchSWI (void)

ContextSwitchSWI.

Private Attributes

K WORD * m pwStackTop

Pointer to the top of the thread's stack.

K_WORD * m_pwStack

Pointer to the thread's stack.

· uint8 t m u8ThreadID

Thread ID.

PORT_PRIO_TYPE m_uXPriority

Default priority of the thread.

PORT_PRIO_TYPE m_uXCurPriority

Current priority of the thread (priority inheritence)

ThreadState_t m_eState

Enum indicating the thread's current state.

void * m_pvExtendedContext

Pointer provided to a Thread to implement thread-local storage.

uint16_t m_u16StackSize

Size of the stack (in bytes)

ThreadList * m_pclCurrent

Pointer to the thread-list where the thread currently resides.

ThreadList * m_pclOwner

Pointer to the thread-list where the thread resides when active.

ThreadEntry_t m_pfEntryPoint

The entry-point function called when the thread starts.

void * m_pvArg

Pointer to the argument passed into the thread's entrypoint.

• uint16_t m_u16Quantum

Thread quantum (in milliseconds)

uint16_t m_u16FlagMask

Event-flag mask.

• EventFlagOperation_t m_eFlagMode

Event-flag mode.

Timer m_clTimer

Timer used for blocking-object timeouts.

· bool m_bExpired

Indicate whether or not a blocking-object timeout has occurred.

Friends

· class ThreadPort

Additional Inherited Members

18.26.1 Detailed Description

Object providing fundamental multitasking support in the kernel.

Examples:

buffalogger/main.cpp, lab10_notifications/main.cpp, lab11_mailboxes/main.cpp, lab1_kernel_setup/main.cpp, lab2_idle_function/main.cpp, lab3_round_robin/main.cpp, lab4_semaphores/main.cpp, lab5_mutexes/main.cpp, cpp, lab6_timers/main.cpp, lab7_events/main.cpp, lab8_messages/main.cpp, and lab9_dynamic_cthreads/main.cpp.

Definition at line 60 of file thread.h.

18.26.2 Member Function Documentation

```
18.26.2.1 void Thread::ContextSwitchSWI(void) [static], [private]
```

ContextSwitchSWI.

This code is used to trigger the context switch interrupt. Called whenever the kernel decides that it is necessary to swap out the current thread for the "next" thread.

Definition at line 493 of file thread.cpp.

```
18.26.2.2 void Thread::Exit ( )
```

Exit.

Remove the thread from being scheduled again. The thread is effectively destroyed when this occurs. This is extremely useful for cases where a thread encounters an unrecoverable error and needs to be restarted, or in the context of systems where threads need to be created and destroyed dynamically.

This must not be called on the idle thread.

Examples:

```
lab9_dynamic_threads/main.cpp.
```

```
18.26.2.3 PORT_PRIO_TYPE Thread::GetCurPriority ( void ) [inline]
```

GetCurPriority.

Return the priority of the current thread

Returns

Priority of the current thread

Definition at line 182 of file thread.h.

```
18.26.2.4 ThreadList* Thread::GetCurrent ( void ) [inline]
```

GetCurrent.

Return the ThreadList where the thread is currently located

Returns

Pointer to the thread's current list

Definition at line 165 of file thread.h.

```
18.26.2.5 uint16_t Thread::GetEventFlagMask( ) [inline]
```

GetEventFlagMask returns the thread's current event-flag mask, which is used in conjunction with the EventFlag blocking object type.

Returns

A copy of the thread's event flag mask

Definition at line 327 of file thread.h.

```
18.26.2.6 EventFlagOperation_t Thread::GetEventFlagMode( ) [inline]
```

GetEventFlagMode Returns the thread's event flag's operating mode.

Returns

The thread's event flag mode.

Definition at line 343 of file thread.h.

```
18.26.2.7 bool Thread::GetExpired ( )
```

GetExpired.

Return the status of the most-recent blocking call on the thread.

Returns

```
true - call expired, false - call did not expire
```

```
18.26.2.8 void* Thread::GetExtendedContext( ) [inline]
```

GetExtendedContext.

Return the Thread object's extended-context data pointer. Used by code implementing a user-defined thread-local storage model. Pointer exists only for the lifespan of the Thread.

Returns

Thread's extended context data pointer.

Definition at line 391 of file thread.h.

```
18.26.2.9 uint8_t Thread::GetID( ) [inline]
```

GetID.

Return the 8-bit ID corresponding to this thread.

Returns

Thread's 8-bit ID, set by the user

Definition at line 304 of file thread.h.

```
18.26.2.10 ThreadList* Thread::GetOwner(void) [inline]
GetOwner.
Return the ThreadList where the thread belongs when it's in the active/ready state in the scheduler.
Returns
      Pointer to the Thread's owner list
Definition at line 157 of file thread.h.
18.26.2.11 PORT_PRIO_TYPE Thread::GetPriority ( void ) [inline]
GetPriority.
Return the priority of the current thread
Returns
      Priority of the current thread
Definition at line 174 of file thread.h.
18.26.2.12 uint16_t Thread::GetQuantum (void ) [inline]
GetQuantum.
Get the thread's round-robin execution quantum.
Returns
      The thread's quantum
Definition at line 199 of file thread.h.
18.26.2.13 K_WORD* Thread::GetStack( ) [inline]
GetStack.
Returns
      Pointer to the blob of memory used as the thread's stack
Definition at line 427 of file thread.h.
18.26.2.14 uint16_t Thread::GetStackSize ( ) [inline]
GetStackSize.
Returns
      Size of the thread's stack in bytes
Definition at line 433 of file thread.h.
```

```
18.26.2.15 uint16_t Thread::GetStackSlack ( )
```

GetStackSlack.

Performs a (somewhat lengthy) check on the thread stack to check the amount of stack margin (or "slack") remaining on the stack. If you're having problems with blowing your stack, you can run this function at points in your code during development to see what operations cause problems. Also useful during development as a tool to optimally size thread stacks.

Returns

The amount of slack (unused bytes) on the stack

ToDo: Reverse the logic for MCUs where stack grows UP instead of down

Examples:

lab9_dynamic_threads/main.cpp.

Definition at line 352 of file thread.cpp.

```
18.26.2.16 ThreadState t Thread::GetState() [inline]
```

GetState Returns the current state of the thread to the caller.

Can be used to determine whether or not a thread is ready (or running), stopped, or terminated/exit'd.

Returns

ThreadState t representing the thread's current state

Examples:

```
lab9_dynamic_threads/main.cpp.
```

Definition at line 413 of file thread.h.

```
18.26.2.17 void Thread::InheritPriority ( PORT_PRIO_TYPE uXPriority_ )
```

InheritPriority.

Allow the thread to run at a different priority level (temporarily) for the purpose of avoiding priority inversions. This should only be called from within the implementation of blocking-objects.

Parameters

```
uXPriority_ New Priority to boost to.
```

Definition at line 482 of file thread.cpp.

```
18.26.2.18 void Thread::Init ( K_WORD * pwStack_, uint16_t u16StackSize_, PORT_PRIO_TYPE uXPriority_, ThreadEntry_t pfEntryPoint_, void * pvArg_ )
```

Init.

Initialize a thread prior to its use. Initialized threads are placed in the stopped state, and are not scheduled until the thread's start method has been invoked first.

pwStack_	Pointer to the stack to use for the thread
u16StackSize_	Size of the stack (in bytes)
uXPriority_	Priority of the thread (0 = idle, 7 = max)
pfEntryPoint_	This is the function that gets called when the thread is started
pvArg_	Pointer to the argument passed into the thread's entrypoint function.

Examples:

buffalogger/main.cpp, lab10_notifications/main.cpp, lab11_mailboxes/main.cpp, lab1_kernel_setup/main.cpp, lab2_idle_function/main.cpp, lab3_round_robin/main.cpp, lab4_semaphores/main.cpp, lab5_mutexes/main.cpp, cpp, lab6_timers/main.cpp, lab7_events/main.cpp, lab8_messages/main.cpp, and lab9_dynamic_ \leftarrow threads/main.cpp.

Definition at line 70 of file thread.cpp.

```
18.26.2.19 void Thread::InitIdle ( )
```

InitIdle Initialize this Thread object as the Kernel's idle thread.

There should only be one of these, maximum, in a given system.

```
18.26.2.20 void Thread::SetCurrent ( ThreadList * pclNewList_ ) [inline]
```

SetCurrent.

Set the thread's current to the specified thread list

Parameters

pcinewList_ Pointer to the threadist to apply thread ownership	pclNewList_	Pointer to the threadlist to apply thread ownership
--	-------------	---

Definition at line 209 of file thread.h.

18.26.2.21 void Thread::SetEventFlagMask (uint16_t u16Mask_) [inline]

SetEventFlagMask Sets the active event flag bitfield mask.

Parameters

u16Mask

Definition at line 332 of file thread.h.

18.26.2.22 void Thread::SetEventFlagMode (EventFlagOperation t eMode_) [inline]

SetEventFlagMode Sets the active event flag operation mode.

Parameters

eMode_	Event flag operation mode, defines the logical operator to apply to the event flag.
--------	---

Definition at line 338 of file thread.h.

18.26.2.23 void Thread::SetExpired (bool bExpired_)

SetExpired.

Set the status of the current blocking call on the thread.

Parameters

```
bExpired_ true - call expired, false - call did not expire
```

18.26.2.24 void Thread::SetExtendedContext (void * pvData_) [inline]

SetExtendedContext.

Assign the Thread object's extended-context data pointer. Used by code implementing a user-defined thread-local storage model.

Object assigned to the context pointer should persist for the duration of the Thread.

Parameters

```
pvData_ Object to assign to the extended data pointer.+
```

Definition at line 404 of file thread.h.

18.26.2.25 void Thread::SetID (uint8_t u8ID_) [inline]

SetID.

Set an 8-bit ID to uniquely identify this thread.

Parameters

```
u8ID_ 8-bit Thread ID, set by the user
```

Definition at line 296 of file thread.h.

18.26.2.26 void Thread::SetOwner (ThreadList * pclNewList_) [inline]

SetOwner.

Set the thread's owner to the specified thread list

Parameters

```
pclNewList_ Pointer to the threadlist to apply thread ownership
```

Definition at line 217 of file thread.h.

18.26.2.27 void Thread::SetPriority (PORT_PRIO_TYPE uXPriority_)

SetPriority.

Set the priority of the Thread (running or otherwise) to a different level. This activity involves re-scheduling, and must be done so with due caution, as it may effect the determinism of the system.

This should always be called from within a critical section to prevent system issues.

Parameters

```
uXPriority_ New priority of the thread
```

Definition at line 433 of file thread.cpp.

18.26.2.28 void Thread::SetPriorityBase (PORT_PRIO_TYPE uXPriority_) [private]

SetPriorityBase.

uXPriority_

Definition at line 419 of file thread.cpp.

18.26.2.29 void Thread::SetQuantum (uint16_t u16Quantum_) [inline]

SetQuantum.

Set the thread's round-robin execution quantum.

Parameters

u16Quantum_ Thread's execution quantum (in milliseconds)

Examples:

lab3_round_robin/main.cpp.

Definition at line 191 of file thread.h.

18.26.2.30 void Thread::SetState (ThreadState_t eState_) [inline]

SetState Set the thread's state to a new value.

This is only to be used by code within the kernel, and is not indended for use by an end-user.

Parameters

eState_ New thread state to set.

Definition at line 421 of file thread.h.

18.26.2.31 static void Thread::Sleep (uint32_t u32TimeMs_) [static]

Sleep.

Put the thread to sleep for the specified time (in milliseconds). Actual time slept may be longer (but not less than) the interval specified.

Parameters

u32TimeMs_ Time to sleep (in ms)

Examples:

buffalogger/main.cpp, lab10_notifications/main.cpp, lab11_mailboxes/main.cpp, lab1_kernel_setup/main.cpp, cpp, lab2_idle_function/main.cpp, lab7_events/main.cpp, lab8_messages/main.cpp, and lab9_dynamic_cthreads/main.cpp.

18.26.2.32 void Thread::Start (void)

Start.

Start the thread - remove it from the stopped list, add it to the scheduler's list of threads (at the thread's set priority), and continue along.

Examples:

buffalogger/main.cpp, lab10_notifications/main.cpp, lab11_mailboxes/main.cpp, lab1_kernel_setup/main.cpp, lab2_idle_function/main.cpp, lab3_round_robin/main.cpp, lab4_semaphores/main.cpp, lab5_mutexes/main.⇔

cpp, lab6_timers/main.cpp, lab7_events/main.cpp, lab8_messages/main.cpp, and lab9_dynamic_ threads/main.cpp.

Definition at line 146 of file thread.cpp.

```
18.26.2.33 void Thread::Stop ( )
```

Stop.

Stop a thread that's actively scheduled without destroying its stacks. Stopped threads can be restarted using the Start() API.

Definition at line 188 of file thread.cpp.

```
18.26.2.34 static void Thread::USleep ( uint32_t u32TimeUs_ ) [static]
```

USleep.

Put the thread to sleep for the specified time (in microseconds). Actual time slept may be longer (but not less than) the interval specified.

Parameters

```
u32TimeUs_ Time to sleep (in microseconds)
```

```
18.26.2.35 void Thread::Yield (void ) [static]
```

Yield.

Yield the thread - this forces the system to call the scheduler and determine what thread should run next. This is typically used when threads are moved in and out of the scheduler.

Definition at line 387 of file thread.cpp.

The documentation for this class was generated from the following files:


- /media/usb/project/github/Mark3/kernel/public/thread.h
- /media/usb/project/github/Mark3/kernel/thread.cpp

18.27 ThreadList Class Reference

This class is used for building thread-management facilities, such as schedulers, and blocking objects.

```
#include <threadlist.h>
```

Inheritance diagram for ThreadList:

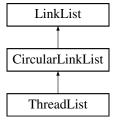

Public Member Functions

• ThreadList ()

ThreadList.

void SetPriority (PORT_PRIO_TYPE uXPriority_)

SetPriority.

void SetMapPointer (PriorityMap *pclMap_)

SetMapPointer.

void Add (LinkListNode *node_)

Add

void Add (LinkListNode *node_, PriorityMap *pclMap_, PORT_PRIO_TYPE uXPriority_)

Add.

void AddPriority (LinkListNode *node_)

AddPriority.

• void Remove (LinkListNode *node_)

Remove.

• Thread * HighestWaiter ()

HighestWaiter.

Private Attributes

PORT_PRIO_TYPE m_uXPriority

Priority of the threadlist.

PriorityMap * m_pclMap

Pointer to the bitmap/flag to set when used for scheduling.

Additional Inherited Members

18.27.1 Detailed Description

This class is used for building thread-management facilities, such as schedulers, and blocking objects.

Definition at line 35 of file threadlist.h.

18.27.2 Constructor & Destructor Documentation

```
18.27.2.1 ThreadList::ThreadList( ) [inline]
```

ThreadList.

Default constructor - zero-initializes the data.

Definition at line 44 of file threadlist.h.

18.27.3 Member Function Documentation

```
18.27.3.1 void ThreadList::Add ( LinkListNode * node_ )
```

Add.

Add a thread to the threadlist.

Parameters

node_	Pointer to the thread (link list node) to add to the list
-------	---

Definition at line 52 of file threadlist.cpp.

18.27.3.2 void ThreadList::Add (LinkListNode * node_, PriorityMap * pclMap_, PORT_PRIO_TYPE uXPriority_)

Add.

Add a thread to the threadlist, specifying the flag and priority at the same time.

Parameters

node_	Pointer to the thread to add (link list node)
pclMap_	Pointer to the bitmap flag to set (if used in a scheduler context), or NULL for non-scheduler.
uXPriority_	Priority of the threadlist

Definition at line 101 of file threadlist.cpp.

18.27.3.3 void ThreadList::AddPriority (LinkListNode * node_)

AddPriority.

Add a thread to the list such that threads are ordered from highest to lowest priority from the head of the list.

Parameters

node_	Pointer to a thread to add to the list.
-------	---

Definition at line 65 of file threadlist.cpp.

18.27.3.4 Thread * ThreadList::HighestWaiter ()

HighestWaiter.

Return a pointer to the highest-priority thread in the thread-list.

Returns

Pointer to the highest-priority thread

Definition at line 124 of file threadlist.cpp.

18.27.3.5 void ThreadList::Remove (LinkListNode * node_)

Remove.

Remove the specified thread from the threadlist

Parameters

	node_	Pointer to the thread to remove
--	-------	---------------------------------

Definition at line 111 of file threadlist.cpp.

18.27.3.6 void ThreadList::SetMapPointer (PriorityMap * pclMap_)

SetMapPointer.

Set the pointer to a bitmap to use for this threadlist. Once again, only needed when the threadlist is being used for scheduling purposes.

Parameters

pclMap_ Pointer to the priority map object used to track this thread.

Definition at line 46 of file threadlist.cpp.

18.27.3.7 void ThreadList::SetPriority (PORT_PRIO_TYPE uXPriority_)

SetPriority.

Set the priority of this threadlist (if used for a scheduler).

Parameters

uXPriority Priority level of the thread list

Definition at line 40 of file threadlist.cpp.

The documentation for this class was generated from the following files:

- /media/usb/project/github/Mark3/kernel/public/threadlist.h
- /media/usb/project/github/Mark3/kernel/threadlist.cpp

18.28 ThreadPort Class Reference

Class defining the architecture specific functions required by the kernel.

```
#include <threadport.h>
```

Static Public Member Functions

• static void StartThreads ()

StartThreads.

Static Private Member Functions

static void InitStack (Thread *pstThread_)
 InitStack.

Friends

· class Thread

18.28.1 Detailed Description

Class defining the architecture specific functions required by the kernel.

This is limited (at this point) to a function to start the scheduler, and a function to initialize the default stack-frame for a thread.

Definition at line 186 of file threadport.h.

160 Class Documentation

18.28.2 Member Function Documentation

```
18.28.2.1 void ThreadPort::InitStack ( Thread * pstThread_ ) [static], [private]
```

InitStack.

Initialize the thread's stack.

Parameters

```
pstThread_ Pointer to the thread to initialize
```

Definition at line 39 of file threadport.cpp.

```
18.28.2.2 void ThreadPort::StartThreads( ) [static]
```

StartThreads.

Function to start the scheduler, initial threads, etc.

Definition at line 130 of file threadport.cpp.

The documentation for this class was generated from the following files:

- /media/usb/project/github/Mark3/kernel/cpu/avr/atmega328p/gcc/public/threadport.h
- /media/usb/project/github/Mark3/kernel/cpu/avr/atmega328p/gcc/threadport.cpp

18.29 Timer Class Reference

Kernel-managed software timers.

```
#include <timer.h>
```

Inheritance diagram for Timer:



Public Member Functions

```
• Timer ()
```

Timer.

· void Init ()

Init.

- void Start (bool bRepeat_, uint32_t u32IntervalMs_, TimerCallback_t pfCallback_, void *pvData_)
- void Start (bool bRepeat_, uint32_t u32IntervalMs_, uint32_t u32ToleranceMs_, TimerCallback_t pf

 Callback_, void *pvData_)

Start.

• void Start ()

Start.

• void Stop ()

Stop.

void SetFlags (uint8_t u8Flags_)

SetFlags.

void SetCallback (TimerCallback_t pfCallback_)

SetCallback.

void SetData (void *pvData_)

SetData.

void SetOwner (Thread *pclOwner_)

SetOwner.

void SetIntervalTicks (uint32_t u32Ticks_)

SetIntervalTicks.

• void SetIntervalSeconds (uint32_t u32Seconds_)

SetIntervalSeconds.

• uint32_t GetInterval ()

GetInterval.

• void SetIntervalMSeconds (uint32_t u32MSeconds_)

SetIntervalMSeconds.

void SetIntervalUSeconds (uint32_t u32USeconds_)

SetIntervalUSeconds.

void SetTolerance (uint32 t u32Ticks)

SetTolerance.

Private Member Functions

void SetInitialized ()

SetInitialized.

• bool IsInitialized (void)

IsInitialized.

Private Attributes

• uint8_t m_u8Initialized

Cookie used to determine whether or not the timer is initialized.

uint8_t m_u8Flags

Flags for the timer, defining if the timer is one-shot or repeated.

TimerCallback_t m_pfCallback

Pointer to the callback function.

• uint32_t m_u32Interval

Interval of the timer in timer ticks.

uint32_t m_u32TimeLeft

Time remaining on the timer.

• uint32_t m_u32TimerTolerance

Maximum tolerance (usedd for timer harmonization)

Thread * m_pclOwner

Pointer to the owner thread.

void * m pvData

Pointer to the callback data.

Friends

· class TimerList

162 Class Documentation

Additional Inherited Members

18.29.1 Detailed Description

Kernel-managed software timers.

Kernel-managed timers, used to provide high-precision high-resolution delays. Functionality is useful to both usercode, and is used extensively within the kernel and its blocking objects to implement round-robin scheduling, thread sleep, and timeouts. Relies on a single hardware timer, which is multiplexed through the kernel.

Examples:

```
lab6_timers/main.cpp.
```

Definition at line 112 of file timer.h.

18.29.2 Constructor & Destructor Documentation

```
18.29.2.1 Timer::Timer ( )
```

Timer.

Default Constructor - Do nothing. Allow the init call to perform the necessary object initialization prior to use.

18.29.3 Member Function Documentation

```
18.29.3.1 uint32_t Timer::GetInterval() [inline]
```

GetInterval.

Return the timer's configured interval in ticks

Returns

Timer interval in ticks.

Definition at line 238 of file timer.h.

```
18.29.3.2 void Timer::Init ( )
```

Init

Re-initialize the Timer to default values.

```
18.29.3.3 bool Timer::IsInitialized (void ) [inline], [private]
```

IsInitialized.

Returns

Definition at line 280 of file timer.h.

```
18.29.3.4 void Timer::SetCallback ( TimerCallback_t pfCallback_ ) [inline]
```

SetCallback.

Define the callback function to be executed on expiry of the timer

Parameters

pfCallback_ Pointer to the callback function to call

Definition at line 195 of file timer.h.

18.29.3.5 void Timer::SetData (void * pvData_) [inline]

SetData.

Define a pointer to be sent to the timer callbcak on timer expiry

Parameters

pvData_ Pointer to data to pass as argument into the callback

Definition at line 203 of file timer.h.

18.29.3.6 void Timer::SetFlags (uint8_t u8Flags_) [inline]

SetFlags.

Set the timer's flags based on the bits in the u8Flags_ argument

Parameters

u8Flags_ Flags to assign to the timer object. TIMERLIST_FLAG_ONE_SHOT for a one-shot timer, 0 for a continuous timer.

Definition at line 187 of file timer.h.

18.29.3.7 void Timer::SetIntervalMSeconds (uint32_t u32MSeconds_)

SetIntervalMSeconds.

Set the timer expiry interval in milliseconds (platform agnostic)

Parameters

u32MSeconds⇔	Time in milliseconds
_	

18.29.3.8 void Timer::SetIntervalSeconds (uint32_t u32Seconds_)

SetIntervalSeconds.

Set the timer expiry interval in seconds (platform agnostic)

Parameters

u32Seconds_ Time in seconds

18.29.3.9 void Timer::SetIntervalTicks (uint32_t u32Ticks_)

SetIntervalTicks.

Set the timer expiry in system-ticks (platform specific!)

164 Class Documentation

Parameters

u32Ticks_	Time in ticks
-----------	---------------

18.29.3.10 void Timer::SetIntervalUSeconds (uint32_t u32USeconds_)

SetIntervalUSeconds.

Set the timer expiry interval in microseconds (platform agnostic)

Parameters

u32USeconds⊷	Time in microseconds
_	

18.29.3.11 void Timer::SetOwner (Thread * pclOwner_) [inline]

SetOwner.

Set the owner-thread of this timer object (all timers must be owned by a thread).

Parameters

pclOwner_	Owner thread of this timer object
-----------	-----------------------------------

Definition at line 212 of file timer.h.

18.29.3.12 void Timer::SetTolerance (uint32_t u32Ticks_)

SetTolerance.

Set the timer's maximum tolerance in order to synchronize timer processing with other timers in the system.

Parameters

u32Ticks_	Maximum tolerance in ticks

18.29.3.13 void Timer::Start (bool bRepeat_, uint32_t u32IntervalMs_, TimerCallback_t pfCallback_, void * pvData_)

Start.

Start a timer using default ownership, using repeats as an option, and millisecond resolution.

Parameters

bRepeat_	0 - timer is one-shot. 1 - timer is repeating.
u32IntervalMs⇔	- Interval of the timer in miliseconds
_	
pfCallback_	- Function to call on timer expiry
pvData_	- Data to pass into the callback function

Examples:

lab6_timers/main.cpp.

18.29.3.14 void Timer::Start (bool *bRepeat_*, uint32_t *u32IntervalMs_*, uint32_t *u32ToleranceMs_*, TimerCallback_t *pfCallback_*, void * *pvData_*)

Start.

Start a timer using default ownership, using repeats as an option, and millisecond resolution.

166 Class Documentation

Parameters

bRepeat_	0 - timer is one-shot. 1 - timer is repeating.
u32IntervalMs⇔	- Interval of the timer in miliseconds
_	
u32Tolerance⇔	- Allow the timer expiry to be delayed by an additional maximum time, in order to have as
Ms_	many timers expire at the same time as possible.
pfCallback_	- Function to call on timer expiry
pvData_	- Data to pass into the callback function

18.29.3.15 void Timer::Start ()

Start.

Start or restart a timer using parameters previously configured via calls to Start(<with args>), or via the a-la-carte parameter setter methods. This is especially useful for retriggering one-shot timers that have previously expired, using the timer's previous configuration.

18.29.3.16 void Timer::Stop ()

Stop.

Stop a timer already in progress. Has no effect on timers that have already been stopped.

The documentation for this class was generated from the following file:


· /media/usb/project/github/Mark3/kernel/public/timer.h

18.30 TimerList Class Reference

TimerList class - a doubly-linked-list of timer objects.

#include <timerlist.h>

Inheritance diagram for TimerList:

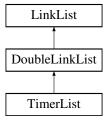

Public Member Functions

• void Init ()

Init.

void Add (Timer *pclListNode_)

Ada

• void Remove (Timer *pclLinkListNode_)

Remove.

· void Process ()

Process.

Private Attributes

• uint32_t m_u32NextWakeup

The time (in system clock ticks) of the next wakeup event.

· bool m bTimerActive

Whether or not the timer is active.

Additional Inherited Members

18.30.1 Detailed Description

TimerList class - a doubly-linked-list of timer objects.

Definition at line 39 of file timerlist.h.

18.30.2 Member Function Documentation

```
18.30.2.1 void TimerList::Add ( Timer * pclListNode_ )
```

Add.

Add a timer to the TimerList.

Parameters

```
pclListNode_ Pointer to the Timer to Add
```

```
18.30.2.2 void TimerList::Init ( )
```

Init.

Initialize the TimerList object. Must be called before using the object.

```
18.30.2.3 void TimerList::Process ( )
```

Process.

Process all timers in the timerlist as a result of the timer expiring. This will select a new timer epoch based on the next timer to expire.

```
18.30.2.4 void TimerList::Remove ( Timer * pclLinkListNode_ )
```

Remove.

Remove a timer from the TimerList, cancelling its expiry.

Parameters

```
pclListNode_ Pointer to the Timer to remove
```

The documentation for this class was generated from the following file:

• /media/usb/project/github/Mark3/kernel/public/timerlist.h

168 Class Documentation

18.31 TimerScheduler Class Reference

"Static" Class used to interface a global TimerList with the rest of the kernel.

```
#include <timerscheduler.h>
```

Static Public Member Functions

```
• static void Init ()
```

Init

static void Add (Timer *pclListNode_)

Ada

• static void Remove (Timer *pclListNode_)

Remove.

• static void Process ()

Process.

Static Private Attributes

· static TimerList m clTimerList

TimerList object manipu32ated by the Timer Scheduler.

18.31.1 Detailed Description

"Static" Class used to interface a global TimerList with the rest of the kernel.

Definition at line 38 of file timerscheduler.h.

18.31.2 Member Function Documentation

```
18.31.2.1 static void TimerScheduler::Add ( Timer * pclListNode_ ) [inline], [static]
```

Add.

Add a timer to the timer scheduler. Adding a timer implicitly starts the timer as well.

Parameters

```
pclListNode_ Pointer to the timer list node to add
```

Definition at line 56 of file timerscheduler.h.

```
18.31.2.2 static void TimerScheduler::Init (void ) [inline], [static]
```

Init.

Initialize the timer scheduler. Must be called before any timer, or timer-derived functions are used.

Definition at line 47 of file timerscheduler.h.

```
18.31.2.3 static void TimerScheduler::Process() [inline], [static]
```

Process.

This function must be called on timer expiry (from the timer's ISR context). This will result in all timers being updated based on the epoch that just elapsed. The next timer epoch is set based on the next Timer object to expire.

Definition at line 74 of file timerscheduler.h.

18.31.2.4 static void TimerScheduler::Remove (Timer * pclListNode_) [inline], [static]

Remove.

Remove a timer from the timer scheduler. May implicitly stop the timer if this is the only active timer scheduled.

Parameters

pclListNode_ Pointer to the timer list node to remove

Definition at line 65 of file timerscheduler.h.

The documentation for this class was generated from the following file:

• /media/usb/project/github/Mark3/kernel/public/timerscheduler.h

170 **Class Documentation**

Chapter 19

File Documentation

19.1 /media/usb/project/github/Mark3/kernel/atomic.cpp File Reference

Basic Atomic Operations.

```
#include "kerneltypes.h"
#include "mark3cfg.h"
#include "atomic.h"
#include "threadport.h"
#include "dbg_file_list.h"
#include "buffalogger.h"
```

19.1.1 Detailed Description

Basic Atomic Operations.

Definition in file atomic.cpp.

19.2 atomic.cpp

```
00001 /*=
00002
00003
00004
00006 |
00007
80000
00009 -- [Mark3 Realtime Platform] ---
00010
00011 Copyright (c) 2012 - 2017 Funkenstein Software Consulting, all rights reserved.
00012 See license.txt for more information
00013 ====
00021 #include "kerneltypes.h"
00022 #include "mark3cfg.h"
00023 #include "atomic.h"
00024 #include "threadport.h"
00025
00026 #define _CAN_HAS_DEBUG
00027 //--[Autogenerated - Do Not Modify]------
00028 #include "dbg_file_list.h"
00029 #include "buffalogger.h"
00030 #if defined(DBG_FILE)
00031 #error "Debug logging file token already defined! Bailing."
00032 #else
00033 #define DBG_FILE _DBG___KERNEL_ATOMIC_CPP
00034 #endif
00035 //--[End Autogenerated content]-----
00036
00037 #if KERNEL_USE_ATOMIC
```

```
00039 //---
00040 uint8_t Atomic::Set(uint8_t* pu8Source_, uint8_t u8Val_)
00041 {
00042
         uint8 t u8Ret;
         CS_ENTER();
u8Ret = *pu8Source_;
00043
00044
00045
         *pu8Source_ = u8Val_;
00046
         CS_EXIT();
00047
         return u8Ret;
00048 }
00049 //-
00050 uint16_t Atomic::Set(uint16_t* pu16Source_, uint16_t u16Val_)
00051 {
00052
         uint16_t u16Ret;
         00053
00054
         1116Ret
00055
         *pul6Source_ = ul6Val_;
         CS_EXIT();
00056
         return u16Ret;
00057
00058 }
00059 //---
00060 uint32_t Atomic::Set(uint32_t* pu32Source_, uint32_t u32Val_)
00061 {
00062
         uint32_t u32Ret;
         00063
00064
         *pu32Source_ = u32Val_;
00065
00066
         CS_EXIT();
         return u32Ret;
00067
00068 }
00069
00070 //----
00071 uint8_t Atomic::Add(uint8_t* pu8Source_, uint8_t u8Val_)
00072 {
00073
         uint8_t u8Ret;
00074
         CS ENTER();
00075
         u8Ret = *pu8Source_;
00076
         *pu8Source_ += u8Val_;
00077
         CS_EXIT();
00078
         return u8Ret;
00079 }
00080
00081 //----
00082 uint16_t Atomic::Add(uint16_t* pu16Source_, uint16_t u16Val_)
00083 {
00084
         uint16_t u16Ret;
00085
         CS_ENTER();
00086
         u16Ret = *pu16Source_;
00087
         *pul6Source_ += ul6Val_;
00088
         CS_EXIT();
00089
         return u16Ret;
00090 }
00091
00092 //----
00093 uint32_t Atomic::Add(uint32_t* pu32Source_, uint32_t u32Val_)
00094 {
00095
         uint32_t u32Ret;
00096
         CS_ENTER();
00097
         u32Ret = *pu32Source_;
         *pu32Source_ += u32Val_;
00098
00099
         CS EXIT();
00100
         return u32Ret;
00101 }
00102
00103 //----
00104 uint8_t Atomic::Sub(uint8_t* pu8Source_, uint8_t u8Val_)
00105 {
00106
         uint8_t u8Ret;
         CS_ENTER();
00107
00108
         u8Ret = *pu8Source_;
00109
         *pu8Source_ -= u8Val_;
00110
         CS_EXIT();
00111
         return u8Ret:
00112 }
00113
00114 //---
00115 uint16_t Atomic::Sub(uint16_t* pu16Source_, uint16_t u16Val_)
00116 {
00117
         uint16 t u16Ret:
         CS_ENTER();
u16Ret = *pu16Source_;
00118
00119
00120
         *pul6Source_ -= ul6Val_;
00121
         CS_EXIT();
00122
         return u16Ret;
00123 }
00124
```

```
00126 uint32_t Atomic::Sub(uint32_t* pu32Source_, uint32_t u32Val_)
00127 {
00128
          uint32 t u32Ret;
00129
         CS_ENTER();
u32Ret = *pu32Source_;
00130
00131
         *pu32Source_ -= u32Val_;
00132
         CS_EXIT();
00133
         return u32Ret;
00134 }
00135
00136 //---
00137 bool Atomic::TestAndSet(bool* pbLock_)
00138 {
00139
          uint8_t u8Ret;
00140
          CS_ENTER();
00141
         u8Ret = *pbLock_;
         if (!u8Ret) {
00142
             *pbLock_ = 1;
00143
00144
00145
         CS_EXIT();
00146
          return u8Ret;
00147 }
00148
00149 #endif // KERNEL_USE_ATOMIC
```

19.3 /media/usb/project/github/Mark3/kernel/autoalloc.cpp File Reference

Automatic memory allocation for kernel objects.

```
#include "mark3cfg.h"
#include "mark3.h"
#include "autoalloc.h"
#include "threadport.h"
#include "kernel.h"
```

19.3.1 Detailed Description

Automatic memory allocation for kernel objects.

Definition in file autoalloc.cpp.

19.4 autoalloc.cpp

```
00003
00004 |
00005 1
00006 |
00007
00009 -- [Mark3 Realtime Platform] -----
00010
00011 Copyright (c) 2012 - 2017 Funkenstein Software Consulting, all rights reserved.
00012 See license.txt for more information
00013 ===
00020 #include "mark3cfg.h"
00021 #include "mark3.h"
00022 #include "autoalloc.h"
00023 #include "threadport.h"
00024 #include "kernel.h"
00025
00026 #if KERNEL_USE_AUTO_ALLOC
00027
00028 // Align to nearest word boundary
00029 \#define ALLOC\_ALIGN(x) (((x) + (sizeof(K_ADDR) - 1)) & (sizeof(K_ADDR) - 1))
00030
00031 //-
00032 uint8_t AutoAlloc::m_au8AutoHeap[AUTO_ALLOC_SIZE];
00033 K_ADDR AutoAlloc::m_aHeapTop;
```

```
00034
00035 //--
00036 void AutoAlloc::Init(void)
00037 {
00038
         m_aHeapTop = (K_ADDR) (m_au8AutoHeap);
00039 }
00040
00041 //--
00042 void* AutoAlloc::Allocate(uint16_t u16Size_)
00043 {
00044
         void* pvRet = 0;
00045
00046
         CS_ENTER();
00047
         uint16_t u16AllocSize = ALLOC_ALIGN(u16Size_);
00048
         if ((((K_ADDR)m_aHeapTop - (K_ADDR)&m_au8AutoHeap[0]) + u16AllocSize) < AUTO_ALLOC_SIZE) {</pre>
             pvRet = (void*)m_aHeapTop;
00049
00050
             m_aHeapTop += u16AllocSize;
00051
         CS_EXIT();
00052
00053
00054
         if (!pvRet) {
00055
              Kernel::Panic(PANIC_AUTO_HEAP_EXHAUSTED);
00056
00057
00058
         return pvRet;
00059 }
00060
00061 #if KERNEL_USE_SEMAPHORE
00062 //--
00063 Semaphore* AutoAlloc::NewSemaphore(void)
00064 {
00065
          void* pvObj = Allocate(sizeof(Semaphore));
00066
         if (pvObj) {
00067
            return new (pvObj) Semaphore();
00068
         return 0:
00069
00070 }
00071 #endif
00072
00073 #if KERNEL_USE_MUTEX
00074 //---
00075 Mutex* AutoAlloc::NewMutex(void)
00076 {
00077
         void* pvObj = Allocate(sizeof(Mutex));
00078
        return new (pvObj) Mutex();
         if (pvObj) {
00079
00080
00081
         return 0;
00082 }
00083 #endif
00084
00085 #if KERNEL_USE_EVENTFLAG
00086 //--
00087 EventFlag* AutoAlloc::NewEventFlag(void)
00088 {
00089
          void* pvObj = Allocate(sizeof(EventFlag));
00090
         if (pvObj) {
00091
            return new (pvObj) EventFlag();
00092
00093
         return 0;
00094 }
00095 #endif
00096
00097 #if KERNEL_USE_MESSAGE
00098 //---
00099 Message* AutoAlloc::NewMessage(void)
00100 {
         void* pvObj = Allocate(sizeof(Message));
00101
00102
         return new (pvObj) Message();
00103
00104
         return 0;
00105
00106 }
00107 //----
00108 MessageQueue* AutoAlloc::NewMessageQueue(void)
00109 {
00110
          void* pvObj = Allocate(sizeof(MessageQueue));
00111
         return new (pv0bj) MessageQueue();
         if (pvObj) {
00112
00113
         return 0;
00114
00115 }
00116
00117 #endif
00118
00119 #if KERNEL USE NOTIFY
00120 //----
```

```
00121 Notify* AutoAlloc::NewNotify(void)
00123
         void* pvObj = Allocate(sizeof(Notify));
00124
         return new (pvObj) Notify();
}
         if (pvObj) {
00125
00126
        return 0;
00127
00128 }
00129 #endif
00130
00131 #if KERNEL USE MAILBOX
00132 //---
00133 Mailbox* AutoAlloc::NewMailbox(void)
00134 {
00135
         void* pvObj = Allocate(sizeof(Mailbox));
         return new (pvObj) Mailbox();
}
00136
00137
00138
00139
         return 0;
00140 }
00141 #endif
00142
00143 //----
00144 Thread* AutoAlloc::NewThread(void)
00145 {
         void* pvObj = Allocate(sizeof(Thread));
00147
        return new (pvObj) Thread();
}
00148
00149
00150
         return 0:
00151 }
00152
00153 #if KERNEL_USE_TIMERS
00154 //---
00155 Timer* AutoAlloc::NewTimer(void)
00156 {
         void* pvObj = Allocate(sizeof(Timer));
00157
       return new (pvObj) Timer();
00159
00160
00161
         return 0;
00162 }
00163 #endif
00164
00165 #endif
```

19.5 /media/usb/project/github/Mark3/kernel/blocking.cpp File Reference

Implementation of base class for blocking objects.

```
#include "kerneltypes.h"
#include "mark3cfg.h"
#include "blocking.h"
#include "thread.h"
#include "dbg_file_list.h"
#include "buffalogger.h"
#include "kerneldebug.h"
```

19.5.1 Detailed Description

Implementation of base class for blocking objects.

Definition in file blocking.cpp.

19.6 blocking.cpp



```
00006
00007
80000
00009 -- [Mark3 Realtime Platform] -
00010
00011 Copyright (c) 2012 - 2017 Funkenstein Software Consulting, all rights reserved.
00012 See license.txt for more information
00013 =====
00021 #include "kerneltypes.h"
00022 #include "mark3cfg.h"
00023
00024 #include "blocking.h"
00025 #include "thread.h"
00026
00027 #define _CAN_HAS_DEBUG
00028 //--[Autogenerated - Do Not Modify]------
00029 #include "dbg_file_list.h"
00030 #include "buffalogger.h"
00031 #if defined(DBG_FILE)
00032 #error "Debug logging file token already defined! Bailing."
00033 #else
00034 #define DBG_FILE _DBG___KERNEL_BLOCKING_CPP
00035 #endif
00036 //--[End Autogenerated content]-----
00037 #include "kerneldebug.h"
00038
00039 #if KERNEL_USE_SEMAPHORE || KERNEL_USE_MUTEX
00040 //-
00041 void BlockingObject::Block(Thread* pclThread)
00042 {
00043
          KERNEL_ASSERT (pclThread_);
          KERNEL_TRACE_1("Blocking Thread %d", (uint16_t)pclThread_->
00044
      GetID());
00045
00046
           // Remove the thread from its current thread list (the "owner" list)
00047
          // ... And add the thread to this object's block list
          Scheduler::Remove(pclThread_);
00048
00049
          m_clBlockList.Add(pclThread_);
00050
00051
          // Set the "current" list location to the blocklist for this thread
          pclThread_->SetCurrent(&m_clBlockList);
00052
          pclThread_->SetState(THREAD_STATE_BLOCKED);
00053
00054 }
00055
00056 //-
00057 void BlockingObject::BlockPriority(Thread* pclThread_)
00058 {
00059
          KERNEL_ASSERT (pclThread_);
          KERNEL_TRACE_1("Blocking Thread %d", (uint16_t)pclThread_->
00060
     GetID());
00061
00062
           // Remove the thread from its current thread list (the "owner" list)
00063
          // ... And add the thread to this object's block list
          Scheduler::Remove(pclThread_);
00064
00065
          m_clBlockList.AddPriority(pclThread_);
00066
00067
          // Set the "current" list location to the blocklist for this thread
00068
          pclThread_->SetCurrent(&m_clBlockList);
00069
          pclThread_->SetState(THREAD_STATE_BLOCKED);
00070 }
00071
00072 //
00073 void BlockingObject::UnBlock(Thread* pclThread_)
00074 {
          KERNEL_ASSERT(pclThread_);
KERNEL_TRACE_1("Unblocking Thread %d", (uint16_t)pclThread_->
00075
00076
      GetID());
00077
00078
           // Remove the thread from its current thread list (the "owner" list)
00079
          pclThread_->GetCurrent()->Remove(pclThread_);
00080
          // Put the thread back in its active owner's list. This is usually // the ready-queue at the thread's original priority.
00081
00082
00083
          Scheduler::Add(pclThread_);
00084
00085
           // Tag the thread's current list location to its owner
00086
          pclThread_->SetCurrent(pclThread_->GetOwner());
00087
          pclThread_->SetState(THREAD_STATE_READY);
00088 }
00089
00090 #endif
```

/media/usb/project/github/Mark3/kernel/cpu/avr/atmega328p/gcc/kernelprofile.cpp 19.7 File Reference

ATMega328p Profiling timer implementation.

```
#include "kerneltypes.h"
#include "mark3cfg.h"
#include "profile.h"
#include "kernelprofile.h"
#include "threadport.h"
#include <avr/io.h>
#include <avr/interrupt.h>
```

Detailed Description

ATMega328p Profiling timer implementation.

Definition in file kernelprofile.cpp.

kernelprofile.cpp 19.8

```
00002
00003
00004
00005
00006
00008
00009 -- [Mark3 Realtime Platform] -
00010
00011 Copyright (c) 2012 - 2017 Funkenstein Software Consulting, all rights reserved.
00012 See license.txt for more information
00020 #include "kerneltypes.h"
00021 #include "mark3cfg.h"
00022 #include "profile.h"
00023 #include "kernelprofile.h"
00024 #include "threadport.h"
00025 #include <avr/io.h>
00026 #include <avr/interrupt.h>
00027
00028 #if KERNEL USE PROFILER
00029 uint32_t Profiler::m_u32Epoch;
00030
00031 //
00032 void Profiler::Init()
00033 {
00034
           TCCR0A
                       = 0;
                       = 0;
00035
           TCCR0B
                       = 0;
00036
           TIFR0
00037
           TIMSK0
                       = 0;
           m_u32Epoch = 0;
00039 }
00040
00041 //---
00042 void Profiler::Start()
00043 {
00044
00045
           TCNT0 = 0;
           TCCR0B |= (1 << CS01);
TIMSK0 |= (1 << TOIE0);
00046
00047
00048 }
00049
00050 //--
00051 void Profiler::Stop()
00052 {
00053
           TIFR0 = 0;
           TCCR0B &= ~(1 << CS01);
TIMSK0 &= ~(1 << TOIE0);
00054
00055
00056 }
00057 //--
```

```
00058 PORT_TIMER_COUNT_TYPE Profiler::Read()
00060
           uint16_t u16Ret;
          CS_ENTER();
TCCROB &= ~(1 << CS01);
u16Ret = TCNT0;</pre>
00061
00062
00063
           TCCR0B |= (1 << CS01);
00064
00065
          CS_EXIT();
00066
           return u16Ret;
00067 }
00068
00069 //---
00070 void Profiler::Process()
00071 {
00072
           CS_ENTER();
00073
           m_u32Epoch++;
00074
          CS_EXIT();
00075 }
00077 //-
00078 ISR(TIMERO_OVF_vect)
00079 {
08000
          Profiler::Process();
00081 }
00082
00083 #endif
```

19.9 /media/usb/project/github/Mark3/kernel/cpu/avr/atmega328p/gcc/kernelswi.cpp File Reference

Kernel Software interrupt implementation for ATMega328p.

```
#include "kerneltypes.h"
#include "kernelswi.h"
#include <avr/io.h>
#include <avr/interrupt.h>
```

19.9.1 Detailed Description

Kernel Software interrupt implementation for ATMega328p.

Definition in file kernelswi.cpp.

19.10 kernelswi.cpp

```
00001 /
00002
00003
00004
00005 1
00006 |
00007
00008
00009 -- [Mark3 Realtime Platform] -
00010
00011 Copyright (c) 2012 - 2017 Funkenstein Software Consulting, all rights reserved.
00012 See license.txt for more information
00022 #include "kerneltypes.h"
00023 #include "kernelswi.h"
00024
00025 #include <avr/io.h>
00026 #include <avr/interrupt.h>
00027
00028 //--
00029 void KernelSWI::Config(void)
00030 {
00031
          PORTD &= \sim 0 \times 04;
                                                     // Clear INTO
00032
          DDRD \mid = 0x04;
                                                     // Set PortD, bit 2 (INTO) As Output
00033
          EICRA |= (1 << ISC00) | (1 << ISC01); // Rising edge on INTO
```

```
00034 }
00035
00036 //---
00037 void KernelSWI::Start(void)
00038 {
00039
          EIFR &= ~(1 << INTF0); // Clear any pending interrupts on INTO
        EIMSK |= (1 << INTO); // Enable INTO interrupt (as int32_t as I-bit is set)
00041 }
00042
00043 //---
00044 void KernelSWI::Stop(void)
00045 {
00046
          EIMSK &= ~(1 << INTO); // Disable INTO interrupts</pre>
00047 }
00048
00049 //---
00050 uint8_t KernelSWI::DI()
00051 {
00052 bool bEnabled = (\text{\text{Limbs}})
00053 EIMSK &= ~(1 << INTO);
00054 return bEnabled;
          bool bEnabled = ((EIMSK & (1 << INTO)) != 0);</pre>
00056
00057 //----
00058 void KernelSWI::RI(bool bEnable_)
00059 {
          if (bEnable_) {
00060
00061
              EIMSK |= (1 << INT0);
        EIMSK &= ~(1 << INTO);
00062
00063
00064
00065 }
00066
00067 //---
00068 void KernelSWI::Clear(void)
00069 {
00070
          EIFR &= ~(1 << INTF0); // Clear the interrupt flag for INTO
00073 //---
00074 void KernelSWI::Trigger(void)
00075 {
00076
// if(Thread IsSchedulerEnabled())
00081 }
```

/media/usb/project/github/Mark3/kernel/cpu/avr/atmega328p/gcc/kerneltimer.cpp File Reference

Kernel Timer Implementation for ATMega328p.

```
#include "kerneltypes.h"
#include "kerneltimer.h"
#include "mark3cfg.h"
#include "ksemaphore.h"
#include "thread.h"
#include <avr/common.h>
#include <avr/io.h>
#include <avr/interrupt.h>
```

Functions

• ISR (TIMER1_COMPA_vect)

ISR(TIMER1_COMPA_vect) Timer interrupt ISR - service the timer thread.

19.11.1 Detailed Description

Kernel Timer Implementation for ATMega328p.

Definition in file kerneltimer.cpp.

19.12 kerneltimer.cpp

```
00001
00002
00003
00004
00005
00006
00007
80000
00009 -- [Mark3 Realtime Platform] -----
00010
00011 Copyright (c) 2012 - 2017 Funkenstein Software Consulting, all rights reserved.
00012 See license.txt for more information
00013 ====
00021 #include "kerneltypes.h"
00022 #include "kerneltimer.h"
00023 #include "mark3cfg.h"
00024
00025 #include "ksemaphore.h"
00026 #include "thread.h"
00027
00028 #include <avr/common.h>
00029 #include <avr/io.h>
00030 #include <avr/interrupt.h>
00032 #define TCCR1B_INIT ((1 << WGM12) | (1 << CS12))
00033 #define TIMER_IMSK (1 << OCIE1A)
00034 #define TIMER_IFR (1 << OCF1A)
00035
00036 //-
00037 // Static objects implementing the timer thread and its synchronization objects
00038 #if KERNEL_TIMERS_THREADED
00039 static Thread s_clTimerThread;
00040 static K_WORD s_clTimerThreadStack[PORT_KERNEL_TIMERS_THREAD_STACK];
00041 static Semaphore s_clTimerSemaphore;
00042 #endif
00044 //----
00049 //----
00050 ISR(TIMER1_COMPA_vect)
00051 {
00052 #if KERNEL_TIMERS_THREADED
         KernelTimer::ClearExpiry();
00053
00054
          s_clTimerSemaphore.Post();
00055 #else
       #if KERNEL_USE_TIMERS
00056
00057
            TimerScheduler::Process();
00058
         #endif
00059
         #if KERNEL_USE_QUANTUM
00060
              Quantum::UpdateTimer();
00061
         #endif
00062 #endif
00063 }
00064
00065 //
00066 #if KERNEL_TIMERS_THREADED
00067 static void KernelTimer_Task(void* unused)
00068 {
00069
          (void) unused;
00070
         while(1) {
00071
              s_clTimerSemaphore.Pend();
00072 #if KERNEL_USE_TIMERS
00073
              TimerScheduler::Process();
00074 #endif
00075 #if KERNEL_USE_QUANTUM
00076
             Quantum::UpdateTimer();
00077 #endif
00078
00079 }
00080 #endif
00081
00082 //-
00083 void KernelTimer::Config(void)
00084 {
00085
         TCCR1B = TCCR1B_INIT;
```

19.12 kerneltimer.cpp 181

```
00086 #if KERNEL_TIMERS_THREADED
00087
        s_clTimerSemaphore.Init(0, 1);
00088
          s_clTimerThread.Init(s_clTimerThreadStack,
                                sizeof(s_clTimerThreadStack) / sizeof(K_WORD),
00089
00090
                                 KERNEL_TIMERS_THREAD_PRIORITY,
00091
                                 KernelTimer Task,
                                 0);
00093
          Quantum::SetTimerThread(&s_clTimerThread);
00094
         s_clTimerThread.Start();
00095 #endif
00096 }
00097
00098 //---
00099 void KernelTimer::Start(void)
00100 {
00101 #if !KERNEL_TIMERS_TICKLESS
          TCCRIB = ((1 << WGM12) | (1 << CS11) | (1 << CS10));

OCR1A = ((PORT_SYSTEM_FREQ / 1000) / 64);
00102
00103
00104 #else
         TCCR1B |= (1 << CS12);
00106 #endif
00107
          TCNT1 = 0;
TIFR1 &= ~TIMER_IFR;
TIMSK1 |= TIMER_IMSK;
00108
00109
00110
00111 }
00112
00113 //----
00114 void KernelTimer::Stop(void)
00115 {
00116 #if KERNEL_TIMERS_TICKLESS
00117
          TIFR1 &= ~TIMER_IFR;
          TIMSKI &= ~TIMER_IMSK;
TCCR1B &= ~(1 << CS12); // Disable count...
00118
00119
          TCNT1 = 0;
OCR1A = 0;
00120
00121
00122 #endif
00123 }
00124
00125 //---
00126 PORT_TIMER_COUNT_TYPE KernelTimer::Read(void)
00127 {
00128 #if KERNEL TIMERS TICKLESS
00129
          volatile uint16_t u16Read1;
00130
          volatile uint16_t u16Read2;
00131
00132
        u16Read1 = TCNT1;
u16Read2 = TCNT1;
00133
00134
00135
         } while (u16Read1 != u16Read2);
00136
00137
          return u16Read1;
00138 #else
00139
        return 0;
00140 #endif
00141 }
00143 //---
00144 PORT_TIMER_COUNT_TYPE KernelTimer::SubtractExpiry(
      PORT_TIMER_COUNT_TYPE uInterval)
00145 {
00146 #if KERNEL_TIMERS_TICKLESS
00147 OCR1A -= uInterval;
00148
          return OCR1A;
00149 #else
00150
        return 0;
00151 #endif
00152 }
00153
00154 /
00155 PORT_TIMER_COUNT_TYPE KernelTimer::TimeToExpiry(void)
00156 {
00157 #if KERNEL_TIMERS_TICKLESS
       uint16_t ul6Read = KernelTimer::Read();
uint16_t ul6OCR1A = OCR1A;
00158
00159
00160
00161
         if (u16Read >= u160CR1A) {
00162
             return 0;
          retur
} else {
00163
              return (u160CR1A - u16Read):
00164
00165
00166 #else
00167
        return 0;
00168 #endif
00169 }
00170
00171 //----
```

```
00172 PORT_TIMER_COUNT_TYPE KernelTimer::GetOvertime(void)
00174
          return KernelTimer::Read();
00175 }
00176
00177 //--
00178 PORT_TIMER_COUNT_TYPE KernelTimer::SetExpiry(uint32_t
      u32Interval_)
00179 {
00180 #if KERNEL_TIMERS_TICKLESS
00181 uint16_t u16SetInterval;
         if (u32Interval_ > 65535)
00182
00183
              u16SetInterval = 65535;
00184
00185
            u16SetInterval = (uint16_t)u32Interval_;
00186
00187
       OCR1A = u16SetInterval;
00188
          return u16SetInterval;
00189
00190 #else
00191
00192 #endif
00193 }
00194
00195 //-
00196 void KernelTimer::ClearExpiry(void)
00197 {
00198 #if KERNEL_TIMERS_TICKLESS
00199
         OCR1A = 65535; // Clear the compare value
00200 #endif
00201 }
00202
00203 //----
00204 uint8_t KernelTimer::DI(void)
00205 {
00206 #if KERNEL_TIMERS_TICKLESS
00207 bool bEnabled = ((TIMSK1 & (TIMER_IMSK)) != 0);
00208 TIFR1 &= ~TIMER_IFR; // Clear interrupt flags
00209 TIMSK1 &= ~TIMER_IMSK; // Disable interrupt 00210 return bEnabled;
00211 #else
00212
        return 0;
00213 #endif
00214 }
00215
00216 //--
00217 void KernelTimer::EI(void)
00218 {
00219
          KernelTimer::RI(0);
00220 }
00222 //----
00223 void KernelTimer::RI(bool bEnable_)
00224 (
00225 #if KERNEL_TIMERS_TICKLESS
TIMSK1 |= (1 << OCIE1A); // Enable interrupt
       } else {
   TIMS
}
00228
00229
             TIMSK1 &= \sim (1 << OCIE1A);
00230
00231 #endif
00232 }
```

19.13 /media/usb/project/github/Mark3/kernel/cpu/avr/atmega328p/gcc/public/kernelprofile.h File Reference

Profiling timer hardware interface.

```
#include "kerneltypes.h"
#include "mark3cfg.h"
#include "ll.h"
```

19.13.1 Detailed Description

Profiling timer hardware interface.

19.14 kernelprofile.h

Definition in file kernelprofile.h.

19.14 kernelprofile.h

```
00001 /
00002
00003
00004
00005
00006
00007
00008
00009 -- [Mark3 Realtime Platform]
00010
00011 Copyright (c) 2012 - 2017 Funkenstein Software Consulting, all rights reserved.
00012 See license.txt for more information
00013 =====
00020 #include "kerneltypes.h"
00021 #include "mark3cfg.h"
00022 #include "11.h"
00023
00024 #ifndef __KPROFILE_H__
00025 #define ___KPROFILE_H_
00026
00027 #if KERNEL_USE_PROFILER
00028
00029 //-
00030 #define TICKS_PER_OVERFLOW (256)
00031 #define CLOCK_DIVIDE (8)
00032
00037 class Profiler
00038 {
00039 public:
          static void Init();
00046
00047
00053
          static void Start();
00054
00060
          static void Stop();
00061
          static PORT_TIMER_COUNT_TYPE Read();
00067
00068
00074
          static void Process();
00075
00081
          static uint32_t GetEpoch() { return m_u32Epoch; }
00082 private:
00083
          static uint32_t m_u32Epoch;
00084 };
00085
00086 #endif // KERNEL_USE_PROFILER
00087
00088 #endif
```

19.15 /media/usb/project/github/Mark3/kernel/cpu/avr/atmega328p/gcc/public/kernelswi.h File Reference

Kernel Software interrupt declarations.

```
#include "kerneltypes.h"
```

Classes

class KernelSWI

Class providing the software-interrupt required for context-switching in the kernel.

19.15.1 Detailed Description

Kernel Software interrupt declarations.

Definition in file kernelswi.h.

19.16 kernelswi.h

```
00001 /*==
00002
00003
00004
00005
00006
00007
00008
00009 -- [Mark3 Realtime Platform]-
00010
00011 Copyright (c) 2012 - 2017 Funkenstein Software Consulting, all rights reserved.
00012 See license.txt for more information
00013 =
00022 #include "kerneltypes.h"
00023 #ifndef ___KERNELSWI_H_
00024 #define ___KERNELSWI_H_
00025
00026 //--
00031 class KernelSWI
00032 {
00033 public:
00040
         static void Config(void);
00041
00047
          static void Start (void);
00048
00054
          static void Stop(void);
00055
00061
          static void Clear (void);
00062
00069
          static void Trigger (void);
00070
00078
          static uint8_t DI();
00079
00087
          static void RI(bool bEnable_);
00088 };
00089
00090 #endif // __KERNELSIW_H_
```

19.17 /media/usb/project/github/Mark3/kernel/cpu/avr/atmega328p/gcc/public/kerneltimer.h File Reference

Kernel Timer Class declaration.

```
#include "kerneltypes.h"
#include "mark3cfg.h"
```

Classes

class KernelTimer

Hardware timer interface, used by all scheduling/timer subsystems.

19.17.1 Detailed Description

Kernel Timer Class declaration.

Definition in file kerneltimer.h.

19.18 kerneltimer.h

00001 /*-----

```
00002
00003
00004
00005
00006
00007
00009 -
       -[Mark3 Realtime Platform]-
00010
00011 Copyright (c) 2012 - 2017 Funkenstein Software Consulting, all rights reserved.
00012 See license.txt for more information
00013 -----
00021 #include "kerneltypes.h"
00022 #include "mark3cfg.h"
00023
00024 #ifndef ___KERNELTIMER_H_
00025 #define ___KERNELTIMER_H_
00026
00027 //--
00031 class KernelTimer
00032 {
00033 public:
00039
        static void Config(void);
00040
00046
         static void Start (void);
00047
00053
         static void Stop(void);
00054
00060
         static uint8_t DI (void);
00061
00069
         static void RI (bool bEnable );
00070
00076
         static void EI(void);
00077
00088
         static PORT_TIMER_COUNT_TYPE SubtractExpiry(
     PORT_TIMER_COUNT_TYPE uInterval_);
00089
         static PORT_TIMER_COUNT_TYPE TimeToExpiry(void);
00099
00108
         static PORT_TIMER_COUNT_TYPE SetExpiry(uint32_t u32Interval_);
00109
         static PORT_TIMER_COUNT_TYPE GetOvertime(void);
00118
00119
00125
         static void ClearExpiry(void);
00126
00134
         static PORT_TIMER_COUNT_TYPE Read(void);
00135 };
00136
00137 #endif // KERNELTIMER H
```

/media/usb/project/github/Mark3/kernel/cpu/avr/atmega328p/gcc/public/portcfg.h File Reference

Mark3 Port Configuration.

Macros

• #define AVR (1)

Define a macro indicating the CPU architecture for which this port belongs.

#define K WORD uint8 t

Define types that map to the CPU Architecture's default data-word and address size.

#define K ADDR uint16 t

Size of an address (pointer size)

#define PORT_PRIO_TYPE uint8_t

Set a base datatype used to represent each element of the scheduler's priority bitmap.

• #define PORT_PRIO_MAP_WORD_SIZE (1)

size of PORT_PRIO_TYPE in bytes

#define PORT_SYSTEM_FREQ ((uint32_t)16000000)

Define the running CPU frequency.

• #define PORT_TIMER_FREQ ((uint32_t)(PORT_SYSTEM_FREQ / 1000))

Set the timer frequency.

#define PORT_KERNEL_TIMERS_THREAD_STACK ((K_ADDR)256)

Define the size of the kernel-timer thread stack (if one is configured)

#define PORT_TIMER_COUNT_TYPE uint16_t

Define the native type corresponding to the kernel timer hardware's counter register.

• #define PORT_MIN_TIMER_TICKS (0)

Minimum number of timer ticks for any delay or sleep, required to ensure that a timer cannot be initialized to a negative value.

19.19.1 Detailed Description

Mark3 Port Configuration.

This file is used to configure the kernel for your specific target CPU in order to provide the optimal set of features for a given use case.

!! NOTE: This file must ONLY be included from mark3cfg.h

Definition in file portcfg.h.

19.19.2 Macro Definition Documentation

19.19.2.1 #define AVR (1)

Define a macro indicating the CPU architecture for which this port belongs.

This may also be set by the toolchain, but that's not guaranteed.

Definition at line 34 of file portcfg.h.

19.19.2.2 #define K_WORD uint8_t

Define types that map to the CPU Architecture's default data-word and address size.

Size of a data word

Examples:

buffalogger/main.cpp, lab10_notifications/main.cpp, lab11_mailboxes/main.cpp, lab1_kernel_setup/main.cpp, lab2_idle_function/main.cpp, lab3_round_robin/main.cpp, lab4_semaphores/main.cpp, lab5_mutexes/main.cpp, cpp, lab6_timers/main.cpp, lab7_events/main.cpp, lab8_messages/main.cpp, and lab9_dynamic_ \leftarrow threads/main.cpp.

Definition at line 41 of file portcfg.h.

19.19.2.3 #define PORT_PRIO_TYPE uint8_t

Set a base datatype used to represent each element of the scheduler's priority bitmap.

PORT_PRIO_MAP_WORD_SIZE should map to the *size* of an element of type PORT_PROI_TYPE.Type used for bitmap in the PriorityMap class

Definition at line 51 of file portcfg.h.

19.20 portcfg.h 187

19.19.2.4 #define PORT_SYSTEM_FREQ ((uint32_t)16000000)

Define the running CPU frequency.

This may be an integer constant, or an alias for another variable which holds the CPU's current running frequency. ← CPU Frequency in Hz

Definition at line 59 of file portcfg.h.

```
19.19.2.5 #define PORT_TIMER_COUNT_TYPE uint16_t
```

Define the native type corresponding to the kernel timer hardware's counter register.

Timer counter type

Definition at line 83 of file portcfg.h.

```
19.19.2.6 #define PORT_TIMER_FREQ ((uint32_t)(PORT_SYSTEM_FREQ / 1000))
```

Set the timer frequency.

If running in tickless mode, this is simply the frequency at which the free-running kernel timer increments.

In tick-based mode, this is the frequency at which the fixed-frequency kernel tick interrupt occurs. Fixed timer interrupt frequency

Definition at line 72 of file portcfg.h.

19.20 portcfg.h

```
00001 /*==========
00002
00003
00004
00005
00006
00007
00008
00009 -- [Mark3 Realtime Platform]-----
00010
00011 Copyright (c) 2012 - 2017 Funkenstein Software Consulting, all rights reserved.
00012 See license.txt for more information
00013 =
00025 #ifndef ___PORTCFG_H_
00026 #define ___PORTCFG_H_
00027
00033 #ifndef AVR
00034 # define AVR
                                           (1)
00035 #endif
00036
00041 #define K WORD
                                          uint8 t
00042 #define K_ADDR
                                          uint16 t
00043
00044
00051 #define PORT_PRIO_TYPE
                                          uint8_t
00052 #define PORT_PRIO_MAP_WORD_SIZE
00053
00054
00058 #if !defined(PORT_SYSTEM_FREQ)
00059 #define PORT_SYSTEM_FREQ
                                          ((uint32_t)16000000)
00060 #endif
00061
00069 #if KERNEL TIMERS TICKLESS
                                          ((uint32_t)(PORT_SYSTEM_FREQ / 256))
00070 #define PORT_TIMER_FREQ
00071 #else
00072 #define PORT_TIMER_FREQ
                                          ((uint32_t)(PORT_SYSTEM_FREQ / 1000))
00073 #endif
00074
00078 #define PORT_KERNEL_TIMERS_THREAD_STACK
                                                 ((K_ADDR)256)
00079
00083 #define PORT_TIMER_COUNT_TYPE
                                          uint16 t
00084
00085
```

```
00089 #define PORT_MIN_TIMER_TICKS (0
00090
00091 #endif // __PORTCFG_H__
```

19.21 /media/usb/project/github/Mark3/kernel/cpu/avr/atmega328p/gcc/public/threadport.h File Reference

ATMega328p Multithreading support.

```
#include "kerneltypes.h"
#include "thread.h"
#include <avr/builtins.h>
#include <avr/io.h>
#include <avr/interrupt.h>
```

Classes

· class ThreadPort

Class defining the architecture specific functions required by the kernel.

Macros

```
    #define ASM(x) asm volatile(x);
```

ASM Macro - simplify the use of ASM directive in C.

• #define SR_ 0x3F

Status register define - map to 0x003F.

• #define SPH_ 0x3E

Stack pointer define.

#define TOP_OF_STACK(x, y) (uint8_t*)(((uint16_t)x) + (y - 1))

Macro to find the top of a stack given its size and top address.

• #define PUSH_TO_STACK(x, y)

Push a value y to the stack pointer x and decrement the stack pointer.

#define Thread_SaveContext()

Save the context of the Thread.

• #define Thread_RestoreContext()

Restore the context of the Thread.

• #define CS_ENTER()

These macros must be used in pairs!

• #define CS_EXIT()

Exit critical section (restore status register)

• #define ENABLE_INTS() ASM("sei");

Initiate a contex switch without using the SWI.

Functions

```
• uint8_t __mark3_clz8 (uint8_t in_)
```

19.21.1 Detailed Description

ATMega328p Multithreading support.

Definition in file threadport.h.

19.22 threadport.h

19.21.2 Macro Definition Documentation

```
19.21.2.1 #define CS_ENTER( )
```

Value:

```
{
    uint8_t __x = _SFR_IO8(SR_);
    ASM("cli");
    \
```

These macros *must* be used in pairs!

Enter critical section (copy status register, disable interrupts)

Examples:

buffalogger/main.cpp, and lab9_dynamic_threads/main.cpp.

Definition at line 162 of file threadport.h.

19.21.3 Function Documentation

```
19.21.3.1 uint8_t __mark3_clz8 ( uint8_t in_ ) [inline]
```

Lookup table based count-leading zeros implementation, used by scheduler by way of PriorityMap Definition at line 52 of file threadport.h.

19.22 threadport.h

```
00001 /*======
00002
00004
00005
00006 |
00007
80000
00009 -- [Mark3 Realtime Platform]
00011 Copyright (c) 2012 - 2017 Funkenstein Software Consulting, all rights reserved.
00012 See license.txt for more information
0.0013 =========== */
00021 #ifndef __THREADPORT_H_
00022 #define __THREADPORT_H_
00023
00024 #include "kerneltypes.h"
00025 #include "thread.h"
00026
00027 #include <avr/builtins.h>
00028 #include <avr/io.h>
00029 #include <avr/interrupt.h>
00030
00031 //----
00033 #define ASM(x) asm volatile(x);
00034 #define SR_ 0x3F
00036 #define SPH_ 0x3E
00038 #define SPL_ 0x3D
00039
00040 //----
00042 \#define TOP_OF_STACK(x, y) (uint8_t*)(((uint16_t)x) + (y - 1))
00043 #define PUSH_TO_STACK(x, y)
00045
         *x = y;
00046
00047 #define STACK_GROWS_DOWN (1)
00048
00049 //-
00052 inline uint8_t __mark3_clz8(uint8_t in_)
00053 {
```

```
static const uint8_t u8Lookup[] = {4, 3, 2, 2, 1, 1, 1, 1, 0, 0, 0, 0, 0, 0, 0, 0};
00055
          uint8_t hi = __builtin_avr_swap(in_) & 0x0F;
00056
           if (hi) {
             return u8Lookup[hi];
00057
00058
00059
          return 4 + u8Lookup[in_];
00061
00062 //----
00063 #define HW_CLZ (1)
00064 \#define CLZ(x) \_mark3_clz8(x)
00065
00066 //----
00068 #define Thread_SaveContext()
00069 ASM("push r0");
00070 ASM("in r0, __SREG__");
00071 ASM("cli");
00072 ASM("push r0");
00073 ASM("push r1");
00074 ASM("clr r1");
00075 ASM("push r2");
00076 ASM("push r3");
00077 ASM("push r4");
00078 ASM("push r5");
00079 ASM("push r6");
00080 ASM("push r7");
00081 ASM("push r8");
00082 ASM("push r9");
00083 ASM("push r10");
00084 ASM("push r11");
00085 ASM("push r12");
00086 ASM("push r13");
00087 ASM("push r14");
00088 ASM("push r15");
00089 ASM("push r16");
00090 ASM("push r17");
00091 ASM("push r18");
00092 ASM("push r19");
00093 ASM("push r20");
00094 ASM("push r21");
00095 ASM("push r22");
00096 ASM("push r23");
00097 ASM("push r24");
00098 ASM("push r25");
00099 ASM("push r26");
00100 ASM("push r27");
00101 ASM("push r28");
00102 ASM("push r29");
00103 ASM("push r30");
00104 ASM("push r31");
00105 ASM("lds r26, g_pclCurrent");
00106 ASM("lds r27, g_pclCurrent + 1");
00107 ASM("adiw r26, 4");
00112
00113 //----
00115 #define Thread_RestoreContext()
00116 ASM("lds r26, g_pclCurrent");
00117 ASM("lds r27, g_pclCurrent + 1");
00118 ASM("adiw r26, 4");
00119 ASM("ld
                  r28, x+");
00120 ASM("out 0x3D, r28");
00121 ASM("ld r29, x+");
00122 ASM("out 0x3E, r29");
00123 ASM("pop r31");
00124 ASM("pop r30");
00125 ASM("pop r29");
00126 ASM("pop r28");
00127 ASM("pop r27");
00128 ASM("pop r26");
00129 ASM("pop r25");
00130 ASM("pop r24");
00131 ASM("pop r23");
00132 ASM("pop r22");
00133 ASM("pop r21");
00134 ASM("pop r20");
00135 ASM("pop r19");
00136 ASM("pop r18");
00137 ASM("pop r17");
00138 ASM("pop r16");
00139 ASM("pop r15");
00140 ASM("pop r14");
00141 ASM("pop r13");
00142 ASM("pop r12");
```

```
00143 ASM("pop r11");
00144 ASM("pop r10");
00145 ASM("pop r9");
00146 ASM("pop r8");
00147 ASM("pop r7");
00148 ASM("pop r6");
00149 ASM("pop r5");
00150 ASM("pop r4");
00151 ASM("pop r3");
00152 ASM("pop r2");
00153 ASM("pop r1");
00154 ASM("pop r0");
00155 ASM("out __SREG__, r0");
00156 ASM("pop r0");
00157
00158 //-----
00160 //-----
00162 #define CS ENTER()
00163 {
_x = _SFR_IO8(SR_);
00167 #define CS_EXIT()
00169 _SFR_IO8(SR_) = __x;
00170 }
00171
00172 //----
00174 #define ENABLE_INTS() ASM("sei");
00175 #define DISABLE_INTS() ASM("cli");
00176
00177 //-
00178 class Thread;
00186 class ThreadPort
00187 {
00188 public:
00194 static void StartThreads();
00195 friend class Thread;
00197 private:
         static void InitStack(Thread* pstThread_);
00205
00206 };
00207
00208 #endif //__ThreadPORT_H_
```

19.23 /media/usb/project/github/Mark3/kernel/cpu/avr/atmega328p/gcc/threadport.cpp File Reference

ATMega328p Multithreading.

```
#include "kerneltypes.h"
#include "mark3cfg.h"
#include "thread.h"
#include "threadport.h"
#include "kernelswi.h"
#include "timerlist.h"
#include "timerlist.h"
#include "quantum.h"
#include "kernel.h"
#include "kernelaware.h"
#include <avr/io.h>
#include <avr/interrupt.h>
```

Functions

19.23.1 Detailed Description

ATMega328p Multithreading.

Definition in file threadport.cpp.

19.24 threadport.cpp

```
00001
00002
00003
00004
00005
00006
00007
00008
00009 -- [Mark3 Realtime Platform] ---
00010
00011 Copyright (c) 2012 - 2017 Funkenstein Software Consulting, all rights reserved.
00012 See license.txt for more information
00013 ====
00022 #include "kerneltypes.h"
00023 #include "mark3cfg.h'
00024 #include "thread.h"
00025 #include "threadport.h"
00026 #include "kernelswi.h"
00027 #include "kerneltimer.h"
00027 #include "kernercimer.
00028 #include "timerlist.h"
00029 #include "quantum.h"
00030 #include "kernel.h"
00031 #include "kernelaware.h"
00032 #include <avr/io.h>
00033 #include <avr/interrupt.h>
00034
00035 //----
00036 Thread* g_pclCurrentThread;
00037
00039 void ThreadPort::InitStack(Thread* pclThread_)
00040 {
00041
           \ensuremath{//} Initialize the stack for a Thread
          uint16_t u16Addr;
uint8_t* pu8Stack;
00042
00043
00044
          uint16_t i;
00045
00046
           // Get the address of the thread's entry function
00047
          u16Addr = (uint16_t) (pclThread_->m_pfEntryPoint);
00048
00049
           // Start by finding the bottom of the stack
          pu8Stack = (uint8_t*)pclThread_->m_pwStackTop;
00050
00051
00052
           // clear the stack, and initialize it to a known-default value (easier
           // to debug when things go sour with stack corruption or overflow)
for (i = 0; i < pclThread_->m_ul6StackSize; i++) {
   pclThread_->m_pwStack[i] = 0xFF;
00053
00054
00055
00056
00057
00058
           // Our context starts with the entry function
           PUSH_TO_STACK(pu8Stack, (uint8_t)(u16Addr & 0x00FF));
00059
00060
           00061
00062
00063
           PUSH_TO_STACK(pu8Stack, 0x00); // R0
00064
00065
           // Push status register and R1 (which is used as a constant zero)
          PUSH_TO_STACK(pu8Stack, 0x80); // SR
PUSH_TO_STACK(pu8Stack, 0x00); // R1
00066
00067
00068
00069
           // Push other registers
           for (i = 2; i <= 23; i++) // R2-R23
00070
00071
               PUSH_TO_STACK(pu8Stack, i);
00072
00073
00074
00075
           // Assume that the argument is the only stack variable
           PUSH_TO_STACK(pu8Stack, (uint8_t)(((uint16_t)(pclThread_->
      m_pvArg)) & 0x00FF));
                                       // R24
00077
          PUSH_TO_STACK(pu8Stack, (uint8_t)((((uint16_t)(pclThread_->
      m_pvArg)) >> 8) & 0x00FF)); // R25
00078
00079
           // Push the rest of the registers in the context
08000
           for (i = 26; i <= 31; i++) {
```

19.24 threadport.cpp 193

```
PUSH_TO_STACK(pu8Stack, i);
00082
00083
          // Set the top o' the stack.
00084
00085
          pclThread_->m_pwStackTop = (uint8_t*)pu8Stack;
00086
          // That's it! the thread is ready to run now.
00088 }
00089
00090 //----
00091 static void Thread_Switch(void)
00092 {
00093 #if KERNEL_USE_IDLE_FUNC
00094
         // If there's no next-thread-to-run...
00095
          if (g_pclNext == Kernel::GetIdleThread()) {
00096
              g_pclCurrent = Kernel::GetIdleThread();
00097
00098
              // Disable the SWI, and re-enable interrupts -- enter nested interrupt
              // mode.
00099
              KernelSWI::DI();
00100
00101
00102
              uint8_t u8SR = \_SFR_IO8(SR_);
00103
              // So long as there's no "next-to-run" thread, keep executing the Idle
00104
00105
              // function to conclusion...
00106
00107
              while (g_pclNext == Kernel::GetIdleThread()) {
                 // Ensure that we run this block in an interrupt enabled context (but
00108
00109
                  // with the rest of the checks being performed in an interrupt disabled
                  // context).
00110
00111
                  ASM("sei");
00112
                  Kernel::IdleFunc();
00113
                  ASM("cli");
00114
              }
00115
              // Progress has been achieved \operatorname{--} an interrupt-triggered event has caused
00116
              // the scheduler to run, and choose a new thread. Since we've already // saved the context of the thread we've hijacked to run idle, we can
00117
00118
00119
              // proceed to disable the nested interrupt context and switch to the
00120
              // new thread.
00121
               _SFR_IO8(SR_) = u8SR;
00122
00123
              KernelSWI::RI(true);
00124
00125 #endif
00126
          g_pclCurrent = (Thread*)g_pclNext;
00127 }
00128
00129 //--
00130 void ThreadPort::StartThreads()
00131 {
00132
          KernelSWI::Config(); // configure the task switch SWI
          KernelTimer::Config(); // configure the kernel timer
00133
00134
          Scheduler::SetScheduler(1); // enable the scheduler
00135
                                       // run the scheduler - determine the first thread to run
00136
          Scheduler::Schedule();
00138
          Thread Switch(): // Set the next scheduled thread to the current thread
00139
          KernelTimer::Start(); // enable the kernel timer
KernelSWI::Start(); // enable the task switch SWI
00140
00141
00142
00143 #if KERNEL_USE_QUANTUM
00144
       // Restart the thread quantum timer, as any value held prior to starting
00145
          // the kernel will be invalid. This fixes a bug where multiple threads
00146
          // started with the highest priority before starting the kernel causes problems
          // until the running thread voluntarily blocks.
00147
00148
          Ouantum::RemoveThread();
00149
          Quantum::AddThread(g_pclCurrent);
00150 #endif
00151
00152
          // Restore the context...
          Thread_RestoreContext(); // restore the context of the first running thread
00153
                                    // return from interrupt - will return to the first scheduled thread
          ASM("reti");
00154
00155 }
00156
00157 //---
00162 //----
00163 ISR(INTO_vect) __attribute__((signal, naked));
00164 TSR(INTO vect)
00165 {
                                  // Push the context (registers) of the current task
00166
          Thread_SaveContext();
          Thread_Switch(); // Switch to the next task
Thread_RestoreContext(); // Pop the context (registers) of the next task
00167
00168
                                    // Return to the next task
00169
          ASM("reti");
00170 }
```

19.25 /media/usb/project/github/Mark3/kernel/driver.cpp File Reference

Device driver/hardware abstraction layer.

```
#include "kerneltypes.h"
#include "mark3cfg.h"
#include "driver.h"
#include "dbg_file_list.h"
#include "buffalogger.h"
#include "kerneldebug.h"
```

19.25.1 Detailed Description

Device driver/hardware abstraction layer.

Definition in file driver.cpp.

19.26 driver.cpp

```
00001
00002
00003
00004
00005
00006
00007
80000
00009 -- [Mark3 Realtime Platform]-
00010
00011 Copyright (c) 2012 - 2017 Funkenstein Software Consulting, all rights reserved.
00012 See license.txt for more information
00013 =====
00021 #include "kerneltypes.h"
00022 #include "mark3cfg.h"
00023 #include "driver.h"
00025 #define _CAN_HAS_DEBUG
00026 //--[Autogenerated - Do Not Modify]-----
00027 #include "dbg_file_list.h"
00028 #include "buffalogger.h"
00029 #if defined(DBG FILE)
00030 #error "Debug logging file token already defined! Bailing."
00031 #else
00032 #define DBG_FILE _DBG___KERNEL_DRIVER_CPP
00033 #endif
00034 //--[End Autogenerated content]-----
00035
00036 #include "kerneldebug.h"
00037
00038 //---
00039 #if KERNEL_USE_DRIVER
00040
00041 DoubleLinkList DriverList::m_clDriverList;
00042
00046 class DevNull : public Driver
00047 {
00048 public:
00049
          virtual void
                             Init() { SetName("/dev/null"); };
          virtual uint8_t Open() { return 0; }
virtual uint8_t Close() { return 0; }
00050
00051
          virtual uint16_t Read(uint16_t /*u16Bytes_*/, uint8_t* /*pu8Data_*/) { return 0; }
virtual uint16_t Write(uint16_t /*u16Bytes_*/, uint8_t* /*pu8Data_*/) { return 0; }
00052
00053
00054
           virtual uint16\_t
                              /*ul6Event_*/, void* /*pvDataIn_*/, uint16_t /*ul6SizeIn_*/, void* /*
00055
          Control (uint16_t
      pvDataOut_*/, uint16_t /*u16SizeOut_*/)
00056
00057
               return 0;
00058
00059 };
00060
00061 /
00062 static DevNull clDevNull;
00063
00064 //----
```

```
00075 static uint8_t DrvCmp(const char* szStr1_, const char* szStr2_)
00077
         char* szTmp1 = (char*)szStr1_;
00078
         char* szTmp2 = (char*)szStr2_;
00079
08000
         while ((*szTmp1 != 0) && (*szTmp2 != 0)) {
           if (*szTmp1++ != *szTmp2++) {
00082
                 return 0;
00083
00084
         }
00085
         // Both terminate at the same length
00086
00087
         if (((*szTmp1) == 0) && ((*szTmp2) == 0)) {
00088
00089
00090
00091
         return 0:
00092 }
00093
00094 //-
00095 void DriverList::Init()
00096 {
00097
          // Ensure we always have at least one entry - a default in case no match
00098
         // is found (/dev/null)
00099
         clDevNull.Init();
00100
         Add(&clDevNull);
00101 }
00102
00103 //---
00104 Driver* DriverList::FindByPath(const char* m_pcPath)
00105 {
00106
         KERNEL_ASSERT (m_pcPath);
         Driver* pclTemp = static_cast<Driver*>(m_clDriverList.
     GetHead());
00108
         // Iterate through the list of drivers until we find a match, or we
00109
00110
         // exhaust our list of installed drivers
         while (pclTemp != 0) {
00111
         if (DrvCmp(m_pcPath, pclTemp->GetPath()) != 0u) {
00112
00113
                 return pclTemp;
00114
            pclTemp = static_cast<Driver*>(pclTemp->GetNext());
00115
00116
00117
         // No matching driver found - return a pointer to our /dev/null driver
00118
         return &clDevNull;
00119 }
00120
00121 #endif
```

19.27 /media/usb/project/github/Mark3/kernel/eventflag.cpp File Reference

Event Flag Blocking Object/IPC-Object implementation.

```
#include "mark3cfg.h"
#include "blocking.h"
#include "kernel.h"
#include "thread.h"
#include "eventflag.h"
#include "kernelaware.h"
#include "kerneldebug.h"
#include "dbg_file_list.h"
#include "buffalogger.h"
```

19.27.1 Detailed Description

Event Flag Blocking Object/IPC-Object implementation.

Definition in file eventflag.cpp.

19.28 eventflag.cpp

```
00001 /*=======
00003
00004
00005
00006 1
00007
00008
00009 -- [Mark3 Realtime Platform]
00010
00011 Copyright (c) 2012 - 2017 Funkenstein Software Consulting, all rights reserved.
00012 See license.txt for more information
00013 ======
00019 #include "mark3cfg.h"
00020 #include "blocking.h"
00020 #include "kernel.h"
00022 #include "thread.h"
00023 #include "eventflag.h"
00024 #include "kernelaware.h
00025 #include "kerneldebug.h"
00027 #define _CAN_HAS_DEBUG
00028 //--[Autogenerated - Do Not Modify]-----
00029 #include "dbg_file_list.h"
00030 #include "buffalogger.h"
00031 #if defined(DBG FILE)
00032 #error "Debug logging file token already defined! Bailing."
00033 #else
00034 #define DBG_FILE _DBG___KERNEL_EVENTFLAG_CPP
00035 #endif
00036 //--[End Autogenerated content]-----
00037
00038 #if KERNEL_USE_EVENTFLAG
00039
00040 #if KERNEL_USE_TIMEOUTS
00041 #include "timerlist.h"
00042 //--
00054 void TimedEventFlag_Callback(Thread* pclOwner_, void* pvData_)
00055 {
00056
          EventFlag* pclEventFlag = static_cast<EventFlag*>(pvData_);
00057
00058
          pclEventFlag->WakeMe(pclOwner_);
00059
          pclOwner_->SetExpired(true);
          pclOwner_->SetEventFlagMask(0);
00060
00061
00062
          if (pclOwner_->GetCurPriority() >= Scheduler::GetCurrentThread
      () ->GetCurPriority()) {
00063
              Thread::Yield();
00064
00065 }
00066 //--
00067 EventFlag::~EventFlag()
00068 {
00069
          // If there are any threads waiting on this object when it goes out
          // of scope, set a kernel panic.
if (m_clBlockList.HighestWaiter() != 0) {
00070
00071
00072
              Kernel::Panic(PANIC_ACTIVE_EVENTFLAG_DESCOPED);
00073
00074 }
00075
00076 //----
00077 void EventFlag::Init()
00078 {
00079 #if KERNEL_EXTRA_CHECKS
          KERNEL_ASSERT(!m_clBlockList.GetHead());
00081 #endif
00082
          m_u16SetMask = 0;
00083 #if KERNEL_EXTRA_CHECKS
00084
         SetInitialized();
00085 #endif
00086 }
00087
00088 //---
00089 void EventFlag::WakeMe(Thread* pclChosenOne_)
00090 {
00091 #if KERNEL_EXTRA_CHECKS
          KERNEL_ASSERT(IsInitialized());
00092
00093 #endif
00094
00095
          UnBlock(pclChosenOne_);
00096 }
00097 #endif
00098
00099 //--
```

19.28 eventflag.cpp 197

```
00100 #if KERNEL_USE_TIMEOUTS
00101 uint16_t EventFlag::Wait_i(uint16_t u16Mask_,
      EventFlagOperation_t eMode_, uint32_t u32TimeMS_)
00102 #else
00103 uint16 t EventFlag::Wait i(uint16 t u16Mask ,
      EventFlagOperation_t eMode_)
00104 #endif
00105 {
00106 #if KERNEL_EXTRA_CHECKS
00107
         KERNEL_ASSERT(IsInitialized());
00108 #endif
00109
00110
          bool bThreadYield = false;
00111
         bool bMatch
00112
00113 #if KERNEL_USE_TIMEOUTS
00114
          Timer clEventTimer;
          bool bUseTimer = false;
00115
00116 #endif
00117
00118
          // Ensure we're operating in a critical section while we determine
00119
          // whether or not we need to block the current thread on this object.
          CS ENTER();
00120
00121
00122
          // Check to see whether or not the current mask matches any of the
          // desired bits.
00123
00124
          g_pclCurrent->SetEventFlagMask(u16Mask_);
00125
     if ((eMode_ == EVENT_FLAG_ALL) || (eMode_ ==
EVENT_FLAG_ALL_CLEAR)) {
00126
00127
              // Check to see if the flags in their current state match all of
              // the set flags in the event flag group, with this mask. if ((m_u16SetMask & u16Mask_) == u16Mask_) {
00128
00129
00130
                  bMatch = true;
00131
                  g_pclCurrent->SetEventFlagMask(u16Mask_);
00132
          } else if ((eMode_ == EVENT_FLAG_ANY) || (eMode_ ==
00133
      EVENT_FLAG_ANY_CLEAR)) {
00134
             // Check to see if the existing flags match any of the set flags in
00135
              // the event flag group with this mask
00136
              if ((m_u16SetMask & u16Mask_) != 0) {
00137
                  bMatch = true;
                  g pclCurrent->SetEventFlagMask(m u16SetMask & u16Mask);
00138
00139
              }
00140
         }
00141
00142
          // We're unable to match this pattern as-is, so we must block.
00143
          if (!bMatch) {
00144
              // Reset the current thread's event flag mask & mode
00145
              q_pclCurrent->SetEventFlagMask(u16Mask_);
00146
              g_pclCurrent->SetEventFlagMode(eMode_);
00147
00148 #if KERNEL_USE_TIMEOUTS
00149
             if (u32TimeMS_ != 0u) {
                  g pclCurrent->SetExpired(false);
00150
00151
                  clEventTimer.Init();
                  clEventTimer.Start(false, u32TimeMS_, TimedEventFlag_Callback, (void*)this);
00153
                  bUseTimer = true;
00154
00155 #endif
00156
00157
              // Add the thread to the object's block-list.
00158
              BlockPriority(g_pclCurrent);
00159
00160
              // Trigger that
00161
              bThreadYield = true;
00162
          }
00163
00164
          // If bThreadYield is set, it means that we've blocked the current thread,
00165
          \ensuremath{//} and must therefore rerun the scheduler to determine what thread to
00166
          // switch to.
00167
          if (bThreadYield) {
00168
               // Switch threads immediately
00169
              Thread::Yield();
00170
          }
00171
00172
          // Exit the critical section and return back to normal execution
00173
          CS_EXIT();
00174
00179 #if KERNEL USE TIMEOUTS
00180
         if (bUseTimer && bThreadYield) {
              clEventTimer.Stop();
00182
00183 #endif
00184
00185
          return g_pclCurrent->GetEventFlagMask();
00186 }
```

```
00189 uint16_t EventFlag::Wait(uint16_t u16Mask_, EventFlagOperation_t eMode_)
00190 {
00191 #if KERNEL USE TIMEOUTS
00192
         return Wait i(u16Mask , eMode , 0);
00193 #else
00194
          return Wait_i(u16Mask_, eMode_);
00195 #endif
00196 }
00197
00198 #if KERNEL USE TIMEOUTS
00199 //-
00200 uint16_t EventFlag::Wait(uint16_t u16Mask_, EventFlagOperation_t eMode_,
      uint32_t u32TimeMS_)
00201 {
00202
          return Wait_i(u16Mask_, eMode_, u32TimeMS_);
00203 }
00204 #endif
00205
00206 //---
00207 void EventFlag::Set(uint16_t u16Mask_)
00208 {
00209 #if KERNEL_EXTRA_CHECKS
00210
         KERNEL_ASSERT(IsInitialized());
00211 #endif
00212
00213
          Thread* pclPrev;
          Thread* pclCurrent;
bool bReschedule = false;
00214
00215
00216
          uint16 t u16NewMask:
00217
00218
          CS_ENTER();
00219
00220
          \ensuremath{//} Walk through the whole block list, checking to see whether or not
          // the current flag set now matches any/all of the masks and modes of
00221
00222
          // the threads involved.
00224
          m_u16SetMask |= u16Mask_;
00225
          u16NewMask = m_u16SetMask;
00226
00227
          // Start at the head of the list, and iterate through until we hit the
          // "head" element in the list again. Ensure that we handle the case where
00228
00229
          // we remove the first or last elements in the list, or if there's only
          // one element in the list.
00230
00231
          pclCurrent = static_cast<Thread*>(m_clBlockList.GetHead());
00232
00233
          \ensuremath{//} Do nothing when there are no objects blocking.
          if (pclCurrent != 0) {
00234
00235
              // First loop - process every thread in the block-list and check to
              // see whether or not the current flags match the event-flag conditions
00237
              // on the thread.
              do {
00238
00239
                  pclPrev
                            = pclCurrent;
00240
                  pclCurrent = static_cast<Thread*>(pclCurrent->GetNext());
00241
00242
                  // Read the thread's event mask/mode
                                        u16ThreadMask = pclPrev->GetEventFlagMask();
00243
                  EventFlagOperation_t eThreadMode = pclPrev->
     GetEventFlagMode();
00245
                  // For the "any" mode - unblock the blocked threads if one or more bits
00246
00247
                  // in the thread's bitmask match the object's bitmask
                   if ((EVENT_FLAG_ANY == eThreadMode) || (
00248
     EVENT_FLAG_ANY_CLEAR == eThreadMode)) {
00249
                     if ((u16ThreadMask & m_u16SetMask) != 0) {
00250
                           pclPrev->SetEventFlagMode(
     EVENT_FLAG_PENDING_UNBLOCK);
00251
                          pclPrev->SetEventFlagMask(m_u16SetMask & u16ThreadMask);
00252
                          bReschedule = true;
00253
00254
                           // If the "clear" variant is set, then clear the bits in the mask
                           // that caused the thread to unblock.
00255
00256
                           if (EVENT_FLAG_ANY_CLEAR == eThreadMode) {
                               u16NewMask &= ~(u16ThreadMask & u16Mask_);
00257
00258
00259
                       }
00260
                  ^{\prime} // For the "all" mode, every set bit in the thread's requested bitmask must // match the object's flag mask.
00261
00262
                  else if ((EVENT_FLAG_ALL == eThreadMode) || (
00263
     EVENT_FLAG_ALL_CLEAR == eThreadMode)) {
00264
                     if ((u16ThreadMask & m_u16SetMask) == u16ThreadMask) {
00265
                          pclPrev->SetEventFlagMode(
     EVENT_FLAG_PENDING_UNBLOCK);
00266
                           pclPrev->SetEventFlagMask(u16ThreadMask);
00267
                          bReschedule = true;
```

19.28 eventflag.cpp 199

```
00268
00269
                            // If the "clear" variant is set, then clear the bits in the mask
00270
                            // that caused the thread to unblock.
                            if (EVENT_FLAG_ALL_CLEAR == eThreadMode) {
00271
00272
                                 u16NewMask &= ~(u16ThreadMask & u16Mask);
00273
00274
                        }
00275
                   }
00276
               // To keep looping, ensure that there's something in the list, and
// that the next item isn't the head of the list.
while (pclPrev != m_clBlockList.GetTail());
00277
00278
00279
00280
00281
               // Second loop - go through and unblock all of the threads that
               // were tagged for unblocking.
00282
00283
               pclCurrent = static_cast<Thread*>(m_clBlockList.
     GetHead());
00284
               bool bIsTail = false;
00285
               do {
00286
                   pclPrev = pclCurrent;
00287
                   pclCurrent = static_cast<Thread*>(pclCurrent->GetNext());
00288
                   // Check to see if this is the condition to terminate the loop if (pclPrev == m_clBlockList.GetTail()) {
00289
00290
00291
                        bIsTail = true;
00292
00293
00294
                   \ensuremath{//} If the first pass indicated that this thread should be
                   // unblocked, then unblock the thread
if (pclPrev->GetEventFlagMode() ==
00295
00296
     EVENT_FLAG_PENDING_UNBLOCK) {
00297
                       UnBlock (pclPrev);
00298
00299
               } while (!bIsTail);
00300
          }
00301
          // If we awoke any threads, re-run the scheduler
00302
00303
          if (bReschedule) {
00304
               Thread::Yield();
00305
00306
          // Update the bitmask based on any "clear" operations performed along
00307
00308
          // the way
00309
          m_u16SetMask = u16NewMask;
00310
00311
           // Restore interrupts - will potentially cause a context switch if a
00312
           // thread is unblocked.
00313
          CS_EXIT();
00314 }
00315
00316 //-
00317 void EventFlag::Clear(uint16_t u16Mask_)
00318 {
00319 #if KERNEL_EXTRA_CHECKS
         KERNEL_ASSERT(IsInitialized());
00320
00321 #endif
00323
           // Just clear the bitfields in the local object.
00324
          CS_ENTER();
00325
          m_u16SetMask &= ~u16Mask_;
00326
          CS EXIT();
00327 }
00328
00329 //---
00330 uint16_t EventFlag::GetMask()
00331 {
00332 #if KERNEL_EXTRA_CHECKS
          KERNEL_ASSERT(IsInitialized());
00333
00334 #endif
00335
00336
           // Return the presently held event flag values in this object. Ensure
00337
          // we get this within a critical section to guarantee atomicity.
00338
          uint16_t u16Return;
          CS_ENTER();
00339
00340
          u16Return = m_u16SetMask;
00341
          CS_EXIT();
00342
          return u16Return;
00343 }
00344
00345 #endif // KERNEL USE EVENTFLAG
```

19.29 /media/usb/project/github/Mark3/kernel/kernel.cpp File Reference

Kernel initialization and startup code.

```
#include "kerneltypes.h"
#include "mark3cfg.h"
#include "kernel.h"
#include "scheduler.h"
#include "thread.h"
#include "threadport.h"
#include "timerlist.h"
#include "message.h"
#include "driver.h"
#include "profile.h"
#include "kernelprofile.h"
#include "autoalloc.h"
#include "dbg_file_list.h"
#include "buffalogger.h"
#include "kerneldebug.h"
#include "tracebuffer.h"
```

19.29.1 Detailed Description

Kernel initialization and startup code.

Definition in file kernel.cpp.

19.30 kernel.cpp

```
00001 /*==
00003
00004
00005
00006
00007
00008
00009 -- [Mark3 Realtime Platform] -
00010
00011 Copyright (c) 2012 - 2017 Funkenstein Software Consulting, all rights reserved.
00012 See license.txt for more information
00013 ===
00021 #include "kerneltypes.h"
00022 #include "mark3cfg.h"
00023
00024 #include "kernel.h"
00025 #include "scheduler.h"
00026 #include "thread.h"
00027 #include "threadport.h"
00028 #include "timerlist.h"
00029 #include "message.h"
00030 #include "driver.h"
00031 #include "profile.h"
00032 #include "kernelprofile.h"
00033 #include "autoalloc.h"
00034
00035 #define _CAN_HAS_DEBUG
00036 //--[Autogenerated - Do Not Modify]------00037 #include "dbg_file_list.h"
00038 #include "buffalogger.h"
00039 #if defined(DBG_FILE)
00040 #error "Debug logging file token already defined! Bailing."
00041 #else
00042 #define DBG_FILE _DBG_
                               __KERNEL_KERNEL_CPP
00043 #endif
00044 //--[End Autogenerated content]-----
00045 #include "kerneldebug.h
00046 #include "tracebuffer.h"
00047
```

```
00048 bool
                  Kernel::m_bIsStarted;
00049 bool
                  Kernel::m_bIsPanic;
00050 PanicFunc_t Kernel::m_pfPanic;
00051
00052 #if KERNEL USE STACK GUARD
00053 uint16_t Kernel::m_u16GuardThreshold;
00054 #endif
00055
00056 #if KERNEL_USE_IDLE_FUNC
00057 IdleFunc_t Kernel::m_pfIdle;
00058 FakeThread_t Kernel::m_clIdle;
00059 #endif
00060
00061 #if KERNEL_USE_THREAD_CALLOUTS
{\tt 00064\ ThreadContextCallout\_t\ Kernel::m\_pfThreadContextCallout;}
00065 #endif
00066 //---
00067 void Kernel::Init(void)
00068 {
00069 #if KERNEL_USE_AUTO_ALLOC
00070
        AutoAlloc::Init();
00071 #endif
00072 #if KERNEL_USE_IDLE_FUNC
         ((Thread*)&m_clIdle)->InitIdle();
00074 #endif
00075 #if KERNEL_USE_DEBUG && !KERNEL_AWARE_SIMULATION
00076
         TraceBuffer::Init();
00077 #endif
00078
         KERNEL TRACE("Initializing Mark3 Kernel");
08000
         // Initialize the global kernel data - scheduler, timer-scheduler, and
00081
       // the global message pool.
00082
         Scheduler::Init();
00083 #if KERNEL_USE_DRIVER
00084
        DriverList::Init();
00085 #endif
00086 #if KERNEL_USE_TIMERS
00087
         TimerScheduler::Init();
00088 #endif
00089 #if KERNEL_USE_MESSAGE
00090
         GlobalMessagePool::Init();
00091 #endif
00092 #if KERNEL_USE_PROFILER
00093
         Profiler::Init();
00094 #endif
00095 #if KERNEL_USE_STACK_GUARD
         m_u16GuardThreshold = KERNEL_STACK_GUARD_DEFAULT;
00096
00097 #endif
00098 }
00099
00100 //---
00101 void Kernel::Start(void)
00102 {
00103
         KERNEL TRACE ("Starting Mark3 Scheduler");
         m_bIsStarted = true;
          ThreadPort::StartThreads();
00105
00106
         KERNEL_TRACE("Error starting Mark3 Scheduler");
00107 }
00108
00109 //-
00110 void Kernel::Panic(uint16_t u16Cause_)
00111 {
00112
         m_bIsPanic = true;
00113
         if (m_pfPanic != 0) {
00114
             m_pfPanic(u16Cause_);
        } else {
00115
00116 #if KERNEL_AWARE_SIMULATION
00117 KernelAware::Print("Panic\n");
             KernelAware::Trace(0, 0, ul6Cause_, g_pclCurrent->
     GetID());
00119
             KernelAware::ExitSimulator();
00120 #endif
00121
00122
             while (true) {
               ;
00123 }
00124
00125 }
```

19.31 /media/usb/project/github/Mark3/kernel/kernelaware.cpp File Reference

Kernel aware simulation support.

```
#include "kerneltypes.h"
#include "mark3cfg.h"
#include "kernelaware.h"
#include "threadport.h"
#include "dbg_file_list.h"
#include "buffalogger.h"
```

19.31.1 Detailed Description

Kernel aware simulation support.

Definition in file kernelaware.cpp.

19.32 kernelaware.cpp

```
00002
00003
00004
00005
00006
00007
00008
00009 -- [Mark3 Realtime Platform] --
00011 Copyright (c) 2012 - 2017 Funkenstein Software Consulting, all rights reserved.
00012 See license.txt for more information
00021 #include "kerneltypes.h"
00022 #include "mark3cfg.h"
00023 #include "kernelaware.h"
00024 #include "threadport.h"
00025
00026 #define _CAN_HAS_DEBUG
00027 //--[Autogenerated - Do Not Modify]-----
00028 #include "dbg_file_list.h"
00029 #include "buffalogger.h"
00030 #if defined(DBG_FILE)
00031 #error "Debug logging file token already defined! Bailing."
00032 #else
00033 #define DBG_FILE _DBG___KERNEL_KERNELAWARE_CPP
00034 #endif
00035 //--[End Autogenerated content]----
00036
00037 #if KERNEL_AWARE_SIMULATION
00038
00039 //----
00048 typedef union {
00049
         volatile uint16_t au16Buffer[5];
00050
00054
         struct {
00055
             volatile const char* szName;
         } Profiler;
00056
00061
         struct {
00062
            volatile uint16_t u16File;
00063
             volatile uint16_t u16Line;
00064
             volatile uint16_t u16Arg1;
00065
            volatile uint16_t u16Arg2;
00066
         } Trace;
00071
         struct {
00072
             volatile const char* szString;
         } Print;
00073
00074 } KernelAwareData_t;
00075
00076 //---
00077 volatile bool
00077 volatile bool g_bIsKernelAware; 00078 volatile uint8_t g_u8KACommand;
00079 KernelAwareData_t g_stKAData;
08000
00081 //--
00082 void KernelAware::ProfileInit(const char* szStr_)
00083 {
00084
         CS ENTER():
00085
         g_stKAData.Profiler.szName = szStr_;
00086
         g_u8KACommand
                                   = KA_COMMAND_PROFILE_INIT;
```

```
00087
         CS_EXIT();
00088 }
00089
00090 //----
00091 void KernelAware::ProfileStart(void)
00092 {
         g_u8KACommand = KA_COMMAND_PROFILE_START;
00094 }
00095
00096 //----
00097 void KernelAware::ProfileStop(void)
00098 {
00099
         g_u8KACommand = KA_COMMAND_PROFILE_STOP;
00100 }
00101
00102 //---
00103 void KernelAware::ProfileReport (void)
00104 {
00105
         g_u8KACommand = KA_COMMAND_PROFILE_REPORT;
00106 }
00107
00108 //---
00109 void KernelAware::ExitSimulator(void)
00110 {
00111
         g_u8KACommand = KA_COMMAND_EXIT_SIMULATOR;
00112 }
00113
00114 //--
00115 void KernelAware::Trace(uint16_t u16File_, uint16_t u16Line_)
00116 {
00117
          Trace i(u16File , u16Line , 0, 0, KA COMMAND TRACE 0);
00118 }
00119
00120 //-
00121 void KernelAware::Trace(uint16_t u16File_, uint16_t u16Line_, uint16_t u16Arg1_)
00122 {
00123
          Trace i (u16File , u16Line , u16Arg1 , 0, KA COMMAND TRACE 1);
00126 void KernelAware::Trace(uint16_t u16File_, uint16_t u16Line_, uint16_t u16Arg1_, uint16_t
00127 {
00128
          Trace_i(u16File_, u16Line_, u16Arg1_, u16Arg2_, KA_COMMAND_TRACE_2);
00129 }
00130
00131 //-
00132 void KernelAware::Trace_i(
00133
        uint16_t u16File_, uint16_t u16Line_, uint16_t u16Arg1_, uint16_t u16Arg2_,
     KernelAwareCommand_t eCmd_)
00134 {
00135
         CS_ENTER();
00136
         g_stKAData.Trace.u16File = u16File_;
00137
         g_stKAData.Trace.u16Line = u16Line_;
00138
         g_stKAData.Trace.u16Arg1 = u16Arg1_;
         g_stKAData.Trace.u16Arg2 = u16Arg2_;
00139
        g_u8KACommand
CS_EXIT();
                                   = eCmd_;
00140
00141
00142 }
00143
00144 //---
00145 void KernelAware::Print(const char* szStr_)
00146 {
00147
         CS_ENTER();
00148
         g_stKAData.Print.szString = szStr_;
         g_u8KACommand
00149
                                   = KA_COMMAND_PRINT;
00150
         CS_EXIT();
00151 }
00152
00153 //-
00154 bool KernelAware::IsSimulatorAware(void)
00155 {
00156
          return g_bIsKernelAware;
00157 }
00158
00159 #endif
```

19.33 /media/usb/project/github/Mark3/kernel/ksemaphore.cpp File Reference

Semaphore Blocking-Object Implemenation.

```
#include "kerneltypes.h"
#include "mark3cfg.h"
#include "ksemaphore.h"
#include "blocking.h"
#include "dbg_file_list.h"
#include "buffalogger.h"
#include "kerneldebug.h"
```

19.33.1 Detailed Description

Semaphore Blocking-Object Implemenation.

Definition in file ksemaphore.cpp.

19.34 ksemaphore.cpp

```
00001 /
00002
00003
00004
00005
00006
00007
00008
00009
       -[Mark3 Realtime Platform]
00010
00011 Copyright (c) 2012 - 2017 Funkenstein Software Consulting, all rights reserved.
00012 See license.txt for more information
00013 ========
00022 #include "kerneltypes.h"
00023 #include "mark3cfg.h"
00024
00025 #include "ksemaphore.h"
00026 #include "blocking.h"
00027
00028 #define _CAN_HAS_DEBUG
00029 //--[Autogenerated - Do Not Modify]-----
00030 #include "dbg_file_list.h"
00031 #include "buffalogger.h"
00032 #if defined(DBG_FILE)
00033 #error "Debug logging file token already defined! Bailing."
00034 #else
00035 #define DBG_FILE _DBG___KERNEL_KSEMAPHORE_CPP
00036 #endif
00037 //--[End Autogenerated content]-----
00038 #include "kerneldebug.h"
00039
00040 #if KERNEL USE SEMAPHORE
00041
00042 #if KERNEL_USE_TIMEOUTS
00043 #include "timerlist.h'
00044
00045 //--
00056 void TimedSemaphore_Callback(Thread* pclOwner_, void* pvData_)
00057 {
00058
          Semaphore* pclSemaphore = static_cast<Semaphore*>(pvData_);
00059
00060
          // Indicate that the semaphore has expired on the thread
00061
          pclOwner_->SetExpired(true);
00062
00063
          // Wake up the thread that was blocked on this semaphore.
00064
          pclSemaphore->WakeMe (pclOwner_);
00065
00066
          if (pclOwner_->GetCurPriority() >= Scheduler::GetCurrentThread
      ()->GetCurPriority()) {
00067
              Thread::Yield();
00068
00069 }
00070
00071
00072 Semaphore::~Semaphore()
00073 {
00074
          // If there are any threads waiting on this object when it goes out
00075
          // of scope, set a kernel panic.
00076
          if (m_clBlockList.GetHead() != 0) {
```

```
Kernel::Panic(PANIC_ACTIVE_SEMAPHORE_DESCOPED);
00078
00079 }
08000
00081 //----
00082 void Semaphore::WakeMe(Thread* pclChosenOne_)
00084 #if KERNEL_EXTRA_CHECKS
00085
         KERNEL_ASSERT(IsInitialized());
00086 #endif
00087
          // Remove from the semaphore waitlist and back to its ready list.
00088
00089
          UnBlock (pclChosenOne_);
00090 }
00091
00092 #endif // KERNEL_USE_TIMEOUTS
00093
00094 //-
00095 uint8_t Semaphore::WakeNext()
00096 {
00097
          Thread* pclChosenOne;
00098
00099
          pclChosenOne = m_clBlockList.HighestWaiter();
00100
00101
          // Remove from the semaphore waitlist and back to its ready list.
00102
          UnBlock (pclChosenOne);
00103
00104
          // Call a task switch if higher or equal priority thread
00105
          if (pclChosenOne->GetCurPriority() >=
     Scheduler::GetCurrentThread() ->GetCurPriority()) {
00106
            return 1;
00107
00108
          return 0;
00109 }
00110
00111 //---
00112 void Semaphore::Init(uint16_t u16InitVal_, uint16_t u16MaxVal_)
00114 #if KERNEL_EXTRA_CHECKS
00115
         KERNEL_ASSERT(!m_clBlockList.GetHead());
00116 #endif
00117
          // Copy the paramters into the object - set the maximum value for this
00118
         // semaphore to implement either binary or counting semaphores, and set
00119
00120
         // the initial count. Clear the wait list for this object.
00121
          m_u16Value
                      = u16InitVal_;
00122
         m_u16MaxValue = u16MaxVal_;
00123
00124 #if KERNEL_EXTRA_CHECKS
00125
        SetInitialized();
00126 #endif
00127
00128 }
00129
00130 //-----
00131 bool Semaphore::Post()
00133 #if KERNEL_EXTRA_CHECKS
00134
         KERNEL_ASSERT(IsInitialized());
00135 #endif
00136
00137
          KERNEL_TRACE_1("Posting semaphore, Thread %d", (uint16_t)
     g_pclCurrent->GetID());
00138
00139
          bool bThreadWake = false;
                           = false;
00140
          bool bBail
00141
          // Increment the semaphore count - we can mess with threads so ensure this
          // is in a critical section. We don't just disable the scheudler since // we want to be able to do this from within an interrupt context as well.
00142
00143
          CS_ENTER();
00144
00145
00146
          // If nothing is waiting for the semaphore
00147
          if (m_clBlockList.GetHead() == NULL) {
              // Check so see if we've reached the maximum value in the semaphore
00148
00149
              if (m_u16Value < m_u16MaxValue) {</pre>
00150
                  // Increment the count value
                  m_u16Value++;
00151
              } else {
    // Maximum value has been reached, bail out.
00152
00153
00154
                  bBail = true;
00155
              }
00156
          } else {
00157
             // Otherwise, there are threads waiting for the semaphore to be
00158
              // posted, so wake the next one (highest priority goes first).
00159
              bThreadWake = (WakeNext() != 0u);
00160
          }
00161
```

```
CS_EXIT();
00162
00163
00164
          // If we weren't able to increment the semaphore count, fail out.
00165
          if (bBail) {
00166
              return false;
00167
00168
00169
          \ensuremath{//} if bThreadWake was set, it means that a higher-priority thread was
00170
          // woken. Trigger a context switch to ensure that this thread gets
00171
          // to execute next.
00172
          if (bThreadWake) {
00173
              Thread::Yield():
00174
00175
          return true;
00176 }
00177
00178 //---
00179 #if KERNEL_USE_TIMEOUTS
00180 bool Semaphore::Pend_i(uint32_t u32WaitTimeMS_)
00182 void Semaphore::Pend_i(void)
00183 #endif
00184 {
00185 #if KERNEL_EXTRA_CHECKS
00186
         KERNEL_ASSERT(IsInitialized());
00187 #endif
00188
00189
          KERNEL_TRACE_1("Pending semaphore, Thread %d", (uint16_t)
g_pclCurrent->GetID());
00190
00191 #if KERNEL_USE_TIMEOUTS
00192
          Timer clSemTimer;
00193
          bool bUseTimer = false;
00194 #endif
00195
          // Once again, messing with thread data - ensure
00196
00197
          // we're doing all of these operations from within a thread-safe context.
00198
          CS_ENTER();
00199
00200
          // Check to see if we need to take any action based on the semaphore count
00201
          if (m_u16Value != 0) {
              /\!/ The semaphore count is non-zero, we can just decrement the count /\!/ and go along our merry way.
00202
00203
00204
              m_u16Value--;
          } else {
00206 // The semaphore count is zero - we need to block the current thread
00207 \ensuremath{//} and wait until the semaphore is posted from elsewhere.
00208 #if KERNEL_USE_TIMEOUTS
00209
              if (u32WaitTimeMS != 0u) {
                  g_pclCurrent->SetExpired(false);
00210
00211
                  clSemTimer.Init();
00212
                  clSemTimer.Start(false, u32WaitTimeMS_, TimedSemaphore_Callback, (void*)this);
00213
                  bUseTimer = true;
00214
              }
00215 #endif
00216
              BlockPriority(g pclCurrent);
00218
              // Switch Threads immediately
00219
              Thread::Yield();
        }
00220
00221
00222
         CS EXIT();
00223
00224 #if KERNEL_USE_TIMEOUTS
        if (bUseTimer)
00225
00226
             clSemTimer.Stop();
              return (static_cast<int>(g_pclCurrent->GetExpired()) == 0);
00227
        }
00228
00229
          return true:
00230 #endif
00231 }
00232
00233 //----
00234 // Redirect the untimed pend API to the timed pend, with a null timeout.
00235 void Semaphore::Pend()
00236 {
00237 #if KERNEL_USE_TIMEOUTS
00238
         Pend_i(0);
00239 #else
00240
        Pend i();
00241 #endif
00242 }
00243
00244 #if KERNEL_USE_TIMEOUTS
00245 //--
00246 bool Semaphore::Pend(uint32_t u32WaitTimeMS_)
00247 {
```

```
00248
         return Pend_i (u32WaitTimeMS_);
00249 }
00250 #endif
00251
00252 //---
00253 uint16 t Semaphore::GetCount()
00255 #if KERNEL_EXTRA_CHECKS
00256
         KERNEL_ASSERT(IsInitialized());
00257 #endif
00258
         uint16 t u16Ret:
00259
         CS_ENTER();
00260
         u16Ret = m_u16Value;
         CS_EXIT();
00261
00262
          return u16Ret;
00263 }
00264
00265 #endif
```

19.35 /media/usb/project/github/Mark3/kernel/II.cpp File Reference

Core Linked-List implementation, from which all kernel objects are derived.

```
#include "kerneltypes.h"
#include "kernel.h"
#include "ll.h"
#include "dbg_file_list.h"
#include "buffalogger.h"
#include "kerneldebug.h"
```

19.35.1 Detailed Description

Core Linked-List implementation, from which all kernel objects are derived.

Definition in file II.cpp.

19.36 II.cpp

```
00001 /
00002
00003
00004
00005 1
00006 |
00007
00008
00009 -- [Mark3 Realtime Platform] --
00010
00011 Copyright (c) 2012 - 2017 Funkenstein Software Consulting, all rights reserved.
00012 See license.txt for more information
00013 ------*/
00022 #include "kerneltypes.h"
00023 #include "kernel.h"
00024 #include "11.h"
00025
00026 #define CAN HAS DEBUG
00027 //--[Autogenerated - Do Not Modify]-----
00028 #include "dbg_file_list.h
00029 #include "buffalogger.h"
00030 #if defined(DBG_FILE)
00031 \#error "Debug logging file token already defined! Bailing."
00032 #else
00033 #define DBG FILE DBG KERNEL LL CPP
00034 #endif
00035 //--[End Autogenerated content]-----
00036
00037 #include "kerneldebug.h"
00038
00039 //--
00040 void LinkListNode::ClearNode()
00041 {
```

```
next = NULL;
00043
         prev = NULL;
00044 }
00045
00046 //--
00047 void DoubleLinkList::Add(LinkListNode* node_)
00048 {
00049
          KERNEL_ASSERT (node_);
00050
00051
          node_->prev = m_pstTail;
          node_->next = NULL;
00052
00053
00054
          // If the list is empty, initilize the head
00055
          if (m_pstHead == 0) {
00056
             m_pstHead = node_;
00057
          // Otherwise, adjust the tail's next pointer
00058
00059
          else {
            m_pstTail->next = node_;
00060
00061
00062
00063
          \ensuremath{//} Move the tail node, and assign it to the new node just passed in
00064
         m_pstTail = node_;
00065 }
00066
00068 void DoubleLinkList::Remove(LinkListNode* node_)
00069 {
          KERNEL_ASSERT (node_);
00070
00071
00072
          if (node_->prev != 0) {
00073 #if SAFE_UNLINK
00074
           if (node_->prev->next != node_) {
00075
                  Kernel::Panic(PANIC_LIST_UNLINK_FAILED);
00076
00077 #endif
00078
              node ->prev->next = node ->next;
08000
          if (node_->next != 0) {
00081 #if SAFE_UNLINK
              if (node_->next->prev != node_) {
00082
                  Kernel::Panic(PANIC_LIST_UNLINK_FAILED);
00083
00085 #endif
00086
             node_->next->prev = node_->prev;
00087
00088
         if (node_ == m_pstHead) {
00089
             m_pstHead = node_->next;
00090
         if (node_ == m_pstTail) {
    m_pstTail = node_->prev;
00091
00092
00093
00094
          node_->ClearNode();
00095 }
00096
00097 //-
00098 void CircularLinkList::Add(LinkListNode* node_)
00099 {
00100
          KERNEL_ASSERT (node_);
00101
00102
          if (m pstHead == 0) {
              // If the list is empty, initilize the nodes
00103
00104
              m_pstHead = node_;
00105
              m_pstTail = node_;
00106
          } else {
00107
             // Move the tail node, and assign it to the new node just passed in
              m_pstTail->next = node_;
00108
00109
         }
00110
00111
          // Add a node to the end of the linked list.
00112
          node_->prev = m_pstTail;
00113
          node_->next = m_pstHead;
00114
00115
          m_pstTail
                          = node :
00116
          m_pstHead->prev = node_;
00117 }
00118
00119 //--
00120 void CircularLinkList::Remove(LinkListNode* node_)
00121 {
          KERNEL_ASSERT (node_);
00122
00124
          // Check to see if this is the head of the list...
00125
          if ((node_ == m_pstHead) && (m_pstHead == m_pstTail)) {
00126
             // Clear the head and tail pointers - nothing else left.
             m_pstHead = NULL;
m_pstTail = NULL;
00127
00128
```

```
00129
              return;
00130
        }
00131
00132 #if SAFE UNLINK
00133  // Verify that all nodes are properly connected
00134  if ((node_->prev->next != node_) || (node_->next->prev != node_)) {
             Kernel::Panic(PANIC_LIST_UNLINK_FAILED);
00136
00137 #endif
00138
00139
          // This is a circularly linked list - no need to check for connection,
         // just remove the node.
00140
00141
         node_->next->prev = node_->prev;
        node_->prev->next = node_->next;
00142
00143
00144
         if (node_ == m_pstHead) {
            m_pstHead = m_pstHead->next;
00145
00146
         if (node_ == m_pstTail) {
            m_pstTail = m_pstTail->prev;
00148
00149
00150
          node_->ClearNode();
00151 }
00152
00153 //-
00154 void CircularLinkList::PivotForward()
00155 {
00156
          if (m_pstHead != 0) {
00157
              m_pstHead = m_pstHead->next;
             m_pstTail = m_pstTail->next;
00158
00159
00160 }
00161
00162 //---
00163 void CircularLinkList::PivotBackward()
00164 {
00165
00166
          if (m pstHead != 0) {
             m_pstHead = m_pstHead->prev;
00167
00168 }
             m_pstTail = m_pstTail->prev;
00169 }
00170
00171 //----
00172 void CircularLinkList::InsertNodeBefore(
      LinkListNode* node_, LinkListNode* insert_)
00173 {
00174
         KERNEL_ASSERT (node_);
00175
00176
         node_->next = insert_;
         node_->prev = insert_->prev;
00177
00178
00179
          if (insert_->prev != 0) {
            insert_->prev->next = node_;
00180
00181
00182
          insert_->prev = node_;
00183 }
```

19.37 /media/usb/project/github/Mark3/kernel/mailbox.cpp File Reference

Mailbox + Envelope IPC mechanism.

```
#include "mark3cfg.h"
#include "kerneltypes.h"
#include "ksemaphore.h"
#include "mailbox.h"
#include "dbg_file_list.h"
#include "buffalogger.h"
#include "kerneldebug.h"
```

19.37.1 Detailed Description

Mailbox + Envelope IPC mechanism.

Definition in file mailbox.cpp.

19.38 mailbox.cpp

```
00001 /*=======
00003
00004
00005
00006 1
00007
00008
00009 -- [Mark3 Realtime Platform]-
00010
00011 Copyright (c) 2012 - 2017 Funkenstein Software Consulting, all rights reserved.
00012 See license.txt for more information
00013 ========
00021 #include "mark3cfg.h"
00022 #include "kerneltypes.h"
00023 #include "ksemaphore.h"
00024 #include "mailbox.h"
00025
00026 #define _CAN_HAS_DEBUG
00027 //--[Autogenerated - Do Not Modify]-----
00028 #include "dbg_file_list.h"
00029 #include "buffalogger.h
00030 #if defined(DBG_FILE)
00031 #error "Debug logging file token already defined! Bailing."
00032 #else
00033 #define DBG FILE DBG KERNEL MAILBOX CPP
00034 #endif
00035 //--[End Autogenerated content]-----
00036
00037 #include "kerneldebug.h"
00038
00039 #if KERNEL USE MAILBOX
00040
00041 //-
00042 Mailbox::~Mailbox()
00043 {
00044
          // If the mailbox isn't empty on destruction, kernel panic.
00045
          if (m u16Free != m u16Count) {
              Kernel::Panic (PANIC_ACTIVE_MAILBOX_DESCOPED);
00046
00047
00048 }
00049
00050 //---
00051 void Mailbox::Init (void* pvBuffer_, uint16_t u16BufferSize_, uint16_t u16ElementSize_)
00052 {
00053
          KERNEL_ASSERT (u16BufferSize_);
00054
          KERNEL_ASSERT(u16ElementSize_);
00055
          KERNEL_ASSERT (pvBuffer_);
00056
00057
          m_pvBuffer
                          = pvBuffer ;
00058
         m_u16ElementSize = u16ElementSize_;
00059
00060
          m_u16Count = (u16BufferSize_ / u16ElementSize_);
00061
          m_u16Free = m_u16Count;
00062
00063
          m u16Head = 0:
          m_u16Tail = 0;
00064
00065
00066
          // We use the counting semaphore to implement blocking - with one element
00067
          // in the mailbox corresponding to a post/pend operation in the semaphore.
00068
          m_clRecvSem.Init(0, m_ul6Free);
00069
00070 #if KERNEL_USE_TIMEOUTS
         // Binary semaphore is used to track any threads that are blocked on a // "send" due to lack of free slots.
00071
00073
          m_clSendSem.Init(0, 1);
00074 #endif
00075 }
00076
00077 //
00078 #if KERNEL_USE_AUTO_ALLOC
00079 Mailbox* Mailbox::Init(uint16_t u16BufferSize_, uint16_t u16ElementSize_)
00080 {
00081
          Mailbox* pclNew = (Mailbox*)AutoAlloc::Allocate(sizeof(
     Mailbox));
00082
                   pvBuffer = AutoAlloc::Allocate(u16BufferSize);
         void*
          pclNew->Init(pvBuffer, u16BufferSize_, u16ElementSize_);
00083
00084
          return pclNew;
00085
00086 #endif
00087
00088 //-
00089 void Mailbox::Receive(void* pvData_)
00090 {
```

19.38 mailbox.cpp 211

```
00091
         KERNEL_ASSERT (pvData_);
00092
00093 #if KERNEL_USE_TIMEOUTS
00094
         Receive_i(pvData_, false, 0);
00095 #else
        Receive_i(pvData_, false);
00096
00097 #endif
00098 }
00099
00100 #if KERNEL_USE_TIMEOUTS
00101 //----
00102 bool Mailbox::Receive(void* pvData_, uint32_t u32TimeoutMS_)
00103 {
00104
         KERNEL_ASSERT (pvData_);
00105
         return Receive_i(pvData_, false, u32TimeoutMS_);
00106 }
00107 #endif
00108
00109 //---
00110 void Mailbox::ReceiveTail(void* pvData_)
00111 {
00112
         KERNEL_ASSERT (pvData_);
00113
00114 #if KERNEL_USE_TIMEOUTS
00115
         Receive_i (pvData_, true, 0);
00116 #else
00117
        Receive_i (pvData_, true);
00118 #endif
00119 }
00120
00121 #if KERNEL USE TIMEOUTS
00122 //-
00123 bool Mailbox::ReceiveTail(void* pvData_, uint32_t u32TimeoutMS_)
00124 {
00125
         KERNEL_ASSERT (pvData_);
         return Receive_i(pvData_, true, u32TimeoutMS_);
00126
00127 }
00128 #endif
00129
00130 //---
00131 bool Mailbox::Send(void* pvData_)
00132 {
         KERNEL_ASSERT (pvData_);
00133
00134
00135 #if KERNEL_USE_TIMEOUTS
00136
         return Send_i(pvData_, false, 0);
00137 #else
00138
       return Send_i(pvData_, false);
00139 #endif
00140 }
00141
00142 //----
00143 bool Mailbox::SendTail(void* pvData_)
00144 {
         KERNEL_ASSERT (pvData_);
00145
00146
00147 #if KERNEL_USE_TIMEOUTS
00148
         return Send_i (pvData_, true, 0);
00149 #else
00150
         return Send_i(pvData_, true);
00151 #endif
00152 }
00153
00154 #if KERNEL_USE_TIMEOUTS
00155 //--
00156 bool Mailbox::Send(void* pvData_, uint32_t u32TimeoutMS_)
00157 {
00158
         KERNEL ASSERT (pvData );
00159
00160
         return Send_i (pvData_, false, u32TimeoutMS_);
00161 }
00162
00163 //--
00164 bool Mailbox::SendTail(void* pvData_, uint32_t u32TimeoutMS_)
00165 {
00166
         KERNEL_ASSERT (pvData_);
00167
00168
         return Send_i(pvData_, true, u32TimeoutMS_);
00169 }
00170 #endif
00171
00172 //-
00173 #if KERNEL_USE_TIMEOUTS
00174 bool Mailbox::Send_i(const void* pvData_, bool bTail_, uint32_t u32TimeoutMS_)
00175 #else
00176 bool Mailbox::Send_i(const void* pvData_, bool bTail_)
00177 #endif
```

```
00178 {
00179
         const void* pvDst = NULL;
00180
                     = false;
00181
         bool bRet
         bool bSchedState = Scheduler::SetScheduler(false);
00182
00183
00184 #if KERNEL_USE_TIMEOUTS
00185
         bool bBlock = false;
00186
         bool bDone = false;
         while (!bDone) {
    // Try to claim a slot first before resorting to blocking.
00187
00188
00189
             if (bBlock) {
00190
                 bDone = true;
00191
                 Scheduler::SetScheduler(bSchedState);
00192
                 m_clSendSem.Pend(u32TimeoutMS_);
00193
                 Scheduler::SetScheduler(false);
00194
00195 #endif
00196
00197
             CS_ENTER();
00198
             // Ensure we have a free slot before we attempt to write data
00199
             if (m_u16Free != 0u) {
00200
                 m_u16Free--;
00201
00202
                 if (bTail_) {
                    pvDst = GetTailPointer();
00204
                     MoveTailBackward();
00205
                 } else {
00206
                    MoveHeadForward();
                     pvDst = GetHeadPointer();
00207
00208
00209
                 bRet = true;
00210 #if KERNEL_USE_TIMEOUTS
00211
                 bDone = true;
00212 #endif
00213
00214 #if KERNEL_USE_TIMEOUTS
00215 else if (u32TimeoutMS_ != 0u) {
00216
                bBlock = true;
00217
             } else {
00218
                bDone = true;
             }
00219
00220 #endif
00221
00222
            CS_EXIT();
00223
00224 #if KERNEL_USE_TIMEOUTS
00225
00226 #endif
00227
00228
         // Copy data to the claimed slot, and post the counting semaphore
00229
00230
             CopyData(pvData_, pvDst, m_u16ElementSize);
00231
00232
00233
         Scheduler::SetScheduler(bSchedState);
00235
           m_clRecvSem.Post();
00236
         }
00237
00238
00239
         return bRet;
00240 }
00241
00242 //---
00243 #if KERNEL_USE_TIMEOUTS
00244 bool Mailbox::Receive_i(const void* pvData_, bool bTail_, uint32_t u32WaitTimeMS_)
00245 #else
00246 void Mailbox::Receive_i(const void* pvData_, bool bTail_)
00247 #endif
00248 {
00249
         const void* pvSrc;
00250
00251 #if KERNEL_USE_TIMEOUTS
       if (!m_clRecvSem.Pend(u32WaitTimeMS_)) {
00252
             // Failed to get the notification from the counting semaphore in the
             // time allotted. Bail.
00254
00255
             return false;
00256
00257 #else
        m clRecvSem.Pend();
00258
00259 #endif
00260
00261
         // Disable the scheduler while we do this -- this ensures we don't have
00262
         // if multiple writes occur during reads, etc.
00263
00264
         bool bSchedState = Scheduler::SetScheduler(false);
```

```
00265
00266
          // Update the head/tail indexes, and get the associated data pointer for
00267
          // the read operation.
00268
          CS_ENTER();
00269
00270
         m_u16Free++;
00271
         if (bTail_)
00272
              MoveTailForward();
              pvSrc = GetTailPointer();
00273
00274
00275
              pvSrc = GetHeadPointer();
00276
              MoveHeadBackward():
00277
          }
00278
00279
          CS_EXIT();
00280
00281
          CopyData(pvSrc, pvData_, m_u16ElementSize);
00282
00283
          Scheduler::SetScheduler(bSchedState);
00284
00285 #if KERNEL_USE_TIMEOUTS
00286
          // Unblock a thread waiting for a free slot to send to
00287
         m_clSendSem.Post();
00288
00289
          return true;
00290 #endif
00291 }
00292
00293 #endif
```

19.39 /media/usb/project/github/Mark3/kernel/message.cpp File Reference

Inter-thread communications via message passing.

```
#include "kerneltypes.h"
#include "mark3cfg.h"
#include "message.h"
#include "threadport.h"
#include "dbg_file_list.h"
#include "buffalogger.h"
#include "kerneldebug.h"
```

19.39.1 Detailed Description

Inter-thread communications via message passing.

Definition in file message.cpp.

19.40 message.cpp

```
00002
00003
00004
00005
00006
00007
00008
00009 -- [Mark3 Realtime Platform] -
00010
00011 Copyright (c) 2012 - 2017 Funkenstein Software Consulting, all rights reserved.
00012 See license.txt for more information
00022 #include "kerneltypes.h"
00023 #include "mark3cfg.h"
00024
00025 #include "message.h"
00026 #include "threadport.h"
00027
00028 #define _CAN_HAS_DEBUG
```

```
00029 //--[Autogenerated - Do Not Modify]-----
00030 #include "dbg_file_list.h"
00031 #include "buffalogger.h"
00032 #if defined(DBG_FILE)
00033 #error "Debug logging file token already defined! Bailing."
00034 #else
00035 #define DBG_FILE _DBG___KERNEL_MESSAGE_CPP
00036 #endif
00037 //--[End Autogenerated content]-----
00038 #include "kerneldebug.h"
00039
00040 #if KERNEL_USE_MESSAGE
00041
00042 #if KERNEL_USE_TIMEOUTS
00043 #include "timerlist.h"
00044 #endif
00045
                  GlobalMessagePool::m_aclMessagePool[
00046 Message
      GLOBAL_MESSAGE_POOL_SIZE];
00047 MessagePool GlobalMessagePool::m_clPool;
00048
00049 //--
00050 void MessagePool::Init()
00051 {
00052
          m_clList.Init();
00053 }
00054
00055 //--
00056 void MessagePool::Push(Message* pclMessage_)
00057 {
00058
          KERNEL_ASSERT (pclMessage_);
00059
00060
          CS_ENTER();
00061
00062
          m_clList.Add(pclMessage_);
00063
00064
          CS EXIT();
00065 }
00066
00067 //---
00068 Message* MessagePool::Pop()
00069 {
00070
          Message* pclRet:
00071
          CS_ENTER();
00072
00073
          pclRet = static_cast<Message*>(m_clList.GetHead());
00074
          if (0 != pclRet) {
00075
              m_clList.Remove(static_cast<LinkListNode*>(pclRet));
00076
          }
00077
00078
          CS_EXIT();
00079
          return pclRet;
00080 }
00081
00082 //----
00083 Message* MessagePool::GetHead()
00085
          return static_cast<Message*>(m_clList.GetHead());
00086 }
00087
00088 //---
00089 void GlobalMessagePool::Init()
00090 {
00091
          uint8 t i;
00092
          GlobalMessagePool::m_clPool.Init();
          for (i = 0; i < GLOBAL_MESSAGE_POOL_SIZE; i++) {</pre>
00093
00094
              GlobalMessagePool::m_aclMessagePool[i].Init();
              {\tt GlobalMessagePool::m\_clPool.Push(\&(GlobalMessagePool::m\_aclMessagePool[i]));}
00095
00096
          }
00097 }
00098
00099 //--
00100 void GlobalMessagePool::Push(Message* pclMessage_)
00101 {
00102
          m clPool.Push (pclMessage );
00103 }
00104
00105 //--
00106 Message* GlobalMessagePool::Pop()
00107 {
00108
          return m_clPool.Pop();
00109 }
00110
00111 //-
00112 Message* GlobalMessagePool::GetHead()
00113 {
00114
          return m clPool.GetHead();
```

19.40 message.cpp 215

```
00115 }
00116
00117 //--
00118 MessagePool* GlobalMessagePool::GetPool()
00119 {
00120
         return &m clPool:
00121 }
00122
00123 //--
00124 void MessageQueue::Init()
00125 {
00126
         m clSemaphore.Init(0, GLOBAL MESSAGE POOL SIZE);
00127 }
00128
00129 //----
00130 Message* MessageQueue::Receive()
00131 {
00132 #if KERNEL_USE_TIMEOUTS
         return Receive_i(0);
00133
00134 #else
00135
        return Receive_i();
00136 #endif
00137 }
00138
00139 //-
00140 #if KERNEL_USE_TIMEOUTS
00141 Message* MessageQueue::Receive(uint32_t u32TimeWaitMS_)
00142 {
00143
          return Receive_i(u32TimeWaitMS_);
00144 }
00145 #endif
00146
00147 //----
00148 #if KERNEL_USE_TIMEOUTS
00149 Message* MessageQueue::Receive_i(uint32_t u32TimeWaitMS_)
00150 #else
00151 Message* MessageOueue::Receive i(void)
00152 #endif
00153 {
00154
         Message* pclRet;
00155
00156 // Block the current thread on the counting semaphore
00157 #if KERNEL_USE_TIMEOUTS
       if (!m_clSemaphore.Pend(u32TimeWaitMS_)) {
00158
00159
             return NULL;
00160
00161 #else
00162
       m_clSemaphore.Pend();
00163 #endif
00164
00165
         CS_ENTER();
00166
00167
         // Pop the head of the message queue and return it
00168
         pclRet = static_cast<Message*>(m_clLinkList.GetHead());
         m_clLinkList.Remove(static_cast<Message*>(pclRet));
00169
00170
00171
         CS_EXIT();
00172
00173
         return pclRet;
00174 }
00175
00176 //-
00177 void MessageQueue::Send(Message* pclSrc_)
00178 {
00179
         KERNEL_ASSERT (pclSrc_);
00180
00181
         CS ENTER();
00182
00183
         // Add the message to the head of the linked list
00184
         m_clLinkList.Add(pclSrc_);
00185
00186
         // Post the semaphore, waking the blocking thread for the queue.
00187
         m_clSemaphore.Post();
00188
00189
         CS EXIT();
00190 }
00191
00192 //---
00193 uint16_t MessageQueue::GetCount()
00194 {
00195
         return m_clSemaphore.GetCount();
00196 }
00197 #endif // KERNEL_USE_MESSAGE
```

19.41 /media/usb/project/github/Mark3/kernel/mutex.cpp File Reference

Mutual-exclusion object.

```
#include "kerneltypes.h"
#include "mark3cfg.h"
#include "blocking.h"
#include "mutex.h"
#include "dbg_file_list.h"
#include "buffalogger.h"
#include "kerneldebug.h"
```

19.41.1 Detailed Description

Mutual-exclusion object.

Definition in file mutex.cpp.

19.42 mutex.cpp

```
00001 /*
00002
00003
00004
00005
00006
00007
80000
00009 -- [Mark3 Realtime Platform]
00010
00011 Copyright (c) 2012 - 2017 Funkenstein Software Consulting, all rights reserved.
00012 See license.txt for more information
00013 ========
00020 #include "kerneltypes.h"
00021 #include "mark3cfg.h"
00022
00023 #include "blocking.h"
00024 #include "mutex.h"
00025
00026 #define CAN HAS DEBUG
00027 //--[Autogenerated - Do Not Modify]--
00028 #include "dbg_file_list.h"
00029 #include "buffalogger.h"
00030 #if defined(DBG_FILE)
00031 \#error "Debug logging file token already defined! Bailing."
00032 #else
00033 #define DBG_FILE _DBG___KERNEL_MUTEX_CPP
00034 #endif
00035 //--[End Autogenerated content]-----
00036
00037 #include "kerneldebug.h"
00038
00039 #if KERNEL_USE_MUTEX
00041 #if KERNEL_USE_TIMEOUTS
00042
00043 //--
00054 void TimedMutex_Calback(Thread* pclOwner_, void* pvData_)
00055 {
00056
          Mutex* pclMutex = static_cast<Mutex*>(pvData_);
00057
00058
          // Indicate that the semaphore has expired on the thread
00059
          pclOwner_->SetExpired(true);
00060
00061
          // Wake up the thread that was blocked on this semaphore.
00062
          pclMutex->WakeMe(pclOwner_);
00063
00064
           if (pclOwner_->GetCurPriority() >= Scheduler::GetCurrentThread
      () ->GetCurPriority()) {
00065
               Thread::Yield();
00066
00067
00068 //-
```

19.42 mutex.cpp 217

```
00069 Mutex::~Mutex()
00070 {
00071
          // If there are any threads waiting on this object when it goes out
00072
          \ensuremath{//} of scope, set a kernel panic.
00073
          if (m clBlockList.GetHead() != 0)
00074
              Kernel::Panic(PANIC_ACTIVE_MUTEX_DESCOPED);
00075
00076 }
00077
00078 //---
00079 void Mutex::WakeMe(Thread* pclOwner_)
00080 {
00081
          // Remove from the semaphore waitlist and back to its ready list.
00082
          UnBlock(pclOwner_);
00083 }
00084
00085 #endif
00086
00088 uint8_t Mutex::WakeNext()
00089 {
00090
          Thread* pclChosenOne = NULL;
00091
00092
          // Get the highest priority waiter thread
00093
         pclChosenOne = m_clBlockList.HighestWaiter();
00094
00095
          // Unblock the thread
00096
         UnBlock (pclChosenOne);
00097
00098
          // The chosen one now owns the mutex
00099
          m_pclOwner = pclChosenOne;
00100
00101
          // Signal a context switch if it's a greater than or equal to the current priority
00102
          if (pclChosenOne->GetCurPriority() >=
     Scheduler::GetCurrentThread()->GetCurPriority()) {
00103
             return 1;
00104
00105
          return 0;
00106 }
00107
00108 //----
00109 void Mutex::Init()
00110 {
00111
          // Cannot re-init a mutex which has threads blocked on it
00112 #if KERNEL_EXTRA_CHECKS
00113
         KERNEL_ASSERT(!m_clBlockList.GetHead());
00114 #endif
00115
00116
          // Reset the data in the mutex
          m_bReady = true; // The mutex is free.
m_u8MaxPri = 0; // Set the maximum priority inheritence state
00117
00118
00119
          m_pclOwner = NULL; // Clear the mutex owner
          m_u8Recurse = 0;
                              // Reset recurse count
00120
00121
00122 #if KERNEL_EXTRA_CHECKS
00123
        SetInitialized();
00124 #endif
00125 }
00126
00127 //----
00128 #if KERNEL USE TIMEOUTS
00129 bool Mutex::Claim_i (uint32_t u32WaitTimeMS_)
00130 #else
00131 void Mutex::Claim_i (void)
00132 #endif
00133 {
00134 #if KERNEL_EXTRA_CHECKS
         KERNEL_ASSERT(IsInitialized());
00135
00136 #endif
00138
          KERNEL_TRACE_1("Claiming Mutex, Thread %d", (uint16_t)
     g_pclCurrent->GetID());
00139
00140 #if KERNEL USE TIMEOUTS
          Timer clTimer;
00141
       bool bUseTimer = false;
00142
00143 #endif
00144
00145
          // Disable the scheduler while claiming the mutex - we're dealing with all
00146
          // sorts of private thread data, can't have a thread switch while messing
          // with internal data structures.
00147
00148
          Scheduler::SetScheduler(false);
00149
00150
          // Check to see if the mutex is claimed or not
00151
          if (static_cast<int>(m_bReady) != 0) {
              // Mutex isn't claimed, claim it.
m_bReady = false;
00152
00153
              m bReadv
```

```
m_u8Recurse = 0;
              m_u8MaxPri = g_pclCurrent->GetPriority();
m_pclOwner = g_pclCurrent;
00155
00156
00157
              Scheduler::SetScheduler(true);
00158
00159
00160 #if KERNEL_USE_TIMEOUTS
00161
              return true;
00162 #else
00163
              return;
00164 #endif
00165
        }
00166
00167
         // If the mutex is already claimed, check to see if this is the owner thread,
00168
          // since we allow the mutex to be claimed recursively.
         if (g_pclCurrent == m_pclOwner) {
   // Ensure that we haven't exceeded the maximum recursive-lock count
00169
00170
00171
              KERNEL_ASSERT((m_u8Recurse < 255));</pre>
00172
              m_u8Recurse++;
00173
00174
              // Increment the lock count and bail
00175
              Scheduler::SetScheduler(true);
00176 #if KERNEL_USE_TIMEOUTS
00177
              return true;
00178 #else
00179
              return;
00180 #endif
00181
00182
00183 \/\/ The mutex is claimed already - we have to block now. Move the
00184 // current thread to the list of threads waiting on the mutex.
00185 #if KERNEL_USE_TIMEOUTS
00186
        if (u32WaitTimeMS_ != 0u) {
00187
              g_pclCurrent->SetExpired(false);
00188
              clTimer.Init();
              clTimer.Start(false, u32WaitTimeMS_, (TimerCallback_t)TimedMutex_Calback, (void*)
00189
     this);
00190
              bUseTimer = true;
00191
00192 #endif
00193
          BlockPriority(g_pclCurrent);
00194
          \ensuremath{//} Check if priority inheritence is necessary. We do this in order
00195
          // to ensure that we don't end up with priority inversions in case
00196
00197
          // multiple threads are waiting on the same resource.
00198
          if (m_u8MaxPri <= g_pclCurrent->GetPriority()) {
00199
              m_u8MaxPri = g_pclCurrent->GetPriority();
00200
00201
              Thread* pclTemp = static_cast<Thread*>(m_clBlockList.GetHead());
              while (pclTemp != 0) {
00202
                  pclTemp->InheritPriority(m_u8MaxPri);
00203
00204
                  if (pclTemp == static_cast<Thread*>(m_clBlockList.GetTail())) {
00205
                       break;
00206
00207
                  pclTemp = static_cast<Thread*>(pclTemp->GetNext());
00208
00209
              m_pclOwner->InheritPriority(m_u8MaxPri);
00210
          }
00211
          // Done with thread data -reenable the scheduler
00212
00213
          Scheduler::SetScheduler(true);
00214
00215
          // Switch threads if this thread acquired the mutex
00216
          Thread::Yield();
00217
00218 #if KERNEL_USE_TIMEOUTS
00219
       if (bUseTimer) {
00220
             clTimer.Stop();
00221
              return (static_cast<int>(g_pclCurrent->GetExpired()) == 0);
00222
         }
00223
          return true;
00224 #endif
00225 }
00226
00227 //--
00228 void Mutex::Claim(void)
00229 {
00230 #if KERNEL_USE_TIMEOUTS
00231
         Claim_i(0);
00232 #else
        Claim_i();
00233
00234 #endif
00235 }
00236
00237 //----
00238 #if KERNEL USE TIMEOUTS
00239 bool Mutex::Claim (uint32_t u32WaitTimeMS_)
```

```
00240 {
00241
          return Claim_i (u32WaitTimeMS_);
00242 }
00243 #endif
00244
00245 //--
00246 void Mutex::Release()
00247 {
00248 #if KERNEL_EXTRA_CHECKS
00249
        KERNEL_ASSERT(IsInitialized());
00250 #endif
00251
         KERNEL_TRACE_1("Releasing Mutex, Thread %d", (uint16_t)
00252
     g_pclCurrent->GetID());
00253
00254
         bool bSchedule = false;
00255
00256
          // Disable the scheduler while we deal with internal data structures.
         Scheduler::SetScheduler(false);
00258
00259
          // This thread had better be the one that owns the mutex currently...
00260
         KERNEL_ASSERT((g_pclCurrent == m_pclOwner));
00261
00262
         // If the owner had claimed the lock multiple times, decrease the lock
00263
         // count and return immediately.
         if (m_u8Recurse != 0u) {
00264
00265
             m_u8Recurse--;
00266
             Scheduler::SetScheduler(true);
00267
             return;
00268
         }
00269
00270
         // Restore the thread's original priority
          if (g_pclCurrent->GetCurPriority() != g_pclCurrent->
     GetPriority()) {
00272
             g_pclCurrent->SetPriority(g_pclCurrent->
     GetPriority());
00273
              // In this case, we want to reschedule
00275
             bSchedule = true;
00276
00277
00278
         // No threads are waiting on this semaphore?
         if (m_clBlockList.GetHead() == NULL) {
00279
00280
             // Re-initialize the mutex to its default values
             m_bReady = true;
m_u8MaxPri = 0;
00282
             m_pclOwner = NULL;
00283
         } else {
// Wake the highest priority Thread pending on the mutex
if (WakeNeut () l= 0u) {
00284
00285
00286
             if (WakeNext() != Ou) {
00287
                  // Switch threads if it's higher or equal priority than the current thread
00288
00289
             }
00290
        }
00291
00292
         // Must enable the scheduler again in order to switch threads.
         Scheduler::SetScheduler(true);
00294
         if (bSchedule) {
00295
             // Switch threads if a higher-priority thread was woken
00296
              Thread::Yield();
00297
         }
00298 }
00299
00300 #endif // KERNEL_USE_MUTEX
```

19.43 /media/usb/project/github/Mark3/kernel/notify.cpp File Reference

Lightweight thread notification - blocking object.

```
#include "mark3cfg.h"
#include "notify.h"
#include "mark3.h"
#include "kerneldebug.h"
#include "dbg_file_list.h"
#include "buffalogger.h"
```

19.43.1 Detailed Description

Lightweight thread notification - blocking object.

Definition in file notify.cpp.

19.44 notify.cpp

```
00001
00002
00003
00004
00005
00006
00007
80000
00009 -- [Mark3 Realtime Platform] ---
00010
00011 Copyright (c) 2012 - 2017 Funkenstein Software Consulting, all rights reserved.
00012 See license.txt for more information
00013 ====
00022 #include "mark3cfg.h'
00023 #include "notify.h"
00024 #include "mark3.h"
00025 #include "kerneldebug.h"
00026
00027 #define _CAN_HAS_DEBUG
00028 //--[Autogenerated - Do Not Modify]------
00029 #include "dbg_file_list.h"
00030 #include "buffalogger.h'
00031 #if defined(DBG_FILE)
00032 #error "Debug logging file token already defined! Bailing."
00033 #else
00034 #define DBG_FILE _DBG___KERNEL_NOTIFY_CPP
00035 #endif
00036 //--[End Autogenerated content]-----
00037
00038 #if KERNEL_USE_NOTIFY
00039
00040 #if KERNEL_USE_TIMEOUTS
00041 //--
00042 void TimedNotify_Callback(Thread* pclOwner_, void* pvData_)
00043 {
00044
          Notify* pclNotify = static_cast<Notify*>(pvData_);
00045
00046
          // Indicate that the semaphore has expired on the thread
00047
          pclOwner_->SetExpired(true);
00048
00049
          // Wake up the thread that was blocked on this semaphore.
00050
          pclNotify->WakeMe(pclOwner_);
00051
00052
           if (pclOwner_->GetCurPriority() >= Scheduler::GetCurrentThread
      ()->GetCurPriority()) {
00053
              Thread::Yield();
00054
00055 }
00056 #endif
00057 //--
00058 Notify::~Notify()
00059 {
          // If there are any threads waiting on this object when it goes out // of scope, set a kernel panic.
00060
00061
00062
          if (m_clBlockList.GetHead() != 0)
00063
              Kernel::Panic(PANIC_ACTIVE_NOTIFY_DESCOPED);
00064
00065 }
00066
00067 //-
00068 void Notify::Init(void)
00069 {
00070 #if KERNEL_EXTRA_CHECKS
          KERNEL_ASSERT(!m_clBlockList.GetHead());
00071
00072
          SetInitialized():
00073 #endif
00074
          m_bPending = false;
00075 }
00076
00077 //---
00078 void Notify::Signal(void)
00079 {
00080 #if KERNEL_EXTRA_CHECKS
00081
          KERNEL_ASSERT(IsInitialized());
```

19.44 notify.cpp 221

```
00082 #endif
00083
00084
          bool bReschedule = false;
00085
00086
          CS ENTER();
00087
          Thread* pclCurrent = (Thread*)m_clBlockList.GetHead();
          if (pclCurrent == 0) {
00089
              m_bPending = true;
00090
          } else {
              while (pclCurrent != NULL) {
00091
00092
                  UnBlock (pclCurrent);
                  if (!bReschedule && (pclCurrent->GetCurPriority() >=
00093
     Scheduler::GetCurrentThread() ->GetCurPriority())) {
00094
                     bReschedule = true;
00095
00096
                  pclCurrent = (Thread*)m_clBlockList.GetHead();
00097
00098
             m_bPending = false;
00099
00100
          CS_EXIT();
00101
          if (bReschedule) {
00102
             Thread::Yield();
00103
00104
00105 }
00106
00107 //---
00108 void Notify::Wait(bool* pbFlag_)
00109 {
00110 #if KERNEL_EXTRA_CHECKS
00111
        KERNEL_ASSERT(IsInitialized());
00112 #endif
00113
00114
          bool bEarlyExit = false;
00115
          CS_ENTER();
          if (!m_bPending) {
00116
00117
              Block(g_pclCurrent);
00118
              if (pbFlag_ != 0) {
00119
                  *pbFlag_ = false;
00120
00121
          } else {
             m_bPending = false;
bEarlyExit = true;
00122
00123
00124
00125
          CS_EXIT();
00126
00127
          if (bEarlyExit) {
         return;
00128
00129
00130
00131
          Thread::Yield();
00132
          if (pbFlag_ != 0) {
00133
             *pbFlag_ = true;
00134
00135 }
00136
00138 #if KERNEL_USE_TIMEOUTS
00139 bool Notify::Wait(uint32_t u32WaitTimeMS_, bool* pbFlag_)
00140 {
00141 #if KERNEL_EXTRA_CHECKS
        KERNEL_ASSERT(IsInitialized());
00142
00143 #endif
       bool bUseTimer = false;
bool bEarlyExit = false;
00144
00145
00146
         Timer clNotifyTimer;
00147
00148
          CS_ENTER();
00149
          if (!m_bPending) {
              if (u32WaitTimeMS_ != 0u) {
00150
00151
                  bUseTimer = true;
00152
                  g_pclCurrent->SetExpired(false);
00153
00154
                  clNotifvTimer.Init();
00155
                  clNotifyTimer.Start(false, u32WaitTimeMS_, TimedNotify_Callback, (void*)this);
00156
00157
00158
              Block(g_pclCurrent);
00159
              if (pbFlag_ != 0) {
00160
                  *pbFlag_ = false;
00161
00162
00163
          } else {
00164
              m_bPending = false;
00165
              bEarlyExit = true;
00166
00167
          CS_EXIT();
```

```
00168
00169
          if (bEarlyExit) {
00170
              return true;
00171
00172
00173
          Thread::Yield();
00174
00175
00176
             clNotifyTimer.Stop();
00177
              return (static_cast<int>(g_pclCurrent->GetExpired()) == 0);
00178
          }
00179
00180
          if (pbFlag_ != 0) {
00181
              *pbFlag_ = true;
00182
          }
00183
00184
          return true;
00185 }
00186 #endif
00188 void Notify::WakeMe(Thread* pclChosenOne_)
00189 {
00190 #if KERNEL_EXTRA_CHECKS
00191
         KERNEL_ASSERT(IsInitialized());
00192 #endif
00193
         UnBlock (pclChosenOne_);
00194 }
00195
00196 #endif
```

19.45 /media/usb/project/github/Mark3/kernel/priomap.cpp File Reference

Priority map data structure.

```
#include "mark3.h"
#include "priomap.h"
#include "threadport.h"
#include <stdint.h>
#include <stdbool.h>
```

19.45.1 Detailed Description

Priority map data structure.

Definition in file priomap.cpp.

19.46 priomap.cpp

```
00001 /*=
00002
00003
00004
00005
00006
00007
00008
00009 -- [Mark3 Realtime Platform] -
00010
00011 Copyright (c) 2012 - 2017 Funkenstein Software Consulting, all rights reserved.
00012 See license.txt for more information
00013 =======
00019 #include "mark3.h"
00020 #include "priomap.h"
00021 #include "threadport.h"
00022
00023 #include <stdint.h>
00024 #include <stdbool.h>
00025
00026 //---
00027 static inline uint8_t priority_from_bitmap(PORT_PRIO_TYPE uXPrio_)
00028 {
```

19.46 priomap.cpp 223

```
00029 #if HW_CLZ
00030
         // Support hardware-accelerated Count-leading-zeros instruction
00031
          uint8_t rc = PRIO_MAP_BITS - CLZ(uXPrio_);
00032
          return rc;
00033 #else
00034
         // Default un-optimized count-leading zeros operation
          PORT_PRIO_TYPE uXMask = (1 << (PRIO_MAP_BITS - 1));</pre>
00036
          uint8_t
                    u8Zeros = 0;
00037
          while (uXMask) {
   if (uXMask & uXPrio_) {
00038
00039
                 return (PRIO_MAP_BITS - u8Zeros);
00040
00041
00042
00043
              uXMask >>= 1;
00044
              u8Zeros++;
00045
          }
00046
          return 0;
00047 #endif
00048 }
00049
00050 //----
00051 PriorityMap::PriorityMap()
00052 {
00053 #if PRIO_MAP_MULTI_LEVEL
       m_uxPriorityMapL2 = 0;
for (int i = 0; i < PRIO_MAP_NUM_WORDS; i++) {</pre>
00055
00056
             m_auXPriorityMap[i] = 0;
00057
00058 #else
00059
       m_uXPriorityMap = 0;
00060 #endif
00061 }
00062
00063 //---
00064 void PriorityMap::Set(PORT_PRIO_TYPE uXPrio_)
00065 {
          PORT_PRIO_TYPE uXPrioBit = PRIO_BIT(uXPrio_);
00067 #if PRIO_MAP_MULTI_LEVEL
00068
       PORT_PRIO_TYPE uXWordIdx = PRIO_MAP_WORD_INDEX(uXPrio_);
00069
          m_auXPriorityMap[uXWordIdx] |= (1 << uXPrioBit);</pre>
00070
00071
          m_uXPriorityMapL2 |= (1 << uXWordIdx);</pre>
00072 #else
00073
        m_uXPriorityMap |= (1 << uXPrioBit);</pre>
00074 #endif
00075 }
00076
00077 //---
00078 void PriorityMap::Clear(PORT_PRIO_TYPE uXPrio_)
00079 {
00080
          PORT_PRIO_TYPE uXPrioBit = PRIO_BIT(uXPrio_);
00081 #if PRIO_MAP_MULTI_LEVEL
00082
       PORT_PRIO_TYPE uXWordIdx = PRIO_MAP_WORD_INDEX(uXPrio_);
00083
00084
          m auXPriorityMap[uXWordIdx] &= ~(1 << uXPrioBit);</pre>
          if (!m_auXPriorityMap[uXWordIdx]) {
00085
00086
              m_uXPriorityMapL2 &= ~(1 << uXWordIdx);</pre>
00087
00088 #else
         m_uXPriorityMap &= ~(1 << uXPrioBit);</pre>
00089
00090 #endif
00091 }
00092
00093 //---
00094 PORT_PRIO_TYPE PriorityMap::HighestPriority(void)
00095 {
00096 #if PRIO MAP MULTI LEVEL
00097
         PORT_PRIO_TYPE uXMapIdx = priority_from_bitmap(m_uXPriorityMapL2);
00098
          if (!uXMapIdx) {
00099
              return 0;
00100
          uXMapIdx--;
PORT_PRIO_TYPE uXPrio = priority_from_bitmap(m_auXPriorityMap[uXMapIdx]);
00101
00102
          uXPrio += (uXMapIdx * PRIO_MAP_BITS);
00103
00104 #else
00105
         PORT_PRIO_TYPE uXPrio = priority_from_bitmap(m_uXPriorityMap);
00106 #endif
00107
          return uXPrio;
00108 }
```

19.47 /media/usb/project/github/Mark3/kernel/profile.cpp File Reference

Code profiling utilities.

```
#include "kerneltypes.h"
#include "mark3cfg.h"
#include "profile.h"
#include "kernelprofile.h"
#include "threadport.h"
#include "dbg_file_list.h"
#include "buffalogger.h"
#include "kerneldebug.h"
```

19.47.1 Detailed Description

Code profiling utilities.

Definition in file profile.cpp.

19.48 profile.cpp

```
00001
00002
00003
00004
00005
00006
00007
00009
     --[Mark3 Realtime Platform]-
00010
00011 Copyright (c) 2012 - 2017 Funkenstein Software Consulting, all rights reserved.
00012 See license.txt for more information
00013 ==========
00021 #include "kerneltypes.h"
00022 #include "mark3cfg.h"
00023 #include "profile.h"
00024 #include "kernelprofile.h"
00025 #include "threadport.h"
00026
00027 #define _CAN_HAS_DEBUG
00028 //--[Autogenerated - Do Not Modify]-----
00029 #include "dbg_file_list.h"
00030 #include "buffalogger.h"
00031 #if defined(DBG FILE)
00032 #error "Debug logging file token already defined! Bailing."
00033 #else
00034 #define DBG_FILE _DBG___KERNEL_PROFILE_CPP
00035 #endif
00036 //--[End Autogenerated content]------
00037
00038 #include "kerneldebug.h"
00039
00040 #if KERNEL_USE_PROFILER
00041
00042 //---
00043 void ProfileTimer::Init()
00044 {
00045
         m_u32Cumulative
                               = 0;
         m_u32CurrentIteration = 0;
00046
00047
         m_u16Iterations
00048
         m_bActive
                                = false;
00049 }
00050
00051 //--
00052 void ProfileTimer::Start()
00053 {
00054
          if (!m_bActive) {
00055
              CS_ENTER();
00056
             m_u32CurrentIteration = 0;
00057
             m_u32InitialEpoch
                                   = Profiler::GetEpoch();
00058
             m_u16Initial
                                    = Profiler::Read();
00059
              CS_EXIT();
```

```
m_bActive = true;
00061
00062 }
00063
00064 //----
00065 void ProfileTimer::Stop()
00066 {
00067
          if (m_bActive) {
          uint16_t u16Final;
00068
00069
              uint32_t u32Epoch;
             CS_ENTER();
00070
            ulSFinal = Profiler::Read();
u32Epoch = Profiler::GetEpoch();
// Compute total for current iteration...
00071
00072
00073
00074
              m_u32CurrentIteration = ComputeCurrentTicks(u16Final,
00076
              m_u16Iterations++;
             CS_EXIT();
             m_bActive = false;
00078
00079
00080 }
00081
00082 //---
00083 uint32_t ProfileTimer::GetAverage()
00085
         return m_u32Cumulative / (uint32_t)m_u16Iterations;
}
          if (m_u16Iterations != 0u) {
00086
00087
00088
          return 0:
00089 }
00090
00091 //----
00092 uint32_t ProfileTimer::GetCurrent()
00093 {
          if (m_bActive) {
00094
         uint16_t u16Current;
uint32_t u32Epoch;
00095
              CS_ENTER();
00097
00098
             u16Current = Profiler::Read();
00099
              u32Epoch = Profiler::GetEpoch();
             CS_EXIT();
00100
              return ComputeCurrentTicks(u16Current, u32Epoch);
00101
00102
00103
          return m_u32CurrentIteration;
00104 }
00105
00106 //-
00107 uint32_t ProfileTimer::ComputeCurrentTicks(uint16_t u16Current_, uint32_t
      u32Epoch_)
00108 {
00109
          uint32_t u32Total;
00110
          uint32_t u320verflows;
00111
          u32Overflows = u32Epoch_ - m_u32InitialEpoch;
00112
00113
00114
        // More than one overflow...
         if (u320verflows > 1)
00115
              u32Total = ((uint32_t)(u32Overflows - 1) * TICKS_PER_OVERFLOW) + (uint32_t)(TICKS_PER_OVERFLOW -
00116
m_u16Initial)
00117
                          + (uint32 t)u16Current;
00118
00119
          ^{\prime\prime} // Only one overflow, or one overflow that has yet to be processed
          else if ((u32Overflows != 0u) || (u16Current_ < m_u16Initial)) {
    u32Total = (uint32_t)(TICKS_PER_OVERFLOW - m_u16Initial) + (uint32_t)u16Current_;</pre>
00120
00121
00122
          // No overflows, none pending.
00123
00124
          else {
00125
            u32Total = (uint32_t) (u16Current_ - m_u16Initial);
00126
00127
00128
          return u32Total;
00129 }
00130
00131 #endif
```

19.49 /media/usb/project/github/Mark3/kernel/public/atomic.h File Reference

Basic Atomic Operations.

```
#include "kerneltypes.h"
#include "mark3cfg.h"
#include "threadport.h"
```

19.49.1 Detailed Description

Basic Atomic Operations.

Definition in file atomic.h.

19.50 atomic.h

```
00001 /*============
00002
00003
00004
00005
00006
00007
00008
00009 -- [Mark3 Realtime Platform] --
00010
00011 Copyright (c) 2012 - 2017 Funkenstein Software Consulting, all rights reserved.
00012 See license.txt for more information
00013 ====
00021 #ifndef __ATOMIC_H
00022 #define __ATOMIC_H_
00023
00024 #include "kerneltypes.h"
00025 #include "mark3cfg.h"
00026 #include "threadport.h"
00027
00028 #if KERNEL USE ATOMIC
00029
00039 class Atomic
00040 {
00041 public:
             static uint8_t Set(uint8_t* pu8Source_, uint8_t u8Val_);
static uint16_t Set(uint16_t* pu16Source_, uint16_t u16Val_);
static uint32_t Set(uint32_t* pu32Source_, uint32_t u32Val_);
00048
00049
00050
00051
             static uint8_t Add(uint8_t* pu8Source_, uint8_t u8Va1_);
static uint16_t Add(uint16_t* pu16Source_, uint16_t u16Va1_);
static uint32_t Add(uint32_t* pu32Source_, uint32_t u32Va1_);
00058
00059
00060
00061
             static uint8_t Sub(uint8_t* pu8Source_, uint8_t u8Val_);
static uint16_t Sub(uint16_t* pu16Source_, uint16_t u16Val_);
00068
00069
00070
             static uint32_t Sub(uint32_t* pu32Source_, uint32_t u32Val_);
00071
00086
             static bool TestAndSet(bool* pbLock);
00087 };
00088
00089 #endif // KERNEL_USE_ATOMIC
00091 #endif //__ATOMIC_H_
```

19.51 /media/usb/project/github/Mark3/kernel/public/autoalloc.h File Reference

Automatic memory allocation for kernel objects.

```
#include <stdint.h>
#include <stdbool.h>
#include "mark3cfg.h"
```

19.51.1 Detailed Description

Automatic memory allocation for kernel objects.

19.52 autoalloc.h 227

Definition in file autoalloc.h.

19.52 autoalloc.h

```
00002
00003
00004
00005
00006
00007
00008
00009 -- [Mark3 Realtime Platform]-
00011 Copyright (c) 2012 - 2017 Funkenstein Software Consulting, all rights reserved.
00012 See license.txt for more information
00013 =========
                         ----- * /
00020 #ifndef __AUTO_ALLOC_H__
00021 #define __AUTO_ALLOC_H_
00023 #include <stdint.h>
00024 #include <stdbool.h>
00025 #include "mark3cfg.h"
00026
00027 #if KERNEL_USE_AUTO_ALLOC
00028 // Forward declaration of kernel objects that can be auotomatically allocated.
00029
00030 #if KERNEL_USE_EVENTFLAG
00031 class EventFlag;
00032 #endif
00033
00034 #if KERNEL_USE_MAILBOX
00035 class Mailbox;
00036 #endif
00037
00038 #if KERNEL_USE_MESSAGE
00039 class Message;
00040 class MessageQueue;
00041 #endif
00042
00043 #if KERNEL_USE_MUTEX
00044 class Mutex;
00045 #endif
00046
00047 #if KERNEL_USE_NOTIFY
00048 class Notify;
00049 #endif
00050
00051 #if KERNEL USE SEMAPHORE
00052 class Semaphore;
00053 #endif
00054
00055 class Thread;
00056
00057 #if KERNEL USE_TIMERS
00058 class Timer;
00059 #endif
00060
00061 class AutoAlloc
00062 {
00063 public:
00070
         static void Init (void);
00071
00082
         static void* Allocate(uint16_t u16Size_);
00083
00084 #if KERNEL_USE_SEMAPHORE
00085
        static Semaphore* NewSemaphore(void);
00086 #endif
00087
00088 #if KERNEL_USE_MUTEX
00089
         static Mutex* NewMutex(void);
00090 #endif
00091
00092 #if KERNEL_USE_EVENTFLAG
00093
        static EventFlag* NewEventFlag(void);
00094 #endif
00095
00096 #if KERNEL_USE_MESSAGE
00097
         static Message*
                             NewMessage(void);
00098
         static MessageQueue* NewMessageQueue(void);
00099 #endif
00100
00101 #if KERNEL_USE_NOTIFY
```

```
static Notify* NewNotify(void);
00103 #endif
00104
00105 #if KERNEL_USE_MAILBOX
00106
         static Mailbox* NewMailbox(void);
00107 #endif
         static Thread* NewThread(void);
00109
00110
00111 #if KERNEL_USE_TIMERS
         static Timer* NewTimer(void);
00112
00113 #endif
00114
00115 private:
00116
       static uint8_t m_au8AutoHeap[AUTO_ALLOC_SIZE]; // Heap memory
00117
         static K_ADDR m_aHeapTop;
00118 }:
00119 #endif
00121 #endif
```

19.53 /media/usb/project/github/Mark3/kernel/public/blocking.h File Reference

Blocking object base class declarations.

```
#include "kerneltypes.h"
#include "mark3cfg.h"
#include "ll.h"
#include "threadlist.h"
```

Classes

· class BlockingObject

Class implementing thread-blocking primatives.

19.53.1 Detailed Description

Blocking object base class declarations.

A Blocking object in Mark3 is essentially a thread list. Any blocking object implementation (being a semaphore, mutex, event flag, etc.) can be built on top of this class, utilizing the provided functions to manipu32ate thread location within the Kernel.

Blocking a thread results in that thread becoming de-scheduled, placed in the blocking object's own private list of threads which are waiting on the object.

Unblocking a thread results in the reverse: The thread is moved back to its original location from the blocking list.

The only difference between a blocking object based on this class is the logic used to determine what consitutes a Block or Unblock condition.

For instance, a semaphore Pend operation may result in a call to the Block() method with the currently-executing thread in order to make that thread wait for a semaphore Post. That operation would then invoke the UnBlock() method, removing the blocking thread from the semaphore's list, and back into the the appropriate thread inside the scheduler.

Care must be taken when implementing blocking objects to ensure that critical sections are used judiciously, otherwise asynchronous events like timers and interrupts could result in non-deterministic and often catastrophic behavior

Definition in file blocking.h.

19.54 blocking.h 229

19.54 blocking.h

```
00002
00003
00004
00005
00006
00007
00008
00009 -- [Mark3 Realtime Platform]-
00010
00011 Copyright (c) 2012 - 2017 Funkenstein Software Consulting, all rights reserved.
00012 See license.txt for more information
00047 #ifndef __BLOCKING_H_
00048 #define __BLOCKING_H_
00049
00050 #include "kerneltypes.h"
00051 #include "mark3cfg.h"
00052
00053 #include "11.h"
00054 #include "threadlist.h"
00055
00056 #if KERNEL_USE_MUTEX || KERNEL_USE_SEMAPHORE || KERNEL_USE_EVENTFLAG
00057
00059 // Cookies used to determine whether or not an object has been initialized
00060 #define BLOCKING_INVALID_COOKIE
                                            (0x3C)
00061 #define BLOCKING_INIT_COOKIE
                                               (0xC3)
00062
00063 class Thread;
00064
00071 class BlockingObject
00072 {
00073 public:
00074 #if KERNEL_EXTRA_CHECKS
         BlockingObject() { m_u8Initialized = BLOCKING_INVALID_COOKIE; }
          ~BlockingObject() { m_u8Initialized = BLOCKING_INVALID_COOKIE; }
00077 #endif
00078
00079 protected:
00100
          void Block(Thread* pclThread_);
00101
00110
          void BlockPriority(Thread* pclThread_);
00111
00123
         void UnBlock(Thread* pclThread_);
00124
00129
          ThreadList m clBlockList;
00130
00131 #if KERNEL_EXTRA_CHECKS
00132
00136
          uint8_t m_u8Initialized;
00137
          void SetInitialized(void) { m u8Initialized = BLOCKING INIT COOKIE; }
00141
00142
00147
          bool IsInitialized(void) { return (m_u8Initialized == BLOCKING_INIT_COOKIE); }
00149 #endif
00150
00151 };
00152
00153 #endif
00154
00155 #endif
```

19.55 /media/usb/project/github/Mark3/kernel/public/buffalogger.h File Reference

Super-efficient, super-secure logging routines.

```
#include <stdint.h>
```

19.55.1 Detailed Description

Super-efficient, super-secure logging routines.

Uses offline processing to ensure performance.

Definition in file buffalogger.h.

19.56 buffalogger.h

```
00001 /
00002
00003
00004
00005
00006
00007
80000
00009 -- [Mark3 Realtime Platform]
00010
00011 Copyright (c) 2012 - 2017 Funkenstein Software Consulting, all rights reserved.
00012 See license.txt for more information
00013 =====
00020 #pragma once
00021 #include <stdint.h>
00022
00023 //----
00024 #define STR1(s) #s
00025 #define STR(s) STR1(s)
00026
00028 #define EMIT_DBG_STRING(str)
00029
00030
              const static volatile char
                                             log_str[] __attribute__((section(".logger")))
        _attribute__((unused)) = str;
              const static volatile uint16_t line_id __attribute__((section(".logger"))) __attribute__((unused))
00032
              const static volatile uint16_t file_id __attribute__((section(".logger"))) __attribute__((unused))
        = DBG_FILE;
00033
              const static volatile uint16_t sync __attribute__((section(".logger"))) __attribute__((unused))
        = 0xCAFE;
00034
         } while (0);
```

19.57 /media/usb/project/github/Mark3/kernel/public/driver.h File Reference

Driver abstraction framework.

```
#include "kerneltypes.h"
#include "mark3cfg.h"
#include "ll.h"
```

Classes

class Driver

Base device-driver class used in hardware abstraction.

class DriverList

List of Driver objects used to keep track of all device drivers in the system.

19.57.1 Detailed Description

Driver abstraction framework.

Driver abstraction framework for Mark3C.

19.58 driver.h 231

19.57.2 Intro

This is the basis of the driver framework. In the context of Mark3, drivers don't necessarily have to be based on physical hardware peripherals. They can be used to represent algorithms (such as random number generators), files, or protocol stacks. Unlike FunkOS, where driver IO is protected automatically by a mutex, we do not use this kind of protection - we leave it up to the driver implementor to do what's right in its own context. This also frees up the driver to implement all sorts of other neat stuff, like sending messages to threads associated with the driver. Drivers are implemented as character devices, with the standard array of posix-style accessor methods for reading, writing, and general driver control.

A global driver list is provided as a convenient and minimal "filesystem" structure, in which devices can be accessed by name.

19.57.3 Driver Design

A device driver needs to be able to perform the following operations: -Initialize a peripheral -Start/stop a peripheral -Handle I/O control operations -Perform various read/write operations

At the end of the day, that's pretty much all a device driver has to do, and all of the functionality that needs to be presented to the developer.

We abstract all device drivers using a base-class which implements the following methods: -Start/Open -Stop/Close -Control -Read -Write

A basic driver framework and API can thus be implemented in five function calls - that's it! You could even reduce that further by handling the initialize, start, and stop operations inside the "control" operation.

19.57.4 Driver API

In C++, we can implement this as a class to abstract these event handlers, with virtual void functions in the base class overridden by the inherited objects.

To add and remove device drivers from the global table, we use the following methods:

```
void DriverList::Add( Driver *pclDriver_);
void DriverList::Remove( Driver *pclDriver_);
```

DriverList::Add()/Remove() takes a single arguments the pointer to he object to operate on.

Once a driver has been added to the table, drivers are opened by NAME using DriverList::FindByName("/dev/name"). This function returns a pointer to the specified driver if successful, or to a built in /dev/null
device if the path name is invalid. After a driver is open, that pointer is used for all other driver access functions.

This abstraction is incredibly useful any peripheral or service can be accessed through a consistent set of APIs, that make it easy to substitute implementations from one platform to another. Portability is ensured, the overhead is negligible, and it emphasizes the reuse of both driver and application code as separate entities.

Consider a system with drivers for I2C, SPI, and UART peripherals - under our driver framework, an application can initialize these peripherals and write a greeting to each using the same simple API functions for all drivers:

```
pclI2C = DriverList::FindByName("/dev/i2c");
pclUART = DriverList::FindByName("/dev/tty0");
pclSPI = DriverList::FindByName("/dev/spi");
pclI2C->Write(12, "Hello World!");
pclUART->Write(12, "Hello World!");
pclSPI->Write(12, "Hello World!");
```

Definition in file driver.h.

19.58 driver.h

0001 /+----

```
00003
00004
00005
00006
00007
00009
       -[Mark3 Realtime Platform]-
00010
00011 Copyright (c) 2012 - 2017 Funkenstein Software Consulting, all rights reserved.
00012 See license.txt for more information
00013 -----
00105 #include "kerneltypes.h"
00106 #include "mark3cfg.h"
00107
00108 #include "ll.h"
00109
00110 #ifndef __DRIVER_H_
00111 #define __DRIVER_H_
00112
00113 #if KERNEL_USE_DRIVER
00114
00115 class DriverList:
00116 //---
00121 class Driver : public LinkListNode
00122 {
00123 public:
00124
          void* operator new(size_t sz, void* pv) { return (Driver*)pv; };
00130
          virtual void Init() = 0;
00131
00139
         virtual uint8 t Open() = 0;
00140
00148
          virtual uint8_t Close() = 0;
00149
00164
         virtual uint16_t Read(uint16_t u16Bytes_, uint8_t* pu8Data_) = 0;
00165
00181
         virtual uint16 t Write(uint16 t u16Bytes , uint8 t* pu8Data ) = 0;
00182
00201
          virtual uint16_t
00202
          Control(uint16_t u16Event_, void* pvDataIn_, uint16_t u16SizeIn_, void* pvDataOut_, uint16_t
     u16SizeOut_)
00203
00204
00213
          void SetName(const char* pcName_) { m_pcPath = pcName_; }
00221
          const char* GetPath() { return m_pcPath; }
00222 private:
00224
         const char* m_pcPath;
00225 };
00226
00227 //
00232 class DriverList
00233 {
00234 public:
00242
         static void Init();
00243
00252
          static void Add(Driver* pclDriver_) { m_clDriverList.
     Add(pclDriver_); }
00261
         static void Remove(Driver* pclDriver_) { m_clDriverList.
      Remove(pclDriver_); }
00270
         static Driver* FindByPath(const char* m_pcPath);
00271
00272 private:
         static DoubleLinkList m_clDriverList;
00275 };
00276
00277 #endif // KERNEL_USE_DRIVER
00278
00279 #endif
```

19.59 /media/usb/project/github/Mark3/kernel/public/eventflag.h File Reference

Event Flag Blocking Object/IPC-Object definition.

```
#include "mark3cfg.h"
#include "kernel.h"
#include "kerneltypes.h"
#include "blocking.h"
#include "thread.h"
```

19.60 eventflag.h

Classes

· class EventFlag

The EventFlag class is a blocking object, similar to a semaphore or mutex, commonly used for synchronizing thread execution based on events occurring within the system.

19.59.1 Detailed Description

Event Flag Blocking Object/IPC-Object definition.

Definition in file eventflag.h.

19.60 eventflag.h

```
00001
00002
00003
00004
                 1.11
00005
00006
00007
80000
00009 -- [Mark3 Realtime Platform] -
00010
00011 Copyright (c) 2012 - 2017 Funkenstein Software Consulting, all rights reserved.
00012 See license.txt for more information
00019 #ifndef ___EVENTFLAG_H__
00020 #define __EVENTFLAG_H_
00021
00022 #include "mark3cfg.h"
00023 #include "kernel.h"
00024 #include "kerneltypes.h"
00025 #include "blocking.h"
00026 #include "thread.h"
00027
00028 #if KERNEL USE EVENTFLAG
00029
00030 //---
00046 class EventFlag : public BlockingObject
00047 {
00048 public:
00049
          void* operator new(size_t sz, void* pv) { return (EventFlag*)pv; };
00050
          ~EventFlag();
00051
00055
          void Init();
00056
00064
          uint16_t Wait(uint16_t u16Mask_, EventFlagOperation_t eMode_);
00065
00066 #if KERNEL USE TIMEOUTS
00067
          uint16_t Wait(uint16_t u16Mask_, EventFlagOperation_t eMode_, uint32_t
      u32TimeMS_);
00076
00084
          void WakeMe(Thread* pclChosenOne_);
00085
00086 #endif
00087
00093
          void Set(uint16_t u16Mask_);
00094
00099
          void Clear(uint16_t u16Mask_);
00100
00105
          uint16 t GetMask();
00106
00107 private:
00108 #if KERNEL_USE_TIMEOUTS
00109
00121
          uint16_t Wait_i(uint16_t u16Mask_, EventFlagOperation_t eMode_, uint32_t
      u32TimeMS_);
00122 #else
00123
00133
          uint16_t Wait_i(uint16_t u16Mask_, EventFlagOperation_t eMode_);
00134 #endif
00135
00136
          uint16 t m u16SetMask:
00137 };
00138
```

```
00139 #endif // KERNEL_USE_EVENTFLAG
00140 #endif //_EVENTFLAG_H__
```

19.61 /media/usb/project/github/Mark3/kernel/public/kernel.h File Reference

Kernel initialization and startup class.

```
#include "mark3cfg.h"
#include "kerneltypes.h"
#include "paniccodes.h"
#include "thread.h"
```

Classes

class Kernel

Class that encapsulates all of the kernel startup functions.

19.61.1 Detailed Description

Kernel initialization and startup class.

The Kernel namespace provides functions related to initializing and starting up the kernel.

The Kernel::Init() function must be called before any of the other functions in the kernel can be used.

Once the initial kernel configuration has been completed (i.e. first threads have been added to the scheduler), the Kernel::Start() function can then be called, which will transition code execution from the "main()" context to the threads in the scheduler.

Definition in file kernel.h.

19.62 kernel.h

```
00001 /
00002
00003
00004
00005
00006 |
00007
00008
00009 -- [Mark3 Realtime Platform] -
00010
00011 Copyright (c) 2012 - 2017 Funkenstein Software Consulting, all rights reserved.
00012 See license.txt for more information
00013 ======
00032 #ifndef ___KERNEL_H_
00033 #define ___KERNEL_H_
00034
00035 #include "mark3cfg.h" 00036 #include "kerneltypes.h"
00037 #include "paniccodes.h"
00038 #include "thread.h"
00039
00040 //---
00044 class Kernel
00045 {
00046 public:
00055
         static void Init (void);
00056
00069
         static void Start (void);
00070
         static bool IsStarted() { return m_bIsStarted; }
00077
         00085
00095
         static void Panic (uint16_t u16Cause_);
```

```
00096
00097 #if KERNEL_USE_IDLE_FUNC
00098
00103
          static void SetIdleFunc(IdleFunc_t pfIdle_) { m_pfIdle = pfIdle_; }
00108
          static void IdleFunc(void)
00109
00110
               if (m_pfIdle != 0) {
00111
                   m_pfIdle();
00112
00113
          }
00114
          static Thread* GetIdleThread(void) { return (Thread*)&
00122
      m_clIdle; }
00123 #endif
00124
00125 #if KERNEL_USE_THREAD_CALLOUTS
00126
           static void SetThreadCreateCallout(ThreadCreateCallout_t pfCreate_) {
00136
      m_pfThreadCreateCallout = pfCreate_; }
          static void SetThreadExitCallout(ThreadExitCallout_t pfExit_) {
      m_pfThreadExitCallout = pfExit_; }
00159
          static void SetThreadContextSwitchCallout(ThreadContextCallout_t
      pfContext_)
00160
00161
               m_pfThreadContextCallout = pfContext_;
00162
00163
          static ThreadCreateCallout_t GetThreadCreateCallout(void) { return
      m_pfThreadCreateCallout; }
00181
          static ThreadExitCallout_t GetThreadExitCallout(void) { return
      m_pfThreadExitCallout; }
00190
          static ThreadContextCallout_t GetThreadContextSwitchCallout(void) { return
       m_pfThreadContextCallout; }
00191 #endif
00192
00193 #if KERNEL_USE_STACK_GUARD
       static void SetStackGuardThreshold(uint16_t u16Threshold_) { m_u16GuardThreshold = u16Threshold_; }
00194
00195
          static uint16_t
                                                          GetStackGuardThreshold(void) { return m_u16GuardThreshold;
00196 #endif
00197
00198 private:
       static bool
                              m bTsStarted:
00199
                              m_bIsPanic;
          static bool
          static PanicFunc_t m_pfPanic;
00202 #if KERNEL_USE_IDLE_FUNC
00203 static IdleFunc_t m_pfIdle;
00204 static FakeThread_t m_clIdle;
00205 #endif
00206
00207 #if KERNEL_USE_THREAD_CALLOUTS
00208 static ThreadCreateCallout_t m_pfThreadCreateCallout;
00209 static ThreadExitCallout_t m_pfThreadExitCallout;
00210 static ThreadContextCallout_t m_pfThreadContextCallout;
00211 #endif
00212
00213 #if KERNEL_USE_STACK_GUARD
00214
          static uint16_t m_u16GuardThreshold;
00215 #endif
00216 };
00217
00218 #endif
```

19.63 /media/usb/project/github/Mark3/kernel/public/kernelaware.h File Reference

Kernel aware simulation support.

```
#include "kerneltypes.h"
#include "mark3cfg.h"
```

Classes

· class KernelAware

The KernelAware class.

Enumerations

enum KernelAwareCommand_t {
 KA_COMMAND_IDLE = 0, KA_COMMAND_PROFILE_INIT, KA_COMMAND_PROFILE_START, KA_COMMAND_PROFILE_STOP,
 KA_COMMAND_PROFILE_REPORT, KA_COMMAND_EXIT_SIMULATOR, KA_COMMAND_TRACE_0,
 KA_COMMAND_TRACE_1,
 KA_COMMAND_TRACE_2, KA_COMMAND_PRINT }

This enumeration contains a list of supported commands that can be executed to invoke a response from a kernel aware host.

19.63.1 Detailed Description

Kernel aware simulation support.

Definition in file kernelaware.h.

19.63.2 Enumeration Type Documentation

19.63.2.1 enum KernelAwareCommand t

This enumeration contains a list of supported commands that can be executed to invoke a response from a kernel aware host.

Enumerator

KA_COMMAND_IDLE Null command, does nothing.

KA_COMMAND_PROFILE_INIT Initialize a new profiling session.

KA_COMMAND_PROFILE_START Begin a profiling sample.

KA_COMMAND_PROFILE_STOP End a profiling sample.

KA_COMMAND_PROFILE_REPORT Report current profiling session.

KA_COMMAND_EXIT_SIMULATOR Terminate the host simulator.

KA_COMMAND_TRACE_0 0-argument kernel trace

KA_COMMAND_TRACE_1 1-argument kernel trace

KA_COMMAND_TRACE_2 2-argument kernel trace

KA_COMMAND_PRINT Print an arbitrary string of data.

Definition at line 33 of file kernelaware.h.

19.64 kernelaware.h

```
00001
00002
00003
00004
00005
00006
00007
80000
00009 -- [Mark3 Realtime Platform]-
00010
00011 Copyright (c) 2012 - 2017 Funkenstein Software Consulting, all rights reserved.
00012 See license.txt for more information
00013 ==
00021 #ifndef ___KERNEL_AWARE_H
00022 #define ___KERNEL_AWARE_H
00023
00024 #include "kerneltypes.h"
00025 #include "mark3cfg.h'
```

```
00026
00027 #if KERNEL_AWARE_SIMULATION
00028 //--
00033 typedef enum {
         KA_COMMAND_IDLE = 0,
00034
          KA_COMMAND_PROFILE_INIT,
00035
         KA_COMMAND_PROFILE_START,
00037
         KA_COMMAND_PROFILE_STOP,
00038
         KA_COMMAND_PROFILE_REPORT,
00039
         KA_COMMAND_EXIT_SIMULATOR,
        KA_COMMAND_TRACE_0,
KA_COMMAND_TRACE_1,
00040
00041
        KA_COMMAND_TRACE_2,
KA_COMMAND_PRINT
00042
00043
00044 } KernelAwareCommand_t;
00045
00046 //---
00064 class KernelAware
00065 {
00066 public:
00067
00078
          static void ProfileInit(const char* szStr_);
00079
08000
00088
          static void ProfileStart(void);
00090
00097
          static void ProfileStop(void);
00098
00099
00107
          static void ProfileReport(void);
00108
00109
00117
          static void ExitSimulator(void);
00118
00119
00127
          static void Print (const char* szStr );
00129
00139
          static void Trace(uint16_t u16File_, uint16_t u16Line_);
00140
00141
00152
          static void Trace (uint16_t u16File_, uint16_t u16Line_, uint16_t u16Arg1_);
00153
00154
00166
          static void Trace(uint16_t u16File_, uint16_t u16Line_, uint16_t u16Arg1_, uint16_t u16Arg2_);
00167
00168
00178
          static bool IsSimulatorAware(void);
00179
00180 private:
00181
00194
          static void
00195
         Trace_i (uint16_t u16File_, uint16_t u16Line_, uint16_t u16Arg1_, uint16_t u16Arg2_,
     KernelAwareCommand_t eCmd_);
00196 };
00197
00198 #endif
00199
00200 #endif
```

19.65 /media/usb/project/github/Mark3/kernel/public/kerneldebug.h File Reference

Macros and functions used for assertions, kernel traces, etc.

```
#include "mark3cfg.h"
#include "tracebuffer.h"
#include "kernelaware.h"
#include "paniccodes.h"
#include "kernel.h"
#include "buffalogger.h"
#include "dbg_file_list.h"
```

Macros

```
    #define KERNEL_TRACE(x)
```

Null Kernel Trace Macro.

• #define KERNEL TRACE 1(x, arg1)

Null Kernel Trace Macro.

• #define KERNEL_TRACE_2(x, arg1, arg2)

Null Kernel Trace Macro.

#define KERNEL_ASSERT(x)

Null Kernel Assert Macro.

• #define USER_TRACE(x)

Null Kernel Trace Macro.

• #define USER_TRACE_1(x, arg1)

Null Kernel Trace Macro.

#define USER_TRACE_2(x, arg1, arg2)

Null Kernel Trace Macro.

#define USER_ASSERT(x)

Null Kernel Assert Macro.

19.65.1 Detailed Description

Macros and functions used for assertions, kernel traces, etc.

Definition in file kerneldebug.h.

19.66 kerneldebug.h

```
00001 /
00002
00003
00004
00005
00006
00007
00008
00009 -- [Mark3 Realtime Platform]
00010
00011 Copyright (c) 2012 - 2017 Funkenstein Software Consulting, all rights reserved.
00012 See license.txt for more information
00013 ===
00020 #ifndef __KERNEL_DEBUG_H_
00021 #define __KERNEL_DEBUG_H_
00022
00023 #include "mark3cfg.h"
00024 #include "tracebuffer.h"
00025 #include "kernelaware.h"
00026 #include "paniccodes.h"
00027 #include "kernel.h"
00028 #include "buffalogger.h"
00029 #include "dbg_file_list.h"
00030
00031 //---
00032 #if (KERNEL_USE_DEBUG && !KERNEL_AWARE_SIMULATION && KERNEL_ENABLE_LOGGING)
00033
00035 #define KERNEL_TRACE(x)
00036
00037 {
00038
                EMIT_DBG_STRING(x);
00039
                uint16_t au16Msg__[4];
00040
                au16Msg_{[0]} = 0xACDC;
                au16Msg__[1] = DBG_FILE;
```

19.66 kerneldebug.h

```
00042
              au16Msg__[2] = __LINE__;
00043
              au16Msg__[3] = TraceBuffer::Increment();
00044
              TraceBuffer::Write(au16Msg___, 4);
00045
00046 };
00047
00048 //---
00049 #define KERNEL_TRACE_1(x, arg1)
00050
00051 {
00052
              EMIT DBG STRING(x):
00053
              uint16_t au16Msg__[5];
00054
              au16Msg_{[0]} = 0xACDC;
00055
              au16Msg_{[1]} = DBG_{FILE};
00056
              au16Msg__[2] = __LINE__;
00057
              au16Msg__[3] = TraceBuffer::Increment();
00058
              au16Msg_{[4]} = arg1;
00059
              TraceBuffer::Write(au16Msg__, 5);
00060
00061
00062
00063 /
00064 #define KERNEL_TRACE_2(x, arg1, arg2)
00065
00066 {
00067
              EMIT_DBG_STRING(x);
00068
              uint16_t au16Msg__[6];
00069
              au16Msg_{[0]} = 0xACDC;
              au16Msg__[1] = DBG_FILE;
00070
00071
              au16Msg [2] = LINE ;
00072
              au16Msg__[3] = TraceBuffer::Increment();
00073
              au16Msg_{[4]} = arg1;
00074
              au16Msg__[5] = arg2;
00075
              TraceBuffer::Write(au16Msg___, 6);
00076
00077
00078
00079 /
00080 #define KERNEL_ASSERT(x)
00081
00082
00083
              if ((x) == false) {
00084
                   EMIT_DBG_STRING("ASSERT FAILED");
00085
                   uint16_t au16Msg__[4];
00086
                   au16Msg [0] = 0xACDC;
00087
                   au16Msg__[1] = DBG_FILE;
00088
                   au16Msg__[2] = __LINE__;
00089
                   au16Msg__[3] = TraceBuffer::Increment();
00090
                   TraceBuffer::Write(au16Msg___, 4);
00091
                   Kernel::Panic(PANIC_ASSERT_FAILED);
00092
```

```
00093
00094
00095 #elif (KERNEL USE DEBUG && KERNEL AWARE SIMULATION && KERNEL ENABLE LOGGING)
00096
00097 //-
00098 #define KERNEL_TRACE(x)
00099
00100 {
00101
              EMIT_DBG_STRING(x);
00102
              KernelAware::Trace(DBG_FILE, __LINE__);
00103
00104 };
00105
00106 //
00107 #define KERNEL_TRACE_1(x, arg1)
00108
00109 {
00110
              EMIT_DBG_STRING(x);
00111
              KernelAware::Trace(DBG_FILE, __LINE__, arg1);
00112
00113
00114
00115 //-
00116 #define KERNEL_TRACE_2(x, arg1, arg2)
00117
00118 {
00119
              EMIT_DBG_STRING(x);
00120
              KernelAware::Trace(DBG_FILE, __LINE__, arg1, arg2);
00121
00122
00123
00125 #define KERNEL_ASSERT(x)
00126
00127 {
00128
              if ((x) == false) {
00129
                  EMIT_DBG_STRING("ASSERT FAILED");
00130
                  KernelAware::Trace(DBG_FILE, __LINE__);
00131
                  Kernel::Panic(PANIC_ASSERT_FAILED);
00132
00133
00134
00135 #elif KERNEL_USE_DEBUG
00136 // If running KERNEL_USE_DEBUG without any logging, ensure that we provide
00137 // at least a basic KERNEL_ASSERT().
00138 //---
00139 #define KERNEL_TRACE(x)
00140 //
00141 #define KERNEL_TRACE_1(x, argl)
00143 #define KERNEL_TRACE_2(x, arg1, arg2)
00144 //
00145 #define KERNEL_ASSERT(x) \
00146 {
00147
             ((x) == false) {
00148
              Kernel::Panic(PANIC_ASSERT_FAILED);
00149
00150 }
00151 #else
00152 //---
00153 \!\!\!// Note -- when kernel-debugging is disabled, we still have to define the
00154 // macros to ensure that the expressions compile (albeit, by elimination
00155 // during pre-processing).
```

19.66 kerneldebug.h 241

```
00156 //-
00157 #define KERNEL_TRACE(x)
00158 //-
00159 \#define KERNEL_TRACE_1(x, arg1)
00160 //-
00161 #define KERNEL TRACE 2(x, argl, arg2)
00162 //-
00163 #define KERNEL_ASSERT(x)
00164
00165 #endif // KERNEL_USE_DEBUG
00166
00167 //-
00168 #if (KERNEL_USE_DEBUG && !KERNEL_AWARE_SIMULATION && KERNEL_ENABLE_USER_LOGGING)
00169
00170 //-
00171 #define USER_TRACE(x)
00172
00173 {
00174
              EMIT_DBG_STRING(x);
00175
              uint16_t au16Msg__[4];
00176
              au16Msq_{0} = 0xACDC;
00177
              au16Msg__[1] = DBG_FILE;
00178
              au16Msg_{[2]} = _{LINE}
00179
              au16Msg__[3] = TraceBuffer::Increment();
00180
              TraceBuffer::Write(au16Msg___, 4);
00181
00182 };
00183
00184 //-
00185 #define USER_TRACE_1(x, arg1)
00186
00187 {
00188
              EMIT_DBG_STRING(x);
00189
              uint16_t au16Msg__[5];
              au16Msg_{[0]} = 0xACDC;
00190
              au16Msg__[1] = DBG_FILE;
00191
00192
              au16Msg__[2] = __LINE__;
00193
              au16Msg__[3] = TraceBuffer::Increment();
00194
              au16Msg_{[4]} = arg1;
00195
              TraceBuffer::Write(au16Msg___, 5);
00196
00197
00198
00199 //-
00200 #define USER_TRACE_2(x, arg1, arg2)
00201
00202 {
00203
              EMIT_DBG_STRING(x);
00204
              uint16_t au16Msg__[6];
00205
              au16Msg_{[0]} = 0xACDC;
00206
              au16Msg___[1] = DBG_FILE;
00207
              au16Msg__[2] = __LINE__;
00208
              au16Msg__[3] = TraceBuffer::Increment();
00209
              au16Msg__[4] = arg1;
00210
              au16Msg_{[5]} = arg2;
00211
              TraceBuffer::Write(au16Msg___, 6);
00212
```

```
00213 }
00214
00215 //--
00216 #define USER_ASSERT(x)
00217
00218 {
00219
              if ((x) == false) {
                  EMIT_DBG_STRING("ASSERT FAILED");
00220
00221
                  uint16_t au16Msg__[4];
00222
                   au16Msg_{[0]} = 0xACDC;
00223
                   au16Msg__[1] = DBG_FILE;
00224
                  au16Msg__[2] = __LINE__;
00225
                  au16Msg__[3] = TraceBuffer::Increment();
00226
                  TraceBuffer::Write(au16Msg___, 4);
00227
                  Kernel::Panic(PANIC_ASSERT_FAILED);
00228
00229
00230
00231 #elif (KERNEL USE DEBUG && KERNEL AWARE SIMULATION && KERNEL ENABLE USER LOGGING)
00232
00233 //--
00234 #define USER_TRACE(x)
00235
00236 {
00237
              EMIT_DBG_STRING(x);
00238
              KernelAware::Trace(DBG_FILE, __LINE__);
00239
00240 };
00241
00242 /
00243 #define USER_TRACE_1(x, arg1)
00244
00245 {
00246
              EMIT_DBG_STRING(x);
00247
              KernelAware::Trace(DBG_FILE, __LINE__, arg1);
00248
00249 }
00250
00251 //--
00252 #define USER_TRACE_2(x, arg1, arg2)
00253
00254 {
00255
              EMIT_DBG_STRING(x);
00256
              KernelAware::Trace(DBG_FILE, __LINE__, arg1, arg2);
00257
00258 }
00259
00260 //--
00261 #define USER_ASSERT(x)
00262
00263 {
00264
              if ((x) == false) {
00265
                  EMIT_DBG_STRING("ASSERT FAILED");
00266
                  KernelAware::Trace(DBG_FILE, __LINE__);
00267
                  Kernel::Panic(PANIC_ASSERT_FAILED);
00268
```

```
00269
00270 }
00271
00272 #else
00273 //---
00274 // Note -- when kernel-debugging is disabled, we still have to define the
00275 // macros to ensure that the expressions compile (albeit, by elimination
00276 // during pre-processing).
00277 //-
00278 #define USER TRACE(x)
00279 //-
00280 #define USER TRACE 1(x, arg1)
00281 /
00282 #define USER_TRACE_2(x, arg1, arg2)
00283 /
00284 #define USER_ASSERT(x)
00285
00286 #endif // KERNEL_USE_DEBUG
00288 #endif
```

19.67 /media/usb/project/github/Mark3/kernel/public/kerneltypes.h File Reference

Basic data type primatives used throughout the OS.

```
#include <stdint.h>
#include <stdbool.h>
#include <stddef.h>
```

Typedefs

• typedef void(* PanicFunc_t)(uint16_t u16PanicCode_)

Function pointer type used to implement kernel-panic handlers.

typedef void(* ldleFunc_t)(void)

Function pointer type used to implement the idle function, where support for an idle function (as opposed to an idle thread) exists.

typedef void(* ThreadEntry_t)(void *pvArg_)

Function pointer type used for thread entrypoint functions.

Enumerations

enum EventFlagOperation_t {
 EVENT_FLAG_ALL, EVENT_FLAG_ANY, EVENT_FLAG_ALL_CLEAR, EVENT_FLAG_ANY_CLEAR,
 EVENT_FLAG_MODES, EVENT_FLAG_PENDING_UNBLOCK }

This enumeration describes the different operations supported by the event flag blocking object.

• enum ThreadState t

Enumeration representing the different states a thread can exist in.

19.67.1 Detailed Description

Basic data type primatives used throughout the OS.

Definition in file kerneltypes.h.

19.67.2 Enumeration Type Documentation

19.67.2.1 enum EventFlagOperation t

This enumeration describes the different operations supported by the event flag blocking object.

Enumerator

EVENT_FLAG_ALL Block until all bits in the specified bitmask are set.

EVENT_FLAG_ANY Block until any bits in the specified bitmask are set.

EVENT_FLAG_ALL_CLEAR Block until all bits in the specified bitmask are cleared.

EVENT_FLAG_ANY_CLEAR Block until any bits in the specified bitmask are cleared.

EVENT_FLAG_MODES Count of event-flag modes. Not used by user

EVENT_FLAG_PENDING_UNBLOCK Special code. Not used by user

Definition at line 50 of file kerneltypes.h.

19.68 kerneltypes.h

```
00001 /*======
00002
00003
00004
00005
00006 1
00007
80000
00009 -- [Mark3 Realtime Platform]
00010
00011 Copyright (c) 2012 - 2017 Funkenstein Software Consulting, all rights reserved.
00012 See license.txt for more information
00013 ====
00019 #include <stdint.h>
00020 #include <stdbool.h>
00021 #include <stddef.h>
00022
00023 #ifndef ___KERNELTYPES_H_
00024 #define ___KERNELTYPES_H_
00025
00026 //---
00030 typedef void (*PanicFunc_t)(uint16_t u16PanicCode_);
00031
00032 //---
00037 typedef void (*IdleFunc_t) (void);
00038
00039 //
00043 typedef void (*ThreadEntry_t) (void* pvArg_);
00044
00045 //----
00050 typedef enum {
      EVENT_FLAG_ALL,
EVENT_FLAG_ANY,
00051
00052
00053
          EVENT_FLAG_ALL_CLEAR,
00054
        EVENT_FLAG_ANY_CLEAR,
00055
                                      //---
        EVENT_FLAG_MODES,
00056
00057
         EVENT FLAG PENDING UNBLOCK
00058 } EventFlagOperation_t;
00059
00060 //---
00064 typedef enum {
00065
          THREAD\_STATE\_EXIT = 0,
00066
          THREAD_STATE_READY,
00067
          THREAD STATE BLOCKED,
00068
         THREAD_STATE_STOP,
00069
00070
          THREAD_STATES,
00071
          THREAD_STATE_INVALID
00072 } ThreadState_t;
00073
00074 #endif
```

19.69 /media/usb/project/github/Mark3/kernel/public/ksemaphore.h File Reference

Semaphore Blocking Object class declarations.

19.70 ksemaphore.h

```
#include "kerneltypes.h"
#include "mark3cfg.h"
#include "blocking.h"
#include "threadlist.h"
```

Classes

· class Semaphore

Binary & Counting semaphores, based on BlockingObject base class.

19.69.1 Detailed Description

Semaphore Blocking Object class declarations.

Definition in file ksemaphore.h.

19.70 ksemaphore.h

```
00001 /*=
00002
00003
00004
00005
00006
00007
00008
00009 -- [Mark3 Realtime Platform]
00011 Copyright (c) 2012 - 2017 Funkenstein Software Consulting, all rights reserved.
00012 See license.txt for more information
00013 ===
00022 #ifndef __KSEMAPHORE_H_
00023 #define __KSEMAPHORE_H_
00024
00025 #include "kerneltypes.h"
00026 #include "mark3cfg.h"
00027
00028 #include "blocking.h"
00029 #include "threadlist.h"
00030
00031 #if KERNEL_USE_SEMAPHORE
00032
00033 //---
00037 class Semaphore : public BlockingObject
00038 {
00039 public:
00040
          void* operator new(size_t sz, void* pv) { return (Semaphore*)pv; };
00041
00042
00064
          void Init(uint16_t u16InitVal_, uint16_t u16MaxVal_);
00065
08000
          bool Post();
00081
00089
          void Pend();
00090
00102
          uint16_t GetCount();
00103
00104 #if KERNEL_USE_TIMEOUTS
00105
00116
          bool Pend(uint32_t u32WaitTimeMS_);
00117
00128
          void WakeMe(Thread* pclChosenOne_);
00129 #endif
00130
00131 private:
00137
          uint8_t WakeNext();
00138
00139 #if KERNEL_USE_TIMEOUTS
00140
00148
          bool Pend_i (uint32_t u32WaitTimeMS_);
00149 #else
00150
```

```
00156     void Pend_i (void);
00157 #endif
00158
00159     uint16_t m_u16Value;
00160     uint16_t m_u16MaxValue;
00161 };
00162
00163 #endif // KERNEL_USE_SEMAPHORE
00164
00165 #endif
```

19.71 /media/usb/project/github/Mark3/kernel/public/II.h File Reference

Core linked-list declarations, used by all kernel list types.

```
#include "kerneltypes.h"
```

Classes

· class LinkListNode

Basic linked-list node data structure.

class LinkList

Abstract-data-type from which all other linked-lists are derived.

· class DoubleLinkList

Doubly-linked-list data type, inherited from the base LinkList type.

· class CircularLinkList

Circular-linked-list data type, inherited from the base LinkList type.

19.71.1 Detailed Description

Core linked-list declarations, used by all kernel list types.

At the heart of RTOS data structures are linked lists. Having a robust and efficient set of linked-list types that we can use as a foundation for building the rest of our kernel types allows u16 to keep our RTOS code efficient and logically-separated.

So what data types rely on these linked-list classes?

-Threads -ThreadLists -The Scheduler -Timers, -The Timer Scheduler -Blocking objects (Semaphores, Mutexes, etc...)

Pretty much everything in the kernel uses these linked lists. By having objects inherit from the base linked-list node type, we're able to leverage the double and circular linked-list classes to manager virtually every object type in the system without duplicating code. These functions are very efficient as well, allowing for very deterministic behavior in our code.

Definition in file II.h.

19.72 II.h

19.72 II.h 247

```
00012 See license.txt for more information
00013 ==
00043 #ifndef __LL_H__
00044 #define __LL_H_
00045
00046 #include "kerneltypes.h"
00048 //----
00049 #ifndef NULL
00050 #define NULL (0)
00051 #endif
00052
00053 //---
00059 class LinkList;
00060 class DoubleLinkList;
00061 class CircularLinkList;
00062
00063 //---
00068 class LinkListNode
00069 {
00070 protected:
00071
          LinkListNode* next;
00072
          LinkListNode* prev;
00073
00074
         LinkListNode() {}
08000
         void ClearNode();
00081
00082 public:
        LinkListNode* GetNext(void) { return next; }
LinkListNode* GetPrev(void) { return prev; }
00090
00098
00099
         friend class LinkList;
00100
         friend class DoubleLinkList;
00101
         friend class CircularLinkList;
00102
          friend class ThreadList;
00103 };
00104
00105 //---
00109 class LinkList
00110 {
00111 protected:
00112
         LinkListNode* m_pstHead;
         LinkListNode* m_pstTail;
00113
00114
00115 public:
00121
       void Init()
00122
         {
00123
              m_pstHead = NULL;
             m_pstTail = NULL;
00124
         }
00125
00126
00134
          LinkListNode* GetHead() { return m_pstHead; }
00142
          LinkListNode* GetTail() { return m_pstTail; }
00143 };
00144
00145 //-----
00149 class DoubleLinkList : public LinkList
00150 {
00151 public:
00152
          void* operator new(size_t sz, void* pv) { return (DoubleLinkList*)pv; };
00158
          DoubleLinkList()
00159
          {
00160
              m_pstHead = NULL;
00161
             m_pstTail = NULL;
00162
00163
00171
          void Add(LinkListNode* node_);
00172
00180
          void Remove(LinkListNode* node );
00181 };
00182
00183 //---
00187 class CircularLinkList : public LinkList
00188 {
00189 public:
00190
          void* operator new(size_t sz, void* pv) { return (CircularLinkList*)pv; };
00191
          CircularLinkList()
00192
          {
00193
              m_pstHead = NULL;
             m_pstTail = NULL;
00194
00195
          }
00196
00204
          void Add(LinkListNode* node_);
00205
00213
          void Remove(LinkListNode* node_);
00214
          void PivotForward():
00221
00222
```

19.73 /media/usb/project/github/Mark3/kernel/public/mailbox.h File Reference

Mailbox + Envelope IPC Mechanism.

```
#include "mark3cfg.h"
#include "kerneltypes.h"
#include "threadport.h"
#include "ksemaphore.h"
```

Classes

· class Mailbox

The Mailbox class implements an IPC mechnism based on envelopes containing data of a fixed size (configured at initialization) that reside within a buffer of memory provided by the user.

19.73.1 Detailed Description

Mailbox + Envelope IPC Mechanism.

Definition in file mailbox.h.

19.74 mailbox.h

```
00001
00002
00003
00004
00005
00006
00007
00008
00009 -- [Mark3 Realtime Platform]-
00010
00011 Copyright (c) 2012 - 2017 Funkenstein Software Consulting, all rights reserved.
00012 See license.txt for more information
00013 =====
00021 #ifndef ___MAILBOX_H
00022 #define __MAILBOX_H_
00023
00024 #include "mark3cfg.h"
00025 #include "kerneltypes.h"
00026 #include "threadport.h"
00027 #include "ksemaphore.h"
00028
00029 #if KERNEL_USE_MAILBOX
00030
00036 class Mailbox
00037 {
00038 public:
00039
          void* operator new(size_t sz, void* pv) { return (Mailbox*)pv; };
00040
          ~Mailbox();
00041
00052
          void Init(void* pvBuffer_, uint16_t u16BufferSize_, uint16_t u16ElementSize_);
00053
00054 #if KERNEL_USE_AUTO_ALLOC
00055
00068
          static Mailbox* Init(uint16_t u16BufferSize_, uint16_t u16ElementSize_);
00069
00070 #endif
```

19.74 mailbox.h 249

```
00071
00085
          bool Send(void* pvData_);
00086
00100
          bool SendTail(void* pvData_);
00101
00102 #if KERNEL_USE_TIMEOUTS
00117
          bool Send(void* pvData_, uint32_t u32TimeoutMS_);
00118
00133
         bool SendTail(void* pvData_, uint32_t u32TimeoutMS_);
00134 #endif
00135
00145
          void Receive(void* pvData_);
00146
00156
          void ReceiveTail(void* pvData_);
00157
00158 #if KERNEL USE TIMEOUTS
00159
          bool Receive(void* pvData_, uint32_t u32TimeoutMS_);
00172
00185
         bool ReceiveTail(void* pvData_, uint32_t u32TimeoutMS_);
00186 #endif
00187
00188
          uint16 t GetFreeSlots(void)
00189
00190
              uint16_t rc;
00191
              CS_ENTER();
00192
              rc = m_u16Free;
00193
              CS_EXIT();
00194
             return rc;
00195
          }
00196
00197
          bool IsFull(void) { return (GetFreeSlots() == 0); }
00198
          bool IsEmpty(void) { return (GetFreeSlots() == m_u16Count); }
00199 private:
         void* GetHeadPointer(void)
00208
00209
          {
              K_ADDR uAddr = (K_ADDR)m_pvBuffer;
00210
00211
              uAddr += (K_ADDR) (m_u16ElementSize) * (K_ADDR) (
     m_u16Head);
              return (void*)uAddr;
00212
00213
         }
00214
00223
          void* GetTailPointer(void)
00224
         {
00225
              K_ADDR uAddr = (K_ADDR)m_pvBuffer;
00226
              uAddr += (K_ADDR) (m_u16ElementSize) * (K_ADDR) (
     m_u16Tail);
00227
              return (void*)uAddr:
00228
00229
00239
          void CopyData(const void* src_, const void* dst_, uint16_t len_)
00240
00241
              uint8_t* u8Src = (uint8_t*)src_;
              uint8_t* u8Dst = (uint8_t*)dst_;
00242
00243
              while (len_--) {
00244
                 *u8Dst++ = *u8Src++;
00245
00246
          }
00247
00253
          void MoveTailForward(void)
00254
          {
00255
              m_u16Tail++;
00256
              if (m_u16Tail == m_u16Count) {
00257
                  m_u16Tail = 0;
00258
00259
          }
00260
00266
          void MoveHeadForward(void)
00267
00268
              m_u16Head++;
00269
              if (m_u16Head == m_u16Count) {
                  m_u16Head = 0;
00270
00271
00272
          }
00273
00279
          void MoveTailBackward(void)
00280
              if (m_u16Tail == 0) {
00281
                  m_u16Tail = m_u16Count;
00282
00283
00284
              m_u16Tail--;
00285
          }
00286
00292
          void MoveHeadBackward (void)
00293
00294
              if (m_u16Head == 0) {
```

```
m_u16Head = m_u16Count;
00296
00297
              m_u16Head--;
00298
          }
00299
00300 #if KERNEL_USE_TIMEOUTS
00311
          bool Send_i(const void* pvData_, bool bTail_, uint32_t u32TimeoutMS_);
00312 #else
00313
00322
         bool Send_i(const void* pvData_, bool bTail_);
00323 #endif
00324
00325 #if KERNEL_USE_TIMEOUTS
00326
00336
          bool Receive_i(const void* pvData_, bool bTail_, uint32_t u32WaitTimeMS_);
00337 #else
00338
00346
          void Receive_i(const void* pvData_, bool bTail_);
00347 #endif
00348
00349
          uint16_t m_u16Head;
00350
         uint16_t m_u16Tail;
00351
00352
          uint16_t
                            m_u16Count;
00353
         volatile uint16_t m_u16Free;
00354
00355
          uint16_t
                    m_u16ElementSize;
          const void* m_pvBuffer;
00356
00357
00358
          Semaphore m clRecvSem:
00359
00360 #if KERNEL_USE_TIMEOUTS
00361
         Semaphore m_clSendSem;
00362 #endif
00363 };
00364
00365 #endif
00366
00367 #endif
```

19.75 /media/usb/project/github/Mark3/kernel/public/manual.h File Reference

/brief Ascii-format documentation, used by doxygen to create various printable and viewable forms.

19.75.1 Detailed Description

/brief Ascii-format documentation, used by doxygen to create various printable and viewable forms. Definition in file manual.h.

19.76 manual.h

19.77 /media/usb/project/github/Mark3/kernel/public/mark3.h File Reference

Single include file given to users of the Mark3 Kernel API.

```
#include "mark3cfg.h"
#include "kerneltypes.h"
#include "threadport.h"
#include "kernelswi.h"
#include "kerneltimer.h"
#include "kernelprofile.h"
#include "kernel.h"
#include "thread.h"
#include "timerlist.h"
#include "ksemaphore.h"
#include "mutex.h"
#include "eventflag.h"
#include "message.h"
#include "notify.h"
#include "mailbox.h"
#include "atomic.h"
#include "driver.h"
#include "kernelaware.h"
#include "profile.h"
#include "autoalloc.h"
#include "priomap.h"
```

19.77.1 Detailed Description

Single include file given to users of the Mark3 Kernel API.

Definition in file mark3.h.

19.78 mark3.h

```
00002
00003
00004
                   -11
00005
00006
00008
00009 -- [Mark3 Realtime Platform]-----
00010
00011 Copyright (c) 2012 - 2017 Funkenstein Software Consulting, all rights reserved.
00012 See license.txt for more information
00021 #ifndef __MARK3_H__
00022 #define __MARK3_H_
00023
00024 #include "mark3cfg.h"
00025 #include "kerneltypes.h"
00026
00028 #include "kernelswi.h"
00029 #include "kerneltimer.h"
00030 #include "kernelprofile.h"
00031
00032 #include "kernel.h"
00033 #include "thread.h"
00034 #include "timerlist.h"
00035
00036 #include "ksemaphore.h"
00037 #include "mutex.h"
00038 #include "eventflag.h'
00039 #include "message.h'
```

```
00040 #include "notify.h"
00041 #include "mailbox.h"
00042
00043 #include "atomic.h"
00044 #include "driver.h"
00045
00046 #include "kernelaware.h"
00047
00048 #include "profile.h"
00049 #include "autoalloc.h"
00050 #include "priomap.h"
00051
00051
```

19.79 /media/usb/project/github/Mark3/kernel/public/mark3cfg.h File Reference

Mark3 Kernel Configuration.

```
#include "portcfg.h"
```

Macros

• #define KERNEL NUM PRIORITIES (8)

Define the number of thread priorities that the kernel's scheduler will support.

• #define KERNEL USE TIMERS (1)

The following options is related to all kernel time-tracking.

#define KERNEL TIMERS TICKLESS (1)

If you've opted to use the kernel timers module, you have an option as to which timer implementation to use: Tick-based or Tick-less.

• #define KERNEL_TIMERS_MINIMUM_DELAY_US (25)

When using tickless timers, it is useful to define a minimum sleep value.

• #define KERNEL_TIMERS_THREADED (0)

When timers are enabled, configure whether or not a dedicated thread is used to service timer maintenance.

#define KERNEL_USE_TIMEOUTS (1)

Set the priority of the timer thread, if the kernel is configured to use a dedicated timer thread.

#define KERNEL USE QUANTUM (1)

Do you want to enable time quanta? This is useful when you want to have tasks in the same priority group share time in a controlled way.

#define THREAD_QUANTUM_DEFAULT (4)

This value defines the default thread quantum when KERNEL USE QUANTUM is enabled.

#define KERNEL_USE_NOTIFY (1)

This is a simple blocking object, where a thread (or threads) are guaranteed to block until an asynchronous event signals the object.

• #define KERNEL_USE_SEMAPHORE (1)

Do you want the ability to use counting/binary semaphores for thread synchronization? Enabling this features provides fully-blocking semaphores and enables all API functions declared in semaphore.h.

• #define KERNEL_USE_MUTEX (1)

Do you want the ability to use mutual exclusion semaphores (mutex) for resource/block protection? Enabling this feature provides mutexes, with priority inheritence, as declared in mutex.h.

• #define KERNEL_USE_EVENTFLAG (1)

Provides additional event-flag based blocking.

#define KERNEL_USE_MESSAGE (1)

Enable inter-thread messaging using message queues.

• #define GLOBAL MESSAGE POOL SIZE (8)

If Messages are enabled, define the size of the default kernel message pool.

#define KERNEL_USE_MAILBOX (1)

Enable inter-thread messaging using mailboxes.

#define KERNEL_USE_SLEEP (1)

Do you want to be able to set threads to sleep for a specified time? This enables the Thread::Sleep() API.

• #define KERNEL USE DRIVER (1)

Enabling device drivers provides a posix-like filesystem interface for peripheral device drivers.

#define KERNEL USE THREADNAME (0)

Provide Thread method to allow the user to set a name for each thread in the system.

• #define KERNEL USE EXTENDED CONTEXT (1)

Allocate an extra pointer's worth of storage within a Thread object (and corresponding accessor methods) to provide the user with a means to implement arbitrary Thread-local storage.

#define KERNEL USE DYNAMIC THREADS (1)

Provide extra Thread methods to allow the application to create (and more importantly destroy) threads at runtime.

#define KERNEL_USE_PROFILER (1)

Provides extra classes for profiling the performance of code.

• #define KERNEL USE DEBUG (0)

Provides extra logic for kernel debugging, and instruments the kernel with extra asserts, and kernel trace functionality.

#define KERNEL USE ATOMIC (0)

Provides support for atomic operations, including addition, subtraction, set, and test-and-set.

• #define SAFE UNLINK (0)

"Safe unlinking" performs extra checks on data to make sure that there are no consistencies when performing operations on linked lists.

• #define KERNEL_AWARE_SIMULATION (1)

Include support for kernel-aware simulation.

• #define KERNEL_USE_IDLE_FUNC (1)

Enabling this feature removes the necessity for the user to dedicate a complete thread for idle functionality.

#define KERNEL_USE_AUTO_ALLOC (0)

This feature enables an additional set of APIs that allow for objects to be created on-the-fly out of a special heap, without having to explicitly allocate them (from stack, heap, or static memory).

• #define KERNEL_USE_THREAD_CALLOUTS (1)

This feature provides additional kernel APIs to register callout functions that are activated when threads are created or exited.

• #define KERNEL USE STACK GUARD (1)

This feature, when enabled, tells the kernel to check whether any Thread's stack has been exhausted (or slack falls below a certain safety threshold) before executing each context switch.

• #define KERNEL EXTRA CHECKS (1)

This option provides extra safety checks within the kernel APIs in order to minimize the potential for unsafe operations.

19.79.1 Detailed Description

Mark3 Kernel Configuration.

This file is used to configure the kernel for your specific application in order to provide the optimal set of features for a given use case.

Since you only pay the price (code space/RAM) for the features you use, you can usually find a sweet spot between features and resource usage by picking and choosing features a-la-carte. This config file is written in an "interactive" way, in order to minimize confusion about what each option provides, and to make dependencies obvious.

Definition in file mark3cfg.h.

19.79.2 Macro Definition Documentation

19.79.2.1 #define GLOBAL_MESSAGE_POOL_SIZE (8)

If Messages are enabled, define the size of the default kernel message pool.

Messages can be manually added to the message pool, but this mechansims is more convenient and automatic. All message queues share their message objects from this global pool to maximize efficiency and simplify data management.

Definition at line 191 of file mark3cfg.h.

19.79.2.2 #define KERNEL_AWARE_SIMULATION (1)

Include support for kernel-aware simulation.

Enabling this feature adds advanced profiling, trace, and environment-aware debugging and diagnostic functionality when Mark3-based applications are run on the flavr AVR simulator.

Definition at line 301 of file mark3cfg.h.

19.79.2.3 #define KERNEL_EXTRA_CHECKS (1)

This option provides extra safety checks within the kernel APIs in order to minimize the potential for unsafe operations.

This is especially helpful during development, and can help catch problems at development time, instead of in the field.include CPU/Port specific configuration options

Definition at line 356 of file mark3cfg.h.

19.79.2.4 #define KERNEL_NUM_PRIORITIES (8)

Define the number of thread priorities that the kernel's scheduler will support.

The number of thread priorities is limited only by the memory of the host CPU, as a ThreadList object is statically-allocated for each thread priority.

In practice, systems rarely need more than 32 priority levels, with the most complex having the capacity for 256.

Definition at line 41 of file mark3cfg.h.

19.79.2.5 #define KERNEL_TIMERS_MINIMUM_DELAY_US (25)

When using tickless timers, it is useful to define a minimum sleep value.

In the event that a delay/sleep/timeout value lower than this is provided to a timer-based API, the minimum value will be substituted.

Definition at line 86 of file mark3cfg.h.

19.79.2.6 #define KERNEL_TIMERS_THREADED (0)

When timers are enabled, configure whether or not a dedicated thread is used to service timer maintenance.

If set to 0, timer handlers are executed from a nested interrupt context.

Definition at line 95 of file mark3cfg.h.

19.79.2.7 #define KERNEL_TIMERS_TICKLESS (1)

If you've opted to use the kernel timers module, you have an option as to which timer implementation to use: Tick-based or Tick-less.

Tick-based timers provide a "traditional" RTOS timer implementation based on a fixed-frequency timer interrupt. While this provides very accurate, reliable timing, it also means that the CPU is being interrupted far more often than may be necessary (as not all timer ticks result in "real work" being done).

Tick-less timers still rely on a hardware timer interrupt, but uses a dynamic expiry interval to ensure that the interrupt is only called when the next timer expires. This increases the complexity of the timer interrupt handler, but reduces the number and frequency.

Note that the CPU port (kerneltimer.cpp) must be implemented for the particular timer variant desired.

Definition at line 77 of file mark3cfg.h.

19.79.2.8 #define KERNEL_USE_ATOMIC (0)

Provides support for atomic operations, including addition, subtraction, set, and test-and-set.

Add/Sub/Set contain 8, 16, and 32-bit variants.

Definition at line 285 of file mark3cfg.h.

19.79.2.9 #define KERNEL_USE_AUTO_ALLOC (0)

This feature enables an additional set of APIs that allow for objects to be created on-the-fly out of a special heap, without having to explicitly allocate them (from stack, heap, or static memory).

Note that auto-alloc memory cannot be reclaimed.

Definition at line 322 of file mark3cfg.h.

19.79.2.10 #define KERNEL_USE_DYNAMIC_THREADS (1)

Provide extra Thread methods to allow the application to create (and more importantly destroy) threads at runtime. useful for designs implementing worker threads, or threads that can be restarted after encountering error conditions. Definition at line 245 of file mark3cfg.h.

19.79.2.11 #define KERNEL_USE_EVENTFLAG (1)

Provides additional event-flag based blocking.

This relies on an additional per-thread flag-mask to be allocated, which adds 2 bytes to the size of each thread object.

Definition at line 170 of file mark3cfg.h.

19.79.2.12 #define KERNEL_USE_IDLE_FUNC (1)

Enabling this feature removes the necessity for the user to dedicate a complete thread for idle functionality.

This saves a full thread stack, but also requires a bit extra static data. This also adds a slight overhead to the context switch and scheduler, as a special case has to be taken into account.

Definition at line 311 of file mark3cfg.h.

19.79.2.13 #define KERNEL_USE_MAILBOX (1)

Enable inter-thread messaging using mailboxes.

A mailbox manages a blob of data provided by the user, that is partitioned into fixed-size blocks called envelopes. The size of an envelope is set by the user when the mailbox is initialized. Any number of threads can read-from and write-to the mailbox. Envelopes can be sent-to or received-from the mailbox at the head or tail. In this way, mailboxes essentially act as a circular buffer that can be used as a blocking FIFO or LIFO queue.

Definition at line 204 of file mark3cfg.h.

19.79.2.14 #define KERNEL_USE_MESSAGE (1)

Enable inter-thread messaging using message queues.

This is the preferred mechanism for IPC for serious multi-threaded communications; generally anywhere a semaphore or event-flag is insufficient.

Definition at line 178 of file mark3cfg.h.

19.79.2.15 #define KERNEL_USE_PROFILER (1)

Provides extra classes for profiling the performance of code.

useful for debugging and development, but uses an additional hardware timer.

Definition at line 251 of file mark3cfg.h.

19.79.2.16 #define KERNEL_USE_QUANTUM (1)

Do you want to enable time quanta? This is useful when you want to have tasks in the same priority group share time in a controlled way.

This allows equal tasks to use unequal amounts of the CPU, which is a great way to set up CPU budgets per thread in a round-robin scheduling system. If enabled, you can specify a number of ticks that serves as the default time period (quantum). Unless otherwise specified, every thread in a priority will get the default quantum.

Definition at line 133 of file mark3cfg.h.

19.79.2.17 #define KERNEL_USE_SEMAPHORE (1)

Do you want the ability to use counting/binary semaphores for thread synchronization? Enabling this features provides fully-blocking semaphores and enables all API functions declared in semaphore.h.

If you have to pick one blocking mechanism, this is the one to choose.

Definition at line 156 of file mark3cfg.h.

19.79.2.18 #define KERNEL_USE_STACK_GUARD (1)

This feature, when enabled, tells the kernel to check whether any Thread's stack has been exhausted (or slack falls below a certain safety threshold) before executing each context switch.

Enabling this is the most effective means to guard against stack corruption and stack overflow in the kernel, at the cost of increased context switch latency.

Definition at line 344 of file mark3cfg.h.

19.79.2.19 #define KERNEL_USE_THREAD_CALLOUTS (1)

This feature provides additional kernel APIs to register callout functions that are activated when threads are created or exited.

This is useful for implementing low-level instrumentation based on information held in the threads.

Definition at line 334 of file mark3cfg.h.

19.79.2.20 #define KERNEL_USE_THREADNAME (0)

Provide Thread method to allow the user to set a name for each thread in the system.

Adds a const char* pointer to the size of the thread object.

Definition at line 230 of file mark3cfg.h.

19.79.2.21 #define KERNEL_USE_TIMEOUTS (1)

Set the priority of the timer thread, if the kernel is configured to use a dedicated timer thread.

By default, if you opt to enable kernel timers, you also get timeout- enabled versions of the blocking object APIs along with it. This support comes at a small cost to code size, but a slightly larger cost to realtime performance - as checking for the use of timers in the underlying internal code costs some cycles.

As a result, the option is given to the user here to manually disable these timeout-based APIs if desired by the user for performance and code-size reasons.

Definition at line 118 of file mark3cfg.h.

19.79.2.22 #define KERNEL_USE_TIMERS (1)

The following options is related to all kernel time-tracking.

-timers provide a way for events to be periodically triggered in a lightweight manner. These can be periodic, or one-shot.

-Thread Quantum (usedd for round-robin scheduling) is dependent on this module, as is Thread Sleep functionality. Definition at line 56 of file mark3cfg.h.

19.79.2.23 #define SAFE_UNLINK (0)

"Safe unlinking" performs extra checks on data to make sure that there are no consistencies when performing operations on linked lists.

This goes beyond pointer checks, adding a layer of structural and metadata validation to help detect system corruption early.

Definition at line 293 of file mark3cfg.h.

19.79.2.24 #define THREAD QUANTUM DEFAULT (4)

This value defines the default thread quantum when KERNEL_USE_QUANTUM is enabled.

The thread quantum value is in milliseconds

Definition at line 142 of file mark3cfg.h.

19.80 mark3cfg.h

```
00001 /*=========
00003
00004
00005
00006 1
00007
80000
00009 -- [Mark3 Realtime Platform] -
00010
00011 Copyright (c) 2012 - 2017 Funkenstein Software Consulting, all rights reserved.
00012 See license.txt for more information
00013 ======
00029 #ifndef __MARK3CFG_H_
00030 #define __MARK3CFG_H_
00031
00041 #define KERNEL_NUM_PRIORITIES (8)
00042
00043 #if KERNEL_NUM_PRIORITIES > 1024
00044 #error "Mark3 supports a maximum of 1024 priorities"
00045 #endif
00046
00056 #define KERNEL_USE_TIMERS (1)
00057
00076 #if KERNEL USE TIMERS && !defined(ARM)
00077 #define KERNEL_TIMERS_TICKLESS (1)
00078 #endif
00079
00080 #if KERNEL_TIMERS_TICKLESS
00081
00086 #define KERNEL_TIMERS_MINIMUM_DELAY_US (25)
00087 #endif
00088
00094 #if KERNEL_USE_TIMERS
00095 # define KERNEL_TIMERS_THREADED (0)
00096 #endif
00097
00102 #if KERNEL TIMERS THREADED
00103 # define KERNEL_TIMERS_THREAD_PRIORITY (KERNEL_NUM_PRIORITIES - 1)
00104 #endif
00105
00117 #if KERNEL_USE_TIMERS
00118 #define KERNEL_USE_TIMEOUTS (1)
00119 #else
00120 #define KERNEL_USE_TIMEOUTS (0)
00121 #endif
00122
00132 #if KERNEL_USE_TIMERS
00133 #define KERNEL_USE_QUANTUM (1)
00134 #else
00135 #define KERNEL_USE_QUANTUM (0)
00136 #endif
00137
00142 #define THREAD_QUANTUM_DEFAULT (4)
00143
00148 #define KERNEL USE NOTIFY (1)
00149
00156 #define KERNEL_USE_SEMAPHORE (1)
00163 #define KERNEL_USE_MUTEX (1)
00164
00170 #define KERNEL USE EVENTFLAG (1)
00171
00177 #if KERNEL_USE_SEMAPHORE
00178 #define KERNEL_USE_MESSAGE (1)
00179 #else
00180 #define KERNEL_USE_MESSAGE (0)
00181 #endif
00182
00190 #if KERNEL_USE_MESSAGE
00191 #define GLOBAL_MESSAGE_POOL_SIZE (8)
00192 #endif
00193
00203 #if KERNEL USE SEMAPHORE
00204 #define KERNEL_USE_MAILBOX (1)
00205 #else
00206 #define KERNEL_USE_MAILBOX (0)
00207 #endif
00208
00213 #if KERNEL_USE_TIMERS && KERNEL_USE_SEMAPHORE
00214 #define KERNEL_USE_SLEEP (1)
00215 #else
00216 #define KERNEL_USE_SLEEP (0)
00217 #endif
```

```
00218
00223 #define KERNEL_USE_DRIVER (1)
00224
00230 #define KERNEL_USE_THREADNAME (0)
00231
00237 #define KERNEL_USE_EXTENDED_CONTEXT
00245 #define KERNEL_USE_DYNAMIC_THREADS (1)
00246
00251 #define KERNEL_USE_PROFILER (1)
00252
00257 #define KERNEL USE DEBUG (0)
00258
00259 #if KERNEL_USE_DEBUG
00260
00266 #define KERNEL_ENABLE_LOGGING (0)
00267
00275 #define KERNEL ENABLE USER LOGGING (0)
00276 #else
00277 #define KERNEL_ENABLE_LOGGING (0)
00278 #define KERNEL_ENABLE_USER_LOGGING (0)
00279 #endif
00280
00285 #define KERNEL_USE_ATOMIC (0)
00286
00293 #define SAFE_UNLINK (0)
00294
00301 #define KERNEL_AWARE_SIMULATION (1)
00302
00310 #if !defined(ARM)
00311 #define KERNEL USE IDLE FUNC (1) // Supported everywhere but ARM
00312 #else
00313 #define KERNEL_USE_IDLE_FUNC (0) // Not currently supported on ARM
00314 #endif
00315
00322 #define KERNEL_USE_AUTO_ALLOC (0)
00323
00324 #if KERNEL_USE_AUTO_ALLOC
00325 #define AUTO_ALLOC_SIZE (512)
00326 #endif
00327
00334 #define KERNEL USE THREAD CALLOUTS (1)
00335
00344 #define KERNEL_USE_STACK_GUARD (1)
00346 #if KERNEL_USE_STACK_GUARD
00347 #define KERNEL_STACK_GUARD_DEFAULT (32) // words
00348 #endif
00349
00356 #define KERNEL_EXTRA_CHECKS (1)
00358 #include "portcfg.h"
00359
00360 #endif
```

19.81 /media/usb/project/github/Mark3/kernel/public/message.h File Reference

Inter-thread communication via message-passing.

```
#include "kerneltypes.h"
#include "mark3cfg.h"
#include "ll.h"
#include "ksemaphore.h"
#include "timerlist.h"
```

Classes

class Message

Class to provide message-based IPC services in the kernel.

· class MessagePool

Implements a list of message objects.

class GlobalMessagePool

Implements a list of message objects shared between all threads.

• class MessageQueue

List of messages, used as the channel for sending and receiving messages between threads.

19.81.1 Detailed Description

Inter-thread communication via message-passing.

Embedded systems guru Jack Ganssle once said that without a robust form of interprocess communications (IPC), an RTOS is just a toy. Mark3 implements a form of IPC to provide safe and flexible messaging between threads.

using kernel-managed IPC offers significant benefits over other forms of data sharing (i.e. Global variables) in that it avoids synchronization issues and race conditions common to the practice. using IPC also enforces a more disciplined coding style that keeps threads decoupled from one another and minimizes global data, preventing careless and hard-to-debug errors.

19.81.2 using Messages, Queues, and the Global Message Pool

```
// Declare a message queue shared between two threads
MessageQueue my_queue;
int main()
    // Initialize the message queue
    my queue.init();
void Thread1()
    // Example TX thread - sends a message every 10ms
    while(1)
         \ensuremath{//} Grab a message from the global message pool
        Message *tx_message = GlobalMessagePool::Pop();
         // Set the message data/parameters
        tx_message->SetCode( 1234 );
        tx_message->SetData( NULL );
        \ensuremath{//} Send the message on the queue.
        my_queue.Send( tx_message );
Thread::Sleep(10);
void Thread2()
    while()
         // Blocking receive - wait until we have messages to process
        Message *rx_message = my_queue.Recv();
        // Do something with the message data...
         // Return back into the pool when done
        GlobalMessagePool::Push(rx_message);
```

Definition in file message.h.

19.82 message.h

19.82 message.h 261

```
00009 -- [Mark3 Realtime Platform] -----
00010
00011 Copyright (c) 2012 - 2017 Funkenstein Software Consulting, all rights reserved.
00012 See license.txt for more information
00013 ==========
00080 #ifndef __MESSAGE_H_
00081 #define __MESSAGE_H_
00082
00083 #include "kerneltypes.h"
00084 #include "mark3cfg.h"
00085
00086 #include "ll.h"
00087 #include "ksemaphore.h"
00088
00089 #if KERNEL_USE_MESSAGE
00090
00091 #if KERNEL_USE_TIMEOUTS
00092 #include "timerlist.h"
00093 #endif
00094
00095 //---
00099 class Message : public LinkListNode
00100 {
00101 public:
00102
          void* operator new(size_t sz, void* pv) { return (Message*)pv; };
00108
           void Init()
00109
00110
               ClearNode();
              m_pvData = NULL;
m_u16Code = 0;
00111
00112
00113
          }
00114
00122
          void SetData(void* pvData_) { m_pvData = pvData_; }
          void* GetData() { return m_pvData; }
void SetCode(uint16_t u16Code_) { m_u16Code = u16Code_; }
00130
00138
          uint16_t GetCode() { return m_u16Code; }
00146
00147 private:
00149
          void* m_pvData;
00150
00152
          uint16_t m_u16Code;
00153 };
00154
00155 //---
00159 class MessagePool
00160 {
00161 public:
00167
          void Init();
00168
00178
          void Push (Message* pclMessage);
00179
00188
          Message* Pop();
00189
00197
          Message* GetHead();
00198
00199 private:
          DoubleLinkList m_clList;
00202 };
00203
00204 //--
00208 class GlobalMessagePool
00209 {
00210 public:
00216
          static void Init();
00217
00227
          static void Push (Message* pclMessage_);
00228
00237
          static Message* Pop();
00238
00246
          static Message* GetHead();
00247
00255
          static MessagePool* GetPool();
00256
00257 private:
          static Message m_aclMessagePool[
00259
      GLOBAL_MESSAGE_POOL_SIZE];
00260
00261
          static MessagePool m_clPool;
00262 };
00263
00264 //
00269 class MessageQueue
00270 {
00271 public:
00272
          void* operator new(size_t sz, void* pv) { return (MessageQueue*)pv; };
00278
          void Init();
00279
```

```
Message* Receive();
00290 #if KERNEL_USE_TIMEOUTS
00291
          Message* Receive(uint32_t u32TimeWaitMS_);
00305
00306 #endif
00316
          void Send(Message* pclSrc_);
00317
00325
         uint16_t GetCount();
00326
00327 private:
00328 #if KERNEL_USE_TIMEOUTS
00329
00338
          Message* Receive_i(uint32_t u32TimeWaitMS_);
00339 #else
00340
00347
          Message* Receive_i(void);
00348 #endif
00349
00351
          Semaphore m_clSemaphore;
00352
00354
         DoubleLinkList m_clLinkList;
00355 };
00356
00357 #endif // KERNEL_USE_MESSAGE
00358
00359 #endif
```

19.83 /media/usb/project/github/Mark3/kernel/public/mutex.h File Reference

Mutual exclusion class declaration.

```
#include "kerneltypes.h"
#include "mark3cfg.h"
#include "blocking.h"
```

Classes

· class Mutex

Mutual-exclusion locks, based on BlockingObject.

19.83.1 Detailed Description

Mutual exclusion class declaration.

Resource locks are implemented using mutual exclusion semaphores (Mutex_t). Protected blocks can be placed around any resource that may only be accessed by one thread at a time. If additional threads attempt to access the protected resource, they will be placed in a wait queue until the resource becomes available. When the resource becomes available, the thread with the highest original priority claims the resource and is activated. Priority inheritance is included in the implementation to prevent priority inversion. Always ensure that you claim and release your mutex objects consistently, otherwise you may end up with a deadlock scenario that's hard to debug.

19.83.2 Initializing

Initializing a mutex object by calling:

```
clMutex.Init();
```

19.83.3 Resource protection example

clMutex.Claim();

19.84 mutex.h 263

```
...
<resource protected block>
...
clMutex.Release();
```

Definition in file mutex.h.

19.84 mutex.h

```
00001 /
00002
00003
00004
00005
00006
00007
80000
00009 -- [Mark3 Realtime Platform] -
00010
00011 Copyright (c) 2012 - 2017 Funkenstein Software Consulting, all rights reserved.
00012 See license.txt for more information
00013 ----- */
00050 #ifndef __MUTEX_H_
00051 #define __MUTEX_H_
00052
00053 #include "kerneltypes.h"
00054 #include "mark3cfg.h"
00055
00056 #include "blocking.h"
00057
00058 #if KERNEL_USE_MUTEX
00059
00060 //---
00064 class Mutex : public BlockingObject
00065 {
00066 public:
00067
          void* operator new(size_t sz, void* pv) { return (Mutex*)pv; };
00068
          ~Mutex();
00069
00076
         void Init();
00077
00095
         void Claim();
00096
00097 #if KERNEL_USE_TIMEOUTS
00098
         bool Claim(uint32_t u32WaitTimeMS_);
00109
00110
00123
         void WakeMe(Thread* pclOwner_);
00124
00125 #endif
00126
          void Release();
00147
00148
00149 private:
00155
         uint8_t WakeNext();
00156
00157 #if KERNEL USE TIMEOUTS
00158
00166
         bool Claim_i(uint32_t u32WaitTimeMS_);
00167 #else
00168
00174
          void Claim_i(void);
00175 #endif
00176
00177
          uint8_t m_u8Recurse;
00178
                m_bReady;
         bool
         uint8_t m_u8MaxPri;
00180
         Thread* m_pclOwner;
00181 };
00182
00183 #endif // KERNEL_USE_MUTEX
00184
00185 #endif //__MUTEX_H_
```

19.85 /media/usb/project/github/Mark3/kernel/public/notify.h File Reference

Lightweight thread notification - blocking object.

```
#include "mark3cfg.h"
#include "blocking.h"
```

Classes

· class Notify

The Notify class is a blocking object type, that allows one or more threads to wait for an event to occur before resuming operation.

19.85.1 Detailed Description

Lightweight thread notification - blocking object.

Definition in file notify.h.

19.86 notify.h

```
00001 /
00003
00004
00005
00006 1
00007
00008
00009 -- [Mark3 Realtime Platform]
00010
00011 Copyright (c) 2012 - 2017 Funkenstein Software Consulting, all rights reserved.
00012 See license.txt for more information
00013 =
00021 #ifndef __NOTIFY_H__
00022 #define __NOTIFY_H_
00023
00024 #include "mark3cfg.h"
00025 #include "blocking.h"
00026
00027 #if KERNEL_USE_NOTIFY
00033 class Notify : public BlockingObject
00034 {
00035 public:
00036
          void* operator new(size_t sz, void* pv) { return (Notify*)pv; };
00037
          ~Notify();
00038
00044
          void Init(void);
00045
00055
          void Signal(void);
00056
00066
          void Wait (bool* pbFlag_);
00067
00068 #if KERNEL_USE_TIMEOUTS
00069
00081
          bool Wait(uint32_t u32WaitTimeMS_, bool* pbFlag_);
00082 #endif
00083
00093
          void WakeMe(Thread* pclChosenOne_);
00094
00095 private:
00096
00097
          bool m_bPending;
00098 };
00099
00100 #endif
00101
00102 #endif
```

19.87 /media/usb/project/github/Mark3/kernel/public/paniccodes.h File Reference

Defines the reason codes thrown when a kernel panic occurs.

19.88 paniccodes.h 265

19.87.1 Detailed Description

Defines the reason codes thrown when a kernel panic occurs.

Definition in file paniccodes.h.

19.88 paniccodes.h

```
00001 /
00002
00003
00004
00005
00006
00007
80000
00009
      --[Mark3 Realtime Platform]-
00010
00011 Copyright (c) 2012 - 2017 Funkenstein Software Consulting, all rights reserved.
00012 See license.txt for more information
00020 #ifndef ___PANIC_CODES_H
00021 #define ___PANIC_CODES_H
00022
00023 #define PANIC_ASSERT_FAILED (1)
00024 #define PANIC_LIST_UNLINK_FAILED (2)
00025 #define PANIC_STACK_SLACK_VIOLATED (3)
00026 #define PANIC_AUTO_HEAP_EXHAUSTED (4)
00027 #define PANIC_POWERMAN_EXHAUSTED (5)
00028 #define PANIC_NO_READY_THREADS (6)
00029 #define PANIC_RUNNING_THREAD_DESCOPED (7)
00030 #define PANIC_ACTIVE_SEMAPHORE_DESCOPED (8) 00031 #define PANIC_ACTIVE_MUTEX_DESCOPED (9)
00032 #define PANIC_ACTIVE_EVENTFLAG_DESCOPED (10)
00033 #define PANIC_ACTIVE_NOTIFY_DESCOPED (11)
00034 #define PANIC_ACTIVE_MAILBOX_DESCOPED (12)
00035 #define PANIC_ACTIVE_TIMER_DESCOPED (13)
00036
00037 #endif // __PANIC_CODES_H
```

19.89 /media/usb/project/github/Mark3/kernel/public/priomap.h File Reference

Priority map data structure.

```
#include "kerneltypes.h"
#include "mark3cfg.h"
```

Classes

class PriorityMap

The PriorityMap class.

19.89.1 Detailed Description

Priority map data structure.

Definition in file priomap.h.

19.90 priomap.h



```
00005
00006
00007
00008
00009 -- [Mark3 Realtime Platform] ---
00010
00011 Copyright (c) 2012 - 2017 Funkenstein Software Consulting, all rights reserved.
00012 See license.txt for more information
00013 =
00019 #ifndef ___PRIOMAP_H__
00020 #define __PRIOMAP_H_
00021
00022 #include "kerneltypes.h"
00023 #include "mark3cfg.h'
00024
00025 //
00026 // Define the type used to store the priority map based on the word size of
00027 // the underlying host architecture.
00028 #if !defined(PORT_PRIO_MAP_WORD_SIZE)
00029 #error "undefined PORT_PRIO_MAP_WORD_SIZE"
00030 #endif
00031
00032 #define PRIO_MAP_WORD_TYPE K_WORD
00033
00034 // Size of the map index type in bits
00035 #define PRIO_MAP_BITS (8 * PORT_PRIO_MAP_WORD_SIZE)
00036
00037 // # of bits in an integer used to represent the number of bits in the map.
00038 // Used for bitshifting the bit index away from the map index. 00039 // i.e. 3 == 8 bits, 4 == 16 bits, 5 == 32 bits, etc...
00040 #define PRIO_MAP_WORD_SHIFT (2 + PORT_PRIO_MAP_WORD_SIZE)
00041
00042 // Bitmask used to separate out the priorities first-level bitmap from its
00043 // second-level map index for a given priority 00044 #define PRIO_MAP_BIT_MASK ((1 << PRIO_MAP_WORD_SHIFT) - 1)
00045
00046 // Get the priority bit for a given thread
00047 #define PRIO_BIT(x) ((x)&PRIO_MAP_BIT_MASK)
00048
00049 \ensuremath{//} Macro used to get the map index for a given priroity
00050 #define PRIO_MAP_WORD_INDEX(prio) ((prio) >> PRIO_MAP_WORD_SHIFT)
00051
00052 // Required size of the bitmap array in words
00053 #define PRIO_MAP_NUM_WORDS ((KERNEL_NUM_PRIORITIES + (PRIO_MAP_BITS - 1)) / (PRIO_MAP_BITS))
00054
00055 //--
00056 #if (PRIO_MAP_NUM_WORDS == 1) 00057 // If there is only 1 word required to store the priority information, we don't
00058 // need an array, or a secondary bitmap. 00059 #define PRIO_MAP_MULTI_LEVEL (0)
00061 // An array of bitmaps are required, and a secondary index is required to
{\tt 00062} // efficiently track which priority levels are active.
00063 #define PRIO_MAP_MULTI_LEVEL (1)
00064 #endif
00065
00066 //---
00070 class PriorityMap
00071 {
00072 public:
00078
          PriorityMap();
00079
00085
          void Set(PORT_PRIO_TYPE uXPrio_);
00086
00092
          void Clear(PORT_PRIO_TYPE uXPrio_);
00093
00102
          PORT PRIO TYPE HighestPriority(void);
00103
00104 private:
00105 #if PRIO_MAP_MULTI_LEVEL
00106
          PRIO_MAP_WORD_TYPE m_auXPriorityMap[PRIO_MAP_NUM_WORDS];
00107
          PRIO_MAP_WORD_TYPE m_uXPriorityMapL2;
00108 #else
          PRIO_MAP_WORD_TYPE m_uXPriorityMap;
00109
00110 #endif
00111 };
00112
00113 #endif
```

19.91 /media/usb/project/github/Mark3/kernel/public/profile.h File Reference

High-precision profiling timers.

19.92 profile.h 267

```
#include "kerneltypes.h"
#include "mark3cfg.h"
#include "ll.h"
```

Classes

class ProfileTimer

Profiling timer.

19.91.1 Detailed Description

High-precision profiling timers.

Enables the profiling and instrumentation of performance-critical code. Multiple timers can be used simultaneously to enable system-wide performance metrics to be computed in a lightweight manner.

Usage:

```
ProfileTimer clMyTimer;
int i;

clMyTimer.Init();

// Profile the same block of code ten times
for (i = 0; i < 10; i++)
{
    clMyTimer.Start();
    ...
    //Block of code to profile
    ...
    clMyTimer.Stop();
}

// Get the average execution time of all iterations
u32AverageTimer = clMyTimer.GetAverage();

// Get the execution time from the last iteration
u32LastTimer = clMyTimer.GetCurrent();</pre>
```

Definition in file profile.h.

19.92 profile.h

```
00001 /
00002
00003
00004
00005
00006
00007
00008
00009 -- [Mark3 Realtime Platform] -
00010
00011 Copyright (c) 2012 - 2017 Funkenstein Software Consulting, all rights reserved.
00012 See license.txt for more information
00013 =
00052 #ifndef __PROFILE_H_
00053 #define __PROFILE_H_
00054
00055 #include "kerneltypes.h"
00056 #include "mark3cfg.h"
00057 #include "ll.h"
00058
00059 #if KERNEL_USE_PROFILER
00060
00069 class ProfileTimer
00070 {
00071 public:
00078
          void Init();
00079
```

```
00086
          void Start();
00087
00094
          void Stop();
00095
00103
          uint32_t GetAverage();
00104
00113
          uint32_t GetCurrent();
00114
00115 private:
00126
          uint32_t ComputeCurrentTicks(uint16_t u16Current_, uint32_t u32Epoch_);
00127
00128
          uint32_t m_u32Cumulative;
00129
          uint32_t m_u32CurrentIteration;
00130
          uint16_t m_u16Initial;
00131
          uint32_t m_u32InitialEpoch;
00132
          uint16_t m_u16Iterations;
00133
          bool
                   m bActive:
00134 };
00135
00136 #endif // KERNEL_USE_PROFILE
00137
00138 #endif
```

19.93 /media/usb/project/github/Mark3/kernel/public/quantum.h File Reference

Thread Quantum declarations for Round-Robin Scheduling.

```
#include "kerneltypes.h"
#include "mark3cfg.h"
#include "thread.h"
#include "timer.h"
#include "timerlist.h"
#include "timerscheduler.h"
```

Classes

· class Quantum

Static-class used to implement Thread quantum functionality, which is a key part of round-robin scheduling.

19.93.1 Detailed Description

Thread Quantum declarations for Round-Robin Scheduling.

Definition in file quantum.h.

19.94 quantum.h

```
00002
00003
00004
00005
00006
00007
00008
00009 -- [Mark3 Realtime Platform] -
00010
00011 Copyright (c) 2012 - 2017 Funkenstein Software Consulting, all rights reserved.
00012 See license.txt for more information
00022 #ifndef __KQUANTUM_H_
00023 #define __KQUANTUM_H_
00024
00025 #include "kerneltypes.h"
00026 #include "mark3cfg.h"
00027
00028 #include "thread.h"
```

```
00029 #include "timer.h"
00030 #include "timerlist.h"
00031 #include "timerscheduler.h"
00032
00033 #if KERNEL USE QUANTUM
00034 class Timer;
00035
00041 class Quantum
00042 {
00043 public:
00052
        static void UpdateTimer();
00053
00060
         static void AddThread(Thread* pclThread_);
00061
00067
        static void RemoveThread();
00068
         static void SetInTimer(void) { m_bInTimer = true; }
00077
00083
        static void ClearInTimer(void) { m_bInTimer = false; }
00084
00085 #if KERNEL_TIMERS_THREADED
00086
         static void SetTimerThread(Thread* pclTimerThread_);
00087
00088
         static Thread* GetTimerThread();
00089 #endif
00090
00091 private:
00103
         static void SetTimer(Thread* pclThread_);
00104
00105 #if KERNEL_TIMERS_THREADED
00106
        static Thread* m_pclTimerThread;
00107 #endif
00108
00109
         static Timer m_clQuantumTimer;
        static bool m_bActive;
static bool m_bInTimer;
00110
00111
00112 };
00113
00114 #endif // KERNEL_USE_QUANTUM
00115
00116 #endif
```

19.95 /media/usb/project/github/Mark3/kernel/public/scheduler.h File Reference

Thread scheduler function declarations.

```
#include "kerneltypes.h"
#include "thread.h"
#include "threadport.h"
#include "priomap.h"
```

Classes

· class Scheduler

Priority-based round-robin Thread scheduling, using ThreadLists for housekeeping.

Variables

volatile Thread * g_pclNext

Pointer to the currently-chosen next-running thread.

Thread * g_pclCurrent

Pointer to the currently-running thread.

19.95.1 Detailed Description

Thread scheduler function declarations.

This scheduler implements a very flexible type of scheduling, which has become the defacto industry standard when it comes to real-time operating systems. This scheduling mechanism is referred to as priority round- robin.

From the name, there are two concepts involved here:

1) Priority scheduling:

Threads are each assigned a priority, and the thread with the highest priority which is ready to run gets to execute.

2) Round-robin scheduling:

Where there are multiple ready threads at the highest-priority level, each thread in that group gets to share time, ensuring that progress is made.

The scheduler uses an array of ThreadList objects to provide the necessary housekeeping required to keep track of threads at the various priorities. As s result, the scheduler contains one ThreadList per priority, with an additional list to manage the storage of threads which are in the "stopped" state (either have been stopped, or have not been started yet).

Definition in file scheduler.h.

19.96 scheduler.h

```
00001
00002
00003
00004
                   \Pi
00005
00006
00007
00008
00009 -- [Mark3 Realtime Platform]
00010
00011 Copyright (c) 2012 - 2017 Funkenstein Software Consulting, all rights reserved.
00012 See license.txt for more information
00013
00046 #ifndef ___SCHEDULER_H_
00047 #define ___SCHEDULER_H_
00048
00049 #include "kerneltypes.h"
00050 #include "thread.h"
00051 #include "threadport.h"
00052 #include "priomap.h"
00053
00054 extern volatile Thread* q_pclNext;
00055 extern Thread*
                              g_pclCurrent;
00056
00057 //---
00062 class Scheduler
00063 {
00064 public:
00070
         static void Init();
00071
00079
          static void Schedule();
08000
00088
          static void Add(Thread* pclThread_);
00089
00098
          static void Remove(Thread* pclThread);
00099
00112
          static bool SetScheduler(bool bEnable_);
00113
00121
          static Thread* GetCurrentThread() { return
      g_pclCurrent; }
00130
          static volatile Thread* GetNextThread() { return
      g pclNext; }
00141
         static ThreadList* GetThreadList(PORT_PRIO_TYPE uXPriority_) {
      return &m_aclPriorities[uXPriority_]; }
00150
         static ThreadList* GetStopList() { return &m_clStopList; }
00159
          static bool IsEnabled() { return m_bEnabled; }
00166
          static void QueueScheduler() { m_bQueuedSchedule = true; }
00167 private:
          static bool m_bEnabled;
00170
00172
          static bool m_bQueuedSchedule;
00173
          static ThreadList m_clStopList;
00176
          static ThreadList m_aclPriorities[
00178
      KERNEL_NUM_PRIORITIES];
```

19.97 /media/usb/project/github/Mark3/kernel/public/thread.h File Reference

Platform independent thread class declarations.

```
#include "kerneltypes.h"
#include "mark3cfg.h"
#include "ll.h"
#include "threadlist.h"
#include "scheduler.h"
#include "threadport.h"
#include "quantum.h"
#include "autoalloc.h"
#include "priomap.h"
```

Classes

· class Thread

Object providing fundamental multitasking support in the kernel.

struct FakeThread_t

If the kernel is set up to use an idle function instead of an idle thread, we use a placeholder data structure to "simulate" the effect of having an idle thread in the system.

19.97.1 Detailed Description

Platform independent thread class declarations.

Threads are an atomic unit of execution, and each instance of the thread class represents an instance of a program running of the processor. The Thread is the fundmanetal user-facing object in the kernel - it is what makes multiprocessing possible from application code.

In Mark3, threads each have their own context - consisting of a stack, and all of the registers required to multiplex a processor between multiple threads.

The Thread class inherits directly from the LinkListNode class to facilitate efficient thread management using Double, or Double-Circular linked lists.

Definition in file thread.h.

19.98 thread.h

```
00001 /
00002
00003
00004
00005
00006
00007
00008
00009 -- [Mark3 Realtime Platform]
00010
00011 Copyright (c) 2012 - 2017 Funkenstein Software Consulting, all rights reserved.
00012 See license.txt for more information
00013 ===
00035 #ifndef __THREAD_H_
00036 #define __THREAD_H_
00037
```

```
00038 #include "kerneltypes.h"
00039 #include "mark3cfg.h"
00040
00041 #include "11.h"
00042 #include "threadlist.h"
00043 #include "scheduler.h
00044 #include "threadport.h"
00045 #include "quantum.h"
00046 #include "autoalloc.h"
00047 #include "priomap.h"
00048
00049 class Thread:
00050
00051 //----
00052 typedef void (*ThreadCreateCallout_t)(Thread* pclThread_);
00053 typedef void (*ThreadExitCallout_t)(Thread* pclThread_);
00054 typedef void (*ThreadContextCallout_t)(Thread* pclThread_);
00055
00056 //--
00060 class Thread : public LinkListNode
00061 {
00062 public:
00063
          void* operator new(size_t sz, void* pv) { return (Thread*)pv; };
00064
          ~Thread();
00065
00066 #if KERNEL_EXTRA_CHECKS
00067
          Thread() { m_eState = THREAD_STATE_INVALID; }
00068
00069
          bool IsInitialized() { return (m_eState != THREAD_STATE_INVALID); }
00070 #endif
00071
00087
          void
          Init(K_WORD* pwStack_, uint16_t u16StackSize_, PORT_PRIO_TYPE uXPriority_,
00088
      ThreadEntry_t pfEntryPoint_, void* pvArg_);
00089
00090 #if KERNEL USE AUTO ALLOC
00091
00109
          static Thread* Init(uint16_t u16StackSize_, uint8_t uXPriority_,
     ThreadEntry_t pfEntryPoint_, void* pvArg_);
00110 #endif
00111
00119
          void Start();
00120
00127
         void Stop();
00128
00129 #if KERNEL_USE_THREADNAME
00130
00139
          void SetName(const char* szName_) { m_szName = szName_; }
         const char* GetName() { return m_szName; }
00146
00147 #endif
00148
          ThreadList* GetOwner(void) { return m_pclOwner; }
00157
00165
          ThreadList* GetCurrent(void) { return m_pclCurrent; }
00174
          PORT_PRIO_TYPE GetPriority(void) { return
     m_uXPriority; }
00182
         PORT_PRIO_TYPE GetCurPriority(void) { return
      m_uXCurPriority; }
00183 #if KERNEL_USE_QUANTUM
00184
00191
          void SetQuantum(uint16_t u16Quantum_) { m_u16Quantum = u16Quantum_; }
00199
          uint16_t GetQuantum(void) { return m_u16Quantum; }
00200 #endif
00201
          void SetCurrent(ThreadList* pclNewList_) { m_pclCurrent = pclNewList_;
00217
          void SetOwner(ThreadList* pclNewList_) { m_pclOwner = pclNewList_; }
00230
          void SetPriority(PORT_PRIO_TYPE uXPriority_);
00231
00241
          void InheritPriority(PORT_PRIO_TYPE uXPriority_);
00242
00243 #if KERNEL_USE_DYNAMIC_THREADS
00244
         void Exit();
00255
00256 #endif
00257
00258 #if KERNEL_USE_SLEEP
00259
00267
          static void Sleep(uint32_t u32TimeMs_);
00268
00277
          static void USleep (uint32 t u32TimeUs );
00278 #endif
00279
00287
          static void Yield(void);
00288
00296
          void SetID(uint8_t u8ID_) { m_u8ThreadID = u8ID_; }
00304
          uint8_t GetID() { return m_u8ThreadID; }
          uint16_t GetStackSlack();
00317
```

19.98 thread.h 273

```
00318
00319 #if KERNEL_USE_EVENTFLAG
00320
00327
          uint16_t GetEventFlagMask() { return m_u16FlagMask; }
          void SetEventFlagMask(uint16_t u16Mask_) { m_u16FlagMask = u16Mask_; }
00332
          void SetEventFlagMode(EventFlagOperation_t eMode_) {
00338
     m_eFlagMode = eMode_; }
00343
         EventFlagOperation_t GetEventFlagMode() { return
     m_eFlagMode; }
00344 #endif
00345
00346 #if KERNEL USE TIMEOUTS || KERNEL USE SLEEP
00347
00350
         Timer* GetTimer();
00351 #endif
00352 #if KERNEL_USE_TIMEOUTS
00353
00361
          void SetExpired(bool bExpired );
00362
00369
         bool GetExpired();
00370 #endif
00371
00372 #if KERNEL USE IDLE FUNC
00373
00378
          void InitIdle();
00379 #endif
00380
00381 #if KERNEL_USE_EXTENDED_CONTEXT
00382
00391
          void* GetExtendedContext() { return m_pvExtendedContext; }
00392
00404
          void SetExtendedContext(void* pvData_) {
      m_pvExtendedContext = pvData_; }
00405 #endif
00406
          ThreadState_t GetState() { return m_eState; }
00413
00421
          void SetState(ThreadState_t eState_) { m_eState = eState_; }
00422
00427
          K_WORD* GetStack() { return m_pwStack; }
00428
00433
          uint16_t GetStackSize() { return m_u16StackSize; }
00434
00435
          friend class ThreadPort;
00436 private:
00444
          static void ContextSwitchSWI (void);
00445
00451
          void SetPriorityBase(PORT_PRIO_TYPE uXPriority_);
00452
00454
          K_WORD* m_pwStackTop;
00455
00457
         K_WORD* m_pwStack;
00458
00460
          uint8_t m_u8ThreadID;
00461
          PORT PRIO TYPE m uXPriority:
00463
00464
          PORT_PRIO_TYPE m_uXCurPriority;
00467
00469
          ThreadState_t m_eState;
00470
00471 #if KERNEL_USE_EXTENDED_CONTEXT
00472
         void* m_pvExtendedContext;
00474 #endif
00475
00476 #if KERNEL_USE_THREADNAME
00477
         const char* m_szName;
00479 #endif
00480
00482
          uint16_t m_u16StackSize;
00483
00485
         ThreadList* m_pclCurrent;
00486
00488
         ThreadList* m_pclOwner;
00489
00491
          ThreadEntry t m pfEntryPoint;
00492
00494
          void* m_pvArg;
00495
00496 #if KERNEL_USE_QUANTUM
00497
         uint16_t m_u16Quantum;
00499 #endif
00501 #if KERNEL_USE_EVENTFLAG
00502
          uint16_t m_u16FlagMask;
00504
00506
         EventFlagOperation_t m_eFlagMode;
00507 #endif
```

```
00509 #if KERNEL_USE_TIMEOUTS || KERNEL_USE_SLEEP
00510
         Timer m_clTimer;
00512 #endif
00513
00514 #if KERNEL_USE_TIMEOUTS
00515
        bool m_bExpired;
00517 #endif
00518 };
00519
00520 #if KERNEL_USE_IDLE_FUNC
00521 //----
00533 typedef struct {
00534
         LinkListNode* next;
00535
         LinkListNode* prev;
00536
         K_WORD* m_pwStackTop;
00538
00539
00541
         K_WORD* m_pwStack;
00542
00544
         uint8_t m_u8ThreadID;
00545
         PORT_PRIO_TYPE m_uXPriority;
00547
00548
00550
         PORT_PRIO_TYPE m_uXCurPriority;
00551
00553
         ThreadState_t m_eState;
00554
00555 #if KERNEL_USE_EXTENDED_CONTEXT
         void* m_pvExtendedContext;
00556
00558 #endif
00559
00560 #if KERNEL_USE_THREADNAME
00561
         const char* m_szName;
00563 #endif
00564
00565 } FakeThread t;
00566 #endif
00567
00568 #endif
```

19.99 /media/usb/project/github/Mark3/kernel/public/threadlist.h File Reference

Thread linked-list declarations.

```
#include "kerneltypes.h"
#include "priomap.h"
#include "ll.h"
```

Classes

· class ThreadList

This class is used for building thread-management facilities, such as schedulers, and blocking objects.

19.99.1 Detailed Description

Thread linked-list declarations.

Definition in file threadlist.h.

19.100 threadlist.h



```
00007
               ___
                            ___
                                    1___
                                         ___
                       00008
00009 -- [Mark3 Realtime Platform]-----
00010
00011 Copyright (c) 2012 - 2017 Funkenstein Software Consulting, all rights reserved.
00012 See license.txt for more information
00023 #define __THREADLIST_H_
00024
00025 #include "kerneltypes.h"
00025 #include "priomap.h"
00026 #include "priomap.h"
00028
00029 class Thread;
00030
00035 class ThreadList : public CircularLinkList
00036 {
00037 public:
00038
          void* operator new(size_t sz, void* pv) { return (ThreadList*)pv; };
00044
          ThreadList() : m_uXPriority(0), m_pclMap(NULL)
00045
00046
00054
          void SetPriority(PORT_PRIO_TYPE uXPriority_);
00055
          void SetMapPointer(PriorityMap* pclMap_);
00066
00074
          void Add(LinkListNode* node_);
00075
         void Add(LinkListNode* node_, PriorityMap* pclMap_,
00087
     PORT_PRIO_TYPE uXPriority_);
00088
00097
          void AddPriority(LinkListNode* node_);
00098
00106
         void Remove(LinkListNode* node_);
00107
00115
          Thread* HighestWaiter();
00116
00117 private:
00119
        PORT_PRIO_TYPE m_uXPriority;
00120
00122
          PriorityMap* m_pclMap;
00123 };
00124
00125 #endif
```

19.101 /media/usb/project/github/Mark3/kernel/public/timer.h File Reference

Timer object declarations.

```
#include "kerneltypes.h"
#include "mark3cfg.h"
#include "ll.h"
```

Classes

· class Timer

Kernel-managed software timers.

Macros

• #define TIMERLIST_FLAG_ONE_SHOT (0x01)

Timer is one-shot.

• #define TIMERLIST_FLAG_ACTIVE (0x02)

Timer is currently active.

#define TIMERLIST_FLAG_CALLBACK (0x04)

Timer is pending a callback.

#define TIMERLIST_FLAG_EXPIRED (0x08)

Timer is actually expired.

#define MAX_TIMER_TICKS (0x7FFFFFFF)

Maximum value to set.

• #define MIN_TICKS (3)

The minimum tick value to set.

Typedefs

typedef void(* TimerCallback_t)(Thread *pclOwner_, void *pvData_)
 This type defines the callback function type for timer events.

19.101.1 Detailed Description

Timer object declarations.

Definition in file timer.h.

19.101.2 Macro Definition Documentation

19.101.2.1 #define TIMERLIST_FLAG_EXPIRED (0x08)

Timer is actually expired.

Definition at line 36 of file timer.h.

19.101.3 Typedef Documentation

19.101.3.1 typedef void(* TimerCallback_t)(Thread *pclOwner_, void *pvData_)

This type defines the callback function type for timer events.

Since these are called from an interrupt context, they do not operate from within a thread or object context directly – as a result, the context must be manually passed into the calls.

pclOwner_ is a pointer to the thread that owns the timer pvData_ is a pointer to some data or object that needs to know about the timer's expiry from within the timer interrupt context.

Definition at line 95 of file timer.h.

19.102 timer.h

```
00001 /
00002
00003
00004
00005
00006
00007
80000
00009 -- [Mark3 Realtime Platform]
00010
00011 Copyright (c) 2012 - 2017 Funkenstein Software Consulting, all rights reserved.
00012 See license.txt for more information
00013 ====
00021 #ifndef __TIMER_H_
00022 #define __TIMER_H_
00023
00024 #include "kerneltypes.h"
00025 #include "mark3cfg.h"
00026
00027 #include "11.h"
```

19.102 timer.h 277

```
00029 #if KERNEL_USE_TIMERS
00030 class Thread;
00031
00032 //----
00033 #define TIMERLIST_FLAG_ONE_SHOT (0x01)
00034 #define TIMERLIST_FLAG_ACTIVE (0x02)
00035 #define TIMERLIST_FLAG_CALLBACK (0x04)
00036 #define TIMERLIST_FLAG_EXPIRED (0x08)
00037
00038 //-----
00039 #define TIMER_INVALID_COOKIE (0x3C)
00040 #define TIMER_INIT_COOKIE
                                          (0xC3)
00041
00042 //---
00043 #define MAX_TIMER_TICKS (0x7FFFFFFF)
00044 #define TIMER_TICKS_INVALID (0x80000000)
00045 //--
00046 #if KERNEL_TIMERS_TICKLESS
00047
00048 //--
00049 /*
          Ugly macros to support a wide resolution of delays.

Given a 16-bit timer @ 16MHz & 256 cycle prescaler, this gives u16...

Max time, SECONDS_TO_TICKS: 68719s

Max time, MSECONDS_TO_TICKS: 6871.9s
00050
00051
00052
00054
           Max time, USECONDS_TO_TICKS: 6.8719s
00055
00056
           ...With a 16us tick resolution.
00057
00058
          Depending on the system frequency and timer resolution, you may want to
00059
          customize these values to suit your system more appropriately.
00060 */
00061 //---
00062 \#define SECONDS_TO_TICKS(x) (((uint32_t)x) * PORT_TIMER_FREQ))
00063 #define MSECONDS_TO_TICKS(x) ((((((uint32_t)x) * (PORT_TIMER_FREQ / 100)) + 5) / 10))
00064 #define USECONDS_TO_TICKS(x) ((((((uint32_t)x) * PORT_TIMER_FREQ) + 50000) / 1000000))
00067 #define MIN_TICKS (3)
00068 //---
00069
00070 #else
00071
00073 // add time because we don't know how far in an epoch we are when a call is made.
00074 \#define SECONDS_TO_TICKS(x) (((uint32_t)(x) *1000) + 1)
00075 #define MSECONDS_TO_TICKS(x) ((uint32_t)(x + 1))
00076 #define USECONDS_TO_TICKS(x) (((uint32_t)(x + 999)) / 1000)
00077
00078 //----
00079 #define MIN_TICKS (1)
00080 //----
00081
00082 #endif // KERNEL_TIMERS_TICKLESS
00083
00095 typedef void (*TimerCallback_t)(Thread* pclOwner_, void* pvData_);
00096
00097 //---
00098 class TimerList:
00099 class TimerScheduler;
00100 class Quantum;
00102 //----
00112 class Timer : public LinkListNode
00113 {
00114 public:
00115
          void* operator new(size_t sz, void* pv) { return (Timer*)pv; };
          Timer();
00123
00129
          void Init();
00130
          void Start (bool bRepeat_, uint32_t u32IntervalMs_, TimerCallback_t pfCallback_,
00142
      void* pvData_);
00143
00157
00158
          Start (bool bRepeat_, uint32_t u32IntervalMs_, uint32_t u32ToleranceMs_,
      TimerCallback_t pfCallback_, void* pvData_);
00159
00168
           void Start();
00169
00176
00177
00187
          void SetFlags(uint8_t u8Flags_) { m_u8Flags = u8Flags_; }
          void SetCallback(TimerCallback_t pfCallback_) {
00195
      m_pfCallback = pfCallback_; }
```

```
void SetData(void* pvData_) { m_pvData = pvData_; }
void SetOwner(Thread* pclOwner_) { m_pclOwner = pclOwner_; }
00203
00220
          void SetIntervalTicks(uint32_t u32Ticks_);
00221
00229
          void SetIntervalSeconds(uint32 t u32Seconds);
00230
00238
          uint32_t GetInterval() { return m_u32Interval; }
00246
          void SetIntervalMSeconds(uint32_t u32MSeconds_);
00247
00255
          void SetIntervalUSeconds(uint32_t u32USeconds_);
00256
00265
          void SetTolerance(uint32 t u32Ticks );
00266
00267 private:
00268
          friend class TimerList;
00269
00270 #if KERNEL EXTRA CHECKS
00271
00274
          void SetInitialized() { m_u8Initialized = TIMER_INIT_COOKIE; }
00275
00280
          bool IsInitialized(void) { return (m_u8Initialized == TIMER_INIT_COOKIE); }
00281
          uint8_t m_u8Initialized;
00283
00284 #endif
00285
          uint8_t m_u8Flags;
00288
00290
          TimerCallback_t m_pfCallback;
00291
00293
          uint32_t m_u32Interval;
00294
00296
          uint32_t m_u32TimeLeft;
00297
00299
          uint32_t m_u32TimerTolerance;
00300
          Thread* m_pclOwner;
00302
00303
00305
          void* m_pvData;
00306 };
00307
00308 #endif // KERNEL_USE_TIMERS
00309
00310 #endif
```

19.103 /media/usb/project/github/Mark3/kernel/public/timerlist.h File Reference

Timer list declarations.

```
#include "kerneltypes.h"
#include "mark3cfg.h"
#include "mutex.h"
```

Classes

· class TimerList

TimerList class - a doubly-linked-list of timer objects.

19.103.1 Detailed Description

Timer list declarations.

These classes implements a linked list of timer objects attached to the global kernel timer scheduler.

Definition in file timerlist.h.

19.104 timerlist.h

00001 /*-----

```
00002
00003
00004
00005
00006
00007
00009 -- [Mark3 Realtime Platform] -
00010
00011 Copyright (c) 2012 - 2017 Funkenstein Software Consulting, all rights reserved.
00012 See license.txt for more information
00013 ========== */
00024 #ifndef __TIMERLIST_H_
00025 #define __TIMERLIST_H_
00026
00027 #include "kerneltypes.h"
00028 #include "mark3cfg.h"
00029
00030 #include "mutex.h"
00031 #if KERNEL_USE_TIMERS
00032
00033 class Timer;
00034
00035 //----
00039 class TimerList : public DoubleLinkList
00041 public:
00048
        void Init();
00049
00057
         void Add(Timer* pclListNode_);
00058
00066
         void Remove(Timer* pclLinkListNode_);
00067
00074
         void Process();
00075
00076 private:
00078
         uint32_t m_u32NextWakeup;
         bool m_bTimerActive;
00082
00083 #if KERNEL_TIMERS_THREADED
00084
        Mutex m_clMutex;
00086 #endif
00087
00088 };
00089
00090 #endif // KERNEL_USE_TIMERS
00091
00092 #endif
```

19.105 /media/usb/project/github/Mark3/kernel/public/timerscheduler.h File Reference

Timer scheduler declarations.

```
#include "kerneltypes.h"
#include "mark3cfg.h"
#include "ll.h"
#include "timer.h"
#include "timerlist.h"
```

Classes

· class TimerScheduler

"Static" Class used to interface a global TimerList with the rest of the kernel.

19.105.1 Detailed Description

Timer scheduler declarations.

Definition in file timerscheduler.h.

19.106 timerscheduler.h

```
00001
00002
00003
00004
00005
00006
00007
00008
00009 -- [Mark3 Realtime Platform]
00010
00011 Copyright (c) 2012 - 2017 Funkenstein Software Consulting, all rights reserved.
00012 See license.txt for more information
00013 ====
00021 #ifndef __TIMERSCHEDULER_H__
00022 #define __TIMERSCHEDULER_H_
00023
00024 #include "kerneltypes.h"
00025 #include "mark3cfg.h"
00026
00027 #include "11.h" 00028 #include "timer.h"
00029 #include "timerlist.h"
00030
00031 #if KERNEL_USE_TIMERS
00032
00033 //---
00038 class TimerScheduler
00039 {
00040 public:
00047
         static void Init() { m_clTimerList.Init(); }
00056
          static void Add(Timer* pclListNode_) { m_clTimerList.
      Add(pclListNode_); }
00065
          static void Remove(Timer* pclListNode_) { m_clTimerList.
      Remove(pclListNode_); }
00074
         static void Process() { m_clTimerList.Process(); }
00075 private:
          static TimerList m_clTimerList;
00078 };
00079
00080 #endif // KERNEL_USE_TIMERS
00081
00082 #endif // TIMERSCHEDULER H
```

19.107 /media/usb/project/github/Mark3/kernel/public/tracebuffer.h File Reference

Kernel trace buffer class declaration.

```
#include "kerneltypes.h"
#include "mark3cfg.h"
```

19.107.1 Detailed Description

Kernel trace buffer class declaration.

Global kernel trace-buffer. used to instrument the kernel with lightweight encoded print statements. If something goes wrong, the tracebuffer can be examined for debugging purposes. Also, subsets of kernel trace information can be extracted and analyzed to provide information about runtime performance, thread-scheduling, and other nifty things in real-time.

Definition in file tracebuffer.h.

19.108 tracebuffer.h

```
_||_|\_\ _|| _|
00007
00008
00009 -- [Mark3 Realtime Platform] -----
00010
00011 Copyright (c) 2012 - 2017 Funkenstein Software Consulting, all rights reserved.
00012 See license.txt for more information
00013 ====
00024 #ifndef __TRACEBUFFER_H_
00025 #define __TRACEBUFFER_H_
00026
00027 #include "kerneltypes.h"
00028 #include "mark3cfg.h"
00029
00030 #if KERNEL_USE_DEBUG && !KERNEL_AWARE_SIMULATION
00031
00032 #define TRACE BUFFER SIZE (160)
00033
00034 typedef void (*TraceBufferCallback_t) (uint16_t* pu16Source_, uint16_t u16Len_, bool bPingPong_);
00035
00039 class TraceBuffer
00040 {
00041 public:
00047
         static void Init();
00048
00053
         static uint16_t Increment(void) { return m_u16SyncNumber++; }
00062
         static void Write(uint16_t* pu16Data_, uint16_t u16Size_);
00063
00072
         static void SetCallback(TraceBufferCallback_t pfCallback_) { m_pfCallback = pfCallback_; }
00073 private:
00074
         static TraceBufferCallback_t m_pfCallback;
00075
         static uint16_t
                                      m u16SyncNumber;
00076
         static uint16_t
                                       m_u16Index;
00077
         static uint16_t
                                      m_au16Buffer[(TRACE_BUFFER_SIZE / sizeof(uint16_t))];
00078 };
00079
00080 #endif // KERNEL_USE_DEBUG
00082 #endif
```

19.109 /media/usb/project/github/Mark3/kernel/quantum.cpp File Reference

Thread Quantum Implementation for Round-Robin Scheduling.

```
#include "kerneltypes.h"
#include "mark3cfg.h"
#include "thread.h"
#include "timerlist.h"
#include "quantum.h"
#include "kernelaware.h"
#include "dbg_file_list.h"
#include "buffalogger.h"
#include "kerneldebug.h"
```

19.109.1 Detailed Description

Thread Quantum Implementation for Round-Robin Scheduling.

Definition in file quantum.cpp.

19.110 quantum.cpp



```
00009 -- [Mark3 Realtime Platform] -----
00010
00011 Copyright (c) 2012 - 2017 Funkenstein Software Consulting, all rights reserved.
00012 See license.txt for more information
00013 ========
00022 #include "kerneltypes.h"
00023 #include "mark3cfg.h"
00024
00025 #include "thread.h"
00026 #include "timerlist.h'
00027 #include "quantum.h"
00028 #include "kernelaware.h"
00029
00030 #define _CAN_HAS_DEBUG
00031 //--[Autogenerated - Do Not Modify]------
00032 #include "dbg_file_list.h"
00033 #include "buffalogger.h"
00034 #if defined(DBG_FILE)
00035 #error "Debug logging file token already defined! Bailing."
00036 #else
00037 #define DBG_FILE _DBG_
                            __KERNEL_QUANTUM_CPP
00038 #endif
00039 //--[End Autogenerated content]-----
00040 #include "kerneldebug.h"
00041
00042 #if KERNEL_USE_QUANTUM
00043
00044 //----
00045 static volatile bool bAddOuantumTimer; // Indicates that a timer add is pending
00046
00047 //-
00048 #if KERNEL_TIMERS_THREADED
00049 Thread* Quantum::m_pclTimerThread;
00050 #endif // KERNEL_TIMERS_THREADED
00051
00052 Timer Quantum::m_clQuantumTimer; // The global timernodelist_t object
00053 bool Quantum::m_bActive;
00054 bool Quantum::m_bInTimer;
00055 //---
00066 static void QuantumCallback(Thread* pclThread_, void* /*pvData_*/)
00067 {
00068
          // Validate thread pointer, check that source/destination match (it's
         // in its real priority list).
if (pclThread_->GetCurrent()->GetHead() != pclThread_->
00069
     GetCurrent()->GetTail()) {
00071 bAddQuantumTimer = true;
00072
             pclThread_->GetCurrent()->PivotForward();
00073
         }
00074 }
00076 //----
00077 void Quantum::SetTimer(Thread* pclThread_)
00078 {
00079
         m_clQuantumTimer.SetIntervalMSeconds(pclThread_->
     GetQuantum());
00080 m_clQuantumTimer.SetFlags(TIMERLIST_FLAG_ONE_SHOT);
00081
          m_clQuantumTimer.SetData(NULL);
00082
         m_clQuantumTimer.SetCallback((TimerCallback_t)QuantumCallback);
00083
         m_clQuantumTimer.SetOwner(pclThread_);
00084 }
00085
00086 //-
00087 void Quantum::AddThread(Thread* pclThread_)
00088 {
00089
          if (m_bActive
00090 #if KERNEL_USE_IDLE_FUNC
00091 || (pclThread_ == Kernel::GetIdleThread())
00092 #endif
00093
00094
             return;
00095
         }
00096
         // If this is called from the timer callback, queue a timer add...
00097
00098
         if (m_bInTimer) {
             bAddQuantumTimer = true;
00099
00100
00101
         }
00102
         // If this isn't the only thread in the list.
00103
          if (pclThread_->GetCurrent()->GetHead() != pclThread_->
00104
     GetCurrent()->GetTail()) {
00105 #if KERNEL_EXTRA_CHECKS
00106
             m_clQuantumTimer.Init();
00107 #endif
00108
              Ouantum::SetTimer(pclThread);
00109
             TimerScheduler::Add(&m clOuantumTimer);
```

```
m_bActive = true;
00111
00112 }
00113
00114 //----
00115 void Ouantum::RemoveThread(void)
00116 {
00117
          if (!m_bActive) {
         ..._wAct
return;
}
00118
00119
00120
         // Cancel the current timer
00121
00122
          TimerScheduler::Remove(&m_clQuantumTimer);
00123
         m_bActive = false;
00124 }
00125
00126 //---
00127 void Quantum::UpdateTimer(void)
00128 {
          // If we have to re-add the quantum timer (more than 2 threads at the
        // high-priority level...)
if (bAddQuantumTimer) {
00130
00131
         // Trigger a thread yield - this will also re-schedule the
// thread *and* reset the round-robin scheduler.
00132
00133
00134
              Thread::Yield();
00135
             bAddQuantumTimer = false;
        }
00136
00137 }
00138
00139 //----
00140 #if KERNEL_TIMERS_THREADED
00141 void Quantum::SetTimerThread(Thread* pclThread_)
00142 {
00143
          m_pclTimerThread = pclThread_;
00144 }
00145
00146 Thread* Quantum::GetTimerThread()
00148
          return m_pclTimerThread;
00149 }
00150
00151 #endif // KERNEL TIMERS THREADED
00152
00153 #endif // KERNEL_USE_QUANTUM
```

19.111 /media/usb/project/github/Mark3/kernel/scheduler.cpp File Reference

Strict-Priority + Round-Robin thread scheduler implementation.

```
#include "kerneltypes.h"
#include "ll.h"
#include "scheduler.h"
#include "thread.h"
#include "threadport.h"
#include "kernel.h"
#include "dbg_file_list.h"
#include "buffalogger.h"
#include "kerneldebug.h"
```

Variables

volatile Thread * g_pclNext

Pointer to the currently-chosen next-running thread.

Thread * g pclCurrent

Pointer to the currently-running thread.

19.111.1 Detailed Description

Strict-Priority + Round-Robin thread scheduler implementation.

Definition in file scheduler.cpp.

19.112 scheduler.cpp

```
00001 /*----
00002
00003
00004
00005
00006
00007
00008
00009 -- [Mark3 Realtime Platform]
00011 Copyright (c) 2012 - 2017 Funkenstein Software Consulting, all rights reserved.
00012 See license.txt for more information
00022 #include "kerneltypes.h"
00023 #include "ll.h"
00024 #include "scheduler.h"
00025 #include "thread.h"
00026 #include "threadport.h"
00027 #include "kernel.h"
00028
00029 #define CAN HAS DEBUG
00030 //--[Autogenerated - Do Not Modify]-
00031 #include "dbg_file_list.h"
00032 #include "buffalogger.h"
00033 #if defined(DBG_FILE) 00034 #error "Debug logging file token already defined! Bailing."
00035 #else
00036 #define DBG_FILE _DBG___KERNEL_SCHEDULER_CPP
00037 #endif
00038 //--[End Autogenerated content]-----
00039
00040 #include "kerneldebug.h"
00041 volatile Thread* g_pclNext;
00042 Thread*
                       g_pclCurrent;
00043
00044 //--
00045 bool Scheduler::m_bEnabled;
00046 bool Scheduler::m_bQueuedSchedule;
00047
00048 //-
00049 ThreadList Scheduler::m_clStopList;
00050 ThreadList Scheduler::m_aclPriorities[
     KERNEL_NUM_PRIORITIES];
00051 PriorityMap Scheduler::m_clPrioMap;
00052
00053 //-
00054 void Scheduler::Init()
00055 {
00056
          for (int i = 0; i < KERNEL_NUM_PRIORITIES; i++) {</pre>
             m_aclPriorities[i].SetPriority(i);
00057
00058
              m_aclPriorities[i].SetMapPointer(&
     m_clPrioMap);
00059
00060 }
00061
00062 //---
00063 void Scheduler::Schedule()
00064 {
00065
          PORT_PRIO_TYPE uXPrio;
00066
00067
          uXPrio = m_clPrioMap.HighestPriority();
00068
00069 #if KERNEL_USE_IDLE_FUNC
00070
          if (uXPrio == 0) {
00071
              // There aren't any active threads at all - set g_pclNext to IDLE
00072
              g_pclNext = Kernel::GetIdleThread();
00073
          } else
00074 #endif
00075
00076
              if (uXPrio == 0) {
00077
                  Kernel::Panic(PANIC_NO_READY_THREADS);
00078
00079
              // Priorities are one-indexed
00080
              uXPrio--;
00081
00082
              \ensuremath{//} Get the thread node at this priority.
              g_pclNext = (Thread*) (m_aclPriorities[uXPrio].GetHead());
00083
00084
00085
          KERNEL_TRACE_1("Next Thread: %d\n", (uint16_t)((Thread*)g_pclNext)->GetID());
```

```
00086 }
00087
00088 //--
00089 void Scheduler::Add(Thread* pclThread_)
00090 {
00091
          m_aclPriorities[pclThread_->GetPriority()].Add(pclThread_);
00093
00094 //-
00095 void Scheduler::Remove(Thread* pclThread_)
00096 {
00097
          m_aclPriorities[pclThread_->GetPriority()].Remove(pclThread_);
00098 }
00099
00100 //--
00101 bool Scheduler::SetScheduler(bool bEnable_)
00102 {
00103
          bool bRet;
          CS_ENTER();
00104
                     = m_bEnabled;
00105
          bRet
          m_bEnabled = bEnable_;
00106
00107
          \ensuremath{//} If there was a queued scheduler evevent, dequeue and trigger an
          // immediate Yield
00108
          if (m_bEnabled && m_bQueuedSchedule) {
00109
00110
              m_bQueuedSchedule = false;
00111
              Thread::Yield();
00112
00113
          CS_EXIT();
00114
          return bRet;
00115 }
```

19.113 /media/usb/project/github/Mark3/kernel/thread.cpp File Reference

Platform-Independent thread class Definition.

```
#include "kerneltypes.h"
#include "mark3cfg.h"
#include "thread.h"
#include "scheduler.h"
#include "kernelswi.h"
#include "timerlist.h"
#include "quantum.h"
#include "quantum.h"
#include "priomap.h"
#include "dbg_file_list.h"
#include "buffalogger.h"
#include "kerneldebug.h"
```

19.113.1 Detailed Description

Platform-Independent thread class Definition.

Definition in file thread.cpp.

19.114 thread.cpp



```
00011 Copyright (c) 2012 - 2017 Funkenstein Software Consulting, all rights reserved.
00012 See license.txt for more information
00013 =====
00022 #include "kerneltypes.h"
00023 #include "mark3cfg.h"
00024
00025 #include "thread.h"
00026 #include "scheduler.h"
00027 #include "kernelswi.h"
00028 #include "timerlist.h"
00029 #include "ksemaphore.h"
00030 #include "quantum.h"
00031 #include "kernel.h
00032 #include "priomap.h"
00033
00034 #define _CAN_HAS_DEBUG
00035 //--[Autogenerated - Do Not Modify]------
00036 #include "dbg_file_list.h"
00037 #include "buffalogger.h"
00038 #if defined(DBG_FILE)
00039 #error "Debug logging file token already defined! Bailing."
00040 #else
00041 #define DBG_FILE _DBG___KERNEL_THREAD_CPP
00042 #endif
00043 //--[End Autogenerated content]-----
00045 #include "kerneldebug.h"
00046 //---
00047 Thread::~Thread()
00048 {
00049
            // On destruction of a thread located on a stack.
00050
           // ensure that the thread is either stopped, or exited.
00051
           // If the thread is stopped, move it to the exit state.
           // If not in the exit state, kernel panic -- it's catastrophic to have
00052
00053
           \ensuremath{//} running threads on stack suddenly disappear.
           if (m_eState == THREAD_STATE_STOP) {
00054
               CS_ENTER();
00055
               m_pclCurrent->Remove(this);
00057
               m_pclCurrent = 0;
00058
               m_pclOwner = 0;
00059
               m_eState
                              = THREAD_STATE_EXIT;
               CS_EXIT();
00060
00061 } else if (m_eState != THREAD_STATE_EXIT) { 00062 #if KERNEL_AWARE_SIMULATION
               KernelAware::Trace(0, 0, m_u8ThreadID,
      m_eState);
00064 #endif
00065
                Kernel::Panic(PANIC_RUNNING_THREAD_DESCOPED);
00066
00067 }
00068
00069 //----
00070 void Thread::Init(
00071
          K_WORD* pwStack_, uint16_t u16StackSize_, PORT_PRIO_TYPE uXPriority_,
      ThreadEntry_t pfEntryPoint_, void* pvArg_)
00072 {
00073
           static uint8_t u8ThreadID = 0;
00074
00075
           KERNEL_ASSERT (pwStack_);
00076
           KERNEL_ASSERT (pfEntryPoint_);
00077
00078
           ClearNode();
00079
08000
           m_u8ThreadID = u8ThreadID++;
00081 #if KERNEL_USE_IDLE_FUNC
00082
          if (u8ThreadID == 255) {
00083
               u8ThreadID = 0;
00084
00085 #endif
           KERNEL_TRACE_1("Stack Size: %d", u16StackSize_);
KERNEL_TRACE_1("Thread Pri: %d", (uint8_t)uXPriority_);
KERNEL_TRACE_1("Thread Id: %d", (uint16_t)m_u8ThreadID);
KERNEL_TRACE_1("Entrypoint: %x", (uint16_t)pfEntryPoint_);
00087
00088
00089
00090
00091
00092
           // Initialize the thread parameters to their initial values.
00093
                         = pwStack_;
00094
           m_pwStackTop = TOP_OF_STACK(pwStack_, u16StackSize_);
00095
00096
           m u16StackSize = u16StackSize :
00097
00098 #if KERNEL_USE_QUANTUM
          m_u16Quantum = THREAD_QUANTUM_DEFAULT;
00099
00100 #endif
00101
                           = uXPriority_;
00102
           m uXPriority
00103
           m_uXCurPriority = m_uXPriority;
```

19.114 thread.cpp 287

```
m_pfEntryPoint = pfEntryPoint_;
                          = pvArg_;
00105
          m_pvArg
00106
00107 #if KERNEL_USE_THREADNAME
00108
        m_szName = NULL;
00109 #endif
00110 #if KERNEL_USE_TIMERS
00111
          m_clTimer.Init();
00112 #endif
00113
          // Call CPU-specific stack initialization
00114
00115
         ThreadPort::InitStack(this);
00116
00117
          // Add to the global "stop" list.
00118
         CS_ENTER();
m_pclOwner
m_uXPriority);
00120 m pclc
00120
         m_pclOwner
                       = Scheduler::GetThreadList(
         m_pclCurrent = Scheduler::GetStopList();
                       = THREAD_STATE_STOP;
00121
          m_eState
00122
          m_pclCurrent->Add(this);
        CS_EXIT();
00123
00124
00125 #if KERNEL_USE_THREAD_CALLOUTS
        ThreadCreateCallout_t pfCallout = Kernel::GetThreadCreateCallout();
00126
00127
          if (pfCallout != 0) {
              pfCallout(this);
00129
00130 #endif
00131
00132 }
00133
00134 #if KERNEL_USE_AUTO_ALLOC
00135 //--
00136 Thread* Thread::Init(uint16_t ul6StackSize_, PORT_PRIO_TYPE uXPriority_,
      ThreadEntry_t pfEntryPoint_, void* pvArg_)
00137 {
          Thread* pclNew = (Thread*)AutoAlloc::Allocate(sizeof(Thread));
K_WORD* pwStack = (K_WORD*)AutoAlloc::Allocate(u16StackSize_);
00138
00140
          pclNew->Init(pwStack, u16StackSize_, uXPriority_, pfEntryPoint_, pvArg_);
00141
          return pclNew;
00142 }
00143 #endif
00144
00145 //---
00146 void Thread::Start(void)
00147 {
00148 #if KERNEL_EXTRA_CHECKS
00149
        KERNEL_ASSERT(IsInitialized());
00150 #endif
00151
00152
          // Remove the thread from the scheduler's "stopped" list, and add it
00153
          // to the scheduler's ready list at the proper priority.
00154
         KERNEL_TRACE_1("Starting Thread %d", (uint16_t)m_u8ThreadID);
00155
          CS_ENTER();
00156
          Scheduler::GetStopList()->Remove(this);
00157
          Scheduler::Add(this);
          m_pclOwner
00159
                       = Scheduler::GetThreadList(
     m_uXPriority);
00160
        m_pclCurrent = m_pclOwner;
                      = THREAD_STATE_READY;
00161
          m eState
00162
00163 #if KERNEL_USE_QUANTUM
00164 if (Kernel::IsStarted()) {
00165
              if (GetCurPriority() >= Scheduler::GetCurrentThread()->
     GetCurPriority()) {
00166 // Deal with the thread Quantum 00167 \#if KERNEL_TIMERS_THREADED
00168
                  if (Ouantum::GetTimerThread() != this) {
00169 #endif
00170
                      Quantum::RemoveThread();
00171
                      Quantum::AddThread(this);
00172 #if KERNEL_TIMERS_THREADED
00173
                  }
00174 #endif
00175
00176
00177 #endif
00178
          if (Kernel::IsStarted()) {
00179
              if (GetCurPriority() >= Scheduler::GetCurrentThread()->
00180
     GetCurPriority()) {
                 Thread::Yield();
00181
00182
              }
00183
          CS EXIT();
00184
00185 }
```

```
00187 //---
00188 void Thread::Stop()
00189 {
00190 #if KERNEL_EXTRA_CHECKS
          KERNEL_ASSERT(IsInitialized());
00191
00192 #endif
00193
00194
          bool bReschedule = false;
00195
          if (m_eState == THREAD_STATE_STOP) {
00196
              return;
00197
00198
00199
          CS_ENTER();
00200
00201
           \ensuremath{//} If a thread is attempting to stop itself, ensure we call the scheduler
00202
          if (this == Scheduler::GetCurrentThread()) {
00203
               bReschedule = true;
00204
00205
00206
           // Add this thread to the stop-list (removing it from active scheduling)
00207
           // Remove the thread from scheduling
          if (m_eState == THREAD_STATE_READY) {
00208
          Scheduler::Remove(this);
} else if (m_eState == THREAD_STATE_BLOCKED) {
00209
00210
00211
             m_pclCurrent->Remove(this);
00212
00213
00214
          m_pclOwner = Scheduler::GetStopList();
          m_pclOwner = Scheduler...
m_pclCurrent = m_pclOwner;
m_pclOwner->Add(this);
00215
00216
00217
          m_eState = THREAD_STATE_STOP;
00218
00219 #if KERNEL_USE_TIMERS
          // Just to be safe - attempt to remove the thread's timer
// from the timer-scheduler (does no harm if it isn't
00220
00221
           // in the timer-list)
00222
          TimerScheduler::Remove(&m_clTimer);
00224 #endif
00225
00226
          CS_EXIT();
00227
          if (bReschedule) {
00228
00229
               Thread::Yield();
00230
00231 }
00232
00233 #if KERNEL_USE_DYNAMIC_THREADS
00234 //----
00235 void Thread::Exit()
00236 {
00237 #if KERNEL_EXTRA_CHECKS
00238
          KERNEL_ASSERT(IsInitialized());
00239 #endif
00240
          bool bReschedule = false;
00241
00242
          KERNEL_TRACE_1("Exit Thread %d", m_u8ThreadID);
00243
          if (m_eState == THREAD_STATE_EXIT) {
00244
              return;
00245
          }
00246
00247
          CS ENTER();
00248
00249
           // If this thread is the actively-running thread, make sure we run the
00250
           // scheduler again.
00251
          if (this == Scheduler::GetCurrentThread()) {
00252
               bReschedule = true;
00253
00254
00255
          // Remove the thread from scheduling
00256
          if (m_eState == THREAD_STATE_READY) {
00257
               Scheduler::Remove(this);
          } else if ((m_eState == THREAD_STATE_BLOCKED) || (m_eState == THREAD_STATE_STOP)) {
    m_pclCurrent->Remove(this);
00258
00259
00260
          }
00261
00262
          m_pclCurrent = 0;
          m_pclowner = 0;
m_estate = THREAD_STATE_EXIT;
00263
00264
00265
00266
           // We've removed the thread from scheduling, but interrupts might
           // trigger checks against this thread's currently priority before
00267
00268
           // we get around to scheduling new threads. As a result, set the
00269
           // priority to idle to ensure that we always wind up scheduling
00270
           \ensuremath{//} new threads.
          m_uXCurPriority = 0;
00271
00272
          m_uXPriority
```

19.114 thread.cpp 289

```
00273
00274 #if KERNEL_USE_TIMERS
          // Just to be safe - attempt to remove the thread's timer // from the timer-scheduler (does no harm if it isn't
00275
00276
          // in the timer-list)
00277
00278
          TimerScheduler::Remove(&m_clTimer);
00279 #endif
00280
          CS_EXIT();
00281
00282 #if KERNEL_USE_THREAD_CALLOUTS
          ThreadExitCallout_t pfCallout = Kernel::GetThreadExitCallout();
if (pfCallout != 0) {
00283
00284
00285
               pfCallout(this);
00286
00287 #endif
00288
00289
          if (bReschedule) {
              // Choose a new "next" thread if we must
Thread::Yield();
00290
00292
          }
00293 }
00294 #endif
00295
00296 #if KERNEL USE SLEEP
00297 //--
00299 static void ThreadSleepCallback(Thread* /*pclOwner_*/, void* pvData_)
00300 {
00301
          Semaphore* pclSemaphore = static_cast<Semaphore*>(pvData_);
00302
          // Post the semaphore, which will wake the sleeping thread.
00303
          pclSemaphore->Post();
00304 }
00305
00306 //---
00307 void Thread::Sleep(uint32_t u32TimeMs_)
00308 {
00309
          Semaphore clSemaphore;
                   pclTimer = g_pclCurrent->GetTimer();
00310
          Timer*
00312
           // Create a semaphore that this thread will block on
00313
          clSemaphore.Init(0, 1);
00314
00315
          // Create a one-shot timer that will call a callback that posts the
          // semaphore, waking our thread.
00316
00317
          pclTimer->Init();
00318
          pclTimer->SetIntervalMSeconds(u32TimeMs_);
00319
          pclTimer->SetCallback(ThreadSleepCallback);
00320
          pclTimer->SetData((void*)&clSemaphore);
00321
          pclTimer->SetFlags(TIMERLIST_FLAG_ONE_SHOT);
00322
00323
          // Add the new timer to the timer scheduler, and block the thread
00324
          TimerScheduler::Add(pclTimer);
00325
          clSemaphore.Pend();
00326 }
00327
00328 //---
00329 void Thread::USleep(uint32_t u32TimeUs_)
00331
          Semaphore clSemaphore;
                   pclTimer = g_pclCurrent->GetTimer();
00332
00333
          \ensuremath{//} Create a semaphore that this thread will block on
00334
00335
          clSemaphore.Init(0, 1);
00336
00337
          // Create a one-shot timer that will call a callback that posts the
00338
          // semaphore, waking our thread.
00339
          pclTimer->Init();
          pclTimer->SetIntervalUSeconds(u32TimeUs_);
00340
          pclTimer->SetCallback(ThreadSleepCallback);
00341
00342
          pclTimer->SetData((void*)&clSemaphore);
00343
          pclTimer->SetFlags(TIMERLIST_FLAG_ONE_SHOT);
00344
00345
          // Add the new timer to the timer scheduler, and block the thread
00346
          TimerScheduler::Add(pclTimer);
00347
          clSemaphore.Pend();
00348 }
00349 #endif // KERNEL_USE_SLEEP
00350
00351 //----
00352 uint16_t Thread::GetStackSlack()
00353 {
00354 #if KERNEL_EXTRA_CHECKS
          KERNEL_ASSERT(IsInitialized());
00355
00356 #endif
00357
          K_ADDR wTop = (K_ADDR)m_u16StackSize - 1;
K_ADDR wBottom = (K_ADDR)0;
00358
00359
00360
                          = ((wTop + wBottom) + 1) / 2;
          K ADDR wMid
```

```
00361
00362
          CS_ENTER();
00363
           \ensuremath{//} Logarithmic bisection — find the point where the contents of the
00364
          // bogariante Disection - Find the point where the contents of the // stack go from 0xFF's to non 0xFF. Not Definitive, but accurate enough while ((wTop - wBottom) > 1) {
00365
00366
00367 #if STACK_GROWS_DOWN
00368
              if (m_pwStack[wMid] != (K_WORD)(-1))
00369 #else
00370
               if (m_pwStack[wMid] == (K_WORD)(-1))
00371 #endif
00372
               {
00374
                   wTop = wMid;
00375
00376
                 wBottom = wMid;
00377
00378
              wMid = (wTop + wBottom + 1) / 2;
00379
          }
00380
00381
          CS_EXIT();
00382
00383
          return wMid;
00384 }
00385
00386 //-
00387 void Thread::Yield()
00388 {
00389
00390
          CS_ENTER();
          // Run the scheduler
if (Scheduler::IsEnabled()) {
00391
00392
00393
              Scheduler::Schedule();
00394
00395
              \ensuremath{//} Only switch contexts if the new task is different than the old task
00396
              if (Scheduler::GetCurrentThread() !=
     Scheduler::GetNextThread()) {
00397 #if KERNEL_USE_QUANTUM
00398 #if KERNEL_TIMERS_THREADED
00399
                   if (Quantum::GetTimerThread() != g_pclNext) {
00400 #endif
00401
                        \ensuremath{//} new thread scheduled. Stop current quantum timer (if it exists),
00402
                        \ensuremath{//} and restart it for the new thread (if required).
                        Quantum::RemoveThread();
00403
00404
                        Quantum::AddThread((Thread*)g_pclNext);
00405 #if KERNEL_TIMERS_THREADED
00406
00407 #endif
00408 #endif
00409
                   Thread::ContextSwitchSWI();
00410
              }
00411
          } else {
00412
             Scheduler::QueueScheduler();
         }
00413
00414
          CS EXIT();
00415
00416 }
00418 //----
00419 void Thread::SetPriorityBase(PORT_PRIO_TYPE /*uXPriority_*/)
00420 (
00421 #if KERNEL_EXTRA_CHECKS
00422
        KERNEL ASSERT(IsInitialized());
00423 #endif
00424
00425
          GetCurrent()->Remove(this);
00426
00427
          SetCurrent (Scheduler::GetThreadList (
     m_uXPriority));
00428
00429
          GetCurrent()->Add(this);
00430 }
00431
00432 //---
00433 void Thread::SetPriority(PORT_PRIO_TYPE uXPriority_)
00434 {
00435 #if KERNEL_EXTRA_CHECKS
00436
          KERNEL_ASSERT(IsInitialized());
00437 #endif
00438
00439
          bool bSchedule = false:
00440
00441
          CS_ENTER();
00442
          // If this is the currently running thread, it's a good idea to reschedule
00443
          // Or, if the new priority is a higher priority than the current thread's.
00444
           if ((g_pclCurrent == this) || (uXPriority_ > g_pclCurrent->
     GetPriority())) {
    bSchedule = true;
00445
```

19.114 thread.cpp 291

```
00446
00447
          Scheduler::Remove(this);
00448
          CS_EXIT();
00449
00450
          m_uXCurPriority = uXPriority_;
00451
         m_uXPriority
                         = uXPriority ;
00452
00453
         CS_ENTER();
00454
         Scheduler::Add(this);
00455
         CS_EXIT();
00456
00457
         if (bSchedule) {
           if (Scheduler::IsEnabled()) {
00458
00459
                  CS_ENTER();
00460
                  Scheduler::Schedule();
00461 #if KERNEL_USE_QUANTUM
00462 #if KERNEL_TIMERS_THREADED
00463
                  if (Quantum::GetTimerThread() != g_pclNext) {
00464 #endif
                      // new thread scheduled. Stop current quantum timer (if it exists),
00465
00466
                      // and restart it for the new thread (if required).
00467
                      Quantum::RemoveThread();
00468
                      Quantum::AddThread((Thread*)g_pclNext);
00469 #if KERNEL_TIMERS_THREADED
00470
00471 #endif
00472 #endif
00473
                  CS_EXIT();
00474
                  Thread::ContextSwitchSWI();
00475
             } else {
00476
                 Scheduler::OueueScheduler();
00477
             }
00478
        }
00479 }
00480
00481 //---
00482 void Thread::InheritPriority(PORT_PRIO_TYPE uXPriority_)
00484 #if KERNEL_EXTRA_CHECKS
00485
         KERNEL_ASSERT(IsInitialized());
00486 #endif
00487
          SetOwner(Scheduler::GetThreadList(uXPriority_));
00488
00489
         m_uXCurPriority = uXPriority_;
00490 }
00491
00492 //----
00493 void Thread::ContextSwitchSWI()
00494 {
00495
          // Call the context switch interrupt if the scheduler is enabled.
00496
         if (static_cast<int>(Scheduler::IsEnabled()) == 1) {
              KERNEL_TRACE_1("Context switch to Thread %d", (uint16_t)((
00497
     Thread*)g_pclNext)->GetID());
00498 #if KERNEL_USE_STACK_GUARD
00499 #if KERNEL_USE_IDLE_FUNC
00500
              if ((g_pclCurrent != 0) && (g_pclCurrent->GetID() != 255)) {
00501 #endif
                  if (g_pclCurrent->GetStackSlack() <= Kernel::GetStackGuardThreshold())</pre>
00502
00503 #if KERNEL_AWARE_SIMULATION
      KernelAware::Trace(DBG_FILE, __LINE__, g_pclCurrent->GetID(), g_pclCurrent->GetStackSlack());
00504
00505 #endif
00506
                      Kernel::Panic(PANIC_STACK_SLACK_VIOLATED);
00507
00508 #if KERNEL_USE_IDLE_FUNC
00509
              }
00510 #endif
00511 #endif
00513 #if KERNEL_USE_THREAD_CALLOUTS
00514
              ThreadContextCallout_t pfCallout = Kernel::GetThreadContextSwitchCallout
     ();
00515
              if (pfCallout != 0) {
                 pfCallout(g_pclCurrent);
00516
00517
00518 #endif
00519
              KernelSWI::Trigger();
00520
          }
00521 }
00522
00523 #if KERNEL_USE_TIMEOUTS || KERNEL_USE_SLEEP
00524 //--
00525 Timer* Thread::GetTimer()
00526 {
00527 #if KERNEL_EXTRA_CHECKS
00528
         KERNEL_ASSERT(IsInitialized());
```

```
00529 #endif
00530
00531
          return &m_clTimer;
00532 }
00533 #endif
00534 #if KERNEL_USE_TIMEOUTS
00536 void Thread::SetExpired(bool bExpired_)
00537 +
00538 #if KERNEL_EXTRA_CHECKS
00539
         KERNEL_ASSERT(IsInitialized());
00540 #endif
00541
00542
          m_bExpired = bExpired_;
00543 }
00544
00545 //---
00546 bool Thread::GetExpired()
00548 #if KERNEL_EXTRA_CHECKS
00549
          KERNEL_ASSERT(IsInitialized());
00550 #endif
00551
00552
          return m_bExpired;
00553 }
00554 #endif
00555
00556 #if KERNEL_USE_IDLE_FUNC
00557 //--
00558 void Thread::InitIdle(void)
00559 {
00560
          m_eState
                           = THREAD_STATE_READY;
00561
          ClearNode();
00562
        m_uXPriority = 0;
m_uXCurPriority = 0;
00563
00564
00565 m_pfEntryPoint = 0;
00566 m_pvArg = 0;
00567
          m_u8ThreadID
00568 #if KERNEL_USE_THREADNAME
00569 m_szName = "IDLE";
00570 #endif
00571 }
00572 #endif
```

19.115 /media/usb/project/github/Mark3/kernel/threadlist.cpp File Reference

Thread linked-list definitions.

```
#include "kerneltypes.h"
#include "ll.h"
#include "threadlist.h"
#include "thread.h"
#include "dbg_file_list.h"
#include "buffalogger.h"
#include "kerneldebug.h"
```

19.115.1 Detailed Description

Thread linked-list definitions.

Definition in file threadlist.cpp.

19.116 threadlist.cpp

19.116 threadlist.cpp 293

```
80000
00009 -- [Mark3 Realtime Platform] -----
00010
00011 Copyright (c) 2012 - 2017 Funkenstein Software Consulting, all rights reserved.
00012 See license.txt for more information
00013 ====
00022 #include "kerneltypes.h"
00023 #include "11.h"
00024 #include "threadlist.h"
00025 #include "thread.h"
00026
00027 #define _CAN_HAS_DEBUG
00028 //--[Autogenerated - Do Not Modify]-----
00029 #include "dbg_file_list.h"
00030 #include "buffalogger.h"
00031 #if defined(DBG FILE)
00032 #error "Debug logging file token already defined! Bailing."
00033 #else
00034 #define DBG_FILE _DBG___KERNEL_THREADLIST_CPP
00035 #endif
00036 //--[End Autogenerated content]-----
00037 #include "kerneldebug.h"
00038
00039 //---
00040 void ThreadList::SetPriority(PORT_PRIO_TYPE uXPriority_)
00041 {
00042
         m_uXPriority = uXPriority_;
00043 }
00044
00045 //-
00046 void ThreadList::SetMapPointer(PriorityMap* pclMap_)
00047 {
00048
         m_pclMap = pclMap_;
00049 }
00050
00051 //--
00052 void ThreadList::Add(LinkListNode* node_)
00053 {
00054
         CircularLinkList::Add(node_);
00055
         CircularLinkList::PivotForward();
00056
00057
         // We've specified a bitmap for this threadlist
         if (m_pclMap != 0) {
00058
00059
              // Set the flag for this priority level
00060
             m_pclMap->Set (m_uXPriority);
00061
         }
00062 }
00063
00064 //--
00065 void ThreadList::AddPriority(LinkListNode* node_)
00066 {
00067
          Thread* pclCurr = static_cast<Thread*>(GetHead());
00068
          if (pclCurr == 0) {
00069
             Add (node_);
00070
             return;
00071
00072
         PORT_PRIO_TYPE uXHeadPri = pclCurr->GetCurPriority();
00073
00074
          Thread* pclTail = static_cast<Thread*>(GetTail());
          Thread* pclNode = static_cast<Thread*>(node_);
00075
00076
00077
          // Set the threadlist's priority level, flag pointer, and then add the
00078
          // thread to the threadlist
00079
         PORT_PRIO_TYPE uXPriority = pclNode->GetCurPriority();
08000
         do {
00081
              if (uXPriority > pclCurr->GetCurPriority()) {
00082
                 break:
00083
00084
              pclCurr = static_cast<Thread*>(pclCurr->GetNext());
00085
          } while (pclCurr != pclTail);
00086
          // Insert pclNode before pclCurr in the linked list.
00087
00088
          InsertNodeBefore(pclNode, pclCurr);
00089
00090
          // If the priority is greater than current head, reset
00091
          // the head pointer.
         if (uXPriority > uXHeadPri) {
   m_pstHead = pclNode;
   m_pstTail = m_pstHead->prev;
} else if (pclNode->GetNext() == m_pstHead) {
00092
00093
00094
00095
00096
            m_pstTail = pclNode;
00097
         }
00098 }
00099
00100 //----
```

```
00101 void ThreadList::Add(LinkListNode* node_, PriorityMap* pclMap_,
       PORT_PRIO_TYPE uXPriority_)
00102 {
00103
           // Set the threadlist's priority level, flag pointer, and then add the
           \ensuremath{//} thread to the threadlist
00104
           SetPriority(uXPriority_);
00105
           SetMapPointer(pclMap_);
00106
00107
           Add (node_);
00108 }
00109
00110 //---
00111 void ThreadList::Remove(LinkListNode* node)
00112 {
00113
            // Remove the thread from the list
00114
           CircularLinkList::Remove(node_);
00115
           // If the list is empty...
if ((m_pstHead == 0) && (m_pclMap != 0)) (
    // Clear the bit in the bitmap at this priority level
00116
00117
00118
00119
                m_pclMap->Clear(m_uXPriority);
00120
00121 }
00122
00123 //--
00124 Thread* ThreadList::HighestWaiter()
00125 {
           return static_cast<Thread*>(GetHead());
00126
00127 }
```

19.117 /media/usb/project/github/Mark3/kernel/timer.cpp File Reference

Timer implementations.

```
#include "kerneltypes.h"
#include "mark3cfg.h"
#include "timer.h"
#include "timerlist.h"
#include "timerscheduler.h"
#include "kerneltimer.h"
#include "threadport.h"
#include "quantum.h"
#include "dbg_file_list.h"
#include "buffalogger.h"
#include "kerneldebug.h"
```

19.117.1 Detailed Description

Timer implementations.

Definition in file timer.cpp.

19.118 timer.cpp

19.118 timer.cpp 295

```
00024
00025 #include "timer.h"
00026 #include "timerlist.h"
00027 #include "timerscheduler.h"
00028 #include "kerneltimer.h"
00029 #include "threadport.h"
00030 #include "quantum.h"
00031
00032 #define _CAN_HAS_DEBUG
00033 //--[Autogenerated - Do Not Modify]-----
00034 #include "dbg_file_list.h"
00035 #include "buffalogger.h"
00036 #if defined(DBG_FILE)
00037 #error "Debug logging file token already defined! Bailing."
00038 #else
00039 #define DBG_FILE _DBG___KERNEL_TIMER_CPP
00040 #endif
00041 //--[End Autogenerated content]-----
00043 #include "kerneldebug.h"
00044
00045 #if KERNEL_USE_TIMERS
00046
00047 //----
00048 Timer::Timer()
00050 #if KERNEL_EXTRA_CHECKS
00051
         m_u8Initialized = TIMER_INVALID_COOKIE;
00052 #endif
         m_u8Flags = 0;
00053
00054 }
00055
00056 //----
00057 void Timer::Init()
00058 {
00059 #if KERNEL_EXTRA_CHECKS
       if (IsInitialized()) {
00060
              KERNEL_ASSERT((m_u8Flags & TIMERLIST_FLAG_ACTIVE) == 0);
00062
00063 #endif
00064
00065
         ClearNode();
00066
         m_u32Interval
                              = 0:
         m_u32TimerTolerance = 0;
00067
         m_u32TimeLeft = 0;
00068
         m_u8Flags
00069
00070
00071 #if KERNEL_EXTRA_CHECKS
00072
        SetInitialized():
00073 #endif
00074 }
00075
00076 //---
00077 void Timer::Start(bool bRepeat_, uint32_t u32IntervalMs_,
      TimerCallback_t pfCallback_, void* pvData_)
00078 {
00079 #if KERNEL_EXTRA_CHECKS
08000
         KERNEL_ASSERT(IsInitialized());
00081 #endif
00082
00083
          if ((m u8Flags & TIMERLIST FLAG ACTIVE) != 0) {
         .._uoFl
return;
}
00084
00085
00086
00087
         SetIntervalMSeconds(u32IntervalMs_);
00088
         m_u32TimerTolerance = 0;
          m_pfCallback = pfCallback_;
00089
00090
          m_pvData
                              = pvData_;
00091
00092
          if (!bRepeat_) {
00093
              m_u8Flags = TIMERLIST_FLAG_ONE_SHOT;
00094
         m_u8Flags = 0;
          } else {
00095
00096
00097
00098
          Start();
00099 }
00100
00101 //---
00102 void Timer::Start(
         bool bRepeat_, uint32_t u32IntervalMs_, uint32_t u32ToleranceMs_,
00103
      TimerCallback_t pfCallback_, void* pvData_)
00105 #if KERNEL_EXTRA_CHECKS
00106
         KERNEL_ASSERT(IsInitialized());
00107 #endif
00108
```

```
if ((m_u8Flags & TIMERLIST_FLAG_ACTIVE) != 0) {
00110
            return;
00111
         }
00112
00113
         m_u32TimerTolerance = MSECONDS_TO_TICKS(u32ToleranceMs_);
         Start(bRepeat_, u32IntervalMs_, pfCallback_, pvData_);
00114
00115 }
00116
00117 //--
00118 void Timer::Start()
00119 {
00120 #if KERNEL_EXTRA_CHECKS
00121
         KERNEL_ASSERT(IsInitialized());
00122 #endif
00123
00124
         if ((m_u8Flags & TIMERLIST_FLAG_ACTIVE) != 0) {
        return;
00125
00126
00127
00128
         m_pclOwner = Scheduler::GetCurrentThread();
00129
         TimerScheduler::Add(this);
00130 }
00131
00132 //----
00133 void Timer::Stop()
00134 {
00135 #if KERNEL_EXTRA_CHECKS
00136
        KERNEL_ASSERT(IsInitialized());
00137 #endif
00138
         if ((m_u8Flags & TIMERLIST_FLAG_ACTIVE) == 0) {
00139
00140
                return;
00141
00142
         TimerScheduler::Remove(this);
00143 }
00144
00145 //---
00146 void Timer::SetIntervalTicks(uint32_t u32Ticks_)
00147 {
00148 #if KERNEL_EXTRA_CHECKS
00149
        KERNEL_ASSERT(IsInitialized());
00150 #endif
00151
00152
         m_u32Interval = u32Ticks_;
00153 }
00154
00155 //----
00157 //-----
00158 void Timer::SetIntervalSeconds(uint32 t u32Seconds)
00159 {
00160 #if KERNEL_EXTRA_CHECKS
00161
        KERNEL_ASSERT(IsInitialized());
00162 #endif
00163
         m u32Interval = SECONDS_TO_TICKS(u32Seconds_);
00164
00165 }
00166
00167 //----
00168 void Timer::SetIntervalMSeconds(uint32_t u32MSeconds_)
00169 (
00170 #if KERNEL_EXTRA_CHECKS
00171
       KERNEL_ASSERT(IsInitialized());
00172 #endif
00173
00174
         m_u32Interval = MSECONDS_TO_TICKS(u32MSeconds_);
00175 }
00176
00177 //---
00178 void Timer::SetIntervalUSeconds(uint32_t u32USeconds_)
00180 #if KERNEL_EXTRA_CHECKS
00181
        KERNEL_ASSERT(IsInitialized());
00182 #endif
00183
00184 #if KERNEL_TIMERS_TICKLESS
      if (u32USeconds_ < KERNEL_TIMERS_MINIMUM_DELAY_US) {
00185
00186
             u32USeconds_ = KERNEL_TIMERS_MINIMUM_DELAY_US;
00187
00188 #endif
00189
         m u32Interval = USECONDS TO TICKS(u32USeconds);
00190
00191 }
00192
00193 //--
00194 void Timer::SetTolerance(uint32_t u32Ticks_)
00195 {
00196 #if KERNEL_EXTRA_CHECKS
```

```
00197     KERNEL_ASSERT(IsInitialized());
00198 #endif
00199     m_u32TimerTolerance = u32Ticks_;
00200 }
00201
00202 #endif
```

19.119 /media/usb/project/github/Mark3/kernel/timerlist.cpp File Reference

Implements timer list processing algorithms, responsible for all timer tick and expiry logic.

```
#include "kerneltypes.h"
#include "mark3cfg.h"
#include "timerlist.h"
#include "kerneltimer.h"
#include "threadport.h"
#include "quantum.h"
#include "mutex.h"
#include "dbg_file_list.h"
#include "buffalogger.h"
#include "kerneldebug.h"
```

19.119.1 Detailed Description

Implements timer list processing algorithms, responsible for all timer tick and expiry logic. Definition in file timerlist.cpp.

19.120 timerlist.cpp

```
00001 /
00002
00003
00004
00005
00006
00007
00008
00009 -- [Mark3 Realtime Platform] -
00010
00011 Copyright (c) 2012 - 2017 Funkenstein Software Consulting, all rights reserved.
00012 See license.txt for more information
00023 #include "kerneltypes.h"
00024 #include "mark3cfg.h"
00025
00026 #include "timerlist.h"
00027 #include "kerneltimer.h"
00028 #include "threadport.h"
00029 #include "quantum.h"
00030 #include "mutex.h"
00031
00032 #define _CAN_HAS_DEBUG
00033 //--[Autogenerated - Do Not Modify]------
00034 #include "dbg_file_list.h"
00035 #include "buffalogger.h"
00036 #if defined(DBG_FILE)
00037 #error "Debug logging file token already defined! Bailing."
00038 #else
00039 #define DBG_FILE _DBG___KERNEL_TIMERLIST_CPP
00040 #endif
00041 //--[End Autogenerated content]-----
00042
00043 #include "kerneldebug.h"
00044
00045 #if KERNEL USE TIMERS
00046 //-
00047 TimerList TimerScheduler::m_clTimerList;
```

```
00049 #if KERNEL_TIMERS_THREADED
                                 (m_clMutex.Claim())
00050 # define TIMERLIST_LOCK()
00051 # define TIMERLIST_UNLOCK() (m_clMutex.Release())
00052 #else
CS ENTER()
00055 #endif
00056
00057 //---
00058 void TimerList::Init(void)
00059 {
00060
         m bTimerActive = false;
00061
         m_u32NextWakeup = 0;
00062 #if KERNEL_TIMERS_THREADED
00063 m_clMutex.Init();
00064 #endif
00065 }
00066
00067 //--
00068 void TimerList::Add(Timer* pclListNode_)
00069 {
00070 #if KERNEL_TIMERS_TICKLESS
00071 bool bStart = false;
00072 int32_t lDelta;
00073 #endif
00074
00075
         TIMERLIST_LOCK();
00076
00077 #if KERNEL_TIMERS_TICKLESS
       if (GetHead() == NULL) {
00078
00079
             bStart = true;
08000
00081
         if (pclListNode_->m_u32Interval < PORT_MIN_TIMER_TICKS) {</pre>
00082
            pclListNode_->m_u32Interval = PORT_MIN_TIMER_TICKS;
00083
00084 #endif
00085
         pclListNode_->ClearNode();
00087
         DoubleLinkList::Add(pclListNode_);
88000
00089
        // Set the initial timer value
00090
       pclListNode_->m_u32TimeLeft = pclListNode_->m_u32Interval;
00091
00092 #if KERNEL_TIMERS_TICKLESS
00093 if (!bStart) {
         // If the new interval is less than the amount of time remaining..
00094
00095
             lDelta = (int32_t)((uint32_t)KernelTimer::TimeToExpiry() - pclListNode_->
     m_u32Interval);
00096
00097
             if (lDelta > 0) {
                // Set the new expiry time on the timer.
m_u32NextWakeup = (uint32_t)
00098
     KernelTimer::SubtractExpiry((uint32_t))Delta);
00100
            }
         } else {
00101
            m_u32NextWakeup = pclListNode_->m_u32Interval;
00102
             KernelTimer::SetExpiry(m_u32NextWakeup);
00104
             KernelTimer::Start();
00105
00106 #endif
00107
00108
         // Set the timer as active.
00109
        pclListNode_->m_u8Flags |= TIMERLIST_FLAG_ACTIVE;
00110
00111
         TIMERLIST_UNLOCK();
00112 }
00113
00114 //--
00115 void TimerList::Remove(Timer* pclLinkListNode_)
00116 {
00117
         TIMERLIST_LOCK();
00118
00119
         DoubleLinkList::Remove(pclLinkListNode_);
         pclLinkListNode_->m_u8Flags &= ~TIMERLIST_FLAG_ACTIVE;
00120
00121
00122 #if KERNEL_TIMERS_TICKLESS
00123
       if (this->GetHead() == NULL) {
00124
             KernelTimer::Stop();
00125
00126 #endif
00127
00128
         TIMERLIST_UNLOCK();
00129 }
00130
00131 //---
00132 void TimerList::Process(void)
00133 {
```

19.120 timerlist.cpp 299

```
00134 #if KERNEL_TIMERS_TICKLESS
       uint32_t u32NewExpiry;
00135
00136
          uint32_t u320vertime;
00137
         bool
                   bContinue;
00138 #endif
00139
00140
          Timer* pclNode;
00141
          Timer* pclPrev;
00142
00143
         TIMERLIST_LOCK();
00144
00145 #if KERNEL_USE_QUANTUM
00146
         Quantum::SetInTimer();
00147 #endif
00148 #if KERNEL_TIMERS_TICKLESS
00149 #if !KERNEL_TIMERS_THREADED
          // Clear the timer and its expiry time - keep it running though
00150
00151
          KernelTimer::ClearExpiry();
00152 #endif
00153
00154 #endif
00155
              pclNode = static_cast<Timer*>(GetHead());
              pclPrev = NULL;
00156
00157
00158 #if KERNEL_TIMERS_TICKLESS
              bContinue
                          = false;
00160
              u32NewExpiry = MAX_TIMER_TICKS; // Used to indicate that no timers are pending
00161 #endif
00162
              // Subtract the elapsed time interval from each active timer.
00163
              while (pclNode != 0) {
00164
00165
               // Active timers only...
00166
                   if ((pclNode->m_u8Flags & TIMERLIST_FLAG_ACTIVE) != 0) {
00167 // Did the timer expire?
00168 #if KERNEL_TIMERS_TICKLESS
                      if (pclNode->m_u32TimeLeft <= m_u32NextWakeup)</pre>
00169
00170 #else
00171
                      pclNode->m_u32TimeLeft--;
00172
                       if (0 == pclNode->m_u32TimeLeft)
00173 #endif
00174
                           // Yes - set the "callback" flag - we'll execute the callbacks later
00175
                           pclNode->m_u8Flags |= TIMERLIST_FLAG_CALLBACK;
00176
00177
00178
                           if ((pclNode->m_u8Flags & TIMERLIST_FLAG_ONE_SHOT) != 0
     ) {
00179
                                // If this was a one-shot timer, deactivate the timer.
                               pclNode->m_u8Flags |= TIMERLIST_FLAG_EXPIRED;
pclNode->m_u8Flags &= ~TIMERLIST_FLAG_ACTIVE;
00180
00181
00182
                           } else {
00183
                               // Reset the interval timer.
00185
                                // I think we're good though..
00186
                               pclNode->m_u32TimeLeft = pclNode->
     m_u32Interval;
00187
00188 #if KERNEL_TIMERS_TICKLESS
                               // If the time remaining (plus the length of the tolerance interval)
                                // is less than the next expiry interval, set the next expiry interval.
00190
                               uint32_t u32Tmp = pclNode->m_u32TimeLeft + pclNode->
00191
     m_u32TimerTolerance;
00192
                               if (u32Tmp < u32NewExpiry) {</pre>
00193
00194
                                   u32NewExpiry = u32Tmp;
00195
00196 #endif
00197
                           }
00198
00199 #if KERNEL_TIMERS_TICKLESS
00200
                      else {
00201
                           // Not expiring, but determine how long to run the next timer interval for.
                           pclNode->m_u32TimeLeft -= m_u32NextWakeup;
if (pclNode->m_u32TimeLeft < u32NewExpiry) {</pre>
00202
00203
00204
                               u32NewExpiry = pclNode->m_u32TimeLeft;
00205
00206
                       }
00207 #endif
00208
00209
                  pclNode = static_cast<Timer*>(pclNode->GetNext());
00210
              }
00211
              // Process the expired timers callbacks.
00212
00213
              pclNode = static_cast<Timer*>(GetHead());
00214
              while (pclNode != 0) {
00215
                  pclPrev = pclNode;
00216
                  pclNode = static_cast<Timer*>(pclNode->GetNext());
00217
00218
                  // If the timer expired, run the callbacks now.
```

```
if ((pclPrev->m_u8Flags & TIMERLIST_FLAG_CALLBACK) != 0) {
00220
                      bool bRemove = false;
00221
                      // If this was a one-shot timer, tag it for removal
00222
                      if ((pclPrev->m_u8Flags & TIMERLIST_FLAG_ONE_SHOT) != 0) {
00223
                          bRemove = true;
00224
00226
                      // Run the callback. these callbacks must be very fast...
m_pvData);
00228
00227
                     pclPrev->m_pfCallback(pclPrev->m_pclOwner, pclPrev->
                      pclPrev->m_u8Flags &= ~TIMERLIST_FLAG CALLBACK;
00229
00230
                      // Remove one-shot-timers
00231
                      if (bRemove) {
00232
                          Remove (pclPrev);
00233
00234
                 }
00235
              }
00237 #if KERNEL_TIMERS_TICKLESS
           // Check to see how much time has elapsed since the time we // acknowledged the interrupt...
00238
00239
00240
             u32Overtime = (uint32_t)KernelTimer::GetOvertime();
00241
00242
             if (u320vertime >= u32NewExpiry) {
                 m_u32NextWakeup = u32Overtime;
00244
                  bContinue
00245
00246
              // If it's taken longer to go through this loop than would take us to
00247
             // the next expiry, re-run the timing loop
00248
00249
00250
         } while (bContinue);
00251
00252
          // This timer elapsed, but there's nothing more to do...
00253
          // Turn the timer off.
         if (u32NewExpiry >= MAX_TIMER_TICKS) {
00254
              KernelTimer::Stop();
00256
         } else {
00257
             // Update the timer with the new "Next Wakeup" value, plus whatever
00258
              // overtime has accumulated since the last time we called this handler
00259
              m_u32NextWakeup = (uint32_t)KernelTimer::SetExpiry(
00260
     u32NewExpiry + u32Overtime);
00261
00262 #endif
00263 #if KERNEL_USE_QUANTUM
00264
        Quantum::ClearInTimer();
00265 #endif
00266
00267
          TIMERLIST_UNLOCK();
00268 }
00269
00270 #endif // KERNEL_USE_TIMERS
```

19.121 /media/usb/project/github/Mark3/kernel/tracebuffer.cpp File Reference

Kernel trace buffer class definition.

```
#include "kerneltypes.h"
#include "tracebuffer.h"
#include "mark3cfg.h"
#include "dbg_file_list.h"
#include "buffalogger.h"
#include "kerneldebug.h"
```

19.121.1 Detailed Description

Kernel trace buffer class definition.

Definition in file tracebuffer.cpp.

19.122 tracebuffer.cpp 301

19.122 tracebuffer.cpp

```
00001 /*========
00003
00004
00005
00006 1
00007
80000
00009 -- [Mark3 Realtime Platform] -
00010
00011 Copyright (c) 2012 - 2017 Funkenstein Software Consulting, all rights reserved.
00012 See license.txt for more information
00013 ======
00019 #include "kerneltypes.h"
00020 #include "tracebuffer.h"
00021 #include "mark3cfg.h"
00022
00023 #define _CAN_HAS_DEBUG
00024 //--[Autogenerated - Do Not Modify]------
00025 #include "dbg_file_list.h"
00026 #include "buffalogger.h"
00027 #if defined(DBG_FILE)
00028 #error "Debug logging file token already defined! Bailing."
00029 #else
00030 #define DBG_FILE _DBG___KERNEL_TRACEBUFFER_CPP
00031 #endif
00032
00033 #include "kerneldebug.h"
00034
00035 //--[End Autogenerated content]-----
00036
00037 #if KERNEL_USE_DEBUG && !KERNEL_AWARE_SIMULATION
00038 //
00039 TraceBufferCallback_t TraceBuffer::m_pfCallback;
00040 uint16_t
                              TraceBuffer::m_u16Index;
00041 uint16_t
                              TraceBuffer::m_u16SyncNumber;
00042 uint16_t
                              TraceBuffer::m_au16Buffer[(TRACE_BUFFER_SIZE / sizeof(uint16_t))];
00043
00044 //-
00045 void TraceBuffer::Init()
00046 {
00047
00048
00049 //-
00050 void TraceBuffer::Write(uint16_t* pu16Data_, uint16_t u16Size_)
00051 {
00052
           // Pipe the data directly to the circular buffer
00053
          uint16_t u16Start;
00054
00055
          // Update the circular buffer index in a critical section. The
00056
          \ensuremath{^{-7}} rest of the operations can take place in any context.
00057
          CS_ENTER();
00058
          uint16_t u16NextIndex;
          u16Start = m_u16Index;
u16NextIndex = m_u16Index + u16Size_;
00059
00060
          if (ul6NextIndex >= (sizeof(m_au16Buffer) / sizeof(uint16_t))) {
    ul6NextIndex -= (sizeof(m_au16Buffer) / sizeof(uint16_t));
00061
00062
00063
00064
          m_u16Index = u16NextIndex;
00065
          CS_EXIT();
00066
00067
          // Write the data into the circular buffer.
00068
          uint16_t i;
                   bCallback = false;
00069
          bool
00070
          bool
                    bPingPong = false;
00071
           for (i = 0; i < u16Size_; i++) {</pre>
00072
               m_au16Buffer[u16Start++] = pu16Data_[i];
               if (u16Start >= (sizeof(m_au16Buffer) / sizeof(uint16_t))) {
    u16Start = 0;
00073
00074
                   bCallback = true;
00075
00076
               } else if (ul6Start == ((sizeof(m_au16Buffer) / sizeof(uint16_t)) / 2)) {
00077
                   bPingPong = true;
00078
                   bCallback = true;
00079
               }
00080
          }
00081
00082
           // Done writing - see if there's a 50% or rollover callback
00083
          if (bCallback && m_pfCallback) {
00084
               uint16_t u16Size = (sizeof(m_au16Buffer) / sizeof(uint16_t)) / 2;
00085
               if (bPingPong) {
00086
                   m_pfCallback(m_au16Buffer, u16Size, bPingPong);
00087
               } else {
00088
                   m_pfCallback(m_au16Buffer + u16Size, u16Size, bPingPong);
00089
```

```
00090 }
00091 }
00092
00093 #endif
```

19.123 /media/usb/project/github/Mark3/libs/mark3c/public/fake_types.h File Reference

C-struct definitions that mirror.

```
#include "kerneltypes.h"
#include "mark3cfg.h"
```

19.123.1 Detailed Description

C-struct definitions that mirror.

This header contains a set of "fake" structures that have the same memory layout as the kernel objects in C++ (taking into account inheritence, etc.). These are used for sizing the opaque data blobs that are declared in C, which then become instantiated as C++ kernel objects via the bindings provided.

Definition in file fake_types.h.

19.124 fake_types.h

```
00001 /
00002
00004
00005
00006
00007
00008
00009 -- [Mark3 Realtime Platform]
00010
00011 Copyright (c) 2012 - 2017 Funkenstein Software Consulting, all rights reserved.
00012 See license.txt for more information
00013 =======
00026 #include "kerneltypes.h"
00027 #include "mark3cfg.h"
00028
00029 #ifndef ___FAKE_TYPES_H__
00030 #define ___FAKE_TYPES_H_
00031
00032 #if defined(__cplusplus)
00033 extern "C"
00034 #endif
00035
00036 //----
00037 typedef struct {
00038
         void* prev;
void* next;
00039
00040 } Fake_LinkedListNode;
00041
00042 //----
00043 typedef struct {
       void* head;
00044
          void* tail;
00045
00046 } Fake_LinkedList;
00047
00048 //----
00049 typedef struct {
00050
         Fake_LinkedList fake_list;
00051
         PORT_PRIO_TYPE m_uXPriority;
00052
          void*
                          m_pclMap;
00053 } Fake_ThreadList;
00054
00055 //----
00056 typedef struct {
00057
         Fake LinkedListNode m 11 node:
00058 #if KERNEL_EXTRA_CHECKS
00059
          uint8_t
                              m_u8Initialized;
```

19.124 fake_types.h 303

```
00060 #endif
       uint8_t
00061
                            m_u8Flags;
00062
         void*
                            m_pfCallback;
         uint32 t
00063
                           m_u32Interval;
00064
         uint32 t
                            m_u32TimeLeft;
00065
         uint32 t
                            m u32TimerTolerance;
        void*
                            m_pclOwner;
00067
         void*
                            m_pvData;
00068 } Fake_Timer;
00069
00070 //----
00071 typedef struct {
00072
        Fake_LinkedListNode m_ll_node;
                   m_pwStackTop;
        K_WORD*
00073
                            m_pwStack;
00074
         K_WORD*
      uint8_t m_u8ThreadID;
PORT_PRIO_TYPE m_uXPriority;
PORT_PRIO_TYPE m_uXCurPriority;
uint8_t m_eState.
00075
00076
00077
         uint8_t
                            m_eState;
00079 #if KERNEL_USE_EXTENDED_CONTEXT
08000
       void*
                 m_pvExtendedContext;
00081 #endif
00082 #if KERNEL_USE_THREADNAME
00083
        const char* m_szName;
00084 #endif
00085 uint16_t m_u16StackSize;
         void* m_pclCurrent;
00086
                  m_pclOwner;
00087
         void*
00088
        void*
                 m_pfEntryPoint;
00089
         void*
                 m_pvArg;
00090 #if KERNEL_USE_QUANTUM
00091
        uint16_t m_u16Quantum;
00092 #endif
00093 #if KERNEL_USE_EVENTFLAG
00094
        uint16_t m_u16FlagMask;
00095
         uint8_t m_eFlagMode;
00096 #endif
00097 #if KERNEL_USE_TIMEOUTS || KERNEL_USE_SLEEP
00098
        Fake_Timer m_clTimer;
00099 #endif
00100 #if KERNEL_USE_TIMEOUTS
       bool m_bExpired;
00101
00102 #endif
00103 } Fake_Thread;
00105 //----
00106 typedef struct {
00107
        Fake_ThreadList thread_list;
00108 #if KERNEL_EXTRA_CHECKS
       uint8_t m_u8Initialized;
00109
00110 #endif
00113 } Fake_Semaphore;
00114
00115 //---
00116 typedef struct {
00117
         Fake_ThreadList thread_list;
00118 #if KERNEL_EXTRA_CHECKS
00119
        uint8_t
                    m_u8Initialized;
00120 #endif
       uint8_t m_u8Recurse;
bool m_bReady;
uint8_t m_u8MaxPri;
00121
00122
00123
00124
        void*
                        m_pclOwner;
00125 } Fake_Mutex;
00126
00127 //----
00128 typedef struct {
      Fake_LinkedListNode list_node;
        void* m_pvData; uint16_t
00130
00131
                            m_u16Code;
00132 } Fake_Message;
00133
00134 //----
00135 typedef struct {
00136 Fake_Semaphore m_clSemaphore;
00137
        Fake_LinkedList m_clLinkList;
00138 } Fake_MessageQueue;
00139
00140 //---
00141 typedef struct {
                        m_u16Head;
00142
       uint16_t
00143
         uint16_t
                        m_u16Tail;
00144
         uint16_t
                        m_u16Count;
00145
         uint16_t
                        m_u16Free;
00146
                       m u16ElementSize:
         uint16 t
```

```
void*
                       m_pvBuffer;
        Fake_Semaphore m_clRecvSem;
00149 #if KERNEL_USE_TIMEOUTS
00150
       Fake_Semaphore m_clSendSem;
00151 #endif
00152 } Fake_Mailbox;
00153
00154 //---
00155 typedef struct {
00156
         Fake_ThreadList thread_list;
00157 #if KERNEL_EXTRA_CHECKS
       uint8_t m_u8Initialized;
00158
00159 #endif
bool m_bPending;
00161 } Fake_Notify;
00162
00163 //----
00164 typedef struct {
00165
        Fake_ThreadList thread_list;
00166 #if KERNEL_EXTRA_CHECKS
                        m_u8Initialized;
00168 #endif
        ndif
uint16_t m_u16EventFlag;
00169
00170 } Fake_EventFlag;
00171
00172 #if defined(__cplusplus)
00173 }
00174 #endif
00175
00176 #endif // __FAKE_TYPES_H_
```

19.125 /media/usb/project/github/Mark3/libs/mark3c/public/mark3c.h File Reference

Header providing C-language API bindings for the Mark3 kernel.

```
#include "mark3cfg.h"
#include "kerneltypes.h"
#include "fake_types.h"
#include "driver3c.h"
#include <stdint.h>
#include <stdbool.h>
```

Typedefs

```
typedef void * EventFlag_t
```

EventFlag opaque handle data type.

typedef void * Mailbox_t

Mailbox opaque handle data type.

typedef void * Message_t

Message opaque handle data type.

typedef void * MessageQueue_t

MessageQueue opaque handle data type.

typedef void * Mutex_t

Mutex opaque handle data type.

typedef void * Notify_t

Notification object opaque handle data type.

typedef void * Semaphore t

Semaphore opaque handle data type.

typedef void * Thread_t

Thread opaque handle data type.

typedef void * Timer_t

Timer opaque handle data type.

Functions

```
    void Kernel_Init (void)

     Kernel Init.

    void Kernel_Start (void)

     Kernel_Start.
• bool Kernel_IsStarted (void)
     Kernel_IsStarted.

    void Kernel_SetPanic (PanicFunc_t pfPanic_)

     Kernel_SetPanic.

    bool Kernel_IsPanic (void)

     Kernel_IsPanic.

    void Kernel_Panic (uint16_t u16Cause_)

     Kernel Panic.

    void Scheduler_Enable (bool bEnable_)

     Scheduler_Enable.

    bool Scheduler_IsEnabled (void)

     Scheduler_IsEnabled.

    Thread_t Scheduler_GetCurrentThread (void)

     Scheduler_GetCurrentThread.

    void Thread_Init (Thread_t handle, K_WORD *pwStack_, uint16_t u16StackSize_, PORT_PRIO_TYPE u←

  XPriority_, ThreadEntry_t pfEntryPoint_, void *pvArg_)
      Thread Init.

    void Thread_Start (Thread_t handle)

     Thread Start.

    void Thread_Stop (Thread_t handle)

      Thread_Stop.
• PORT_PRIO_TYPE Thread_GetPriority (Thread_t handle)
      Thread GetPriority.

    PORT_PRIO_TYPE Thread_GetCurPriority (Thread_t handle)

      Thread_GetCurPriority.

    void Thread_SetPriority (Thread_t handle, PORT_PRIO_TYPE uXPriority_)

      Thread_SetPriority.

    void Thread Yield (void)

     Thread_Yield.

    void Thread_SetID (Thread_t handle, uint8_t u8ID_)

      Thread SetID.

    uint8_t Thread_GetID (Thread_t handle)

      Thread GetID.

    uint16_t Thread_GetStackSlack (Thread_t handle)

      Thread_GetStackSlack.

    ThreadState_t Thread_GetState (Thread_t handle)
```

19.125.1 Detailed Description

Thread_GetState.

Header providing C-language API bindings for the Mark3 kernel.

Definition in file mark3c.h.

```
19.125.2 Function Documentation
19.125.2.1 void Kernel_Init (void)
Kernel Init.
See also
     void Kernel::Init()
19.125.2.2 bool Kernel_IsPanic (void)
Kernel_IsPanic.
See also
     bool Kernel::IsPanic()
Returns
      Whether or not the kernel is in a panic state
19.125.2.3 bool Kernel_IsStarted (void)
Kernel_IsStarted.
See also
     bool Kernel::IsStarted()
Returns
     Whether or not the kernel has started - true = running, false = not started
19.125.2.4 void Kernel_Panic ( uint16_t u16Cause_ )
Kernel_Panic.
See also
     void Kernel::Panic(uint16_t u16Cause_)
Parameters
       u16Cause
                      Reason for the kernel panic
19.125.2.5 void Kernel_SetPanic ( PanicFunc_t pfPanic_ )
Kernel_SetPanic.
See also
     void Kernel::SetPanic(PanicFunc_t pfPanic_)
```

```
Parameters
```

```
pfPanic
                     Panic function pointer
19.125.2.6 void Kernel_Start (void)
Kernel_Start.
See also
     void Kernel::Start()
19.125.2.7 void Scheduler_Enable ( bool bEnable_ )
Scheduler_Enable.
See also
     void Scheduler::SetScheduler(bool bEnable_)
Parameters
     bEnable true
                     to enable, false to disable the scheduler
19.125.2.8 Thread_t Scheduler_GetCurrentThread ( void )
Scheduler_GetCurrentThread.
See also
     Thread* Scheduler::GetCurrentThread()
Returns
     Handle of the currently-running thread
19.125.2.9 bool Scheduler_IsEnabled (void)
Scheduler_IsEnabled.
See also
     bool Scheduler::IsEnabled()
Returns
     true - scheduler enabled, false - disabled
19.125.2.10 PORT_PRIO_TYPE Thread_GetCurPriority ( Thread_t handle )
Thread_GetCurPriority.
See also
     PORT_PRIO_TYPE Thread::GetCurPriority()
```

Parameters

handle Handle of the thread

Returns

Current priority of the thread considering priority inheritence

19.125.2.11 uint8_t Thread_GetID (Thread_t handle)

Thread_GetID.

See also

uint8_t Thread::GetID()

Parameters

handle Handle of the thread

Returns

Return ID assigned to the thread

19.125.2.12 PORT_PRIO_TYPE Thread_GetPriority (Thread_t handle)

Thread_GetPriority.

See also

PORT_PRIO_TYPE Thread::GetPriority()

Parameters

handle Handle of the thread

Returns

Current priority of the thread not considering priority inheritence

19.125.2.13 uint16_t Thread_GetStackSlack (Thread_t handle)

Thread GetStackSlack.

See also

uint16_t Thread::GetStackSlack()

Parameters

handle Handle of the thread

Returns

Return the amount of unused stack on the given thread

19.125.2.14 ThreadState_t Thread_GetState (Thread_t handle)

Thread_GetState.

See also

ThreadState_t Thread::GetState()

Parameters

handle	Handle of the thread

Returns

The thread's current execution state

19.125.2.15 void Thread_Init (Thread_t handle, K_WORD * pwStack_, uint16_t u16StackSize_, PORT_PRIO_TYPE uXPriority_, ThreadEntry_t pfEntryPoint_, void * pvArg_)

Thread_Init.

See also

void Thread::Init(K_WORD *pwStack_, uint16_t u16StackSize_, PORT_PRIO_TYPE uXPriority_, Thread← Entry_t pfEntryPoint_, void *pvArg_)

Parameters

handle	Handle of the thread to initialize		
pwStack_ Pointer to the stack to use for the thread			
u16StackSize_	Size of the stack (in bytes)		
uXPriority_ Priority of the thread (0 = idle, 7 = max)			
pfEntryPoint_ This is the function that gets called when the thread is started			
pvArg_	Pointer to the argument passed into the thread's entrypoint function.		

19.125.2.16 void Thread_SetID (Thread_t handle, uint8_t u8ID_)

Thread SetID.

See also

void Thread::SetID(uint8_t u8ID_)

Parameters

handle	Handle of the thread
u8ID_	ID To assign to the thread

19.125.2.17 void Thread_SetPriority (Thread_t handle, PORT_PRIO_TYPE uXPriority_)

Thread_SetPriority.

See also

void Thread::SetPriority(PORT_PRIO_TYPE uXPriority_)

Parameters

	handle	Handle of the thread
Г	uXPriority_	New priority level

19.125.2.18 void Thread_Start (Thread_t handle)

Thread_Start.

See also

void Thread::Start()

Parameters

_		
	handle	Handle of the thread to start

19.125.2.19 void Thread_Stop (Thread_t handle)

Thread_Stop.

See also

void Thread::Stop()

Parameters

handle	Handle of the thread to stop

19.125.2.20 void Thread_Yield (void)

Thread_Yield.

See also

void Thread::Yield()

19.126 mark3c.h

```
00001 /*
00002
00003
00004
00005
00006
00007
80000
00009 -- [Mark3 Realtime Platform]
00010
00011 Copyright (c) 2012 - 2017 Funkenstein Software Consulting, all rights reserved.
00012 See license.txt for more information
00013 =========
00021 #include "mark3cfg.h"
00022 #include "kerneltypes.h"
00023 #include "fake_types.h"
00024 #include "driver3c.h"
00025
00026 #include <stdint.h>
00027 #include <stdbool.h>
00028
00029 #ifndef __MARK3C_H_
00030 #define __MARK3C_H_
```

19.126 mark3c.h 311

```
00031
00032 #if defined(__cplusplus)
00033 extern "C" {
00034 #endif
00035
00036 //
00037 // Define a series of handle types to be used in place of the underlying classes
00038 // of Mark3.
00039 typedef void* EventFlag_t;
00040 typedef void* Mailbox_t;
00041 typedef void* Message_t;
00042 typedef void* MessageQueue_t;
00043 typedef void* Mutex_t;
00044 typedef void* Notify_t;
00045 typedef void* Semaphore_t;
00046 typedef void* Thread_t;
00047 typedef void* Timer_t;
00048
00050 // Function pointer types used by Kernel APIs
00051 typedef void (*thread_create_callout_t)(Thread_t hThread_);
00052 typedef void (*thread_exit_callout_t)(Thread_t hThread_);
00053 typedef void (*thread_context_callout_t)(Thread_t hThread_);
00054
00055 //
00056 ^{\prime\prime} Use the sizes of the structs in fake_types.h to generate opaque object-blobs
00057 // that get instantiated as kernel objects (from the C++ code) later.
00058 #define THREAD_SIZE (sizeof(Fake_Thread))
00059 #define TIMER_SIZE (sizeof(Fake_Timer))
00060 #define SEMAPHORE_SIZE (sizeof(Fake_Semaphore))
00061 #define MUTEX_SIZE (sizeof(Fake_Mutex))
00062 #define MESSAGE_SIZE (sizeof(Fake_Message))
00063 #define MESSAGEQUEUE_SIZE (sizeof(Fake_MessageQueue))
00064 #define MAILBOX_SIZE (sizeof(Fake_Mailbox))
00065 #define NOTIFY_SIZE (sizeof(Fake_Notify))
00066 #define EVENTFLAG_SIZE (sizeof(Fake_EventFlag))
00067
00069 // Macros for declaring opaque buffers of an appropriate size for the given
00070 // kernel objects
00071 #define TOKEN_1(x, y) x##y
00072 #define TOKEN_2(x, y) TOKEN_1(x, y)
00073
00074 // Ensure that opaque buffers are sized to the nearest word - which is
00075 // a platform-dependent value.
00076 \#define WORD_ROUND(x) (((x) + (sizeof(K_WORD) - 1)) / sizeof(K_WORD))
00077
00078 #define DECLARE THREAD(name)
00079
          K WORD
                   TOKEN 2( thread, name) [WORD ROUND (THREAD SIZE)];
00080
          Thread_t name = (Thread_t)TOKEN_2(__thread_, name);
00081
00082 #define DECLARE TIMER(name)
00083
          K WORD
                  TOKEN 2 ( timer , name) [WORD ROUND (TIMER SIZE)];
00084
          Timer_t name = (Timer_t)TOKEN_2(__timer_, name);
00085
00086 #define DECLARE_SEMAPHORE (name)
00087
          K WORD
                      TOKEN 2 ( semaphore , name) [WORD ROUND (SEMAPHORE SIZE)];
00088
          Semaphore_t name = (Semaphore_t)TOKEN_2(__semaphore_, name);
00089
00090 #define DECLARE_MUTEX(name)
00091
          K WORD TOKEN 2 (__mutex_, name) [WORD_ROUND (MUTEX_SIZE)];
          Mutex_t name = (Mutex_t)TOKEN_2(__mutex_, name);
00093
00094 #define DECLARE MESSAGE (name)
00095
                    TOKEN_2 (__message_, name) [WORD_ROUND (MESSAGE_SIZE)];
          K WORD
00096
          Message_t name = (Message_t)TOKEN_2(__message_, name);
00097
00098 #define DECLARE_MESSAGEQUEUE(name)
00099
                         TOKEN_2(__messagequeue_, name)[WORD_ROUND(MESSAGEQUEUE SIZE)];
          K WORD
00100
          MessageQueue_t name = (MessageQueue_t)TOKEN_2(__messagequeue_, name);
00102 #define DECLARE_MAILBOX(name)
00103
                    TOKEN_2(__mailbox_, name)[WORD_ROUND(MAILBOX_SIZE)];
          K WORD
```

```
00104
          Mailbox_t name = (Mailbox_t)TOKEN_2(__mailbox_, name);
00105
00106 #define DECLARE_NOTIFY(name)
00107
          K WORD
                   TOKEN_2(__notify_, name)[WORD_ROUND(NOTIFY_SIZE)];
00108
          Notify_t name = (Notify_t) TOKEN_2(__notify_, name);
00109
00110 #define DECLARE_EVENTFLAG(name)
00111
          K WORD
                      TOKEN_2 (__eventflag_, name) [WORD_ROUND (EVENTFLAG_SIZE)];
00112
          EventFlag_t name = (EventFlag_t)TOKEN_2(__eventflag_, name);
00113
00114 //--
00115 // Allocate-once Memory managment APIs \,
00116 #if defined KERNEL_USE_AUTO_ALLOC
00117
00123 void* AutoAlloc(uint16_t u16Size_);
00124 #if KERNEL_USE_SEMAPHORE
00125
00130 Semaphore_t Alloc_Semaphore(void);
00131 #endif
00132 #if KERNEL_USE_MUTEX
00133
00138 Mutex_t Alloc_Mutex(void);
00139 #endif
00140 #if KERNEL_USE_EVENTFLAG
00141
00146 EventFlag_t Alloc_EventFlag(void);
00147 #endif
00148 #if KERNEL_USE_MESSAGE
00149
00154 Message_t Alloc_Message(void);
00160 MessageQueue_t Alloc_MessageQueue(void);
00161 #endif
00162 #if KERNEL USE NOTIFY
00163
00168 Notify_t Alloc_Notify(void);
00169 #endif
00170 #if KERNEL_USE_MAILBOX
00171
00176 Mailbox_t Alloc_Mailbox(void);
00177 #endif
00178
00183 Thread_t Alloc_Thread(void);
00184 #if KERNEL_USE_TIMERS
00185
00190 Timer_t Alloc_Timer(void);
00191 #endif
00192 #endif
00193
00194 //--
00195 // Kernel APIs
00200 void Kernel_Init(void);
00205 void Kernel_Start (void);
00212 bool Kernel_IsStarted(void);
00218 void Kernel_SetPanic(PanicFunc_t pfPanic_);
00224 bool Kernel_IsPanic(void);
00230 void Kernel_Panic(uint16_t u16Cause_);
00231 #if KERNEL_USE_IDLE_FUNC
00232
00237 void Kernel_SetIdleFunc(IdleFunc_t pfIdle_);
00238 #endif
00239
00240 #if KERNEL_USE_THREAD_CALLOUTS
00241
00246 void Kernel SetThreadCreateCallout(thread create callout t pfCreate):
00252 void Kernel_SetThreadExitCallout(thread_exit_callout_t pfExit_);
00253
00259 void Kernel_SetThreadContextSwitchCallout(thread_context_callout_t pfContext_);
00260
00266 thread_create_callout_t Kernel_GetThreadCreateCallout(void);
00267
00273 thread_exit_callout_t Kernel_GetThreadExitCallout(void);
00274
00280 thread_context_callout_t Kernel_GetThreadContextSwitchCallout(void);
00281 #endif
00282
00283 #if KERNEL USE STACK GUARD
00284
00290 void Kernel_SetStackGuardThreshold(uint16_t u16Threshold_);
00291
00297 uint16_t Kernel_GetStackGuardThreshold(void);
00298 #endif
00299 //----
00300 // Scheduler APIs
```

19.126 mark3c.h 313

```
00306 void Scheduler_Enable(bool bEnable_);
00312 bool Scheduler_IsEnabled(void);
00318 Thread_t Scheduler_GetCurrentThread(void);
00319
00320 //----
00321 // Thread APIs
00335 void Thread_Init(Thread_t
                                     handle,
                                   pwStack_,
00336
                       K_WORD*
00337
                       uint16 t
                                     u16StackSize_,
                       PORT_PRIO_TYPE uXPriority_,
00338
                       ThreadEntry_t pfEntryPoint_,
00339
00340
                       void*
                                     pvArg_);
00346 void Thread_Start (Thread_t handle);
00352 void Thread_Stop(Thread_t handle);
00353 #if KERNEL_USE_THREADNAME
00354
00360 void Thread_SetName(Thread_t handle, const char* szName_);
00367 const char* Thread_GetName(Thread_t handle);
00368 #endif
00369
00375 PORT_PRIO_TYPE Thread_GetPriority(Thread_t handle);
00382 PORT_PRIO_TYPE Thread_GetCurPriority(Thread_t handle);
00383 #if KERNEL_USE_QUANTUM
00384
00390 void Thread_SetQuantum(Thread_t handle, uint16_t u16Quantum_);
00397 uint16_t Thread_GetQuantum(Thread_t handle);
00398 #endif
00399
00405 void Thread_SetPriority(Thread_t handle, PORT_PRIO_TYPE uXPriority_);
00406 #if KERNEL_USE_DYNAMIC_THREADS
00407
00412 void Thread_Exit(Thread_t handle);
00413 #endif
00414 #if KERNEL_USE_SLEEP
00415
00420 void Thread_Sleep(uint32_t u32TimeMs_);
00426 void Thread_USleep(uint32_t u32TimeUs_);
00427 #endif
00428 #if KERNEL USE EXTENDED CONTEXT
00429
00435 void* Thread_GetExtendedContext(Thread_t handle);
00436
00443 void Thread SetExtendedContext(Thread t handle, void* pvData);
00444
00445 #endif
00446
00450 void Thread_Yield(void);
00457 void Thread_SetID (Thread_t handle, uint8_t u8ID_);
00464 uint8_t Thread_GetID(Thread_t handle);
00471 uint16_t Thread_GetStackSlack(Thread_t handle);
00478 ThreadState_t Thread_GetState(Thread_t handle);
00479
00480 //----
00481 // Timer APIs
00482 #if KERNEL_USE_TIMERS
00483 typedef void (*TimerCallbackC_t)(Thread_t hOwner_, void* pvData_);
00489 void Timer_Init(Timer_t handle);
00501 void Timer_Start(Timer_t
00502
                       bool
                                        bRepeat_,
                                        u32IntervalMs_,
00503
                       11int32 t
                                        u32ToleranceMs_,
00504
                       uint32 t
00505
                       TimerCallbackC_t pfCallback_,
00506
                       void*
                                        pvData_);
00507
00513 void Timer_Restart(Timer_t handle);
00514
00520 void Timer_Stop(Timer_t handle);
00521 #endif
00522
00524 // Semaphore APIs
00525 #if KERNEL_USE_SEMAPHORE
00526
00533 void Semaphore_Init(Semaphore_t handle, uint16_t u16InitVal_, uint16_t u16MaxVal_);
00539 void Semaphore Post (Semaphore t handle);
00545 void Semaphore_Pend(Semaphore_t handle);
00546 #if KERNEL_USE_TIMEOUTS
00547
00554 bool Semaphore_TimedPend(Semaphore_t handle, uint32_t u32WaitTimeMS_);
00555 #endif
00556 #endif
00558 /
00559 // Mutex APIs
00560 #if KERNEL_USE_MUTEX
00561
00566 void Mutex Init (Mutex t handle);
```

```
00572 void Mutex_Claim(Mutex_t handle);
00578 void Mutex_Release(Mutex_t handle);
00579 #if KERNEL_USE_TIMEOUTS
00580
00587 bool Mutex_TimedClaim(Mutex_t handle, uint32_t u32WaitTimeMS_);
00588 #endif
00589 #endif
00590
00591 //-
00592 // EventFlag APIs
00593 #if KERNEL_USE_EVENTFLAG
00594
00599 void EventFlag_Init(EventFlag_t handle);
00608 uint16_t EventFlag_Wait (EventFlag_t handle, uint16_t u16Mask_,
      EventFlagOperation_t eMode_);
00609 #if KERNEL_USE_TIMEOUTS
00610
00619 uint16_t EventFlag_TimedWait(EventFlag_t handle, uint16_t u16Mask_,
      EventFlagOperation_t eMode_, uint32_t u32TimeMS_);
00620 #endif
00621
00627 void EventFlag_Set(EventFlag_t handle, uint16_t u16Mask_);
00634 void EventFlag_Clear(EventFlag_t handle, uint16_t u16Mask_);
00641 uint16_t EventFlag_GetMask(EventFlag_t handle);
00642 #endif
00643
00644 //--
00645 // Notification APIs
00646 #if KERNEL_USE_NOTIFY
00647
00652 void Notify_Init(Notify_t handle);
00658 void Notify_Signal(Notify_t handle);
00665 void Notify_Wait(Notify_t handle, bool* pbFlag_);
00666 #if KERNEL_USE_TIMEOUTS
00667
00675 bool Notify_TimedWait(Notify_t handle, uint32_t u32WaitTimeMS_, bool* pbFlaq_);
00676 #endif
00677 #endif
00678
00679 //---
00680 // Atomic Functions
00681 #if KERNEL USE ATOMIC
00682
00689 uint8_t Atomic_Set8(uint8_t* pu8Source_, uint8_t u8Val_);
00697 uint16_t Atomic_Set16(uint16_t* pu16Source_, uint16_t u16Val_);
00705 uint32_t Atomic_Set32(uint32_t* pu32Source_, uint32_t u32Val_);
00713 uint8_t Atomic_Add8(uint8_t* pu8Source_, uint8_t u8Val_);
00721 uint16_t Atomic_Add16(uint16_t* pu16Source_, uint16_t u16Val_);
00729 uint32_t Atomic_Add32(uint32_t* pu32Source_, uint32_t u32Val_);
00737 uint8_t Atomic_Sub8(uint8_t* pu8Source_, uint8_t u8Val_);
00745 uint16_t Atomic_Sub16(uint16_t* pu16Source_, uint16_t u16Val_);
00753 uint32_t Atomic_Sub32(uint32_t* pu32Source_, uint32_t u32Val_);
00762 bool Atomic_TestAndSet(bool* pbLock);
00763 #endif
00764
00765 //-
00766 // Message/Message Queue APIs
00767 #if KERNEL_USE_MESSAGE
00768
00773 void Message_Init(Message_t handle);
00780 void Message_SetData(Message_t handle, void* pvData_);
00787 void* Message_GetData(Message_t handle);
00794 void Message_SetCode(Message_t handle, uint16_t u16Code_);
00801 uint16_t Message_GetCode(Message_t handle);
00807 void GlobalMessagePool_Push(Message_t handle);
00813 Message_t GlobalMessagePool_Pop(void);
00819 void MessageQueue_Init(MessageQueue_t handle);
00826 Message_t MessageQueue_Receive(MessageQueue_t handle);
00827 #if KERNEL_USE_TIMEOUTS
00838 Message_t MessageQueue_TimedReceive(MessageQueue_t handle, uint32_t u32TimeWaitMS_);
00839 #endif
00840
00847 void MessageQueue_Send(MessageQueue_t handle, Message_t hMessage_);
00848
00854 uint16_t MessageQueue_GetCount(void);
00855 #endif
00856
00857
00858 // Mailbox APIs
00859 #if KERNEL USE MAILBOX
00869 void Mailbox_Init(Mailbox_t handle, void* pvBuffer_, uint16_t u16BufferSize_, uint16_t u16ElementSize_);
00870
00878 bool Mailbox_Send(Mailbox_t handle, void* pvData_);
00879
00887 bool Mailbox SendTail (Mailbox t handle, void* pvData );
```

19.126 mark3c.h 315

```
00897 bool Mailbox_TimedSend(Mailbox_t handle, void* pvData_, uint32_t u32TimeoutMS_);
00898
00907 bool Mailbox_TimedSendTail(Mailbox_t handle, void* pvData_, uint32_t u32TimeoutMS_);
00908
00916 void Mailbox_Receive(Mailbox_t handle, void* pvData_);
00925 void Mailbox_ReceiveTail(Mailbox_t handle, void* pvData_);
00926 #if KERNEL_USE_TIMEOUTS
00927
00937 bool Mailbox_TimedReceive(Mailbox_t handle, void* pvData_, uint32_t u32TimeoutMS_);
00938
00948 bool Mailbox_TimedReceiveTail(Mailbox_t handle, void* pvData_, uint32_t u32TimeoutMS_);
00949
00956 uint16_t Mailbox_GetFreeSlots(Mailbox_t handle);
00957
00964 bool Mailbox_IsFull(Mailbox_t handle);
00965
00972 bool Mailbox_IsEmpty(Mailbox_t handle);
00973 #endif
00974 #endif
00975
00976 //----
00977 // Kernel-Aware Simulation APIs
00978 #if KERNEL_AWARE_SIMULATION
00979
00985 void KernelAware_ProfileInit(const char* szStr_);
00986
00991 void KernelAware_ProfileStart (void);
00992
00997 void KernelAware_ProfileStop(void);
00998
01003 void KernelAware_ProfileReport(void);
01004
01010 void KernelAware_ExitSimulator(void);
01011
01017 void KernelAware Print(const char* szStr );
01018
01025 void KernelAware_Trace(uint16_t u16File_, uint16_t u16Line_);
01026
01034 void KernelAware_Tracel(uint16_t u16File_, uint16_t u16Line_, uint16_t u16Arg1_);
01043 void KernelAware_Trace2(uint16_t u16File_, uint16_t u16Line_, uint16_t u16Arg1_, uint16_t u16Arg2_);
01053 bool KernelAware_IsSimulatorAware(void);
01054 #endif
01055
01056 #if defined(__cplusplus)
01057
01058 #endif
01059
01060 #endif // __MARK3C_H_
```

Chapter 20

Example Documentation

20.1 buffalogger/main.cpp

This example demonstrates how low-overhead logging can be implemented using buffalogger.

```
--[Mark3 Realtime Platform]-
Copyright (c) 2012 - 2017 Funkenstein Software Consulting, all rights reserved.
See license.txt for more information
#include "mark3.h"
#include "kerneldebug.h"
#include "drvATMegaUART.h"
#include "tracebuffer.h"
#include "ksemaphore.h"
Example - Logging data via buffalogger/debug APIs.
#if !(KERNEL_USE_DEBUG && !KERNEL_AWARE_SIMULATION)
# error "Buffalogger demo requires tracebuffer support"
#endif
#if KERNEL_USE_DEBUG && !KERNEL_AWARE_SIMULATION
#define _CAN_HAS_DEBUG
//--[Autogenerated - Do Not Modify]-----
#include "dbg_file_list.h"
#include "buffalogger.h"
#if defined(DBG_FILE)
#error "Debug logging file token already defined! Bailing."
#define DBG_FILE _DBG___EXAMPLES_AVR_BUFFALOGGER_MAIN_CPP
//--[End Autogenerated content]-----
// This block declares the thread data for the main application thread. It
// defines a thread object, stack (in word-array form), and the entry-point
// function used by the application thread.
#define APP_STACK_SIZE (192 / sizeof(K_WORD))
static Thread clAppThread;
static K_WORD awAppStack[APP_STACK_SIZE];
static void AppMain(void* unused_);
#define IDLE_STACK_SIZE (192 / sizeof(K_WORD))
static Thread clIdleThread;
static K_WORD awIdleStack[APP_STACK_SIZE];
static void IdleMain(void* unused_);
```

```
#define LOGGER_STACK_SIZE (192 / sizeof(K_WORD))
static Thread clLoggerThread;
static K_WORD awLoggerStack[APP_STACK_SIZE];
static void LoggerMain(void* unused_);
static volatile bool bPingPong;
static Semaphore
static ATMegaUART clUART;
#define UART_SIZE_TX (32)
#define UART_SIZE_RX (8)
static uint8_t aucTxBuffer[UART_SIZE_TX];
static uint8_t aucRxBuffer[UART_SIZE_RX];
static volatile uint16_t* pu16Log;
static volatile uint16_t u16LogLen;
extern "C" {
void __cxa_pure_virtual(void)
void IdleMain(void* unused_)
    while (1) {
void LoggerCallback(uint16_t* pu16Data_, uint16_t u16Len_, bool bPingPong_)
    CS_ENTER();
    bPingPong = bPingPong_;
pu16Log = pu16Data_;
u16LogLen = u16Len_;
    CS_EXIT();
    clSem.Post();
}
void LoggerMain(void* unused_)
    while (1) {
        uint8_t* src;
        uint16_t len;
        clSem.Pend();
        CS ENTER();
        src = (uint8_t*)pu16Log;
len = u16LogLen * sizeof(uint16_t);
        CS_EXIT();
        uint16_t written = 0;
        while (len != written) {
   written += clUART.Write(len - written, src + written);
}
int main (void)
    Kernel::Init();
    // Example assumes use of built-in idle.
    clAppThread.Init(awAppStack, APP_STACK_SIZE, 2, AppMain, 0);
    clAppThread.Start();
    clLoggerThread.Init(awLoggerStack, LOGGER_STACK_SIZE, 1, LoggerMain, 0);
    clIdleThread.Init(awIdleStack, IDLE_STACK_SIZE, 0, IdleMain, 0);
    clIdleThread.Start();
    cluarr.SetName("/dev/tty");
    cluart.Init();
    clUART.Open();
    DriverList::Add(&clUART);
```

```
Kernel::Start();
    return 0;
void AppMain(void* unused_)
        uint32_t u32Baud = 57600 * 4;
        cluart.Control(CMD_SET_BAUDRATE, &u32Baud, 0, 0, 0);
    clUART.Control(CMD_SET_BUFFERS, (void*)aucRxBuffer, UART_SIZE_RX, (void*)aucTxBuffer, UART_SIZE_TX);
    clSem.Init(0, 1);
    TraceBuffer::SetCallback(LoggerCallback);
    volatile uint16_t u16Iteration = 0;
    while (1) {
        Thread::Sleep(100);
        USER_TRACE("Beginning of the main application loop!");
        Thread::Sleep(100);
USER_TRACE_1(" Iteration: %d", ul6Iteration++);
        Thread::Sleep(100);
        USER_TRACE("End of the main application loop!");
#endif //#if KERNEL_USE_DEBUG && !KERNEL_AWARE_SIMULATION
```

20.2 lab10_notifications/main.cpp

This examples demonstrates how to use notification objects as a thread synchronization mechanism.

```
--[Mark3 Realtime Platform]-
Copyright (c) 2012 - 2017 Funkenstein Software Consulting, all rights reserved.
See license.txt for more information
Lab Example 10: Thread Notifications
Lessons covered in this example include:
- Create a notification object, and use it to synchronize execution of Threads.
- Notification objects are a lightweight mechanism to signal thread execution
 in situations where even a semaphore would be a heavier-weigth option.
#if !KERNEL_USE_IDLE_FUNC
#error "This demo requires KERNEL_USE_IDLE_FUNC"
#endif
extern "C" {
void __cxa_pure_virtual(void)
#define APP_STACK_SIZE (256 / sizeof(K_WORD))
static Thread clApplThread;
static K_WORD awApp1Stack[APP_STACK_SIZE];
static void ApplMain(void* unused_);
static Thread clApp2Thread;
```

```
static K_WORD awApp2Stack[APP_STACK_SIZE];
static void App2Main(void* unused_);
// Notification object used in the example.
static Notify clNotify;
int main(void)
    // See the annotations in previous labs for details on init.
    Kernel::Init();
    // Initialize notifer and notify-ee threads
    clApp1Thread.Init(awApp1Stack, sizeof(awApp1Stack), 1, App1Main, 0);
    clApp1Thread.Start();
    clApp2Thread.Init(awApp2Stack, sizeof(awApp2Stack), 1, App2Main, 0);
    clApp2Thread.Start();
    // Initialize the Notify objects
    clNotify.Init();
    Kernel::Start();
    return 0;
void ApplMain(void* unused_)
    while (1) {
        bool bNotified = false;
        \ensuremath{//} Block the thread until the notification object is signalled from
        // elsewhere.
        clNotify.Wait(&bNotified);
        KernelAware::Print("T1: Notified\n");
void App2Main(void* unused_)
    while (1) {
        // Wait a while, then signal the notification object
        KernelAware::Print("T2: Wait 1s\n");
        Thread::Sleep(1000);
        KernelAware::Print("T2: Notify\n");
        clNotify.Signal();
```

20.3 lab11_mailboxes/main.cpp

This examples shows how to use mailboxes to deliver data between threads in a synchronized way.

```
Takeaway:
- Mailboxes are a powerful IPC mechanism used to pass messages of a fixed-size
  between threads.
#if !KERNEL_USE_IDLE_FUNC
#error "This demo requires KERNEL_USE_IDLE_FUNC"
#endif
extern "C" {
void __cxa_pure_virtual(void)
#define APP_STACK_SIZE (256 / sizeof(K_WORD))
static Thread clApplThread;
static K_WORD awApp1Stack[APP_STACK_SIZE];
static void ApplMain(void* unused_);
static Thread clApp2Thread;
static K_WORD awApp2Stack[APP_STACK_SIZE];
static void App2Main(void* unused_);
static Mailbox clMailbox;
static uint8_t au8MBData[100];
typedef struct {
    uint8_t au8Buffer[10];
} MBType_t;
int main (void)
    // See the annotations in previous labs for details on init.
    Kernel::Init();
    \ensuremath{//} Initialize the threads used in this example
    \verb|clApp1Thread.Init| (awApp1Stack, size of (awApp1Stack), 1, App1Main, 0); \\
    clApp1Thread.Start();
    clApp2Thread.Init(awApp2Stack, sizeof(awApp2Stack), 2, App2Main, 0);
    clApp2Thread.Start();
    \ensuremath{//} Initialize the mailbox used in this example
    clMailbox.Init(au8MBData, 100, sizeof(MBType_t));
    Kernel::Start();
    return 0;
}
void ApplMain(void* unused_)
    while (1) {
        MBType_t stMsg;
        // Wait until there is an envelope available in the shared mailbox, and
        // then log a trace message.
        clMailbox.Receive(&stMsg);
        KernelAware::Trace(0, __LINE__, stMsg.au8Buffer[0], stMsg.au8Buffer[9]);
    }
}
void App2Main(void* unused_)
    while (1) {
        MBType_t stMsg;
        // Place a bunch of envelopes in the mailbox, and then wait for a
        // while. Note that this thread has a higher priority than the other
        // thread, so it will keep pushing envelopes to the other thread until
         // it gets to the sleep, at which point the other thread will be allowed
        // to execute.
        KernelAware::Print("Messages Begin\n");
        for (uint8_t i = 0; i < 10; i++) {
   for (uint8_t j = 0; j < 10; j++) {</pre>
                stMsg.au8Buffer[j] = (i * 10) + j;
             clMailbox.Send(&stMsg);
```

```
KernelAware::Print("Messages End\n");
Thread::Sleep(2000);
}
```

20.4 lab1_kernel_setup/main.cpp

This example demonstrates basic kernel setup with two threads.

```
--[Mark3 Realtime Platform]---
Copyright (c) 2012 - 2017 Funkenstein Software Consulting, all rights reserved.
See license.txt for more information
#include "mark3.h"
Lab Example 1: Initializing the Mark3 RTOS kernel with two threads.
The following example code presents a working example of how to initialize
the Mark3 RTOS kernel, configure two application threads, and execute the
configured tasks. This example also uses the flAVR kernel-aware module to
print out messages when run through the flAVR AVR Simulator. This is a
turnkey-ready example of how to use the Mark3 RTOS at its simplest level,
and should be well understood before moving on to other examples.
Lessons covered in this example include:
- usage of the Kernel class - configuring and starting the kernel - usage of the Thread class - initializing and starting static threads.
- Demonstrate the relationship between Thread objects, stacks, and entry
 functions.
  usage of Thread::Sleep() to block execution of a thread for a period of time
- When using an idle thread, the idle thread MUST not block.
- Add another application thread that prints a message, flashes an LED, etc.
 using the code below as an example.
At the end of this example, the reader should be able to use the Mark3
Kernel and Thread APIs to initialize and start the kernel with any number
of static threads.
extern "C" {
void __cxa_pure_virtual(void)
// This block declares the thread data for the main application thread. It
^{\prime\prime} defines a thread object, stack (in word-array form), and the entry-point
// function used by the application thread.
#define APP_STACK_SIZE (320 / sizeof(K_WORD))
static Thread clAppThread;
static K_WORD awAppStack[APP_STACK_SIZE];
static void AppMain(void* unused_);
// This block declares the thread data for the idle thread. It defines a
// thread object, stack (in word-array form), and the entry-point function
// used by the idle thread.
#define IDLE_STACK_SIZE (320 / sizeof(K_WORD))
static Thread clIdleThread;
static K_WORD awIdleStack[IDLE_STACK_SIZE];
static void IdleMain(void* unused_);
```

```
int main (void)
    // Before any Mark3 RTOS APIs can be called, the user must call Kernel::Init().
    //\ \mbox{Note that if you have any hardware-specific init code, it can be called
    // before Kernel::Init, so long as it does not enable interrupts, or
    // rely on hardware peripherals (timer, software interrupt, etc.) used by the
    Kernel::Init();
    // Once the kernel initialization has been complete, the user can add their
    // application thread(s) and idle thread. Threads added before the kerel
    // is started are refered to as the "static threads" in the system, as they
    // are the default working-set of threads that make up the application on
    // kernel startup.
    // Initialize the application thread to use a specified word-array as its stack. // The thread will run at priority level "1", and start execution the // "AppMain" function when it's started.
    clAppThread.Init(awAppStack, sizeof(awAppStack), 1, AppMain, 0);
    // Initialize the idle thread to use a specific word-array as its stack. // The thread will run at priority level "0", which is reserved for the idle // priority thread. IdleMain will be run when the thread is started.
    clidleThread.Init(awIdleStack, sizeof(awIdleStack), 0, IdleMain, 0);
    // Once the static threads have been added, the user must then ensure that the
    // threads are ready to execute. By default, creating a thread is created
    // in a STOPPED state. All threads must manually be started using the
    ^{\prime\prime} Start() API before they will be scheduled by the system. Here, we are
    // starting the application and idle threads before starting the kernel - and
    // that's OK. When the kernel is started, it will choose which thread to run
    // first from the pool of ready threads.
    clAppThread.Start();
    clIdleThread.Start();
    // All threads have been initialized and made ready. The kernel will now
    // select the first thread to run, enable the hardware required to run the
    // kernel (Timers, software interrupts, etc.), and then do whatever is
    \ensuremath{//} necessary to maneuver control of thread execution to the kernel. At this
    // point, \bar{\text{execution}} will transition to the highest-priority ready thread.
    // This function will not return.
    Kernel::Start();
    // As Kernel::Start() results in the operating system being executed, control // will not be relinquished back to main(). The "return 0" is simply to
    // avoid warnings.
    return 0;
void AppMain(void* unused_)
    // This function is run from within the application thread. Here, we
    // simply print a friendly greeting and allow the thread to sleep for a
    // while before repeating the message. Note that while the thread is
    \ensuremath{//} sleeping, CPU execution will transition to the Idle thread.
    while (1) {
        KernelAware::Print("Hello World!\n");
        Thread::Sleep(1000);
    }
}
void IdleMain(void* unused)
    while (1) {
         // Low priority task + power management routines go here.
         // The actions taken in this context must *not* cause the thread
         // to block, as the kernel requires that at least one thread is
         // schedulable at all times when not using an idle thread.
         // Note that if you have no special power-management code or idle
         // tasks, an empty while(1){} loop is sufficient to guarantee that
         // condition.
    }
```

20.5 lab2_idle_function/main.cpp

This example demonstrates how to use the idle function, instead of an idle thread to manage system inactivity.

```
-- [Mark3 Realtime Platform]
Copyright (c) 2012 - 2017 Funkenstein Software Consulting, all rights reserved.
See license.txt for more information
#include "mark3.h"
Lab Example 2: Initializing the Mark3 RTOS kernel with one thread.
The following example code presents a working example of how to initialize
the Mark3 RTOS kernel, configured to use an application thread and the special
Kernel-Idle function. This example is functionally identical to lab1, although it uses less memory as a result of only requiring one thread. This example also
uses the flAVR kernel-aware module to print out messages when run through the
flAVR AVR Simulator.
Lessons covered in this example include:
- usage of the Kernel::SetIdleFunc() API
- Changing an idle thread into an idle function
 You can save a thread and a stack by using an idle function instead of a
  dedicated idle thread.
Takeawav:
The Kernel-Idle context allows you to run the Mark3 RTOS without running
a dedicated idle thread (where supported). This results in a lower overall
memory footprint for the application, as you can avoid having to declare
a thread object and stack for Idle functionality.
#if !KERNEL_USE_IDLE_FUNC
#error "This demo requires KERNEL_USE_IDLE_FUNC"
#endif
extern "C" {
void __cxa_pure_virtual(void)
// This block declares the thread data for the main application thread. It
^{\prime\prime} // defines a thread object, stack (in word-array form), and the entry-point
// function used by the application thread.
#define APP_STACK_SIZE (320 / sizeof(K_WORD))
static Thread clAppThread;
static K_WORD awAppStack[APP_STACK_SIZE];
static void AppMain(void* unused_);
// This block declares the special function called from with the special
// Kernel-Idle context. We use the Kernel::SetIdleFunc() API to ensure that
// this function is called to provide our idle context.
static void IdleMain(void);
int main(void)
    // See the annotations in lab1.
    Kernel::Init();
    \ensuremath{//} Initialize the main application thread, as in lab1. Note that even
    // though we're using an Idle function and not a dedicated thread, priority
    // level 0 is still reserved for idle functionality. Application threads
    // should never be scheduled at priority level 0 when the idle function is
    // used instead of an idle thread.
    clAppThread.Init(awAppStack, sizeof(awAppStack), 1, AppMain, 0);
    clAppThread.Start();
    // This function is used to install our specified idle function to be called
```

```
// whenever there are no ready threads in the system. Note that if no
     // Idle function is specified, a default will be used. Note that this default
     // function is essentially a null operation.
     Kernel::SetIdleFunc(IdleMain);
     Kernel::Start():
     return 0;
void AppMain(void* unused_)
     // Same as in lab1.
     while (1) {
          KernelAware::Print("Hello World!\n");
          Thread::Sleep(1000);
void IdleMain(void)
     // Low priority task + power management routines go here. 
// The actions taken in this context must *not* cause a blocking call, 
// similar to the requirements for an idle thread.
     \ensuremath{//} Note that unlike an idle thread, the idle function must run to
     // completion. As this is also called from a nested interrupt context, // it's worthwhile keeping this function brief, limited to absolutely
     \ensuremath{//} necessary functionality, and with minimal stack use.
```

20.6 lab3_round_robin/main.cpp

This example demonstrates how to use round-robin thread scheduling with multiple threads of the same priority.

```
--[Mark3 Realtime Platform]-
Copyright (c) 2012 - 2017 Funkenstein Software Consulting, all rights reserved.
See license.txt for more information
Lab Example 3: using round-robin scheduling to time-slice the CPU.
Lessons covered in this example include:
- Threads at the same priority get timesliced automatically - The Thread::SetQuantum() API can be used to set the maximum amount of CPU
 time a thread can take before being swapped for another task at that
 priority level.
Takeaway:
- CPU Scheduling can be achieved using not just strict Thread priority, but
 also with round-robin time-slicing between threads at the same priority.
#if !KERNEL_USE_IDLE_FUNC
#error "This demo requires KERNEL_USE_IDLE_FUNC"
extern "C" {
void __cxa_pure_virtual(void)
// This block declares the thread data for one main application thread. It
// defines a thread object, stack (in word-array form), and the entry-point
// function used by the application thread.
```

```
#define APP1_STACK_SIZE (320 / sizeof(K_WORD))
static Thread clApplThread;
static K_WORD awApp1Stack[APP1_STACK_SIZE];
static void ApplMain(void* unused_);
// This block declares the thread data for one main application thread. It
// defines a thread object, stack (in word-array form), and the entry-point
// function used by the application thread.
#define APP2_STACK_SIZE (320 / sizeof(K_WORD))
static Thread clApp2Thread;
static K_WORD awApp2Stack[APP2_STACK_SIZE];
static void App2Main(void* unused_);
int main(void)
     // See the annotations in lab1.
    Kernel::Init();
    // In this exercise, we create two threads at the same priority level. // As a result, the CPU will automatically swap between these threads
    \ensuremath{//} at runtime to ensure that each get a chance to execute.
    clApp1Thread.Init(awApp1Stack, sizeof(awApp1Stack), 1, App1Main, 0);
clApp2Thread.Init(awApp2Stack, sizeof(awApp2Stack), 1, App2Main, 0);
     // Set the threads up so that Thread 1 can get 4ms of CPU time uninterrupted,
    // but Thread 2 can get 8ms of CPU time uninterrupted. This means that // in an ideal situation, Thread 2 will get to do twice as much work as
    \ensuremath{//} Thread 1 - even though they share the same scheduling priority.
     // Note that if SetQuantum() isn't called on a thread, a default value
     // is set such that each thread gets equal timeslicing in the same
     // priority group by default. You can play around with these values and
     // observe how it affects the execution of both threads.
    clApp1Thread.SetQuantum(4);
    clApp2Thread.SetQuantum(8);
    clApp1Thread.Start();
    clApp2Thread.Start();
    Kernel::Start();
    return 0;
void ApplMain(void* unused_)
     // Simple loop that increments a volatile counter to 1000000 then resets
     // it while printing a message.
    volatile uint32_t u32Counter = 0;
    while (1) {
         u32Counter++;
         if (u32Counter == 1000000) {
             u32Counter = 0;
             KernelAware::Print("Thread 1 - Did some work\n");
    }
void App2Main(void* unused_)
    // as Thread 1, you should see its message printed twice as often as the // above function.
    // Same as ApplMain. However, as this thread gets twice as much CPU time
    volatile uint32_t u32Counter = 0;
    while (1) {
         u32Counter++;
         if (u32Counter == 1000000) {
             u32Counter = 0;
             KernelAware::Print("Thread 2 - Did some work\n");
```

20.7 lab4_semaphores/main.cpp

This example demonstrates how to use semaphores for Thread synchronization.

```
--[Mark3 Realtime Platform]-
Copyright (c) 2012 - 2017 Funkenstein Software Consulting, all rights reserved.
See license.txt for more information
#include "mark3.h"
Lab Example 4: using binary semaphores
In this example, we implement two threads, synchronized using a semaphore to
model the classic producer-consumer pattern. One thread does work, and then posts the semaphore indicating that the other thread can consume that work.
The blocking thread just waits idly until there is data for it to consume.
Lessons covered in this example include:
-Use of a binary semaphore to implement the producer-consumer pattern
-Synchronization of threads (within a single priority, or otherwise)
 using a semaphore
Takeawav:
Semaphores can be used to control which threads execute at which time. This
allows threads to work cooperatively to achieve a goal in the system.
#if !KERNEL_USE_IDLE_FUNC
#error "This demo requires KERNEL_USE_IDLE_FUNC"
#endif
extern "C" {
void __cxa_pure_virtual(void)
// This block declares the thread data for one main application thread. It
// defines a thread object, stack (in word-array form), and the entry-point
// function used by the application thread.
#define APP1_STACK_SIZE (320 / sizeof(K_WORD))
static Thread clApplThread;
static K_WORD awApp1Stack[APP1_STACK_SIZE];
static void ApplMain(void* unused_);
// This block declares the thread data for one main application thread. It
// defines a thread object, stack (in word-array form), and the entry-point
// function used by the application thread. #define APP2_STACK_SIZE (320 / sizeof(K_WORD))
static Thread clApp2Thread;
static K_WORD awApp2Stack[APP2_STACK_SIZE];
static void App2Main(void* unused_);
// This is the semaphore that we'll use to synchronize two threads in this
// demo application
static Semaphore clMySem;
int main(void)
     // See the annotations in previous labs for details on init.
    Kernel::Init();
    // In this example we create two threads to illustrate the use of a
    // binary semaphore as a synchronization method between two threads.
     // Thread 1 is a "consumer" thread -- It waits, blocked on the semaphore
     // until thread 2 is done doing some work. Once the semaphore is posted,
    \ensuremath{//} the thread is unblocked, and does some work.
     // Thread 2 is thus the "producer" thread -- It does work, and once that
     // work is done, the semaphore is posted to indicate that the other thread
     // can use the producer's work product.
    clApp1Thread.Init(awApp1Stack, APP1_STACK_SIZE, 1, App1Main, 0);
clApp2Thread.Init(awApp2Stack, APP2_STACK_SIZE, 1, App2Main, 0);
```

```
clApp1Thread.Start();
    clApp2Thread.Start();
    // Initialize a binary semaphore (maximum value of one, initial value of
    clMySem.Init(0, 1);
    Kernel::Start();
    return 0:
void ApplMain(void* unused_)
        // Wait until the semaphore is posted from the other thread
        KernelAware::Print("Wait\n");
        clMySem.Pend();
         // Producer thread has finished doing its work -- do something to
         \ensuremath{//} consume its output. Once again - a contrived example, but we
        // can imagine that printing out the message is "consuming" the output
         // from the other thread.
        KernelAware::Print("Triggered!\n");
void App2Main(void* unused_)
    volatile uint32_t u32Counter = 0;
    while (1) {
         \ensuremath{//} Do some work. Once the work is complete, post the semaphore. This
        // will cause the other thread to wake up and then take some action.
// It's a bit contrived, but imagine that the results of this process
         // are necessary to drive the work done by that other thread.
        u32Counter++;
         if (u32Counter == 1000000) {
             u32Counter = 0;
             KernelAware::Print("Posted\n");
             clMySem.Post();
```

20.8 lab5_mutexes/main.cpp

This example demonstrates how to use mutexes to protect against concurrent access to resources.

```
void __cxa_pure_virtual(void)
// This block declares the thread data for one main application thread. It
// defines a thread object, stack (in word-array form), and the entry-point
// function used by the application thread.
#define APP1_STACK_SIZE (320 / sizeof(K_WORD))
static Thread clApplThread;
static K_WORD awApp1Stack[APP1_STACK_SIZE];
static void ApplMain(void* unused_);
\ensuremath{//} This block declares the thread data for one main application thread. It
// defines a thread object, stack (in word-array form), and the entry-point
// function used by the application thread.
#define APP2_STACK_SIZE (320 / sizeof(K_WORD))
static Thread clApp2Thread;
static K_WORD awApp2Stack[APP2_STACK_SIZE];
static void App2Main(void* unused_);
// This is the mutex that we'll use to synchronize two threads in this
// demo application.
static Mutex clMyMutex;
// This counter variable is the "shared resource" in the example, protected
\ensuremath{//} by the mutex. Only one thread should be given access to the counter at
// any time.
static volatile uint32_t u32Counter = 0;
int main (void)
    // See the annotations in previous labs for details on init.
    Kernel::Init();
    clApp1Thread.Init(awApp1Stack, sizeof(awApp1Stack), 1, App1Main, 0);
    clApp2Thread.Init(awApp2Stack, sizeof(awApp2Stack), 1, App2Main, 0);
    clapplThread.Start():
    clApp2Thread.Start();
    // Initialize the mutex used in this example.
    clMyMutex.Init();
    Kernel::Start();
    return 0;
void App1Main(void* unused_)
    while (1) {
        // Claim the mutex. This will prevent any other thread from claiming
         // this lock simulatenously. As a result, the other thread has to
         // wait until we're done before it can do its work. You will notice
        // what the Start/Done prints for the thread will come as a pair (i.e. // you won't see "Thread2: Start" then "Thread1: Start").
        clMvMutex.Claim();
         // Start our work (incrementing a counter). Notice that the Start and
        // Done prints wind up as a pair when simuated with flAVR.
        KernelAware::Print("Thread1: Start\n");
        u32Counter++;
        while (u32Counter <= 1000000) {</pre>
            u32Counter++;
        u32Counter = 0;
        KernelAware::Print("Thread1: Done\n");
         // Release the lock, allowing the other thread to do its thing.
        clMyMutex.Release();
    }
}
void App2Main(void* unused_)
    while (1) {
         \ensuremath{//} Claim the mutex. This will prevent any other thread from claiming
         // this lock simulatenously. As a result, the other thread has to
```

```
// wait until we're done before it can do its work. You will notice
// that the Start/Done prints for the thread will come as a pair (i.e.
// you won't see "Thread2: Start" then "Thread1: Start").

clMyMutex.Claim();

// Start our work (incrementing a counter). Notice that the Start and
// Done prints wind up as a pair when simuated with flAVR.

KernelAware::Print("Thread2: Start\n");
u32Counter++;
while (u32Counter <= 1000000) {
    u32Counter++;
}
u32Counter= 0;
KernelAware::Print("Thread2: Done\n");

// Release the lock, allowing the other thread to do its thing.
clMyMutex.Release();
}</pre>
```

20.9 lab6_timers/main.cpp

This example demonstrates how to create and use software timers.

```
-- [Mark3 Realtime Platform]-
Copyright (c) 2012 - 2017 Funkenstein Software Consulting, all rights reserved.
See license.txt for more information
#include "mark3.h"
Lab Example 6: using Periodic and One-shot timers.
Lessons covered in this example include:
Takeaway:
#if !KERNEL_USE_IDLE_FUNC
#error "This demo requires KERNEL_USE_IDLE_FUNC"
#endif
extern "C" {
void __cxa_pure_virtual(void)
// This block declares the thread data for one main application thread. It
// defines a thread object, stack (in word-array form), and the entry-point
// function used by the application thread.
#define APP1_STACK_SIZE (320 / sizeof(K_WORD))
static Thread clApp1Thread;
static K_WORD awApp1Stack[APP1_STACK_SIZE];
static void ApplMain(void* unused_);
static void PeriodicCallback(Thread* owner, void* pvData_);
static void OneShotCallback(Thread* owner, void* pvData_);
int main(void)
    // See the annotations in previous labs for details on init.
    clApp1Thread.Init(awApp1Stack, sizeof(awApp1Stack), 1, App1Main, 0);
    clApp1Thread.Start();
```

```
Kernel::Start();
    return 0;
void PeriodicCallback(Thread* owner, void* pvData_)
    // Timer callback function used to post a semaphore. Posting the semaphore
    // will wake up a thread that's pending on that semaphore.
    Semaphore* pclSem = (Semaphore*)pvData_;
   pclSem->Post();
void OneShotCallback(Thread* owner, void* pvData_)
    KernelAware::Print("One-shot timer expired.\n");
void ApplMain(void* unused_)
    Timer clMyTimer; // Periodic timer object
   Timer clOneShot; // One-shot timer object
    Semaphore clMySem; // Semaphore used to wake this thread
    \ensuremath{//} Initialize a binary semaphore (maximum value of one, initial value of
    // zero).
    clMySem.Init(0, 1);
    // Start a timer that triggers every 500 \, \mathrm{ms} that will call PeriodicCallback.
    \ensuremath{//} This timer simulates an external stimulus or event that would require
    // an action to be taken by this thread, but would be serviced by an
    // interrupt or other high-priority context.
    // PeriodicCallback will post the semaphore which wakes the thread
    // up to perform an action. Here that action consists of a trivial message
    clMyTimer.Start(true, 500, PeriodicCallback, (void*)&clMySem);
    // Set up a one-shot timer to print a message after 2.5 seconds, asynchronously
    // from the execution of this thread.
    clOneShot.Start(false, 2500, OneShotCallback, 0);
   while (1) { // Wait until the semaphore is posted from the timer expiry
        clMvSem.Pend();
        // Take some action after the timer posts the semaphore to wake this
        KernelAware::Print("Thread Triggered.\n");
}
```

20.10 lab7_events/main.cpp

This example demonstrates how to create and use event groups

```
-Explore the behavior of the EVENT_FLAG_ANY and EVENT_FLAG_ALL, and the
event-mask bitfield.
Takeaway:
Like Semaphores and Mutexes, EventFlag objects can be used to synchronize
the execution of threads in a system. The EventFlag class allows for many
threads to share the same object, blocking on different event combinations.
This provides an efficient, robust way for threads to process asynchronous
system events that occur with a unified interface.
#if !KERNEL_USE_IDLE_FUNC
#error "This demo requires KERNEL_USE_IDLE_FUNC"
#endif
extern "C" {
void __cxa_pure_virtual(void)
\ensuremath{//} This block declares the thread data for one main application thread. It
// defines a thread object, stack (in word-array form), and the entry-point // function used by the application thread.
#define APP1_STACK_SIZE (320 / sizeof(K_WORD))
static Thread clApplThread;
static K_WORD awApp1Stack[APP1_STACK_SIZE];
static void ApplMain(void* unused_);
// This block declares the thread data for one main application thread. It
// defines a thread object, stack (in word-array form), and the entry-point
// function used by the application thread.
#define APP2_STACK_SIZE (320 / sizeof(K_WORD))
static Thread clApp2Thread;
static K_WORD awApp2Stack[APP2_STACK_SIZE];
static void App2Main(void* unused_);
static EventFlag clFlags;
int main(void)
     // See the annotations in previous labs for details on init.
     Kernel::Init():
     clApp1Thread.Init(awApp1Stack, sizeof(awApp1Stack), 1, App1Main, 0);
     clApp2Thread.Init(awApp2Stack, sizeof(awApp2Stack), 1, App2Main, 0);
     clApp1Thread.Start();
     clApp2Thread.Start();
    clFlags.Init();
    Kernel::Start();
    return 0:
}
void ApplMain(void* unused_)
     while (1) {
         uint16 t u16Flags:
          // Block this thread until any of the event flags have been set by
          ^{\prime\prime} some outside force (here, we use Thread 2). As an exercise to the ^{\prime\prime} user, try playing around with the event mask to see the effect it
         // has on which events get processed. Different threads can block on // different bitmasks - this allows events with different real-time // priorities to be handled in different threads, while still using // the same event-flag object.
          // Also note that <code>EVENT_FLAG_ANY</code> indicates that the thread will be
          \ensuremath{//} unblocked whenever any of the flags in the mask are selected. If
          // you wanted to trigger an action that only takes place once multiple
          /// bits are set, you could block the thread waiting for a specific // event bitmask with EVENT_FLAG_ALL specified.
         u16Flags = clFlags.Wait(0xFFFF, EVENT_FLAG_ANY);
          // Print a message indicaating which bit was set this time.
         switch (u16Flags) {
    case 0x0001: KernelAware::Print("Event1\n"); break;
```

```
case 0x0002: KernelAware::Print("Event2\n"); break;
             case 0x0004: KernelAware::Print("Event3\n"); break;
             case 0x0008: KernelAware::Print("Event4\n"); break;
case 0x0010: KernelAware::Print("Event5\n"); break;
case 0x0020: KernelAware::Print("Event6\n"); break;
             case 0x0040: KernelAware::Print("Event7\n"); break;
             case 0x0080: KernelAware::Print("Event8\n"); break;
             case 0x0100: KernelAware::Print("Event9\n"); break;
             case 0x0200: KernelAware::Print("Event10\n"); break;
             case 0x0400: KernelAware::Print("Event11\n"); break;
case 0x0800: KernelAware::Print("Event12\n"); break;
             case 0x1000: KernelAware::Print("Event13\n"); break;
             case 0x2000: KernelAware::Print("Event14\n"); break;
             case 0x4000: KernelAware::Print("Event15\n"); break;
             case 0x8000: KernelAware::Print("Event16\n"); break;
             default: break;
         // Clear the event-flag that we just printed a message about. This
            will allow u16 to acknowledge further events in that bit in the future.
        clFlags.Clear(u16Flags);
}
void App2Main(void* unused_)
    uint16_t u16Flag = 1;
    while (1) {
        Thread::Sleep(100);
         // Event flags essentially map events to bits in a bitmap.
         // set one bit each 100ms. In this loop, we cycle through bits 0-15
         // repeatedly. Note that this will wake the other thread, which is
         // blocked, waiting for *any* of the flags in the bitmap to be set.
        clFlags.Set (u16Flag);
         // Bitshift the flag value to the left. This will be the flag we set
         // the next time this thread runs through its loop.
         if (u16Flag != 0x8000) {
             u16Flag <<= 1;
         } else {
             u16Flag = 1;
```

20.11 lab8 messages/main.cpp

This example demonstrates how to pass data between threads using message passing.

```
"data" members. This mechanism can be used to pass data between threads
extremely efficiently, with a simple and flexible API. Any number of threads
can write to/block on a single message queue, which give this method of
IPC even more flexibility.
 #if !KERNEL_USE_IDLE_FUNC
#error "This demo requires KERNEL_USE_IDLE_FUNC"
#endif
extern "C" {
void __cxa_pure_virtual(void)
// This block declares the thread data for one main application thread. It
// defines a thread object, stack (in word-array form), and the entry-point
// function used by the application thread.
#define APP1_STACK_SIZE (320 / sizeof(K_WORD))
static Thread clApp1Thread;
static K_WORD awApp1Stack[APP1_STACK_SIZE];
static void ApplMain(void* unused_);
// This block declares the thread data for one main application thread. It
// defines a thread object, stack (in word-array form), and the entry-point
// function used by the application thread.
#define APP2_STACK_SIZE (320 / sizeof(K_WORD))
static Thread clApp2Thread;
static K_WORD awApp2Stack[APP2_STACK_SIZE];
static void App2Main(void* unused_);
static MessageQueue clMsgQ;
int main(void)
    // See the annotations in previous labs for details on init.
    Kernel::Init();
    clApp1Thread.Init(awApp1Stack, sizeof(awApp1Stack), 1, App1Main, 0);
    clApp2Thread.Init(awApp2Stack, sizeof(awApp2Stack), 1, App2Main, 0);
    clApp1Thread.Start();
    clApp2Thread.Start();
   clMsqO.Init();
    Kernel::Start();
    return 0;
void App1Main(void* unused_)
    uint16_t u16Data = 0;
    while (1) {
    // This thread grabs a message from the global message pool, sets a
        // code-value and the message data pointer, then sends the message to
        // a message queue object. Another thread (Thread2) is blocked, waiting
        // for a message to arrive in the queue.
       // Get the message object
Message* pclMsg = GlobalMessagePool::Pop();
        // Set the message object's data (contrived in this example)
       pclMsg->SetCode(0x1337);
        u16Data++;
        pclMsg->SetData(&u16Data);
        // Send the message to the shared message queue
       clMsgQ.Send(pclMsg);
        // Wait before sending another message.
       Thread::Sleep(200);
    }
}
void App2Main(void* unused_)
    while (1) {
        // This thread waits until it receives a message on the shared global
```

```
// message queue. When it gets the message, it prints out information
  // about the message's code and data, before returning the messaage object
// back to the global message pool. In a more practical application,
  // the user would typically use the code to tell the receiving thread
  // what kind of message was sent, and what type of data to expect in the
  // data field.
  \ensuremath{//} Wait for a message to arrive on the specified queue. Note that once
  // this thread receives the message, it is "owned" by the thread, and
  // must be returned back to its source message pool when it is no longer
  // needed.
 Message* pclMsg = clMsgQ.Receive();
  // We received a message, now print out its information
  KernelAware::Print("Received Message\n");
  KernelAware::Trace(0, __LINE__, pclMsg->GetCode(), *((uint16_t*)pclMsg->
GetData()));
  // Done with the message, return it back to the global message queue.
  GlobalMessagePool::Push(pclMsg);
```

20.12 lab9_dynamic_threads/main.cpp

This example demonstrates how to create and destroy threads dynamically at runtime.

```
--[Mark3 Realtime Platform]-
Copyright (c) 2012 - 2017 Funkenstein Software Consulting, all rights reserved.
See license.txt for more information
#include "mark3.h"
#include "memutil.h"
Lab Example 9: Dynamic Threading
Lessons covered in this example include:
- Creating, pausing, and destorying dynamically-created threads at runtime
In addition to being able to specify a static set of threads during system
initialization, Mark3 gives the user the ability to create and manipu32ate threads at runtime. These threads can act as "temporary workers" that can
be activated when needed, without impacting the responsiveness of the rest
of the application.
#if !KERNEL_USE_IDLE_FUNC
#error "This demo requires KERNEL_USE_IDLE_FUNC"
#endif
#if !KERNEL_USE_THREAD_CALLOUTS
#error "This demo requires KERNEL_USE_THREAD_CALLOUTS"
#endif
#if !KERNEL_TIMERS_TICKLESS
#error "This demo requires KERNEL_TIMERS_TICKLESS"
#endif
extern "C" {
void __cxa_pure_virtual(void)
// This block declares the thread data for one main application thread. It
// defines a thread object, stack (in word-array form), and the entry-poi
// function used by the application thread.  
#define APP1_STACK_SIZE (400 / sizeof(K_WORD))
static Thread clApp1Thread;
static K_WORD awApp1Stack[APP1_STACK_SIZE];
```

```
static void ApplMain(void* unused_);
// This block declares the thread stack data for a thread that we'll create
// dynamically.
#define APP2_STACK_SIZE (400 / sizeof(K_WORD))
static K_WORD awApp2Stack[APP2_STACK_SIZE];
#if KERNEL_USE_THREAD_CALLOUTS
#define MAX_THREADS (10)
static Thread* apclActiveThreads[10];
static uint32_t au16ActiveTime[10];
static void PrintThreadSlack(void)
    KernelAware::Print("Stack Slack");
    for (uint8_t i = 0; i < MAX_THREADS; i++) {
    if (apclActiveThreads[i] != 0) {</pre>
             char szStr[10];
              uint16_t u16Slack = apclActiveThreads[i] -> GetStackSlack();
              MemUtil::DecimalToHex((K_ADDR)apclActiveThreads[i], szStr);
              KernelAware::Print(szStr);
KernelAware::Print(" ");
              MemUtil::DecimalToString(u16Slack, szStr);
              KernelAware::Print(szStr);
              KernelAware::Print("\n");
    }
}
static void PrintCPUUsage (void)
    \label{lem:condition} Kernel Aware:: Print ("Cpu usage \n");
     for (int i = 0; i < MAX_THREADS; i++) {</pre>
         if (apclActiveThreads[i] != 0) {
              KernelAware::Trace(0, __LINE__, (K_ADDR)apclActiveThreads[i],
       au16ActiveTime[i]);
}
static void ThreadCreateCallout(Thread* pclThread)
    KernelAware::Print("TC\n");
    CS_ENTER();
    for (uint8_t i = 0; i < MAX_THREADS; i++) {</pre>
         if (apclActiveThreads[i] == 0) {
    apclActiveThreads[i] = pclThread_;
             break:
         }
    CS_EXIT();
    PrintThreadSlack():
    PrintCPUUsage();
static void ThreadExitCallout(Thread* pclThread_)
    KernelAware::Print("TX\n");
    CS ENTER();
    for (uint8_t i = 0; i < MAX_THREADS; i++) {</pre>
         if (apclActiveThreads[i] == pclThread_) {
   apclActiveThreads[i] = 0;
             au16ActiveTime[i] = 0;
             break;
         }
    CS_EXIT();
    PrintThreadSlack();
    PrintCPUUsage();
static void ThreadContextSwitchCallback(Thread* pclThread_)
    KernelAware::Print("CS\n");
    static uint16_t u16LastTick = 0;
                                    = KernelTimer::Read():
    uint16 t
                      ul6Ticks
    CS_ENTER();
    for (uint8_t i = 0; i < MAX_THREADS; i++) {</pre>
         if (apclActiveThreads[i] == pclThread_) {
              au16ActiveTime[i] += u16Ticks - u16LastTick;
             break;
         }
```

```
CS_EXIT();
   u16LastTick = u16Ticks;
#endif
int main(void)
    // See the annotations in previous labs for details on init.
    Kernel::Init();
    Kernel::SetThreadCreateCallout(ThreadCreateCallout);
    Kernel::SetThreadExitCallout(ThreadExitCallout);
    {\tt Kernel::SetThreadContextSwitchCallout} \ ({\tt ThreadContextSwitchCallback})
    clApp1Thread.Init(awApp1Stack, sizeof(awApp1Stack), 1, App1Main, 0);
    clApp1Thread.Start();
    Kernel::Start();
   return 0;
}
static void WorkerMain1(void* arg_)
    Semaphore* pclSem = (Semaphore*)arg_;
   uint32_t u32Count = 0;
    \ensuremath{//} Do some work. Post a semaphore to notify the other thread that the
    // work has been completed.
    while (u32Count < 1000000) {</pre>
       u32Count++;
    KernelAware::Print("Worker1 -- Done Work\n");
   pclSem->Post();
    // Work is completed, just spin now. Let another thread destory u16.
   while (1) {
static void WorkerMain2(void* arg_)
    uint32 t u32Count = 0:
    while (u32Count < 1000000) {
       u32Count++;
    KernelAware::Print("Worker2 -- Done Work\n");
    // A dynamic thread can self-terminate as well:
    Scheduler::GetCurrentThread()->Exit();
void ApplMain(void* unused)
    Thread clMyThread;
    Semaphore clMySem;
    clMySem.Init(0, 1);
    while (1) {
       // Example 1 - create a worker thread at our current priority in order to
        // parallelize some work.
        clMyThread.Init(awApp2Stack, sizeof(awApp2Stack), 1, WorkerMain1, (void*)&clMySem);
        // Do some work of our own in parallel, while the other thread works on its project. uint32\_t\ u32Count = 0;
        while (u32Count < 100000) {
            u32Count++;
        KernelAware::Print("Thread -- Done Work\n");
        PrintThreadSlack();
        // Wait for the other thread to finish its job.
        clMySem.Pend();
        // Once the thread has signalled u16, we can safely call "Exit" on the thread to
        // remove it from scheduling and recycle it later.
```

```
clMyThread.Exit();

// Spin the thread up again to do something else in parallel. This time, the thread
// will run completely asynchronously to this thread.
clMyThread.Init(awApp2Stack, sizeof(awApp2Stack), 1, WorkerMain2, 0);
clMyThread.Start();

u32Count = 0;
while (u32Count < 1000000) {
    u32Count++;
}

KernelAware::Print("Thread -- Done Work\n");

// Check that we're sure the worker thread has terminated before we try running the
// test loop again.
while (clMyThread.GetState() != THREAD_STATE_EXIT) {
}

KernelAware::Print(" Test Done\n");
Thread::Sleep(1000);
PrintThreadSlack();
}</pre>
```

Index

Add	KA_COMMAND_PROFILE_INIT
Scheduler, 141	kernelaware.h, 236
	KA_COMMAND_PROFILE_REPORT
Claim	kernelaware.h, 236
Mutex, 130	KA COMMAND PROFILE START
Close	kernelaware.h, 236
Driver, 91	KA_COMMAND_PROFILE_STOP
Control	kernelaware.h, 236
Driver, 91	KA_COMMAND_TRACE_0
	kernelaware.h, 236
Driver, 90	KA COMMAND TRACE 1
Close, 91	kernelaware.h, 236
Control, 91	KA COMMAND TRACE 2
Init, 91	kernelaware.h, 236
Open, 91	Kernel, 99
Read, 92	Init, 101
Write, 92	Panic, 102
	Start, 104
EVENT_FLAG_ALL	kernelaware.h
kerneltypes.h, 244	
EVENT_FLAG_ALL_CLEAR	KA_COMMAND_IDLE_226
kerneltypes.h, 244	KA_COMMAND_DDLE, 236
EVENT_FLAG_ANY	KA_COMMAND_PRINT, 236
kerneltypes.h, 244	KA_COMMAND_PROFILE_INIT, 236
EVENT_FLAG_ANY_CLEAR	KA_COMMAND_PROFILE_REPORT, 236
kerneltypes.h, 244	KA_COMMAND_PROFILE_START, 236
EVENT_FLAG_MODES	KA_COMMAND_PROFILE_STOP, 236
kerneltypes.h, 244	KA_COMMAND_TRACE_0, 236
EVENT_FLAG_PENDING_UNBLOCK	KA_COMMAND_TRACE_1, 236
kerneltypes.h, 244	KA_COMMAND_TRACE_2, 236
Exit	kerneltypes.h
Thread, 149	EVENT_FLAG_ALL, 244
	EVENT_FLAG_ALL_CLEAR, 244
Init	EVENT_FLAG_ANY, 244
Driver, 91	EVENT_FLAG_ANY_CLEAR, 244
Kernel, 101	EVENT_FLAG_MODES, 244
Mailbox, 118	EVENT_FLAG_PENDING_UNBLOCK, 244
Message, 125	
Mutex, 131	Mailbox, 116
Notify, 134	Init, 118
Scheduler, 142	Receive, 119
Semaphore, 144	Send, 120, 122
Thread, 152	Message, 123
Timer, 162	Init, 125
	Mutex, 129
KA_COMMAND_EXIT_SIMULATOR	Claim, 130
kernelaware.h, 236	Init, 131
KA_COMMAND_IDLE	Release, 131
kernelaware.h, 236	
KA_COMMAND_PRINT	Notify, 133
kernelaware.h, 236	Init, 134
•	•

340 INDEX

Signal, 134			Timer, 162
Wait, 134		,	Wait
Open			Notify, 134
Driver, 91		,	Write
Panic			Driver, 92
Kernel, 102		,	Yield
Pend			Thread, 156
Semaphore	, 144, 145		
Post Semaphore	1/15		
Gemaphore	, 140		
Quantum, 138			
Read			
Driver, 92			
Receive	_		
Mailbox, 119 Release	9		
Mutex, 131			
Remove			
Scheduler,	142		
Schedule			
Scheduler,	142		
Scheduler, 140			
Add, 141			
Init, 142 Remove, 14	2		
Schedule, 1			
Semaphore, 143			
Init, 144	4.45		
Pend, 144, Post, 145	145		
Send			
Mailbox, 12	0, 122		
Signal			
Notify, 134 Sleep			
Thread, 155	5		
Start			
Kernel, 104			
Thread, 155 Timer, 164,			
Stop	100		
Thread, 156	6		
Timer, 166			
Thread, 146			
Exit, 149			
Init, 152			
Sleep, 155 Start, 155			
Stop, 156			
Yield, 156			
Timer, 160			
Init, 162 Start, 164, 1	166		
Sidi i, 104,	100		

Stop, 166