

Emergency Response Guide

Repowered IC CE School Bus
Powered by Exro
Production Start : 2024



Contents

1. Identification/recognition Page 3

2. Immobilization/stabilization/lifting Page 4

3. Disable direct hazards/safety regulations Page 5

4. Access to the occupants Page 6

5. Stored energy/liquid/gasses/solid Page 9

6. In case of fire Page 10




7. In case of water submersion Page 10


8. Towing/transportation/ storage Page 11

9. Important additional information Page 12

10. Explanation of pictograms used Page 12



1. Identification/recognition

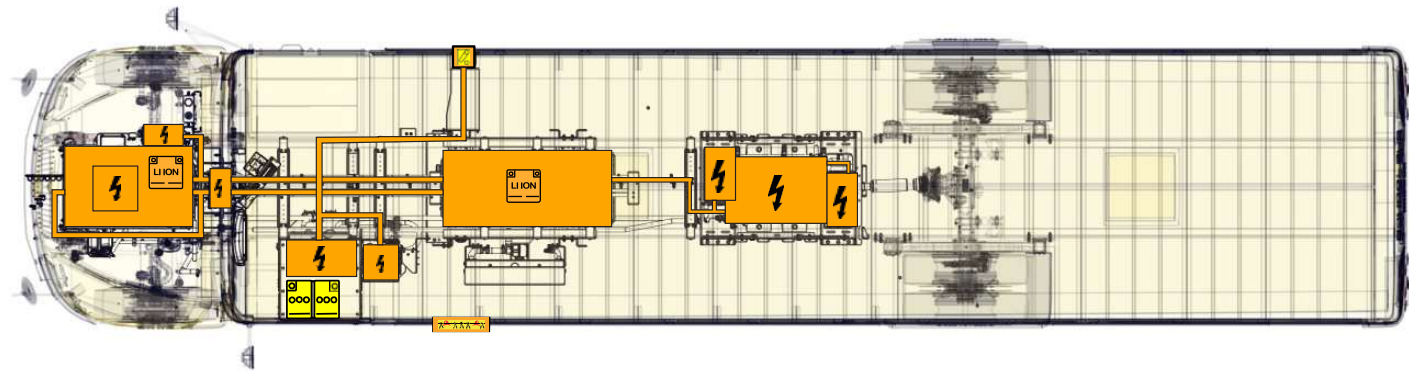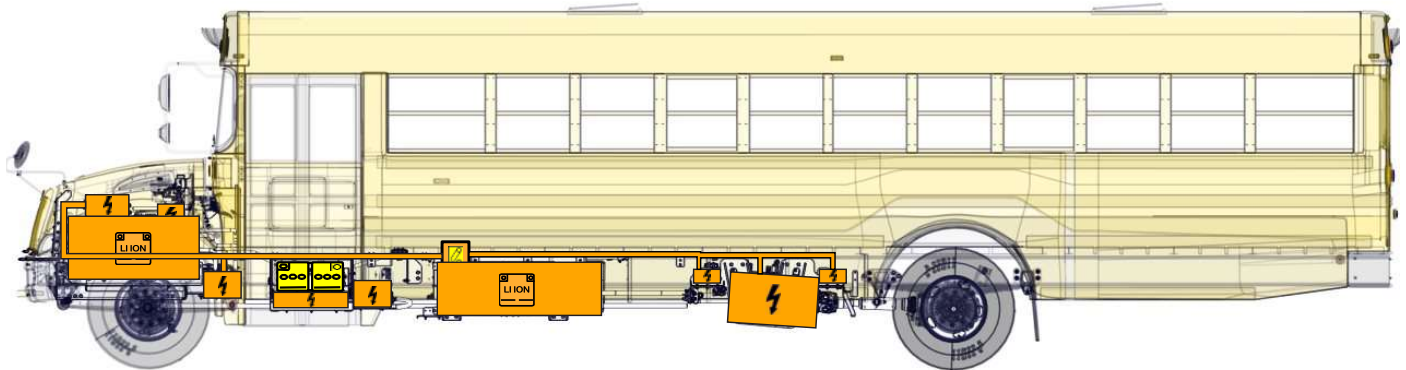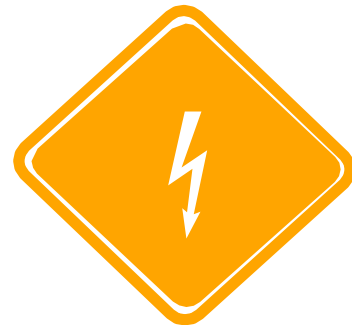

 High voltage lithium-ion battery	 Low voltage device that disconnects the high voltage	 Low voltage battery	 Ignition key	 Seat height adjustment	 Cable cut
 Steering wheel tilt control	 High voltage component	 High voltage cable	 Seat longitudinal adjustment		



➔ Vehicle Identification Number (VIN)

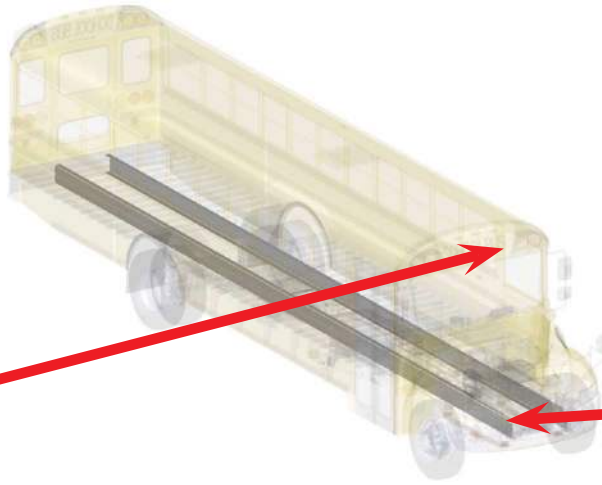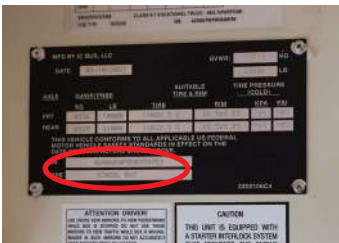


2. Immobilization/stabilization/lifting



Always approach the bus along the sides to stay out of the potential travel path. Due to lack of noise, it can be difficult to determine if the bus is running.

1 Chock the wheels.

2 Apply the parking brake.

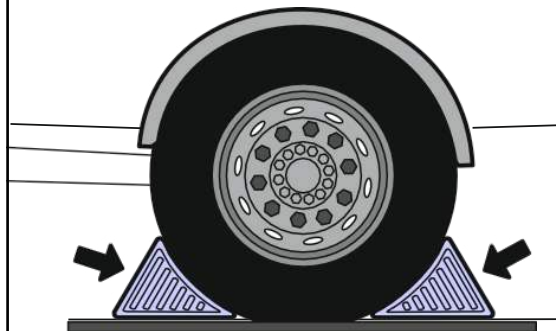


3. Disable direct hazards/safety regulations

➔ Primary procedure



1. Turn off the ignition and remove the key.

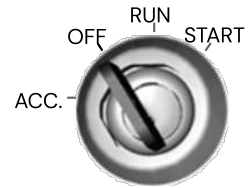

2. Turn off the chassis switch (counter-clockwise) to initiate the high voltage disconnection process.

Note:

All the components are designed to discharge their own capacitance within five seconds.



➔ If unable to perform the primary procedure

1. Locate the (2) 12 V batteries on the left side of bus. The (2) batteries each are connected with a cable between the positive (+) terminal on each battery to the isolator switch to create a 24 V system.
2. Cut both the cables between these terminals.

Note:

Cutting these cable shown will disable the traction voltage supply.



➔ If the vehicle is charging:

1. Depress button on top of the charger plug, remove plug from inlet



If the charging plug cannot be pulled out: retract the pin manually

1. Turn off the chassis isolator switch (left side) to initiate the disconnection process.

2. Manual disconnect is located on the top left side of the charger inlet. Reach into back of charger box, and rotate lever towards you to release charger plug.

Note:



All the components are designed to discharge their own capacitance within five seconds.




4. Access to the occupants

➡ Opening doors from the outside:

1. Insert the key (1) in door lock and turn in clockwise direction to unlock the right-hand side door.

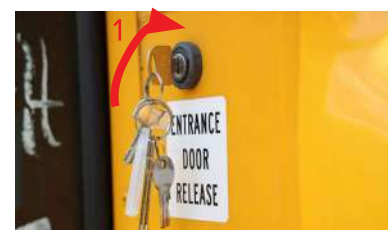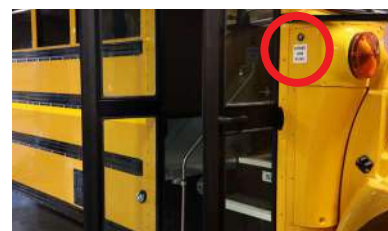


Emergency exits and Emergency window locations will vary based upn state specifications.

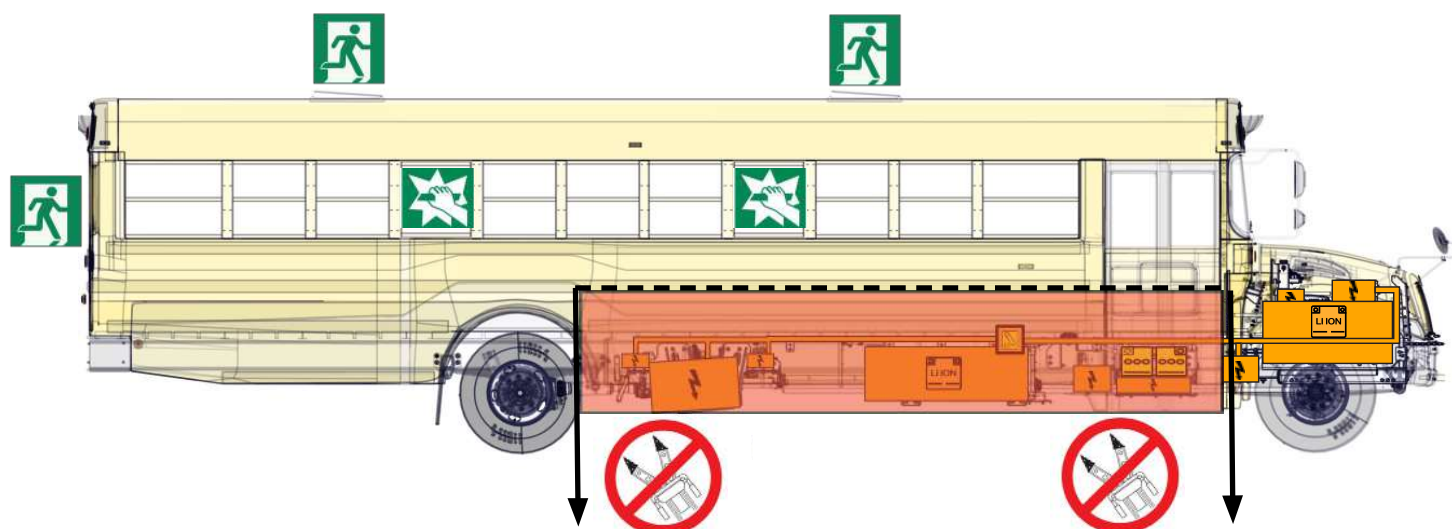

Do NOT cut into or penetrate the body BELOW this rub rail.

No-Cut Zones

No-cut zones are locted below the rubrail that runs just above the bus's wheels.

 High Voltage Li-Ion Battery	 High Voltage Component	 High voltage Power Cable	 Low Voltage Battery	 Emergency Exit	 Breat to obtain access
--	---	---	--	---	---

NEVER CUT HIGH VOLTAGE CAGLES (ORANGE SHEATHING)

Seat adjustment:

1. To adjust the seat height, Push handle and apply force to seat.
2. To adjust the seat position, lift up on white handle and slide forward or push backwards.




Steering wheel adjustment:




1. To adjust the steering wheel, pull handle towards seat.
2. Steering wheel can rotate towards and away from driver.



5. Stored energy/liquid/gasses/solid

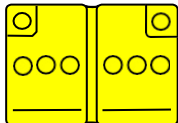	  	12 V
	     	400 V

➔ High-voltage component location

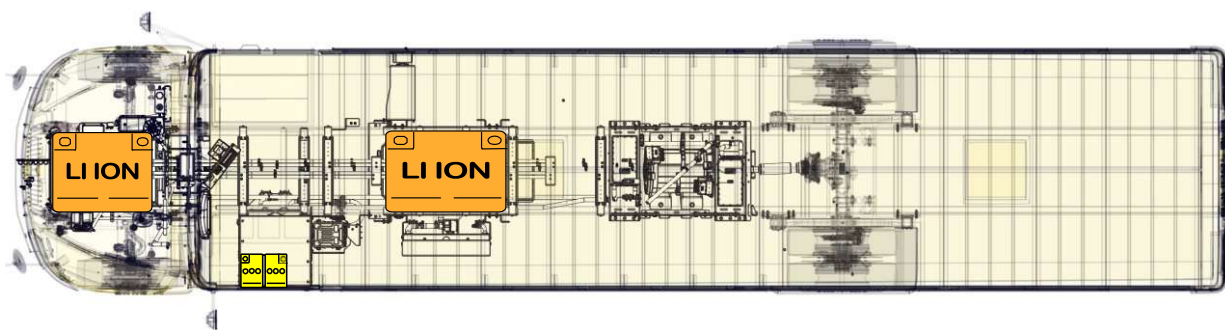

High Voltage Components: The High Voltage battery packs are composed of two (2) Li-ion battery pods supply maximum of 400 Volts and 300 Amps. Battery electrodes are made of Carbon, Lithium, Nickel, Manganese and Cobalt.

All High Voltage components are identified by a High Voltage symbol and/or blaze-orange cabling

6. In case of fire



Use a large sustained volume of water to extinguish lithium-ion battery related fire.




If other materials are involved, use class ABC fire extinguisher.



In case of thermal runaway, the lithium-ion batteries can release hydrogen fluoride.

In case of traction battery fire, breather valves (1) may emit large flames as a result of thermal runaway.

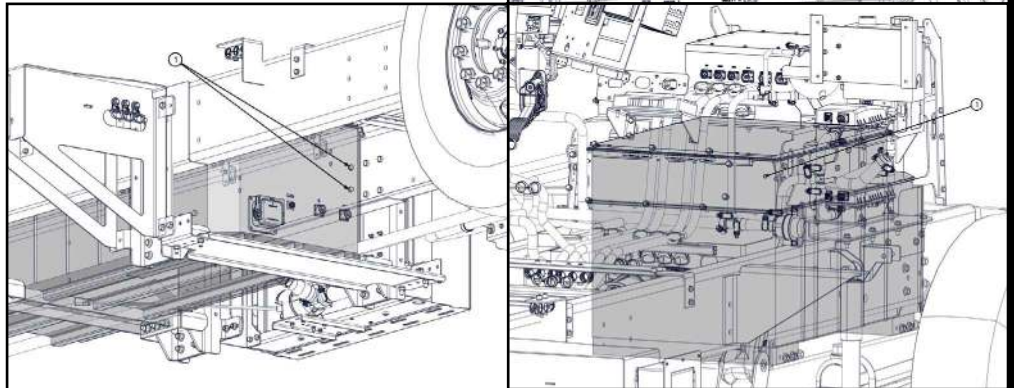

7. In case of water submersion



The damage level of a submerged vehicle may not be visible. Submersion in water can damage 12 V, 24 V and 400 V components.

Handling a submerged truck without appropriate Personal Protective Equipment (PPE) may result in serious injury or death due to electric shock.

Avoid any contact with the traction voltage cables and electric components.



8. Towing/transportation/ storage



If the traction batteries are damaged, there is a risk of thermal or chemical reaction.



Park the battery electric bus involved in an accident in a suitable place maintaining a safe distance from the other vehicles, buildings and combustible objects.



Risk of delayed fire can happen after the fire suppression of if the lithium-ion batteries are damaged.

Observe the bus for a minimum of 48 hours using thermal infrared camera.

The traction motor can produce electricity when moving the truck with the rear drive tires on the ground. This remains a potential source of electric shock even when the high voltage system is disabled.



Before towing the bus, it is recommended to disconnect the drive shaft from the motor. The drive to the wheels is disabled by uncoupling the drive shaft by removing the 4 connecting nuts (1) on each end of the shaft coupling.

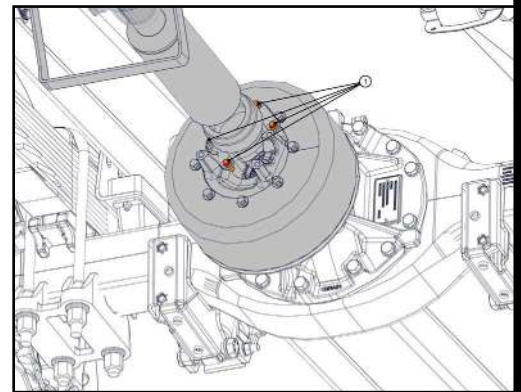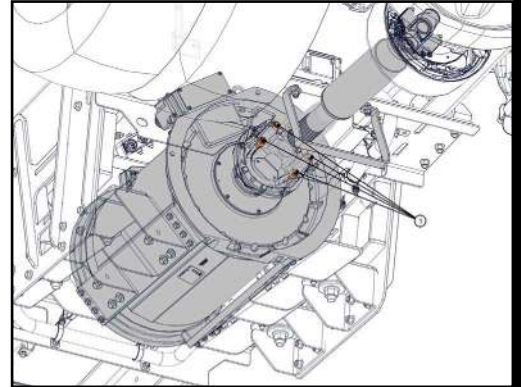

➔ Maximum loading during lifting and towing:

This information specifies the loading which can be applied when using towing hook, towing hitch cross-member, axles, and torque stay anchorages.



Single towing hook: Do not load the hook more than the vehicle gross weight.

Double towing hooks: Do not load each hook more than half the vehicle gross weight.

Towing hitch, towing Hitch Cross-Member: Max. 200 mm (7.8 inches) from center of member web

- Lengthways: 20 tons
- Vertically (lift): 7 tons
- Sideways: 17tons

Note:

When the vehicle is towed with the rear suspension lifted, the steering wheel must be locked with steering lock.



9. Important additional information




Do not cut any orange cables.

Do not touch any high voltage cables or electric components.

Do not perform any operation on a damaged bus without appropriate Personal Protective Equipment (PPE).

10. Explanation of pictograms used

	Use water to extinguish the fire
	Use ABC powder to extinguish the fire
	General information sign
	Warning, High Voltage Present
	Use thermal infrared camera
	To indicate the risk of flammability
	To indicate the risk of an explosion
	To indicate the risk of corrosive material/substances
	Hazardous to human health
	To indicate the risk of acute toxicity