









Real-Time Clock








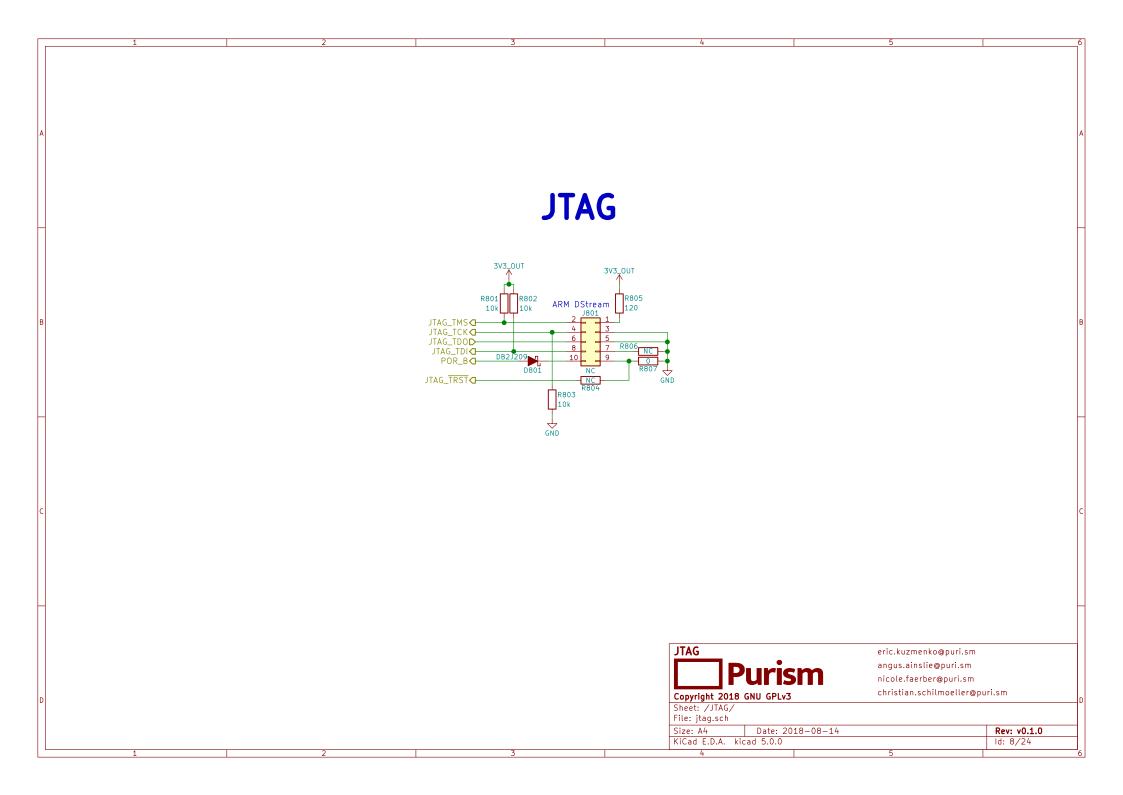

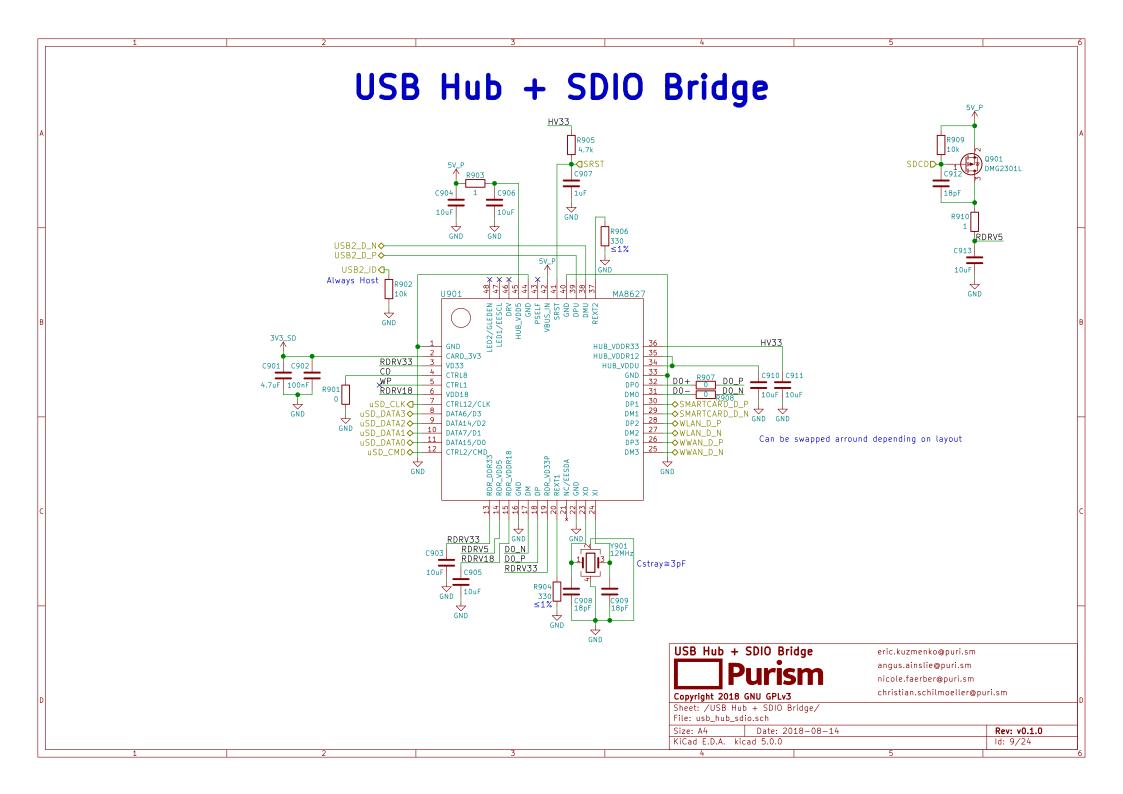


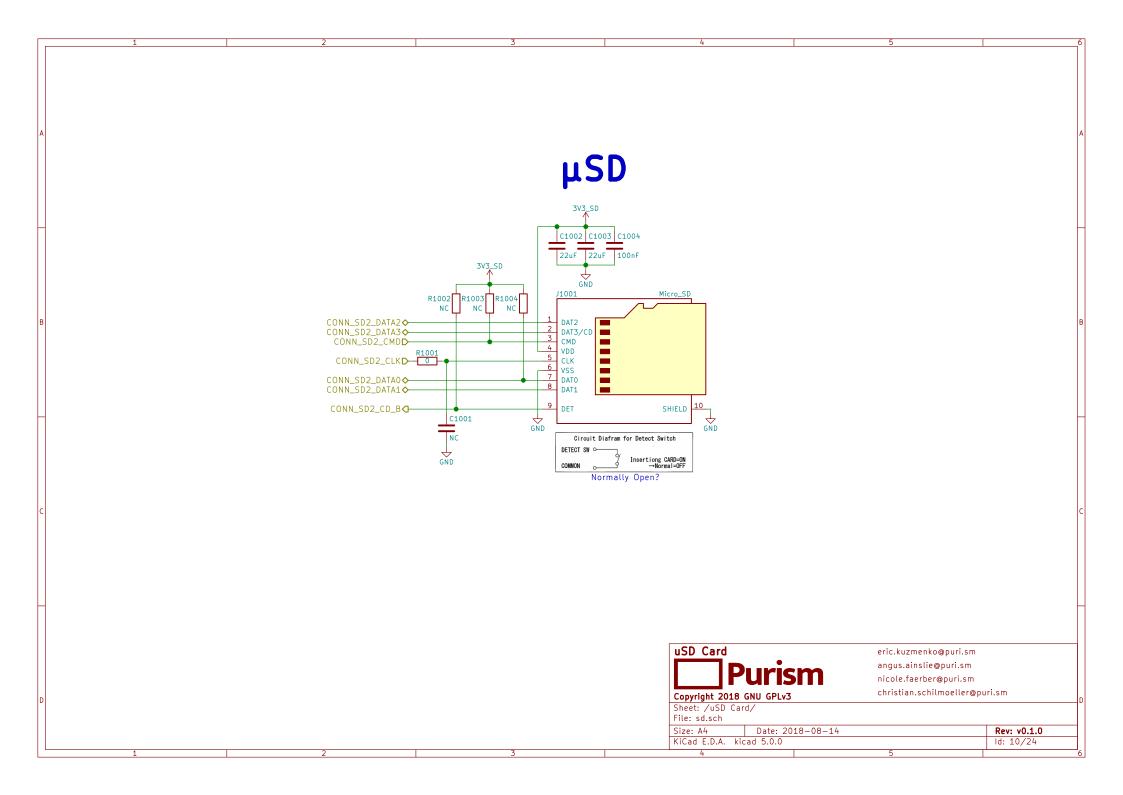





Copyright 2018 Sheet: /MIPI/ File: mipi.sch	Uris	m	eric.kuzmenko@puri.sm angus.ainslie@puri.sm nicole.faerber@puri.sm christian.schilmoeller@	
Size: A4				
KiCad E.D.A. kicad 5.0.0				ld: 11/24
4			5	

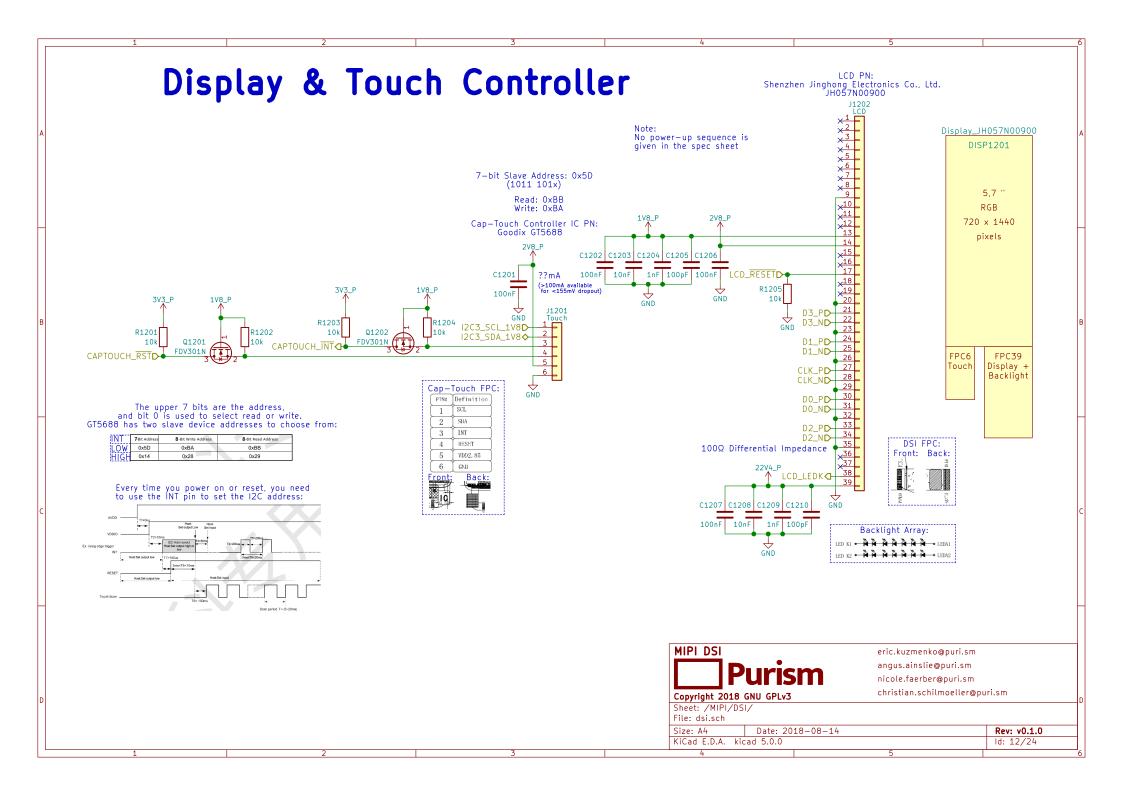




Buttons & LED




Use PWM2_PWMSAR to set the compare value (duty cycle)
Use PWM2_PWMCR[15:4] to set the PRESCALER (frequency)
Use PWM2_PWMPR to set the top of the counter (frequency)

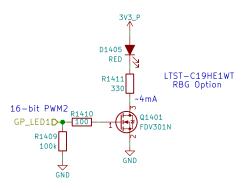






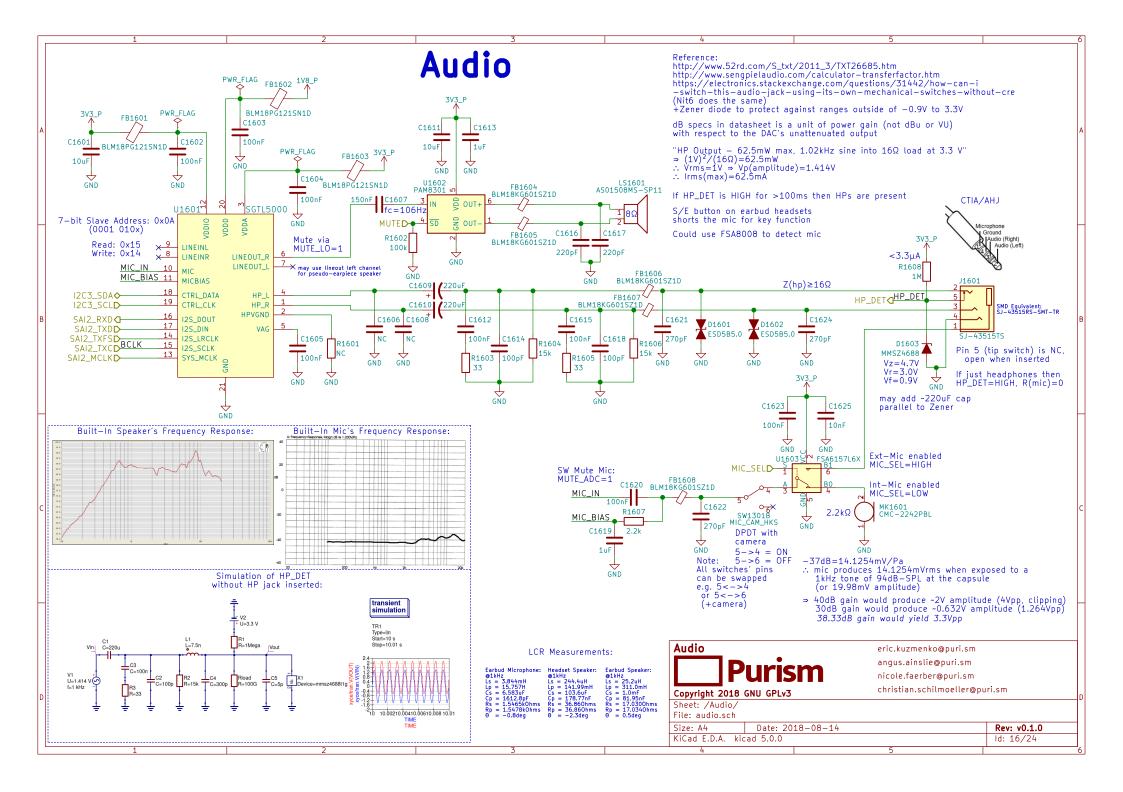



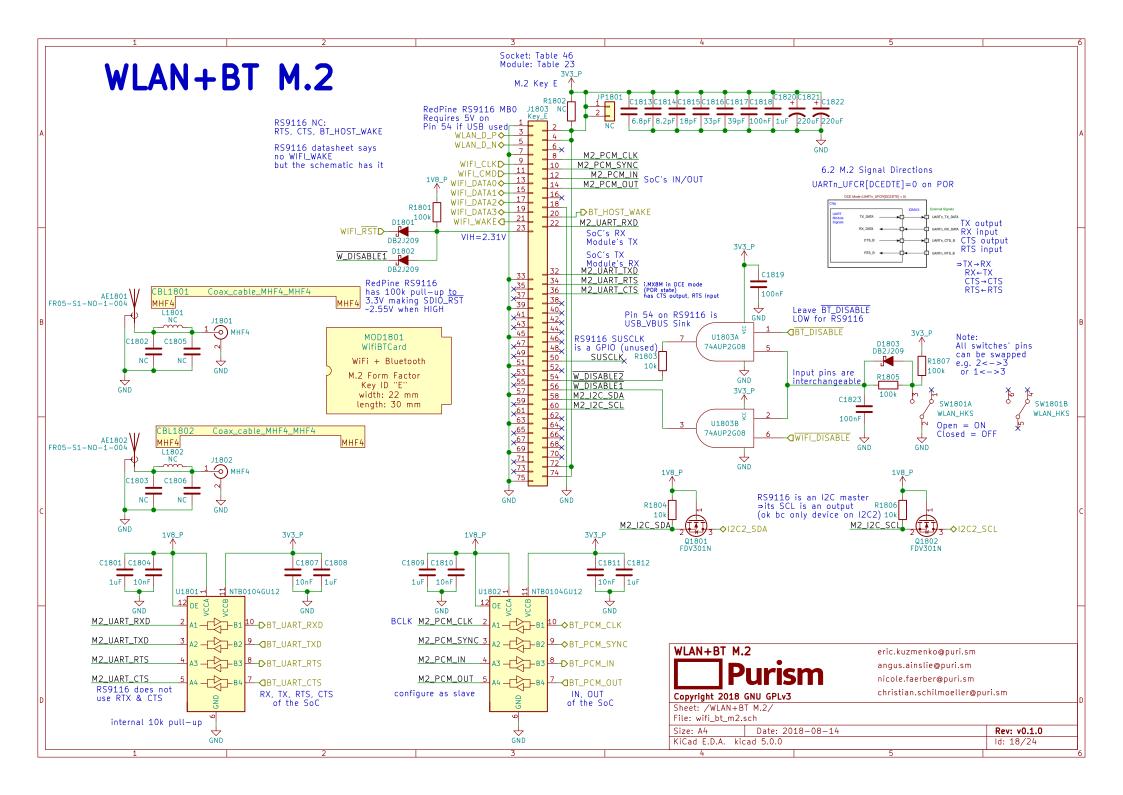

1 2 3 4 5
TUSB1046 can be used for DP over USB-C

HDMI









Sensors

Proximity & Ambient Light

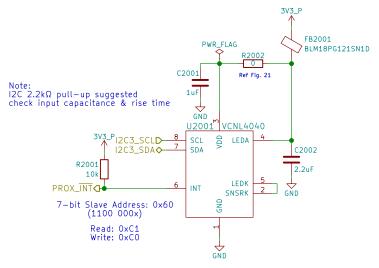


Reference: https://www.vishay.com/docs/84307/designingvcnl4040.pdf http://www.vishay.com/docs/84931/vcnl4040sensorboardfiles.pdf

9-Axis IMU

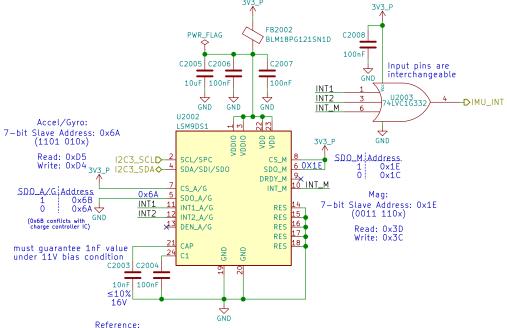


http://www.st.com/en/evaluation-tools/steval-mki159v1.html

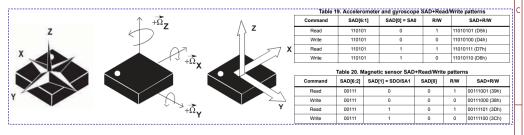





Smart Card

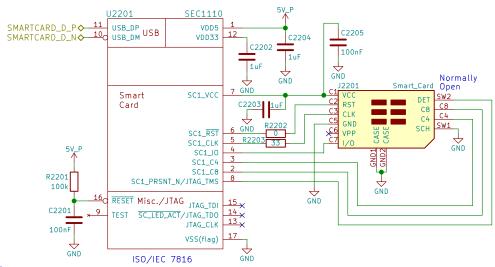

Reference: http://www.microchip.com/DevelopmentTools/ProductDetails.aspx?PartN0=EVB-SEC1110







Haptic Motor



When the motor is off both terminals are at GND Motor will have wire leads
with a 2-pin Molex or Boom Precision
connector installed (by request) Metal housing is floating thick adhesive layer underneath (not connected to either pin)

Haptic/Vibration Motor Copyright 2018 GNU GPLv3

eric.kuzmenko@puri.sm angus.ainslie@puri.sm nicole.faerber@puri.sm christian.schilmoeller@puri.sm

Sheet: /Haptic Motor/ File: haptic.sch

Size: A4 Date: 2018-08-14 Rev: v0.1.0 KiCad E.D.A. kicad 5.0.0 ld: 24/24