


Smart [™] Classic installation with aluminum connection trims




Pre-drilled holes are situated every 25 cm


^{*} Please check the product and quantity before you start building your deck

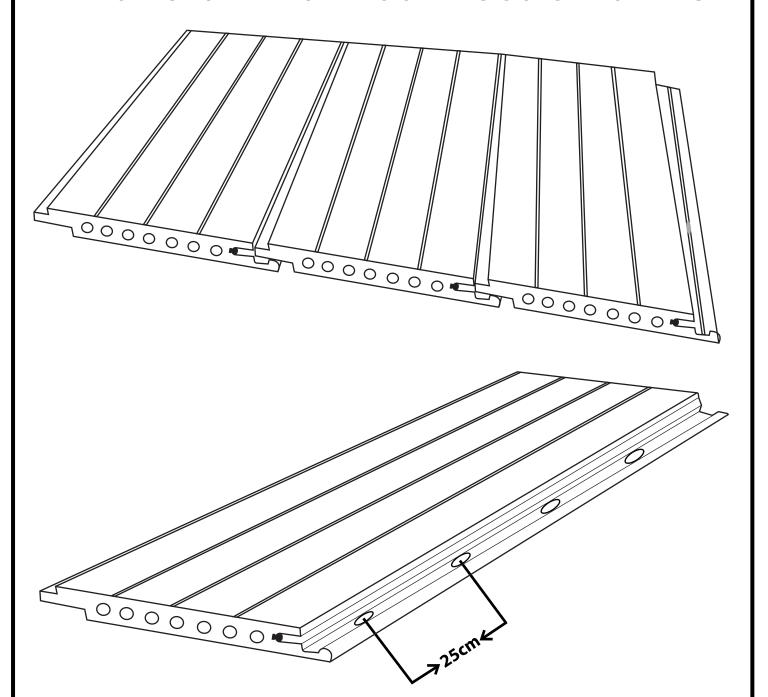



Accessories

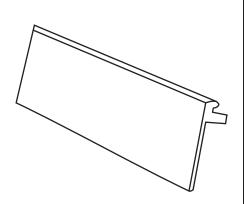


WPC F - skirting board 33 * 80

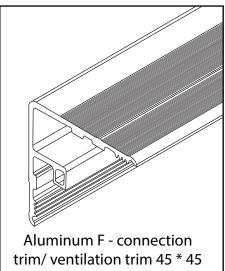


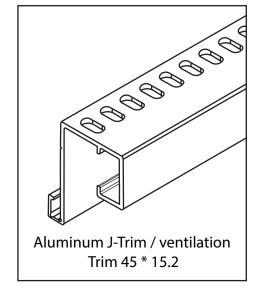


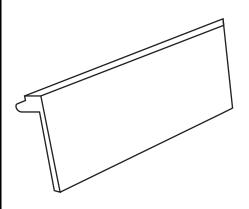


WPC L-Trim/skirting board 33 * 80

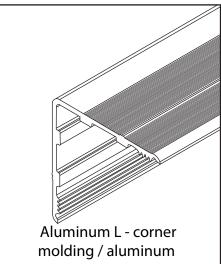




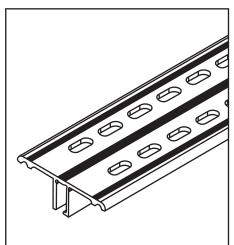

Aluminum T-Trim 32 * 45.2

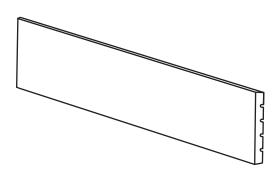

WPC end molding / skirting board 10 * 80




Screw 3,5 * 35




Rubber pad 2mm to 20mm




Tools

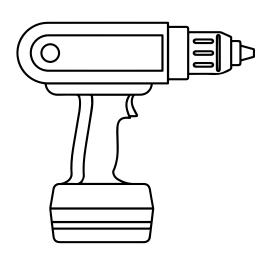


Screw Driver

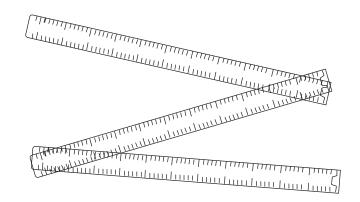


Ruler / Tape Measure

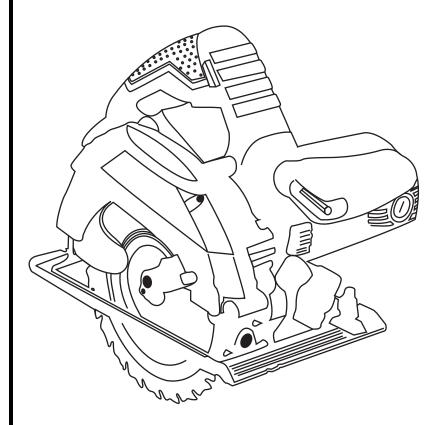


Circular Saw

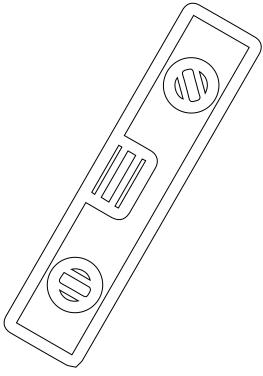


Spirit level

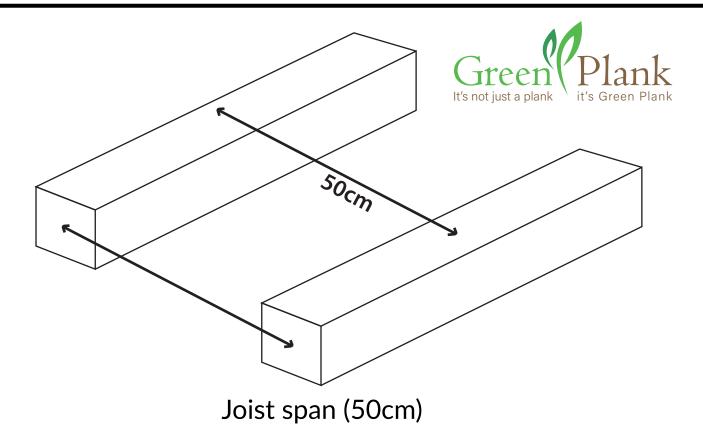

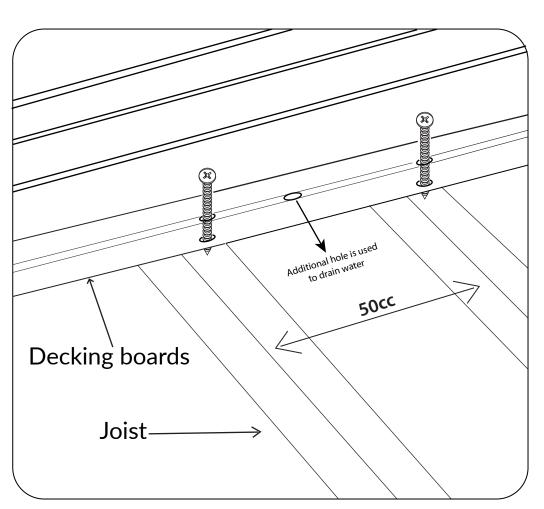

Each profile has a pilot hole every 25cm. They are used for water drainage or to fix the board to the substructure joists




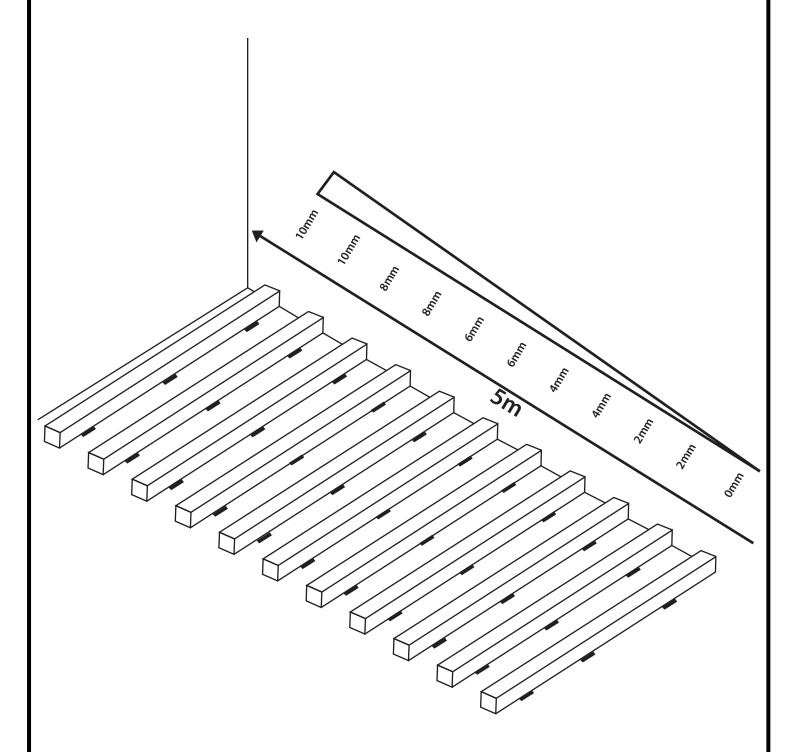


Make a slope with rubber pads for water drainage

* Build the deck with a slope of 2mm per 1 meter for water drainage.


^{**} You can use either rubber pads or plate bearings to determine the slope depending on the desired height of your deck.

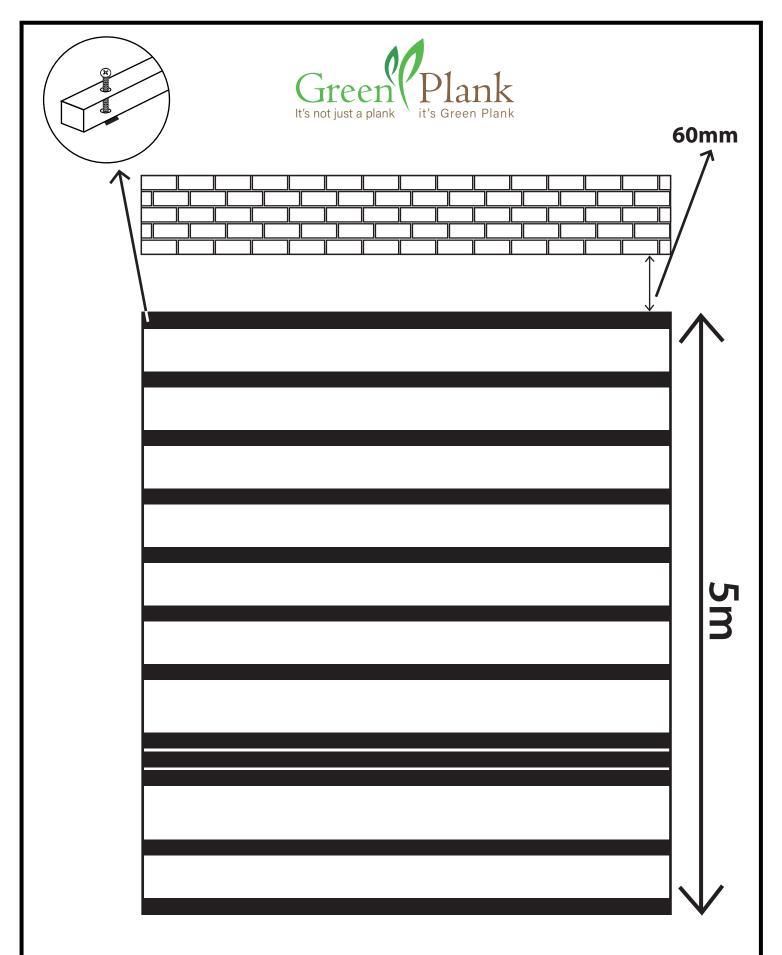


If you are using the Alu J-Trim, you must start the deck at a distance of 60 mm from the wall. Please pre-drill a hole in the aluminum J-Trim and then attach it to the wall.

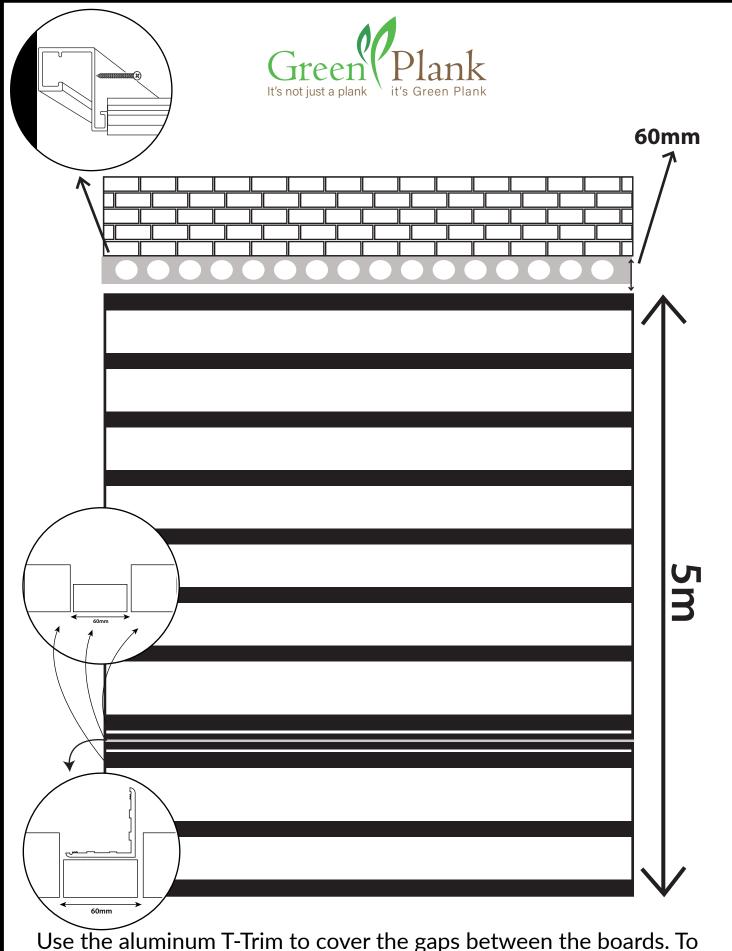


Use the aluminum T-Trim to cover the gaps between the boards. To install the aluminum T-cladding, it can be attached with long screws or with the aluminum L-angled Trim which is attached to the extra beam underneath.

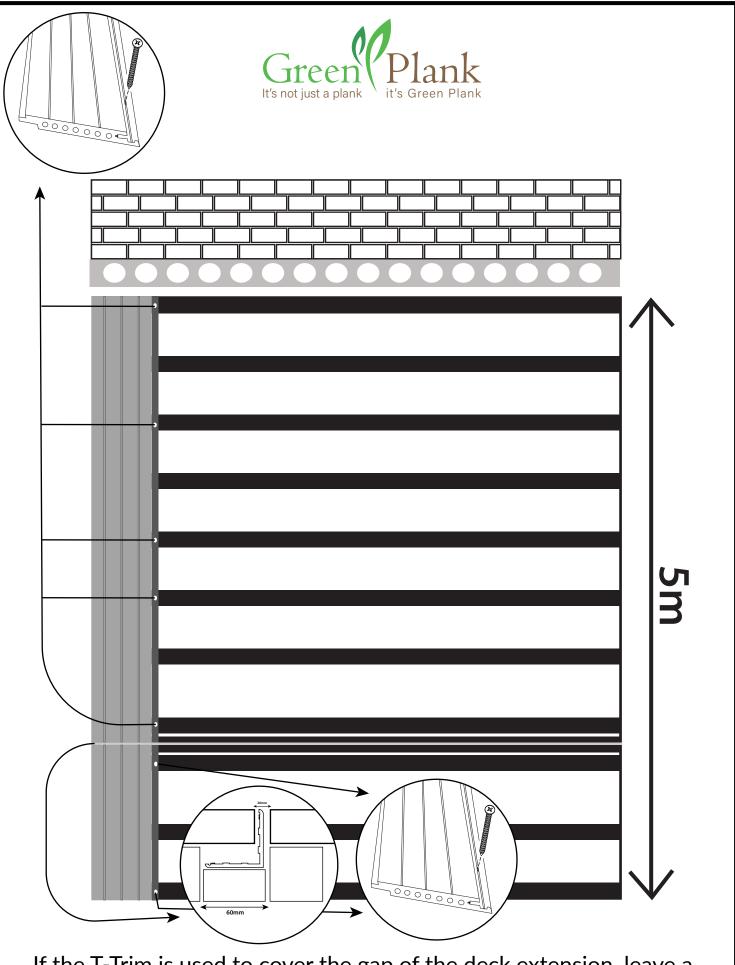

If the T-Trim is used to cover the gap of the deck extension, leave a space of at least 20mm between the end edges of the boards to allow the aluminum T-Trim to be installed

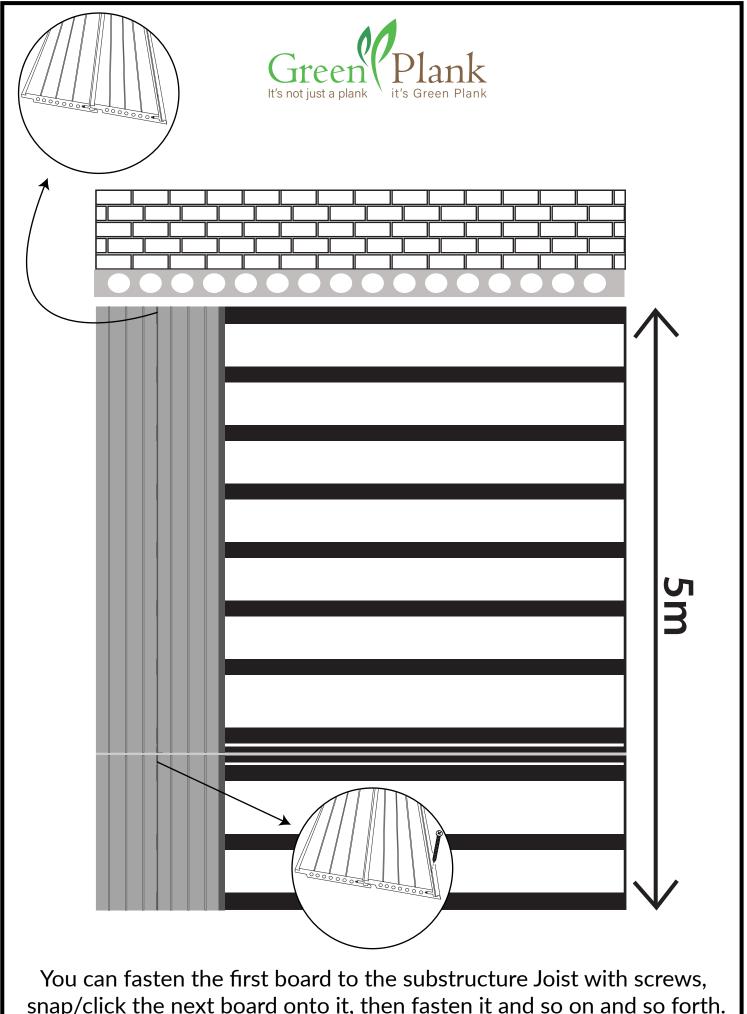


snap/click the next board onto it, then fasten it and so on and so forth.

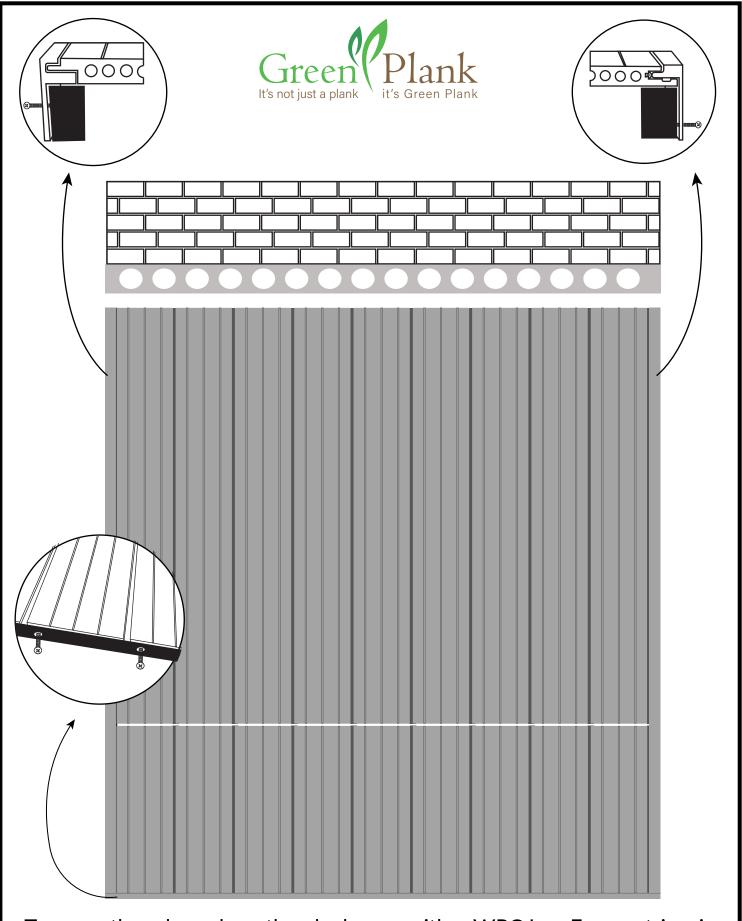

To cover the edges along the planks, use either WPC L or F cover trims in matching colors or the aluminum L-angle trim / corner trim or the aluminum F- Trim for the finish. If you use the aluminum strips or the WPC F or L cover Trims, please make a pilot hole before you start fixing with the screws.



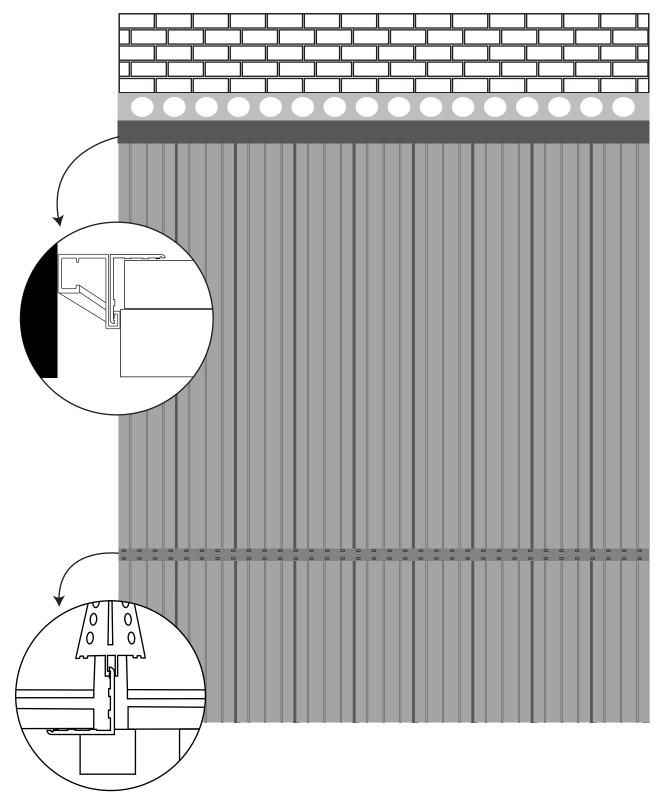

To close the gap between the boards and the Alu J Trim, snap/click the Aluminum L Trim/Corner Trim into the aluminum J Trim

To close the extension gap, snap the aluminum T-Trim into the aluminum L-Trim in the extension gap of the deck



