# AURIX™ TC3xx Motor Control Application Kit Getting Started

AP32542

v1.0

**Infineon**

# About this document

**Scope and purpose**

› This tutorial describes the content of AURIX™ TC3xx Motor Control Application Kit and explain instructions to get it running
› This document is valid for AURIX™ TC3xx Family
› Validated on AURIX™ TC387-A-Step

# Agenda

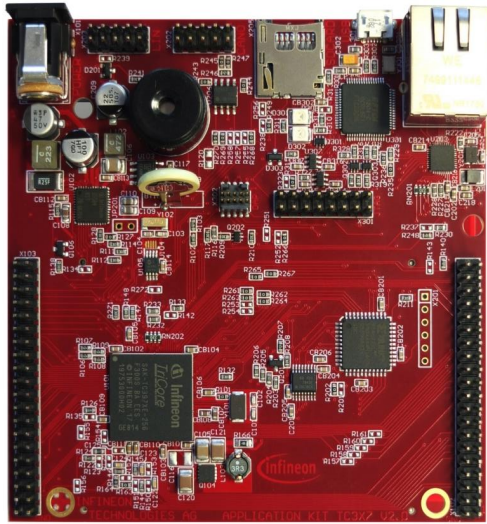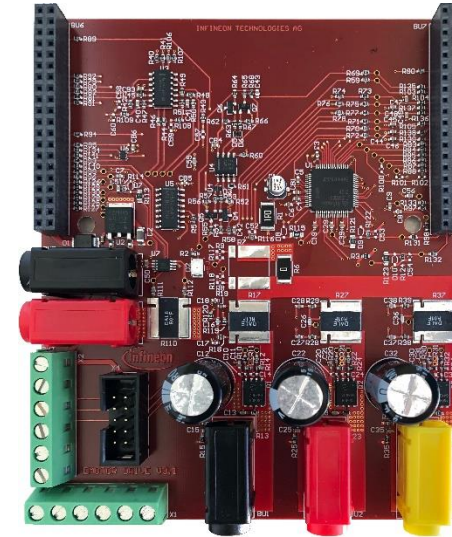| | |
|---|---|
| **1** | AURIX™ TC3xx Motor Control Application Kit Overview |
| **2** | AURIX™ TC3xx Motor Control Power Board |
| **3** | Motor and Incremental Encoder |
| **4** | AURIX™ TC387 Application Kit with TFT |
| **5** | AURIX™ TC3xx PMSM FOC Motor Control Software |
| **6** | Run motor |
| **7** | Acronyms, references, revision history |

# Agenda

# AURIX™ TC3xx Motor Control Application Kit Overview

› AURIX™ TC387 Application Kit with TFT



› AURIX™ TC3xx Motor Control Power Board



› Power Supply Adapter Sunny SYS1541-2412:12V, 2A (plugs USA, UK, EU)



EU

USA

UK

› NANOTEC DB42S02-KHIT with WEDL5541-B14-KIT encoder

# Agenda

# AURIX™ TC3xx Motor Control Power Board Block Diagram
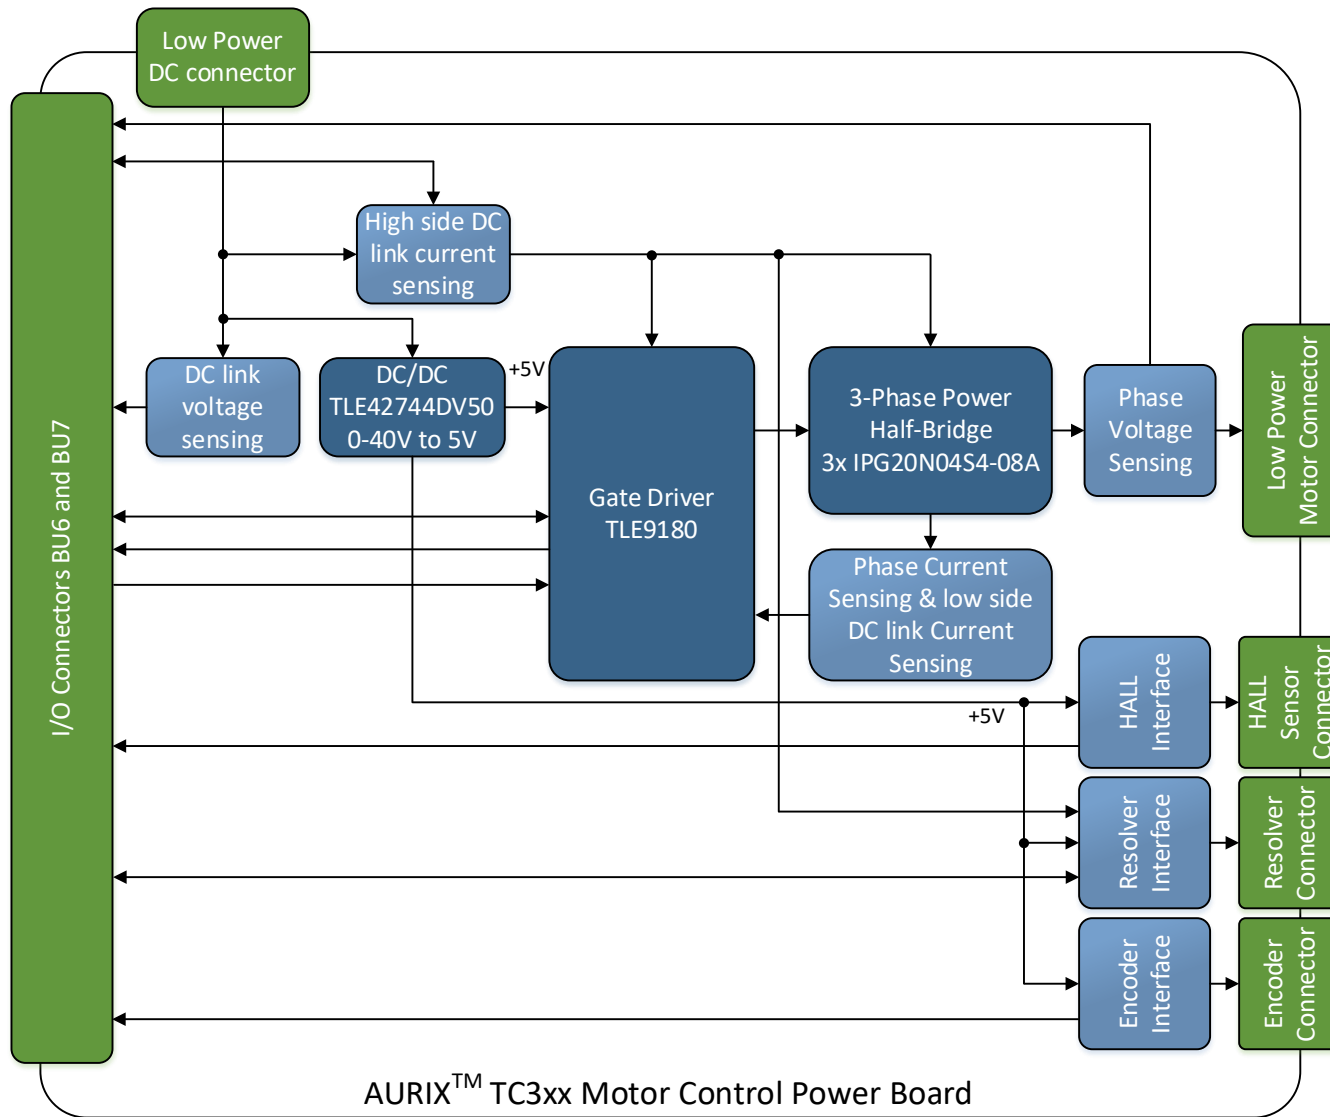
› Top View
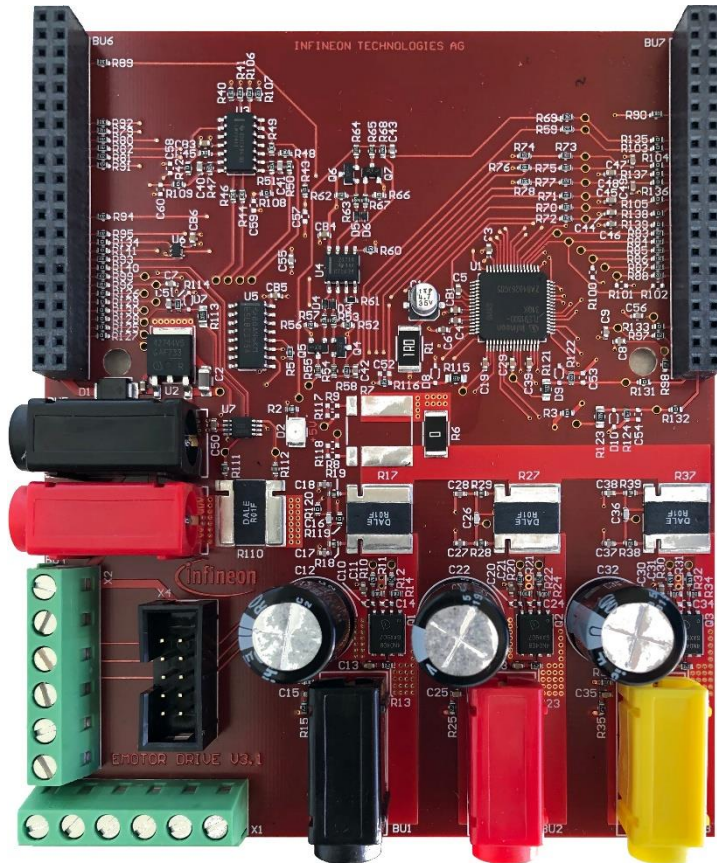
› Bottom View
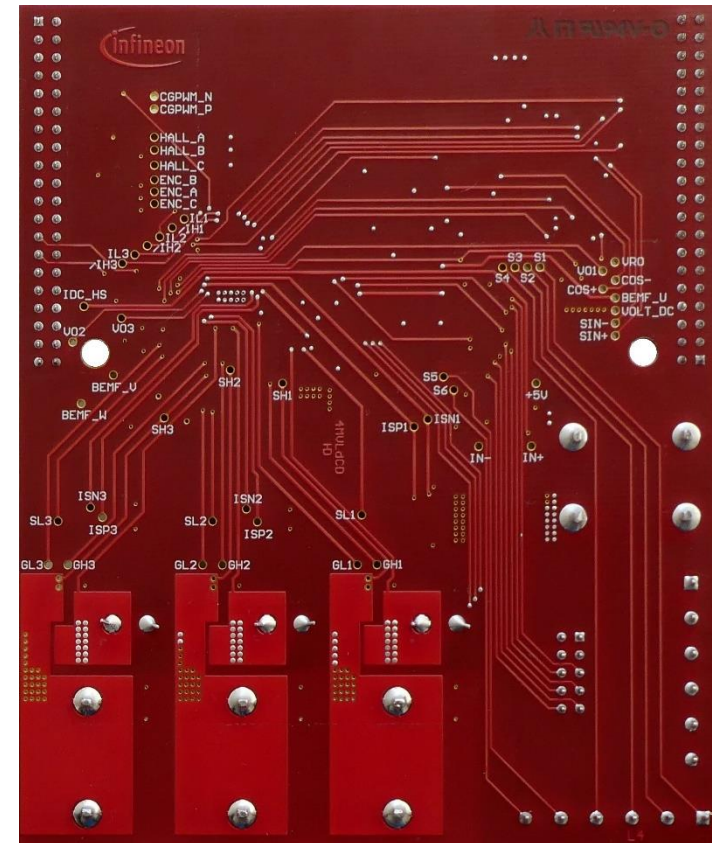
# AURIX™ TC3xx Motor Control Power Board Connectors



› Connection with AURIX™ TC3xx Application Kit with TFT
  – BU6 Connector: 40 Pins
  – BU7 Connector: 40 Pins

› Power Supply Connectors
  Color Coding:
  • Black: Ground (GND)
  • Red: +12V (VBAT)

› Motor Connectors
  Color Coding:
  • Black: Phase U
  • Red: Phase V
  • Yellow: Phase W
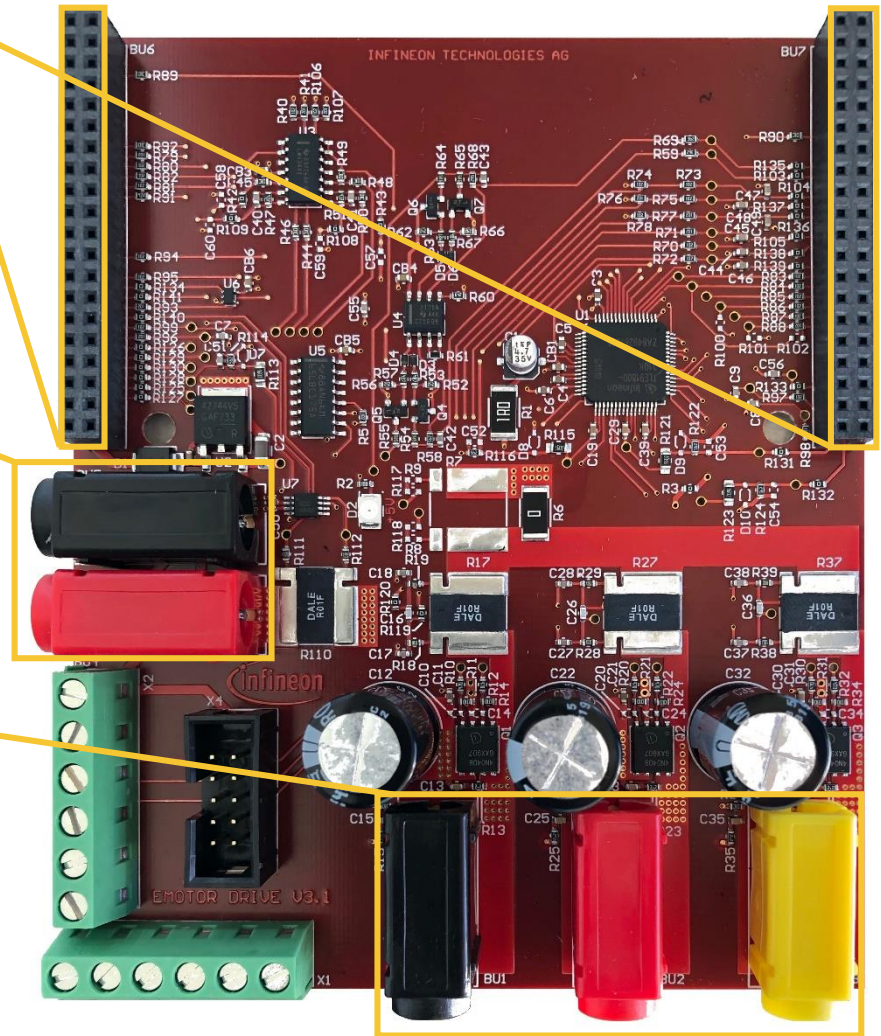
› Incremental encoder connector
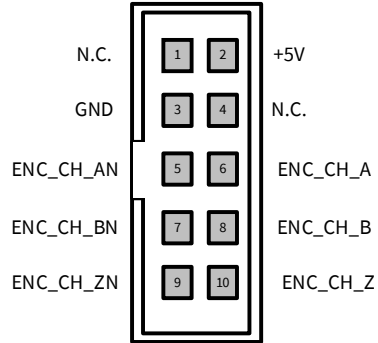
| | | |
|---|---|---|
| N.C. | 1 | 2 | +5V |
| GND | 3 | 4 | N.C. |
| ENC_CH_AN | 5 | 6 | ENC_CH_A |
| ENC_CH_BN | 7 | 8 | ENC_CH_B |
| ENC_CH_ZN | 9 | 10 | ENC_CH_Z |

› Hall sensors connector

| 1 | 2 | 3 | 4 | 5 | 6 |
|---|---|---|---|---|---|
| +5V | HALL A | HALL B | HALL C | N.C. | GND |

› Resolver connector

| 1 | 2 | 3 | 4 | 5 | 6 |
|---|---|---|---|---|---|
| S1(Res. SIN +) | S2(Res. SIN -) | S3(Res. COS +) | S4(Res. COS -) | S5(Res. Exc +) | S6 (Res. Exc -) |
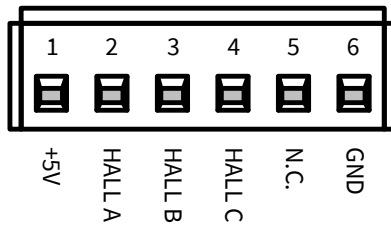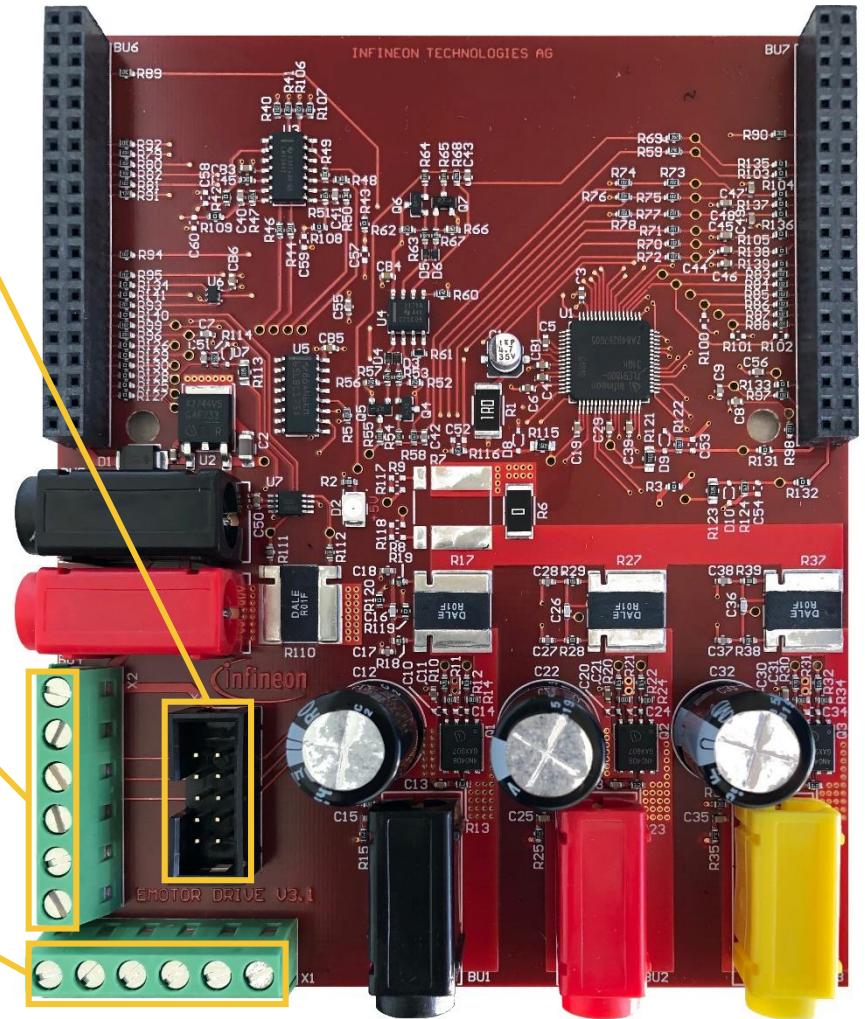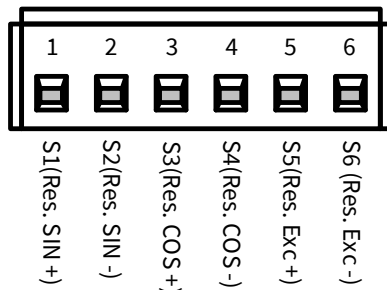
# AURIX™ TC3xx Motor Control Power Board Connectors

› ## BU6 and BU7 Pinout

BU6 connected to App. Kit with TFT X102 connector

| | | | | |
|---|---|---|---|---|
| N.C. | 39 | 40 | N.C. |
| N.C. | 37 | 38 | /SOFF |
| N.C. | 35 | 36 | N.C. |
| N.C. | 33 | 34 | N.C. |
| /ERR | 31 | 32 | N.C. |
| CSN | 29 | 30 | CLK_SPI |
| MOSI | 27 | 28 | MISO |
| N.C. | 25 | 26 | ENA |
| N.C. | 23 | 24 | N.C. |
| N.C. | 21 | 22 | N.C. |
| N.C. | 19 | 20 | PFB2 |
| PFB1_Enable | 17 | 18 | PFB3 |
| N.C. | 15 | 16 | GS0_HS |
| PFB1 | 13 | 14 | GS1_HS |
| VRO | 11 | 12 | VO1 |
| COS- (VCC/2) | 9 | 10 | COS+ |
| BEMF_U | 7 | 8 | VOLT_DC |
| SIN- (VCC/2) | 5 | 6 | SIN+ |
| GND | 3 | 4 | GND |
| VCC_IN | 1 | 2 | VEXTA |

BU7 connected to App. Kit with TFT X103 connector

| | | | | |
|---|---|---|---|---|
| VEXTB | 2 | 1 | VCC_IN |
| GND | 4 | 3 | GND |
| N.C. | 6 | 5 | N.C. |
| N.C. | 8 | 7 | N.C. |
| /INH | 10 | 9 | N.C. |
| N.C. | 12 | 11 | N.C. |
| CGPWM_P(Prim.Coil) | 14 | 13 | CGPWM_N(Prim.Coil) |
| HALL A | 16 | 15 | N.C. |
| HALL_C | 18 | 17 | HALL_B |
| ENC_B | 20 | 19 | ENC_A |
| N.C. | 22 | 21 | ENC_C |
| IL1 | 24 | 23 | N.C. |
| IL2 | 26 | 25 | /IH1 |
| IL3 | 28 | 27 | /IH2 |
| N.C. | 30 | 29 | /IH3 |
| N.C. | 32 | 31 | N.C. |
| N.C. | 34 | 33 | N.C. |
| IDC_HS | 36 | 35 | BEMF_V |
| VO3 | 38 | 37 | N.C. |
| VO2 | 40 | 39 | BEMF_W |

# Agenda

# Motor and Incremental Encoder

› **Nanotec DB42S02**: Electric motor
  - NEMA: 17
  - Rated Power: 42 W
  - No. of Poles/Phase: 8/3
  - Rated Torque: 5 Ncm
  - Rated Current: 3.57 A
  - Rated Speed: 8000 rpm
  - Rotor Inertia: 24 gcm²
  - Line to Line Inductance: 0.25 mH
  - Weight: 0.25 kg
  - Size: 42 mm
  - Rated Voltage (VDC): 17 V
  - Peak Torque: 15 Ncm
  - Peak Current: 10.78 A
  - Torque Constan: t 1.4 Ncm/A
  - Line to Line Resistance: 0.19 Ohm
  - Length: "A" 41 mm

› **WEDL5541-B14-KIT (5 mm)**: Incremental Encoder
  - Index
  - Encoder Signal Type: incremental
  - Shaft Diameter: 5 mm
  - Output Signals phase: A, A\, B, B\, I, I\
  - Limit Frequency: 100 kHz
  - Phase Shift: 90° ± 45°
  - Max. Output Current per Channel: 0 ~ 5 mA
  - Storage Temperature: -40 °C - 100 °C
  - Line: Driver
  - Encoder Resolution: 1000 CPR
  - Operating Voltage (Encoder): 5 V
  - Current Consumption: ≤ 60 mA
  - Limit Speed: 6000 RPM
  - Signal Level: VH 85% VCC, VL ≤ 0.3 V
  - Operating Temperature: -25 °C - 100 °C
  - Humidity: max. 90 % (no condensation)

› **ZK-WEDL-8-500**: Encoder Cable

# Agenda

| | |
|---|---|
| 1 | AURIX™ TC3xx Motor Control Application Kit Overview |
| 2 | AURIX™ TC3xx Motor Control Power Board |
| 3 | Motor and Incremental Encoder |
| 4 | AURIX™ TC387 Application Kit with TFT |
| 5 | AURIX™ TC3xx PMSM FOC Motor Control Software |
| 6 | Run motor |
| 7 | Acronyms, references, revision history |

# AURIX™ TC387 Application Kit with TFT Overview

› [KIT_A2G_TC387_5V_TFT](#): Components

- – Infineon's Multi Voltage Safety Micro Processor Supply TLF35584QV
- – LED to validate power supply (5V or 3,3Volt)
- – LED indicating RESET (ESR0) active state
- – LED indicating active miniWiggler JDS
- – LED switched via DAS software
- – Infineon's High Speed CAN Transceiver TLE 9251V (CAN FD capable)
- – Infineon's LIN-Transceiver TLE 7259-3GE
- – QSPI Real-Time Clock/Calendar with SRAM and unique MAC Id MCP79511 (if CPU not support I2C)
- – I2C Real-Time Clock/Calendar with SRAM and unique MAC Id MCP79411 (if CPU support I2C)
- – USB to UART bridge FT2232HL (FTDI)
- – Integrated 10/100/1000M Ethernet Precision Transceiver RTL8211FI-CG (Realtek)
- – Touch screen controller ADS7843
- – 4 general purpose LEDs – Reset switch
- – Wake switch
- – Xilinx CPLD XC9572XL
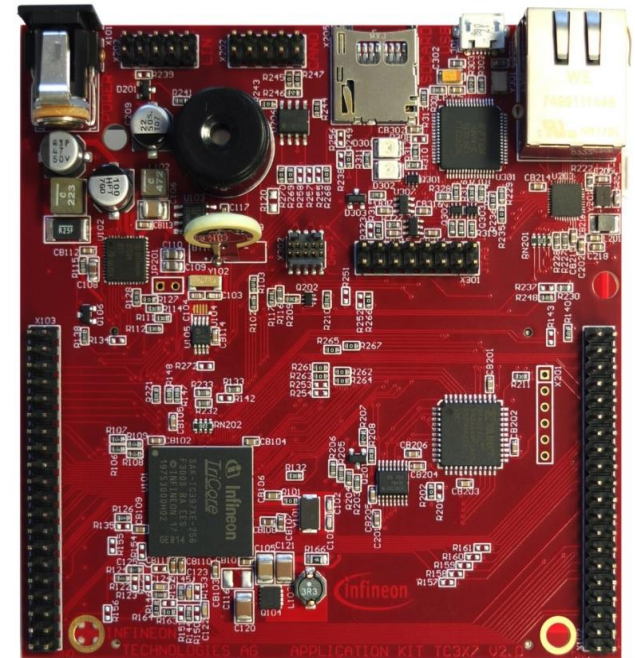
# AURIX™ TC387 Application Kit with TFT Overview

› **KIT_A2G_TC387_5V_TFT**: Connectors

- – Standard power connector
- – Micro USB connector for ASC Interface (ASC0) and miniWiggler
- – RJ45 connector for Ethernet (if Gigabit Ethernet supported by assembled CPU)
- – 16-pin header for JTAG interface (OCDS)
- – 10-pin header for DAP
- – 10-pin (2x5-pin) Header for LIN Transceiver (LIN)
- – 10-pin (2x5-pin) Header for CAN High Speed Transceiver (CAN0)
- – two 40-pin connectors with I/O signals
- – mini SD card slot
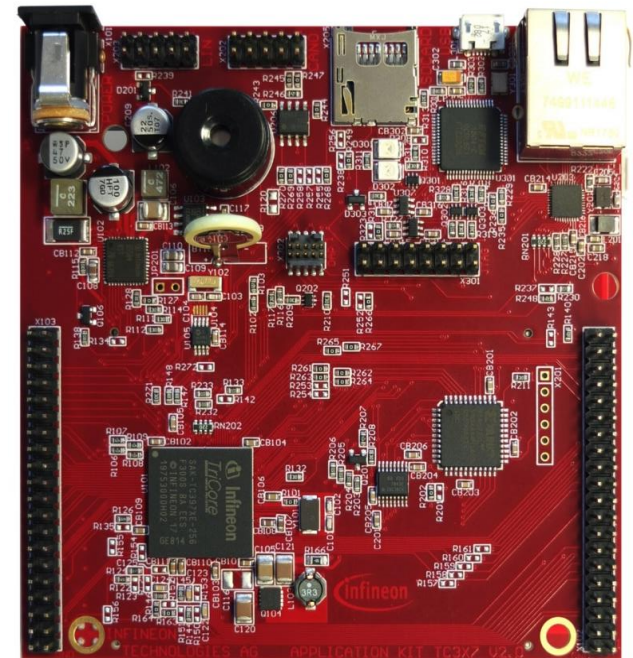
# AURIX™ TC387 Application Kit with TFT Overview

› **KIT_A2G_TC387_5V_TFT**: IO Connectors Pinout

| | X103 | | | | X102 | | |
|---|---|---|---|---|---|---|---|
| (VCC_IN) | 1 | 2 | V_UC | P14.5 | 40 | 39 | P14.4 |
| GND | 3 | 4 | GND | P33.10 | 38 | 37 | P33.9 |
| P21.2 | 5 | 6 | P21.3 | P15.7 | 36 | 35 | P15.6 |
| P14.8 | 7 | 8 | P14.7 | P15.5 | 34 | 33 | P15.4 |
| P14.6 | 9 | 10 | P20.0 | P15.8 | 32 | 31 | P15.2 |
| P21.4 | 11 | 12 | P21.5 | P22.3 | 30 | 29 | P22.2 |
| P02.0 | 13 | 14 | P02.1 | P22.1 | 28 | 27 | P22.0 |
| P02.2 | 15 | 16 | P02.3 | P33.11 | 26 | 25 | P23.4 |
| P02.4 | 17 | 18 | P02.5 | P23.3 | 24 | 23 | P23.2 |
| P02.6 | 19 | 20 | P02.7 | P23.1 | 22 | 21 | P23.0 |
| P02.8 | 21 | 22 | P00.0 | P33.6 | 20 | 19 | P33.8 |
| P00.1 | 23 | 24 | P00.2 | P33.12 | 18 | 17 | P33.1 |
| P00.3 | 25 | 26 | P00.4 | P33.2 | 16 | 15 | P33.3 |
| P00.5 | 27 | 28 | P00.6 | P33.4 | 14 | 13 | P33.5 |
| P00.7 | 29 | 30 | P00.8 | AN0 | 12 | 11 | AN8 |
| P00.9 | 31 | 32 | P00.10 | AN2 | 10 | 9 | AN3 |
| P00.11 | 33 | 34 | P00.12 | AN11 | 8 | 7 | AN13 |
| AN19 | 35 | 36 | AN18 | AN20 | 6 | 5 | AN21 |
| AN17 | 37 | 38 | AN16 | GND | 4 | 3 | GND |
| AN25 | 39 | 40 | AN24 | V_UC | 2 | 1 | (VCC_IN) |
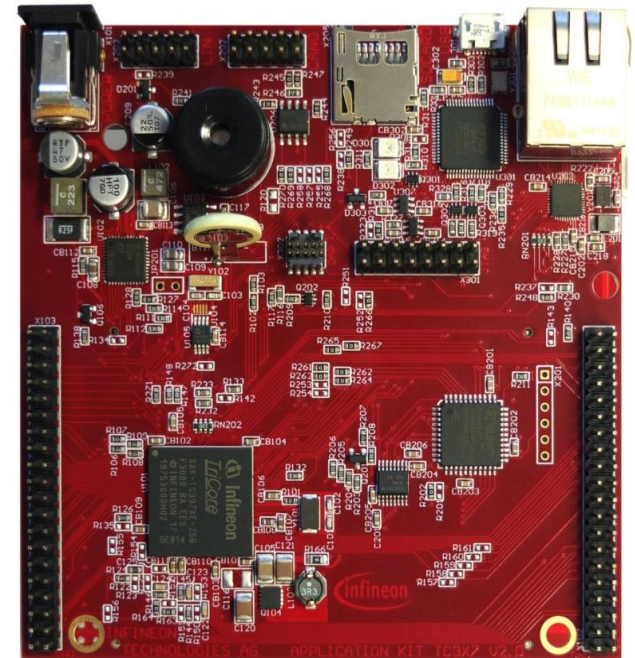


› Changes that was required when using with AURIX™ TC387 Motor Control Application Kit

To be able to supply AURIX™ TC387 Application Kit with TFT from power board and run the program, one should solder 0 Ω resistor or just make short circuit on R113.
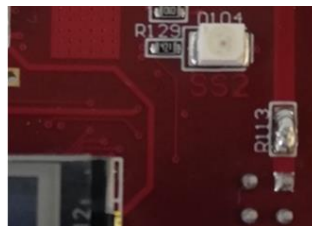
# Agenda

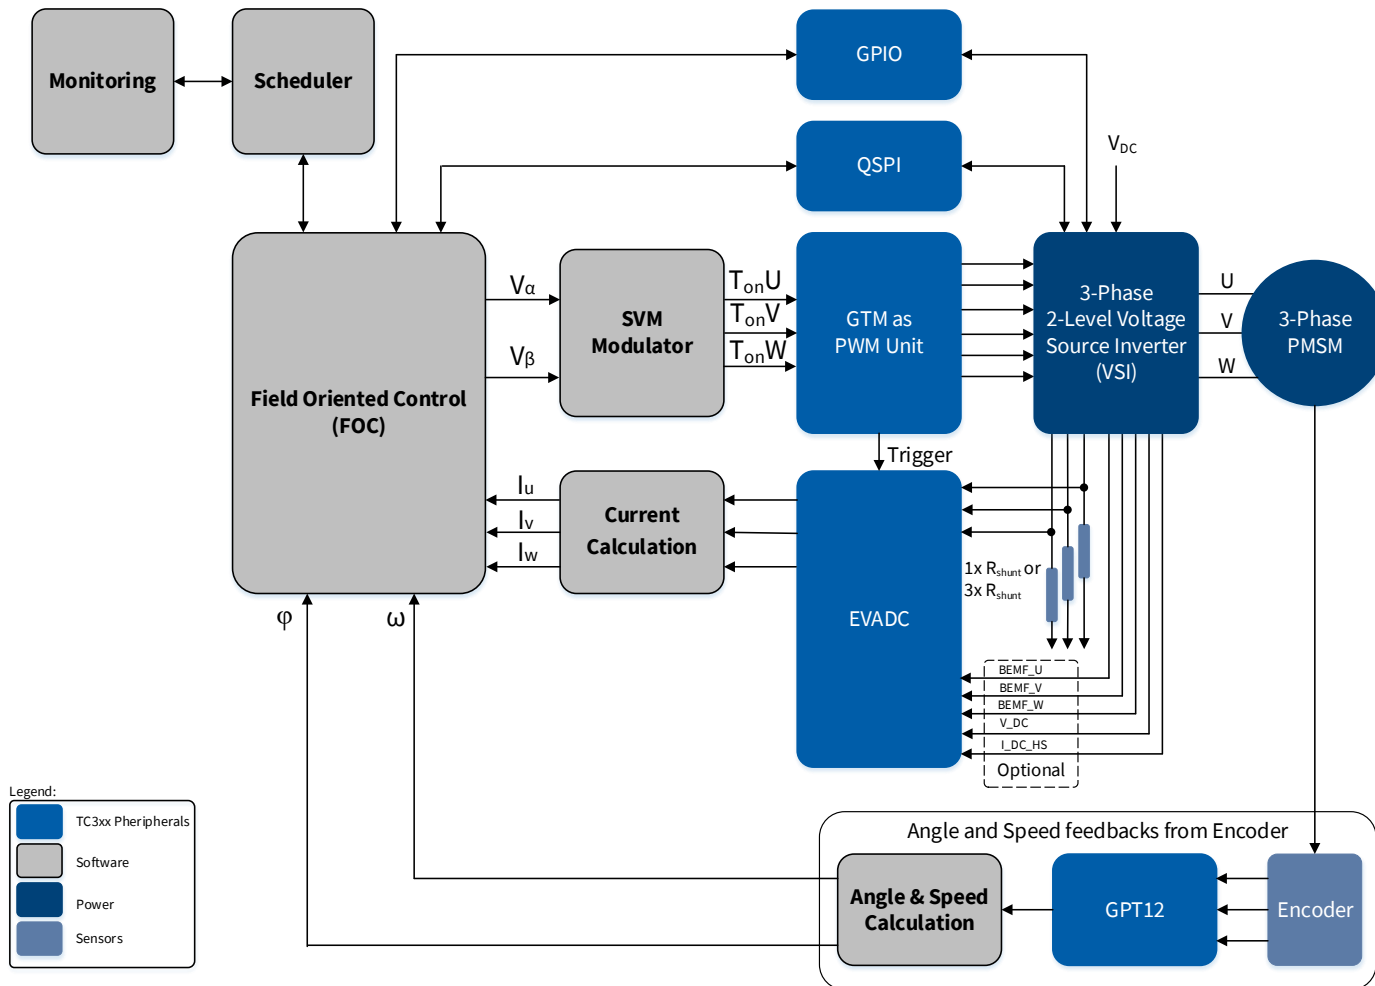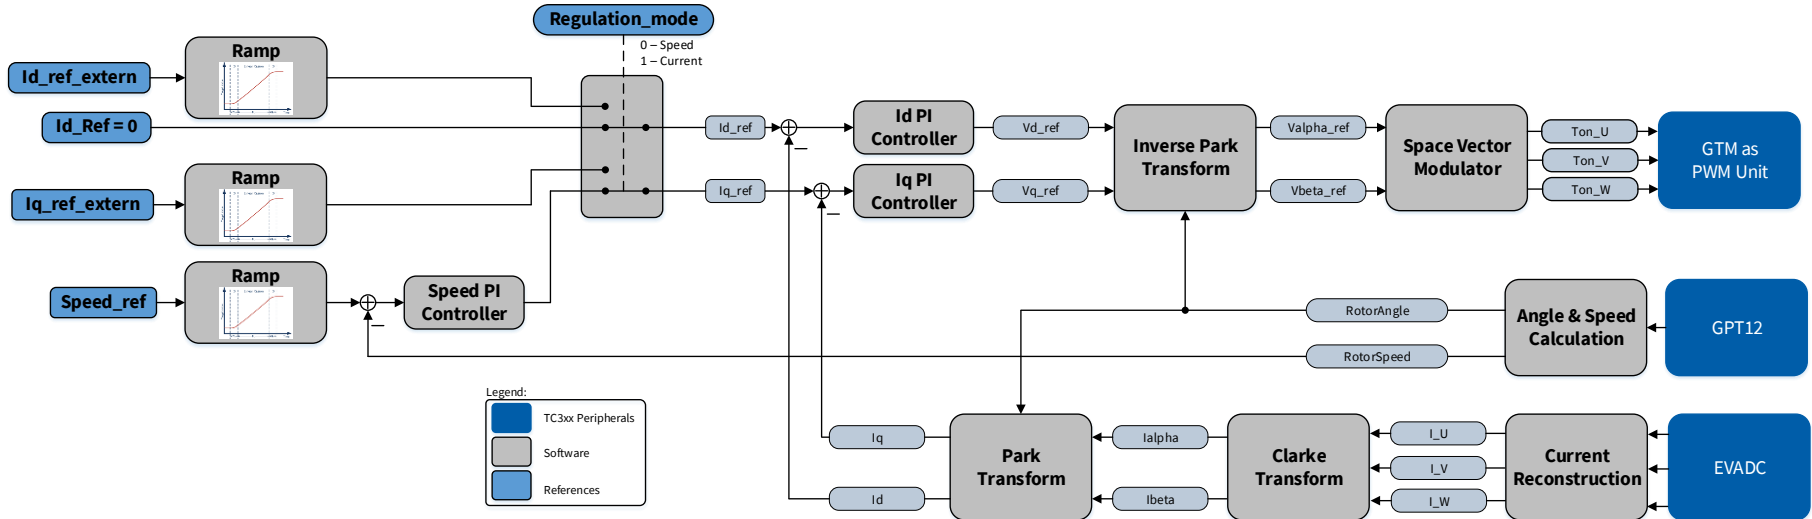| | |
|---|---|
| **1** | AURIX™ TC3xx Motor Control Application Kit Overview |
| **2** | AURIX™ TC3xx Motor Control Power Board |
| **3** | Motor and Incremental Encoder |
| **4** | AURIX™ TC387 Application Kit with TFT |
| **5** | AURIX™ TC3xx PMSM FOC Motor Control Software |
| **6** | Run motor |
| **7** | Acronyms, references, revision history |

# AURIX™ TC3xx Motor Control Software

› System overview

# AURIX™ TC3xx Motor Control Software

› Field Oriented Control: controls the stator currents by providing control voltages to the three-phase system.
  – stator DQ current is given as reference to control torque and flux
  – forward path is the three-phase voltages generation
  – feedback paths are the stator currents and rotor position acquisitions



› Regulation mode:
  – Speed (by default): Output of speed regulator is Q-axis current reference, the D-axis current reference is set to 0. Speed can be set by using buttons available on touch screen or manually in debug mode
  – Current: The D- and Q-axis current references could be set manually in debug mode

# Agenda

# Run motor
## Components connecting

1. Connect AURIX™ TC387 Application Kit with TFT (connectors X102 and X103) and power board (connectors BU6 and BU7)
2. Connect one side of encoder cable and power board (connector X4)
3. Connect second side of encoder cable with encoder
4. Connect motor phase connectors and power board (connectors BU1, BU2 and BU3)
5. Connect power supply adapter extension cables and power board (connectors BU4 and BU5)
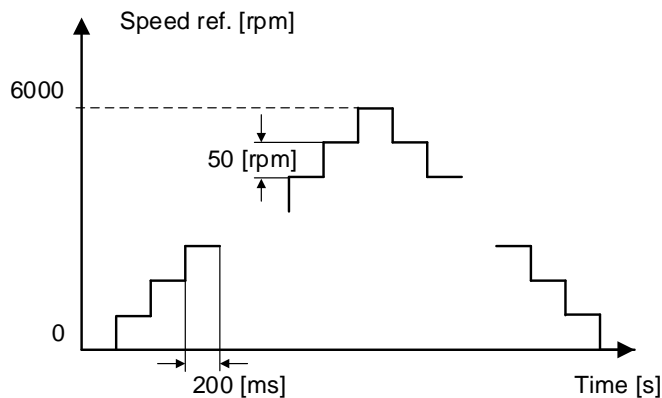6. Connect power supply

# Run motor
# Local command set and basic monitoring



```
PMSM_FOC_AURIX_TC3xx
SW V1.0.0, HW V3.1

Time Elapsed 00:00:50        Reset Time

┌Status───────────────────────────┐
│Speed:    0 rpm    Position:  0 deg│
│Ref :     0 rpm    State: Stop!    │
└──────────────────────────────────┘
┌Control──────────────────────────┐
│ [CAL]     [SPEED ↑]    [START]   │
│ [DEMO]    [SPEED ↓]    [STOP]    │
└──────────────────────────────────┘
 iMENU   STDOUT0
```

Demo cycle: speed reference profile
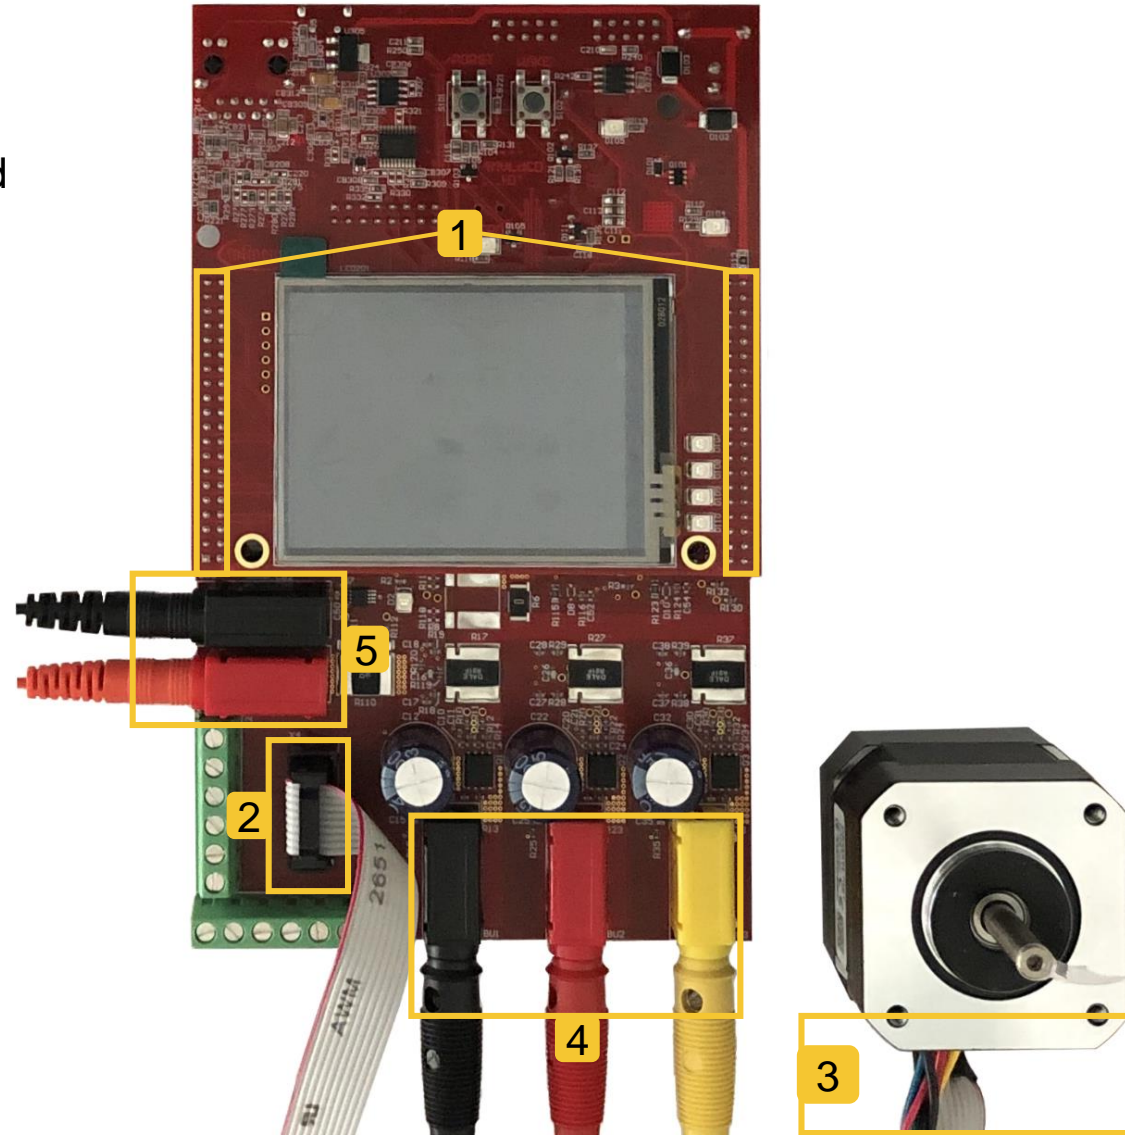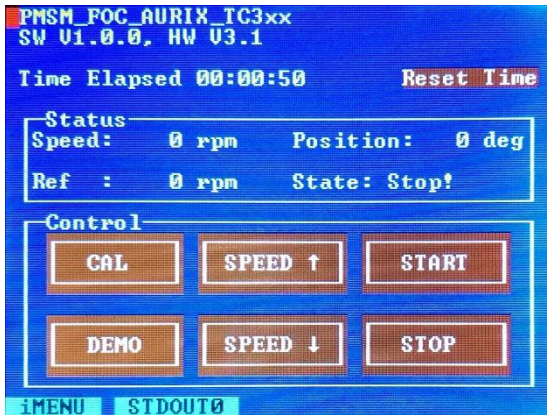


Page: iMENU
- Software version and corresponding power board
- Time elapsed
- Status
  - Speed: actual rotor speed in rpm
  - Ref: reference speed in rpm
  - Position: actual rotor position measured by position sensor in deg
  - State: Actual control state
- Control
  - CAL: trigger calibration routine
  - DEMO: trigger predefined speed reference profile and start motor
  - SPEED ↑: increase speed reference, 100 rpm step size
  - SPEED ↓: decrease speed reference, 100 rpm step size
  - START: start motor
  - STOP: stop motor

# Run motor
## Local command set and basic monitoring



Page: STDOUT0
- – Software version and corresponding power board
- – Speed reference and actual speed
- – Phase currents
  - – Iu [A]
  - – Iv [A]
  - – Iw [A]
- – D- and Q-axis current references and actual values
  - – IdRef [A], IdMeas [A]
  - – IqRef [A], IqMeas [A]
- – D- and Q-axis voltage reverences
  - – VdRef [p.u.]
  - – VqRef [p.u.]
- – Aβ voltage references
  - – ValphaRef [p.u.]
  - – VbetaRef [p.u.]

# Agenda

# Acronyms, references, revision history

## Acronyms

| Term | Definition |
|---|---|
| EVADC | Enhanced Versatile Analog-to-Digital Converter |
| FOC | Field Oriented Control |
| GPIO | General Purpose Input Output |
| GPT12 | General Purpose Timer Unit |
| GTM | Generic Timer Module |
| PMSM | Permanent Magnet Synchronous Motor |
| QSPI | Queued Synchronous Peripheral Interface |
| SVM | Space Vector Modulation |

## References

›   [1] AP32541 AURIX TC3xx Motor Control Power Board, v1.0

›   [2] AP32540 PMSM FOC motor control using AURIX TC3xx, v1.0

›   [3] Application Kit TC3x7 User Manual, v2.1

›   [4] User Manual AURIX™ TC3xx, revision 1.5

# Acronyms, references, revision history

## Revision history

| Revision | Description of change |
|---|---|
| V1.0 | Initial version |
| | |

Part of your life. Part of tomorrow.

**Trademarks**
All referenced product or service names and trademarks are the property of their respective owners.

**Published by**
**Infineon Technologies AG**
**81726** Neubiberg**, Germany**

**Do you have a question about this document?**
**Email:** erratum@infineon.com

**IMPORTANT NOTICE**
The information contained in this application note is given as a hint for the implementation of the product only and shall in no event be regarded as a description or warranty of a certain functionality, condition or quality of the product. Before implementation of the product, the recipient of this application note must verify any function and other technical information given herein in the real application. Infineon Technologies hereby disclaims any and all warranties and liabilities of any kind (including without limitation warranties of non-infringement of intellectual property rights of any third party) with respect to any and all information given in this application note.

The data contained in this document is exclusively intended for technically trained staff. It is the responsibility of customer's technical departments to evaluate the suitability of the product for the intended application and the completeness of the product information given in this document with respect to such application.

For further information on the product, technology, delivery terms and conditions and prices please contact your nearest Infineon Technologies office (www.infineon.com).

**WARNINGS**
Due to technical requirements products may contain dangerous substances. For information on the types in question please contact your nearest Infineon Technologies office.

Except as otherwise explicitly approved by Infineon Technologies in a written document signed by authorized representatives of Infineon Technologies, Infineon Technologies' products may not be used in any applications where a failure of the product or any consequences of the use thereof can reasonably be expected to result in personal injury.