Laboratory Exercise 10

Goals

After this laboratory exercise, you should understand the method to control pheripheral devices via simulators.

Literature


How does the CPU communicate with input and output devices such as the monitor or keyboard?

There are several ways. Intel machines have special instructions named in and out that communicate with I/O ports. These instructions are usually disabled for ordinary users, but they are used internally for communicating with I/O devices. This is called port-mapped I/O. However, we are going to look at a di_erent method in which I/O devices have access to memory. The CPU can place data in memory that can be read by the I/O devices; likewise, the I/O devices can place data in memory for the CPU. This is called memory-mapped I/O or MMIO. (For more information, see P&H page 588 or Appendix B.8, or look it up online!)

Assignments at Home and at Lab


Home Assignment 1 - LED PORT

Write a program using assembly language to show numbers from 0 to F to the 7-seg led.

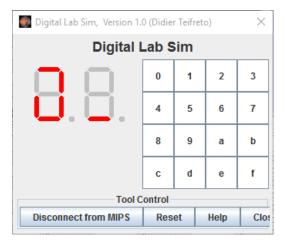

To view the 7-segs, at the menu bar, click /Tools/Digi Lab Sim

Click Help to understand how to turn on the 7-seg led.

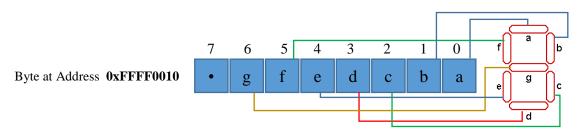


```
.eqv SEVENSEG LEFT 0xFFFF0011
                                   # Dia chi cua den led 7 doan trai.
                                        Bit 0 = doan a;
                                         Bit 1 = \text{doan b}; \dots
                                        Bit 7 = dau.
.eqv SEVENSEG RIGHT 0xFFFF0010
                                   # Dia chi cua den led 7 doan phai
.text
main:
         li
              $a0, 0x8
                                       # set value for segments
         jal SHOW 7SEG LEFT
                                      # show
         nop
         li
               $a0, 0x1F
                                      # set value for segments
               SHOW 7SEG RIGHT
                                      # show
         jal
         nop
         li $v0, 10
exit:
         syscall
endmain:
# Function SHOW 7SEG LEFT: turn on/off the 7seg
# param[in] $a0 value to shown
# remark $t0 changed
SHOW 7SEG LEFT: li $t0, SEVENSEG LEFT # assign port's address
                sb $a0, 0($t0) # assign new value
                nop
                jr
                     $ra
                nop
# Function SHOW_7SEG_RIGHT : turn on/off the 7seg
 param[in] $a0 value to shown
 remark $t0 changed
SHOW_7SEG_RIGHT: li $t0, SEVENSEG_RIGHT # assign port's address sb $a0, 0($t0) # assign new value
                nop
                jr $ra
                nop
```

Home Assignment 2 – BITMAP DISPLAY

Bitmap Display like the graphic monitor, in which Windows OS draws windows, start button... In order to to that, developer should calculate color of all bitmap pixels on thee screen and store these color value to the screen memory. Wherever we change a value in screen memory, the color of the respective pixel on the screen will be changed.

In MARS, in menu bar, click Tools / Bitmap Display to open the screen simulator

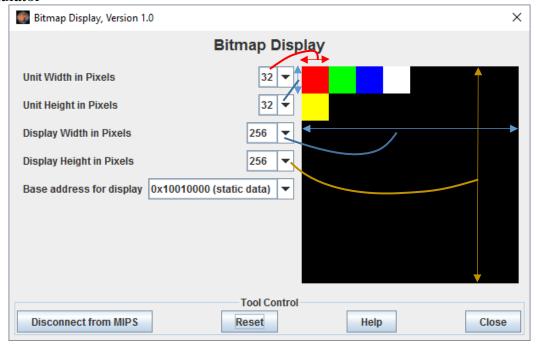

b

0	R	G	B	
				0x10010000 - pixel 0
				0x10010004 - pixel 1
00	00	00	00	0x10010008 - pixel 2
00	FF	FF	FF	0x1001000C - pixel 3

Each rectangular unit on the display represent s one memory word in a contiguous address space starting with the specified base address (in above figure, base address is

0x10010000

Value stored in that word will be interpreted as a 24-bit RGB

```
.eqv MONITOR SCREEN 0x10010000
                                 #Dia chi bat dau cua bo nho man hinh
.eqv RED
                    0x00FF0000
                                 #Cac gia tri mau thuong su dung
                    0x0000FF00
.eqv GREEN
                    0x000000FF
.eqv BLUE
.eqv WHITE
                    0x00FFFFFF
.eqv YELLOW
                    0x00FFFF00
.text
  li $k0, MONITOR SCREEN
                                 #Nap dia chi bat dau cua man hinh
  li $t0, RED
  sw $t0, 0($k0)
  nop
  li $t0, GREEN
  sw $t0, 4($k0)
  nop
  li $t0, BLUE
  sw $t0, 8($k0)
  nop
  li $t0, WHITE
  sw $t0, 12($k0)
```

```
nop

li $t0, YELLOW

sw $t0, 32($k0)

nop

li $t0, WHITE

lb $t0, 42($k0)

nop
```

Home Assignment 3 - MARSBOT RIDER

The MarsBot is a virtual robot that has a very simple mode of operation. It travels around in two-dimensional space, optionally leaving a trail, or track, as it goes. It uses five words in memory:³

Name	Address	Meaning
HEADING	0xffff8010	Integer: An angle between 0 and 359
LEAVETRACK	0xffff8020	Boolean (0 or non-0): whether or not to
		leave a track
WHEREX	0xffff8030	Integer: Current x-location of the MarsBot
WHEREY	0xffff8040	Integer: Current y-location of the MarsBot
MOVING	0xffff8050	Boolean: whether or not to move


The CPU can place commands in the HEADING, LEAVETRACK, and MOVE locations; the robot can then change its direction of travel (using the HEADING value), turn on or turn off the pen" drawing the line (using the LEAVE-TRACK value), and can halt or resume moving (using the MOVING value).

```
.eqv HEADING
              0xffff8010
                         # Integer: An angle between 0 and 359
                         # 0 : North (up)
                         # 90: East (right)
                         # 180: South (down)
                         # 270: West (left)
.eqv WHEREX 0xffff8030 # Integer: Current x-location of
MarsBot
MarsBot
.eqv WHEREY 0xffff8040 # Integer: Current y-location of
MarsBot
.text
main: jal
           TRACK
                         # draw track line
      nop
      addi
            $a0, $zero, 90 # Marsbot rotates 90* and start
running
      jal
             ROTATE
      nop
      jal
             GO
      nop
```

³ http://cs.allegheny.edu/~rroos/cs210f2013

```
sleep1: addi
              $v0,$zero,32
                            # Keep running by sleeping in 1000 ms
       li
              $a0,1000
       syscall
       jal
             UNTRACK
                           # keep old track
       nop
       jal
              TRACK
                           # and draw new track line
       nop
goDOWN: addi
             $a0, $zero, 180 # Marsbot rotates 180*
              ROTATE
       jal
       nop
sleep2: addi
             $v0,$zero,32
                           # Keep running by sleeping in 2000 ms
              $a0,2000
       li
       syscall
              UNTRACK
                           # keep old track
       jal
       nop
                           # and draw new track line
              TRACK
       jal
       nop
goLEFT: addi $a0, $zero, 270
                          # Marsbot rotates 270*
       jal
           ROTATE
       nop
sleep3: addi $v0,$zero,32
                           # Keep running by sleeping in 1000 ms
       li
              $a0,1000
       syscall
       jal
            UNTRACK
                            # keep old track
       nop
       jal
             TRACK
                           # and draw new track line
       nop
goASKEW:addi $a0, $zero, 120 # Marsbot rotates 120*
       jal ROTATE
       nop
sleep4: addi $v0,$zero,32
                           # Keep running by sleeping in 2000 ms
       li
             $a0,2000
       syscall
                           # keep old track
       jal
            UNTRACK
       nop
                           # and draw new track line
             TRACK
       jal
       nop
end main:
          ______
# GO procedure, to start running
# param[in] none
       GO:
       nop
       jr
            $ra
# STOP procedure, to stop running
 param[in] none
```


```
STOP: li
            $at, MOVING
                           # change MOVING port to 0
             $zero, 0($at) # to stop
       sb
       nop
       jr
       nop
# TRACK procedure, to start drawing line
# param[in] none
TRACK: li
             $at, LEAVETRACK # change LEAVETRACK port
       addi $k0, $zero,1  # to logic 1,
sb $k0, 0($at)  # to start tracking
       nop
             $ra
       jr
       nop
#-----
# UNTRACK procedure, to stop drawing line
# param[in] none
UNTRACK:li $at, LEAVETRACK # change LEAVETRACK posts $zero, 0($at) # to stop drawing tail
             $at, LEAVETRACK # change LEAVETRACK port to 0
       nop
       jr
             $ra
       nop
#-----
# ROTATE procedure, to rotate the robot
 param[in] $a0, An angle between 0 and 359
                   0 : North (up)
                   90: East (right)
                  180: South (down)
                  270: West (left)
ROTATE: li $at, HEADING # change HEADING port sw $a0, 0($at) # to rotate robot
       nop
       jr
             $ra
       nop
```

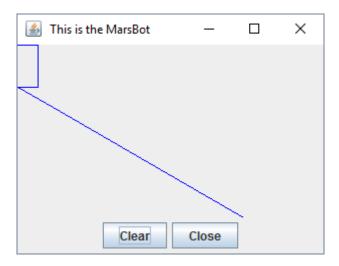

Home Assignment 4 - KEYBOARD and DISPLAY MMIO


Use this program to simulate Memory-Mapped I/O (MMIO) for a keyboard input device and character display output device. It may be run either from MARS' Tools menu or as a stand-alone application.

While the tool is connected to MIPS, each keystroke in the text area causes the corresponding ASCII code to be placed in the Receiver Data register (low-order byte of memory word 0xffff0004), and the Ready bit to be set to 1 in the Receiver Control register (low-order bit of 0xffff0000). The Ready bit is automatically reset to 0 when the MIPS program reads the Receiver Data using an 'lw' instruction.

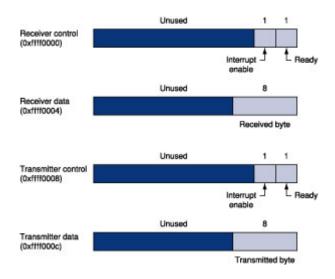

```
.eqv KEY CODE
               0xFFFF0004
                                 # ASCII code from keyboard, 1 byte
.eqv KEY READY 0xFFFF0000
                                 # =1 if has a new keycode ?
                                 # Auto clear after lw
.eqv DISPLAY CODE 0xffff000C # ASCII code to show, 1 byte
.eqv DISPLAY READY 0xFFFF0008 # =1 if the display has already to do
                                 # Auto clear after sw
.text
            li $k0, KEY CODE
             li
                 $k1, KEY READY
             li
                 $s0, DISPLAY CODE
             li
                 $s1, DISPLAY READY
loop:
            nop
                 $t1, 0($k1)
                                        # $t1 = [$k1] = KEY READY
WaitForKey: lw
            nop
            beq $t1, $zero, WaitForKey # if $t1 == 0 then Polling
            nop
            #---
                 $t0, 0($k0)
ReadKey:
            lw
                                        # $t0 = [$k0] = KEY CODE
            nop
            #---
WaitForDis: lw
                $t2, 0($s1)
                                        \# $t2 = [$s1] = DISPLAY READY
            nop
```

Warning: Must execute as below

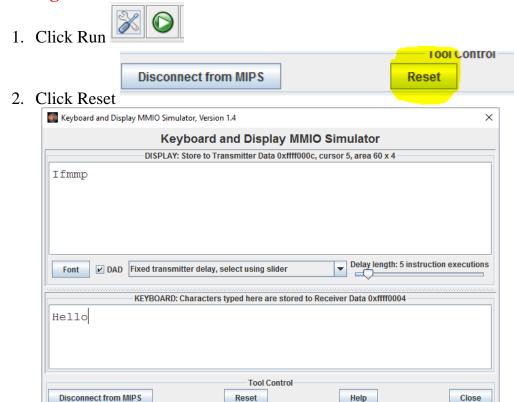

Assignment 1

Create a new project, type in, and build the program of Home Assignment 1. Show different values on LED

Assignment 2

Create a new project, type in, and build the program of Home Assignment 2. Draw something.

Assignment 3

Create a new project, type in, and build the program of Home Assignment 3. Make the Bot run and draw a triangle by tracking

Assignment 4

Create a new project, type in, and build the program of Home Assignment 4. Read key char and terminate the application when receiving "exit" command.