

# O-RAN.WG3.E2AP-v02.03

//

Technical Specification

# O-RAN Working Group 3, Near-Real-time RAN Intelligent Controller, E2 Application Protocol (E2AP)

Copyright © 2022 by the O-RAN ALLIANCE e.V.

The copying or incorporation into any other work of part or all of the material available in this document in any form without the prior written permission of O-RAN ALLIANCE e.V. is prohibited, save that you may print or download extracts of the material of this document for your personal use, or copy the material of this document for the purpose of sending to individual third parties for their information provided that you acknowledge O-RAN ALLIANCE as the source of the material and that you inform the third party that these conditions apply to them and that they must comply with them.

O-RAN ALLIANCE e.V., Buschkauler Weg 27, 53347 Alfter, Germany Register of Associations, Bonn VR 11238, VAT ID DE321720189

3

4

5

6

7

1

2

"© 2019. 3GPP™ TSs and TRs are the property of ARIB, ATIS, CCSA, ETSI, TSDSI, TTA and TTC who jointly own the copyright in them. They are subject to further modifications and are therefore provided to you "as is" for information purposes only. Further use is strictly prohibited."

"© 2020. 3GPP™ TSs and TRs are the property of ARIB, ATIS, CCSA, ETSI, TSDSI, TTA and TTC who jointly own the copyright in them. They are subject to further modifications and are therefore provided to you "as is" for information purposes only. Further use is strictly prohibited."



# Contents

| 2                    | Contents       |   |             |  |
|----------------------|----------------|---|-------------|--|
| 3                    | Forev          | /ard  |             |  |
| 4                    | 1              | Scope   | · · · · · · |  |
| 5                    | 2              | References  |             |  |
| 6                    | 3              | Definitions and Abbreviations                     |             |  |
| 7                    | 3.1            | Definitions                                       |             |  |
| 8                    | 3.2            | Abbreviations                                     |             |  |
| 9                    | 4              | General   |             |  |
| 10                   | 4.1            | Procedure Specification Principles                |             |  |
| 11                   | 4.2            | Forwards and Backwards Compatibility              |             |  |
| 12                   | 4.3            | Specification Notations                           |             |  |
| 13                   | 4.4            | Identifiers                                       |             |  |
| 14                   | 5              | E2AP Services.                                    |             |  |
| 15                   | 6              | Services expected from Signalling Transport       |             |  |
| 16                   | 7              | Functions of E2AP                                 |             |  |
| 17                   | 8              | E2AP Procedures                                   |             |  |
| 18                   | 8.1            | Elementary Procedures                             |             |  |
| 19                   | 8.2            | Near-RT RIC Functional Procedures.                |             |  |
| 20                   | 8.2.1          | RIC Subscription procedure                        |             |  |
| 21                   | 8.2.2          | RIC Subscription Delete procedure                 |             |  |
| 22                   | 8.2.2 <i>A</i> |   |             |  |
| 23                   | 8.2.3          | RIC Indication procedure                          |             |  |
| 23<br>24             | 8.2.4          | RIC Control procedure                             |             |  |
| 2 <del>4</del><br>25 | 8.3            | Global Procedures                                 |             |  |
| 25<br>26             | 8.3.1          | E2 Setup procedure                                |             |  |
| 20<br>27             | 8.3.2          | Reset procedure                                   |             |  |
| 27<br>28             | 8.3.3          | Error Indication.                                 |             |  |
| 20<br>29             | 8.3.4          | RIC Service Update procedure                      |             |  |
| 2 <i>9</i><br>30     | 8.3.5          | E2 Node Configuration Update procedure            |             |  |
| 30<br>31             | 8.3.6          | E2 Connection Update procedure                    |             |  |
| 32                   | 8.3.7          | E2 Removal procedure                              |             |  |
| 33                   | 9              | Elements for E2AP Communication                   |             |  |
| 34                   | 9.0            |   |             |  |
| 35                   | 9.0            | General Message Functional Definition and Content |             |  |
| 36                   | 9.1.1          | Messages for Near-RT RIC Functional Procedures    |             |  |
| 30<br>37             | 9.1.1          | Messages for Global Procedures                    |             |  |
|                      | 9.1.2          | Information Element definitions                   |             |  |
| 38<br>39             | 9.2.0          | General   |             |  |
|                      |                |   |             |  |
| 40<br>41             | 9.2.1<br>9.2.2 | Cause   |             |  |
| 41                   | 9.2.2          | Criticality Diagnostics                           |             |  |
| 42<br>42             |                | Message Type                                      |             |  |
| 43                   | 9.2.4          | Global RIC ID.                                    |             |  |
| 44<br>45             | 9.2.5          | Time to wait.                                     |             |  |
| 45<br>46             | 9.2.6          | Global E2 Node ID                                 |             |  |
| 46<br>47             | 9.2.7          | RIC Request ID.                                   |             |  |
| 47<br>40             | 9.2.8          | RAN Function ID.                                  |             |  |
| 48<br>40             | 9.2.9          | RIC Event Trigger Definition                      |             |  |
| 49<br>50             | 9.2.10         |   |             |  |
| 50                   | 9.2.11         | RIC Action Type                                   |             |  |
| 51                   | 9.2.12         | RIC Action Definition                             | 57          |  |



| 2  | A L L   | I A N C E  |       |
|----|---------|--|-------|
| 1  | 9.2.13  | RIC Subsequent Action  | 58    |
| 2  | 9.2.14  | RIC Indication Sequence Number (SN)                          | 58    |
| 3  | 9.2.15  | RIC Indication Type  | 58    |
| 4  | 9.2.16  | RIC Indication message                                       | 58    |
| 5  | 9.2.17  | RIC Indication header  | 58    |
| 6  | 9.2.18  | RIC Call Process ID  | 59    |
| 7  | 9.2.19  | RIC Control message  | 59    |
| 8  | 9.2.20  | RIC Control header   |       |
| 9  | 9.2.21  | RIC Control Ack Request                                      |       |
| 10 | 9.2.22  | Void   |       |
| 11 | 9.2.23  | RAN Function Definition                                      |       |
| 12 | 9.2.24  | RAN Function Revision  |       |
| 13 | 9.2.25  | RIC Control Outcome  |       |
| 14 | 9.2.26  | E2 Node Component Interface Type                             |       |
| 15 | 9.2.27  | E2 Node Component Configuration                              |       |
| 16 | 9.2.28  | E2 Node Component Configuration Acknowledge                  |       |
| 17 | 9.2.29  | Transport Layer Information                                  |       |
| 18 | 9.2.30  | TNL Association Usage  |       |
| 19 | 9.2.31  | RAN Function OID   |       |
| 20 | 9.2.32  | E2 Node Component ID   |       |
| 21 | 9.2.33  | Transaction ID   |       |
| 22 | 9.3     | Message and Information Element Abstract Syntax (with ASN.1) |       |
| 23 | 9.3.1   | General  |       |
| 24 | 9.3.2   | Usage of private message mechanism for non-standard use      |       |
| 25 | 9.3.3   | Elementary Procedure Definitions                             |       |
| 26 | 9.3.4   | PDU definitions  |       |
| 27 | 9.3.5   | Information Element Definitions                              |       |
| 28 | 9.3.6   | Common definitions   |       |
| 29 | 9.3.7   | Constant definitions   |       |
| 30 | 9.3.8   | Container definitions  |       |
| 31 | 9.4     | Message transfer syntax                                      |       |
| 32 | 9.5     | Timers   | ••••• |
| 33 | 10 I    | Handling of Unknown, Unforeseen and Erroneous Protocol Data  |       |
| 34 | Revisio | on history   | ••••• |
| 35 | History | y  |       |

8

9

10

11

1213



## **Foreward**

- 2 This Technical Specification has been produced by the O-RAN Alliance.
- 3 The contents of the present document are subject to continuing work within O-RAN and may change following formal
- 4 O-RAN approval. Should the O-RAN Alliance modify the contents of the present document, it will be re-released by O-
- 5 RAN with an identifying change of release date and an increase in version number as follows:
- 6 Release x.y.z
- 7 where:
  - x the first digit is incremented for all changes of substance, i.e. technical enhancements, corrections, updates, etc. (the initial approved document will have x=01).
  - y the second digit is incremented when editorial only changes have been incorporated in the document.
  - z the third digit included only in working versions of the document indicating incremental changes during the editing process.

6

9

10

11



# 1 Scope

- 2 The present document specifies the Near-RT RIC layer signalling protocol for the E2 interface.
- The E2 interface provides means for interconnecting a Near-RT RIC and an E2 Node. The E2 Application Protocol
- 4 (E2AP) supports the functions of E2 interface by signalling procedures defined in the present document. E2AP is
- developed in accordance to the general principles stated in O-RAN E2 General Aspects & Principles [2].

# 2 References

- The following documents contain provisions which, through reference in this text, constitute provisions of the present document.
  - References are either specific (identified by date of publication, edition number, version number, etc.) or non-specific.
  - For a specific reference, subsequent revisions do not apply.
- For a non-specific reference, the latest version applies. In the case of a reference to a 3GPP document (including a GSM document), a non-specific reference implicitly refers to the latest version of that document *in the same Release as the present document*.
- 15 [1] 3GPP TR 21.905: "Vocabulary for 3GPP Specifications".
- 16 [2] O-RAN-WG3.E2GAP: "O-RAN Working Group 3 Near-Real-time RAN Intelligent Controller, E2 General Aspects and Principles".
- 18 [3] O-RAN-WG3.E2SM: "O-RAN Working Group 3, Near-Real-time RAN Intelligent Controller, O-RAN Working Group 3, Near-Real-time RAN Intelligent Controller, E2 Application Protocol (E2AP)".
- ORAN-WG2.A1.GA&P: "O-RAN Working Group 2, A1 interface: General Aspects and Principles".
- 23 [6] 3GPP TS 36.401: "Evolved Universal Terrestrial Radio Access Network (E-UTRAN); 24 Architecture Description".
- 25 [7] 3GPP TS 38.401: "NG-RAN; Architecture description".
- 26 [8] 3GPP TS 36.420: "X2 general aspects and principles".
- 27 [9] O-RAN-WG1.OAM Architecture: "O-RAN Operations and Maintenance Architecture".
- 28 [10] 3GPP TS 38.410: "NG general aspects and principles".
- 29 [11] 3GPP TS 38.420: "Xn general aspects and principles".
- 30 [12] 3GPP TS 38.470: "F1 general aspects and principles".
- 31 [13] 3GPP TS 36.410: "S1 general aspects and principles".
- 32 [14] 3GPP TS 25.921: "Guidelines and principles for protocol description and error handling".
- 33 [15] ITU-T Recommendation X.691 (07/2002): "Information technology ASN.1 encoding rules: Specification of Packed Encoding Rules (PER)".
- 35 [16] ITU-T Recommendation X.680 (07/2002): "Information technology Abstract Syntax Notation One (ASN.1): Specification of basic notation".
- 37 [17] ITU-T Recommendation X.681 (07/2002): "Information technology Abstract Syntax Notation One (ASN.1): Information object specification".

|    | 2      | A L L I A N C E |   | 0 10 1 (SSIEE/ II | V02.05 |
|----|--------|-----------------|---|-------------------|--------|
| 1  | 1      | [18]            | 3GPP TS 38.300: "NR; NR and NG-RAN Overall Description; Stage                                     | 2".               |        |
| 2  | 2      | [19]            | 3GPP TS 38.413: "NG-RAN; NG Application Protocol (NGAP)"  |                   |        |
| 3  | 3      | [20]            | 3GPP TS 38.423: "NG-RAN; Xn application protocol (XnAP)"  |                   |        |
| 4  | 4      | [21]            | 3GPP TS 38.463: "NG-RAN; E1 Application Protocol (E1AP)"  |                   |        |
|    | 5      | [22]            | 3GPP TS 38.473: "NG-RAN; F1 application protocol (F1AP)"  |                   |        |
| (  | õ      | [23]            | 3GPP TS 37.473: "W1 interface; Application Protocol (W1AP)"                                       |                   |        |
| ?  | 7<br>3 | [24]            | 3GPP TS 36.413: "Evolved Universal Terrestrial Radio Access Netwo<br>Application Protocol (S1AP)" | ork (E-UTRAN); S1 |        |
| 10 |        | [25]            | 3GPP TS 36.423: "Evolved Universal Terrestrial Radio Access Netwo                                 | ork (E-UTRAN); X2 |        |

## 3 Definitions and Abbreviations

### 3.1 Definitions

A.P.A.NI

- 13 For the purposes of the present document, the terms and definitions given in 3GPP TR 21.905 [1] and the following
- 14 apply.

11

12

23

- A term defined in the present document takes precedence over the definition of the same term, if any, in 3GPP TR
- 16 21.905 [1].
- 17 **A1:** Interface between non-RT RIC and Near-RT RIC to enable policy-driven guidance of Near-RT RIC
- applications/functions, and support AI/ML workflow [4].
- 19 **E2**: Interface connecting the Near-RT RIC and one or more O-CU-CPs, one or more O-CU-UPs, and one or more O-
- 20 DUs [2].
- E2 Node: a logical node terminating E2 interface. In this version of the specification, ORAN nodes terminating E2
- 22 interface are:
  - for NR access: O-CU-CP, O-CU-UP, O-DU or any combination as defined in [9];
- for E-UTRA access: O-eNB.
- 25 **non-RT RIC (O-RAN non-real-time RAN Intelligent Controller)**: a logical function that enables non-real-time
- 26 control and optimization of RAN elements and resources, AI/ML workflow including model training and updates, and
- policy-based guidance of applications/features in Near-RT RIC.
- Near-RT RIC (O-RAN near-real-time RAN Intelligent Controller): a logical function that enables near-real-time
- 29 control and optimization of RAN elements and resources via fine-grained (e.g. UE basis, Cell basis) data collection and
- 30 actions over E2 interface.
- 31 **O-CU**: (O-RAN Central Unit): a logical node hosting RRC, SDAP and PDCP protocols [7].
- 32 **O-CU-CP**: (O-RAN Central Unit Control Plane): a logical node hosting the RRC and the control plane part of the
- 33 PDCP protocol [7].
- **O-CU-UP**: (O-RAN Central Unit User Plane): a logical node hosting the user plane part of the PDCP protocol and the
- 35 SDAP protocol [7].
- 36 **O-DU**: (O-RAN Distributed Unit): a logical node hosting RLC/MAC/High-PHY layers based on a lower layer
- 37 functional split.
- 38 **O-eNB:** an eNB Error: Reference source not found or ng-eNB [18] that supports E2 interface.



- 1 **O-RU**: (O-RAN Radio Unit): a logical node hosting Low-PHY layer and RF processing based on a lower layer
- functional split. This is similar to 3GPP's "TRP" or "RRH" but more specific in including the Low-PHY layer
- 3 (FFT/iFFT, PRACH extraction).
- 4 O1: Interface between orchestration & management entities (Orchestration/NMS) and O-RAN managed elements, for
- 5 operation and management, by which FCAPS management, Software management, File management and other similar
- 6 functions shall be achieved.
- 7 **RAN Function**: A specific Function in a E2 Node; examples include termination of network interfaces (i.e. X2 [8], F1
- 8 [12], S1 [13], Xn [11], NGc [10]) and RAN internal functions handling UEs, Cells, etc.
- 9 **RIC Service**: A Service provided on an E2 Node to provide access to messages and measurements and / or enable
- 10 control of the E2 Node from the Near-RT RIC.

### 3.2 Abbreviations

- For the purposes of the present document, the following abbreviations apply.
- 13 Near-RT RIC near-real-time RAN Intelligent Controller
- 14 non-RT RIC non-real-time RAN Intelligent Controller:
- 15 O-CU O-RAN Central Unit
- 16 O-CU-CP O-RAN Central Unit Control Plane
- 17 O-CU-UP O-RAN Central Unit User Plane
- 18 O-DU O-RAN Distributed Unit
- 19 O-RU O-RAN Radio Unit

### 4 General

20

26

27

28

29

30

32

33 34

35

36

38

# 4.1 Procedure Specification Principles

- The principle for specifying the procedure logic is to specify the functional behaviour of the terminating node exactly
- and completely. Any rule that specifies the behaviour of the originating node shall be possible to be verified with
- information that is visible within the system.
- The following specification principles have been applied for the procedure text in clause 8:
  - The procedure text discriminates between:
    - 1) Functionality which "shall" be executed.
      - The procedure text indicates that the receiving node "shall" perform a certain function Y under a certain condition. If the receiving node supports procedure X but cannot perform functionality Y requested in the REQUEST message of a Class 1 EP, the receiving node shall respond with the message used to report unsuccessful outcome for this procedure, containing an appropriate cause value.
    - 2) Functionality which "shall, if supported" be executed.
      - The procedure text indicates that the receiving node "shall, if supported," perform a certain function Y under a certain condition. If the receiving node supports procedure X, but does not support functionality Y, the receiving node shall proceed with the execution of the EP, possibly informing the requesting node about the not supported functionality.
    - Any required inclusion of an optional IE in a response message is explicitly indicated in the procedure text. If the procedure text does not explicitly indicate that an optional IE shall be included in a response message, the optional IE shall not be included. For requirements on including *Criticality Diagnostics* IE, see clause 10.



5

17

# 4.2 Forwards and Backwards Compatibility

- The forwards and backwards compatibility of the protocol is assured by mechanism where all current and future
- 3 messages, and IEs or groups of related IEs, include ID and criticality fields that are coded in a standard format that will
- 4 not be changed in the future. These parts can always be decoded regardless of the standard version.

# 4.3 Specification Notations

- 6 For the purposes of the present document, the following notations apply:
- Procedure When referring to an elementary procedure in the specification the Procedure Name is written with the first letters in each word in upper case characters followed by the word "procedure", e.g. Handover Preparation procedure.
- Message When referring to a message in the specification the MESSAGE NAME is written with all letters in upper case characters followed by the word "message", e.g. HANDOVER REQUEST message.
- When referring to an information element (IE) in the specification the *Information Element Name* is written with the first letters in each word in upper case characters and all letters in Italic font followed by the abbreviation "IE", e.g. *E-RAB ID* IE.
- Value of an IE When referring to the value of an information element (IE) in the specification the "Value" is written as it is specified in the specification enclosed by quotation marks, e.g. "Value".

# 4.4 Identifiers

- For the purposes of the present document, the following identifiers apply:
- 19 **E2 Node Component ID**: Local identifier used to uniquely identify an E2 Node component.
- 20 **Global E2 Node ID**: Global identifier of an E2 Node. Defined as the global eNB or gNB identifier and an optional
- local identifier of an CU-UP or DU which is required when and if an individual DU or CU-UP supports a direct E2
- 22 interface.
- 23 **Global RIC ID**: Global identifier of a Near-RT RIC.
- 24 **RAN Function ID**: Local identifier of a specific RAN Function within an E2 Node that supports one or more RIC
- 25 Services using a specific E2 Service Model. Note that same E2SM may be used by more than one RAN Function in the
- same E2 Node.
- RAN Function OID: RAN Function Object Identifier. Used to identify specific RAN function definition (i.e. E2SM
- used by specific RAN Function).
- 29 **RIC Action ID**: Local identifier used Near-RT RIC to identify a specific Action within a specific RIC Subscription
- Request, used by E2 Node in subsequent RIC Indication messages.
- 31 RIC Call Process ID: Local identifier used by E2 Node to identify the suspended associated procedure instance during
- a RIC Service "Insert", used by Near-RT RIC in subsequent RIC Control procedure.
- 33 **RIC Request ID**: Local identifier used to identify a specific RIC Functional procedure among all ongoing parallel
- 34 procedures of the same type initiated by the same protocol peer. Messages belonging to the same procedure use the
- 35 same RIC Request ID. The RIC Request ID is determined by the initiating peer of a Near-RT RIC Functional
- 36 Procedure.

37

- RIC Control procedure shall carry a unique RIC Request ID assigned by the Near-RT RIC
- RIC Subscription procedure shall carry a unique RIC Request ID assigned by the Near-RT RIC
- RIC Indication, RIC Subscription Delete and RIC Subscription Delete Required procedures shall use the same
   RIC Request ID as the corresponding RIC Subscription procedure



**Transaction ID**: Local identifier used to uniquely identify a Global Procedure among all ongoing parallel procedures of the same type initiated by the same protocol peer. Messages belonging to the same procedure use the same Transaction ID. The Transaction ID is determined by the initiating peer of a Global Procedure (Near-RT RIC or E2 Node).

5

10

13



# 5 E2AP Services

2 The present clause describes the services an E2 Node offers to the Near-RT RIC.

# 5.1 E2AP procedure modules

- 4 The E2 interface E2AP procedures are divided into two modules as follows:
  - 1. E2AP Near-RT RIC Functional Procedures;
- 6 2. E2AP Global Procedures;
- 7 The E2AP Near-RT RIC functional procedures module contains procedures used to pass application specific messages
- 8 between Near-RT RIC applications and a target function in an E2 node [2]
- 9 The Global Procedures module contains procedures that are not directly related to a specific application.

### 5.2 Parallel transactions

- Parallel transactions, that is, multiple ongoing E2AP procedures related to the same Application and E2 node, are
- supported.

4



# 6 Services expected from Signalling Transport

The signalling connection shall provide in sequence delivery of E2AP messages. E2AP shall be notified if the signalling connection breaks.

4



# 7 Functions of E2AP

- The functions of E2AP are described in O-RAN Working Group 3 Near-Real-time RAN Intelligent Controller, E2 2
- General Aspects and Principles [2]. 3



# 8 E2AP Procedures

# 8.1 Elementary Procedures

In the following tables, all EPs are divided into Class 1 and Class 2 EPs.

#### **Table 8.1-1: Class 1 Elementary Procedures**

| Initiated                    | Elementary                      | Initiating Message                 | Successful Outcome                       | Unsuccessful Outcome                       |
|------------------------------|---------------------------------|------------------------------------|--|--|
| by                           | Procedure                       |                                    | Response message                         | Response message                           |
| Near-RT<br>RIC               | RIC Subscription                | RIC SUBSCRIPTION REQUEST           | RIC SUBSCRIPTION RESPONSE                | RIC SUBSCRIPTION<br>FAILURE                |
| Near-RT<br>RIC               | RIC Subscription<br>Delete      | RIC SUBSCRIPTION DELETE REQUEST    | RIC SUBSCRIPTION DELETE RESPONSE         | RIC SUBSCRIPTION<br>DELETE FAILURE         |
| E2 Node                      | RIC Service Update              | RIC SERVICE<br>UPDATE              | RIC SERVICE<br>UPDATE<br>ACKNOWLEDGE     | RIC SERVICE UPDATE<br>FAILURE              |
| Near-RT<br>RIC               | RIC Control                     | RIC CONTROL<br>REQUEST             | RIC CONTROL<br>ACKNOWLEDGE               | RIC CONTROL FAILURE                        |
| E2 Node                      | E2 Setup                        | E2 SETUP REQUEST                   | E2 SETUP<br>RESPONSE                     | E2 SETUP FAILURE                           |
| E2 Node                      | E2 Node<br>Configuration Update | E2 NODE<br>CONFIGURATION<br>UPDATE | E2 NODE CONFIGURATION UPDATE ACKNOWLEDGE | E2 NODE<br>CONFIGURATION<br>UPDATE FAILURE |
| Near-RT<br>RIC               | E2 Connection<br>Update         | E2 CONNECTION<br>UPDATE            | E2 CONNECTION<br>UPDATE<br>ACKNOWLEDGE   | E2 CONNECTION UPDATE FAILURE               |
| Near-RT<br>RIC or E2<br>Node | Reset                           | RESET REQUEST                      | RESET RESPONSE                           |  |
| Near-RT<br>RIC or E2<br>Node | E2 Removal                      | E2 REMOVAL<br>REQUEST              | E2 REMOVAL<br>RESPONSE                   | E2 REMOVAL FAILURE                         |

#### **Table 8.1-2: Class 2 Elementary Procedures**

| Initiated by               | Elementary Procedure    | Initiating Message      |
|----------------------------|-------------------------|-------------------------|
| E2 Node                    | RIC Indication          | RIC INDICATION          |
| Near-RT RIC                | RIC Service Query       | RIC SERVICE QUERY       |
| E2 Node                    | RIC Subscription Delete | RIC SUBSCRIPTION DELETE |
|                            | Required                | REQUIRED                |
| E2 Node or Near-<br>RT RIC | Error Indication        | ERROR INDICATION        |

## 8.2 Near-RT RIC Functional Procedures

# 9 8.2.1 RIC Subscription procedure

#### 8.2.1.1 General

This procedure is used to establish E2 subscriptions on E2 Node consisting of an event trigger and a sequence of actions, each with a corresponding subsequent action.

6

7

8

10



#### 8.2.1.2 Successful Operation

```
@startuml
skinparam ParticipantPadding 50
skinparam BoxPadding 10
skinparam lifelineStrategy solid

participant "Near-RT RIC" as near
participant "E2 Node" as ran
near -> ran: RIC SUBSCRIPTION REQUEST
ran->near: RIC SUBSCRIPTION RESPONSE
@enduml
```

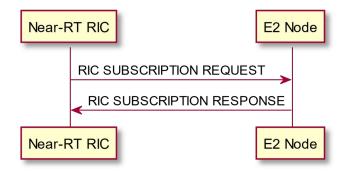


Figure 8.2.1.2-1: Near-RT RIC Subscription procedure, successful operation

The Near-RT RIC initiates the procedure by sending the RIC SUBSCRIPTION REQUEST message containing a unique RIC Request ID IE, assigned by the Near-RT RIC, to the target E2 Node. When the Near-RT RIC sends the RIC SUBSCRIPTION message, it shall start the timer  $T_{RICEVENTcreate}$ .

At reception of the RIC SUBSCRIPTION REQUEST message the target E2 Node shall:

- Determine the target function using the information in the *RAN Function ID* IE and configure the requested event trigger using information in the *RIC Subscription Details* IE.
- If one or more **Report**, **Insert** and/or **Policy** RIC service actions are included in the *RIC Subscription Details* IE then the target function shall validate the event trigger and requested action sequence and, if accepted, store the required *RIC Request ID*, *RIC Event Trigger Definition* IE and sequence of *RIC Action ID* IE, *RIC Action Type* IE, *RIC Action Definition* IE, if included, and *RIC Subsequent Action* IE, if included.

If the requested trigger and at least one required action are accepted by the target E2 Node, the target E2 Node shall reserve necessary resources and send the RIC SUBSCRIPTION RESPONSE message back to the Near-RT RIC. The target E2 Node shall include in the response message the actions for which resources have been prepared at the target E2 Node in the *RIC Actions Admitted List* IE. The target E2 Node shall include the actions that have not been admitted in the *RIC Actions Not Admitted List* IE with an appropriate cause value.

Upon reception of the RIC SUBSCRIPTION RESPONSE message the Near-RT RIC shall stop the timer  $T_{\text{RICEVENT}_{\text{Create}}}$  and terminate the Subscription Request procedure.

#### 8.2.1.3 Unsuccessful Operation

```
@startuml
skinparam ParticipantPadding 50
skinparam BoxPadding 10
skinparam lifelineStrategy solid
participant "Near-RT RIC" as near
participant "E2 Node" as ran
near -> ran: RIC SUBSCRIPTION REQUEST
```



ran->near: RIC SUBSCRIPTION FAILURE
@enduml

Near-RT RIC
E2 Node

RIC SUBSCRIPTION REQUEST

RIC SUBSCRIPTION FAILURE

E2 Node

4 5

6

7

8

1

2

Figure 8.2.1.3-1: Near-RT RIC Subscription procedure, unsuccessful operation

Near-RT RIC

If the target E2 Node does not admit at least one requested action, or detects an inconsistency in the sequence of actions or in the subsequent action definitions, or a failure occurs during the RIC Subscription procedure, the target E2 Node shall send the RIC SUBSCRIPTION FAILURE message to the Near-RT RIC with an appropriate cause value.

Upon reception of the RIC SUBSCRIPTION FAILURE message the Near-RT RIC shall stop the timer  $T_{\text{RICEVENT}_{\text{Create}}}$  and terminate the RIC Subscription procedure.

11

12

13

15

19

10

#### **Interactions with RIC Subscription Delete procedure:**

- If there is no response from the target E2 Node to the RIC SUBSCRIPTION REQUEST message before the timer
- TRICEVENTCreate expires in the Near-RT RIC, the Near-RT RIC shall cancel the RIC Subscription towards the target E2
  - Node by initiating the RIC Subscription Delete procedure with an appropriate cause value. The Near-RT RIC shall
- ignore any RIC SUBSCRIPTION RESPONSE or RIC SUBSCRIPTION FAILURE message received after the
- 17 initiation of the RIC Subscription Delete procedure and remove any reference and release any resources related to the
- 18 concerned E2.

#### 8.2.1.4 Abnormal Conditions

- 20 If the target E2 Node receives a RIC SUBSCRIPTION REQUEST message containing *RIC Subscription Details* IE that
- does not align with the Near-RT RIC Service Model [3], the target E2 Node shall send the RIC SUBSCRIPTION
- 22 FAILURE message to the Near-RT RIC with an appropriate cause value.
- 23 If the target E2 Node receives a RIC SUBSCRIPTION REQUEST message which contains a *RAN Function ID* IE that
- 24 was not previously announced as a supported RAN function in the E2 Setup procedure or the RIC Service Update
- 25 procedure, the target E2 Node shall send the RIC SUBSCRIPTION FAILURE message to the Near-RT RIC with an
- 26 appropriate cause value.
- 27 If the target E2 Node receives a RIC SUBSCRIPTION REQUEST message containing identical contents, that is, same
- 28 RAN Function ID IE, same RIC Event Trigger Definition IE and same sequence of actions, the target E2 Node shall
- 29 send the RIC SUBSCRIPTION FAILURE message to the Near-RT RIC with an appropriate cause value.

## 8.2.2 RIC Subscription Delete procedure

- 1 8.2.2.1 General
- 32 This procedure is used to delete E2 subscriptions on E2 Node.
- 33 8.2.2.2 Successful Operation

34 @startuml

35

30

skinparam ParticipantPadding 50



```
skinparam BoxPadding 10
skinparam lifelineStrategy solid

participant "Near-RT RIC" as near
participant "E2 Node" as ran

near -> ran: RIC SUBSCRIPTION DELETE REQUEST

ran->near: RIC SUBSCRIPTION DELETE RESPONSE

@enduml
```



Figure 8.2.1.2-1: Near-RT RIC Subscription Delete procedure, successful operation

The Near-RT RIC initiates the procedure by sending the RIC SUBSCRIPTION DELETE REQUEST message, containing RIC Request ID IE that was previously assigned by the Near-RT RIC during a successful RIC Subscription procedure, to the target E2 Node. When the Near-RT RIC sends the RIC SUBSCRIPTION DELETE REQUEST message, it shall start the timer  $T_{RICEVENT delete}$ .

At reception of the RIC SUBSCRIPTION DELETE REQUEST message the target E2 Node shall:

- Determine the target function using the information in the *RAN Function ID* IE and delete the corresponding RIC EVENT trigger using information in the *RIC Request ID* IE.
- If one or more subsequent actions were included in the previously received RIC Subscription, then the target function shall delete the required actions along with the corresponding *RIC Request ID* IE.

The target E2 Node shall release necessary resources and send the RIC SUBSCRIPTION DELETE RESPONSE message back to the Near-RT RIC.

Upon reception of the RIC SUBSCRIPTION DELETE RESPONSE message the Near-RT RIC shall stop the timer  $T_{RICEVENTdelete}$ , and terminate the RIC Subscription Delete procedure.

#### 8.2.2.3 Unsuccessful Operation

```
@startuml
skinparam ParticipantPadding 50
skinparam BoxPadding 10
skinparam lifelineStrategy solid

participant "Near-RT RIC" as near
participant "E2 Node" as ran

near -> ran: RIC SUBSCRIPTION DELETE REQUEST

ran->near: RIC SUBSCRIPTION DELETE FAILURE
@enduml
```





3

4

5 6

8

9

17

18

19

20

21

25

26

27 28

29

Figure 8.2.1.3-1: RIC Subscription Delete procedure, unsuccessful operation

- If the target E2 Node has no stored subscription for the same *RIC Request ID* IE included in the RIC SUBSCRIPTION DELETE REQUEST message, or a failure occurs during the RIC Subscription Delete procedure, the target E2 Node shall send the RIC SUBSCRIPTION DELETE FAILURE message to the Near-RT RIC. The message shall contain with an appropriate cause value.
  - Upon reception of the RIC SUBSCRIPTION DELETE FAILURE message the Near-RT RIC shall stop the timer  $T_{RICEVENT delete}$ , and terminate the RIC Subscription Delete procedure.

#### 8.2.2.4 Abnormal Conditions

- If the target E2 Node receives a RIC SUBSCRIPTION DELETE REQUEST message containing a *RIC Request ID* IE
- that is not known, the target E2 Node shall send the RIC SUBSCRIPTION DELETE FAILURE message to the Near-
- 12 RT RIC. The message shall contain with an appropriate cause value.
- 13 If the target E2 Node receives a RIC SUBSCRIPTION DELETE REQUEST message contains a RAN Function ID IE
- that was not previously announced as a supported RAN function in the E2 Setup procedure or the RIC Service Update
- procedure, the target E2 Node shall send the RIC SUBSCRIPTION DELETE FAILURE message to the Near-RT RIC.
- The message shall contain with an appropriate cause value.

### 8.2.2A RIC Subscription Delete Required procedure

#### 8.2.2A.1 General

This procedure is used to enable the E2 Node to request deletion of the existing RIC Subscriptions in the E2 Node previously created for the Near-RT RIC.

#### 8.2.2A.2 Successful Operation

```
@startuml
skinparam ParticipantPadding 50
skinparam BoxPadding 10
skinparam lifelineStrategy solid

participant "Near-RT RIC" as near
participant "E2 Node" as ran

ran->near: RIC SUBSCRIPTION DELETE REQUIRED

near<-->ran: RIC Subscription Delete procedure

@enduml
```





3

4 5

6 7

8

9

10

11

15

Figure 8.2.2A.2-1: Near-RT RIC Subscription Delete Required procedure, successful operation

The E2 Node initiates the procedure by sending the RIC SUBSCRIPTION DELTE REQUIRED message, containing *RIC Request ID* IE that was previously assigned by the Near-RT RIC during a successful RIC Subscription procedure, to the Near-RT RIC. The message shall contain an appropriate cause value for each RIC Subscription requesting to remove. The E2 Node shall not remove RIC Subscription(s) on its own until indicated by the Near-RT RIC to do so.

- At reception of the RIC SUBSCRIPTION DELETE REQUIRED message, for each RIC Subscription associated with the included *RIC Request ID* IE and *RAN Function ID* IE, the Near-RT RIC may:
  - Release necessary resources related to that RIC Subscription and initiate the RIC Subscription Delete procedure toward the E2 Node.

#### 8.2.2A.3 Abnormal Conditions

- 12 If the Near-RT RIC receives a RIC SUBSCRIPTION DELETE REQUIRED message for which the included *RIC*
- 13 Request ID IE and RAN Function ID IE are not associated with the previously subscribed, the Near-RT RIC shall ignore
- the message.

#### 8.2.3 RIC Indication procedure

#### 16 8.2.3.1 General

- The purpose of the RIC Indication procedure is to transfer a message associated with a **Report** and/or **Insert** RIC
- 18 Service to the Near-RT RIC corresponding to a previously successful RIC Subscription procedure and the
- 19 corresponding detection of the Event Trigger.

#### 20 8.2.3.2 Successful Operation





Figure 8.2.3.2-1: Near-RT RIC Indication procedure, successful operation

An E2 Node initiates the procedure by sending RIC INDICATION message containing the *RIC Request ID* IE, that was previously assigned by the Near-RT RIC during a successful RIC Subscription procedure, along with associated, *RAN Function ID* IE, *RIC Action ID* IE, optionally sequence number *RIC Indication SN* IE, *RIC Indication Type* IE, *RIC Indication Message* IE and optionally a *RIC Call Process ID* IE, assigned by the E2 Node, to the Near-RT RIC.

- If the RIC Indication message is in response to RIC Subscription with RIC Action Type IE as "Insert", then the E2 Node shall provide the RIC Call Process ID IE within the RIC INDICATION message, and the E2 Node shall store current call state, start the associated RIC Time to Wait timer, and suspend further processing of the associated RAN function.

The receiving Near-RT RIC shall use the *RIC Request ID* IE to route the Indication to the Near-RT RIC functionality that originated the corresponding RIC Subscription procedure.

If present, the receiving Near-RT RIC may use the *RIC Call Process ID* IE in a subsequent RIC Control procedure.

If the E2 Node had stored an associated *RIC Subsequent Action* IE then, after successful transmission of the RIC INDICATION message, the originating E2 Node shall progress accordingly:

- If the *RIC Subsequent Action Type* IE was set to Continue or Halt, the associated *RIC Time to Wait* timer has not yet expired, and a RIC CONTROL REQUEST message is received with the same *RIC Call Process ID* IE, then the E2 Node shall use the RIC CONTROL REQUEST information along with the stored call state and continue to execute any remaining actions in the sequence of RIC Actions defined in the RIC Subscription procedure prior to resuming normal functionality of the associated RAN function.
- If the *RIC Subsequent Action Type* IE was set to Continue and the associated *RIC Time to Wait* timer has expired, then the E2 Node shall use the stored call state and continue to execute any remaining actions in the sequence of RIC Actions defined in the RIC Subscription procedure prior to resuming normal functionality of the associated RAN function.
- If the *RIC Subsequent Action Type* IE was set to Halt and the associated *RIC Time to Wait* timer has expired, then the E2 Node shall abort normal functionality of the associated RAN function. In this case, any remaining actions in the sequence of RIC Actions defined in the RIC Subscription procedure shall also be aborted.



| Subsequent Action | RIC Time to Wait timer | Condition  | Outcome  |
|-------------------|------------------------|--|--|
| Continue or Halt  | required               | E2 Node detected<br>the event trigger in<br>the RIC Event<br>Trigger Definition<br>IE.                   | RIC INDICATION message shall provide the <i>RIC Call Process ID</i> IE and E2 Node shall store current call state, start the associated <i>RIC Time to Wait</i> timer, and suspend further processing of the associated RAN function.  |
| Continue or Halt  | not yet expired        | E2 Node received<br>the RIC<br>CONTROL<br>REQUEST<br>message with the<br>same RIC call<br>process ID IE. | E2 Node shall use the RIC CONTROL information along with the stored call state and continue to execute any remaining actions in the sequence of RIC Actions defined in the RIC Subscription procedure prior to resuming normal functionality of the associated RAN function. |
| Continue          | expired                |  | E2 Node shall use the stored call state and continue to execute any remaining actions in the sequence of RIC Actions defined in the RIC Subscription procedure prior to resuming normal functionality of the associated RAN function.  |
| Halt              | expired                |  | E2 Node shall abort normal functionality of the associated RAN function.   |

Table 8.2.3.2-1: RIC Indication procedure, successful operation

3 8.2.3.3 Unsuccessful Operation

4 Not applicable.


1

2

- 5 8.2.3.4 Abnormal Conditions
- 6 Not applicable.
- 7 8.2.4 RIC Control procedure
- 8 8.2.4.1 General
- 9 The purpose of the RIC Control procedure is to initiate or resume a specific functionality in the E2 Node.
- 8.2.4.2 Successful Operation

```
11  @startuml
12
13  | skinparam ParticipantPadding 5
14  | skinparam BoxPadding 10
15  | skinparam lifelineStrategy solid
16  | participant "Near-RT RIC" as near
17  | participant "E2 Node" as ran
18  | ran<-near: RIC CONTROL REQUEST
19  | ran-->near: RIC CONTROL ACKNOWLEDGE
20
21  | @enduml
```



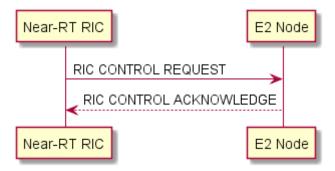

8

9

10

13

14

15

16

17

18

19

20

21

22 23

25

26 27

28

30

Figure 8.2.4.2-1: RIC Control procedure, successful operation

- The Near-RT RIC initiates the procedure by sending the RIC CONTROL REQUEST message containing the *RIC*Request *ID* IE, assigned by the Near-RT RIC, *RAN Function ID* IE, optionally *RIC Call Process ID* IE, *RIC Control Header* IE, *RIC Control Message* IE and optionally *RIC Control Ack Request* IE to the E2 Node.
- When the Near-RT RIC sends the RIC CONTROL REQUEST message and the optional *RIC Control Ack Request* IE has been set to "Ack", or is not present, the Near-RT RIC, it shall start the timer T<sub>RICcontrol</sub>.
  - At reception of the RIC CONTROL REQUEST message the target E2 Node shall:
    - Determine the target function using the information in the *RAN Function ID* IE and initiate the requested RIC Control procedure action using information in the *RIC Control Message* IE.
    - If the *RIC Call Process ID* IE is included in the RIC CONTROL REQUEST message, the E2 Node shall use this IE to identify a specific call process that was previously announced in the RIC INDICATION message and, after confirming that the request has arrived prior to the *RIC Time to Wait* timer had expired, clear the timer.
    - If the RIC CONTROL REQUEST message contains the optional *RIC Control Ack Request* IE set to "Ack", or if
      the optional *RIC Control Ack Request* IE is not present, and the E2 Node has successfully processed the
      requested RIC Control procedure action, then the E2 Node shall respond with the RIC CONTROL
      ACKNOWLEDGE message and continue call processing.
    - If the RIC CONTROL REQUEST message contains the optional *RIC Control Ack Request* IE set to "NoAck" and the E2 Node has successfully processed the requested RIC Control procedure action, then the E2 Node shall continue call processing.
    - Upon reception of the RIC CONTROL ACKNOWLEDGE message, the Near-RT RIC shall stop the timer  $T_{RIC control}$  and terminate the RIC Control procedure. The Near-RT RIC may use the information contained in the optional *RIC Control Outcome* IE to determine subsequent actions.

#### 8.2.4.3 Unsuccessful Operation

```
@startuml
skinparam ParticipantPadding 5
skinparam BoxPadding 10
skinparam lifelineStrategy solid
participant "Near-RT RIC" as near
participant "E2 Node" as ran
ran<-near: RIC CONTROL REQUEST
ran->near: RIC CONTROL FAILURE
@enduml
```



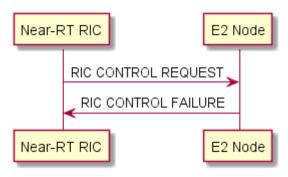


Figure 8.2.4.3-1: RIC Control procedure, unsuccessful operation

- If the RIC CONTROL REQUEST message contains an optional *RIC Call Process ID* IE that is invalid then the E2 Node shall respond with the RIC CONTROL FAILURE message with an appropriate cause value.
- If the RIC CONTROL REQUEST message contains the optional *RIC Call Process ID* IE for which the associated *RIC Time to Wait* timer had expired, then the E2 Node shall respond with the RIC CONTROL FAILURE message with an appropriate cause value.
- If the E2 Node fails to execute the requested RIC Control procedure E2SM specific action, then the E2 Node shall respond with the RIC CONTROL FAILURE message with an appropriate cause value.
- If the E2 Node detects an encoding or functional error in the E2SM specific IEs contained in the RIC CONTROL REQUEST message, then the E2 Node shall respond with the RIC CONTROL FAILURE message with an appropriate
- 12 cause value.
- 13 If the E2 Node receives a RIC CONTROL REQUEST message which contains a *RAN Function ID* IE that was not
- previously announced as a supported RAN function in the E2 Setup procedure or the RIC Service Update procedure, or
- the E2 Node does not support the specific RIC Control procedure action, then the E2 Node shall respond with the RIC
- 16 CONTROL FAILURE message with an appropriate cause value..
- 17 Upon reception of the RIC CONTROL FAILURE message the Near-RT RIC shall stop the timer T<sub>RICcontrol</sub>, if running,
- and terminate the RIC Control procedure. The Near-RT RIC may use the information contained in the *Cause* IE and
- 19 optional *RIC Control Outcome* IE to determine subsequent actions.

#### 20 8.2.4.4 Abnormal Conditions

- 21 Upon reception of the ERROR INDICATION message including the *RIC Request ID* IE corresponding to the previous
  - RIC CONTROL REQUEST message, the Near-RT RIC shall stop the timer T<sub>RICcontrol</sub>, if running, and terminate the RIC
- 23 Control procedure.

22

27

28

- 24 If the timer T<sub>RIC control</sub> was set when sending the RIC CONTROL REQUEST message and there was no response from the
- 25 E2 node before the timer has expired, the Near-RT RIC shall send an ERROR INDICATION with the appropriate value
- for the *Cause* IE.

#### 8.3 Global Procedures

#### 8.3.1 E2 Setup procedure

- 29 8.3.1.1 General
- The purpose of the E2 Setup procedure is to establish the signaling connection between E2 Node and Near-RT RIC.
- This procedure erases any existing application level configuration data in the two nodes and replaces it by the one
- 32 received. This procedure also resets the E2 interface like a Reset procedure would do.
- 33 Note that this procedure performs the basic interface setup and transfers E2 Node specific configuration information to
- 34 the Near-RT RIC.
- 35 This procedure shall be initiated by the E2 Node.



2

1

2

3 4 5


13 14

#### 8.3.1.2 Successful Operation

```
@startuml
skinparam ParticipantPadding 50
skinparam BoxPadding 10
skinparam lifelineStrategy solid

participant "Near-RT RIC" as near
participant "E2 Node" as ran

ran->near: E2 SETUP REQUEST
ran<-near: E2 SETUP RESPONSE
```

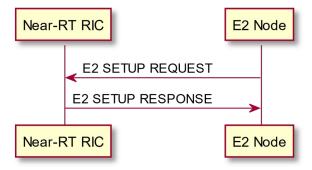

15 16

17

18

27

28

29

30

33

37

40

41

Figure 8.3.1.2-1: E2 Setup procedure, successful operation

- An E2 Node initiates the procedure by sending the E2 SETUP REQUEST message including the appropriate data to a Near-RT RIC. The Near-RT RIC replies with the E2 SETUP RESPONSE message including the appropriate data.
- 19 If the Near-RT RIC has successfully processed the *RAN Functions Added List* IE, also present in the RIC SERVICE
- 20 UPDATE message, then Near-RT RIC shall contain, in the E2 SETUP RESPONSE message, the RAN Functions
- 21 Accepted List IE and/or the RAN Functions Rejected List IE, also present in the RIC SERVICE UPDATE
- 22 ACKNOWLEDGE message.
- If the Near-RT RIC has successfully processed the E2 Node Component Configuration Addition List IE, also present in
- the E2 NODE CONFIGURATION UPDATE message, then Near-RT RIC shall contain, in the E2 SETUP RESPONSE
- 25 message, the E2 Node Component Configuration Addition Acknowledge List IE, also present in the E2 NODE
- 26 CONFIGURATION UPDATE ACKNOWLEDGE message.
  - Note that the RIC Service Update procedure is defined in section 8.3.4 and the E2 Node Configuration Update procedure is defined in section 8.3.5.

#### 8.3.1.3 Unsuccessful Operation


```
@startuml
skinparam ParticipantPadding 50
skinparam BoxPadding 10
skinparam lifelineStrategy solid

participant "Near-RT RIC" as near
participant "E2 Node" as ran

ran->near: E2 SETUP REQUEST
ran<-near: E2 SETUP FAILURE

@enduml
```



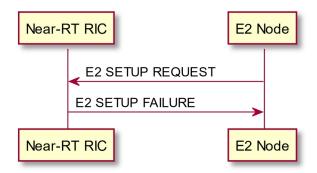

Я

15

16

19

21

22

23

26

27

33

Figure 8.3.1.3-1: E2 Setup procedure, unsuccessful operation

- If the Near-RT RIC cannot accept the setup it shall respond with an E2 SETUP FAILURE message with an appropriate cause value. The Near-RT RIC may provide an alternative *Transport Layer Information* IE for the E2 Node to use when reinitiating the E2 Setup procedure towards the Near-RT RIC.
- If the E2 SETUP FAILURE message includes the *Time To Wait* IE, the E2 node shall wait at least for the indicated time before reinitiating the E2 Setup procedure towards the Near-RT RIC.

#### 8.3.1.4 Abnormal Conditions

- 9 If the first message received for a specific TNL association is not an E2 SETUP REQUEST, E2 SETUP RESPONSE,
- 10 E2 SETUP FAILURE or E2 NODE CONFIGURATION UPDATE message then this shall be treated as a logical error.
- If the E2 node does not receive either the E2 SETUP RESPONSE message or the E2 SETUP FAILURE message, the
- 12 E2 node may reinitiate the E2 Setup procedure towards the same Near-RT RIC using the same TNL association,
- 13 provided that the content of the new E2 SETUP REQUEST message is identical to the content of the previously
- 14 unacknowledged E2 SETUP REQUEST message.

### 8.3.2 Reset procedure

#### 8.3.2.1 General

- 17 The purpose of the Reset procedure is to align the resources in E2 Node and Near-RT RIC in the event of an abnormal
- 18 failure. The procedure resets the E2 interface. This procedure doesn't affect the application level configuration data
  - exchanged during the E2 Setup procedure, E2 Node Configuration Update procedure and RIC Service Update
- 20 procedure.

#### 8.3.2.2 Successful Operation


This procedure may be initiated by either Near-RT RIC or E2 Node.

```
@startuml
skinparam ParticipantPadding 5
skinparam BoxPadding 10
skinparam lifelineStrategy solid

participant "Near-RT RIC" as near
participant "E2 Node" as ran

ran->near: RESET REQUEST
ran<-near: RESET RESPONSE
@enduml
```



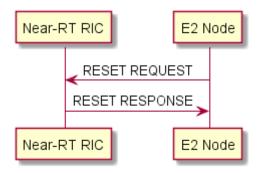

1 2 **Figu** 

@startuml

Figure 8.3.2.2-1: Reset, successful operation (E2 Node Initiated)


14

3

```
skinparam ParticipantPadding 5
skinparam BoxPadding 10
skinparam lifelineStrategy solid
participant "Near-RT RIC" as near
participant "E2 Node" as ran
```

ran<-near: RESET REQUEST ran->near: RESET RESPONSE

@enduml

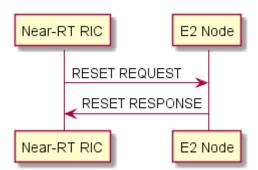

17 18

20

22

Figure 8.3.2.2-2: Reset, successful operation (Near-RT RIC Initiated)

- When the Reset procedure is initiated, the Near-RT RIC and E2 Node shall:
  - Delete any pre-established RIC Subscriptions,
  - Gracefully terminate any ongoing Near-RT RIC call processes using **INSERT**, **CONTROL** or **POLICY** services while ensuring that impact to ongoing calls for connected UE is minimized.
- After the Reset has been completed, the Near-RT RIC shall re-issue any required Subscriptions.
- 24 Interactions with other procedures:
- If the RESET REQUEST message is received, any other ongoing procedure (except for another Reset procedure) on the same E2 interface related to ongoing RIC Services shall be aborted.
- 27 8.3.2.3 Unsuccessful Operation
- 28 Void.



5

8

9

10

13

15 16 17

18

19

20

21

24

25

26

27 28

29 30

31 32

33

34

#### 8.3.2.4 Abnormal Conditions

- If the initiating node does not receive the RESET RESPONSE message, the initiating node may reinitiate the Reset
- 3 procedure towards the same target node, provided that the content of the new RESET REQUEST message is identical to
- 4 the content of the previously unacknowledged RESET REQUEST message.

#### 8.3.3 Error Indication

#### 6 8.3.3.1 General

The Error Indication procedure is initiated by either the E2 Node or the Near-RT RIC to report detected errors in one

incoming message, provided they cannot be reported by an appropriate failure message.

#### 8.3.3.2 Successful Operation

```
@startuml
skinparam ParticipantPadding 5
skinparam BoxPadding 10
skinparam lifelineStrategy solid
participant "Near-RT RIC" as near
participant "E2 Node" as ran
ran->near: ERROR INDICATION
@enduml
```

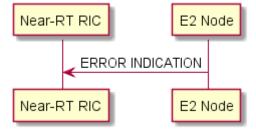


Figure 8.3.3.2-1: Error Indication, (E2 Node initiated) successful operation.

```
@startuml
skinparam ParticipantPadding 5
skinparam BoxPadding 10
skinparam lifelineStrategy solid
participant "Near-RT RIC" as near
participant "E2 Node" as ran
ran<-near: ERROR INDICATION
@enduml
```

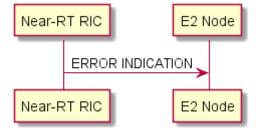


Figure 8.3.3.2-2: Error Indication, (Near-RT RIC Initiated) successful operation.

When the conditions defined in clause 10 are fulfilled, the Error Indication procedure is initiated by an ERROR INDICATION message sent from the node detecting the error situation.



- The ERROR INDICATION message shall contain at least either the *Cause* IE or the *Criticality Diagnostics* IE and may include *RAN Function ID* IE and *RIC Request ID* IE.
- 3 8.3.3.3 Unsuccessful Operation
- 4 Not applicable.
- 5 8.3.3.4 Abnormal Conditions
- 6 Not applicable.
- 7 8.3.4 RIC Service Update procedure
- 8 8.3.4.1 General

26

27

28

29

33

34 35

The purpose of the RIC Service Update procedure is to update application level configuration data needed for E2 Node and Near-RT RIC to interoperate correctly over the E2 interface.

#### 8.3.4.2 Successful Operation

```
@startuml
12
       skinparam ParticipantPadding 5
15
       skinparam BoxPadding 10
16
       skinparam lifelineStrategy solid
17
       participant "Near-RT RIC" as near
18
       participant "E2 Node" as ran
19
       ran<--near: RIC SERVICE QUERY
20
       ran->near: RIC SERVICE UPDATE
21
       ran<-near: RIC SERVICE UPDATE ACKNOWLEDGE
22
23
       @enduml
```

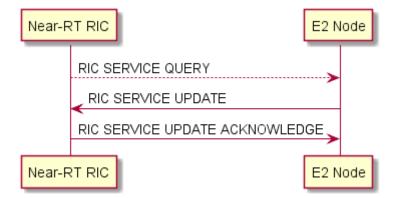


Figure 8.3.4.2-1: RIC Service Update procedure, successful operation

An E2 Node initiates the procedure by sending a RIC SERVICE UPDATE message to the Near-RT RIC. Such message shall include an appropriate set of up-to-date Near-RT RIC service-related configuration data, including, but not limited to, the complete lists of added, modified and deleted supported Near-RT RIC Service functions that E2 Node has just taken into operational use along with a revision counter for each item in each list.

- Upon reception of a RIC SERVICE UPDATE message, Near-RT RIC shall update the information for E2 Node as follows:
- 32 Update of Supported Near-RT RIC service Information:
  - If the *RAN Function Added List* IE is contained in the RIC SERVICE UPDATE message, Near-RT RIC shall add each listed accepted function information according to the information in the *RAN Function ID* IE and *RAN Function Definition* IE and store the corresponding *RAN Function Revision* IE.

12

19 20

21

22

23

24

25

26

27

28

29

35

36

38

39 40

- If the *RAN Function Modified List* IE is contained in the RIC SERVICE UPDATE message, Near-RT RIC shall modify accepted information of supported functions according to the information in the *RAN Function Definition* IE and update the corresponding *RAN Function Revision* IE.
- If the *RAN Function Deleted List* IE is contained in the RIC SERVICE UPDATE message, Near-RT RIC shall delete information of RAN Function indicated by the *RAN Function ID* IE along with the corresponding *RAN Function Revision* IE.
- These changes may be processed in the Near-RT-RIC and may be used when issuing RIC SUBSCRIPTION REQUEST and RIC CONTROL to provide valid *RAN Function ID* IE.
- If at least one RAN Function update request present in the RIC SERVICE UPDATE message is successful, then the Near-RT RIC shall send the RIC SERVICE UPDATE ACKNOWLEDGE message to the initiating E2 Node with the *RAN Functions Accepted List* IE indicating accepted requests to add, modify, and/or delete the corresponding RAN
  - Function information and, if required, the *RAN Functions Rejected List* IE indicating rejected requests to add, modify,
- and/or delete the corresponding RAN Function information.
- 14 If the Near-RT RIC receives a RIC SERVICE UPDATE message without any IE except for *Message Type* IE, then the
- 15 Near-RT RIC shall reply with RIC SERVICE UPDATE ACKNOWLEDGE message without any IE except for
- 16 *Message Type* IE without performing any updates to the existing configuration.
- Optionally, the RIC SERVICE UPDATE message to the Near-RT RIC may have been sent as a response to the Near-RT RIC initiated RIC SERVICE QUERY message. Upon reception of the RIC SERVICE QUERY message:
  - If the *RAN Function Accepted List* IE is not present, the E2 Node shall send the RIC SERVICE UPDATE message with the complete list of supported RAN Functions in the *RAN Function Added List* IE
  - If the *RAN Function Accepted List* IE is present and aligns with the list of supported RAN Functions at the E2 Node, the E2 Node shall send the RIC SERVICE UPDATE message without the *RAN Function Added List* IE, *RAN Function Modified List* IE and *RAN Function Deleted List* IE.
  - If the *RAN Function Accepted List* IE is present and the list of RAN Functions in the *RAN Function Accepted List* IE does not align with the list of supported RAN Functions at the E2 node, the E2 Node shall send the RIC SERVICE UPDATE message with the *RAN Function Added List* IE, *RAN Function Modified List* IE and/or *RAN Function Deleted List* IE to ensure realignment of RAN Functions between the E2 Node and the Near-RT RIC.


#### 8.3.4.3 Unsuccessful Operation

```
@startuml

skinparam ParticipantPadding 5
skinparam BoxPadding 10
skinparam lifelineStrategy solid
participant "Near-RT RIC" as near
participant "E2 Node" as ran
ran<--near: RIC SERVICE QUERY
ran->near: RIC SERVICE UPDATE
ran<-near: RIC SERVICE UPDATE
penduml
```

© 2022 by the O-RAN ALLIANCE e.V. Your use is subject to the copyright statement on the cover page of this specification .



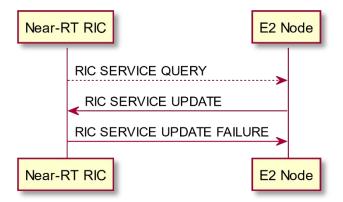

8

11

13

14

15

16

18

Figure 8.3.4.3-1: RIC Service Update procedure, unsuccessful operation

- If the Near-RT RIC cannot accept the update it shall respond with a RIC SERVICE UPDATE FAILURE message and appropriate cause value.
- If the RIC SERVICE UPDATE FAILURE message includes the *Time To Wait* IE, the E2 Node shall wait at least for the indicated time before reinitiating the RIC Service Update procedure towards the same Near-RT RIC. Both nodes shall continue to operate the E2 with their existing Near-RT RIC Service data.

#### 8.3.4.4 Abnormal Conditions

- 9 If the E2 Node after initiating a RIC Service Update procedure receives neither the RIC SERVICE UPDATE
- 10 ACKNOWLEDGE message nor the RIC SERVICE UPDATE FAILURE message, the E2 Node may reinitiate the RIC
  - Service Update procedure towards the same Near-RT RIC, provided that the content of the new RIC SERVICE
- 12 UPDATE message is identical to the content of the previously unacknowledged RIC SERVICE UPDATE message.

# 8.3.5 E2 Node Configuration Update procedure

#### 8.3.5.1 General

- The purpose of the E2 Node Configuration Update procedure is to update application level E2 Node configuration data needed for E2 Node and Near-RT RIC to interoperate correctly over the E2 interface and to support E2 Node initiated
- 17 TNL association removal.

#### 8.3.5.2 Successful Operation



3

4 5

8

9

10

11

12

13

14

15

16

17

18

19 20

21

22

23

24

25

26 27

28

29

33

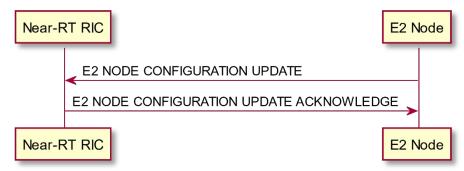


Figure 8.3.5.2-1: E2 Node Configuration Update procedure, successful operation

An E2 Node initiates the procedure by sending a E2 NODE CONFIGURATION UPDATE message to the Near-RT RIC. Such message shall include an appropriate set of up-to-date E2 Node-related configuration data that the E2 Node has just taken into operational use.

Upon reception of the E2 NODE CONFIGURATION UPDATE message, Near-RT RIC shall update the information for the E2 Node as follows:

Update of E2 Node configuration information in Near-RT RIC:

- If E2 Node Component Configuration Addition List IE is contained in the E2 NODE CONFIGURATION UPDATE message, Near-RT RIC shall add the E2 Node Component Configuration information accordingly.
- If E2 Node Component Configuration Update List IE is contained in the E2 NODE CONFIGURATION UPDATE message, Near-RT RIC shall modify the E2 Node Component Configuration information accordingly.
- If E2 Node Component Configuration Removal List IE is contained in the E2 NODE CONFIGURATION UPDATE message, Near-RT RIC shall remove the E2 Node Component Configuration information accordingly

If Global E2 Node ID IE is contained in the E2 NODE CONFIGURATION UPDATE message for a newly established SCTP association, the Near-RT RIC will associate this association with the related E2 Node.

If the E2 NODE CONFIGURATION UPDATE message includes E2 Node TNL Association To Remove List IE, and the Endpoint IP address IE and the Port Number IE for both TNL endpoints of the TNL association(s) are included in the E2 Node TNL Association To Remove List IE, the Near-RT RIC shall, if supported, consider that the TNL association(s) indicated by both received TNL endpoints will be removed by the E2 Node. If the Endpoint IP address IE, or the Endpoint IP address IE and the Port Number IE for one or both of the TNL endpoints is included in the E2 Node TNL Association To Remove List IE in E2 NODE CONFIGURATION UPDATE message, the Near-RT RIC shall, if supported, consider that the TNL association(s) indicated by the received endpoint IP address(es) will be removed by the E2 Node.

After successful update of requested information, Near-RT RIC shall reply with the E2 NODE CONFIGURATION UPDATE ACKNOWLEDGE message to inform the initiating E2 Node that the requested update of application data was performed successfully. In case the Near-RT RIC receives a E2 NODE CONFIGURATION UPDATE message without any IE except for *Message Type* IE and *Transaction ID* IE it shall reply with the E2 NODE CONFIGURATION UPDATE ACKNOWLEDGE message without performing any updates to the existing

configuration. In the case where the Near-RT RIC receives an E2 Node Component Configuration Update Item IE for 30 31 an E2 Node component that was not previously declared by an E2 Node Component Configuration Addition Item IE 32

then the Near-RT RIC shall indicate to the E2 Node that the update failed with appropriate cause value.

#### 8.3.5.3 Unsuccessful Operation

```
@startuml
       skinparam ParticipantPadding 5
37
       skinparam BoxPadding 10
38
       skinparam lifelineStrategy solid
39
       participant "Near-RT RIC" as near
       participant "E2 Node" as ran
40
41
       ran->near: E2 NODE CONFIGURATION UPDATE
       ran<-near: E2 NODE CONFIGURATION UPDATE FAILURE
```



3

4

5

6

12

16

18

20

1 @enduml

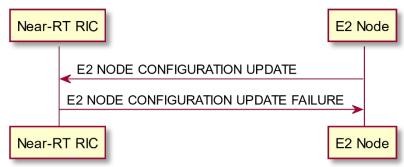


Figure 8.3.5.3-1: E2 Node Configuration Update procedure, unsuccessful operation

- If Near-RT RIC cannot accept the E2 NODE CONFIGURATION UPDATE message it shall respond with the E2 NODE CONFIGURATION UPDATE FAILURE message and appropriate cause value.
- If the E2 NODE CONFIGURATION UPDATE FAILURE message includes the *Time To Wait* IE the E2 Node shall wait at least for the indicated time before reinitiating the E2 Node Configuration Update procedure towards the same Near-RT RIC. Both nodes shall continue to operate with their existing configuration data.

#### 10 8.3.5.4 Abnormal Conditions

- 11 If an E2 Node, after initiating the E2 Node Configuration Update procedure, receives neither the E2 NODE
  - CONFIGURATION UPDATE ACKNOWLEDGE message nor the E2 NODE CONFIGURATION UPDATE
- 13 FAILURE message, the E2 Node may reinitiate the E2 Node Configuration Update procedure towards the same Near-
- 14 RT RIC, provided that the content of the new E2 NODE CONFIGURATION UPDATE message is identical to the
- 15 content of the previously unacknowledged E2 NODE CONFIGURATION UPDATE message.

#### 8.3.6 E2 Connection Update procedure

#### 17 8.3.6.1 General


- The purpose of the E2 Connection Update procedure is to allow the Near-RT RIC to update the E2 interface connection
- 19 between the E2 Node and Near-RT RIC.

#### 8.3.6.2 Successful Operation

```
@startuml

| Skinparam ParticipantPadding 5 | Skinparam BoxPadding 10 | Skinparam lifelineStrategy solid | Participant "Near-RT RIC" as near | Participant "E2 Node" as ran | near->ran: E2 CONNECTION UPDATE | near<-ran: E2 CONNECTION UPDATE | Openduml | Openduml | Openduml | Openduml | Openduml | Opendum |
```



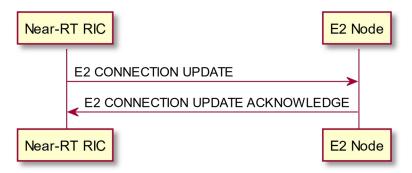

3

4 5

6

21

22

23 24

25

26

27

Figure 8.3.6.2-1: E2 Connection Update procedure, successful operation


- The Near-RT RIC initiates the procedure by sending a E2 CONNECTION UPDATE message to the E2 Node. Such message shall include an appropriate set of up-to-date E2 interface connection data that the E2 Node shall take into account when modifying the E2 interface connection.
- Upon reception of a E2 CONNECTION UPDATE message, the E2 Node shall update as follows:
- If *E2 Connection To Add List* IE is contained in the E2 CONNECTION UPDATE message, then the E2 Node shall, if supported, use it to establish additional TNL Association(s) and configure for use for RIC services and/or E2 support functions according to the *TNL Association Usage* IE in the message.
- If *E2 Connection To Modify List* IE is contained in the E2 CONNECTION UPDATE message, then the E2 Node shall, if supported, use it to modify the existing usage for RIC services and/or E2 support functions, according to the *TNL Association Usage* IE in the message.
- If *E2 Connection To Remove List* IE is contained in the E2 CONNECTION UPDATE message, then the E2 Node shall, if supported, use it to remove the existing connection(s). If only one connection remains after successful removal of other connections, the E2 Node shall use this remaining connection for all the RIC services and E2 support functions.
- After successful update of E2 interface connection(s), the E2 Node shall reply with the E2 CONNECTION UPDATE
  ACKNOWLEDGE message to inform the initiating Near-RT RIC that the requested E2 connection update was
  performed successfully. In case the E2 Node receives a E2 CONNECTION UPDATE message without any IE except
  for *Message Type* IE and *Transaction ID* IE, it shall reply with the E2 CONNECTION ACKNOWLEDGE message
  without performing any updates to the existing connections.
  - of an already setup E2 interface instance after the TNL association has become operational, and the Near-RT RIC shall associate the TNLA to the E2 interface instance using the included *Global E2 Node ID*. An empty E2 NODE CONFIGURATION UPDATE message (i.e. without any IE expect for *Message Type* IE and *Transaction ID* IE) shall be sent as the first E2AP procedure on the new TNLA, if the E2 Node does not have any Configuration to be updated to Near-RT RIC.

E2 NODE CONFIGURATION UPDATE procedure shall be the first E2AP procedure triggered on an additional TNLA

#### 8.3.6.3 Unsuccessful Operation

```
@startuml
29
30 | skinparam ParticipantPadding 5
31 | skinparam BoxPadding 10
32 | skinparam lifelineStrategy solid
33 | participant "Near-RT RIC" as near
34 | participant "E2 Node" as ran
35 | near->ran: E2 CONNECTION UPDATE
36 | near<-ran: E2 CONNECTION UPDATE FAILURE
37
38 | @enduml
```



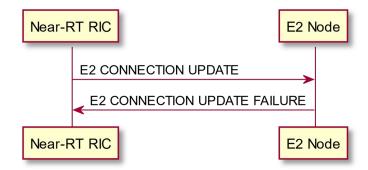

8

14

15

19

20

Figure 8.3.6.3-1: E2 Connection Update procedure, unsuccessful operation

- If the E2 Node cannot accept the update, it shall respond with a E2 CONNECTION UPDATE FAILURE message and appropriate cause value.
- If the E2 CONNECTION UPDATE FAILURE message includes the *Time To Wait* IE, the Near-RT RIC shall wait at least for the indicated time before reinitiating the E2 Connection Update procedure towards the same E2 Node. Both nodes shall continue to operate with their existing connection(s).

#### 8.3.6.4 Abnormal Conditions

- 9 If the Near-RT RIC, after initiating E2 Connection Update procedure, receives neither the E2 CONNECTION
- 10 UPDATE ACKNOWLEDGE message nor the E2 CONNECTION UPDATE FAILURE message, the Near-RT RIC
- may reinitiate the E2 Connection Update procedure towards the same E2 Node, provided that the content of the new E2
- 12 CONNECTION UPDATE message is identical to the content of the previously unacknowledged E2 CONNECTION
- 13 UPDATE message.

#### 8.3.7 E2 Removal procedure

#### 8.3.7.1 General

- The purpose of the E2 removal procedure is to remove the E2 signaling connection between the Near-RT RIC and the
- 17 E2 node in a controlled manner. If successful, this procedure erases any existing application level configuration data in
- the Near-RT RIC and the E2 node, respectively.

#### 8.3.7.2 Successful Operation

This procedure may be initiated by either Near-RT RIC or E2 Node.

```
21  |@startuml
22  | skinparam ParticipantPadding 5
23  | skinparam BoxPadding 10
24  | skinparam lifelineStrategy solid
25  |
26  | participant "Near-RT RIC" as near
27  | participant "E2 Node" as ran
28  |
29  | ran->near: E2 REMOVAL REQUEST
30  | ran<-near: E2 REMOVAL RESPONSE
31  | @enduml</pre>
```



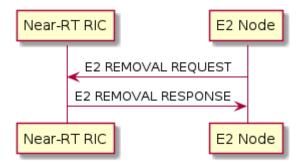


Figure 8.3.7.2-1: E2 Removal, successful operation (E2 Node Initiated)

```
@startuml
skinparam ParticipantPadding 5
skinparam BoxPadding 10
skinparam lifelineStrategy solid

participant "Near-RT RIC" as near
participant "E2 Node" as ran

ran<-near: E2 REMOVAL REQUEST
ran->near: E2 REMOVAL RESPONSE

@enduml
```

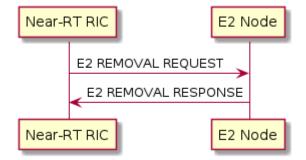


Figure 8.3.7.2-2: E2 Removal, successful operation (Near-RT RIC Initiated)

#### Successful E2 Removal, E2 Node initiated

The E2 Node initiates the procedure by sending the E2 REMOVAL REQUEST message to the Near-RT RIC. Upon reception of the E2 REMOVAL REQUEST message, the Near-RT RIC shall reply with the E2 REMOVAL RESPONSE message. After receiving the E2 REMOVAL RESPONSE message, the E2 Node shall initiate removal of the TNL association towards the Near-RT RIC, and shall remove all resources associated with that E2 signaling connection. The Near-RT RIC shall then remove all resources associated with that E2 signaling connection.

#### Successful E2 Removal, Near-RT RIC initiated

The Near-RT RIC initiates the procedure by sending the E2 REMOVAL REQUEST message to the E2 node. Upon reception of the E2 REMOVAL REQUEST message the E2 node shall reply with the E2 REMOVAL RESPONSE message. After receiving the E2 REMOVAL RESPONSE message, the Near-RT RIC may initiate removal of the TNL association towards the E2 node, and shall remove all resources associated with that E2 signaling connection. The E2 node shall then remove all resources associated with that E2 signaling connection.

#### **Interactions with other procedures:**

If the E2 REMOVAL REQUEST message is received, any other ongoing procedure on the same E2 interface related to ongoing RIC Services shall be aborted.



#### 8.3.7.3 Unsuccessful Operation

```
@startuml
skinparam ParticipantPadding 50
skinparam BoxPadding 10
skinparam lifelineStrategy solid

participant "Near-RT RIC" as near
participant "E2 Node" as ran

ran->near: E2 REMOVAL REQUEST
ran<-near: E2 REMOVAL FAILURE

@enduml</pre>
```

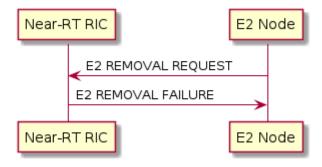


Figure 8.3.7.3-1: E2 Removal procedure (E2 Node Initiated), unsuccessful operation

```
@startuml
skinparam ParticipantPadding 50
skinparam BoxPadding 10
skinparam lifelineStrategy solid

participant "Near-RT RIC" as near
participant "E2 Node" as ran

ran<-near: E2 REMOVAL REQUEST
ran->near: E2 REMOVAL FAILURE
@enduml
```

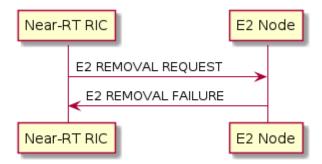


Figure 8.3.7.3-2: E2 Removal procedure (Near-RT RIC Initiated), unsuccessful operation

If the E2 Node cannot accept the E2 REMOVAL REQUEST it shall respond with E2 REMOVAL FAILURE message with an appropriate cause value.

If the Near-RT RIC cannot accept the E2 REMOVAL REQUEST it shall respond with E2 REMOVAL FAILURE message with an appropriate cause value.

#### 8.3.7.4 Abnormal Conditions

If the Near-RT RIC, after initiating E2 Removal procedure, receives neither the E2 REMOVAL RESPONSE message nor the E2 REMOVAL FAILURE message, the Near-RT RIC may reinitiate the E2 Removal procedure towards the



same E2 Node, provided that the content of the new E2 REMOVAL REQUEST message is identical to the content of the previously unacknowledged E2 REMOVAL REQUEST message.

If the E2 Node, after initiating E2 Removal procedure, receives neither the E2 REMOVAL RESPONSE message nor the E2 REMOVAL FAILURE message, the E2 Node may reinitiate the E2 Removal procedure towards the Near-RT RIC, provided that the content of the new E2 REMOVAL REQUEST message is identical to the content of the previously unacknowledged E2 REMOVAL REQUEST message.

7

14

15

16

17

18

3

4 5

6

# 9 Elements for E2AP Communication

### 9 9.0 General

- Sub clauses 9.1 and 9.2 describe the structure of the messages and information elements required for the E2AP protocol in tabular format. Sub clause 9.3 provides the corresponding ASN.1 definition.
- The following attributes are used for the tabular description of the messages and information elements: Presence, Range Criticality and Assigned Criticality. Their definition and use can be found in TS 36.413 [24].
  - NOTE: The messages have been defined in accordance to the guidelines specified in TR 25.921 [14].

# 9.1 Message Functional Definition and Content

# 9.1.1 Messages for Near-RT RIC Functional Procedures

#### 9.1.1.1 RIC SUBSCRIPTION REQUEST

- This message is sent by the Near-RT RIC to an E2 Node to create a new Subscription in the E2 Node.
- 19 Direction: Near-RT RIC  $\rightarrow$  E2 Node.

| IE/Group Name                 | Presence | Range   | IE type and reference | Semantics description | Criticality | Assigned<br>Criticality |
|-------------------------------|----------|---|-----------------------|-----------------------|-------------|-------------------------|
| Message Type                  | М        |   | 9.2.3                 | ucconpuon             | YES         | reject                  |
| RIC Request ID                | М        |   | 9.2.7                 |                       | YES         | reject                  |
| RAN Function ID               | М        |   | 9.2.8                 |                       | YES         | reject                  |
| RIC Subscription Details      | М        |   |                       |                       | YES         | reject                  |
| >RIC Event Trigger Definition | М        |   | 9.2.9                 |                       | -           |                         |
| >Sequence of Actions          |          | 1<br><maxofricactio<br>nID&gt;</maxofricactio<br> |                       |                       | EACH        | ignore                  |
| >>RIC Action ID               | М        |   | 9.2.10                |                       | -           |                         |
| >>RIC Action Type             | М        |   | 9.2.11                |                       | -           |                         |
| >>RIC Action Definition       | 0        |   | 9.2.12                |                       | -           |                         |
| >>RIC Subsequent<br>Action    | 0        |   | 9.2.13                |                       | -           |                         |

20

| Range bound      | Explanation   |
|------------------|---|
| maxofRICActionID | Maximum no. of Actions to be requested by Near-RT RIC. Value is |
|                  | 16.   |



#### 9.1.1.2 RIC SUBSCRIPTION RESPONSE

- 2 This message is sent by the E2 Node to accept the request from the Near-RT RIC to create a new Subscription in the E2
- 3 Node.
- 4 Direction: E2 Node  $\rightarrow$  Near-RT RIC.

| IE/Group Name                    | Presence | Range   | IE type and reference | Semantics description | Criticality | Assigned<br>Criticality |
|----------------------------------|----------|---|-----------------------|-----------------------|-------------|-------------------------|
| Message Type                     | M        |   | 9.2.3                 |                       | YES         | reject                  |
| RIC Request ID                   | M        |   | 9.2.7                 |                       | YES         | reject                  |
| RAN Function ID                  | M        |   | 9.2.8                 |                       | YES         | reject                  |
| RIC Actions Admitted List        |          | 1<br><maxofricactio<br>nID&gt;</maxofricactio<br> |                       |                       | YES         | reject                  |
| >RIC Action ID                   | М        |   | 9.2.10                |                       | -           |                         |
| RIC Actions Not Admitted<br>List |          | 0<br><maxofricactio<br>nID&gt;</maxofricactio<br> |                       |                       | YES         | reject                  |
| >RIC Action ID                   | М        |   | 9.2.10                |                       | -           |                         |
| >Cause                           | M        |   | 9.2.1                 |                       | -           |                         |

| Range bound      | Explanation   |
|------------------|---|
| maxofRICActionID | Maximum no. of Actions to be requested by Near-RT RIC. Value is |
|                  | 16.   |

## 9.1.1.3 RIC SUBSCRIPTION FAILURE

- This message is sent by the E2 Node to inform the Near-RT RIC that the request to create a new Subscription in the E2
- 9 Node failed.

5

11

12

16

17

10 Direction: E2 Node  $\rightarrow$  Near-RT RIC.

| IE/Group Name           | Presence | Range | IE type and reference | Semantics description | Criticality | Assigned Criticality |
|-------------------------|----------|-------|-----------------------|-----------------------|-------------|----------------------|
| Message Type            | M        |       | 9.2.3                 |                       | YES         | reject               |
| RIC Request ID          | M        |       | 9.2.7                 |                       | YES         | reject               |
| RAN Function ID         | M        |       | 9.2.8                 |                       | YES         | reject               |
| Cause                   | M        |       | 9.2.1                 |                       | YES         | reject               |
| Criticality Diagnostics | 0        |       | 9.2.2                 |                       | YES         | ignore               |

## 9.1.1.4 RIC SUBSCRIPTION DELETE REQUEST

- This message is sent by the Near-RT RIC to an E2 Node to request the deletion of an existing Subscription in the E2
- 14 Node previously created for the Near-RT RIC.
- 15 Direction: Near-RT RIC  $\rightarrow$  E2 Node.

| IE/Group Name   | Presence | Range | IE type and reference | Semantics description | Criticality | Assigned Criticality |
|-----------------|----------|-------|-----------------------|-----------------------|-------------|----------------------|
| Message Type    | M        |       | 9.2.3                 |                       | YES         | reject               |
| RIC Request ID  | M        |       | 9.2.7                 |                       | YES         | reject               |
| RAN Function ID | M        |       | 9.2.8                 |                       | YES         | reject               |

#### 9.1.1.5 RIC SUBSCRIPTION DELETE RESPONSE

- 18 This message is sent by the E2 Node to accept the request from a Near-RT RIC to delete an existing Subscriptionin the
- 19 E2 Node
- 20 Direction: E2 Node  $\rightarrow$  Near-RT RIC.

2

4

6

7

8

9

11

12

13



| IE/Group Name   | Presence | Range | IE type and reference | Semantics description | Criticality | Assigned<br>Criticality |
|-----------------|----------|-------|-----------------------|-----------------------|-------------|-------------------------|
| Message Type    | M        |       | 9.2.3                 |                       | YES         | reject                  |
| RIC Request ID  | M        |       | 9.2.7                 |                       | YES         | reject                  |
| RAN Function ID | M        |       | 9.2.8                 |                       | YES         | reject                  |

9.1.1.6 RIC SUBSCRIPTION DELETE FAILURE

3 This message is sent by the E2 Node to inform the Near-RT RIC that the request to delete an existing Subscription in

the E2 Node failed.

5 Direction: E2 Node  $\rightarrow$  Near-RT RIC.

| IE/Group Name           | Presence | Range | IE type and reference | Semantics description | Criticality | Assigned Criticality |
|-------------------------|----------|-------|-----------------------|-----------------------|-------------|----------------------|
| Message Type            | M        |       | 9.2.3                 |                       | YES         | reject               |
| RIC Request ID          | M        |       | 9.2.7                 |                       | YES         | reject               |
| RAN Function ID         | M        |       | 9.2.8                 |                       | YES         | reject               |
| Cause                   | M        |       | 9.2.1                 |                       | YES         | ignore               |
| Criticality Diagnostics | 0        |       | 9.2.2                 |                       | YES         | ignore               |

9.1.1.6A RIC SUBSCRIPTION DELETE REQUIRED

This message is sent by the E2 Node to request deletion of the existing RIC Subscriptions in the E2 Node previously

created for the Near-RT RIC.

10 Direction: E2 Node  $\rightarrow$  Near-RT RIC.

| IE/Group Name                           | Presence | Range   | IE type and reference | Semantics description | Criticality | Assigned<br>Criticality |
|---|----------|---|-----------------------|-----------------------|-------------|-------------------------|
| Message Type                            | М        |   | 9.2.3                 |                       | YES         | reject                  |
| List of RIC Subscriptions To Be Removed |          | 1<br><maxofricrequ<br>estID&gt;</maxofricrequ<br> |                       |                       | EACH        | ignore                  |
| >RIC Request ID                         | М        |   | 9.2.7                 |                       | -           | -                       |
| >RAN Function ID                        | М        |   | 9.2.8                 |                       | -           | -                       |
| >Cause                                  | М        |   | 9.2.1                 |                       | -           | -                       |

Range bound Explanation

maxofRICrequestID Maximum no. of RIC subscription requests supported by Near-RT RIC toward an E2 Node. Value is <1024>.

9.1.1.7 RIC INDICATION

14 This message is sent by an E2 Node to transfer Report information to a Near-RT RIC.

15 Direction: E2 Node  $\rightarrow$  Near-RT RIC.

| IE/Group Name          | Presence | Range | IE type and reference | Semantics description | Criticality | Assigned<br>Criticality |
|------------------------|----------|-------|-----------------------|-----------------------|-------------|-------------------------|
| Message Type           | M        |       | 9.2.3                 | •                     | YES         | reject                  |
| RIC Request ID         | M        |       | 9.2.7                 |                       | YES         | reject                  |
| RAN Function ID        | M        |       | 9.2.8                 |                       | YES         | reject                  |
| RIC Action ID          | M        |       | 9.2.10                |                       | YES         | reject                  |
| RIC Indication SN      | 0        |       | 9.2.14                |                       | YES         | reject                  |
| RIC Indication Type    | M        |       | 9.2.15                |                       | YES         | reject                  |
| RIC Indication Header  | M        |       | 9.2.17                |                       | YES         | reject                  |
| RIC Indication Message | M        |       | 9.2.16                |                       | YES         | reject                  |
| RIC Call process ID    | 0        |       | 9.2.18                |                       | YES         | reject                  |



4

5

9

10

14

15

#### 9.1.1.8 RIC CONTROL REQUEST

- This message is sent by a Near-RT RIC to an E2 Node to initiate or resume a control function logic.
- 3 Direction: Near-RT RIC  $\rightarrow$  E2 Node.

| IE/Group Name           | Presence | Range | IE type and reference | Semantics description | Criticality | Assigned<br>Criticality |
|-------------------------|----------|-------|-----------------------|-----------------------|-------------|-------------------------|
| Message Type            | M        |       | 9.2.3                 |                       | YES         | reject                  |
| RIC Request ID          | M        |       | 9.2.7                 |                       | YES         | reject                  |
| RAN Function ID         | M        |       | 9.2.8                 |                       | YES         | reject                  |
| RIC Call Process ID     | 0        |       | 9.2.18                |                       | YES         | reject                  |
| RIC Control Header      | M        |       | 9.2.20                |                       | YES         | reject                  |
| RIC Control Message     | М        |       | 9.2.19                |                       | YES         | reject                  |
| RIC Control Ack Request | 0        |       | 9.2.21                |                       | YES         | reject                  |

#### 9.1.1.9 RIC CONTROL ACKNOWLEDGE

- 6 This message is sent by the E2 Node to inform the Near-RT RIC that the RIC CONTROL REQUEST message was
- 7 received and to provide information on the outcome of the request.
- 8 Direction: E2 Node  $\rightarrow$  Near-RT RIC.

| IE/Group Name       | Presence | Range | IE type and reference | Semantics description | Criticality | Assigned<br>Criticality |
|---------------------|----------|-------|-----------------------|-----------------------|-------------|-------------------------|
| Message Type        | M        |       | 9.2.3                 |                       | YES         | reject                  |
| RIC Request ID      | M        |       | 9.2.7                 |                       | YES         | reject                  |
| RAN Function ID     | М        |       | 9.2.8                 |                       | YES         | reject                  |
| RIC Call process ID | 0        |       | 9.2.18                |                       | YES         | reject                  |
| RIC Control Outcome | 0        |       | 9.2.25                |                       | YES         | reject                  |

#### 9.1.1.10 RIC CONTROL FAILURE

- 11 This message is sent by the E2 Node to inform the Near-RT RIC that the RIC CONTROL REQUEST message has
- failed to be executed.
- 13 Direction: E2 Node  $\rightarrow$  Near-RT RIC.

| IE/Group Name           | Presence | Range | IE type and reference | Semantics description | Criticality | Assigned<br>Criticality |
|-------------------------|----------|-------|-----------------------|-----------------------|-------------|-------------------------|
| Message Type            | M        |       | 9.2.3                 |                       | YES         | reject                  |
| RIC Request ID          | M        |       | 9.2.7                 |                       | YES         | reject                  |
| RAN Function ID         | M        |       | 9.2.8                 |                       | YES         | reject                  |
| RIC Call process ID     | 0        |       | 9.2.18                |                       | YES         | reject                  |
| Cause                   | M        |       | 9.2.1                 |                       | YES         | ignore                  |
| RIC Control Outcome     | 0        |       | 9.2.25                |                       | YES         | Reject                  |
| Criticality Diagnostics | 0        |       | 9.2.2                 |                       | YES         | ignore                  |

# 9.1.2 Messages for Global Procedures

#### 16 9.1.2.1 ERROR INDICATION

- 17 This message is used to indicate that some error has been detected in the E2 Node or Near-RT RIC.
- 18 Direction: E2 Node → Near-RT RIC or Near-RT RIC → E2 Node

2



| IE/Group Name           | Presence | Range | IE type and reference | Semantics<br>description                     | Criticality | Assigned Criticality |
|-------------------------|----------|-------|-----------------------|--|-------------|----------------------|
| Message Type            | М        |       | 9.2.3                 | ·  | YES         | ignore               |
| Transaction ID          | 0        |       | 9.2.33                | Required if RIC Request ID IE is not present | YES         | reject               |
| RIC Request ID          | 0        |       | 9.2.7                 | Required if Transaction ID IE is not present | YES         | reject               |
| RAN Function ID         | 0        |       | 9.2.8                 |  | YES         | reject               |
| Cause                   | 0        |       | 9.2.1                 |  | YES         | ignore               |
| Criticality Diagnostics | 0        |       | 9.2.2                 |  | YES         | ignore               |

# 9.1.2.2 E2 SETUP REQUEST

- 3 This message is sent by an E2 Node to a Near-RT RIC to transfer the initialization information.
- 4 Direction: E2 Node → Near-RT RIC

| IE/Group Name  | Presence | Range  | IE type and | Semantics   | Criticality | Assigned    |
|--|----------|--|-------------|---|-------------|-------------|
|  |          |  | reference   | description   | \/=0        | Criticality |
| Message Type   | M        |  | 9.2.3       |   | YES         | reject      |
| Transaction ID                                       | M        |  | 9.2.33      |   | YES         | reject      |
| Global E2 Node ID                                    | М        |  | 9.2.6       |   | YES         | reject      |
| RAN Functions Added<br>List                          |          | 1  |             | List of RAN<br>functions in E2<br>node                | YES         | reject      |
| >RAN Function item                                   |          | 1<br><maxofranfunc<br>tionID&gt;</maxofranfunc<br> |             |   |             |             |
| >>RAN Function ID                                    | М        |  | 9.2.8       | ld of the<br>declared<br>Function                     | -           |             |
| >>RAN Function Definition                            | М        |  | 9.2.23      | Definition of Function                                | -           |             |
| >>RAN Function<br>Revision                           | М        |  | 9.2.24      | Revision counter                                      | -           |             |
| >>RAN Function OID                                   | М        |  | 9.2.31      | Object identifier of corresponding E2SM               | -           |             |
| E2 Node Component<br>Configuration Addition<br>List  |          | 1  |             | List of E2 Node component configuration information   | YES         | reject      |
| >E2 Node Component<br>Configuration Addition<br>Item |          | 1 <maxofe2nodec omponents=""></maxofe2nodec>       |             |   | EACH        | reject      |
| >>E2 Node<br>Component<br>Interface Type             | М        |  | 9.2.26      | E2 Node<br>component<br>interface type                | -           |             |
| >>E2 Node<br>Component ID                            | 0        |  | 9.2.32      | E2 Node<br>Component<br>Identifier                    | -           |             |
| >>E2 Node<br>Component<br>Configuration              | М        |  | 9.2.27      | Contents<br>depends on<br>component<br>interface type | -           |             |

3



| Range bound           | Explanation   |
|-----------------------|---|
| maxofRANfunctionID    | Maximum no. of RAN Functions supported by E2 Node. Value is 256.      |
| maxofE2nodeComponents | Maximum no. of E2 Node components supported by E2 Node. Value is 1024 |

## 2 9.1.2.3 E2 SETUP RESPONSE

- This message is sent by a Near-RT RIC to an E2 Node to transfer the initialization information.
- 4 Direction: Near-RT RIC →E2 Node

| IE/Group Name  | Presence | Range  | IE type and reference | Semantics description  | Criticality | Assigned Criticality |
|--|----------|--|-----------------------|--|-------------|----------------------|
| Message Type   | М        |  | 9.2.3                 |  | YES         | reject               |
| Transaction ID   | М        |  | 9.2.33                |  | YES         | reject               |
| Global RIC ID  | М        |  | 9.2.4                 |  | YES         | reject               |
| RAN Functions<br>Accepted List                                   |          | 01   |                       | Complete list of<br>Functions<br>accepted by<br>Near-RT RIC                        |             |                      |
| >RAN Functions ID item   |          | 1<br><maxofranfunc<br>tionID&gt;</maxofranfunc<br> |                       |  | YES         | Reject               |
| >>RAN Function<br>ID   | М        |  | 9.2.8                 | ld of the<br>declared<br>Function  | -           |                      |
| >>RAN Function<br>Revision                                       | М        |  | 9.2.24                | Revision counter   | -           |                      |
| RAN Functions Rejected<br>List                                   |          | 01   |                       | Complete list of<br>Functions not<br>accepted by<br>Near-RT RIC                    |             |                      |
| RAN Functions ID Cause<br>Item                                   |          | 1<br><maxofranfunc<br>tionID&gt;</maxofranfunc<br> |                       |  | YES         | reject               |
| >>RAN Function<br>ID   | М        |  | 9.2.8                 | Id of the<br>declared<br>Function  | -           |                      |
| >>Cause  | М        |  | 9.2.1                 | Reason for not accepting function  | -           |                      |
| E2 Node Component<br>Configuration Addition<br>Acknowledge List  |          | 1  |                       | Complete list of<br>E2 Node<br>Components in<br>the E2 SETUP<br>REQUEST<br>message | YES         | reject               |
| >E2 Node Component<br>Configuration Addition<br>Acknowledge Item |          | 1 <maxofe2nodec omponents=""></maxofe2nodec>       |                       |  | EACH        | reject               |
| >>E2 Node<br>Component<br>Interface Type                         | М        | ,  | 9.2.26                | E2 Node<br>component<br>interface type   | -           |                      |
| >>E2 Node<br>Component ID  | М        |  | 9.2.32                | E2 Node<br>Component<br>Identifier   | -           |                      |
| >>E2 Node<br>Component<br>Configuration<br>Acknowledge           | М        |  | 9.2.28                | Success or failure with Cause  | -           |                      |

5

6

10

11

15

16



| Range bound           | Explanation  |
|-----------------------|--|
| maxofRANfunctionID    | Maximum no. of RAN Functions supported by E2 Node. Value is 256.         |
| maxofE2nodeComponents | Maximum no. of E2 Node components supported by E2 Node.<br>Value is 1024 |

9.1.2.4 E2 SETUP FAILURE

3 This message is sent by the Near-RT RIC to indicate E2 Setup failure.

Direction: Near-RT RIC → E2 Node 4

| IE/Group Name               | Presence | Range | IE type and reference | Semantics description | Criticality | Assigned<br>Criticality |
|-----------------------------|----------|-------|-----------------------|-----------------------|-------------|-------------------------|
| Message Type                | M        |       | 9.2.3                 |                       | YES         | reject                  |
| Transaction ID              | M        |       | 9.2.33                |                       | YES         | reject                  |
| Cause                       | М        |       | 9.2.1                 |                       | YES         | ignore                  |
| Time To Wait                | 0        |       | 9.2.5                 |                       | YES         | ignore                  |
| Criticality Diagnostics     | 0        |       | 9.2.2                 |                       | YES         | Ignore                  |
| Transport Layer Information | 0        |       | 9.2.29                |                       | YES         | ignore                  |

9.1.2.5 RESET REQUEST

This message is sent from a Near-RT RIC to an E2 Node or from an E2 Node to a Near-RT RIC and is used to request 8

the E2 interface between the E2 node and the Near-RT RIC to be reset.

9 Direction: Near-RT RIC → E2 Node, or E2 Node → Near-RT RIC

| IE/Group Name  | Presence | Range | IE type and reference | Semantics description | Criticality | Assigned Criticality |
|----------------|----------|-------|-----------------------|-----------------------|-------------|----------------------|
| Message Type   | M        |       | 9.2.3                 |                       | YES         | reject               |
| Transaction ID | М        |       | 9.2.33                |                       | YES         | reject               |
| Cause          | M        |       | 9.2.1                 |                       | YES         | ignore               |

9.1.2.6 RESET RESPONSE

This message is sent by an E2 Node to a Near-RT RIC or from a Near-RT RIC to an E2 Node as a response to a RESET 12

REQUEST message. 13

Direction: Near-RT RIC → E2 Node, or E2 Node → Near-RT RIC 14

| IE/Group Name           | Presence | Range | IE type and reference | Semantics description | Criticality | Assigned<br>Criticality |
|-------------------------|----------|-------|-----------------------|-----------------------|-------------|-------------------------|
| Message Type            | M        |       | 9.2.3                 |                       | YES         | reject                  |
| Transaction ID          | М        |       | 9.2.33                |                       | YES         | reject                  |
| Criticality Diagnostics | 0        |       | 9.2.2                 |                       | YES         | ignore                  |

9.1.2.7 RIC SERVICE UPDATE

This message is sent by an E2 Node to the Near-RT RIC to transfer updated information on RIC Services supported by

the E2 Node. 18

19 Direction: E2 Node → Near-RT RIC



| IE/Group Name                  | Presence | Range  | IE type and reference | Semantics description                           | Criticality | Assigned<br>Criticality |
|--------------------------------|----------|--|-----------------------|---|-------------|-------------------------|
| Message Type                   | М        |  | 9.2.3                 | •   | YES         | reject                  |
| Transaction ID                 | М        |  | 9.2.33                |   | YES         | reject                  |
| RAN Functions Added<br>List    |          | 01   |                       | List of added<br>RAN functions<br>in E2 node    |             |                         |
| >RAN Functions Item            |          | 1<br><maxofranfunc<br>tionID&gt;</maxofranfunc<br> |                       |   | YES         | reject                  |
| >>RAN Function ID              | М        |  | 9.2.8                 | Id of the<br>declared<br>Function               | -           |                         |
| >>RAN Function Definition      | М        |  | 9.2.23                | Definition of Function                          | -           |                         |
| >>RAN Function<br>Revision     | M        |  | 9.2.24                | Revision counter                                | -           |                         |
| >>RAN Function<br>OID          | M        |  | 9.2.31                | Object identifier of corresponding E2SM         | -           |                         |
| RAN Functions Modified<br>List |          | 01   |                       | List of Modified<br>RAN functions<br>in E2 node |             |                         |
| >RAN Functions Item            |          | 1<br><maxofranfunc<br>tionID&gt;</maxofranfunc<br> |                       |   | YES         | reject                  |
| >>RAN Function ID              | М        |  | 9.2.8                 | ld of the<br>declared<br>Function               | -           |                         |
| >>RAN Function Definition      | М        |  | 9.2.23                | Definition of Function                          | -           |                         |
| >>RAN Function<br>Revision     | М        |  | 9.2.24                | Revision counter                                | -           |                         |
| >>RAN Function<br>OID          | M        |  | 9.2.31                | Object identifier of corresponding E2SM         | -           |                         |
| RAN Functions Deleted<br>List  |          | 01   |                       | List of deleted<br>RAN functions<br>in E2 node  |             |                         |
| >RAN Functions ID<br>Item      |          | 1<br><maxofranfunc<br>tionID&gt;</maxofranfunc<br> |                       |   | YES         | reject                  |
| >>RAN Function ID              | М        |  | 9.2.8                 | ld of the<br>declared<br>Function               | -           |                         |
| >>RAN Function<br>Revision     | М        |  | 9.2.24                | Revision counter                                | -           |                         |

| Range bound        | Explanation   |
|--------------------|---|
| maxofRANfunctionID | Maximum no. of Functions accepted by Near-RT RIC. Value is 256. |

## 9.1.2.8 RIC SERVICE UPDATE ACKNOWLEDGE

- This message is sent by the Near-RT RIC to the E2 Node to acknowledge update of RIC Services supported by the E2
- 5 Node.

3

6 Direction: Near-RT RIC  $\rightarrow$  E2 Node.

2

3

6



| IE/Group Name                  | Presence | Range  | IE type and reference | Semantics description                              | Criticality | Assigned<br>Criticality |
|--------------------------------|----------|--|-----------------------|--|-------------|-------------------------|
| Message Type                   | М        |  | 9.2.3                 |  | YES         | reject                  |
| Transaction ID                 | М        |  | 9.2.33                |  | YES         | reject                  |
| RAN Functions Accepted<br>List |          | 01   |                       | List of<br>Functions<br>accepted by<br>Near-RT RIC |             |                         |
| >RAN Functions ID<br>Item      |          | 1<br><maxofranfunc<br>tionID&gt;</maxofranfunc<br> |                       |  | YES         | reject                  |
| >>RAN Function ID              | М        |  | 9.2.8                 | ld of the<br>declared<br>Function                  | -           |                         |
| >>RAN Function<br>Revision     | М        |  | 9.2.24                | Revision counter                                   | -           |                         |
| RAN Functions Rejected<br>List |          | 01   |                       | List of Functions not accepted by Near-RT RIC      |             |                         |
| >RAN Functions Cause<br>Item   |          | 1<br><maxofranfunc<br>tionID&gt;</maxofranfunc<br> |                       |  | YES         | reject                  |
| >>RAN Function ID              | М        |  | 9.2.8                 | ld of the<br>declared<br>Function                  | -           |                         |
| >>Cause                        | М        |  | 9.2.1                 | Reason for not accepting function                  | -           |                         |

| Range bound        | Explanation   |
|--------------------|---|
| maxofRANfunctionID | Maximum no. of Functions accepted by Near-RT RIC. Value is 256. |

## 9.1.2.9 RIC SERVICE UPDATE FAILURE

4 This message is sent by the Near-RT RIC to the E2 Node to indicate RIC SERVICE Update Failure.

5 Direction: Near-RT RIC  $\rightarrow$  E2 Node

| IE/Group Name           | Presence | Range | IE type and reference | Semantics description | Criticality | Assigned<br>Criticality |
|-------------------------|----------|-------|-----------------------|-----------------------|-------------|-------------------------|
| Message Type            | M        |       | 9.2.3                 |                       | YES         | reject                  |
| Transaction ID          | M        |       | 9.2.33                |                       | YES         | reject                  |
| Cause                   | М        |       | 9.2.1                 | Reason for failure    | YES         | reject                  |
| Time To Wait            | 0        |       | 9.2.5                 |                       | YES         | ignore                  |
| Criticality Diagnostics | 0        |       | 9.2.2                 |                       | YES         | ignore                  |

# 9.1.2.10 RIC SERVICE QUERY

- 8 This message is sent by a Near-RT RIC to an E2 Node to request a E2 Node initiated RIC Service Update procedure.
- 9 Direction: Near-RT RIC  $\rightarrow$  E2 Node.

2

3



| IE/Group Name               | Presence | Range  | IE type and reference | Semantics description   | Criticality | Assigned Criticality |
|-----------------------------|----------|--|-----------------------|---|-------------|----------------------|
| Message Type                | М        |  | 9.2.3                 |   | YES         | reject               |
| Transaction ID              | М        |  | 9.2.33                |   | YES         | reject               |
| RAN Functions Accepted List |          | 01   |                       | Complete list of Functions previously accepted by Near-RT RIC |             |                      |
| >RAN Functions ID<br>Item   |          | 1<br><maxofranfunc<br>tionID&gt;</maxofranfunc<br> |                       |   | YES         | reject               |
| >>RAN Function ID           | М        |  | 9.2.8                 | ld of the<br>declared<br>Function                             | -           |                      |
| >>RAN Function<br>Revision  | М        |  | 9.2.24                | Revision counter  | -           |                      |

| Range bound        | Explanation   |
|--------------------|---|
| maxofRANfunctionID | Maximum no. of Functions accepted by Near-RT RIC. Value is 256. |

## 9.1.2.11 E2 NODE CONFIGURATION UPDATE

- 4 This message is sent by an E2 Node to the Near-RT RIC to transfer updated information on the E2 Node Configuration
- 5 information.
- 6 Direction: E2 Node → Near-RT RIC



| IE/Group Name  | Presence | Range   | IE type and reference | Semantics description                                      | Criticality | Assigned Criticality |
|--|----------|---|-----------------------|--|-------------|----------------------|
| Message Type   | М        |   | 9.2.3                 |  | YES         | reject               |
| Transaction ID                                       | М        |   | 9.2.33                |  | YES         | reject               |
| Global E2 Node ID                                    | 0        |   | 9.2.6                 | Required when sent as first message on new TNL association | YES         | reject               |
| E2 Node Component<br>Configuration Addition<br>List  |          | 01  |                       |  | YES         | reject               |
| >E2 Node Component<br>Configuration Addition<br>Item |          | 1 <maxofe2nodec omponents=""></maxofe2nodec>                                    |                       |  | EACH        | reject               |
| >>E2 Node<br>Component<br>Interface Type             | М        |   | 9.2.26                | E2 Node<br>component<br>interface type                     | -           |                      |
| >>E2 Node<br>Component ID                            | М        |   | 9.2.32                | E2 Node<br>Component<br>Identifier                         | -           |                      |
| >>E2 Node<br>Component<br>Configuration              | М        |   | 9.2.27                | Contents depends on component type                         | -           |                      |
| E2 Node Component<br>Configuration Update List       |          | 01  |                       |  | YES         | reject               |
| >E2 Node Component<br>Configuration Update<br>Item   |          | 1 <maxofe2nodec omponents=""></maxofe2nodec>                                    |                       |  | EACH        | reject               |
| >>E2 Node<br>Component<br>Interface Type             | М        | ,   | 9.2.26                | E2 Node<br>component<br>interface type                     | -           |                      |
| >>E2 Node<br>Component ID                            | М        |   | 9.2.32                | E2 Node<br>Component<br>Identifier                         | -           |                      |
| >>E2 Node<br>Component<br>Configuration              | М        |   | 9.2.27                | Contents depends on component type                         | -           |                      |
| E2 Node Component<br>Configuration Removal<br>List   |          | 01  |                       |  | YES         | reject               |
| >E2 Node Component<br>Configuration Removal<br>Item  |          | 1 <maxofe2nodec omponents=""></maxofe2nodec>                                    |                       |  | EACH        | reject               |
| >>E2 Node<br>Component<br>Interface Type             | М        |   | 9.2.26                | E2 Node<br>component<br>interface type                     | -           |                      |
| >>E2 Node<br>Component ID                            | М        |   | 9.2.32                | E2 Node<br>Component<br>Identifier                         | -           |                      |
| E2 Node TNL Association<br>To Remove List            |          | 01  |                       |  | YES         | reject               |
| >E2 Node TNL Association To Remove Item IEs          |          | 1 <maxoftnla< td=""><td></td><td></td><td>EACH</td><td>reject</td></maxoftnla<> |                       |  | EACH        | reject               |
| >> Transport Layer<br>Information                    | М        |   | 9.2.29                | Transport Layer<br>Address of the<br>E2 node.              | -           | -                    |
| >> Transport Layer<br>Information Near-RT<br>RIC     | 0        |   | 9.2.29                | Transport Layer<br>Address of the<br>Near-RT RIC.          | -           | -                    |



| Range bound           | Explanation  |
|-----------------------|--|
| maxofE2nodeComponents | Maximum no. of E2 Node components supported by E2 Node.        |
|                       | Value is 1024.   |
| maxofTNLA             | Maximum no. of TNL Associations supported by E2 Node. Value is |
|                       | 32.  |

2

## 9.1.2.12 E2 NODE CONFIGURATION UPDATE ACKNOWLEDGE

- 3 This message is sent by Near-RT RIC to E2 Node to acknowledge update of E2 Node Configuration supported by the
- 4 E2 Node.
- 5 Direction: Near-RT RIC  $\rightarrow$  E2 Node.



| IE/Group Name  | Presence | Range  | IE type and reference | Semantics description                  | Criticality | Assigned Criticality |
|--|----------|--|-----------------------|--|-------------|----------------------|
| Message Type   | М        |  | 9.2.3                 | •                                      | YES         | reject               |
| Transaction ID   | М        |  | 9.2.33                |  | YES         | reject               |
| E2 Node Component<br>Configuration Addition<br>Acknowledge List  |          | 01   |                       |  | YES         | reject               |
| >E2 Node Component<br>Configuration Addition<br>Acknowledge Item |          | 1<br><maxofe2node<br>Components&gt;</maxofe2node<br> |                       |  | EACH        | reject               |
| >>E2 Node<br>Component<br>Interface Type                         | M        |  | 9.2.26                | E2 Node<br>component<br>interface type | -           |                      |
| >>E2 Node<br>Component ID  | M        |  | 9.2.32                | E2 Node<br>Component<br>Identifier     | -           |                      |
| >>E2 Node<br>Component<br>Configuration<br>Acknowledge           | M        |  | 9.2.28                | Success or failure with Cause          | -           |                      |
| E2 Node Component<br>Configuration Update<br>Acknowledge List    |          | 01   |                       |  | YES         | reject               |
| >E2 Node Component<br>Configuration Update<br>Acknowledge Item   |          | 1<br><maxofe2node<br>Components&gt;</maxofe2node<br> |                       |  | EACH        | reject               |
| >>E2 Node<br>Component<br>Interface Type                         | M        |  | 9.2.26                | E2 Node<br>component<br>interface type | -           |                      |
| >>E2 Node<br>Component ID  | 0        |  | 9.2.32                | E2 Node<br>Component<br>Identifier     | -           |                      |
| >>E2 Node<br>Component<br>Configuration<br>Update<br>Acknowledge | M        |  | 9.2.28                | Success or failure with Cause          | -           |                      |
| E2 Node Component<br>Configuration Removal<br>Acknowledge List   |          | 01   |                       |  | YES         | reject               |
| >E2 Node Component<br>Configuration Removal<br>Acknowledge Item  |          | 1<br><maxofe2node<br>Components&gt;</maxofe2node<br> |                       |  | EACH        | reject               |
| >>E2 Node<br>Component<br>Interface Type                         | M        |  | 9.2.26                | E2 Node<br>component<br>interface type | -           |                      |
| >>E2 Node<br>Component ID  | M        |  | 9.2.32                | E2 Node<br>Component<br>Identifier     | -           |                      |
| >>E2 Node<br>Component<br>Configuration<br>Acknowledge           | М        |  | 9.2.28                | Success or failure with Cause          | -           |                      |

| Range bound           | Explanation   |
|-----------------------|---|
| maxofE2nodeComponents | Maximum no. of E2 Node components supported by E2 Node. |
|                       | Value is 1024.  |

## 9.1.2.13 E2 NODE CONFIGURATION UPDATE FAILURE

- 4 This message is sent by Near-RT RIC to E2 Node to indicate E2 Node Configuration Update Failure.
- 5 Direction: Near-RT RIC → E2 Node

1

2

2

3

5

6



| IE/Group Name           | Presence | Range | IE type and reference | Semantics description | Criticality | Assigned<br>Criticality |
|-------------------------|----------|-------|-----------------------|-----------------------|-------------|-------------------------|
| Message Type            | M        |       | 9.2.3                 |                       | YES         | reject                  |
| Transaction ID          | М        |       | 9.2.33                |                       | YES         | reject                  |
| Cause                   | М        |       | 9.2.1                 | Cause                 | YES         | reject                  |
| Time To Wait            | 0        |       | 9.2.5                 |                       | YES         | ignore                  |
| Criticality Diagnostics | 0        |       | 9.2.2                 |                       | YES         | ignore                  |

#### 9.1.2.14 E2 CONNECTION UPDATE

- This message is sent by Near-RT RIC to E2 Node to initiate update of E2 Connection supported by the E2 Node.
- 4 Direction: Near-RT RIC **≡** E2 Node.

| IE/Group Name                        | Presence | Range                        | IE type and reference | Semantics description  | Criticality | Assigned Criticality |
|--------------------------------------|----------|------------------------------|-----------------------|--|-------------|----------------------|
| Message Type                         | М        |                              | 9.2.3                 |  | YES         | reject               |
| Transaction ID                       | М        |                              | 9.2.33                |  | YES         | reject               |
| E2 Connection To Add<br>List         |          | 01                           |                       |  | YES         | ignore               |
| >E2 Connection to Add<br>Item IEs    |          | 1<br><maxoftnla></maxoftnla> |                       |  | EACH        | ignore               |
| >>Transport Layer<br>Information     | М        |                              | 9.2.29                | Transport<br>layer address<br>and port<br>number of<br>Near-RT RIC |             |                      |
| >>TNL Association<br>Usage           | М        |                              | 9.2.30                | Indicates how<br>E2 connection<br>is to be used                    |             |                      |
| E2 Connection To<br>Remove List      |          | 01                           |                       |  | YES         | ignore               |
| >E2 Connection to<br>Remove Item IEs |          | 1<br><maxoftnla></maxoftnla> |                       |  | EACH        | ignore               |
| >>Transport Layer<br>Information     | М        |                              | 9.2.29                | Transport layer address and port number of Near-RT RIC             |             |                      |
| E2 Connection To Modify List         |          | 01                           |                       |  | YES         | ignore               |
| >E2 Connection to<br>Modify Item IEs |          | 1<br><maxoftnla></maxoftnla> |                       |  | EACH        | ignore               |
| >>Transport Layer<br>Information     | М        |                              | 9.2.29                | Transport<br>layer address<br>and port<br>number of<br>Near-RT RIC |             |                      |
| >>TNL Association<br>Usage           | М        |                              | 9.2.30                | Indicates how<br>E2 connection<br>is to be used                    |             |                      |

| Range bound | Explanation  |
|-------------|--|
| maxofTNLA   | Maximum no. of TNL Associations supported by E2 Node. Value is |
|             | 32.  |

# 9.1.2.15 E2 CONNECTION UPDATE ACKNOWLEDGE

- This message is sent by E2 Node to the Near-RT RIC to acknowledge update of E2 Connection supported by the E2 Node.
- 10 Direction: E2 Node Near-RT RIC.

3

5

7

8

10

12

13

14

15



| IE/Group Name                           | Presence | Range                        | IE type and reference | Semantics description  | Criticality | Assigned Criticality |
|---|----------|------------------------------|-----------------------|--|-------------|----------------------|
| Message Type                            | М        |                              | 9.2.3                 |  | YES         | reject               |
| Transaction ID                          | M        |                              | 9.2.33                |  | YES         | reject               |
| E2 Connection Setup List                |          | 01                           |                       |  | YES         | ignore               |
| >E2 Connection Setup                    |          | 1                            |                       |  | EACH        | ignore               |
| Item IEs                                |          | <maxoftnla></maxoftnla>      |                       |  |             |                      |
| >>Transport Layer<br>Information        | М        |                              | 9.2.29                | Transport<br>layer address<br>and port<br>number of<br>Near-RT RIC |             |                      |
| >>TNL Association<br>Usage              | М        |                              | 9.2.30                | Indicates how<br>E2 connection<br>is to be used                    |             |                      |
| E2 Connection Failed to<br>Setup List   |          | 01                           |                       |  | YES         | ignore               |
| >E2 Connection failed to setup Item IEs |          | 1<br><maxoftnla></maxoftnla> |                       |  | EACH        | ignore               |
| >>Transport Layer<br>Information        | М        |                              | 9.2.29                | Transport<br>layer address<br>and port<br>number of<br>Near-RT RIC |             |                      |
| >>Cause                                 | М        |                              | 9.2.1                 |  |             |                      |

| Range bound | Explanation  |
|-------------|--|
| maxofTNLA   | Maximum no. of TNL Associations supported by E2 Node. Value is |
|             | 32   |

#### 9.1.2.16 E2 CONNECTION UPDATE FAILURE

This message is sent by E2 Node to the Near-RT RIC to inform failure of the requested E2 Connection updates.

6 Direction: E2 Node ■ Near-RT RIC.

| IE/Group Name           | Presence | Range | IE type and reference | Semantics<br>description | Criticality | Assigned<br>Criticality |
|-------------------------|----------|-------|-----------------------|--------------------------|-------------|-------------------------|
|                         |          |       | reference             | uescription              |             | Criticality             |
| Message Type            | M        |       | 9.2.3                 |                          | YES         | reject                  |
| Transaction ID          | M        |       | 9.2.33                |                          | YES         | reject                  |
| Cause                   | М        |       | 9.2.1                 |                          | YES         | reject                  |
| Time To Wait            | 0        |       | 9.2.5                 |                          | YES         | ignore                  |
| Criticality Diagnostics | 0        |       | 9.2.2                 |                          | YES         | ignore                  |

#### 9.1.2.17 E2 REMOVAL REQUEST

This message is sent by either the E2 Node or the Near-RT RIC to initiate the removal of the E2 signaling connection and the related resources.

11 Direction: Near-RT RIC  $\rightarrow$  E2 Node, or E2 Node  $\rightarrow$  Near-RT RIC

| IE/Group Name  | Presence | Range | IE type and reference | Semantics description | Criticality | Assigned Criticality |
|----------------|----------|-------|-----------------------|-----------------------|-------------|----------------------|
| Message Type   | M        |       | 9.2.3                 |                       | YES         | reject               |
| Transaction ID | М        |       | 9.2.33                |                       | YES         | reject               |

#### 9.1.2.18 E2 REMOVAL RESPONSE

This message is sent by either the E2 Node or the Near-RT RIC to acknowledge the initiation of removal of the E2 signaling connection and the related resources.



1 Direction: Near-RT RIC → E2 Node, or E2 Node → Near-RT RIC

| IE/Group Name           | Presence | Range | IE type and reference | Semantics description | Criticality | Assigned<br>Criticality |
|-------------------------|----------|-------|-----------------------|-----------------------|-------------|-------------------------|
| Message Type            | M        |       | 9.2.3                 |                       | YES         | reject                  |
| Transaction ID          | М        |       | 9.2.33                |                       | YES         | reject                  |
| Criticality Diagnostics | 0        |       | 9.2.2                 |                       | YES         | ignore                  |

2

#### 9.1.2.19 E2 REMOVAL FAILURE

- This message is sent by either the E2 Node or the Near-RT RIC to indicate that removing the E2 signaling connection
- 5 and the related resources cannot be accepted.
- 6 Direction: Near-RT RIC → E2 Node, or E2 Node → Near-RT RIC

| IE/Group Name           | Presence | Range | IE type and reference | Semantics description | Criticality | Assigned Criticality |
|-------------------------|----------|-------|-----------------------|-----------------------|-------------|----------------------|
| Message Type            | M        |       | 9.2.3                 |                       | YES         | reject               |
| Transaction ID          | M        |       | 9.2.33                |                       | YES         | reject               |
| Cause                   | M        |       | 9.2.1                 |                       | YES         | ignore               |
| Criticality Diagnostics | 0        |       | 9.2.2                 |                       | YES         | ignore               |

7

8

14

15

16

# 9.2 Information Element definitions

9 9.2.0 General

- When specifying information elements which are to be represented by bit strings, if not otherwise specifically stated in the semantics description of the concerned IE or elsewhere, the following principle applies with regards to the ordering
- 12 of bits:
  - The first bit (leftmost bit) contains the most significant bit (MSB);
  - The last bit (rightmost bit) contains the least significant bit (LSB);
    - When importing bit strings from other specifications, the first bit of the bit string contains the first bit of the concerned information.

#### 17 9.2.1 Cause

The purpose of the *Cause* IE is to indicate the reason for a particular event for the E2AP protocol.

| IE/Group Name         | Presence | Range | IE Type and Reference   | Semantics<br>Description |
|-----------------------|----------|-------|---|--------------------------|
| CHOICE Cause<br>Group | М        |       |   |                          |
| >RIC services         |          |       |   |                          |
| >>RIC<br>Request      | 0        |       | ENUMERATED (RAN Function ID invalid, Action not supported, Excessive actions, Duplicate action, Duplicate Event Trigger, Function resource limit, RIC Request ID unknown, Inconsistent Action/subsequent Action sequence, Control message invalid, RIC Call process ID invalid, Control timer expired, Control failed to execute, System not ready, |                          |



|                            |   | unspecified,)  |
|----------------------------|---|--|
| >>RIC<br>Service           | 0 | ENUMERATED RAN Function not supported, Excessive functions, RIC resource limit,)   |
| >>E2 Node                  | 0 | ENUMERATED (E2 node component unknown,)  |
| >Transport<br>Layer        |   |  |
| >>Transport<br>Layer Cause | М | ENUMERATED (Unspecified, Transport Resource Unavailable,)  |
| >Protocol                  |   |  |
| >>Protocol<br>Cause        | М | ENUMERATED (Transfer Syntax Error, Abstract Syntax Error (Reject), Abstract Syntax Error (Ignore and Notify), Message not Compatible with Receiver State, Semantic Error, Abstract Syntax Error (Falsely Constructed Message), Unspecified,) |
| >Misc                      |   |  |
| >>Miscellan<br>eous Cause  | М | ENUMERATED (Control Processing Overload, Hardware Failure, O&M Intervention, Unspecified,)   |

The meaning of the different cause values is described in the following table. In general, "not supported" cause values indicate that the related capability is missing. On the other hand, "not available" cause values indicate that the related capability is present, but insufficient resources were available to perform the requested action.

| RIC Request cause              | Meaning  |
|--------------------------------|--|
| Unspecified                    | Sent for RIC service cause when none of the specified cause  |
|                                | values applies.  |
| RAN Function ID invalid        | Requested function Id invalid or not known by E2 Node        |
| Action not supported           | Requested Action not supported by RAN function               |
| Excessive actions              | Excessive number of actions requested for RAN Function       |
| Duplicate action               | Same action requested more than once in same subscription    |
|                                | request  |
| Duplicate Event Trigger        | Subscription request has same event trigger as previously    |
|                                | accepted subscription request                                |
| Function resource limit        | RAN function has reached resource limit                      |
| RIC Request ID unknown         | RIC Request ID sent to Near-RT RIC is unknown                |
| Inconsistent Action/subsequent | RAN Function has detected inconsistent sequence of           |
| Action sequence                | requested Action and Subsequent Action                       |
| Control message invalid        | RAN Function has detected invalid RIC CONTROL                |
|                                | REQUEST message  |
| RIC Call process ID invalid    | RAN function has detected invalid RIC Call Process ID in RIC |
|                                | CONTROL REQUEST  |
| Control timer expired          | RIC Control Request received by E2 Node after the            |
|                                | associated RIC Time to Wait timer had expired                |
| Control failed to execute      | Requested control procedure initiated by RIC Control Request |
|                                | failed to be executed in the E2 Node                         |
| System not ready               | RAN Function is not ready to receive RIC Subscription or RIC |
|                                | Control message  |

1

2

2

3

5



| RIC Service cause          | Meaning   |
|----------------------------|---|
| RAN Function not supported | The RAN Function described by E2 Node is not supported by |
|                            | Near-RT RIC   |
| Excessive functions        | RIC has reached a limit on the number of declared RAN     |
|                            | functions   |
| RIC resource limit         | RIC has reached a resource limit                          |

| E2 Node configuration cause | Meaning   |
|-----------------------------|---|
| E2 Node component unknown   | The received message refers to an unknown E2 Node |
|                             | component   |

| Transport Layer cause          | Meaning  |
|--------------------------------|--|
| Unspecified                    | Sent when none of the cause values below applies but still the |
|                                | cause is Transport Network Layer related.                      |
| Transport Resource Unavailable | The required transport resources are not available.            |

| Protocol cause                    | Meaning  |
|-----------------------------------|--|
| Transfer Syntax Error             | The received message included a transfer syntax error.         |
| Abstract Syntax Error (Reject)    | The received message included an abstract syntax error and     |
|                                   | the concerning criticality indicated "reject".                 |
| Abstract Syntax Error (Ignore And | The received message included an abstract syntax error and     |
| Notify)                           | the concerning criticality indicated "ignore and notify".      |
| Message Not Compatible With       | The received message was not compatible with the receiver      |
| Receiver State                    | state.   |
| Semantic Error                    | The received message included a semantic error.                |
| Abstract Syntax Error (Falsely    | The received message contained IEs or IE groups in wrong       |
| Constructed Message)              | order or with too many occurrences.                            |
| Unspecified                       | Sent when none of the above cause values applies but still the |
|                                   | cause is Protocol related.                                     |

| Miscellaneous cause              | Meaning   |
|----------------------------------|---|
| Control Processing Overload      | Control processing overload.                                |
| Not Enough User Plane Processing | Not enough resources are available related to user plane    |
| Resources Available              | processing.   |
| Hardware Failure                 | Action related to hardware failure.                         |
| O&M Intervention                 | The action is due to O&M intervention.                      |
| Unspecified Failure              | Sent when none of the above cause values applies and the    |
|                                  | cause is not related to any of the categories Radio Network |
|                                  | Layer, Transport Network Layer, NAS or Protocol.            |

# 9.2.2 Criticality Diagnostics

- The *Criticality Diagnostics* IE is sent by the E2 Node or the Near-RT RIC when parts of a received message have not
- 8 been comprehended or were missing, or if the message contained logical errors. When applicable, it contains
- 9 information about which IEs were not comprehended or were missing.
- For further details on how to use the *Criticality Diagnostics* IE, (see clause 10). The conditions for inclusion of the
- 11 *Transaction ID* IE are described in clause 10.

2

3

5

6

8



| IE/Group Name                                  | Presence | Range                                 | IE type and reference  | Semantics description   |
|--|----------|---------------------------------------|--|---|
| Procedure Code                                 | 0        |                                       | INTEGER (0255)   | Procedure Code is to be used if Criticality Diagnostics is part of Error Indication procedure, and not within the response message of the same procedure that caused the error. |
| Triggering Message                             | 0        |                                       | ENUMERATED<br>(initiating message,<br>successful<br>outcome,<br>unsuccessful<br>outcome) | The Triggering Message is used only if the Criticality Diagnostics is part of Error Indication procedure.   |
| Procedure Criticality                          | 0        |                                       | ENUMERATED<br>(reject, ignore,<br>notify)  | This Procedure Criticality is used for reporting the Criticality of the Triggering message (Procedure).   |
| RIC Request ID                                 | 0        |                                       | 9.2.7  |   |
| Information Element<br>Criticality Diagnostics |          | 0 <maxnoof<br>Errors&gt;</maxnoof<br> |  |   |
| >IE Criticality                                | М        |                                       | ENUMERATED<br>(reject, ignore,<br>notify)  | The IE Criticality is used for reporting the criticality of the triggering IE. The value 'ignore' shall not be used.  |
| >IE ID   | М        |                                       | INTEGER<br>(065535)  | The IE ID of the not understood or missing IE.  |
| >Type of Error                                 | М        |                                       | ENUMERATED (not understood, missing)   | -   |

| Range bound   | Explanation   |
|---------------|---|
| maxnoofErrors | Maximum no. of IE errors allowed to be reported with a single |
|               | message. The value for maxnoofErrors is 256.                  |

# 9.2.3 Message Type

4 The *Message Type* IE uniquely identifies the message being sent. It is mandatory for all messages.

| IE/Group Name | Presence | Range | IE type and reference                           | Semantics description |
|---------------|----------|-------|---|-----------------------|
| Message Type  |          |       |   |                       |
| >Procedure    | М        |       | INTEGER (0255)                                  |                       |
| Code          |          |       |   |                       |
| >Type of      | М        |       | CHOICE (Initiating Message, Successful Outcome, |                       |
| Message       |          |       | Unsuccessful Outcome,)                          |                       |

# 9.2.4 Global RIC ID

This IE is used to globally identify an Near-RT RIC.

| IE/Group Name  | Presence | Range | IE type and reference      | Semantics description |
|----------------|----------|-------|----------------------------|-----------------------|
| PLMN Identity  | М        |       | 3GPP 38.423 clause 9.2.2.4 |                       |
| Near-RT RIC ID | М        |       | BIT STRING (SIZE(20))      |                       |

.56



3

## 9.2.5 Time to wait

This IE defines the minimum allowed waiting times.

| IE/Group Name | Presence | Range | IE type and reference                 | Semantics description |
|---------------|----------|-------|---------------------------------------|-----------------------|
| Time to wait  | М        |       | ENUMERATED(1s, 2s, 5s, 10s, 20s, 60s) |                       |

# 9.2.6 Global E2 Node ID

5 This IE is used to globally identify an E2 node.

| IE/Group Name      | Presence | Range | IE type and reference       | Semantics description   |
|--------------------|----------|-------|-----------------------------|---|
| CHOICE             | M        |       |                             |   |
| >gNB               |          |       |                             | To be used when E2 Node supports gNB mode or both gNB and en-gNB modes    |
| >>Global gNB ID    | М        |       | 3GPP 38.423 clause 9.2.2.1  | Required when E2 node supports NR with gNB mode                           |
| >>Global en-gNB ID | 0        |       | 3GPP 36.423 clause 9.2.112  | Required when E2 node<br>supports NR with en-gNB<br>mode                  |
| >>gNB-CU-UP ID     | 0        |       | 3GPP 38.463 clause 9.3.1.15 | Required when E2 Node of type gNB-CU-UP                                   |
| >>gNB-DU ID        | 0        |       | 3GPP 38.473 clause 9.3.1.9  | Required when E2 Node of type gNB-DU                                      |
| >en-gNB            |          |       |                             | To be used when E2 Node supports en-gNB mode only                         |
| >>Global en-gNB ID | M        |       | 3GPP 36.423 clause 9.2.112  |   |
| >>en-gNB-CU-UP ID  | 0        |       | 3GPP 38.463 clause 9.3.1.15 | Required when E2 Node of type gNB-CU-UP                                   |
| >>en-gNB-DU ID     | 0        |       | 3GPP 38.473 clause 9.3.1.9  | Required when E2 Node of type gNB-DU                                      |
| >ng-eNB            |          |       |                             | To be used when E2 Node supports ng-eNB mode or both ng-eNB and eNB modes |
| >>Global ng-eNB ID | M        |       | 3GPP 38.423 clause 9.2.2.2  | Required when E2 Node supports E-UTRA with ng-eNB mode                    |
| >>Global eNB ID    | 0        |       | 3GPP 36.423 clause 9.2.22   | Required when E2 Node supports E-UTRA with eNB mode                       |
| >>ng-eNB-DU ID     | 0        |       | 3GPP 37.473 clause 9.3.1.9  | Required when E2 node of type ng-eNB DU                                   |
| >eNB               |          |       |                             | To be used when E2 Node supports eNB mode only                            |
| >>Global eNB ID    | M        |       | 3GPP 36.423 clause 9.2.22   |   |

# 9.2.7 RIC Request ID

8 This information element indicates the REQUEST ID number.

| IE/Group Name    | Presence | Range | IE type and reference | Semantics description |
|------------------|----------|-------|-----------------------|-----------------------|
| RIC Requestor ID | М        |       | INTEGER (0<br>65535)  |                       |
| RIC Instance ID  | М        |       | INTEGER<br>(065535)   |                       |



6

8

9

10

12

13

## 9.2.8 RAN Function ID

2 This information element indicates the RAN Function ID number, to be unique within a given E2 Node.

| IE/Group Name   | Presence | Range | IE type and reference | Semantics description                               |
|-----------------|----------|-------|-----------------------|---|
| RAN Function ID | М        |       | INTEGER (04095)       | Value 0 reserved for Near-<br>RT RIC internal usage |

# 4 9.2.9 RIC Event Trigger Definition

5 This information element indicates the RIC event trigger description used by the RIC Subscription procedure.

| IE/Group Name                | Presence | Range | IE type and reference | Semantics description                                 |
|------------------------------|----------|-------|-----------------------|---|
| RIC Event Trigger Definition | М        |       | OCTET STRING          | Defined in RAN Function specific E2 Service Model [3] |

### 9.2.10 RIC Action ID

This information element indicates the Action ID number, to be unique within the given RIC Request ID.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description |
|---------------|----------|-------|-----------------------|-----------------------|
| RIC Action ID | M        |       | INTEGER (0255)        |                       |

# 9.2.11 RIC Action Type

11 This IE defines the type of action to be executed.

| IE/Group Name   | Presence | Range | IE type and reference | Semantics description |
|-----------------|----------|-------|-----------------------|-----------------------|
| RIC Action Type | M        |       | ENUMERATED            |                       |
|                 |          |       | (Insert, Report,      |                       |
|                 |          |       | Policy,)              |                       |

#### 9.2.12 RIC Action Definition

14 This information element provides parameters to used when executed a **REPORT**, **INSERT** or **POLICY** service.

| IE/Group Name         | Presence | Range | IE type and reference | Semantics description                                 |
|-----------------------|----------|-------|-----------------------|---|
| RIC Action Definition | М        |       | OCTET STRING          | Defined in RAN Function specific E2 Service Model [3] |



# 9.2.13 RIC Subsequent Action

This IE defines the subsequent action to be taken after completing a particular Action. Shall be present when RIC

3 Action Type set to **Insert**.

| IE/Group Name              | Presence | Range | IE type and reference   | Semantics description |
|----------------------------|----------|-------|---|-----------------------|
| RIC Subsequent Action Type | М        |       | ENUMERATED (Continue, Halt,)  |                       |
| RIC Time to Wait           | М        |       | ENUMERATED<br>(1ms, 2ms, 5ms,<br>10ms, 20ms, 30ms,<br>40ms, 50ms,<br>100ms, 200ms,<br>500ms, 1s, 2s, 5s,<br>10s, 20s, 60s,) |                       |

4

5

# 9.2.14 RIC Indication Sequence Number (SN)

This information element indicates the Indication Sequence Number (SN).

| IE/Group Name     | Presence | Range | IE type and reference | Semantics description |
|-------------------|----------|-------|-----------------------|-----------------------|
| RIC Indication SN | М        |       | INTEGER (065535)      |                       |

7

8

# 9.2.15 RIC Indication Type

9 This IE defines the Indication Type.

| IE/Group Name       | Presence | Range | IE type and reference | Semantics description |
|---------------------|----------|-------|-----------------------|-----------------------|
| RIC Indication Type | M        |       | ENUMERATED (Insert,   |                       |
|                     |          |       | Report,)              |                       |

10

11

# 9.2.16 RIC Indication message

12 This information element carries the RIC indication message used for INSERT and REPORT procedures.

| IE/Group Name          | Presence | Range | IE type and reference | Semantics description                             |
|------------------------|----------|-------|-----------------------|---|
| RIC Indication message | M        |       | OCTET STRING          | Defined in RAN Function specific E2 Service Model |

13

14

## 9.2.17 RIC Indication header

15 This information element carries the RIC indication header used for INSERT and REPORT procedures.

| IE/Group Name         | Presence | Range | IE type and reference | Semantics description                                 |
|-----------------------|----------|-------|-----------------------|---|
| RIC Indication header | M        |       | OCTET STRING          | Defined in RAN Function specific E2 Service Model [3] |

6

7

9

10

11

13

14

16

18

#### 9.2.18 RIC Call Process ID

This information element carries the RIC Call Process ID, meaning shall be unique within a given Function on a given E2 Node.

| IE/Group Name       | Presence | Range | IE type and reference | Semantics description                                 |
|---------------------|----------|-------|-----------------------|---|
| RIC Call Process ID | M        |       | OCTET STRING          | Defined in RAN Function specific E2 Service model [3] |

# 9.2.19 RIC Control message

This information element carries the RIC control message for the RIC CONTROL procedure.

| IE/Group Name       | Presence | Range | IE type and reference | Semantics description                                 |
|---------------------|----------|-------|-----------------------|---|
| RIC Control Message | М        |       | OCTET STRING          | Defined in RAN Function specific E2 Service model [3] |

#### 9.2.20 RIC Control header

This information element carries the RIC control header used for CONTROL procedures.

| IE/Group Name      | Presence | Range | IE type and reference | Semantics description                                 |
|--------------------|----------|-------|-----------------------|---|
| RIC Control header | M        |       | OCTET STRING          | Defined in RAN Function specific E2 Service Model [3] |

# 9.2.21 RIC Control Ack Request

This IE defines whether and when the RIC CONTROL ACKNOWLEDGE message should be replied as described in the below table.

| IE/Group Name           | Presence | Range | IE type and reference    | Semantics<br>description |
|-------------------------|----------|-------|--------------------------|--------------------------|
| RIC Control Ack Request | М        |       | ENUMERATED (NoAck, Ack,) |                          |

15 The meaning of the different values is described in the following table.

| RIC Service cause | Meaning  |
|-------------------|--|
| NoAck             | Optional RIC Control Acknowledgement is not required |
| Ack               | Optional RIC Control Acknowledgement is required     |

## 17 9.2.22 Void

#### 9.2.23 RAN Function Definition

20 This information element carries the RAN Function Definition.



| IE/Group Name           | Presence | Range | IE type and reference | Semantics description                                 |
|-------------------------|----------|-------|-----------------------|---|
| RAN Function Definition | M        |       | OCTET STRING          | Defined in RAN Function specific E2 Service Model [3] |

3

## 9.2.24 RAN Function Revision

This information element carries the RAN Function Revision.

| IE/Group Name         | Presence | Range | IE type and reference | Semantics description |
|-----------------------|----------|-------|-----------------------|-----------------------|
| RAN Function Revision | М        |       | INTEGER (04095)       |                       |

4

5

## 9.2.25 RIC Control Outcome

6 This information element carries the RIC Control Outcome.

| IE/Group Name       | Presence | Range | IE type and reference | Semantics description                                 |
|---------------------|----------|-------|-----------------------|---|
| RIC Control Outcome | M        |       | OCTET STRING          | Defined in RAN Function specific E2 Service Model [3] |

7

# 9.2.26 E2 Node Component Interface Type

This IE is used to identify an E2 node component type.

| IE/Group Name     | Presence | Range | IE type and reference   | Semantics description |
|-------------------|----------|-------|-------------------------|-----------------------|
| E2 node component | M        |       | ENUMERATED (ng, xn, e1, |                       |
| interface type    |          |       | f1, w1, s1, x2,)        |                       |

10

11

13

# 9.2.27 E2 Node Component Configuration

This IE is used to carry the E2 Node component configuration update information of a specific E2 Node component. In all cases the information is a data structure defined by the appropriate 3GPP specification and carried as an OCTET

14 STRING.

| IE/Group Name                       | Presence | Range | IE type and reference | Semantics description  |
|-------------------------------------|----------|-------|-----------------------|--|
| SEQUENCE                            | M        |       |                       |  |
| >E2 Node Component<br>Request Part  | M        |       | OCTET STRING          | Contents depend on component type and used to carry new or updated component configuration. See the table below. |
| >E2 Node Component<br>Response Part | М        |       | OCTET STRING          | Contents depend on component type and used to carry new or updated component configuration. See the table below. |

15

16

17

The following table presents how this IE should be used for the E2 SETUP REQUEST and E2 NODE

CONFIGURATION UPDATE REQUEST messages.



|  | Addition list  | Component Update list  |   |  |  |
|--|--|--|---|--|--|
| E2 Node component message content            | Request part   | Response part  | Request part  | Response part  |  |
| gNB case >NG  (AMF Name)                     | NG SETUP<br>REQUEST,<br>3GPP 38.413 [19]<br>clause 9.2.6.1                                 | NG SETUP<br>RESPONSE,<br>3GPP 38.413 [19]<br>clause 9.2.6.2              | RAN CONFIGURATION UPDATE, 3GPP 38.413 [19] clause 9.2.6.4 Or                  | RAN CONFIGURATION UPDATE ACKNOWLEDGE, 3GPP 38.413 [19] clause 9.2.6.5 Or                         |  |
|  |  |  | AMF<br>CONFIGURATION<br>UPDATE,<br>3GPP 38.413 [19]<br>clause 9.2.6.7         | AMF CONFIGURATION UPDATE ACKNOWLEDGE, 3GPP 38.413 [19] clause 9.2.6.8                            |  |
| >Xn<br>(Neighbour Global<br>NG-RAN Node ID ) | XN SETUP<br>REQUEST,<br>3GPP 38.423 [20]<br>clause 9.1.3.1                                 | XN SETUP<br>RESPONSE,<br>3GPP 38.423 [20]<br>clause 9.1.3.2              | NG-RAN NODE<br>CONFIGURATION<br>UPDATE,<br>3GPP 38.423 [20]<br>clause 9.1.3.4 | NG-RAN NODE<br>CONFIGURATION<br>UPDATE<br>ACKNOWLEDGE,<br>3GPP 38.423 [20]<br>clause 9.1.3.5     |  |
| >E1<br>(gNB-CU-UP ID)                        | GNB-CU-UP E1<br>SETUP REQUEST,<br>3GPP 38.463 [21]<br>clause 9.2.1.4<br>Or<br>GNB-CU-CP E1 | GNB-CU-UP E1<br>SETUP<br>RESPONSE,<br>3GPP 38.463 [21]<br>clause 9.2.1.5 | GNB-CU-UP<br>CONFIGRATION<br>UPDATE,<br>3GPP 38.463 [21]<br>clause 9.2.1.10   | GNB-CU-UP<br>CONFIGRATION<br>UPDATE<br>ACKNOWLEDGE,<br>3GPP 38.463 [21]<br>clause 9.2.1.11<br>Or |  |
|  | SETUP REQUEST,<br>3GPP 38.463 [21]<br>clause 9.2.1.7                                       | GNB-CU-CP E1<br>SETUP<br>RESPONSE,<br>3GPP 38.463 [21]<br>clause 9.2.1.8 | GNB-CU-CP<br>CONFIGURATION<br>UPDATE,<br>3GPP 38.463 [21]<br>clause 9.2.1.13  | GNB-CU-CP<br>CONFIGURATION<br>UPDATE<br>ACKNOWLEDGE,<br>3GPP 38.463 [21]<br>clause 9.2.1.14      |  |
| >F1<br>(gNB-DU ID)                           | F1 SETUP<br>REQUEST,<br>3GPP 38.473 [22]<br>clause 9.2.1.4                                 | F1 SETUP<br>RESPONSE,<br>3GPP 38.473 [22]<br>clause 9.2.1.5              | GNB-DU<br>CONFIGRATION<br>UPDATE,<br>3GPP 38.473 [22]<br>clause 9.2.1.7       | GNB-DU<br>CONFIGRATION<br>UPDATE<br>ACKNOWLEDGE,<br>3GPP 38.473 [22]<br>clause 9.2.1.8           |  |
|  |  |  | Or  | Or   |  |
|  |  |  | GNB-CU<br>CONFIGURATION<br>UPDATE,<br>3GPP 38.473 [22]<br>clause 9.2.1.10     | GNB-CU<br>CONFIGURATION<br>UPDATE<br>ACKNOWLEDGE,<br>3GPP 38.473 [22]<br>clause 9.2.1.11         |  |
| >X2<br>(Neighbour Global<br>eNB ID)          | EN-DC X2 SETUP<br>REQUEST,<br>3GPP 36.423 [25]<br>clause 9.1.2.31                          | EN-DC X2 SETUP<br>RESPONSE,<br>3GPP 36.423 [25]<br>clause 9.1.2.32       | EN-DC<br>CONFIGURATION<br>UPDATE,<br>3GPP 36.423 [25]<br>clause 9.1.2.34      | EN-DC<br>CONFIGURATION<br>UPDATE<br>ACKNOWLEDGE,<br>3GPP 36.423 [25]<br>clause 9.1.2.35          |  |



| E2 Node company  | 1  | t Addition list   | <u> </u>  | t Update list  |
|--|--|---|---|--|
| E2 Node component message content                      | Request part   | Response part   | Request part  | Response part  |
| eNB case   |  |   |   |  |
| >NG  | NG SETUP   | NG SETUP  | RAN   | RAN  |
| (AMF Name)   | REQUEST,<br>3GPP 38.413 [19]<br>clause 9.2.6.1             | RESPONSE,<br>3GPP 38.413 [19]<br>clause 9.2.6.2             | CONFIGURATION<br>UPDATE,<br>3GPP 38.413 [19]<br>clause 9.2.6.4                | CONFIGURATION<br>UPDATE<br>ACKNOWLEDGE,<br>3GPP 38.413 [19]<br>clause 9.2.6.5                    |
|  |  |   | Or  AMF CONFIGURATION UPDATE,   | Or  AMF CONFIGURATION  |
|  |  |   | 3GPP 38.413 [19]<br>clause 9.2.6.7  | UPDATE<br>ACKNOWLEDGE,<br>3GPP 38.413 [19]<br>clause 9.2.6.8                                     |
| >Xn<br>(Neighbour Global<br>NG-RAN Node ID)            | XN SETUP<br>REQUEST,<br>3GPP 38.423 [20]<br>clause 9.1.3.1 | XN SETUP<br>RESPONSE,<br>3GPP 38.423 [20]<br>clause 9.1.3.2 | NG-RAN NODE<br>CONFIGURATION<br>UPDATE,<br>3GPP 38.423 [20]<br>clause 9.1.3.4 | NG-RAN NODE<br>CONFIGURATION<br>UPDATE<br>ACKNOWLEDGE,<br>3GPP 38.423 [20]<br>clause 9.1.3.5     |
| >W1<br>(ng-eNB-DU ID)                                  | W1 SETUP<br>REQUEST,<br>3GPP 37.473 [23]<br>clause 9.2.1.4 | W1 SETUP<br>RESPONSE,<br>3GPP 37.473 [23]<br>clause 9.2.1.5 | NG-ENB-DU<br>CONFIGURATION<br>UPDATE,<br>3GPP 37.473 [23]<br>clause 9.2.1.7   | NG-ENB-DU<br>CONFIGURATION<br>UPDATE<br>ACKNOWLEDGE,<br>3GPP 37.473 [23]<br>clause 9.2.1.8<br>Or |
|  |  |   | NG-ENB-CU<br>CONFIGURATION<br>UPDATE,<br>3GPP 37.473 [23]<br>clause 9.2.1.10  | NG-ENB-CU<br>CONFIGURATION<br>UPDATE<br>ACKNOWLEDGE,<br>3GPP 37.473 [23]<br>clause 9.2.1.11      |
| >S1<br>(MME Name)                                      | S1 SETUP<br>REQUEST,<br>3GPP 36.413 [24]<br>clause 9.1.8.4 | S1 SETUP<br>RESPONSE,<br>3GPP 36.413 [24]<br>clause 9.1.8.5 | ENB<br>CONFIGURATION<br>UPDATE,<br>3GPP 36.413 [24]<br>clause 9.1.8.7         | ENB<br>CONFIGRATION<br>UPDATE<br>ACKNOWLEDGE,<br>3GPP 36.413 [24]<br>clause 9.1.8.8              |
|  |  |   | MME<br>CONFIGURATION<br>UPDATE,<br>3GPP 36.413 [24]<br>clause 9.1.8.10        | MME CONFIGURATION UPDATE ACKNOWLEDGE, 3GPP 36.413 [24] clause 9.1.8.11                           |
| >X2<br>(when neighbour is<br>eNB)<br>(Neighbour Global | X2 SETUP<br>REQUEST,<br>3GPP 36.423 [25]<br>clause 9.1.2.3 | X2 SETUP<br>RESPONSE,<br>3GPP 36.423 [25]<br>clause 9.1.2.4 | ENB<br>CONFIGURATION<br>UPDATE,<br>3GPP 36.423 [25]<br>clause 9.1.2.8         | ENB<br>CONFIGRATION<br>UPDATE<br>ACKNOWLEDGE,<br>3GPP 36.423 [25]                                |
| eNB ID) >X2 (when neighbour is                         | EN-DC X2 SETUP<br>REQUEST,                                 | EN-DC X2 SETUP<br>RESPONSE,                                 | EN-DC<br>CONFIGURATION  | clause 9.1.2.9<br>EN-DC<br>CONFIGURATION   |
| en-gNB) (Neighbour Global                              | 3GPP 36.423 [25]<br>clause 9.1.2.31                        | 3GPP 36.423 [25]<br>clause 9.1.2.32                         | UPDATE,<br>3GPP 36.423 [25]<br>clause 9.1.2.34                                | UPDATE<br>ACKNOWLEDGE,<br>3GPP 36.423 [25]   |

5

6



|                                   | Component    | Addition list | Component Update list |                 |
|-----------------------------------|--------------|---------------|-----------------------|-----------------|
| E2 Node component message content | Request part | Response part | Request part          | Response part   |
| eNB ID)                           |              |               |                       | clause 9.1.2.35 |

9.2.28 E2 Node Component Configuration Acknowledge

3 This IE is used to carry the E2 Node component configuration update acknowledge of a specific E2 Node component.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description |
|---------------|----------|-------|-----------------------|-----------------------|
| Outcome       | M        |       | ENUMERATED (success,  |                       |
|               |          |       | failure,)             |                       |
| Cause         | 0        |       | 9.2.1                 | Cause for failure     |

9.2.29 Transport Layer Information

This information element provides Near-RT RIC address and optionally port number to be used by an E2 Node.

| IE/Group Name           | Presence | Range | IE type and reference       | Semantics description                                  |
|-------------------------|----------|-------|-----------------------------|--|
| Transport Layer Address | M        |       | BIT STRING<br>(SIZE(1160,)) | To be passed to transport layer without interpretation |
| Transport Layer Port    | 0        |       | BIT STRING<br>(SIZE(16))    | To be passed to transport layer without interpretation |

9.2.30 TNL Association Usage

9 This information element provides TNL association usage.

| IE/Group Name         | Presence | Range | IE type and reference                              | Semantics description   |
|-----------------------|----------|-------|--|---|
| TNL Association Usage | М        |       | ENUMERATED (ric service, support functions, both,) | Indicates whether E2<br>connection to be used for<br>RIC services only, or E2<br>support functions only, or<br>both |

9.2.31 RAN Function OID

12 This information element carries the RAN Function OID

| IE/Group Name              | Presence | Range | IE type and reference        | Semantics description |
|----------------------------|----------|-------|------------------------------|-----------------------|
| RAN Function Service Model | M        |       | PrintableString(SIZE(11000,. | Object Identifier     |
| OID                        |          |       | ))                           | of the specific       |
|                            |          |       |                              | RAN Function          |
|                            |          |       |                              | definition.           |
|                            |          |       |                              | Formatted as per      |
|                            |          |       |                              | OID (e.g.             |
|                            |          |       |                              | 1.3.6.1.4.1.53148.    |
|                            |          |       |                              | 1.2.1 for E2SM-       |
|                            |          |       |                              | NI)                   |

10



# 9.2.32 E2 Node Component ID

This IE is used to locally identify an E2 node component.

| IE/Group Name              | Presence | Range | IE type and reference            | Semantics description   |
|----------------------------|----------|-------|----------------------------------|-------------------------|
| CHOICE E2 node             | M        |       |                                  |                         |
| component interface type   |          |       |                                  |                         |
| >NG                        |          |       |                                  |                         |
| >>AMF name                 | М        |       | 3GPP 38.413 [19] clause 9.3.3.21 | Serving AMF             |
| >Xn                        |          |       |                                  |                         |
| >>Global NG-RAN<br>Node ID | M        |       | 3GPP 38.423 [20] clause 9.2.2.3  | Neighbour gNB or ng-eNB |
| >E1                        |          |       |                                  |                         |
| >>gNB-CU-UP ID             | М        |       | 3GPP 38.463 [21] clause 9.3.1.15 |                         |
| >F1                        |          |       |                                  |                         |
| >>gNB-DU ID                | М        |       | 3GPP 38.473 [22] clause 9.3.1.9  |                         |
| >W1                        |          |       |                                  |                         |
| >>ng-eNB-DU ID             | M        |       | 3GPP 37.473 [23] clause          |                         |
| >S1                        |          |       |                                  |                         |
| >>MME name                 | М        |       | 3GPP 36.413 [24], clause 9.1.8.5 | Serving MME             |
| >X2                        |          |       |                                  |                         |
| >>Global eNB ID            | 0        |       | 3GPP 36.423 [25] clause 9.2.22   | Neighbour eNB           |
| >>Global en-gNB<br>ID      | 0        |       | 3GPP 36.423 [25] clause 9.2.112  | Neighbour en-gNB        |

#### 9.2.33 Transaction ID

The *Transaction ID* IE uniquely identifies a procedure among all ongoing parallel procedures of the same type initiated by the same protocol peer. Messages belonging to the same procedure shall use the same Transaction ID. The Transaction ID is determined by the initiating peer of a procedure.

8

9

10

11

6

3

| IE/Group Name  | Presence | Range | IE type and reference | Semantics description |
|----------------|----------|-------|-----------------------|-----------------------|
| Transaction ID | M        |       | INTEGER (0255,)       |                       |

# 9.3 Message and Information Element Abstract Syntax (with ASN.1)

#### 9.3.1 General

- 13 E2AP ASN.1 definition conforms to ITU-T Rec. X.691 [15], ITU-T Rec. X.680 [16] and ITU-T Rec. X.681 [17].
- 14 The ASN.1 definition specifies the structure and content of E2AP messages. E2AP messages can contain any IEs
- 15 specified in the object set definitions for that message without the order or number of occurrence being restricted by
- ASN.1. However, for this version of the standard, a sending entity shall construct an E2AP message according to the
- 17 PDU definitions module and with the following additional rules:
- IEs shall be ordered (in an IE container) in the order they appear in object set definitions.
- Object set definitions specify how many times IEs may appear. An IE shall appear exactly once if the presence field in an object has value "mandatory". An IE may appear at most once if the presence field in an object has value
- 21 "optional" or "conditional". If in a tabular format there is multiplicity specified for an IE (i.e., an IE list) then in the
- corresponding ASN.1 definition the list definition is separated into two parts. The first part defines an IE container list



9

67

E2RemovalResponse

- 1 where the list elements reside. The second part defines list elements. The IE container list appears as an IE of its own.
- 2 For this version of the standard an IE container list may contain only one kind of list elements.
- NOTE: In the above "IE" means an IE in the object set with an explicit ID. If one IE needs to appear more than once
- 4 in one object set, then the different occurrences will have different IE IDs.
- If an E2AP message that is not constructed as defined above is received, this shall be considered as Abstract Syntax
- 6 Error, and the message shall be handled as defined for Abstract Syntax Error in subclause 10.3.6.

### 9.3.2 Usage of private message mechanism for non-standard use

The private message mechanism for non-standard are not supported with E2AP.

## 9.3.3 Elementary Procedure Definitions

```
-- ASN1START
11
12
       -- Elementary Procedure definitions
13
       -- Derived from 3GPP 38.413 v15.4.0 NGAP
15
       E2AP-PDU-Descriptions {
       iso(1) identified-organization(3) dod(6) internet(1) private(4) enterprise(1) 53148 e2(1) version2
18
       (2) e2ap(1) e2ap-PDU-Descriptions (0) }
       DEFINITIONS AUTOMATIC TAGS ::=
       BEGIN
          ****************
26
27
       -- IE parameter types from other modules.
       TMPORTS
           Criticality,
33
           ProcedureCode
34
       FROM E2AP-CommonDataTypes
35
36
           E2connectionUpdate,
39
           E2connectionUpdateAcknowledge,
40
           E2connectionUpdateFailure,
41
           E2nodeConfigurationUpdate,
           E2nodeConfigurationUpdateAcknowledge,
43
           E2nodeConfigurationUpdateFailure,
44
           E2setupFailure,
45
           E2setupRequest,
           E2setupResponse,
46
47
           ErrorIndication,
48
           ResetRequest.
49
           ResetResponse
50
           RICcontrolAcknowledge,
51
           RICcontrolFailure,
52
           RICcontrolRequest,
53
           RICindication,
           RICserviceQuery
           RICserviceUpdate,
56
           RICserviceUpdateAcknowledge,
57
           RICserviceUpdateFailure,
58
           RICsubscriptionFailure,
           RICsubscriptionRequest,
60
           RICsubscriptionResponse
           RICsubscriptionDeleteFailure,
61
62
           RICsubscriptionDeleteRequest,
           RICsubscriptionDeleteResponse,
           RICsubscriptionDeleteRequired,
           E2RemovalFailure,
65
           E2RemovalRequest,
66
```



```
1
 2
 23
 4
 6
 7
 8
 9
10
11
12
13
14
15
16
18
19
20
21
22
23
24
25
26
27
28
29
30
33
34
35
36
37
38
41
42
43
44
45
46
47
48
49
50
51
54
55
56
57
58
59
60
61
62
63
64
65
66
68
69
70
71
72
73
74
75
```

```
FROM E2AP-PDU-Contents
    id-E2connectionUpdate
    id-E2nodeConfigurationUpdate,
    id-E2setup,
    id-ErrorIndication,
    id-Reset,
    id-RICcontrol,
    id-RICindication,
    id-RICserviceQuery,
    id-RICserviceUpdate,
    id-RICsubscription,
    id-RICsubscriptionDelete,
    id-RICsubscriptionDeleteRequired,
    id-E2removal
FROM E2AP-Constants;
__ *********************************
-- Interface Elementary Procedure Class
E2AP-ELEMENTARY-PROCEDURE ::= CLASS {
    &InitiatingMessage
    &SuccessfulOutcome
                                               OPTTONAL
    &UnsuccessfulOutcome
                                               OPTIONAL
    &procedureCode
                                ProcedureCode
                                               UNIQUE
                                               DEFAULT ignore
    &criticality
                               Criticality
}
WITH SYNTAX {
    INITIATING MESSAGE
                               &InitiatingMessage
    [SUCCESSFUL OUTCOME
                               &SuccessfulOutcome]
    [UNSUCCESSFUL OUTCOME
                               &UnsuccessfulOutcome]
                               &procedureCode
    PROCEDURE CODE
    [CRITICALITY
                               &criticality]
}
__ *********************************
-- Interface PDU Definition
E2AP-PDU ::= CHOICE {
    initiatingMessage
                               InitiatingMessage,
    successfulOutcome
                               SuccessfulOutcome,
    unsuccessfulOutcome
                               UnsuccessfulOutcome,
InitiatingMessage ::= SEQUENCE {
                  E2AP-ELEMENTARY-PROCEDURE.&procedureCode
                                                                    ({E2AP-ELEMENTARY-PROCEDURES}),
    procedureCode
                   E2AP-ELEMENTARY-PROCEDURE.&criticality
                                                                    ({E2AP-ELEMENTARY-PROCEDURES}
    criticality
{@procedureCode}),
    value
                   E2AP-ELEMENTARY-PROCEDURE.&InitiatingMessage
                                                                    ({E2AP-ELEMENTARY-PROCEDURES}
{@procedureCode})
SuccessfulOutcome ::= SEQUENCE {
    procedureCode
                   E2AP-ELEMENTARY-PROCEDURE.&procedureCode
                                                                    ({E2AP-ELEMENTARY-PROCEDURES}),
                   E2AP-ELEMENTARY-PROCEDURE.&criticality
                                                                    ( {E2AP-ELEMENTARY-PROCEDURES }
    criticality
{@procedureCode}),
                   E2AP-ELEMENTARY-PROCEDURE.&SuccessfulOutcome
    value
                                                                    ({E2AP-ELEMENTARY-PROCEDURES}
{@procedureCode})
UnsuccessfulOutcome ::= SEQUENCE {
                   E2AP-ELEMENTARY-PROCEDURE.&procedureCode
    procedureCode
                                                                    ({E2AP-ELEMENTARY-PROCEDURES}),
    criticality
                   E2AP-ELEMENTARY-PROCEDURE.&criticality
                                                                    ({E2AP-ELEMENTARY-PROCEDURES}
{@procedureCode}),
    value
                    E2AP-ELEMENTARY-PROCEDURE.&UnsuccessfulOutcome ({E2AP-ELEMENTARY-PROCEDURES}
{@procedureCode})
```



2

3

6

12

13

14

15

16

17 18

19

20

21 22

25

26

27

28

29 30

33 34

35

37 38

39

40

41

42

43 44

45

46

47 48

49

50

51

52

53

56

57 58

59

60

61

65

66

67

68

69

70

73

74

75

```
-- Interface Elementary Procedure List
  *****************
E2AP-ELEMENTARY-PROCEDURES E2AP-ELEMENTARY-PROCEDURE ::= {
    E2AP-ELEMENTARY-PROCEDURES-CLASS-1
    E2AP-ELEMENTARY-PROCEDURES-CLASS-2,
E2AP-ELEMENTARY-PROCEDURES-CLASS-1 E2AP-ELEMENTARY-PROCEDURE ::= {
    ricSubscription
    ricSubscriptionDelete
    ricServiceUpdate
    ricControl
    e2setup
    e2node Configuration Update\\
    e2connectionUpdate
    reset
    e2removal.
E2AP-ELEMENTARY-PROCEDURES-CLASS-2 E2AP-ELEMENTARY-PROCEDURE ::= {
    ricIndication
    ricServiceQuery
    errorIndication
    ricSubscriptionDeleteRequired,
}
-- Interface Elementary Procedures
__ ********************************
-- New for v01.01
                       E2AP-ELEMENTARY-PROCEDURE ::= {
e2connectionUpdate
    INITIATING MESSAGE
                           E2connectionUpdate
    SUCCESSFUL OUTCOME
                           E2connectionUpdateAcknowledge
    UNSUCCESSFUL OUTCOME
                           E2connectionUpdateFailure
    PROCEDURE CODE
                           \verb"id-E2connectionUpdate"
    CRITICALITY
                           reject
}
{\tt e2nodeConfigurationUpdate}
                           E2AP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE
                           E2nodeConfigurationUpdate
    SUCCESSFUL OUTCOME
                           E2nodeConfigurationUpdateAcknowledge
    UNSUCCESSFUL OUTCOME
                           E2nodeConfigurationUpdateFailure
    PROCEDURE CODE
                           id-E2nodeConfigurationUpdate
    CRITICALITY
                           reject
-- New for v02.01
           E2AP-ELEMENTARY-PROCEDURE ::= {
e2removal
    INITIATING MESSAGE
                           E2RemovalRequest
    SUCCESSFUL OUTCOME
                           E2RemovalResponse
    UNSUCCESSFUL OUTCOME
                           E2RemovalFailure
    PROCEDURE CODE
                           id-E2removal
    CRITICALITY
                           reject
}
e2setup E2AP-ELEMENTARY-PROCEDURE ::= {
                           E2setupRequest
    INITIATING MESSAGE
    SUCCESSFUL OUTCOME
                           E2setupResponse
    UNSUCCESSFUL OUTCOME
                           E2setupFailure
    PROCEDURE CODE
                           id-E2setup
    CRITICALITY
                           reject
}
errorIndication E2AP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE
                           ErrorIndication
    PROCEDURE CODE
                           id-ErrorIndication
    CRITICALITY
                           ignore
}
reset
       E2AP-ELEMENTARY-PROCEDURE ::= {
```



2

3

4

6 7

8

9

10

11

12

13

16 17

18

19 20 21

22

24 25

28

29

30 31

32

33

37

38

39

40

41

42 43

44

45

46

47

48

49

52 53

55

56 57

58

59 60

61

63 64

65

66 67 68

71

```
INITIATING MESSAGE
                            ResetRequest
                            ResetResponse
    SUCCESSFUL OUTCOME
    PROCEDURE CODE
                            id-Reset
    CRITICALITY
                            reject
ricControl E2AP-ELEMENTARY-PROCEDURE ::= {
                            RICcontrolRequest
    INITIATING MESSAGE
    SUCCESSFUL OUTCOME
                            RICcontrolAcknowledge
    UNSUCCESSFUL OUTCOME
                            RICcontrolFailure
    PROCEDURE CODE
                            id-RICcontrol
    CRITICALITY
                            reject
ricIndication E2AP-ELEMENTARY-PROCEDURE ::= {
                            RICindication
    INITIATING MESSAGE
    PROCEDURE CODE
                            id-RICindication
    CRITICALITY
                            ignore
ricServiceQuery E2AP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE
                            RICserviceQuery
    PROCEDURE CODE
                            id-RICserviceQuery
    CRITICALITY
                            ignore
ricServiceUpdate E2AP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE
                            RICserviceUpdate
    SUCCESSFUL OUTCOME
                            RICserviceUpdateAcknowledge
                            RICserviceUpdateFailure
    UNSUCCESSFUL OUTCOME
    PROCEDURE CODE
                            id-RICserviceUpdate
    CRITICALITY
                            reject
}
ricSubscription E2AP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE
                            RICsubscriptionRequest
    SUCCESSFUL OUTCOME
                            RICsubscriptionResponse
    UNSUCCESSFUL OUTCOME
                            RICsubscriptionFailure
                            id-RICsubscription
    PROCEDURE CODE
    CRITICALITY
                            reject
}
ricSubscriptionDelete E2AP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE
                            RICsubscriptionDeleteRequest
    SUCCESSFUL OUTCOME
                             RICsubscriptionDeleteResponse
    UNSUCCESSFUL OUTCOME
                            RICsubscriptionDeleteFailure
    PROCEDURE CODE
                            id-RICsubscriptionDelete
    CRITICALITY
                            reject
ricSubscriptionDeleteRequired E2AP-ELEMENTARY-PROCEDURE ::= {
                            {\tt RIC subscription Delete Required}
    INITIATING MESSAGE
    PROCEDURE CODE
                            id-RICsubscriptionDeleteRequired
    CRITICALITY
}
END
-- ASN1STOP
```

#### 9.3.4 PDU definitions



```
3
4
        -- IE parameter types from other modules.
        __ *******************
6
Ŕ
        TMPORTS
9
            Cause,
            CriticalityDiagnostics,
10
            E2nodeComponentConfiguration,
11
            E2nodeComponentConfigurationAck,
12
13
            E2nodeComponentID,
            E2nodeComponentInterfaceType,
14
            GlobalE2node-ID,
15
            GlobalRIC-ID,
16
            RANfunctionDefinition,
17
18
            RANfunctionID,
            RANfunctionOID
19
20
            RANfunctionRevision,
            RICactionDefinition,
21
22
            RICactionID,
            RICactionType,
            RICcallProcessID,
24
            RICcontrolAckRequest,
25
            RICcontrolHeader,
26
27
            RICcontrolMessage,
            RICcontrolOutcome,
28
            RICeventTriggerDefinition, RICindicationHeader,
29
30
31
            RICindicationMessage,
32
            RICindicationSN,
            RICindicationType,
33
34
            RICrequestID,
35
            RICsubsequentAction,
            TimeToWait,
36
37
            TNLinformation,
38
            TNLusage,
            TransactionID
39
40
        FROM E2AP-IEs
            ProtocolIE-Container{},
            ProtocolIE-ContainerList{}
43
            ProtocolIE-SingleContainer{},
44
45
            E2AP-PROTOCOL-IES,
            E2AP-PROTOCOL-IES-PAIR
46
        FROM E2AP-Containers
47
            id-Cause,
            id-CriticalityDiagnostics,
50
            id-E2connectionSetup,
51
            id-E2connectionSetupFailed,
52
            id-E2connectionSetupFailed-Item,
53
            id-E2connectionFailed-Item,
            id-E2connectionUpdate-Item,
55
            id-E2connectionUpdateAdd,
56
            id-E2connectionUpdateModify,
57
58
            id-E2connectionUpdateRemove,
            id-E2connectionUpdateRemove-Item,
59
            id-E2nodeComponentConfigAddition,
id-E2nodeComponentConfigAddition-Item,
60
61
            id-E2nodeComponentConfigAdditionAck,
62
            id-E2nodeComponentConfigAdditionAck-Item,
63
            id-E2nodeComponentConfigRemoval,
64
            id-E2nodeComponentConfigRemoval-Item,
id-E2nodeComponentConfigRemovalAck,
65
66
67
            id-E2nodeComponentConfigRemovalAck-Item,
            id-E2nodeComponentConfigUpdate,
68
            id-E2nodeComponentConfigUpdate-Item,
id-E2nodeComponentConfigUpdateAck,
69
70
71
            id-E2nodeComponentConfigUpdateAck-Item,
72
            id-E2nodeTNLassociationRemoval,
73
            id-E2nodeTNLassociationRemoval-Item,
74
            id-GlobalE2node-ID,
75
            id-GlobalRIC-ID,
76
            id-RANfunctionID,
77
            id-RANfunctionID-Item,
78
            id-RANfunctionIEcause-Item,
```



```
id-RANfunction-Item,
           id-RANfunctionsAccepted,
           id-RANfunctionsAdded,
3
4
           id-RANfunctionsDeleted,
           id-RANfunctionsModified,
           id-RANfunctionsRejected,
6
7
           id-RICaction-Admitted-Item,
8
           id-RICactionID,
9
           id-RICaction-NotAdmitted-Item,
10
           id-RICactions-Admitted,
           id-RICactions-NotAdmitted,
11
12
           id-RICaction-ToBeSetup-Item,
           id-RICcallProcessID,
13
           id-RICcontrolAckRequest,
14
           id-RICcontrolHeader,
15
           id-RICcontrolMessage,
16
17
           id-RICcontrolOutcome,
           id-RICindicationHeader
18
           id-RICindicationMessage,
19
           id-RICindicationSN,
20
21
           id-RICindicationType,
22
           id-RICrequestID,
           id-RICserviceQuery,
           id-RICsubscriptionDetails,
24
25
           id-RICsubscriptionToBeRemoved,
26
           id-RICsubscription-withCause-Item,
27
           id-TimeToWait,
28
           id-TNLinformation,
29
           id-TransactionID,
30
31
           maxofE2nodeComponents,
32
           maxofRANfunctionID,
33
           maxofRICactionID,
           maxofRICrequestID,
34
35
           maxofTNLA
       FROM E2AP-Constants;
36
37
38
39
       __ ********************************
40
41
       -- MESSAGES FOR NEAR-RT RIC FUNCTIONAL PROCEDURES
42
       __ ********************************
43
44
45
       __ **********************************
46
47
       -- RIC Subscription Elementary Procedure
48
       __ *********************************
49
50
51
       -- RIC SUBSCRIPTION REQUEST
52
53
       __ **********************
       RICsubscriptionRequest ::= SEQUENCE {
55
           protocolIEs
                                       ProtocolIE-Container {{RICsubscriptionRequest-IEs}},
56
57
           . . .
58
59
60
       RICsubscriptionRequest-IEs E2AP-PROTOCOL-IES ::= {
           { ID id-RICrequestID
                                               CRITICALITY reject TYPE RICrequestID
61
           PRESENCE mandatory}|
                                               CRITICALITY reject TYPE RANfunctionID
63
           { ID id-RANfunctionID
           PRESENCE mandatory}|
64
           { ID id-RICsubscriptionDetails
65
                                               CRITICALITY reject TYPE RICsubscriptionDetails
66
           PRESENCE mandatory},
67
68
       }
69
70
71
       RICsubscriptionDetails ::= SEQUENCE {
72
           ricEventTriggerDefinition
                                      RICeventTriggerDefinition,
73
           ricAction-ToBeSetup-List
                                       RICactions-ToBeSetup-List,
74
75
       }
       {\tt RICactions-ToBeSetup-List} \ ::= \ {\tt SEQUENCE} \ ({\tt SIZE} (\texttt{1..maxofRICactionID})) \ {\tt OF} \ {\tt ProtocolIE-SingleContainer}
       { {RICaction-ToBeSetup-ItemIEs} }
78
```



```
1
 2
 3
 4
 6
 Ŕ
 9
10
11
12
13
14
15
16
17
18
19
20
21
22
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
64
65
66
67
70
71
72
73
74
```

76

77

```
E2AP-PROTOCOL-IES ::= {
RICaction-ToBeSetup-ItemIEs
                                     CRITICALITY ignore TYPE RICaction-ToBeSetup-Item
    { ID id-RICaction-ToBeSetup-Item
                                                                                        PRESENCE
mandatory },
   . . .
}
RICaction-ToBeSetup-Item ::= SEQUENCE {
   ricActionID
                              RICactionID,
                              RICactionType,
   ricActionType
   ricActionDefinition
                              RICactionDefinition
                                                     OPTIONAL,
   ricSubsequentAction
                              RICsubsequentAction
                                                     OPTIONAL.
}
__ **********************************
-- RIC SUBSCRIPTION RESPONSE
__ **********************
RICsubscriptionResponse ::= SEQUENCE {
   protocolIEs
                              ProtocolIE-Container{{RICsubscriptionResponse-IEs}},
}
RICsubscriptionResponse-IEs E2AP-PROTOCOL-IES ::= {
    { ID id-RICrequestID
                                      CRITICALITY reject
                                                             TYPE RICrequestID
   PRESENCE mandatory } |
    { ID id-RANfunctionID
                                                             TYPE RANfunctionID
                                      CRITICALITY reject
   PRESENCE mandatory } |
    { ID id-RICactions-Admitted
                                      CRITICALITY reject
                                                             TYPE RICaction-Admitted-List
   PRESENCE mandatory } | { ID id-RICactions-NotAdmitted
                                                             TYPE RICaction-NotAdmitted-List
                                      CRITICALITY reject
   PRESENCE optional },
}
RICaction-Admitted-List ::= SEQUENCE (SIZE(1..maxofRICactionID)) OF ProtocolIE-
SingleContainer{{RICaction-Admitted-ItemIEs}}
RICaction-Admitted-ItemIEs E2AP-PROTOCOL-IES ::= {
                                    CRITICALITY ignore
    { ID id-RICaction-Admitted-Item
                                                             TYPE RICaction-Admitted-Item
   PRESENCE mandatory },
}
RICaction-Admitted-Item ::= SEQUENCE {
   ricActionID
                              RICactionID,
}
RICaction-NotAdmitted-List ::= SEQUENCE (SIZE(0..maxofRICactionID)) OF ProtocolIE-SingleContainer
{ {RICaction-NotAdmitted-ItemIEs} }
RICaction-NotAdmitted-ItemIEs E2AP-PROTOCOL-IES ::= {
    { ID id-RICaction-NotAdmitted-Item CRITICALITY ignore TYPE RICaction-NotAdmitted-Item
    PRESENCE mandatory },
RICaction-NotAdmitted-Item ::= SEQUENCE {
   ricActionID
                              RICactionID,
   cause
                              Cause,
}
__ **********************************
-- RIC SUBSCRIPTION FAILURE
 _ *********************
RICsubscriptionFailure ::= SEQUENCE {
   protocolIEs
                              ProtocolIE-Container
                                                   {{RICsubscriptionFailure-IEs}},
    . . .
}
```



2

3

13 14

15

20 21 22

24 25

28

29

30 31

32 33

37

38 39 40

41

42

43 44 45

46

47 48

49 50 51

52 53

55

56

57 58

59 60

63

64

65

66

68

69 70

71 72

75

77

```
RICsubscriptionFailure-IEs E2AP-PROTOCOL-IES ::= {
   { ID id-RICrequestID
                                 CRITICALITY reject TYPE RICrequestID
   PRESENCE mandatory }|
   { ID id-RANfunctionID
                                 CRITICALITY reject TYPE RANfunctionID
   PRESENCE mandatory }|
   }
__ ********************************
-- RIC Subscription Delete Elementary Procedure
__ *********************************
-- RIC SUBSCRIPTION DELETE REQUEST
RICsubscriptionDeleteRequest ::= SEQUENCE {
   protocolIEs
                         ProtocolIE-Container {{RICsubscriptionDeleteRequest-IEs}},
}
RICsubscriptionDeleteRequest-IEs E2AP-PROTOCOL-IES ::= {
   { ID id-RICrequestID
                                CRITICALITY reject TYPE RICrequestID
   PRESENCE mandatory }|
   { ID id-RANfunctionID
                                CRITICALITY reject TYPE RANfunctionID
   PRESENCE mandatory },
}
__ *********************************
-- RIC SUBSCRIPTION DELETE RESPONSE
RICsubscriptionDeleteResponse ::= SEQUENCE {
   protocolIEs
                          ProtocolIE-Container {{RICsubscriptionDeleteResponse-IEs}},
}
RICsubscriptionDeleteResponse-IEs E2AP-PROTOCOL-IES ::= {
   { ID id-RICrequestID
                                 CRITICALITY reject TYPE RICrequestID
   PRESENCE mandatory }|
   { ID id-RANfunctionID
                                 CRITICALITY reject TYPE RANfunctionID
   PRESENCE mandatory },
-- RIC SUBSCRIPTION DELETE FAILURE
__ *********************************
RICsubscriptionDeleteFailure ::= SEQUENCE {
                          ProtocolIE-Container {{RICsubscriptionDeleteFailure-IEs}},
   protocolIEs
}
RICsubscriptionDeleteFailure-IEs E2AP-PROTOCOL-IES ::= {
                                CRITICALITY reject TYPE RICrequestID
   { ID id-RICrequestID
   PRESENCE mandatory }|
   { ID id-RANfunctionID
                                 CRITICALITY reject TYPE RANfunctionID
   PRESENCE mandatory }|
   { ID id-Cause
                                 CRITICALITY ignore TYPE Cause
   PRESENCE mandatory }|
   { ID id-CriticalityDiagnostics
                               CRITICALITY ignore TYPE CriticalityDiagnostics
   PRESENCE optional },
}
__ *******************
-- RIC Subscription Delete Required Elementary Procedure
__ ********************
```



2

3

6

8

9 10

13

14 15

16 17 18

19 20 21

22

24 25

28

29

30

31 32

35

37

42

43 44

45

46 47

48 49

50

51

52 53

55

56 57

58

59

60

61

62 63

64 65

66

67

70 71

72

73 74 75

77

```
*****************
-- RIC SUBSCRIPTION DELETE REQUIRED
__ ********************
{\tt RICsubscriptionDeleteRequired} \ ::= \ {\tt SEQUENCE} \ \{
                           ProtocolIE-Container {{RICsubscriptionDeleteRequired-IEs}},
   protocolIEs
}
RICsubscriptionDeleteRequired-IEs E2AP-PROTOCOL-IES ::= {
   { ID id-RICsubscriptionToBeRemoved
                                     CRITICALITY ignore TYPE RICsubscription-List-withCause
   PRESENCE mandatory },
}
RICsubscription-List-withCause ::= SEQUENCE (SIZE(1..maxofRICrequestID)) OF ProtocolIE-
SingleContainer { {RICsubscription-withCause-ItemlEs} }
{ ID id-RICsubscription-withCause-Item CRITICALITY ignore TYPE RICsubscription-withCause-Item
   PRESENCE mandatory },
}
RICsubscription-withCause-Item ::= SEQUENCE {
   ricRequestID
                           RICrequestID,
   ranFunctionID
                           RANfunctionID,
   cause
                           Cause,
}
__ ***********************************
-- RIC Indication Elementary Procedure
__ **********************************
-- RIC INDICATION
__ ********************
RICindication ::= SEQUENCE {
                                                {{RICindication-IEs}},
   protocolIEs
                           ProtocolIE-Container
}
RICindication-IEs E2AP-PROTOCOL-IES ::= {
                                  CRITICALITY reject TYPE RICrequestID
   { ID id-RICrequestID
   PRESENCE mandatory }|
   { ID id-RANfunctionID
                                  CRITICALITY reject TYPE RANfunctionID
   PRESENCE mandatory
                    }|
   { ID id-RICactionID
                                  CRITICALITY reject TYPE RICactionID
   PRESENCE mandatory }|
   { ID id-RICindicationSN
                                  CRITICALITY reject TYPE RICindicationSN
   PRESENCE optional
   { ID id-RICindicationType
                                  CRITICALITY reject TYPE RICindicationType
   PRESENCE mandatory }|
   { ID id-RICindicationHeader
                                  CRITICALITY reject TYPE RICindicationHeader
   PRESENCE mandatory }|
   { ID id-RICindicationMessage
                                  CRITICALITY reject TYPE RICindicationMessage
   PRESENCE mandatory }|
   { ID id-RICcallProcessID
                                  CRITICALITY reject TYPE RICcallProcessID
   PRESENCE optional },
}
__ *****************************
-- RIC Control Elementary Procedure
__ ******************
-- RIC CONTROL REQUEST
__ *********************************
```



2

3 4

8

10

11 12

14

15

16

17

18 19 20

21 22

24

25

26 27

28 29

30 31

32

33

34

35

37

38

39

40 41

42 43 44

45

46 47

48

49 50

53

55

56 57

59

60

61

63

64

65 66

69 70

75

```
RICcontrolRequest ::= SEQUENCE {
   protocolIEs
                           ProtocolIE-Container
                                             {{RICcontrolRequest-IEs}},
}
RICcontrolRequest-IES E2AP-PROTOCOL-IES ::= {
    { ID id-RICrequestID
                                  CRITICALITY reject TYPE RICrequestID
   PRESENCE mandatory }|
   { ID id-RANfunctionID
                                  CRITICALITY reject TYPE RANfunctionID
   PRESENCE mandatory }|
   { ID id-RICcallProcessID
                                  CRITICALITY reject TYPE RICcallProcessID
   PRESENCE optional
                    }|
   { ID id-RICcontrolHeader
                                  CRITICALITY reject TYPE RICcontrolHeader
   PRESENCE mandatory }|
   { ID id-RICcontrolMessage
                                  CRITICALITY reject TYPE RICcontrolMessage
   PRESENCE mandatory }|
   { ID id-RICcontrolAckRequest
                                  CRITICALITY reject TYPE RICcontrolAckRequest
   PRESENCE optional },
-- RIC CONTROL ACKNOWLEDGE
__ *********************
RICcontrolAcknowledge ::= SEQUENCE {
   protocolIEs
                           ProtocolIE-Container {{RICcontrolAcknowledge-IEs}},
}
RICcontrolAcknowledge-IEs E2AP-PROTOCOL-IES ::= {
   { ID id-RICrequestID
                                  CRITICALITY reject TYPE RICrequestID
   PRESENCE mandatory }|
   { ID id-RANfunctionID
                                  CRITICALITY reject TYPE RANfunctionID
   PRESENCE mandatory }|
   { ID id-RICcallProcessID
                                  CRITICALITY reject TYPE RICcallProcessID
   PRESENCE optional
                    }|
   { ID id-RICcontrolOutcome
                                  CRITICALITY reject TYPE RICcontrolOutcome
   PRESENCE optional
  *****************
-- RIC CONTROL FAILURE
__ *********************************
RICcontrolFailure ::= SEQUENCE {
                           ProtocolIE-Container {{RICcontrolFailure-IEs}},
   protocolIEs
}
RICcontrolFailure-IES E2AP-PROTOCOL-IES ::= {
                                  CRITICALITY reject TYPE RICrequestID
   { ID id-RICrequestID
   PRESENCE mandatory }|
   { ID id-RANfunctionID
                                  CRITICALITY reject TYPE RANfunctionID
   PRESENCE mandatory }|
   { ID id-RICcallProcessID
                                  CRITICALITY reject TYPE RICcallProcessID
   PRESENCE optional }|
   { ID id-Cause
                                  CRITICALITY ignore TYPE Cause
   PRESENCE mandatory }|
   { ID id-RICcontrolOutcome
                                  CRITICALITY reject TYPE RICcontrolOutcome
   PRESENCE optional },
   { ID id-CriticalityDiagnostics
                                CRITICALITY ignore TYPE CriticalityDiagnostics
   PRESENCE optional }
}
__ *****************
-- MESSAGES FOR GLOBAL PROCEDURES
__ ******************
  ***************
-- Error Indication Elementary Procedure
__ ********************************
```



2

3

6

12

13

14

15

16 17

18 19

20 21

22

23

26 27

33

34

37

42

43 44

45

46

47

48 49

50 51

55 56 57

60

61

65 66

68

69 70

71

72

73

```
-- ERROR INDICATION
__ **********************
ErrorIndication ::= SEQUENCE {
                            ProtocolIE-Container {{ErrorIndication-IEs}},
   protocolIEs
ErrorIndication-IES E2AP-PROTOCOL-IES ::= {
                                   CRITICALITY reject TYPE TransactionID
   { ID id-TransactionID
                                                                                 PRESENCE
optional
   { ID id-RICrequestID
                                   CRITICALITY reject TYPE RICrequestID
                                                                                 PRESENCE
optional
   { ID id-RANfunctionID
                                   CRITICALITY reject TYPE RANfunctionID
                                                                                 PRESENCE
optional
          }|
   { ID id-Cause
                                   CRITICALITY ignore TYPE Cause
                                                                                 PRESENCE
optional
   PRESENCE
optional
   . . .
  *****************
-- E2 Setup Elementary Procedure
-- E2 SETUP REQUEST
__ *********************************
E2setupRequest ::= SEQUENCE {
   protocolIEs ProtocolIE-Container { {E2setupRequestIEs} },
E2setupRequestIEs E2AP-PROTOCOL-IES ::= {
                                       CRITICALITY reject TYPE TransactionID
   { ID id-TransactionID
   PRESENCE mandatory
   { ID id-GlobalE2node-ID
                                       CRITICALITY reject TYPE GlobalE2node-ID
   PRESENCE mandatory }|
   { ID id-RANfunctionsAdded
                                       CRITICALITY reject TYPE RANfunctions-List
   PRESENCE mandatory }|
   { ID id-E2nodeComponentConfigAddition CRITICALITY reject TYPE E2nodeComponentConfigAddition-
     PRESENCE mandatory },
}
-- E2 SETUP RESPONSE
E2setupResponse ::= SEQUENCE {
                 ProtocolIE-Container
                                          { {E2setupResponseIEs} },
   protocolIEs
}
E2setupResponseIEs E2AP-PROTOCOL-IES ::= {
   { ID id-TransactionID
                                          CRITICALITY reject TYPE TransactionID
          PRESENCE mandatory }|
   { ID id-GlobalRIC-ID
                                          CRITICALITY reject TYPE GlobalRIC-ID
          PRESENCE mandatory
                                          CRITICALITY reject TYPE RANfunctionsID-List
   { ID id-RANfunctionsAccepted
          PRESENCE optional
   { ID id-RANfunctionsRejected
                                          CRITICALITY reject TYPE RANfunctionsIDcause-List
          PRESENCE optional
                            }|
   { ID id-E2nodeComponentConfigAdditionAck
                                          CRITICALITY reject TYPE
{\tt E2nodeComponentConfigAdditionAck-List} \quad {\tt PRESENCE\ mandatory} \quad \},
__ *********************
```



2

3 4

12

13

14

15

16 17

18 19

20 21

22

23

26 27

33

34 35

37

38

41

42

43 44

45

46

47

48

49 50

53

56

57

62

63

64 65

66 67

68

71

73 74

77

```
-- E2 SETUP FAILURE
E2setupFailure ::= SEQUENCE {
   protocolIEs ProtocolIE-Container { {E2setupFailureIEs} },
E2setupFailureIEs E2AP-PROTOCOL-IES ::= {
                                 CRITICALITY reject TYPE TransactionID
   { ID id-TransactionID
                                                                            PRESENCE
mandatory
   { ID id-Cause
                                 CRITICALITY ignore TYPE Cause
                                                                            PRESENCE
mandatory
   { ID id-TimeToWait
                                 CRITICALITY ignore TYPE TimeToWait
                                                                            PRESENCE
optional
   { ID id-CriticalityDiagnostics
                                 CRITICALITY ignore TYPE CriticalityDiagnostics
                                                                            PRESENCE
optional
         31
   { ID id-TNLinformation
                                 CRITICALITY ignore TYPE TNLinformation
                                                                            PRESENCE
optional },
   . . .
 -- E2 Connection Update Elementary Procedure
-- E2 CONNECTION UPDATE
__ *********************
E2connectionUpdate ::= SEQUENCE {
                          ProtocolIE-Container {{E2connectionUpdate-IEs}},
   protocolIEs
}
E2connectionUpdate-IEs E2AP-PROTOCOL-IES ::= {
   { ID id-TransactionID
                                 CRITICALITY reject TYPE TransactionID
   PRESENCE mandatory }|
   { ID id-E2connectionUpdateAdd
                                CRITICALITY reject TYPE E2connectionUpdate-List
   PRESENCE optional
   PRESENCE optional }|
   PRESENCE optional
}
E2connectionUpdate-List ::= SEQUENCE (SIZE(1..maxofTNLA)) OF ProtocolIE-SingleContainer
{ {E2connectionUpdate-ItemIEs} }
{ ID id-E2connectionUpdate-Item
                                    CRITICALITY ignore TYPE E2connectionUpdate-Item
   PRESENCE mandatory },
E2connectionUpdate-Item ::= SEQUENCE {
   tnlInformation
                              TNLinformation,
   tnlUsage
                             TNLusage,
}
E2connectionUpdateRemove-List ::= SEQUENCE (SIZE(1..maxofTNLA)) OF ProtocolIE-SingleContainer
{ {E2connectionUpdateRemove-ItemIEs} }
E2connectionUpdateRemove-ItemIEs
                           E2AP-PROTOCOL-IES ::= {
   { ID id-E2connectionUpdateRemove-Item CRITICALITY ignore TYPE E2connectionUpdateRemove-Item
   PRESENCE mandatory },
}
E2connectionUpdateRemove-Item ::= SEQUENCE {
   tnlInformation
                             TNLinformation,
```



2

1 2 3

6

8

10

11 12 13

16 17

18 19

20 21

22

26

27 28

29

30

35

37

38

41

46

47 48

51

52 53

55

56 57

58

59 60

63

73

74 75

```
}
__ *********************
-- E2 CONNECTION UPDATE ACKNOWLEDGE
E2connectionUpdateAcknowledge ::= SEQUENCE {
   protocolIEs
                             ProtocolIE-Container {{E2connectionUpdateAck-IEs}},
}
E2connectionUpdateAck-IEs E2AP-PROTOCOL-IES ::= {
                                     CRITICALITY reject TYPE TransactionID
    { ID id-TransactionID
   PRESENCE mandatory }|
   { ID id-E2connectionSetup
                                     CRITICALITY reject TYPE E2connectionUpdate-List
   PRESENCE optional }|
    { ID id-E2connectionSetupFailed CRITICALITY reject TYPE E2connectionSetupFailed-List
   PRESENCE optional },
}
E2connectionSetupFailed-List ::= SEQUENCE (SIZE(1..maxofTNLA)) OF ProtocolIE-SingleContainer
{ {E2connectionSetupFailed-ItemIEs} }
E2connectionSetupFailed-ItemIEs
                                 E2AP-PROTOCOL-IES ::= {
    { ID id-E2connectionSetupFailed-Item
                                                CRITICALITY ignore TYPE
                                 PRESENCE mandatory },
E2connectionSetupFailed-Item
E2connectionSetupFailed-Item ::= SEQUENCE {
   tnlInformation
                                  TNLinformation,
                                  Cause,
}
__ *******************************
-- E2 CONNECTION UPDATE FAILURE
E2connectionUpdateFailure ::= SEQUENCE {
   protocolIEs
ProtocolIE-Container {{E2connectionUpdateFailure-IEs}},
E2connectionUpdateFailure-IEs E2AP-PROTOCOL-IES ::= {
   { ID id-TransactionID
                                             CRITICALITY reject TYPE TransactionID
           PRESENCE mandatory }|
   { ID id-Cause
                                             CRITICALITY reject TYPE Cause
           PRESENCE optional
   { ID id-TimeToWait
                                             CRITICALITY ignore TYPE TimeToWait
           PRESENCE optional
   { ID id-CriticalityDiagnostics
                                            CRITICALITY ignore TYPE CriticalityDiagnostics
           PRESENCE optional },
}
__ *********************************
-- E2 Node Configuration Update Elementary Procedure
-- E2 NODE CONFIGURATION UPDATE
E2nodeConfigurationUpdate ::= SEQUENCE {
   protocolIEs
                             ProtocolIE-Container {{E2nodeConfigurationUpdate-IEs}},
}
E2nodeConfigurationUpdate-IEs E2AP-PROTOCOL-IES ::= {
```



2

3 4

6

7

8

9

10

11

12

13 14

15 16

17

18 19

20

21 22 23

26

27

28

29 30

33

36 37

42 43

44

45 46

47 48

49

52 53

54

55

58

59

60 61

64

67

68

69 70

73

74

```
{ ID id-TransactionID
                                          CRITICALITY reject TYPE TransactionID
           PRESENCE mandatory }|
    { ID id-GlobalE2node-ID
                                          CRITICALITY reject TYPE GlobalE2node-ID
           PRESENCE optional
    { ID id-E2nodeComponentConfigAddition
                                          CRITICALITY reject TYPE E2nodeComponentConfigAddition-
List
               PRESENCE optional
                                          CRITICALITY reject TYPE E2nodeComponentConfigUpdate-
    { ID id-E2nodeComponentConfigUpdate
List
               PRESENCE optional
    { ID id-E2nodeComponentConfigRemoval
                                          CRITICALITY reject TYPE E2nodeComponentConfigRemoval-
              PRESENCE optional }|
List
   { ID id-E2nodeTNLassociationRemoval
                                          CRITICALITY reject TYPE E2nodeTNLassociationRemoval-
               PRESENCE optional
List
}
E2nodeComponentConfigAddition-List ::= SEQUENCE (SIZE(1..maxofE2nodeComponents)) OF ProtocolIE-
SingleContainer { {E2nodeComponentConfigAddition-ItemIEs} }
{ ID id-E2nodeComponentConfigAddition-Item CRITICALITY reject TYPE
                                      PRESENCE mandatory },
E2nodeComponentConfigAddition-Item
E2nodeComponentConfigAddition-Item ::= SEQUENCE {
    e2nodeComponentInterfaceType
                                      E2nodeComponentInterfaceType,
   e2nodeComponentID
                                      E2nodeComponentID,
   e2nodeComponentConfiguration
                                      E2nodeComponentConfiguration,
}
E2nodeComponentConfigUpdate-List ::= SEQUENCE (SIZE(1..maxofE2nodeComponents)) OF ProtocolIE-
SingleContainer { {E2nodeComponentConfigUpdate-ItemIEs} }
E2nodeComponentConfigUpdate-ItemIEs
                                      E2AP-PROTOCOL-IES ::= {
    { ID id-E2nodeComponentConfigUpdate-Item
                                              CRITICALITY reject TYPE
E2nodeComponentConfigUpdate-Item
                                      PRESENCE mandatory },
E2nodeComponentConfigUpdate-Item ::= SEQUENCE {
   e2nodeComponentInterfaceType
                                      E2nodeComponentInterfaceType,
   e2nodeComponentID
                                      E2nodeComponentID,
   e2nodeComponentConfiguration
                                      E2nodeComponentConfiguration,
}
E2nodeComponentConfigRemoval-List ::= SEQUENCE (SIZE(1..maxofE2nodeComponents)) OF ProtocolIE-
SingleContainer { {E2nodeComponentConfigRemoval-ItemIEs} }
E2nodeComponentConfigRemoval-ItemIEs
                                      E2AP-PROTOCOL-IES ::= {
    { ID id-E2nodeComponentConfigRemoval-Item
                                             CRITICALITY reject TYPE
E2nodeComponentConfigRemoval-Item
                                      PRESENCE mandatory },
    . . .
}
E2nodeComponentConfigRemoval-Item ::= SEQUENCE {
   e2nodeComponentInterfaceType
                                      E2nodeComponentInterfaceType,
   e2nodeComponentID
                                      E2nodeComponentID,
E2nodeTNLassociationRemoval-List ::= SEQUENCE (SIZE(1..maxofTNLA)) OF ProtocolIE-SingleContainer
{ {E2nodeTNLassociationRemoval-ItemIEs} }
E2nodeTNLassociationRemoval-ItemIEs
                                      E2AP-PROTOCOL-IES ::= {
                                              CRITICALITY reject TYPE
    { ID id-E2nodeTNLassociationRemoval-Item
E2nodeTNLassociationRemoval-Item
                                      PRESENCE mandatory },
}
E2nodeTNLassociationRemoval-Item ::= SEQUENCE {
    tnlInformation
                                      TNLinformation,
    tnlInformationRIC
                                      TNLinformation,
}
   ****************
```



2

3 4

6

7

12

13

14

15

16

17

18

19 20 21

24 25 26

27

28

29 30

33

34

35

36 37

38 39

40

41 42

43

44

49 50

51

52 53

56

59

60 61

65 66

67

68 69

72 73

74

75

76

77

```
-- E2 NODE CONFIGURATION UPDATE ACKNOWLEDGE
E2nodeConfigurationUpdateAcknowledge ::= SEQUENCE {
   protocolIEs
                              ProtocolIE-Container
                                                      {{E2nodeConfigurationUpdateAcknowledge-
IEs}},
E2nodeConfigurationUpdateAcknowledge-IEs E2AP-PROTOCOL-IES ::= {
    { ID id-TransactionID
                                                  CRITICALITY reject TYPE TransactionID
                   PRESENCE mandatory }|
    { ID id-E2nodeComponentConfigAdditionAck
                                                  CRITICALITY reject TYPE
E2nodeComponentConfigAdditionAck-List
                                          PRESENCE optional
                                                  CRITICALITY reject TYPE
    { ID id-E2nodeComponentConfigUpdateAck
E2nodeComponentConfigUpdateAck-List PRESENCE optional
                                                  CRITICALITY reject
    { ID id-E2nodeComponentConfigRemovalAck
                                          PRESENCE optional },
E2nodeComponentConfigRemovalAck-List
}
E2nodeComponentConfigAdditionAck-List ::= SEQUENCE (SIZE(1..maxofE2nodeComponents)) OF ProtocolIE-
SingleContainer { {E2nodeComponentConfigAdditionAck-ItemIEs} }
E2nodeComponentConfigAdditionAck-ItemIEs
                                          E2AP-PROTOCOL-IES ::= {
   { ID id-E2nodeComponentConfigAdditionAck-Item
                                                          CRITICALITY reject TYPE
E2nodeComponentConfigAdditionAck-Item PRESENCE mandatory
                                                          },
}
E2nodeComponentConfigAdditionAck-Item ::= SEQUENCE {
   e2nodeComponentInterfaceType
                                      E2nodeComponentInterfaceType,
   e2nodeComponentID
                                      E2nodeComponentID,
   e2nodeComponentConfigurationAck
                                      E2nodeComponentConfigurationAck,
}
E2nodeComponentConfigUpdateAck-List ::= SEQUENCE (SIZE(1..maxofE2nodeComponents)) OF ProtocolIE-
SingleContainer { {E2nodeComponentConfigUpdateAck-ItemIEs} }
{ ID id-E2nodeComponentConfigUpdateAck-Item
                                                      CRITICALITY reject TYPE
E2nodeComponentConfigUpdateAck-Item
                                      PRESENCE mandatory },
E2nodeComponentConfigUpdateAck-Item ::= SEQUENCE {
   e2nodeComponentInterfaceType
                                      E2nodeComponentInterfaceType,
   e2nodeComponentID
                                      E2nodeComponentID,
                                      E2nodeComponentConfigurationAck,
   e2nodeComponentConfigurationAck
}
E2nodeComponentConfigRemovalAck-List ::= SEQUENCE (SIZE(1..maxofE2nodeComponents)) OF ProtocolIE-
SingleContainer { {E2nodeComponentConfigRemovalAck-ItemIEs} }
E2nodeComponentConfigRemovalAck-ItemIEs
                                          E2AP-PROTOCOL-IES ::= {
    { ID id-E2nodeComponentConfigRemovalAck-Item
                                                          CRITICALITY reject TYPE
E2nodeComponentConfigRemovalAck-Item
                                      PRESENCE mandatory
E2nodeComponentConfigRemovalAck-Item ::= SEQUENCE {
   e2nodeComponentInterfaceType
                                      E2nodeComponentInterfaceType,
   e2nodeComponentID
                                      E2nodeComponentID,
    e2nodeComponentConfigurationAck
                                      E2nodeComponentConfigurationAck,
}
-- E2 NODE CONFIGURATION UPDATE FAILURE
__ *********************************
E2nodeConfigurationUpdateFailure ::= SEQUENCE {
   protocolIEs
                      ProtocolIE-Container
                                              {{E2nodeConfigurationUpdateFailure-IEs}},
```



2

1 2 3

4

6

7 8

9

10

11

12

13 14 15

16 17

24

25 26 27

28

29 30

31 32

33

34

35

36 37

47

52

53

55

56 57

60 61

62 63

64 65 66

67

68

69

70

71 72

75

76

77

```
}
E2nodeConfigurationUpdateFailure-IEs E2AP-PROTOCOL-IES ::= {
                                            CRITICALITY reject TYPE TransactionID
   { ID id-TransactionID
              PRESENCE mandatory
   { ID id-Cause
                                            CRITICALITY ignore TYPE Cause
              PRESENCE mandatory
   { ID id-TimeToWait
                                           CRITICALITY ignore TYPE TimeToWait
              PRESENCE optional
                                           CRITICALITY ignore TYPE CriticalityDiagnostics
   { ID id-CriticalityDiagnostics
              PRESENCE optional
                                },
}
__ *******************************
-- Reset Elementary Procedure
-- RESET REQUEST
__ ********************************
ResetRequest ::= SEQUENCE {
   protocolIEs
                 ProtocolIE-Container { {ResetRequestIEs} },
}
ResetRequestIEs E2AP-PROTOCOL-IES ::= {
   { ID id-TransactionID
                                    CRITICALITY reject TYPE TransactionID
                                                                                    PRESENCE
mandatory
    { ID id-Cause
                                    CRITICALITY ignore TYPE Cause
                                                                                    PRESENCE
mandatory },
}
-- RESET RESPONSE
ResetResponse ::= SEQUENCE {
   protocolIEs
                 ProtocolIE-Container { {ResetResponseIEs} },
ResetResponseIEs E2AP-PROTOCOL-IES ::= {
                                    CRITICALITY reject TYPE TransactionID
   { ID id-TransactionID
                                                                                    PRESENCE
mandatory
   { ID id-CriticalityDiagnostics
                                    CRITICALITY ignore TYPE CriticalityDiagnostics
                                                                                    PRESENCE
         },
optional
}
__ ********************************
-- RIC Service Update Elementary Procedure
__ ***************
-- RIC SERVICE UPDATE
 _ ********************
{\tt RICserviceUpdate} \ ::= \ {\tt SEQUENCE} \ \{
                             {\tt ProtocolIE-Container} \qquad \{\{{\tt RICserviceUpdate-IEs}\}\},
   protocolIEs
}
RICserviceUpdate-IEs E2AP-PROTOCOL-IES ::= {
   { ID id-TransactionID
                                    CRITICALITY reject TYPE TransactionID
   PRESENCE mandatory }|
    { ID id-RANfunctionsAdded
                                    CRITICALITY reject TYPE RANfunctions-List
   PRESENCE optional }|
```



2

3 4

6

Ŕ

9

10 11

12

13

14

19

20

21

22

24

25 26

27

28 29

30

31

32 33

37

38 39

42

47 48 49

52 53

55

56

57 58 59

60 61

62

65

66

67

68

69 70 71

72

73

74

75

```
ID id-RANfunctionsModified
                                     CRITICALITY reject TYPE RANfunctions-List
   PRESENCE optional }|
    { ID id-RANfunctionsDeleted
                                     CRITICALITY reject TYPE RANfunctionsID-List
   PRESENCE optional },
}
RANfunctions-List ::= SEQUENCE (SIZE(1..maxofRANfunctionID)) OF ProtocolIE-SingleContainer
{ {RANfunction-ItemIEs} }
                     E2AP-PROTOCOL-IES ::= {
RANfunction-ItemIEs
                                    CRITICALITY ignore TYPE RANfunction-Item
   { ID id-RANfunction-Item
   PRESENCE mandatory },
}
RANfunction-Item ::= SEQUENCE {
                             RANfunctionID,
   ranFunctionID
   ranFunctionDefinition
                             RANfunctionDefinition,
                             RANfunctionRevision,
   ranFunctionRevision
   ranFunctionOID
                             RANfunctionOID,
}
RANfunctionsID-List ::= SEQUENCE (SIZE(1..maxofRANfunctionID)) OF ProtocolIE-
SingleContainer{{RANfunctionID-ItemIEs}}
RANfunctionID-ItemIEs E2AP-PROTOCOL-IES ::= {
    { ID id-RANfunctionID-Item
                                     CRITICALITY ignore TYPE RANfunctionID-Item
   PRESENCE mandatory },
}
RANfunctionID-Item ::= SEQUENCE {
                             RANfunctionID,
   ranFunctionID
   ranFunctionRevision
                             RANfunctionRevision,
}
__ ********************
-- RIC SERVICE UPDATE ACKNOWLEDGE
RICserviceUpdateAcknowledge ::= SEQUENCE {
   protocolIEs
                             ProtocolIE-Container {{RICserviceUpdateAcknowledge-IEs}},
RICserviceUpdateAcknowledge-IEs E2AP-PROTOCOL-IES ::= {
                                     CRITICALITY reject TYPE TransactionID
   { ID id-TransactionID
   PRESENCE mandatory }|
   { ID id-RANfunctionsAccepted
                                     CRITICALITY reject TYPE RANfunctionsID-List
   PRESENCE optional }|
    { ID id-RANfunctionsRejected
                                     CRITICALITY reject TYPE RANfunctionsIDcause-List
   PRESENCE optional },
}
RANfunctionsIDcause-List ::= SEQUENCE (SIZE(1..maxofRANfunctionID)) OF ProtocolIE-SingleContainer
{ {RANfunctionIDcause-ItemIEs} }
{ ID id-RANfunctionIEcause-Item
                                    CRITICALITY ignore TYPE RANfunctionIDcause-Item
   PRESENCE mandatory },
   . . .
}
RANfunctionIDcause-Item ::= SEQUENCE {
                             RANfunctionID,
   ranFunctionID
   cause
                             Cause.
    . . .
}
  *****************
```



2

6 7 8

9 10

11

12

13

14

15

16

17

18

19

20

24

25

26 27 28

29 30

31 32

33

34 35

38 39

40

41 42

43

46 47

48

49 50 51

52 53

62

63 64 65

68

69 70 71

74

```
-- RIC SERVICE UPDATE FAILURE
RICserviceUpdateFailure ::= SEQUENCE {
   protocolIEs ProtocolIE-Container {{RICserviceUpdateFailure-IEs}},
}
RICserviceUpdateFailure-IEs E2AP-PROTOCOL-IES ::= {
   { ID id-TransactionID
                               CRITICALITY reject TYPE TransactionID
   PRESENCE mandatory }|
   { ID id-Cause
                               CRITICALITY reject TYPE Cause
   PRESENCE mandatory }|
   { ID id-TimeToWait
                               CRITICALITY ignore TYPE TimeToWait
   PRESENCE optional
                               CRITICALITY ignore TYPE CriticalityDiagnostics
   { ID id-CriticalityDiagnostics
   PRESENCE optional },
}
-- RIC Service Ouerv Elementary Procedure
__ *********************************
-- RIC SERVICE QUERY
__ ********************************
RICserviceQuery ::= SEQUENCE {
                         ProtocolIE-Container {{RICserviceQuery-IEs}},
   protocolIEs
RICserviceQuery-IEs E2AP-PROTOCOL-IES ::= {
   { ID id-TransactionID
                               CRITICALITY reject TYPE TransactionID
   PRESENCE mandatory }|
   { ID id-RANfunctionsAccepted CRITICALITY reject TYPE RANfunctionsID-List
   PRESENCE optional },
}
__ ********************
-- E2 Removal Elementary Procedure
__ *********************************
-- E2 REMOVAL REQUEST
__ *********************
E2RemovalRequestIEs E2AP-PROTOCOL-IES ::= {
   { ID id-TransactionID
                                CRITICALITY reject TYPE TransactionID
   PRESENCE mandatory },
}
__ *********************************
-- E2 REMOVAL RESPONSE
E2RemovalResponse ::= SEQUENCE {
                         ProtocolIE-Container { {E2RemovalResponseIEs} },
   protocolIEs
```



2

11

12

15

16 17

20

21

22

24

25

26 27

30 31

32

34

35

37

38

41

42

47 48

49

51

52 53

57

58

63

64

65

69

70

71

73

74

75

76

```
CRITICALITY reject TYPE TransactionID
     ID id-TransactionID
   PRESENCE mandatory }|
    { ID id-CriticalityDiagnostics
                                     CRITICALITY ignore TYPE CriticalityDiagnostics
                                                                                       PRESENCE
optional
-- E2 REMOVAL FAILURE
__ ****************************
E2RemovalFailure ::= SEQUENCE {
                              ProtocolIE-Container
   protocolIEs
                                                  { {E2RemovalFailureIEs} },
E2RemovalFailureIEs E2AP-PROTOCOL-IES ::= {
                                      CRITICALITY reject TYPE TransactionID
   { ID id-TransactionID
                                                                                       PRESENCE
mandatory
   { ID id-Cause
                                     CRITICALITY ignore TYPE Cause
                                                                                       PRESENCE
mandatory
           }|
   { ID id-CriticalityDiagnostics
                                     CRITICALITY ignore TYPE CriticalityDiagnostics
                                                                                       PRESENCE
optional
          },
END
-- ASN1STOP
```

#### 9.3.5 Information Element Definitions

```
-- ASN1START
-- F2AP
-- Information Element Definitions
__ ******************************
E2AP-IEs {
iso(1) identified-organization(3) dod(6) internet(1) private(4) enterprise(1) 53148 e2(1) version2
(2) e2ap(1) e2ap-IEs (2)}
DEFINITIONS AUTOMATIC TAGS ::=
BEGIN
TMPORTS
    Criticality,
    Presence,
    ProcedureCode,
    ProtocolIE-ID,
    TriggeringMessage
FROM E2AP-CommonDataTypes
    maxnoofErrors,
   maxProtocolIEs
FROM E2AP-Constants;
-- [New for E2AP v02.00] copied from 3GPP 38.413 (NGAP) IES
AMFName ::= PrintableString (SIZE(1..150, ...))
-- B
Cause ::= CHOICE {
                       CauseRICrequest,
    ricRequest
    ricService
                       CauseRICservice,
    e2Node
                       CauseE2node,
    transport
                       CauseTransport,
                       CauseProtocol,
    protocol
    misc
                       CauseMisc,
```



```
2
        }
1
2
        CauseE2node ::= ENUMERATED {
4
            e2node-component-unknown,
6
        }
Ŕ
        CauseMisc ::= ENUMERATED {
9
            control-processing-overload,
            hardware-failure,
10
            om-intervention,
11
12
            unspecified,
13
14
        }
15
16
        CauseProtocol ::= ENUMERATED {
17
            transfer-syntax-error,
18
            abstract-syntax-error-reject,
            abstract-syntax-error-ignore-and-notify,
19
            message-not-compatible-with-receiver-state,
20
21
            semantic-error,
22
            abstract-syntax-error-falsely-constructed-message,
            unspecified,
24
25
        }
        CauseRICrequest ::= ENUMERATED {
            ran-function-id-invalid,
28
29
            action-not-supported,
30
            excessive-actions,
31
            duplicate-action,
32
            duplicate-event-trigger,
33
            function-resource-limit,
34
            request-id-unknown,
35
            inconsistent-action-subsequent-action-sequence,
            control-message-invalid,
37
            ric-call-process-id-invalid,
            control-timer-expired,
38
39
            control-failed-to-execute,
40
            system-not-ready,
41
            unspecified,
42
        }
43
44
45
        CauseRICservice ::= ENUMERATED{
46
            ran-function-not-supported,
            excessive-functions,
47
48
            ric-resource-limit,
49
50
        CauseTransport ::= ENUMERATED {
51
52
            unspecified,
53
            transport-resource-unavailable,
55
        }
58
        -- copied from 3GPP 38.413 (NGAP) IEs
59
        -- note: ie-Extensions removed
60
61
        CriticalityDiagnostics ::= SEQUENCE {
62
            procedureCode
                                              ProcedureCode
                                                                                         OPTIONAL,
63
            triggeringMessage
                                              TriggeringMessage
                                                                                         OPTIONAL,
                                                                                         OPTIONAL,
            procedureCriticality
                                              Criticality
64
                                                                                         OPTIONAL,
65
            ricRequestorID
                                              RICrequestID
66
            iEsCriticalityDiagnostics
                                              CriticalityDiagnostics-IE-List
                                                                                         OPTIONAL,
67
68
        }
        CriticalityDiagnostics-IE-List ::= SEQUENCE (SIZE(1..maxnoofErrors)) OF CriticalityDiagnostics-IE-
71
        CriticalityDiagnostics-IE-Item ::= SEQUENCE {
74
            iECriticality
                                 Criticality,
75
            iE-ID
                                 ProtocolIE-ID,
76
            typeOfError
                                 TypeOfError,
77
78
        }
```



```
-- D
        -- E
3
4
5
        -- Following IE used to carry 3GPP defined SETUP and RAN Configuration messages defined in F1AP,
6
        E1AP, XnAP, etc.
       E2nodeComponentConfiguration ::= SEQUENCE{
7
8
            e2nodeComponentRequestPart
                                             OCTET STRING,
9
            e2nodeComponentResponsePart
                                             OCTET STRING,
10
       }
11
13
        {\tt E2nodeComponentConfigurationAck} \ ::= \ {\tt SEQUENCE} \{
                                 ENUMERATED {success, failure, ...},
14
            updateOutcome
                                                  OPTIONAL,
15
            failureCause
                                 Cause
16
17
        }
        E2nodeComponentInterfaceType ::= ENUMERATED {ng, xn, e1, f1, w1, s1, x2,...}
20
21
        E2nodeComponentID ::= CHOICE{
22
            e2nodeComponentInterfaceTypeNG E2nodeComponentInterfaceNG,
            e2nodeComponentInterfaceTypeXn
                                             E2nodeComponentInterfaceXn,
            e2nodeComponentInterfaceTypeE1
                                             E2nodeComponentInterfaceE1,
24
25
            e2nodeComponentInterfaceTypeF1
                                             E2nodeComponentInterfaceF1,
26
            e2nodeComponentInterfaceTypeW1 E2nodeComponentInterfaceW1,
27
            e2nodeComponentInterfaceTypeS1
                                             E2nodeComponentInterfaceS1,
28
            e2nodeComponentInterfaceTypeX2
                                             E2nodeComponentInterfaceX2,
29
30
       }
        E2nodeComponentInterfaceE1 ::= SEQUENCE{
33
            gNB-CU-CP-ID
                                GNB-CU-UP-ID,
34
35
       }
        E2nodeComponentInterfaceF1 ::= SEQUENCE{
38
                                 GNB-DU-ID,
            gNB-DU-ID
39
40
41
42
        E2nodeComponentInterfaceNG ::= SEQUENCE{
43
            amf-name
                                 AMFName,
44
45
       }
46
47
        E2nodeComponentInterfaceS1 ::= SEQUENCE{
48
            {\sf mme-name}
                                 MMEname,
49
            . . .
50
       }
51
52
        E2nodeComponentInterfaceX2 ::= SEQUENCE{
                                                  OPTIONAL,
53
            global-eNB-ID
                              GlobalENB-ID
            global-en-gNB-ID
                                 GlobalenGNB-ID OPTIONAL,
54
55
56
        E2nodeComponentInterfaceXn ::= SEQUENCE{
            global-NG-RAN-Node-ID
59
                                        GlobalNG-RANNode-ID,
60
61
        E2nodeComponentInterfaceW1 ::= SEQUENCE{
64
            ng-eNB-DU-ID NGENB-DU-ID,
65
66
        __ ******************
        -- copied from 3GPP 36.423 (X2AP) IEs
69
70
        -- note: ie-Extensions removed
71
72
        ENB-ID ::= CHOICE {
                                     BIT STRING (SIZE (20)),
BIT STRING (SIZE (28)),
73
            macro-eNB-ID
74
            home-eNB-ID
75
76
            short-Macro-eNB-ID
                                     BIT STRING (SIZE(18)),
                                     BIT STRING (SIZE(21))
77
            long-Macro-eNB-ID
78
       }
```



2

2 3

4

7

15

16 17

19 20

21

25

26

27

29

30 31

34 35

36

37

38

39 40

41 42

43

44

47

51

52

56

57

59 60 61

64 65 66

67

68 69

71

72

76

```
-- copied from 3GPP 38.423 (XnAP) IEs
      -- note: choice-extension removed
      ENB-ID-Choice ::= CHOICE {
                                BIT STRING (SIZE(20)),
BIT STRING (SIZE(18)),
6
          enb-ID-macro
          enb-ID-shortmacro
8
          enb-ID-longmacro
                                BIT STRING (SIZE(21)),
9
10
      }
      __ **********************************
13
       -- copied from 3GPP 36.423 (X2AP) IEs
       -- note: ie-Extensions removed
14
       -- Note: to avoid duplicate names with XnAP, GNB-ID renamed ENGNB-ID, GlobalGNB-ID renamed
      GlobalenGNB-ID
18
      ENGNB-ID ::= CHOICE {
          gNB-ID BIT STRING (SIZE (22..32)),
      }
      -- F
24
       -- G
      GlobalE2node-ID ::= CHOICE{
                            GlobalE2node-gNB-ID,
          gNB
          en-gNB
                            GlobalE2node-en-gNB-ID,
                            GlobalE2node-ng-eNB-ID,
28
          ng-eNB
          eNB
                            GlobalE2node-eNB-ID,
      GlobalE2node-en-gNB-ID ::= SEQUENCE{
          global-en-gNB-ID
                            GlobalenGNB-ID,
          en-gNB-CU-UP-ID
                            GNB-CU-UP-ID
                                           OPTIONAL,
          en-gNB-DU-ID
                            GNB-DU-ID
                                           OPTIONAL,
          . . .
      GlobalE2node-eNB-ID ::= SEQUENCE{
          global-eNB-ID GlobalENB-ID,
      GlobalE2node-gNB-ID ::= SEQUENCE{
                         GlobalgNB-ID,
          global-gNB-ID
45
          global-en-gNB-ID
                            GlobalenGNB-ID OPTIONAL,
          gNB-CU-UP-ID
                            GNB-CU-UP-ID
46
                                           OPTIONAL,
          gNB-DU-ID
                            GNB-DU-ID
                                           OPTIONAL,
48
49
      GlobalE2node-ng-eNB-ID ::= SEQUENCE{
50
          global-ng-eNB-ID GlobalngeNB-ID,
          global-eNB-ID
                            GlobalENB-ID
                                           OPTIONAL,
53
          ngENB-DU-ID
                            NGENB-DU-ID
                                           OPTIONAL,
          . . .
55
      }
      -- copied from 3GPP 36.423 (X2AP) IEs
58
       -- note: ie-Extensions removed
                                ************
      GlobalENB-ID ::= SEQUENCE {
                           PLMN-Identity,
62
          pLMN-Identity
63
          eNB-ID
                            ENB-ID,
       -- copied from 3GPP 36.423 (X2AP) IEs
       -- Note: to avoid duplicate names with XnAP, GNB-ID renamed ENGNB-ID, GlobalGNB-ID renamed
      GlobalenGNB-ID
                     ************
70
      GlobalenGNB-ID ::= SEQUENCE {
          pLMN-Identity
                           PLMN-Identity,
73
          gNB-ID
                            ENGNB-ID,
74
          . . .
75
       -- copied from 3GPP 38.423 (XnAP) IEs
78
       -- note: choice-extension removed
```



2

2

3

4

6

7

10 11

12 13

14 15

16 17

18 19 20

21 22

25

26

27

28

29 30

31

32

33 34

37

38

39

42 43 44

47 48

49

50

51 52 53

55

56

57 58

59 60 61

62 63 64

65 66

69 70 71

72

75

```
::= SEQUENCE {
GlobalqNB-ID
                     PLMN-Identity,
   plmn-id
   gnb-id
                     GNB-ID-Choice,
   . . .
}
-- copied from 3GPP 38.423 (XnAP) IEs
-- note: choice-extension removed
GlobalngeNB-ID ::= SEQUENCE {
   plmn-id
                 PLMN-Identity,
   enb-id
                 ENB-ID-Choice,
}
-- [NEW for E2AP v02.00] copied from 3GPP 38.423 (XnAP) IEs
-- Note: extension field removed
GlobalNG-RANNode-ID ::= CHOICE {
   gNB
                         GlobalgNB-ID,
                         GlobalngeNB-ID,
   ng-eNB
   . . .
}
GlobalRIC-ID ::= SEQUENCE{
   pLMN-Identity
                         PLMN-Identity,
   ric-ID
                         BIT STRING (SIZE (20)),
}
__ *********************************
-- copied from 3GPP 38.463 (E1AP) IEs
GNB-CU-UP-ID::= INTEGER (0..68719476735)
__ *********************************
-- copied from 3GPP 38.473 (F1AP) IES
GNB-DU-ID::=
                 INTEGER (0..68719476735)
__ ******************
-- copied from 3GPP 38.423 (XnAP) IEs
-- note: choice-extension removed
GNB-ID-Choice ::= CHOICE {
   gnb-ID
                         BIT STRING (SIZE(22..32)),
-- H
-- I
-- J
-- K
-- L
-- [New for E2AP v02.00] copied from 3GPP 36.413 (S1AP) IES
MMEname ::= PrintableString (SIZE (1..150,...))
-- copied from 3GPP 37.473 (W1AP) IEs
NGENB-DU-ID ::= INTEGER (0..68719476735)
-- 0
-- P
-- copied from 3GPP 36.423 (X2AP) IEs
```



2

1 2 3

4

6

7 8

9 10

15 16

17 18 19

24

25

26

27 28

31

32 33

37

38

39

42

43 44

45 46

47

48 49

52 53

57

58 59

60 61 62

63 64

67

68 69

74

75

77

```
PLMN-Identity ::= OCTET STRING (SIZE(3))
-- 0
      ***************
-- Following IE defined in E2SM
RANfunctionDefinition ::= OCTET STRING
RANfunctionID ::= INTEGER (0..4095)
RANfunctionOID ::= PrintableString(SIZE(1..1000,...))
RANfunctionRevision ::= INTEGER (0..4095)
   ****************
-- Following IE defined in E2SM
RICactionDefinition ::= OCTET STRING
RICactionID ::= INTEGER (0..255)
RICactionType ::= ENUMERATED{
   report,
   insert.
   policy,
}
-- Following IE defined in E2SM
RICcallProcessID ::= OCTET STRING
RICcontrolAckRequest ::= ENUMERATED{
   ack,
   . . .
}
__ *********************************
-- Following IE defined in E2SM
RICcontrolHeader ::= OCTET STRING
__ **********************************
-- Following IE defined in E2SM
RICcontrolMessage ::= OCTET STRING
__ ***************
-- Following IE defined in E2SM
RICcontrolOutcome ::= OCTET STRING
-- Following IE defined in E2SM
RICeventTriggerDefinition ::= OCTET STRING
-- Following IE defined in E2SM
RICindicationHeader ::= OCTET STRING
-- Following IE defined in E2SM
RICindicationMessage ::= OCTET STRING
RICindicationSN ::= INTEGER (0..65535)
RICindicationType ::= ENUMERATED{
   report,
   insert,
   . . .
}
```



2

1

3

4

6

8

9

10

11 12 13

14

15

16

17 18 19

20

21 22

24

25

26

27

28

29 30

31

32

33

34

35

36

37

38

39 40

41

42 43 44

45 46 47

48

49

50

51

54 55

56 57

58 59

60 61

62

63 64

65 66

67

68

69 70

71

```
RICrequestID ::= SEQUENCE {
    ricRequestorID
                                INTEGER (0..65535),
                   INTEGER (0..65535),
    ricInstanceID
}
RICsubsequentAction ::=SEQUENCE{
                                RICsubsequentActionType,
    ricSubsequentActionType
    ricTimeToWait
                                RICtimeToWait,
}
RICsubsequentActionType ::= ENUMERATED{
    continue,
    wait,
}
RICtimeToWait ::= ENUMERATED{
    w1ms,
    w2ms,
    w5ms,
    w10ms,
    w20ms,
   w30ms.
    w40ms,
    w50ms,
   w100ms,
    w200ms,
   w500ms,
    w1s,
   w2s,
   w5s,
   w10s,
   w20s,
   w60s,
    . . .
}
-- S
__ ******************
-- copied from 3GPP 38.413 (NGAP) IES
TimeToWait ::= ENUMERATED {v1s, v2s, v5s, v10s, v20s, v60s, ...}
TNLinformation ::= SEQUENCE{
                        BIT STRING (SIZE(1..160,...)),
    tnlAddress
    tnlPort
                        BIT STRING (SIZE(16)) OPTIONAL,
    . . .
{\tt TNLusage} ::= {\tt ENUMERATED} \{ {\tt ric-service}, \ {\tt support-function}, \ {\tt both}, \ \ldots \}
TransactionID ::= INTEGER (0..255,...)
-- copied from 3GPP 38.413 (NGAP) IES
TypeOfError ::= ENUMERATED {
    not-understood,
    missing,
}
-- U
-- V
-- W
-- X
-- Y
-- Z
END
-- ASN1STOP
```



2

1

3 4

8 9 10

11

12

29

30

31

33 34 35

36 37

40 41

46 47

48

49

50

53 54

55

57

58

59

60

61

62

63

64

65

66

67 68

#### 9.3.6 Common definitions

```
**********
-- Common definitions
-- Derived from 3GPP 38.413 (NGAP)
__ *********************************
E2AP-CommonDataTypes {
iso(1) identified-organization(3) dod(6) internet(1) private(4) enterprise(1) 53148 e2(1) version2
(2) e2ap(1) e2ap-CommonDataTypes (3) }
DEFINITIONS AUTOMATIC TAGS ::=
BEGIN
Criticality
             ::= ENUMERATED { reject, ignore, notify }
Presence
              ::= ENUMERATED { optional, conditional, mandatory }
ProcedureCode
                 ::= INTEGER (0..255)
ProtocolIE-ID
                 ::= INTEGER (0..65535)
TriggeringMessage ::= ENUMERATED { initiating-message, successful-outcome, unsuccessfull-outcome }
-- ASN1STOP
9.3.7 Constant definitions
-- ASN1START
```

```
-- Constant definitions
E2AP-Constants {
iso(1) identified-organization(3) dod(6) internet(1) private(4) enterprise(1) 53148 e2(1) version2
(2) e2ap(1) e2ap-Constants (4) }
DEFINITIONS AUTOMATIC TAGS ::=
BEGIN
IMPORTS
   ProcedureCode,
   ProtocolIE-ID
FROM E2AP-CommonDataTypes;
__ *******************
-- Elementary Procedures
__ *********************************
id-E2setup
                                         ProcedureCode ::= 1
                                         ProcedureCode ::= 2
id-ErrorIndication
id-Reset
                                         ProcedureCode ::= 3
id-RICcontrol
                                         ProcedureCode ::= 4
id-RICindication
                                         ProcedureCode ::= 5
                                         ProcedureCode ::= 6
id-RICserviceQuery
                                         ProcedureCode ::= 7
id-RICserviceUpdate
id-RICsubscription
                                         ProcedureCode ::= 8
id-RICsubscriptionDelete
                                         ProcedureCode ::= 9
id-E2nodeConfigurationUpdate
                                         ProcedureCode ::= 10
id-E2connectionUpdate
                                         ProcedureCode ::= 11
id-RICsubscriptionDeleteRequired
                                         ProcedureCode ::= 12
id-E2removal
                                         ProcedureCode ::= 13
-- Extension constants
```



2

1 2 maxProtocolIEs INTEGER ::= 65535 4 56 7 8 -- Lists 9 \_\_ \* 10 maxnoofErrors INTEGER ::= 256 11 INTEGER ::= 1024 12 maxofE2nodeComponents maxofRANfunctionID INTEGER ::= 256 13 maxofRICactionID INTEGER ::= 16 14 maxofTNLA INTEGER ::= 32 15 maxofRICrequestID INTEGER ::= 1024 16 17 \_\_ \*\*\*\*\*\*\*\*\*\*\*\*\*\*\*\*\*\*\* 20 21 -- IEs 22 \_\_ \* id-Cause ProtocolIE-ID ::= 1 24 id-CriticalityDiagnostics ProtocolIE-ID ::= 2 25 26 id-GlobalE2node-ID ProtocolIE-ID ::= 3 27 id-GlobalRIC-ID ProtocolIE-ID ::= 4 28 id-RANfunctionID ProtocolIE-ID ::= 5 id-RANfunctionID-Item ProtocolIE-ID ::= 6 29 ProtocolIE-ID ::= 7 30 id-RANfunctionIEcause-Item 31 id-RANfunction-Item ProtocolIE-ID ::= 8 32 id-RANfunctionsAccepted ProtocolIE-ID ::= 9 33 id-RANfunctionsAdded ProtocolIE-ID ::= 10 34 id-RANfunctionsDeleted ProtocolIE-ID ::= 11 35 id-RANfunctionsModified ProtocolIE-ID ::= 12 ProtocolIE-ID ::= 13 id-RANfunctionsRejected 37 id-RICaction-Admitted-Item ProtocolIE-ID ::= 14 ProtocolIE-ID ::= 15 id-RTCactionID 38 id-RICaction-NotAdmitted-Item 39 ProtocolIE-ID ::= 16 40 id-RICactions-Admitted ProtocolIE-ID ::= 17 41 id-RICactions-NotAdmitted ProtocolIE-ID ::= 18 id-RICaction-ToBeSetup-Item ProtocolIE-ID ::= 19 42 ProtocolIE-ID ::= 20 id-RICcallProcessID 43 44 id-RICcontrolAckRequest ProtocolIE-ID ::= 21 45 id-RICcontrolHeader ProtocolIE-ID ::= 22 46 id-RICcontrolMessage ProtocolIE-ID ::= 23 47 id-RICcontrolStatus ProtocolIE-ID ::= 24 48 id-RICindicationHeader ProtocolIE-ID ::= 25 id-RICindicationMessage ProtocolIE-ID ::= 26 49 ProtocolIE-ID ::= 27 50 id-RICindicationSN id-RICindicationType ProtocolIE-ID ::= 28 51 id-RICrequestID 52 ProtocolIE-ID ::= 29 53 id-RICsubscriptionDetails ProtocolIE-ID ::= 30 id-TimeToWait ProtocolIE-ID ::= 31 id-RICcontrolOutcome ProtocolIE-ID ::= 32 55 ProtocolIE-ID ::= 33 id-E2nodeComponentConfigUpdate 56 id-E2nodeComponentConfigUpdate-Item 57 ProtocolIE-ID ::= 34 58 id-E2nodeComponentConfigUpdateAck ProtocolIE-ID ::= 35 id-E2nodeComponentConfigUpdateAck-Item ProtocolIE-ID ::= 36 59 id-E2connectionSetup ProtocolIE-ID ::= 39 60 id-E2connectionSetupFailed ProtocolIE-ID ::= 40 61 id-E2connectionSetupFailed-Item ProtocolIE-ID ::= 41 62 id-E2connectionFailed-Item ProtocolIE-ID ::= 42 63 64 id-E2connectionUpdate-Item ProtocolIE-ID ::= 43 id-E2connectionUpdateAdd ProtocolIE-ID ::= 44 65 id-E2connectionUpdateModify 66 ProtocolIE-ID ::= 45 id-E2connectionUpdateRemove ProtocolIE-ID ::= 46 67 68 id-E2connectionUpdateRemove-Item ProtocolIE-ID ::= 47 ProtocolIE-ID ::= 48 id-TNLinformation 69 ProtocolIE-ID ::= 49 70 id-TransactionID 71 id-E2nodeComponentConfigAddition ProtocolIE-ID ::= 50 id-E2nodeComponentConfigAddition-Item ProtocolIE-ID ::= 51 72 73 id-E2nodeComponentConfigAdditionAck ProtocolIE-ID ::= 52 id-E2nodeComponentConfigAdditionAck-Item ProtocolIE-ID ::= 53 74 id-E2nodeComponentConfigRemoval 75 ProtocolIE-ID ::= 54 76 id-E2nodeComponentConfigRemoval-Item ProtocolIE-ID ::= 55 id-E2nodeComponentConfigRemovalAck 77 ProtocolIE-ID ::= 56 78 id-E2nodeComponentConfigRemovalAck-Item ProtocolIE-ID ::= 57

1 2 ProtocolIE-ID ::= 58 id-E2nodeTNLassociationRemoval id-E2nodeTNLassociationRemoval-Item ProtocolIE-ID ::= 59 id-RICsubscriptionToBeRemoved ProtocolIE-ID ::= 60 3 4 id-RICsubscription-withCause-Item ProtocolIE-ID ::= 61 -- ASN1STOP 7 8 9.3.8 Container definitions 9 10 -- ASN1START 11 12 13 -- Container definitions 14 -- derived from 3GPP 38.413 (NGAP) 15 16 E2AP-Containers { 18 19 (2) e2ap(1) e2ap-Containers (5) } 20 DEFINITIONS AUTOMATIC TAGS ::= 25 26 27 -- IE parameter types from other modules. 29 30 **IMPORTS** Criticality, 35 Presence. 36

37

40

43 44

45

46 47 48

49

50

51

52

53

55

56

57

58

59

62 63

64

65 66 67

68

69

70

71

73

74

```
***********
iso(1) identified-organization(3) dod(6) internet(1) private(4) enterprise(1) 53148 e2(1) version2
__ *******************************
   ProtocolIE-ID
FROM E2AP-CommonDataTypes
   maxProtocolIEs
FROM E2AP-Constants;
__ **********************
-- Class Definition for Protocol IEs
__ ****************
E2AP-PROTOCOL-IES ::= CLASS {
               ProtocolIE-ID
                                        UNIQUE,
   &criticality
               Criticality,
   &Value,
   &presence
               Presence
WITH SYNTAX {
   ID
               &id
   CRITICALITY
               &criticality
   TYPE
               &Value
   PRESENCE
               &presence
__ *********************
-- Class Definition for Protocol IEs
__ *******************
E2AP-PROTOCOL-IES-PAIR ::= CLASS {
                  ProtocolIE-ID
                                        UNIQUE,
   &id
   &firstCriticality
                 Criticality,
   &FirstValue,
   &secondCriticality Criticality,
   &SecondValue,
   &presence
                  Presence
WITH SYNTAX {
   ID
                     &id
```

```
O-RAN
```

2

6 7 8

10 11

12

14

15 16 17

18

19

22

25

26 27

28

31

33

34

37

38

41

42

43 44

45

46

49 50

51

55 56

60 61

66

68

```
FIRST CRITICALITY
                          &firstCriticality
   FIRST TYPE
                          &FirstValue
   SECOND CRITICALITY
                          &secondCriticality
   SECOND TYPE
                          &SecondValue
   PRESENCE
                          &presence
   -- Container for Protocol IEs
__ *******************************
ProtocolIE-Container {E2AP-PROTOCOL-IES : IEsSetParam} ::=
   SEQUENCE (SIZE (0..maxProtocolIEs)) OF
   ProtocolIE-Field {{IEsSetParam}}
ProtocolIE-SingleContainer {E2AP-PROTOCOL-IES : IEsSetParam} ::=
   ProtocolIE-Field {{IEsSetParam}}
ProtocolIE-Field {E2AP-PROTOCOL-IES : IEsSetParam} ::= SEQUENCE {
                  E2AP-PROTOCOL-IES.&id
                                                    ({IEsSetParam}),
                  E2AP-PROTOCOL-IES.&criticality
   criticality
                                                    ({IEsSetParam}{@id}),
                  E2AP-PROTOCOL-IES.&Value
                                                    ({IEsSetParam}{@id})
}
  *****************
-- Container for Protocol IE Pairs
   ****************
ProtocolIE-ContainerPair {E2AP-PROTOCOL-IES-PAIR : IEsSetParam} ::=
   SEQUENCE (SIZE (0..maxProtocoliEs)) OF
   ProtocolIE-FieldPair {{IEsSetParam}}
ProtocolIE-FieldPair {E2AP-PROTOCOL-IES-PAIR : IESSetParam} ::= SEQUENCE {
                      E2AP-PROTOCOL-IES-PAIR.&id
                                                               ({IEsSetParam}),
                      E2AP-PROTOCOL-IES-PAIR.&firstCriticality
E2AP-PROTOCOL-IES-PAIR.&FirstValue
                                                               ({IEsSetParam}{@id}),
({IEsSetParam}{@id}),
   firstCriticality
   firstValue
   secondCriticality
                      E2AP-PROTOCOL-IES-PAIR.&secondCriticality
                                                               ({IEsSetParam}{@id}),
   secondValue
                      E2AP-PROTOCOL-IES-PAIR.&SecondValue
                                                               ({IEsSetParam}{@id})
}
__ ********************************
-- Container Lists for Protocol IE Containers
__ ****************************
ProtocolIE-ContainerList {INTEGER : lowerBound, INTEGER : upperBound, E2AP-PROTOCOL-IES :
IEsSetParam} ::=
    SEQUENCE (SIZE (lowerBound..upperBound)) OF
   ProtocolIE-SingleContainer {{IEsSetParam}}
ProtocolIE-ContainerPairList {INTEGER : lowerBound, INTEGER : upperBound, E2AP-PROTOCOL-IES-PAIR :
IEsSetParam} ::=
    SEQUENCE (SIZE (lowerBound..upperBound)) OF
   ProtocolIE-ContainerPair {{IEsSetParam}}
END
-- ASN1STOP
```

### 9.4 Message transfer syntax

E2AP shall use the ASN.1 Basic Packed Encoding Rules (BASIC-PER) Aligned Variant as transfer syntax, as specified in ITU-T Rec. X.691 [15].



#### 9.5 Timers

- The following Timers are defined for use over the E2 interface in Near-RT RIC and E2 Node.
- 4 Triceventcreate
  - Specifies the maximum time for the RIC Subscription Request event creation procedure in the E2 Node.
- 6 T<sub>RICEVENTdelete</sub>
  - Specifies the maximum time for the RIC Subscription Request event deletion procedure in the E2 Node.
- $8 \qquad \quad T_{\text{RICcontrol}}$
- 9 Specifies the maximum time for the RIC Control Request event request procedure in the E2 Node.

1011

1

23

3



## 10 Handling of Unknown, Unforeseen and Erroneous Protocol Data

Section 10 of TS 36.413 [24] is applicable for the purposes of the present document.



# Revision history

| Date       | Revision | Description  |
|------------|----------|--|
| 2022.07.20 | 02.03    | Document prepared for publication  |
| 2022.07.15 | 02.02.05 | Addition of <nok.ao-2022.06.24-wg3-cr-0015-e2ap-ric (asn.1)-v03="" ack="" service="" update=""></nok.ao-2022.06.24-wg3-cr-0015-e2ap-ric> |
| 2022.06.20 | 02.02.04 | Addition of CR < NOK.AO-2022.05.24-WG3-CR-0013-E2AP-EditorialCorrections-v02 >   |

History

| Date       | Revision | Description                           |
|------------|----------|---------------------------------------|
| 2022.07.20 | 02.03    | Version ready for July22 publication  |
| 2022.06.29 | 02.02    | Version ready for March22 publication |
| 2022.02.07 | 02.01    | Version ready for Nov21 publication   |
| 2021.08.10 | 02.00    | TSC Approved                          |
| 2020.07.15 | 01.01    | Incremented version for Publication   |