


Introduction to Synthesis Flow with Synopsys Design Compiler

Lecturer: Zhi-Ting, Dong



Review : IC design flow

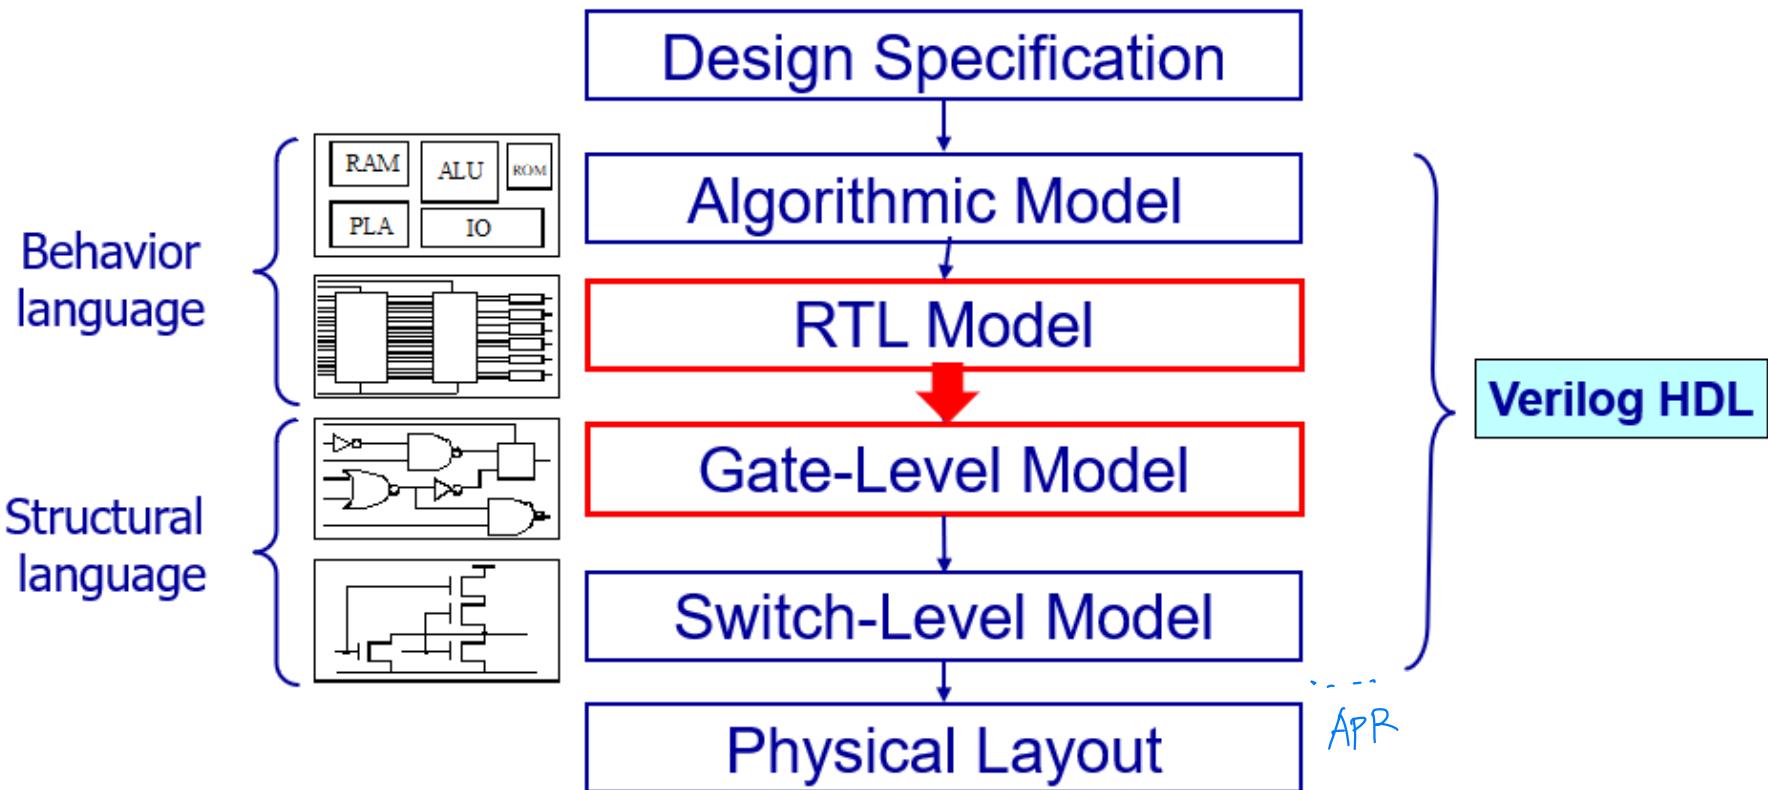

Outline

✓ **Section 1 Design Compiler Introduction**

✓ **Section 2 Basic Synthesis Flow**

- Develop HDL files
- Specify libraries
- Read design
- Develop design environment
- Set design constraints
- Select compile strategy
- Optimize the design
- Analyze and resolve design problems
- Save the design database

✓ **Section 3 Generate & For Loop**



Outline

✓ **Section 1 Design Compiler Introduction**

✓ **Section 2 Basic Synthesis Flow**

- Develop HDL files
- Specify libraries
- Read design
- Develop design environment
- Set design constraints
- Select compile strategy
- Optimize the design
- Analyze and resolve design problems
- Save the design database

✓ **Section 3 Generate & For Loop**



Design Compiler Introduction

✓ Design compiler

- It synthesizes your **HDL designs (Verilog)** into optimized technology-dependent(D35,U18...), **gate-level designs**.
- It can optimize both combinational and sequential designs for speed, area, and power.

RTL(.v)

```
module adder_1b(
    input clk,
    input rst_n,
    input x1,x2,
    output reg [1:0] sum
);

always@(posedge clk or negedge rst_n)begin
    if(!rst_n)
        sum <= 0;
    else
        sum <= x1 + x2;
end

endmodule
```

Netlist(.v)

```
// Created by: Synopsys DC Ultra(TM) in wire load mode
// Version   : K-2015.06-SP1
// Date     : Sun Oct 28 18:55:52 2018
///////////////////////////////
module adder_1b ( clk, rst_n, x1, x2, sum );
    output [1:0] sum;
    input clk, rst_n, x1, x2;
    wire n1, n2, n3, n4;

DFFSX2 sum_reg_1_ (.D(n4), .CK(clk), .SN(rst_n), .QN(sum[1]));
DFFSX2 sum_reg_0_ (.D(n3), .CK(clk), .SN(rst_n), .QN(sum[0]));
AND2XL U5 (.A(x1), .B(x2), .Y(n2));
AOI2BB1XL U6 (.A0N(x1), .A1N(x2), .B0N(n2), .Y(n1));
INVXL U7 (.A(n1), .Y(n3));
INVXL U8 (.A(n2), .Y(n4));
endmodule
```


No always block or assign




Logic Synthesis

✓ Logic synthesis


- A process by which behavioral model of a circuit is turned into an implementation in terms of logic gates
- Synthesis = **Translation + Mapping + Optimization**

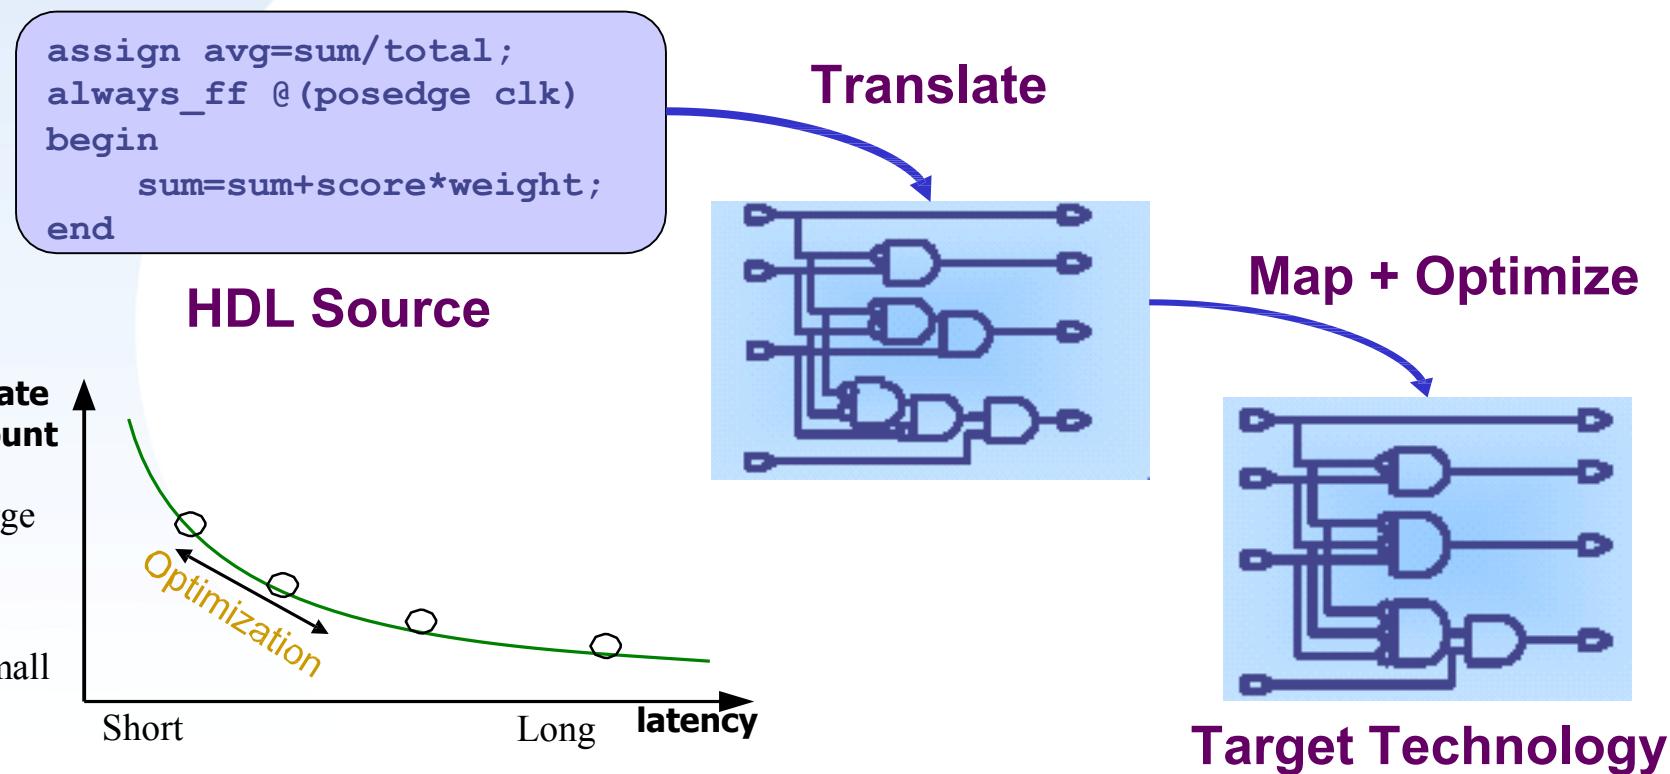

Data Flow in Design Compiler

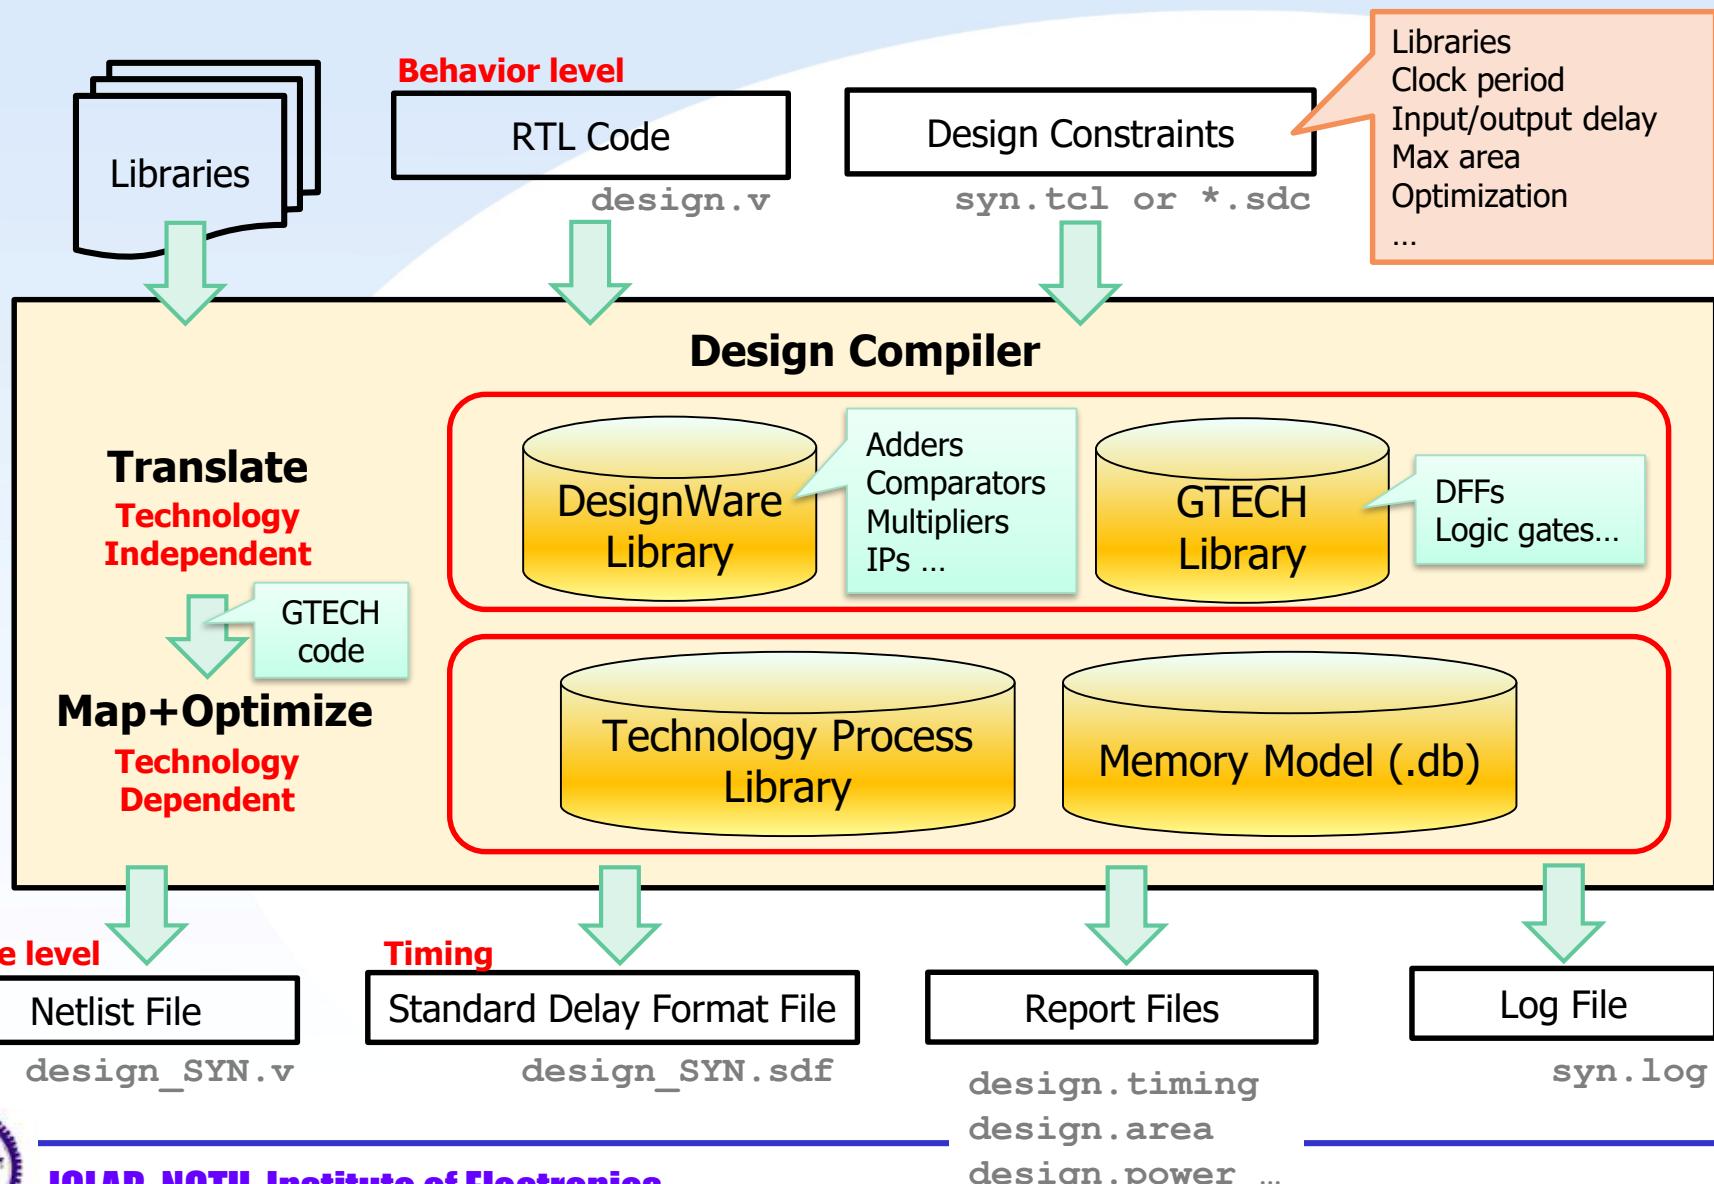

Gate-level Simulation

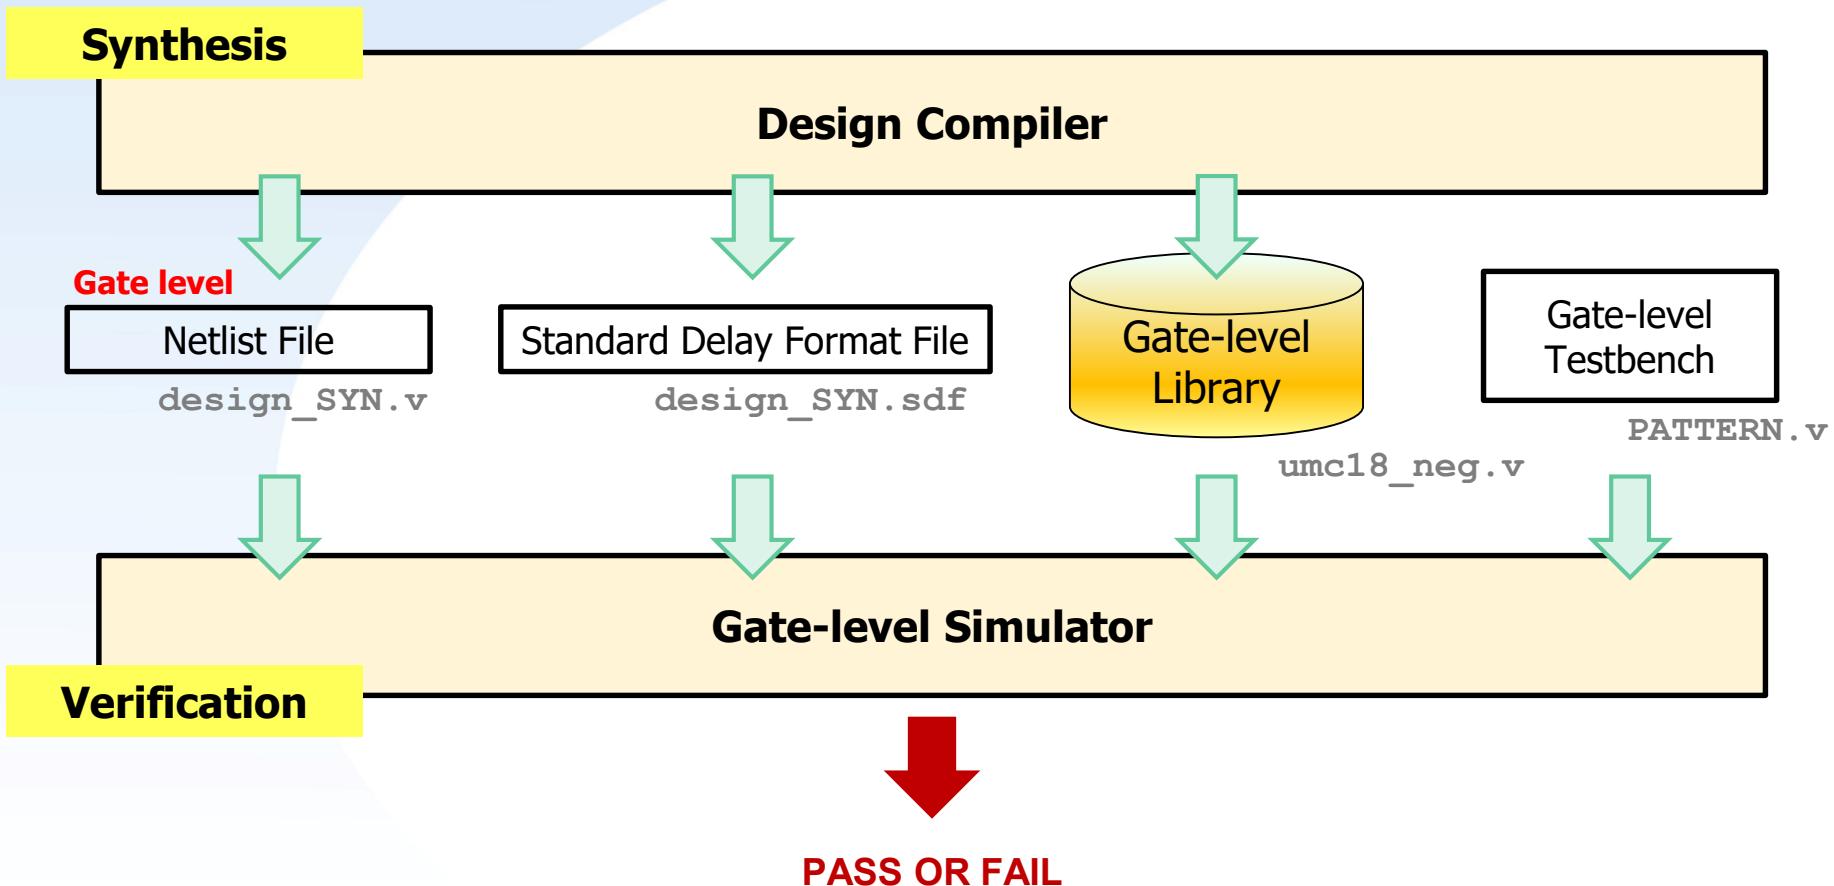

Design Compiler Introduction (cont.)

✓ Design compiler provides two user interfaces

- command-line interface

- **dctcl mode :** Applying a script based on tool command language (tcl) which packages all the commands needed to implement specific Design Compiler functionality.

%dc_shell-t

Used in this course

- graphical user interfaces (GUI)
 - Design Vision (can execute in both modes) **%dv**
 - **%dc_shell> gui_start**
 - **%dc_shell> gui_stop**



Some Design Compiler comment

✓ Get topic command help

- %dc_shell> help

✓ Get a particular command help

- %dc_shell> command_name -help

✓ Get topic command help

- %dc_shell> man command_name
 - ex: man set

✓ More information about design compiler in user guide:

- <http://archive.eclass.uth.gr/eclass/modules/document/file.php/MHX303/Documentation/dcug.pdf>



Synthesize by Design Compiler

- ✓ **Prepare RTL code(.v) and script file(.tcl)**
- ✓ **Invoke design compiler**
 - Command :
%dc_shell-t -f script_filename.tcl | tee log_filename.log
 - Example :
%dc_shell-t -f syn.tcl | tee syn.log → ./01_run_dc
 - -f :format
 - tee: store the result into file and print on the screen
- ✓ **Check log file(.log) to see if there are error(ex: Latch) messages**
- ✓ **Check report file(.report) to see if timing or area are met**
- ✓ **Run gate-level simulation**



System Object (Gate level)

```
design  
module TOP(in1,in2,clk,out);  
    input in1,in2,clk;  
    output [1:0] out;  
  
    clock  
    port  
  
    wire inv0,inv1,bus0,bus1;  
    ADDER U_ADD1(.AIN(in1), .BIN(in2), .Q0(bus0), .Q1(bu1));  
  
    INV U_INV1(.A(bus0), .Z(inv0));  
    INV U_INV2(.A(bus1), .Z(inv1));  
  
    REGFILE U_REG(.D0(inv0),.D1(inv1),.CLK(clk), Q(OUT));  
  
    reference/design  
endmodule
```

Design Objects

Design : A circuit that performs one or more logical functions

Cell : An instantiation of a design within another design

Reference: The original design that a cell “point to”

Port : The input or output of a design

Pin : The input or output of a cell

No always block or assign

Net : The wire that connects ports or pins

Clock : Waveform applied to a port or pin identified as a clock source

SDF File

✓ Standard Delay Format file (.sdf file)

```
(DELAYFILE
(SDFVERSION "OVI 2.1")
(DESIGN "CP")design
(DATE "Wed Feb 26 18:12:26 2020")
(VENDOR "slow")
(PROGRAM "Synopsys Design Compiler cmos")
(VERSION "K-2015.06-SP1")
(DIVIDER /)
(VOLTAGE 1.62:1.62:1.62)
(PROCESS "slow")
(TEMPERATURE 125.00:125.00:125.00)
(TIMESCALE 1ns)

(CELL
  (CELLTYPE "ADDHXL")
  (INSTANCE U9469)
  (DELAY
    (ABSOLUTE
      (IOPATH A CO (0.218262:0.218911:0.218911) (0.221926:0.224530:0.224530))min : typ : max
      (IOPATH B CO (0.218498:0.219461:0.219461) (0.207622:0.211288:0.211288))
      (COND B == 1'b1 (IOPATH A S (0.298010:0.300566:0.300566) (0.206581:0.207653:0.207653)))
      (COND B == 1'b0 (IOPATH A S (0.355384:0.356453:0.356453) (0.336261:0.338810:0.338810)))
      (IOPATH (posedge A) S (0.355384:0.356453:0.356453) (0.336556:0.337945:0.337945))
      (IOPATH (negedge A) S (0.355157:0.357118:0.357118) (0.336261:0.338810:0.338810))
      (COND A == 1'b1 (IOPATH B S (0.235169:0.238284:0.238284) (0.141208:0.142291:0.142291)))
      (COND A == 1'b0 (IOPATH B S (0.207619:0.208926:0.208926) (0.230646:0.234490:0.234490)))
      (IOPATH (posedge B) S (0.238927:0.240244:0.240244) (0.235283:0.236908:0.236908))
      (IOPATH (negedge B) S (0.235169:0.238284:0.238284) (0.230646:0.234490:0.234490))
    )
  )
)
```

we use "slow" so typ = max

rising edge transition **falling edge transition**



Outline

✓ **Section 1 Design Compiler Introduction**

✓ **Section 2 Basic Synthesis Flow**


- Develop HDL files
- Specify libraries
- Read design
- Develop design environment
- Set design constraints
- Select compile strategy
- Optimize the design
- Analyze and resolve design problems
- Save the design database

More details in page10 pdf


✓ **Section 3 Generate & For Loop**




Basic Synthesis Flow

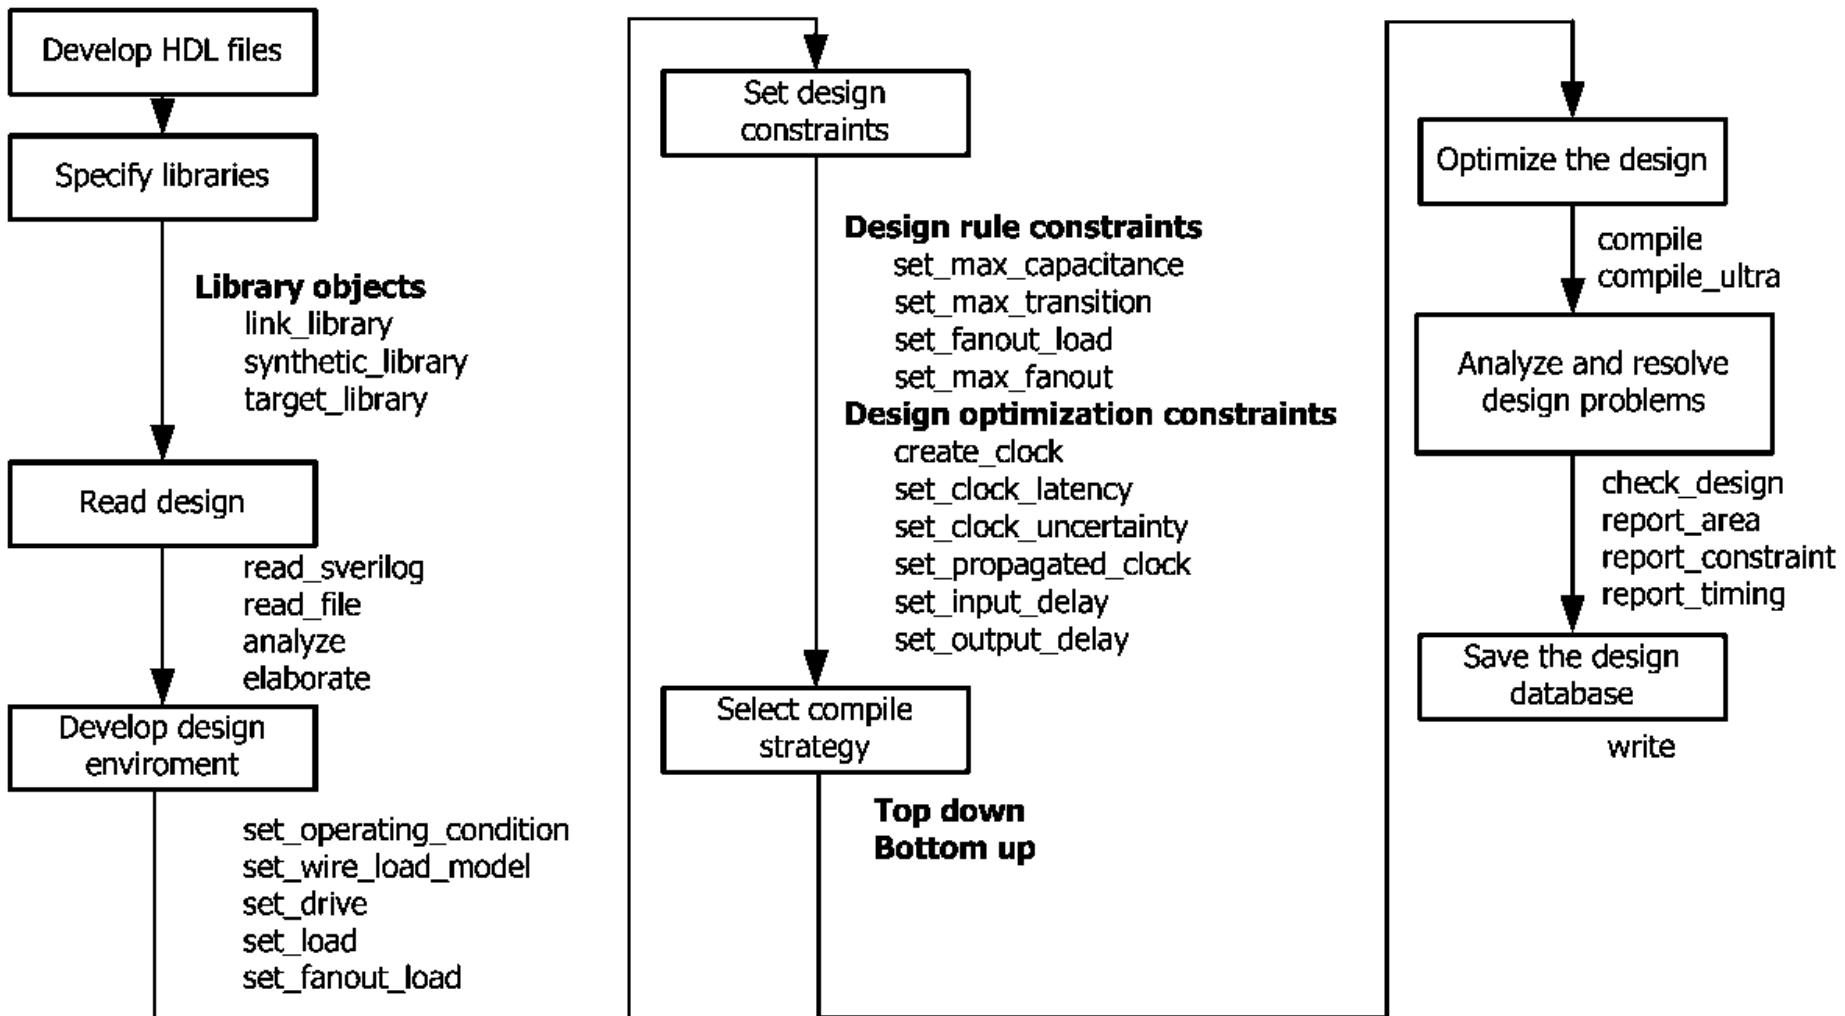

Basic Synthesis Flow

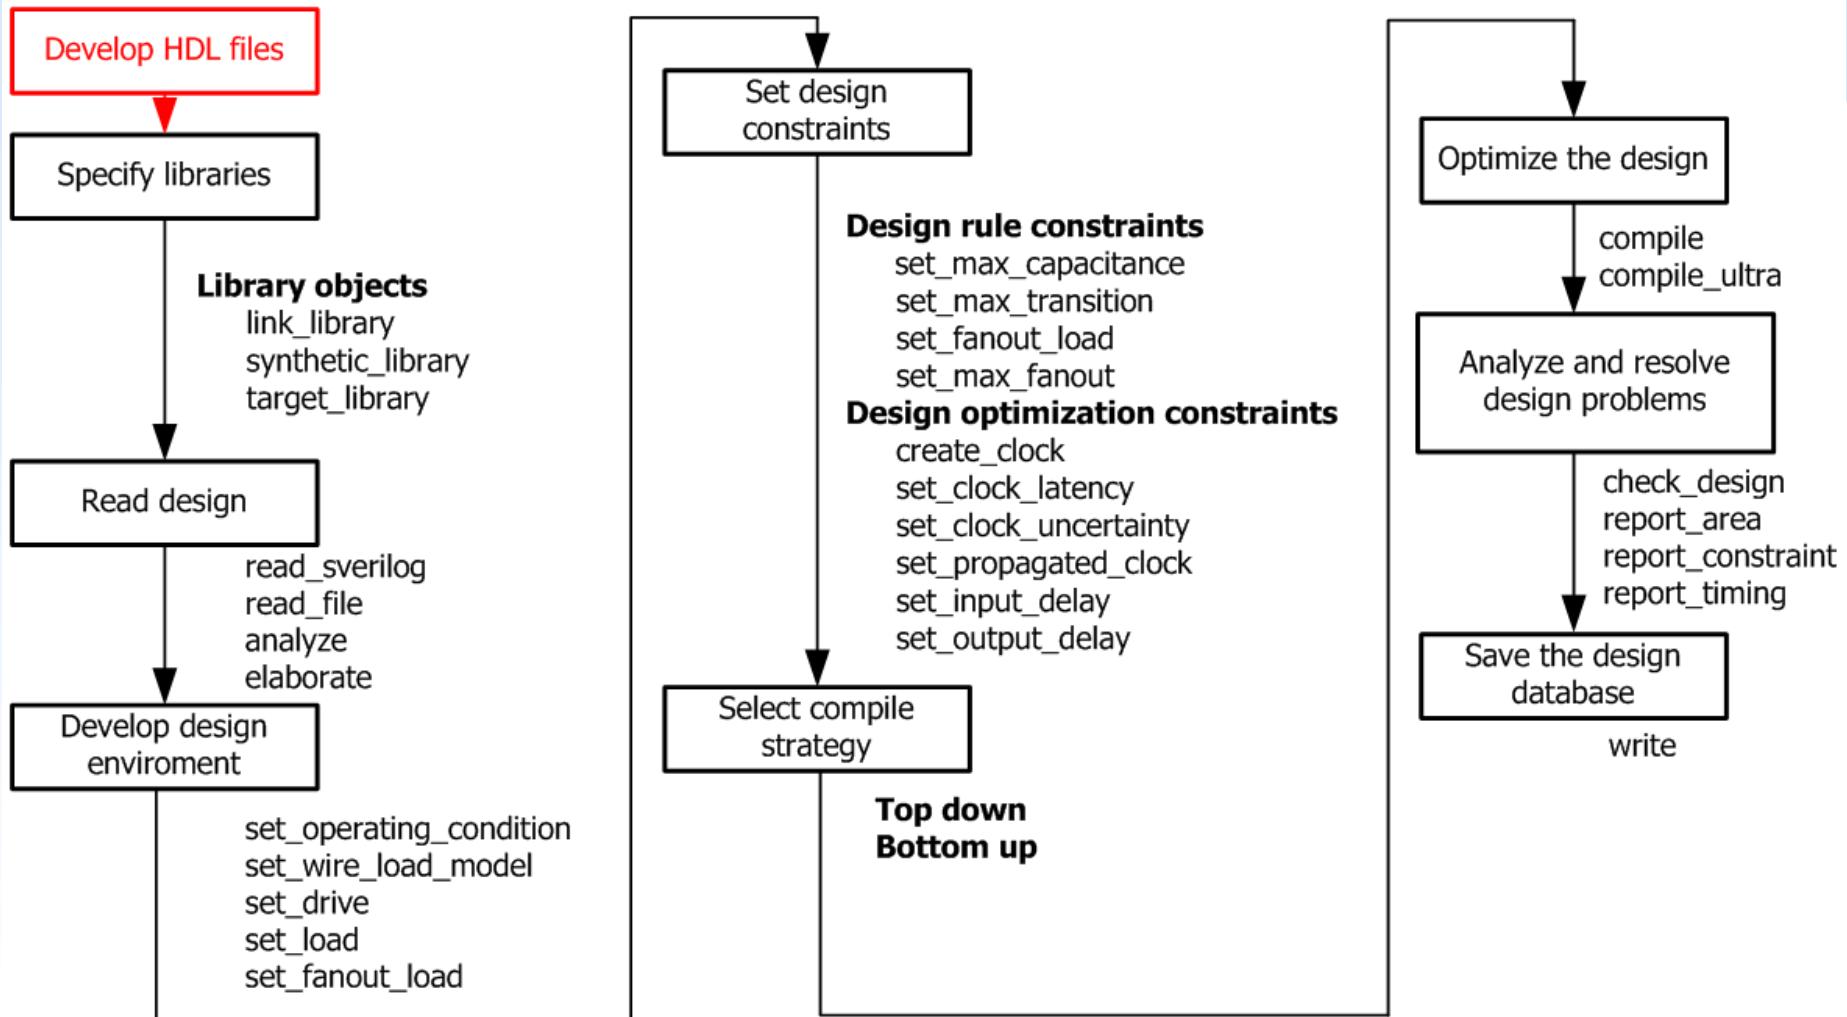

Basic Synthesis Flow

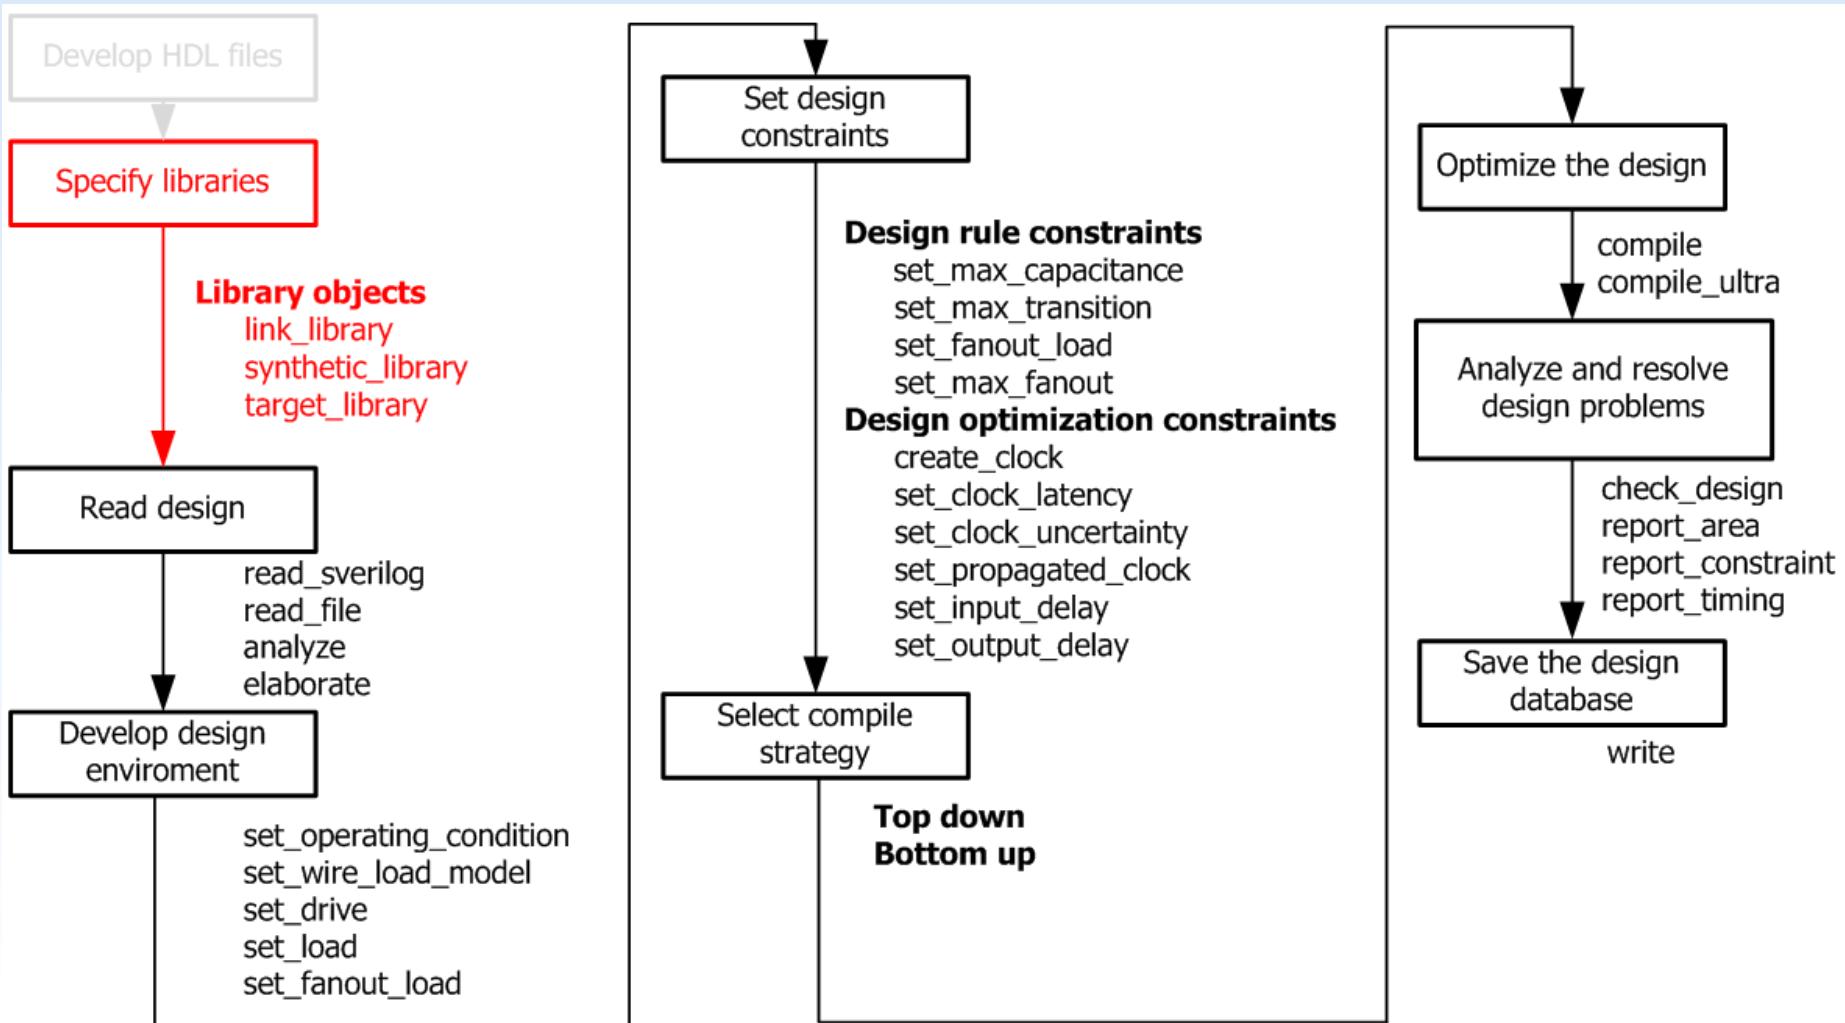

Specify Libraries

✓ Specify libraries

① Synthetic Library

- Specifies additional **DesignWare libraries** for optimization purposes.
- Efficient implementations for adders, comparators, multipliers

② Link Library

- Specifies a list of libraries that Design Compiler can use to resolve design references.

③ Target Library

- During synthesis, compiler selects gates from target library.
- It also calculates the timing of the circuit, using the vendor-supplied (UMC, TSMC ...) timing data of the lib.

✓ Synthesize in worst case. (xx.sldb)

```
set search_path {../../01_RTL \
    ~iclabta01/umc018/Synthesis/ \
    /usr/synthesis/libraries/syn/ \
    /usr/synthesis/dw/ }
```

① set synthetic_library {dw.foundation.sldb}

② set link_library {* dw.foundation.sldb standard.sldb slow.db}


③ set target_library {slow.db}



.lib file

- ✓ Cell name
- ✓ Drive strength
- ✓ Area
- ✓ Pin
 - Internal delay
 - Leakage power
 - Internal power

input_trasition_time

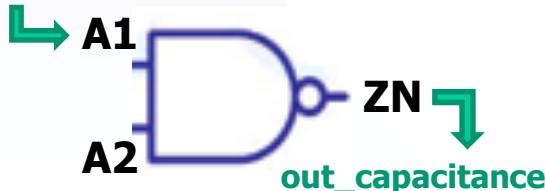


Same information as .db file

```
cell (NANDX1) {
    pin(A1) {
        direction : input;
        capacitance : 0.00683597;
    }
    pin(A2) {
        direction : input;
        capacitance : 0.00798456;
    }
    pin(ZN) {
        direction : output;
        capacitance : 0.0;
        internal_power() {
            timing() {
                cell_rise(table10){
                    values ("0.020844,0.02431,0.030696,0.039694,0.048205,0.072168,0.10188", \
                            "0.024677,0.027942,0.035042,0.045467,0.054973,0.082349,0.11539", \
                            "0.032068,0.035394,0.042758,0.055361,0.065991,0.090936,0.13847", \
                            "0.046811,0.049968,0.057164,0.064754,0.086481,0.11676,0.15744", \
                            "0.073919,0.078805,0.080873,0.091007,0.11655,0.1579,0.21448", \
                            "0.13162,0.13363,0.1383,0.14793,0.1685,0.22032,0.30054", \
                            "0.24661,0.24835,0.25294,0.26221,0.282,0.32417,0.42783");
                }
            }
        }
    }
}
```

```
lu_table_template(table10){
    variable_1 : total_output_net_capacitance;
    variable_2 : input_transition_time;
    index_1 ("0.001400,0.003000,0.006200,0.012500,0.025100,0.050400,0.101000");
    index_2 ("0.0208,0.0336,0.06,0.1112,0.2136,0.4192,0.8304");
}
```



Basic Synthesis Flow

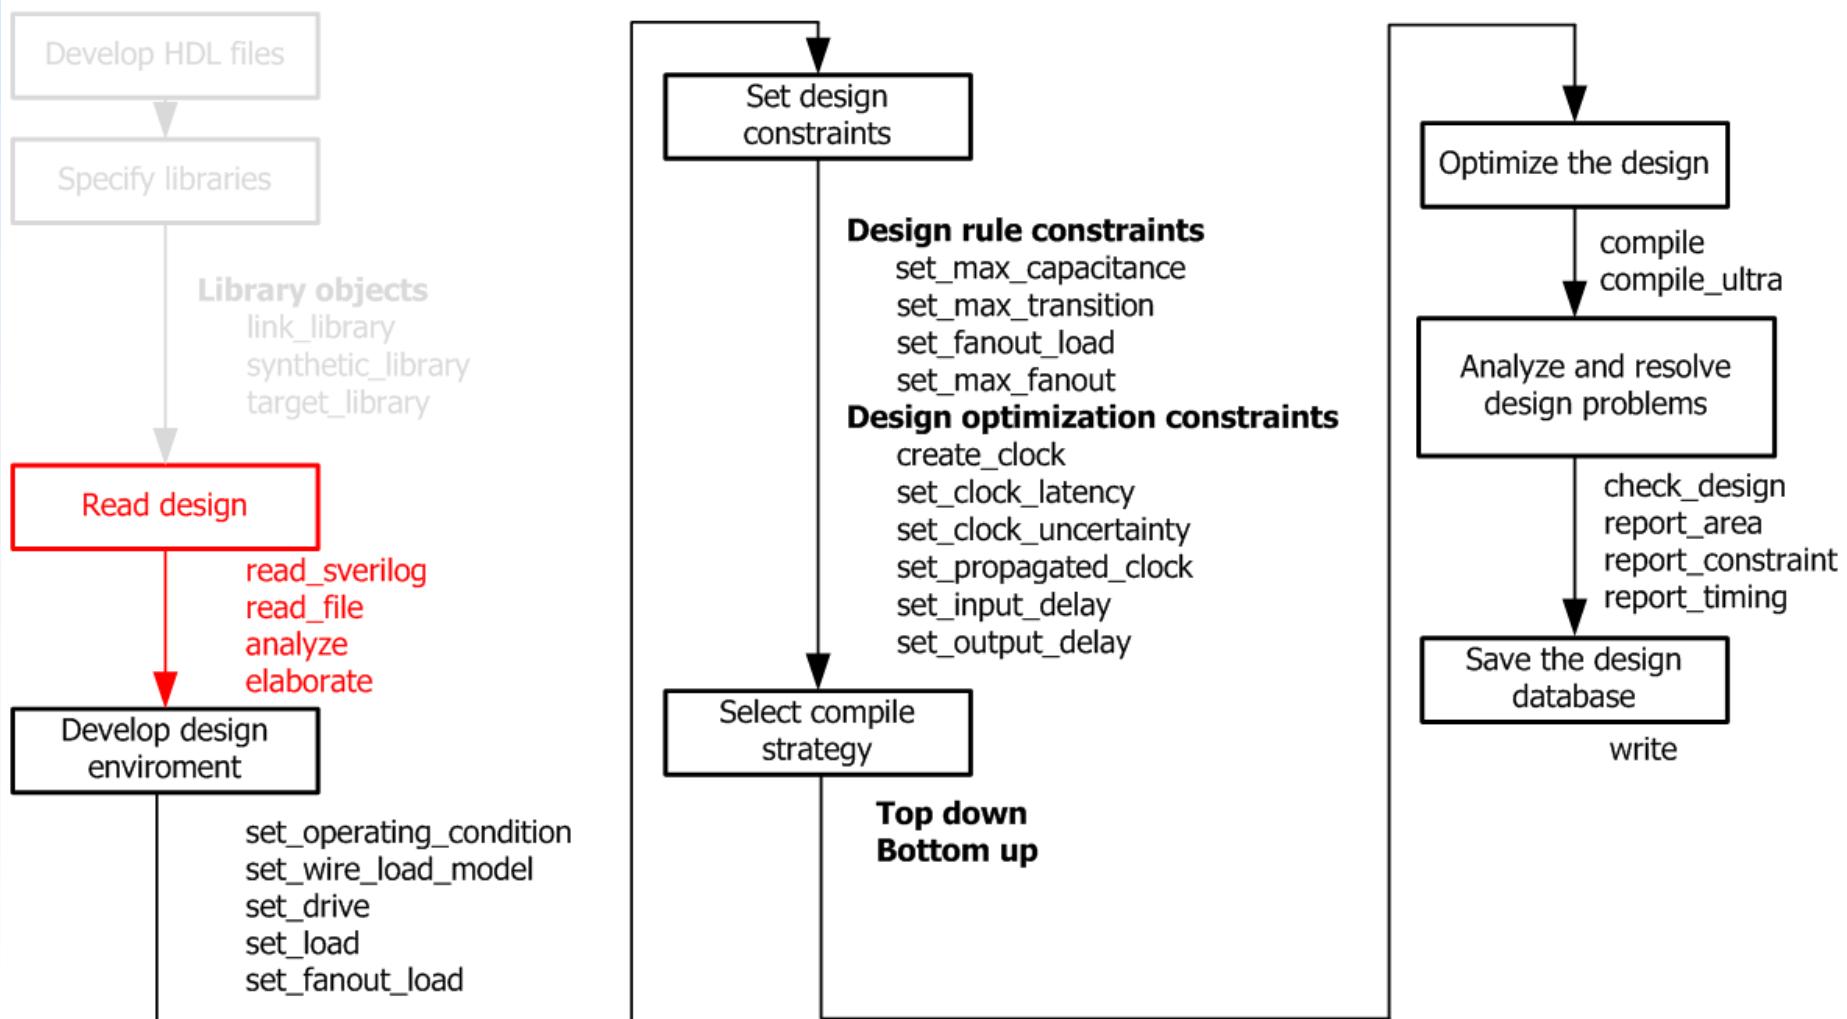

Read Design

✓ Read design

- The Design Compiler optimization process works only on the designs loaded in memory.

Method 1: `read_file` · `read_verilog` · `read_sverilog`

Method 2: `analyze & elaborate`

(Please refer to the appendix for the detail usage of them)

✓ Setting the Current Design

- After the read file command, set the current design on the module you want to focus on.

Method 1

```
#-----
#  Read RTL Code
#-----
set hdlin_auto_save_templates TRUE
read_verilog {$DESIGN.v INV_IP.v}
current_design $DESIGN
```

Method 2

```
analyze -f verilog $DESIGN.v
analyze -f verilog INV_IP.v
elaborate $DESIGN
current_design $DESIGN (optional)
```

Note: `read_sverilog` is compatible to read the Verilog format




Read Design



	<code>read_file</code>	analyze and elaborate
Input format	All formats	VHDL, Verilog
When to use	Netlist, precompiled designs	Synthesize VHDL or Verilog
Generics	Cannot pass parameters (must use directives in HDL)	Allow user to set parameter values on the elaborate command line e.g. <code>elaborate \$DESIGN -parameter "IP_WIDTH=6"</code> Use Carefully!
Design libraries	Cannot store analyzed results	Can store analyzed results in specified design libraries
Commands	<code>dc_shell>read_file -f keyword file_name</code> e.g.: <code>dc_shell>read_file -f verilog name</code>	<code>dc_shell>analyze -f keyword file_name</code> <code>dc_shell>elaborate design_name</code>
Architecture	Cannot specify architecture to be elaborated	Allow user to specify architecture to be elaborated


Basic Synthesis Flow

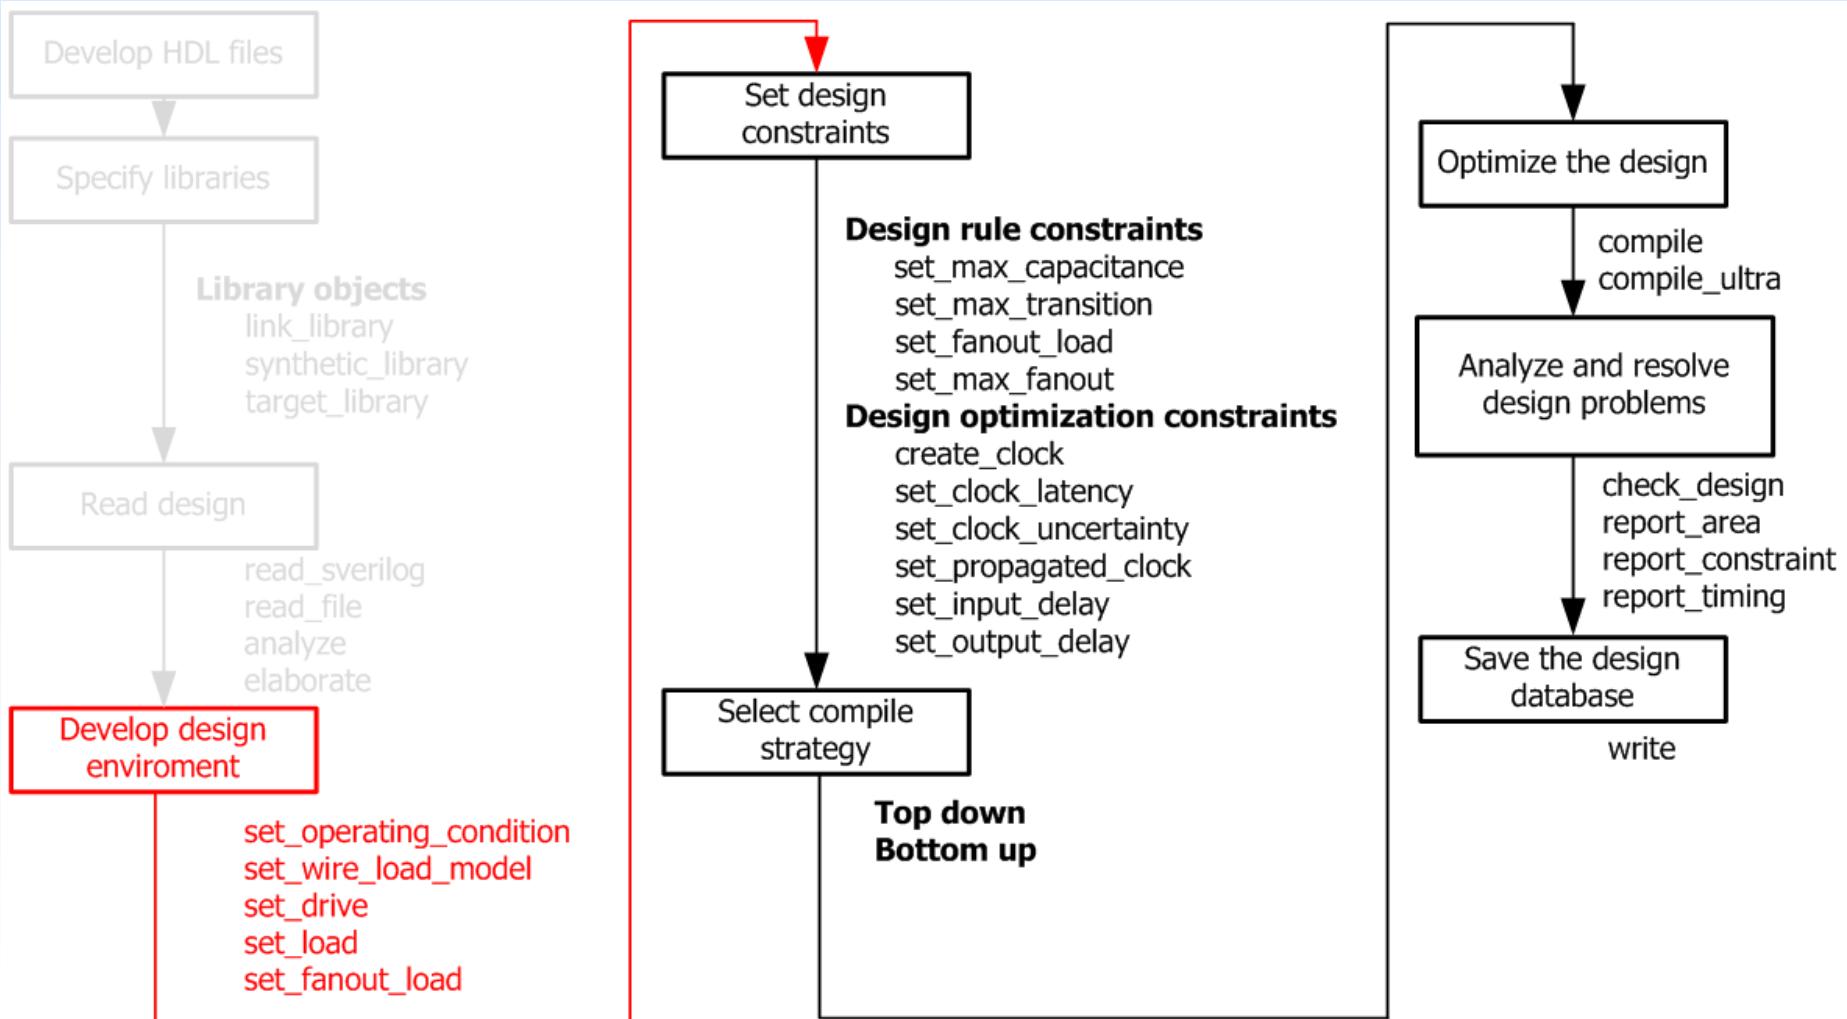

Define Design Environment

✓ Design Environment

- Define the environment in which the design is expected to operate in by specifying **operating conditions**, **wire load models**, and **system interface characteristics**.

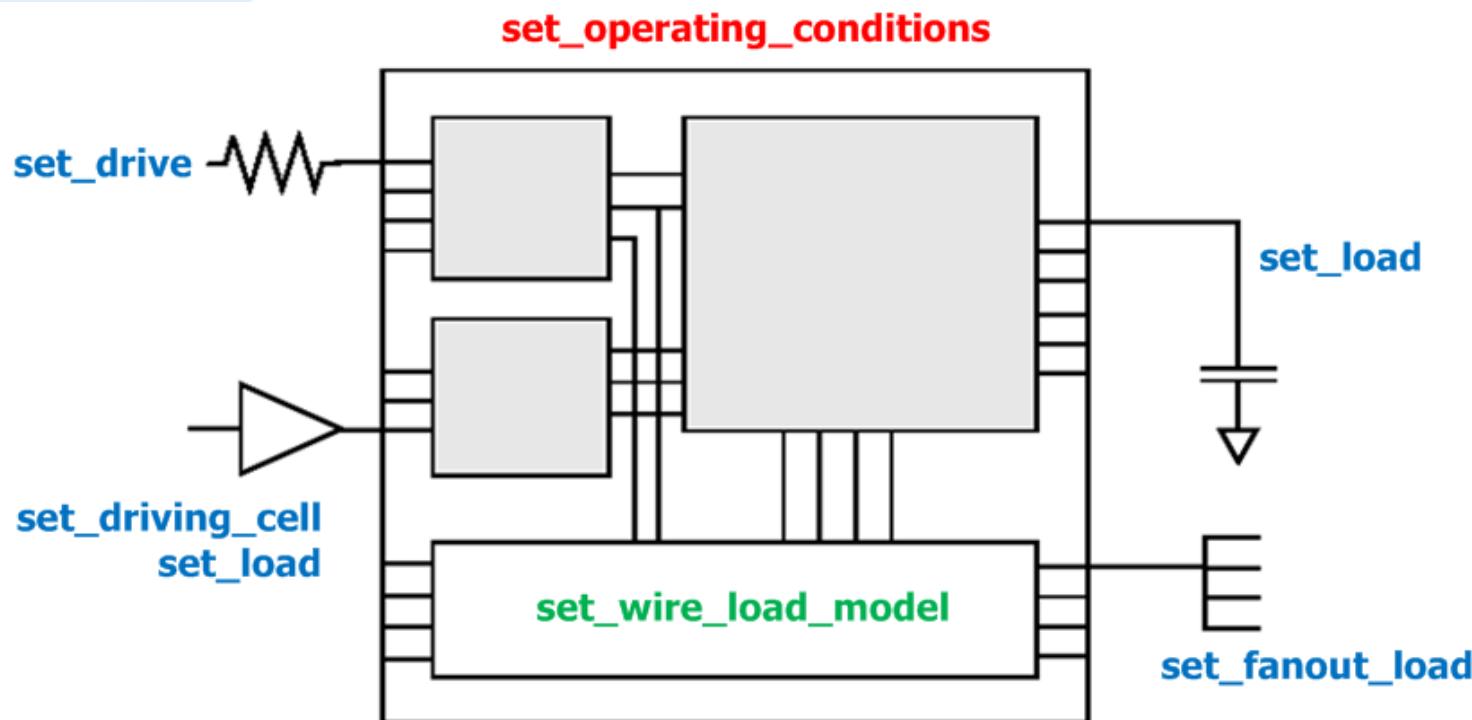


Commands Used to Define the Design Environment



Define Design Environment (Operating Conditions)

✓ Defining the Operating Conditions (**PVT** Variations)


- An operating condition is defined as a combination of **Process, Voltage, Temperature(PVT)**.
- There are three kinds of manufacturing process models that are provided by the semiconductor foundry for digital designs: *slow* process model, *typical* process model, *fast* process model.
- For robust design, the design should be validated at the extreme corners (*slow, fast* process model) of the manufacturing process at last.
- Generally, for synthesis stage, we use worst-case to ensure that the timing (setup time) is met under strict constraints.

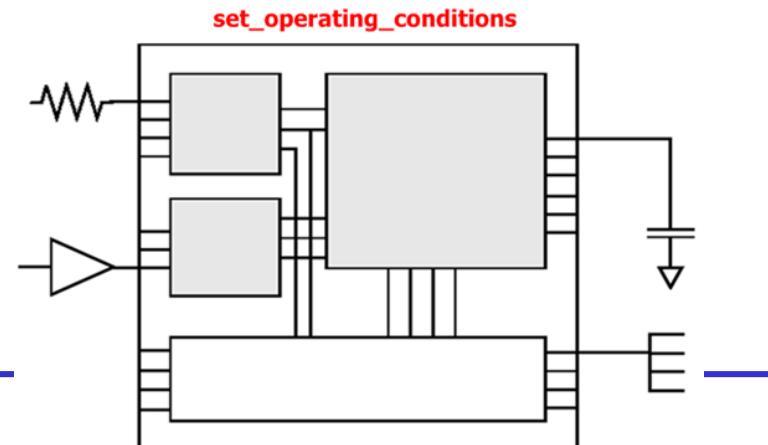

Define Design Environment (Wire Load Models)

✓ Defining Wire Load Models

- Before layout(APR), wire load models can be used to estimate capacitance, resistance and the area overhead due to interconnection.

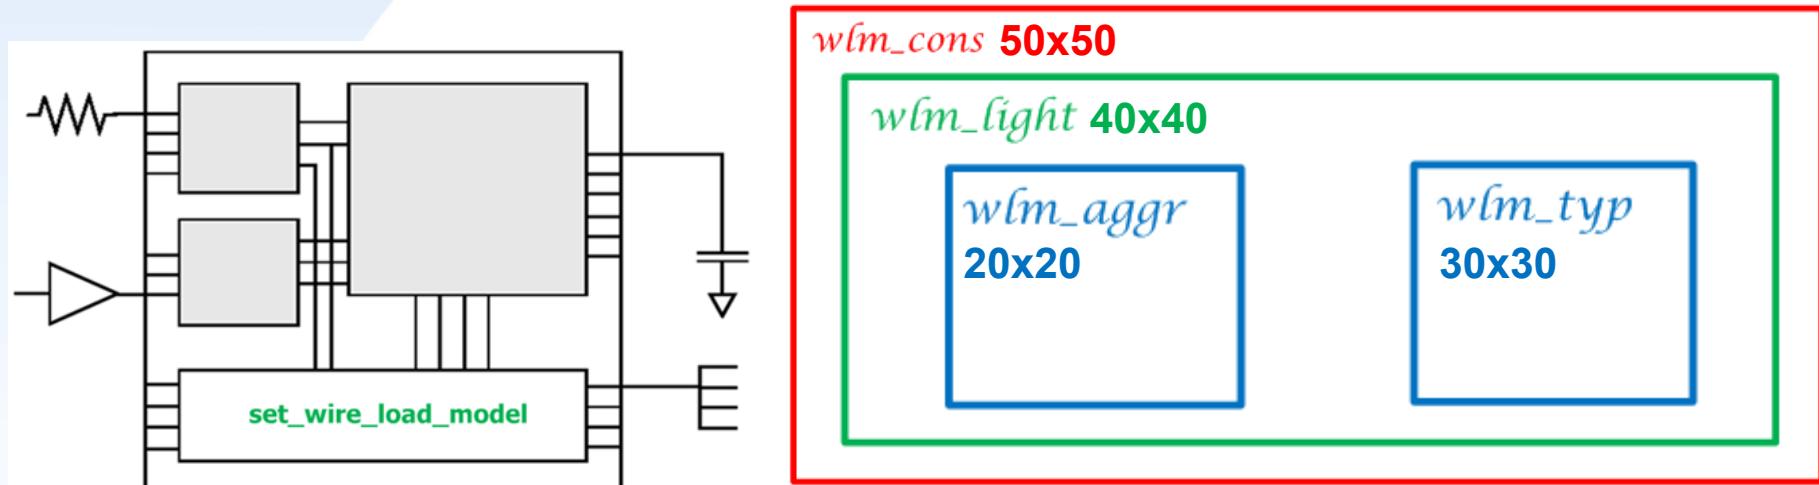

e.g.

```
set_wire_load_model -name "umc18_wl50"
```



Define Design Environment (Wire Load Models)

✓ Design Compiler uses physical values to calculate wire delays and circuit speeds, there are three types of wire load mode.

`set_wire_load_mode top`

– Top

- Uses the wire load model specified for the **top level of the design hierarchy** for all nets


– Enclosed

- Uses the wire load model of the **smallest module that fully encloses the net**


– Segmented

- Each segment of the net gets its wire load model **from the block that encompasses the net segment**


mode = top

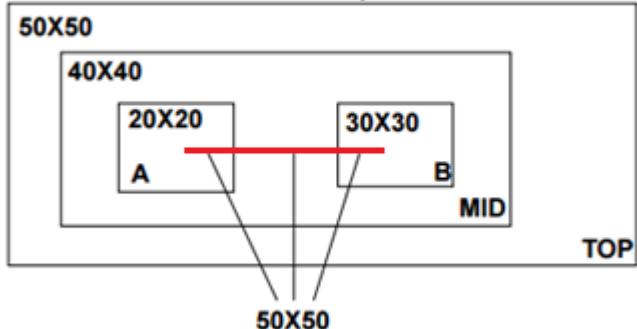

mode = enclosed

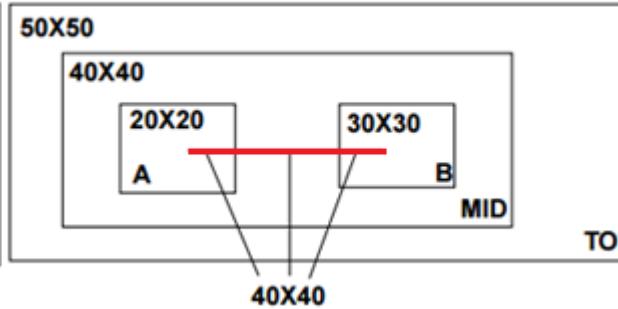


mode = segmented

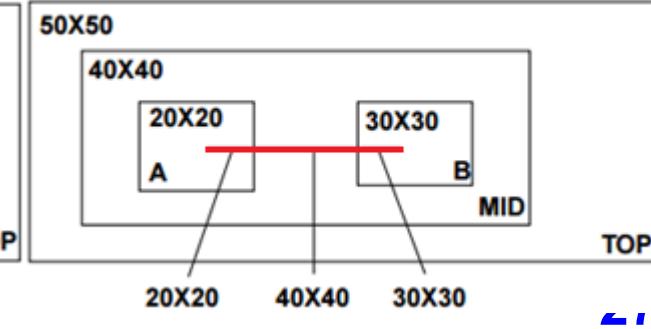

Define Design Environment (System Interface)

✓ Modeling the System Interface

- Design Compiler supports the following ways to model the design's interaction with the external system:
 - Defining drive characteristics for input ports
 - Defining fan out loads on output ports
 - Defining loads on input and output ports

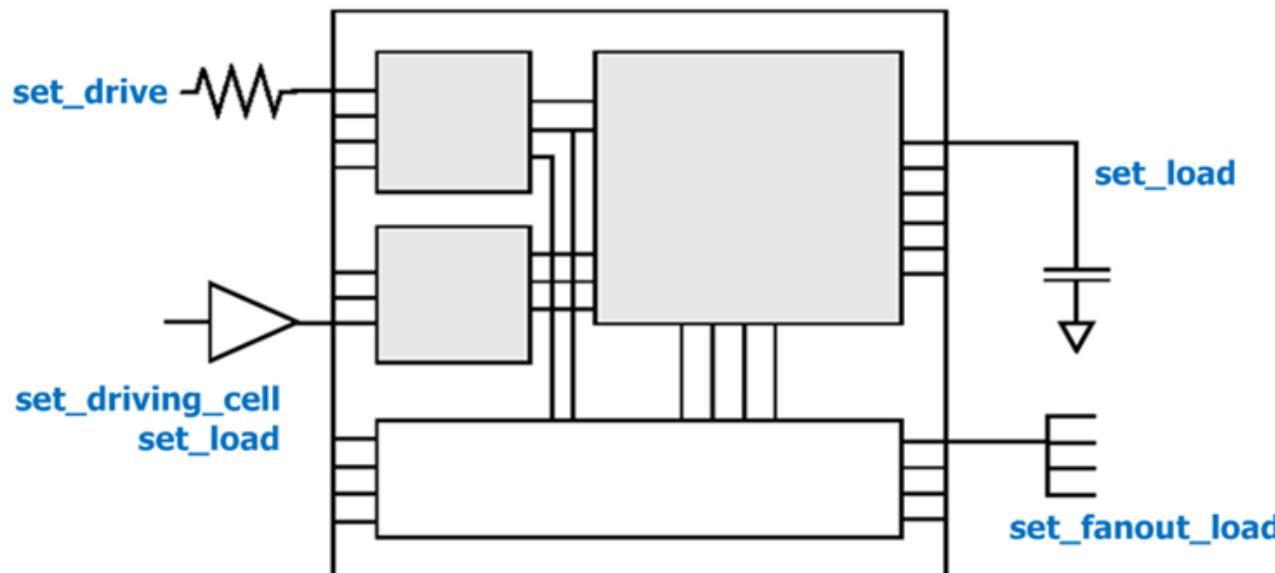


Define Design Environment (System Interface)

✓ e.g. defining loads on input and output ports


- By default, it assumes zero capacitive load on input and output ports.
- Use the `set_load` command to set a capacitive load value on input and output ports of the design.
- Example : Set a load of 0.05 **picofarads** on all output ports, set a drive of 1.5 **kilo-ohms** on all input ports.

`set_drive 1.5 [all_inputs]`

`set_load 0.05 [all_outputs]`

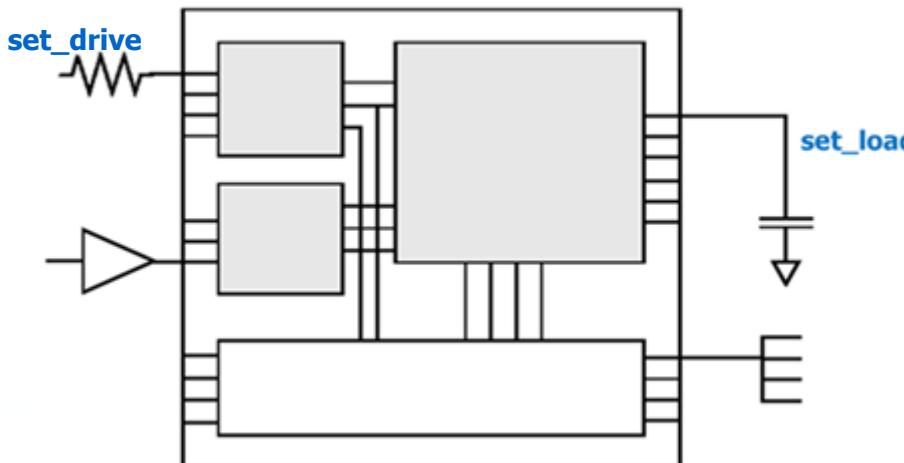

Select Design Object

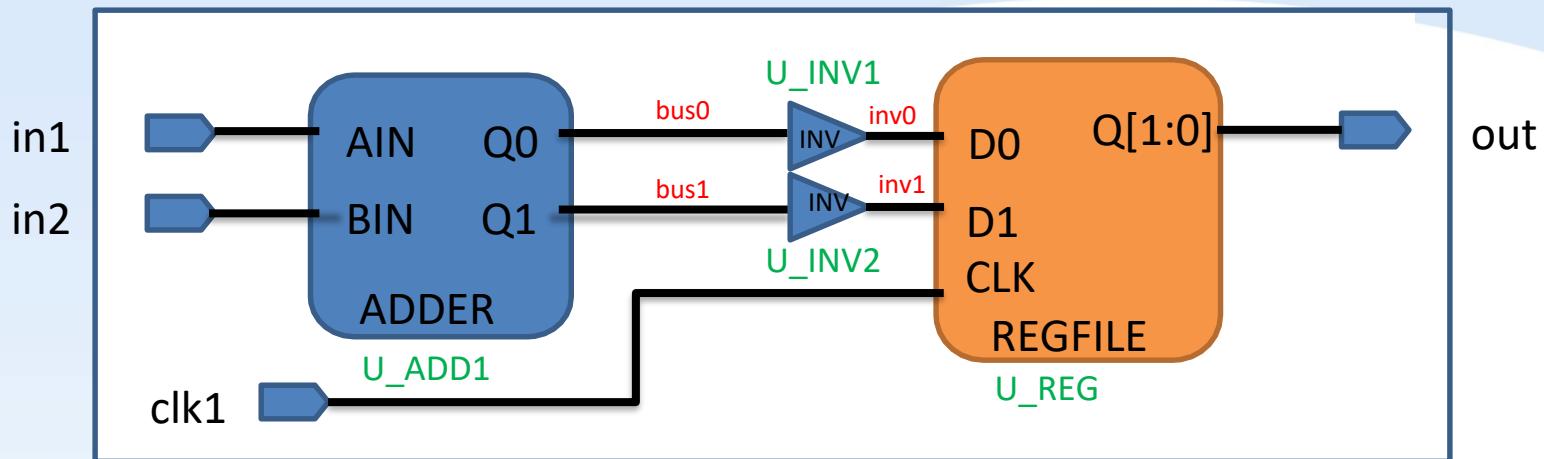

Example:

```
[get_ports *]      : in1, in2, out, clk1
[get_designs *]    : top
[get_pins U_ADD1/*] : AIN, BIN, Q0, Q1
[get_pins U_REG/*]  : D0, D1, CLK, Q
[get_cells *]       : U_ADD1, U_REG, U_INV1, U_INV2

[get_clocks *]      : clk1
[get_nets *]        : bus0, bus1, inv0, inv1
```


Frequently Used :

```
[all_inputs]      : in1, in2, clk1
[all_outputs]     : out
[all_ports]        : in1, in2, clk1, out
```

Reserved Word: clk, rst_n



Basic Synthesis Flow

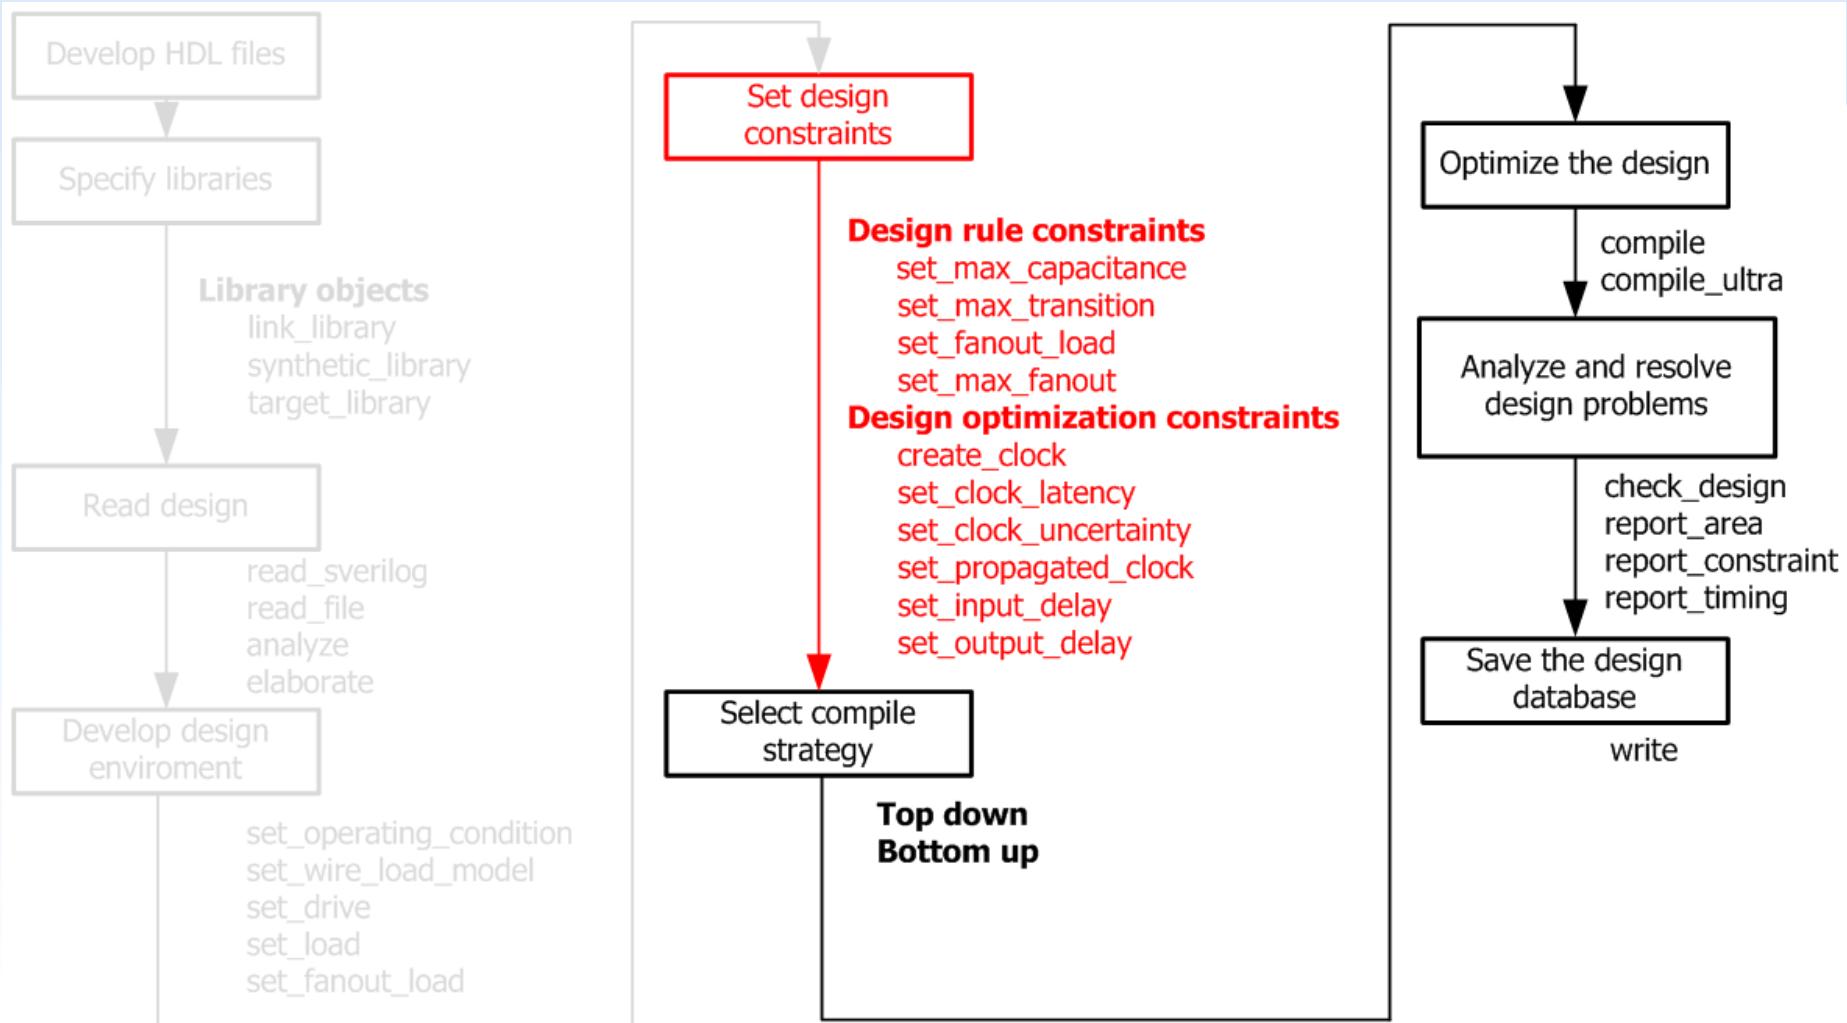

Set Design Constraints

✓ Constraint Priorities: (default)

Priority (descending order)	Notes
connection classes	
multiple_port_net_cost	
min_capacitance	Design rule constraint
max_transition	Design rule constraint
max_fanout	Design rule constraint
max_capacitance	Design rule constraint
cell_degradation	Design rule constraint
max_delay	Optimization constraint
min_delay	Optimization constraint
power	Optimization constraint
area	Optimization constraint
cell count	

Design rule constraint

Optimization constraint



Set Design Constraints_(cont.)

✓ There are two categories of design constraints

Design rule constraints

- Design rule constraints reflect technology-specific restrictions your design **must meet** in order to function as intended.
- Most technology libraries specify default design rules.
- You can apply more restrictive design rules, but you cannot apply less restrictive ones.

Design optimization constraints

- User defines **speed(timing)** and **area** optimization goals for Design Compiler.
- Speed(timing) constraints have higher priority than area.(The priority can be changed)
- Optimization constraints are secondary to design rule constraints.



Set Design Constraints_(cont.)

✓ Design Constraints

- Design rule constraints
 - `set_max_capacitance`
 - `set_max_transition`
 - `set_fanout_load`
 - `set_max_fanout`
- Design optimization constraints




Design Rule Constraints

✓ Maximum capacitance

- **dc_shell>set_max_capacitance cap_value port_list**
- It is set as a pin-level attribute that defines the maximum total capacitive load that an output pin can drive.

✓ Maximum transition

- **dc_shell>set_max_transition trans_value port_list**
- The maximum transition time for a net is the longest time required for its driving pin to change logic values.

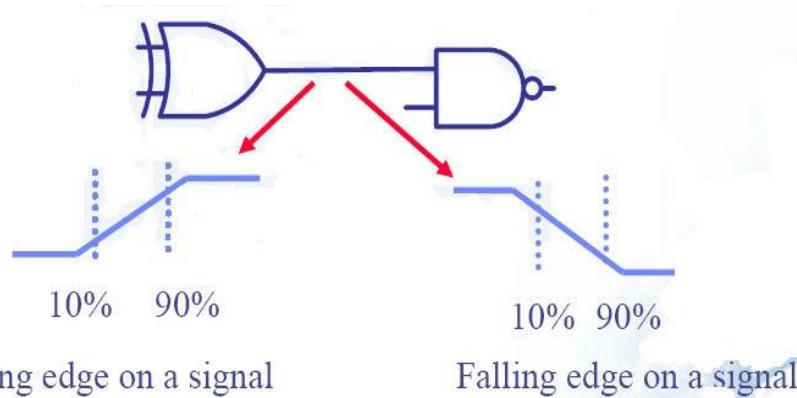


Design Rule Constraints (cont.)

✓ Fan-out load

- `dc_shell>set_fanout_load cap_value port_list`
- Fan-out load is a dimensionless number, not a capacitance. It represents a numerical contribution to the total effective fan-out.


✓ Maximum fan-out :

- `dc_shell>set_max_fanout cap_value port_list`
- The maximum fan-out load for a net is the maximum number of loads the net can drive.
- If a library fan-out constraint exists and a `max_fanout` attribute is specified, Design Compiler tries to meet the more restrictive value.

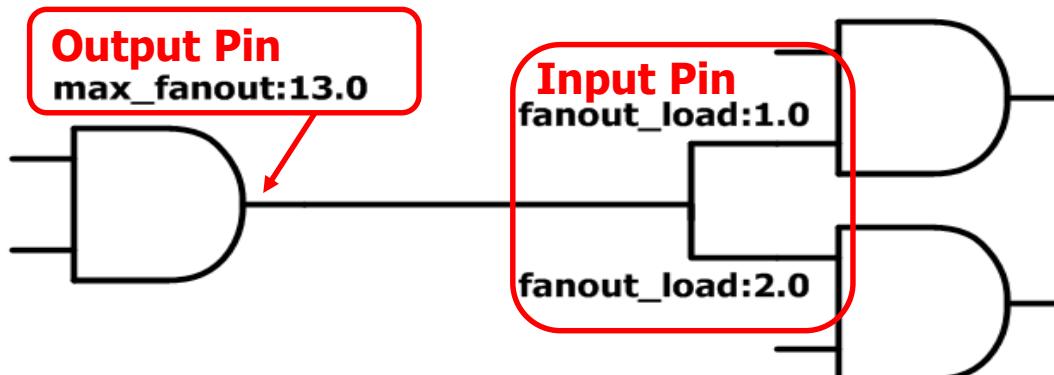

Design Rule Constraints (cont.)

✓ Example

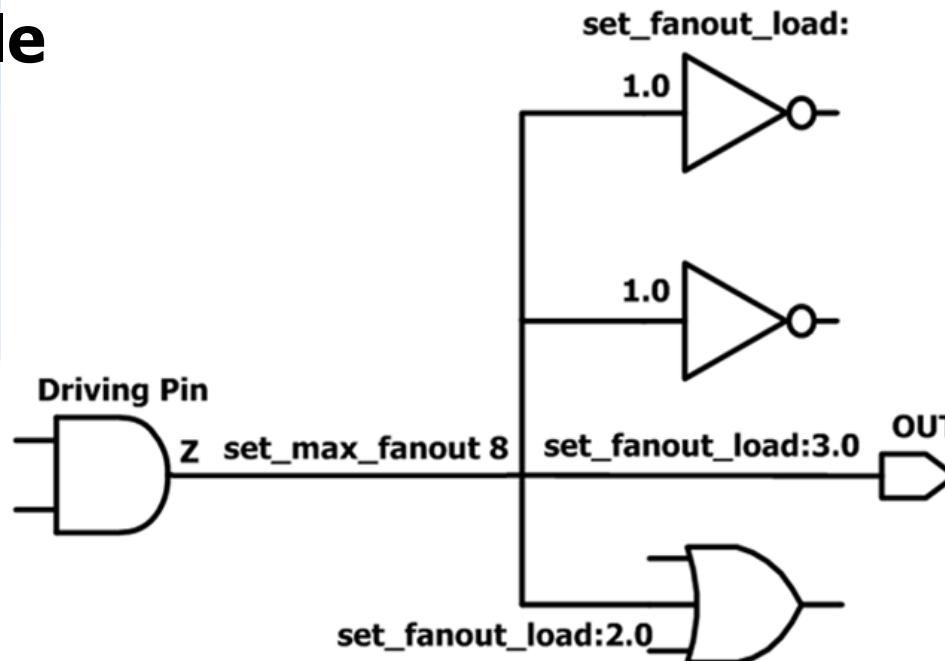

- To check whether the maximum fanout constraint is met for driving pin Z, Design Compiler compares the specified max_fanout attribute against the fanout load.
- In this case, the design constraint is met.

Total Fanout Load

$$8 \geq \underbrace{1.0 + 1.0 + 3.0 + 2.0}_7$$



Design Rule Constraints_(cont.)

✓ In some cases, the nets should be set to ideal.

- Nets that are assigned ideal timing conditions—that is, latency, transition time, and capacitance are assigned a value of zero..
- Such nets are exempt from timing updates, delay optimization, and design rule fixing.
- **set_ideal_network net_list**
- e.g. **set_ideal_network {clk}**



Set Design Constraints_(cont.)

✓ Design Constraints

- Design rule constraints
- Design optimization constraints
 - `create_clock`
 - `set_clock_latency`
 - `set_clock_uncertainty`
 - `set_propagated_clock`
 - `set_input_delay`
 - `set_output_delay`
 - `set_max_delay`
 - `set_fix_delay`
 - `set_false_path`



Design Optimization Constraints

✓ **create_clock**

- Defines the period and waveform for the clock

Syntax :

```
create_clock -name "clk name for tcl" source_objects \
             -period period_value -waveform { rise fall }
```

- source_objects : A list of pins or ports on which to apply this clock.
- -period period_value : the period of the clock waveform in library time units(ns).
- -waveform option : set the rising edge time and the falling edge time. If you do not specify the clock waveform, default waveform is a 50 percent duty cycle.

✓ Example:

```
set CYCLE 10.0
create_clock -name "clk" [get_ports clk1] -period $CYCLE
```




Design Optimization Constraints_(cont.)

- ✓ Design Compiler treats **clock networks as ideal (having no delay) by default.**
- ✓ You can override the default behavior to obtain nonzero clock network delay and specify information about the clock network delays, whether the skews are predicted or actual.
- ✓ **dc_shell>set_clock_latency * (more details in Chapter 7)**
 - Define the delay from CLK to the register
- ✓ **dc_shell>set_clock_uncertainty * (more details in Chapter 7)**
 - Used to model various factors that can reduce the effective clock period.
- ✓ **dc_shell>set_propagated_clock * (more details in Chapter 7)**
 - Specify the clock latency be propagated throughout the clock network




Static Timing Analysis


data arrival
time (Launch path)

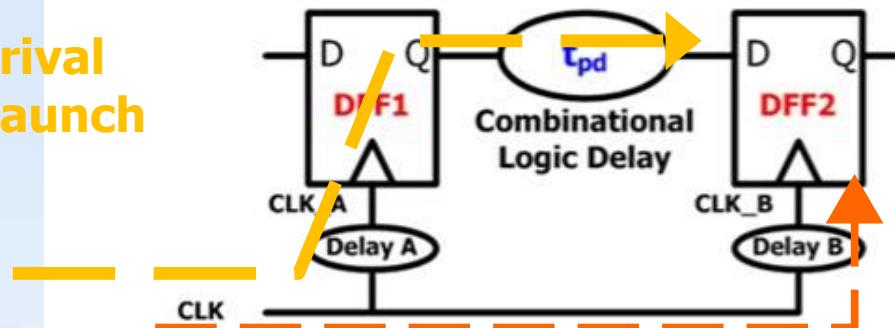

data required
time
(Capture path)

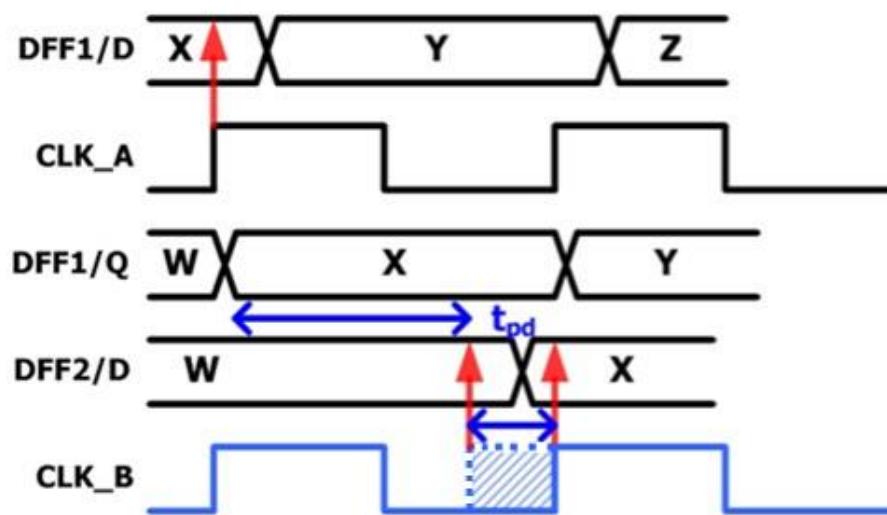

Setup Time Check

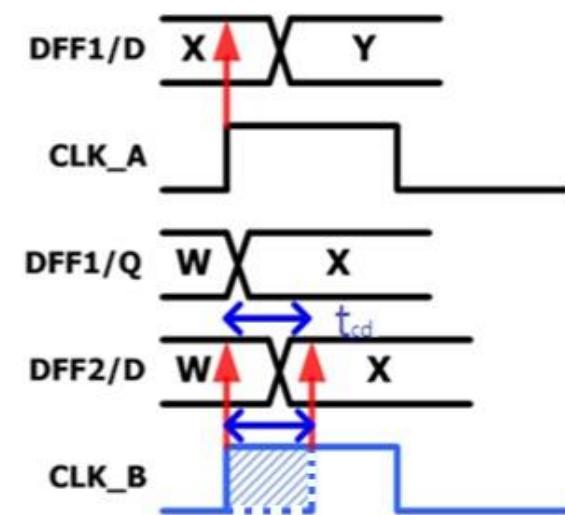


Hold Time Check




Constraining Input Paths

Specify the arrival time at the input ports of the design.

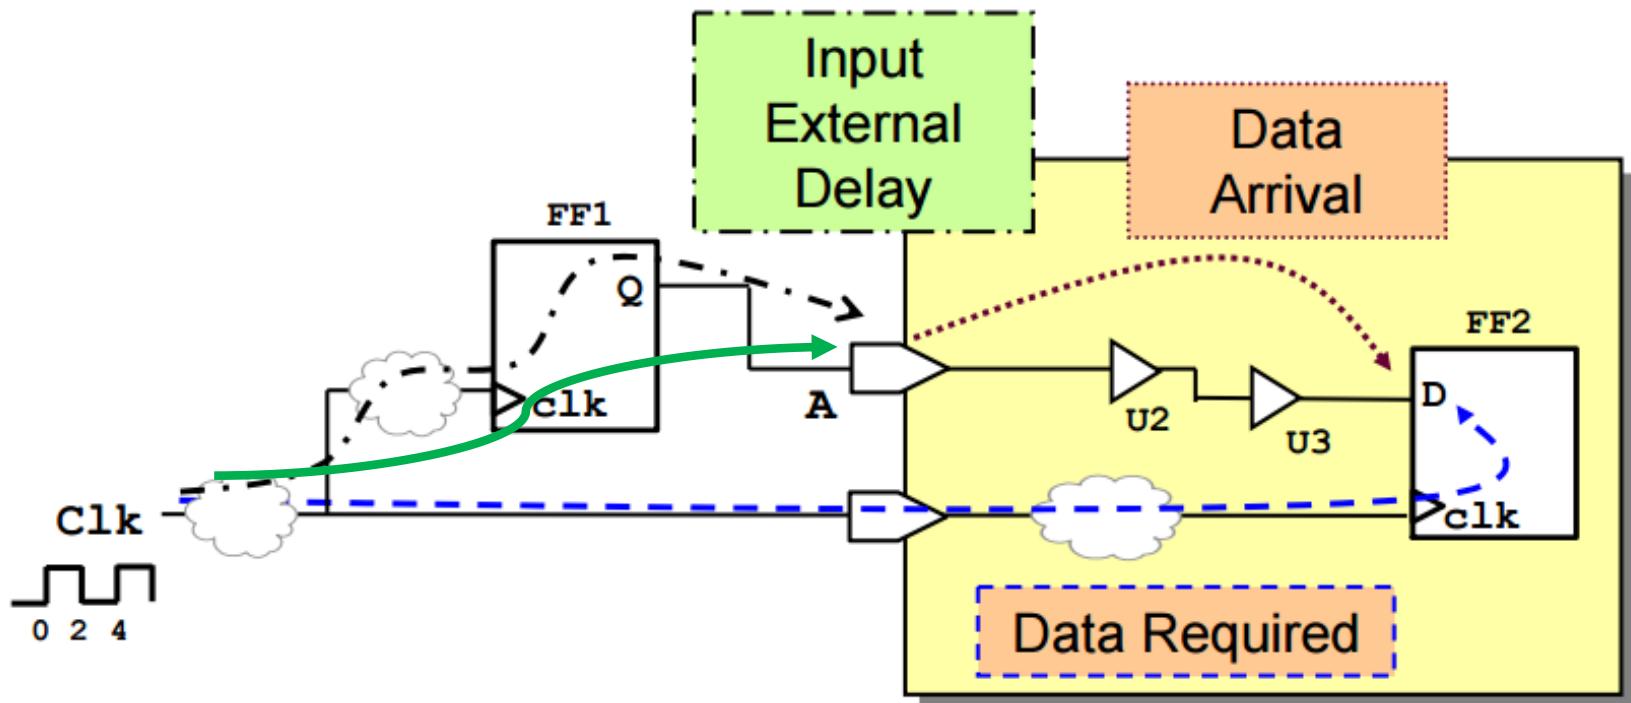

Constraining Input Paths (cont.)

✓ e.g.

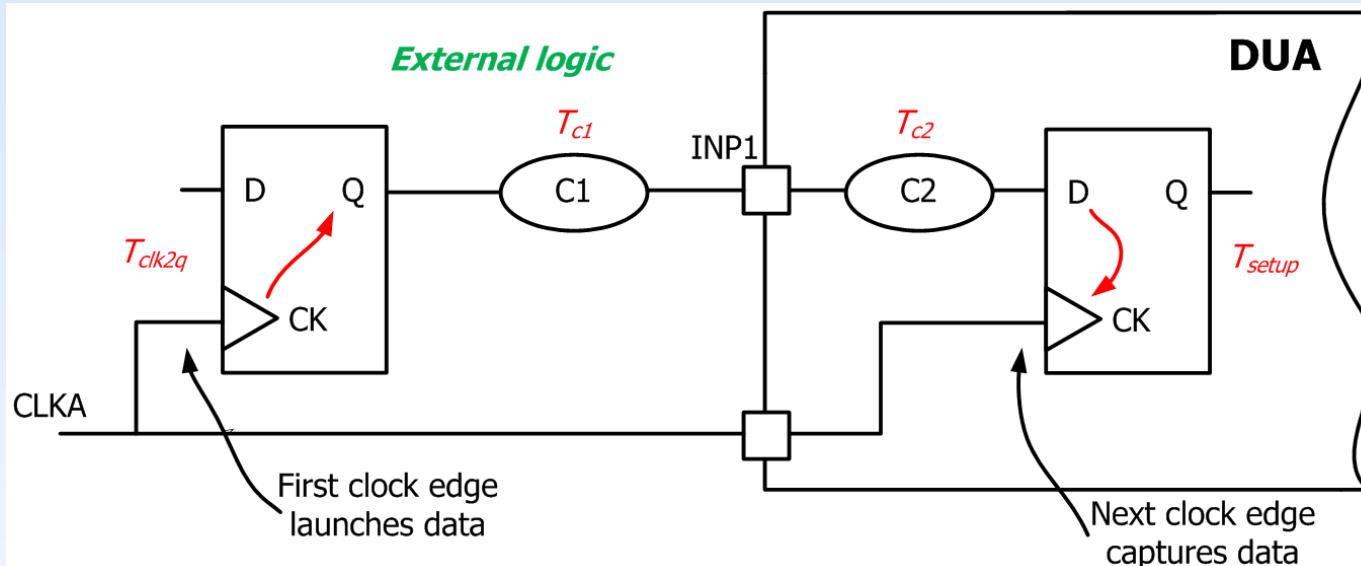

DUA (Design Under Analysis)

- **Input delay = $(T_{clk2q} + T_{C1})$**
- clock cycle $\geq (T_{clk2q} + T_{C1}) + T_{C2} + T_{setup}$
- dc_shell>set T_{clk2q} 0.9
- dc_shell>set T_{C1} 0.6
- dc_shell>set_input_delay -clock CLKA -max [expr \$T_{clk2q}+\$T_{C1}] [all_inputs]


```
set CYCLE 7.0
```

```
set_input_delay [ expr $CYCLE*0.5 ] -clock clk [all_inputs]
```




Constraining Output Paths

You specify the path required time at the output ports of the design.

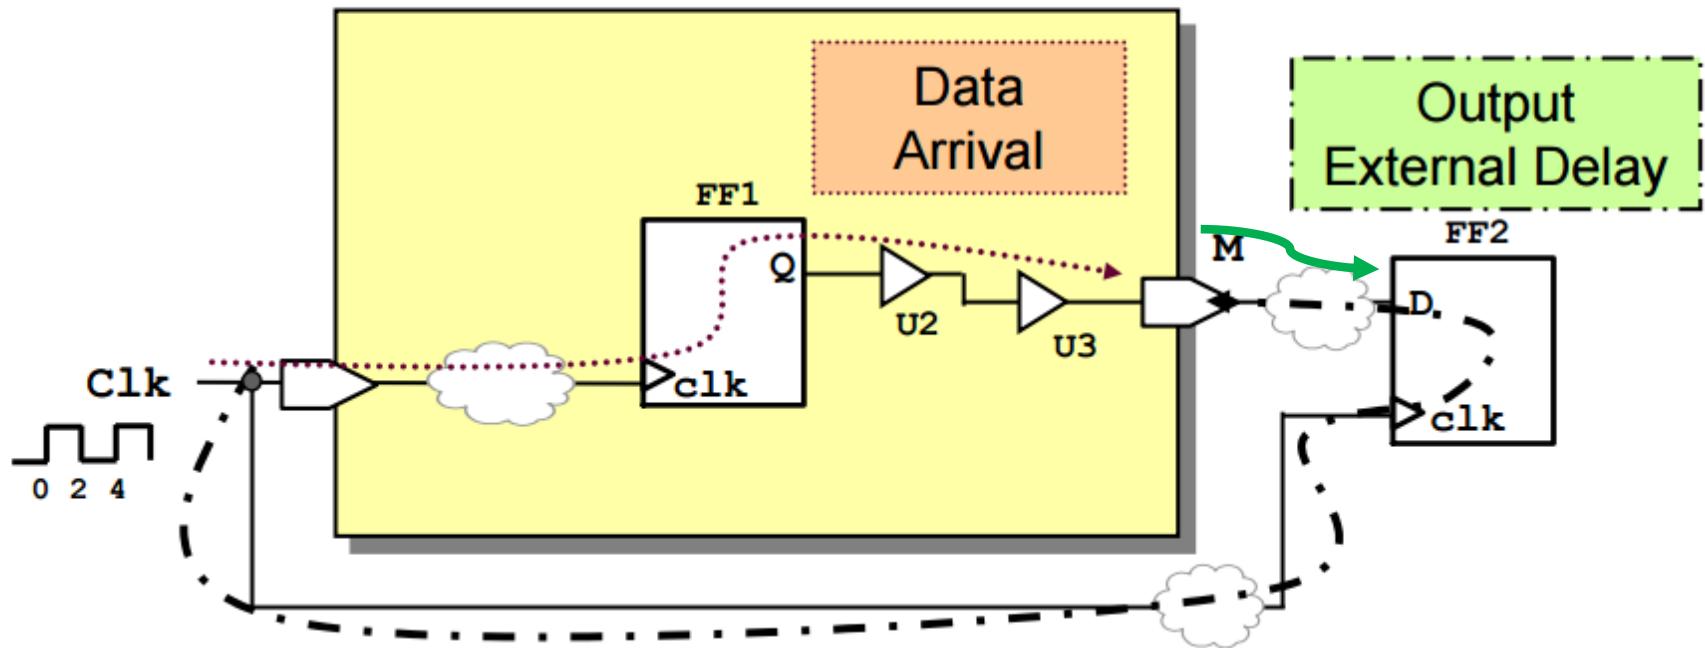

Constraining Output Paths_(cont.)

✓ e.g.

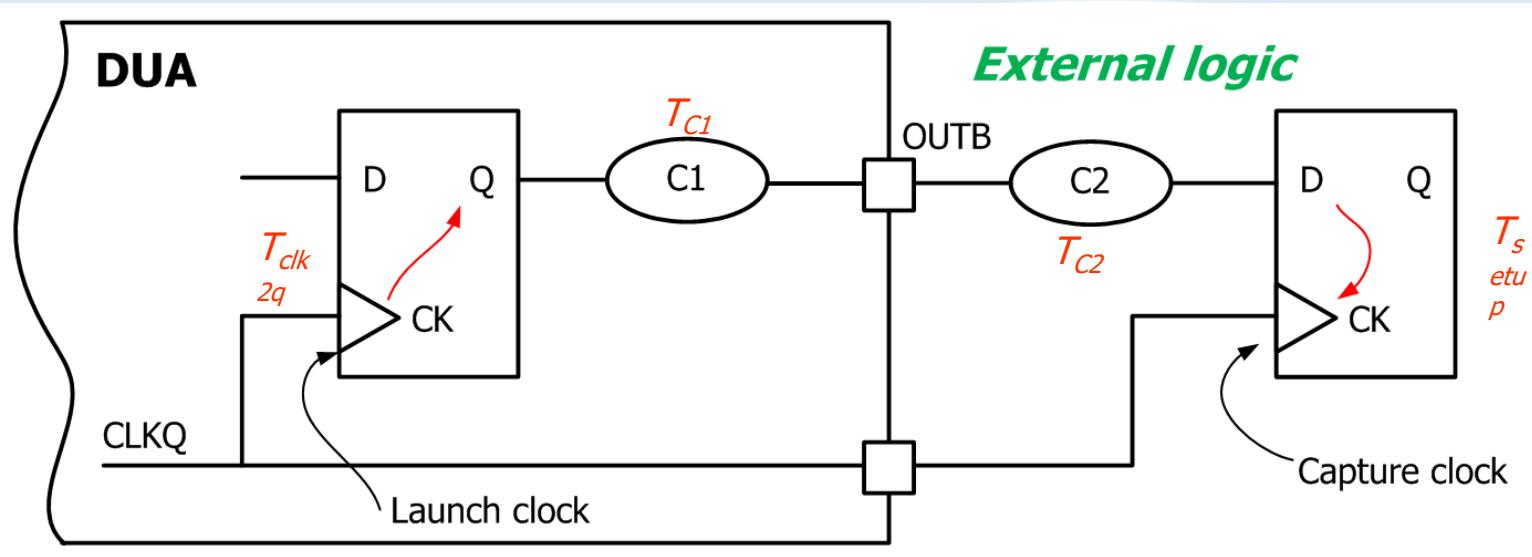

DUA (Design Under Analysis)

- **Output delay = $(T_{C2} + T_{\text{setup}})$**
- clock cycle $\geq T_{\text{clk2q}} + T_{C1} + (T_{C2} + T_{\text{setup}})$
- dc_shell>set T_{C2} 3.9
- dc_shell>set T_{setup} 1.1
- dc_shell>set_output_delay -clock CLKQ -max [expr \$T_{C2}+\$T_{\text{setup}}] [all_outputs]

```
set CYCLE 7.0
```

```
set_output_delay [ expr $CYCLE*0.5 ] -clock clk [all_outputs]
```



Combinational Design Constraint



Syntax:

```
set_max_delay max_delay_value -from object -to object
```

!!! This only applies for Combinational Circuit Only !!!

Example:

```
set_max_delay $MAX_Delay -from [all_inputs] -to [all_outputs]
```

Design Optimization Constraints_(cont.)

✓ Design Compiler fix hold violations at register during compilation

- Set_fix_hold informs compile that hold time violations of the specified clocks should be fixed.
- To fix a hold violation requires slowing down data signals.
- Design Compiler considers the minimum delay cost only if the set_fix_hold command is used.
- Generally, fixing and optimizing setup time violation are more important than hold time violation before CTS.

– Syntax : **set_fix_hold clock_list**

e.g. :

The following command sets a fix_hold attribute on clock “clk1”.

dc_shell> set_fix_hold clk1




Specify False Path


✓ Remove timing constraints from particular path

- Make compiler to ignore paths that never occur in normal operation
- Timing checks of false path will be disabled. Therefore, use this command carefully

✓ `dc_shell>set_false_path -from FF_A/CK -to FF_D/D`

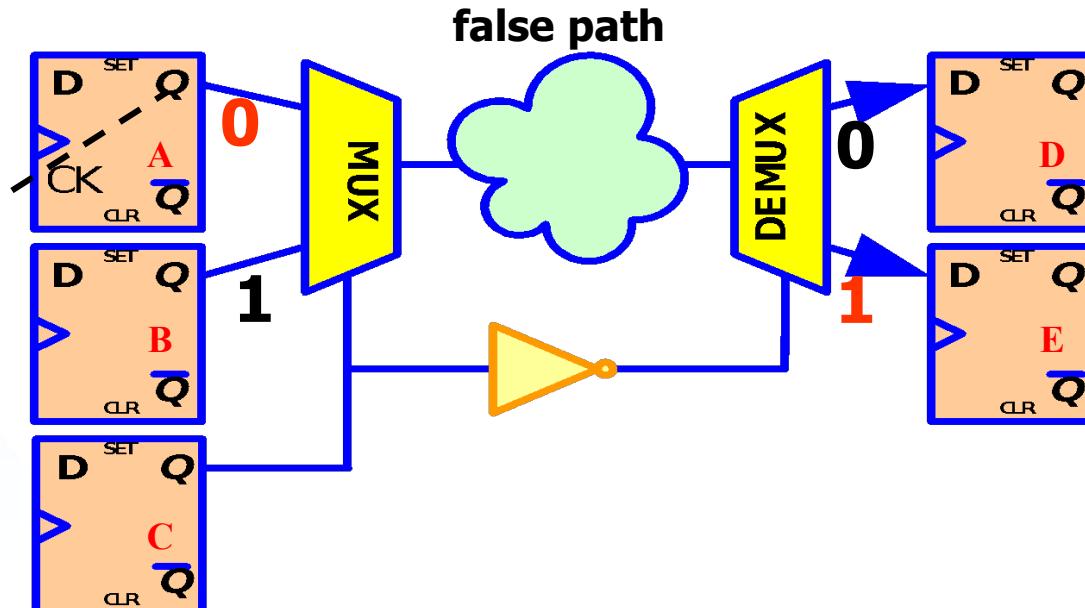

Basic Synthesis Flow

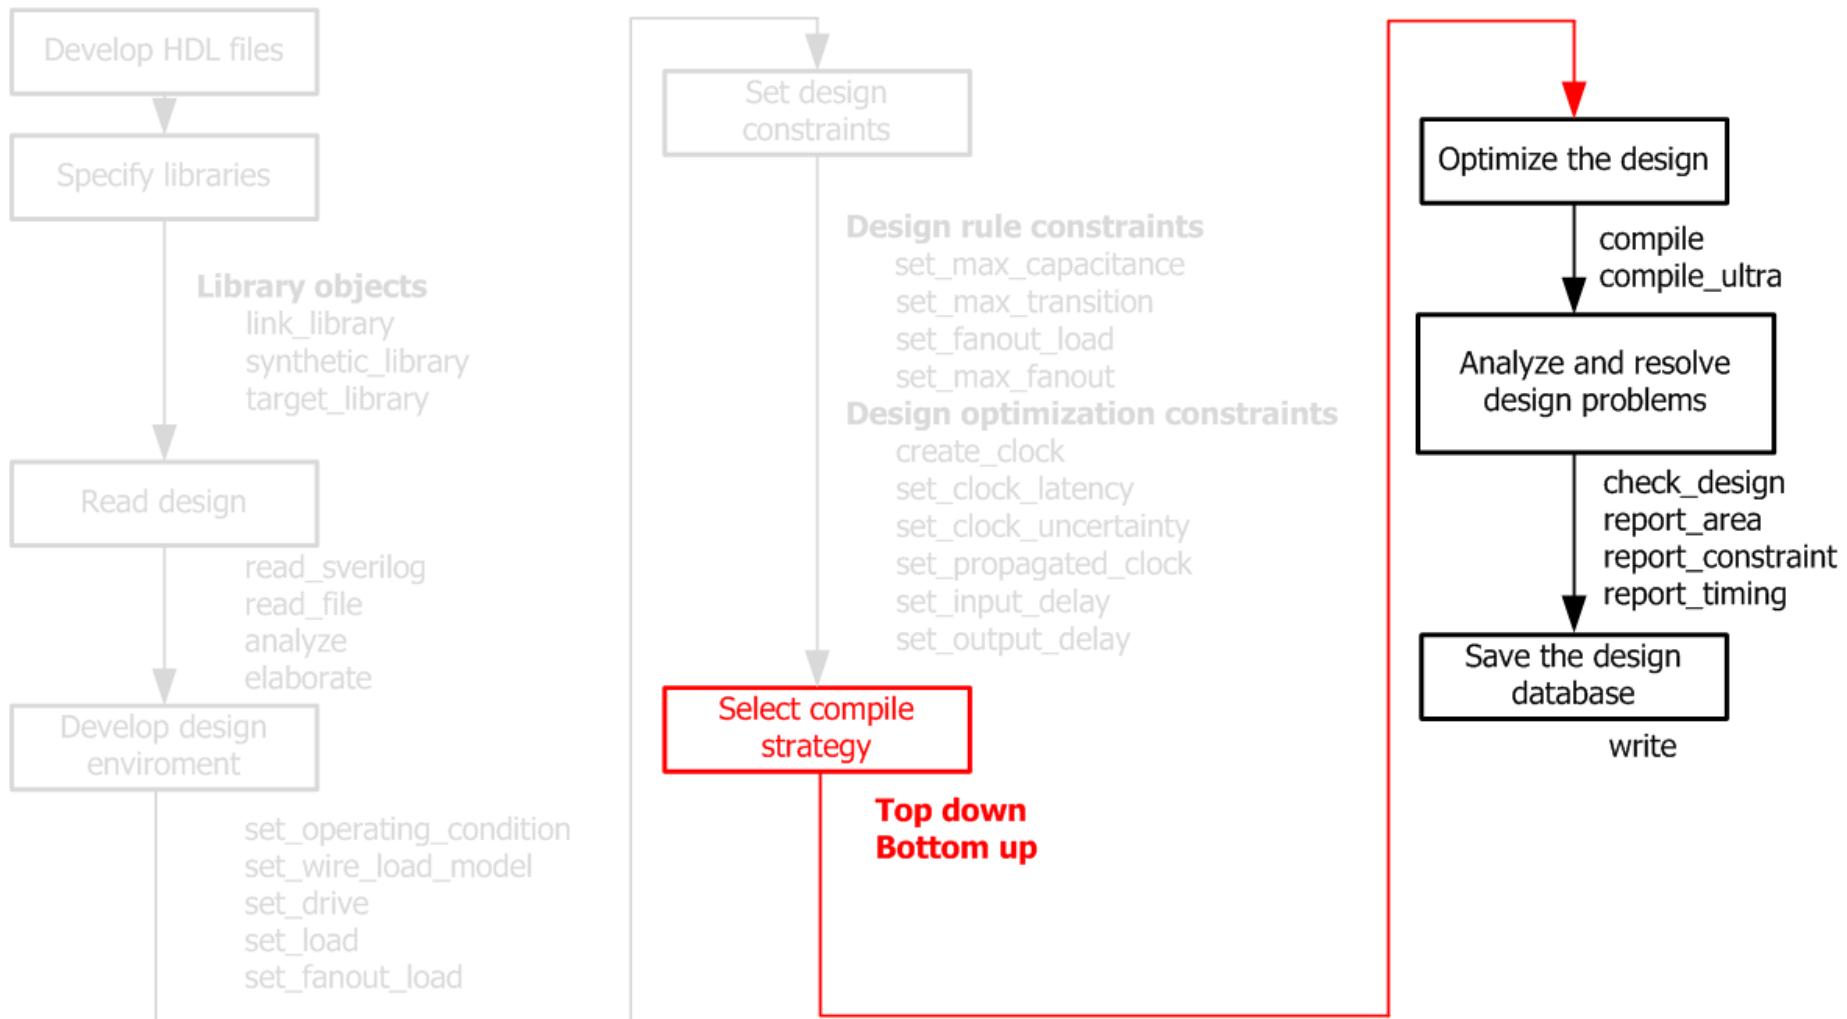

Select Compile Strategy


✓ You can use various strategies to compile your hierarchical design.

✓ The basic strategies are

- Top-down compile, in which the top-level design and all its subdesigns are compiled together.
- Bottom-up compile, in which the individual subdesigns are compiled separately, starting from the bottom of the hierarchy and proceeding up through the levels of the hierarchy until the top-level design is compiled.
- Mixed compile, in which the top-down or bottom-up strategy, whichever is most appropriate, is applied to the individual subdesigns.




Basic Synthesis Flow

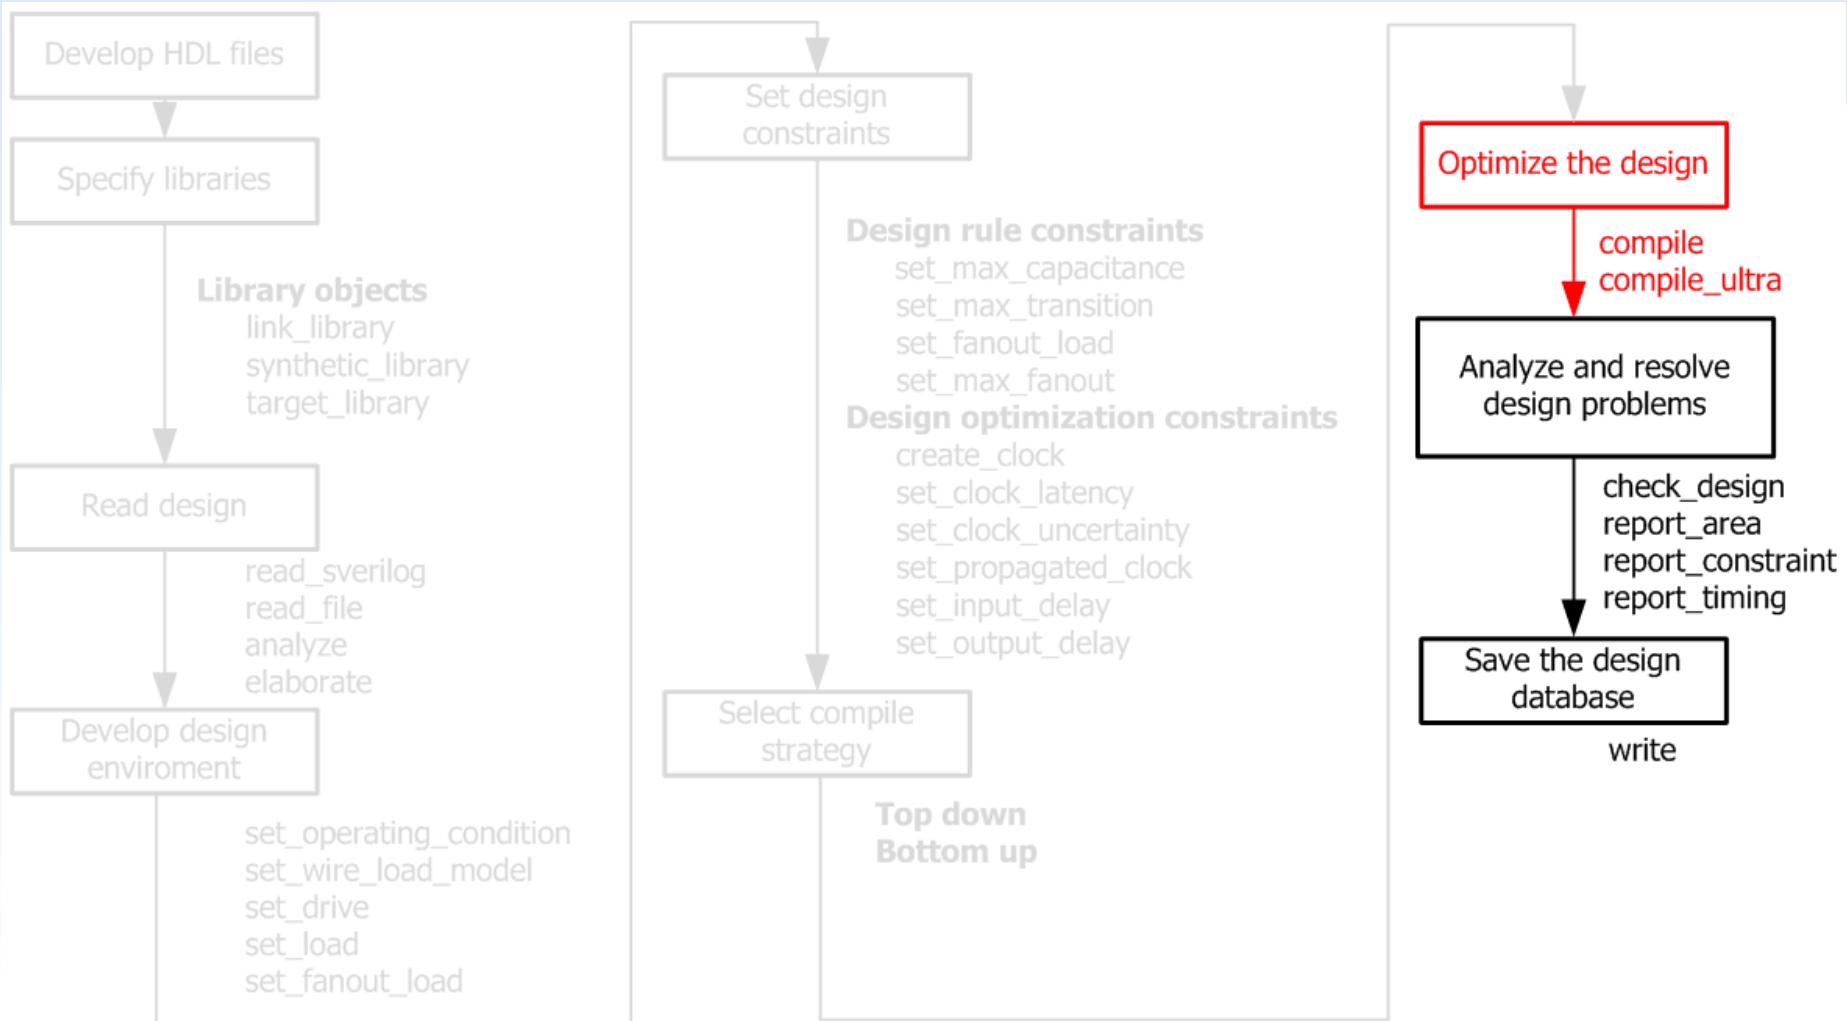

Multiple Instances of a Design Reference

✓ Multiple instances of a design reference

- In a hierarchical design, subdesigns are often referenced by more than one cell instance, that is, multiple references of the design can occur.
- Ex: design C is referenced twice (U2/U3 and U2/U4).

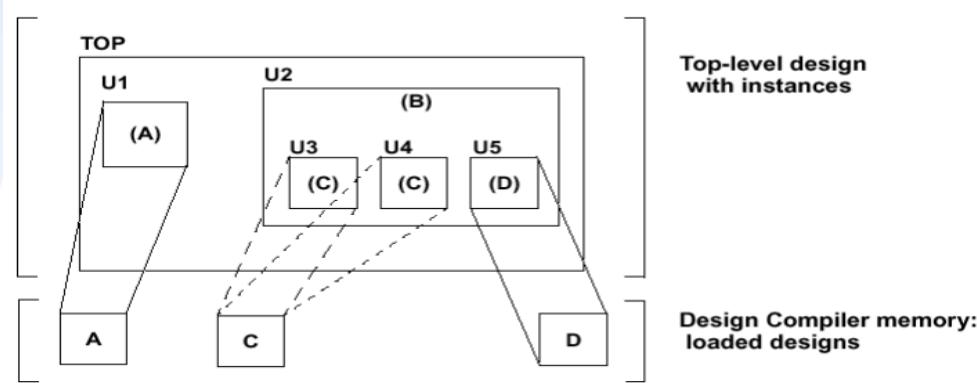

✓ Use any of the following methods resolve multiple instances before running the compile command


- The uniquify method
- The compile-once-dont-touch method
- The ungroup method



Uniquify Method

✓ Uniquify (default)

- The command is to duplicate and rename the multiple referenced design so that each instance references a unique design.
 - Requires more memory
 - Takes longer to compile
- **dc_shell> uniquify**
dc_shell> compile

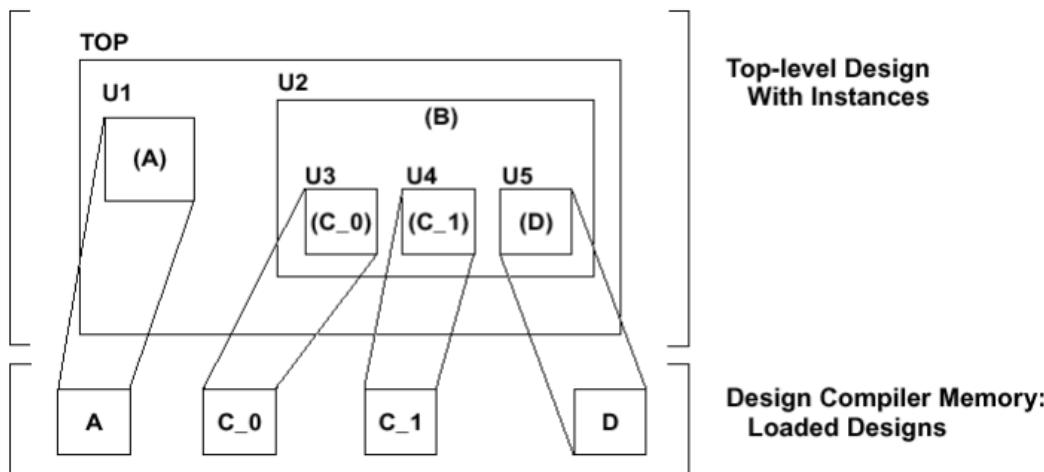

Uniquify Method (cont.)

✓ Example:

```

module ch6_ex(input clk, INF.DESIGN inf);
adder_1b add1(.clk(clk),.rst_n(inf.rst_n),.x1(inf.x1),.x2(inf.x2),.Sum(inf.Sum1));
adder_1b add2(.clk(clk),.rst_n(inf.rst_n),.x1(inf.x1),.x2(inf.x2),.Sum(inf.Sum2));
adder_1b add3(.clk(clk),.rst_n(inf.rst_n),.x1(inf.x1),.x2(inf.x2),.Sum(inf.Sum3));
endmodule :ch6_ex

module adder_1b ( clk, rst_n, x1, x2, Sum );
  output [1:0] Sum;
  input clk, rst_n, x1, x2;
  wire N1, N2;

  DFFTRX1 Sum_reg_1 ( .D(N2), .RN(rst_n), .CK(clk), .Q(Sum[1]) );
  DFFTRX1 Sum_reg_0 ( .D(N1), .RN(rst_n), .CK(clk), .Q(Sum[0]) );
  XOR2X2 U3 ( .A(x2), .B(x1), .Y(N1) );
  AND2X2 U4 ( .A(x1), .B(x2), .Y(N2) );
endmodule

//module adder_1b(
//  input clk,
//  input logic rst_n,
//  input logic x1,
//  input logic x2,
//  output logic [1:0] Sum
//);
//  //always_ff@(posedge clk)
//begin
//  if(!rst_n)
//    Sum <= 0;
//  else
//    Sum <= x1+x2;
//end
//endmodule :adder_1b

```

script(.tcl)

```

=====
# Optimization
=====
uniquify
#set_dont_touch {add1 add2}
#ungroup {add1 add2}
compile

```

RTL(.v)

```

module ch6_ex ( clk, inf_rst_n, inf_x1, inf_x2, inf_Sum1, inf_Sum2, inf_Sum3 );
  output [1:0] inf_Sum1;
  output [1:0] inf_Sum2;
  output [1:0] inf_Sum3;
  input clk, inf_rst_n, inf_x1, inf_x2;
  adder_1b_2 add1 ( .clk(clk), .rst_n(inf_rst_n), .x1(inf_x1), .x2(inf_x2),
                     .Sum(inf_Sum1) );
  adder_1b_1 add2 ( .clk(clk), .rst_n(inf_rst_n), .x1(inf_x1), .x2(inf_x2),
                     .Sum(inf_Sum2) );
  adder_1b_0 add3 ( .clk(clk), .rst_n(inf_rst_n), .x1(inf_x1), .x2(inf_x2),
                     .Sum(inf_Sum3) );
endmodule

```

```

module adder_1b_1 ( clk, rst_n, x1, x2, Sum );
  output [1:0] Sum;
  input clk, rst_n, x1, x2;
  wire N2, N1;

  DFFTRX1 Sum_reg_1 ( .D(N2), .RN(rst_n), .CK(clk), .Q(Sum[1]) );
  DFFTRX1 Sum_reg_0 ( .D(N1), .RN(rst_n), .CK(clk), .Q(Sum[0]) );
  XOR2X1 U1 ( .A(x2), .B(x1), .Y(N1) );
  AND2X1 U2 ( .A(x1), .B(x2), .Y(N2) );
endmodule

```

```

module adder_1b_0 ( clk, rst_n, x1, x2, Sum );
  output [1:0] Sum;
  input clk, rst_n, x1, x2;
  wire N2, N1;

  DFFTRX1 Sum_reg_1 ( .D(N2), .RN(rst_n), .CK(clk), .Q(Sum[1]) );
  DFFTRX1 Sum_reg_0 ( .D(N1), .RN(rst_n), .CK(clk), .Q(Sum[0]) );
  XOR2X1 U1 ( .A(x2), .B(x1), .Y(N1) );
  AND2X1 U2 ( .A(x1), .B(x2), .Y(N2) );
endmodule

```

```

module adder_1b_2 ( clk, rst_n, x1, x2, Sum );
  output [1:0] Sum;
  input clk, rst_n, x1, x2;
  wire N2, N1;

  DFFTRX1 Sum_reg_1 ( .D(N2), .RN(rst_n), .CK(clk), .Q(Sum[1]) );
  DFFTRX1 Sum_reg_0 ( .D(N1), .RN(rst_n), .CK(clk), .Q(Sum[0]) );
  XOR2X1 U1 ( .A(x2), .B(x1), .Y(N1) );
  AND2X1 U2 ( .A(x1), .B(x2), .Y(N2) );
endmodule


```

Netlist(.v)

Compile-Once-Don't-Touch Method

✓ **set_dont_touch**

- It places the dont_touch attribute on cells, nets, references, and designs in the current design to prevent these objects from being modified or replaced during optimization.
 - Compiles the reference design once
 - Requires less memory and less time than the uniquify method
- **dc_shell> set_dont_touch {U2/U3 U2/U4}**

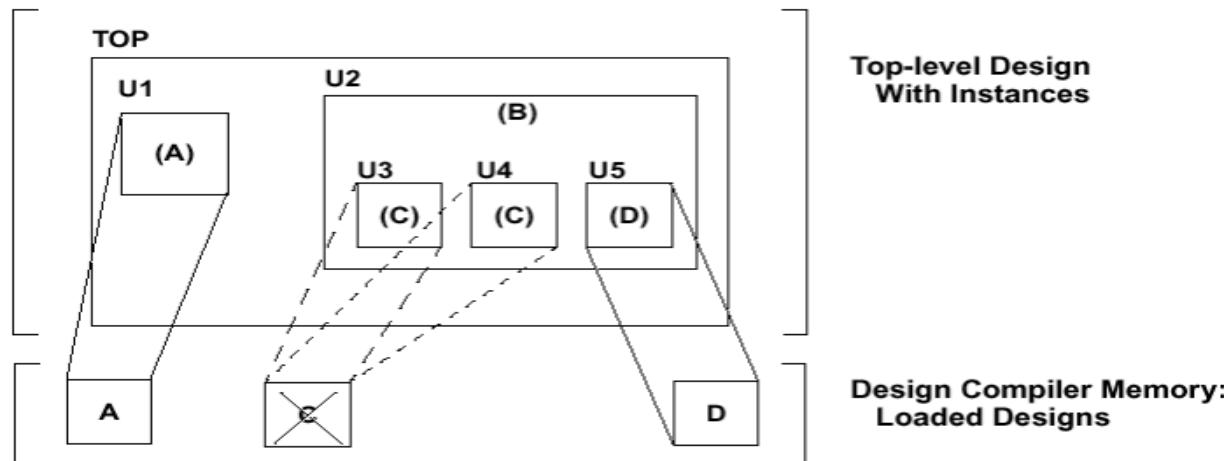

Compile-Once-Don't-Touch Method (cont.)

✓ Example: {add1 add2} are compiled by using the environment of one of its instances. In this case, no copies of the original sub-design are loaded into memory when running this command sequence.

```
module ch6_ex(input clk, INF.DESIGN inf);
adder_1b add1(.clk(clk), .rst_n(inf.rst_n), .x1(inf.x1), .x2(inf.x2), .Sum(inf.Sum1));
adder_1b add2(.clk(clk), .rst_n(inf.rst_n), .x1(inf.x1), .x2(inf.x2), .Sum(inf.Sum2));
adder_1b add3(.clk(clk), .rst_n(inf.rst_n), .x1(inf.x1), .x2(inf.x2), .Sum(inf.Sum3));
endmodule :ch6_ex

module adder_1b ( clk, rst_n, x1, x2, Sum );
  output [1:0] Sum;
  input clk, rst_n, x1, x2;
  wire N1, N2;

  DFFTRX1 Sum_reg_1 ( .D(N2), .RN(rst_n), .CK(clk), .Q(Sum[1]) );
  DFFTRX1 Sum_reg_0 ( .D(N1), .RN(rst_n), .CK(clk), .Q(Sum[0]) );
  XOR2X2 U3 ( .A(x2), .B(x1), .Y(N1) );
  AND2X2 U4 ( .A(x1), .B(x2), .Y(N2) );
endmodule

//module adder_1b(
//  input clk,
//  input logic rst_n,
//  input logic x1,
//  input logic x2,
//  output logic [1:0] Sum
//);
//  //always_ff@(posedge clk)
//begin
//  if(!rst_n)
//    Sum <= 0;
//  else
//    Sum <= x1+x2;
//end
//endmodule :adder_1b
```

script(.tcl)

```
#####
# Optimization
#####
#uniqueify
set dont touch {add1 add2}
#ungroup {add1 add2}
compile
```

RTL(.v)

```
module ch6_ex ( clk, inf_rst_n, inf_x1, inf_x2, inf_Sum1, inf_Sum2, inf_Sum3 );
  output [1:0] inf_Sum1;
  output [1:0] inf_Sum2;
  output [1:0] inf_Sum3;
  input clk, inf_rst_n, inf_x1, inf_x2;

  adder_1b add1 (.clk(clk), .rst_n(inf_rst_n), .x1(inf_x1), .x2(inf_x2),
                 .Sum(inf_Sum1) );
  adder_1b add2 (.clk(clk), .rst_n(inf_rst_n), .x1(inf_x1), .x2(inf_x2),
                 .Sum(inf_Sum2) );
  adder_1b add3 (.clk(clk), .rst_n(inf_rst_n), .x1(inf_x1), .x2(inf_x2),
                 .Sum(inf_Sum3) );
endmodule
```

```
module adder_1b_0 ( clk, rst_n, x1, x2, Sum );
  output [1:0] Sum;
  input clk, rst_n, x1, x2;
  wire N2, N1;
```

```
DFFTRX1 Sum_reg_1 ( .D(N2), .RN(rst_n), .CK(clk), .Q(Sum[1]) );
DFFTRX1 Sum_reg_0 ( .D(N1), .RN(rst_n), .CK(clk), .Q(Sum[0]) );
XOR2X2 U1 ( .A(x2), .B(x1), .Y(N1) );
AND2X2 U2 ( .A(x1), .B(x2), .Y(N2) );
endmodule
```

```
module adder_1b ( clk, rst_n, x1, x2, Sum );
  output [1:0] Sum;
  input clk, rst_n, x1, x2;
  wire N2, N1;

  DFFTRX1 Sum_reg_1 ( .D(N2), .RN(rst_n), .CK(clk), .Q(Sum[1]) );
  DFFTRX1 Sum_reg_0 ( .D(N1), .RN(rst_n), .CK(clk), .Q(Sum[0]) );
  XOR2X2 U3 ( .A(x2), .B(x1), .Y(N1) );
  AND2X2 U4 ( .A(x1), .B(x2), .Y(N2) );
endmodule
```


Netlist(.v)



Ungroup Method

✓ Ungroup

- use the ungroup command to ungroup one or more designs before optimization
 - Requires more memory and takes longer to compile than the compile-once-don't-touch method
 - Provides the best synthesis results
 - May increase the difficulty for ECO(Engineering change order).
- **dc_shell> current_design B**
dc_shell> ungroup {U3 U4}
dc_shell> current_design top
dc_shell> compile

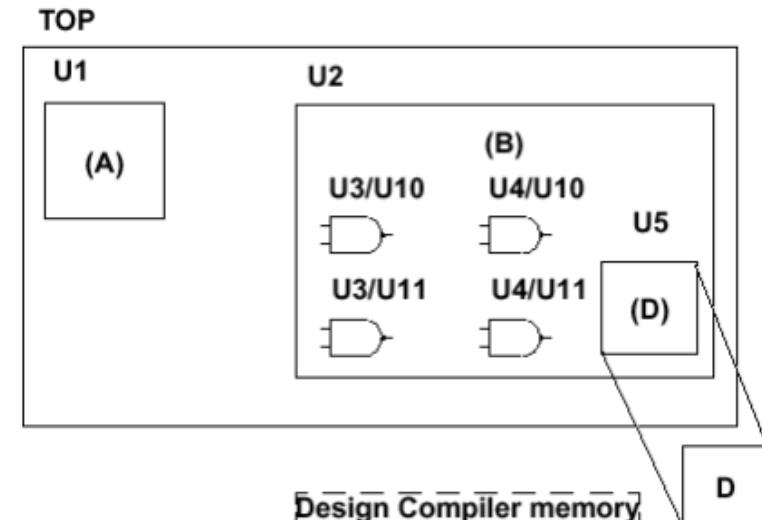

Design Compiler memory



Ungroup Method (cont.)

- ✓ Example: the following command sequence uses the ungroup method to resolve the multiple instances of {add1 add2} except for add3.

```
module ch6_ex(input clk, INF.DESIGN inf);
adder_1b add1(.clk(clk),.rst_n(inf.rst_n),.x1(inf.x1),.x2(inf.x2),.Sum(inf.Sum1));
adder_1b add2(.clk(clk),.rst_n(inf.rst_n),.x1(inf.x1),.x2(inf.x2),.Sum(inf.Sum2));
adder_1b add3(.clk(clk),.rst_n(inf.rst_n),.x1(inf.x1),.x2(inf.x2),.Sum(inf.Sum3));
endmodule :ch6_ex

module adder_1b ( clk, rst_n, x1, x2, Sum );
  output [1:0] Sum;
  input clk, rst_n, x1, x2;
  wire N1, N2;

  DFFTRX1 Sum_reg_1 ( .D(N2), .RN(rst_n), .CK(clk), .Q(Sum[1]) );
  DFFTRX1 Sum_reg_0 ( .D(N1), .RN(rst_n), .CK(clk), .Q(Sum[0]) );
  XOR2X1 U3 ( .A(x2), .B(x1), .Y(N1) );
  AND2X1 U4 ( .A(x1), .B(x2), .Y(N2) );
endmodule

//module adder_1b(
//  // input clk,
//  // input logic rst_n,
//  // input logic x1,
//  // input logic x2,
//  // output logic [1:0] sum
//);
//  //always_ff@(posedge clk)
//begin
//  if(!rst_n)
//    Sum <= 0;
//  else
//    Sum <= x1+x2;
//end
//endmodule :adder_1b
```

script(.tcl)

```
#####
# Optimization
#####
#uniquify
#set dont_touch [add1 add2]
ungroup {add1 add2}
compile
```

```
module ch6_ex ( clk, inf_rst_n, inf_x1, inf_x2, inf_Sum1, inf_Sum2, inf_Sum3 );
  output [1:0] inf_Sum1;
  output [1:0] inf_Sum2;
  output [1:0] inf_Sum3;
  input clk, inf_rst_n, inf_x1, inf_x2;
  wire add2_N1, add2_N2;

  adder_1b add3 ( .clk(clk), .rst_n(inf_rst_n), .x1(inf_x1), .x2(inf_x2),
    .Sum(inf_Sum3) );
  DFFTRX1 add1_Sum_reg_0 ( .D(add2_N1), .RN(inf_rst_n), .CK(clk), .Q(
    inf_Sum1[0] ) );
  DFFTRX1 add1_Sum_reg_1 ( .D(add2_N2), .RN(inf_rst_n), .CK(clk), .Q(
    inf_Sum1[1] ) );
  DFFTRX1 add2_Sum_reg_0 ( .D(add2_N1), .RN(inf_rst_n), .CK(clk), .Q(
    inf_Sum2[0] ) );
  DFFTRX1 add2_Sum_reg_1 ( .D(add2_N2), .RN(inf_rst_n), .CK(clk), .Q(
    inf_Sum2[1] ) );
  XOR2X1 U3 ( .A(inf_x1), .B(inf_x2), .Y(add2_N1) );
  AND2X1 U4 ( .A(inf_x2), .B(inf_x1), .Y(add2_N2) );
endmodule

module adder_1b ( clk, rst_n, x1, x2, Sum );
  output [1:0] Sum;
  input clk, rst_n, x1, x2;
  wire N2, N1;

  DFFTRX1 Sum_reg_1 ( .D(N2), .RN(rst_n), .CK(clk), .Q(Sum[1]) );
  DFFTRX1 Sum_reg_0 ( .D(N1), .RN(rst_n), .CK(clk), .Q(Sum[0]) );
  XOR2X1 U1 ( .A(x2), .B(x1), .Y(N1) );
  AND2X1 U2 ( .A(x1), .B(x2), .Y(N2) );
endmodule
```

RTL(.v)

Netlist(.v)



Compile

✓ Default synthesis algorithm

- `dc_shell> compile`

✓ Advanced synthesis algorithm

- `dc_shell> compile_ultra`


- Automatically ungroups logical hierarchies
- High-performance design
- Maximum performance
- Minimum area
- Data path

✓ More information

- Refer to “Design Compiler Optimization Reference Manual”



Basic Synthesis Flow

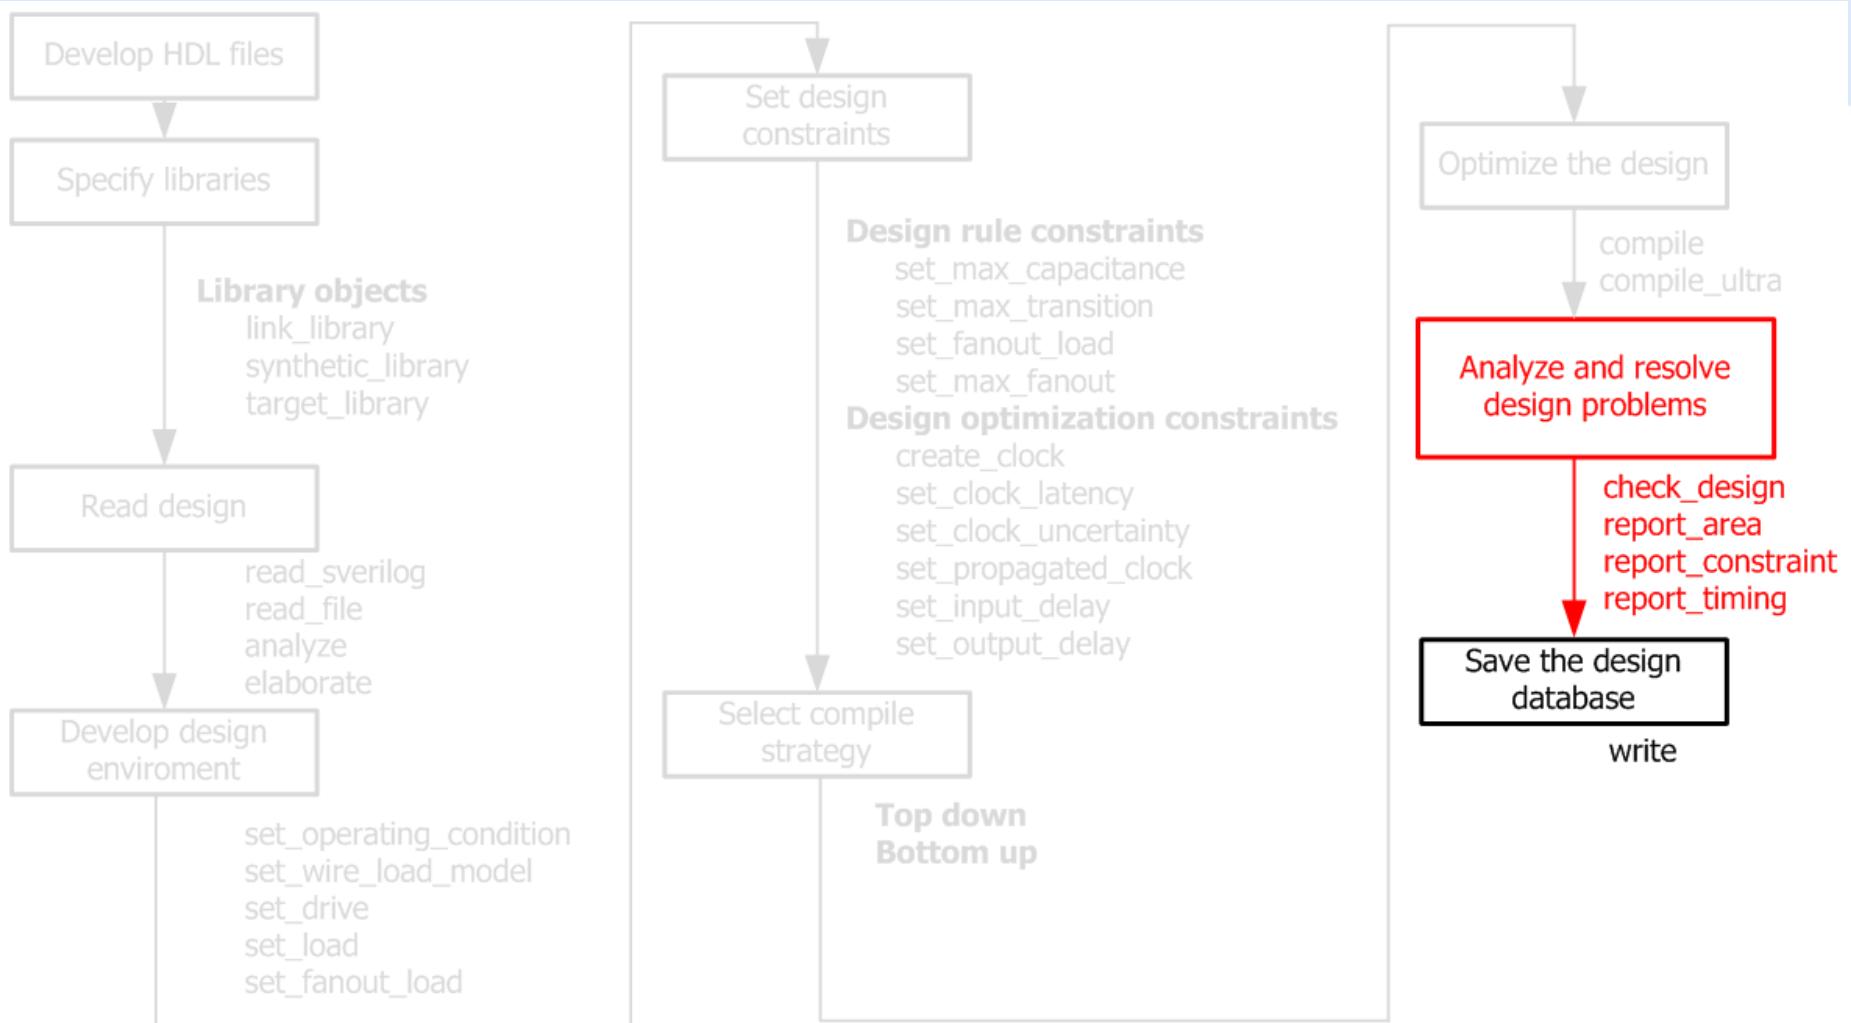

Report Analysis

✓ Constraint report

- Syntax : report_constraint [-all_violators] [-verbose]
 - -all_violators : Displays a summary of all of the optimization and design-rule constraints with violations in the current design.
 - -verbose : Indicates to show more detail about constraint calculations

✓ Area report

- dc_shell-t> report_area

Constraint	Cost
max_transition	0.00 (MET)
max_capacitance	0.00 (MET)
max_delay/setup	0.00 (MET)
critical_range	0.00 (MET)

```
*****
Report : area
Design : DAG
Version: 2003.06
Date  : Sun Oct 10 15:59:26 2004
*****
```

Library(s) Used:

slow (File: /RAID/Manager/lib.18/SynopsysDC/slow.db)

Number of ports: 40
Number of nets: 220
Number of cells: 160
Number of references: 21

Combinational area: 3775.465576
Noncombinational area: 2471.515869
Net Interconnect area: 2.482625

Total cell area: 6246.979492

Total area: 6249.463867



Report Analysis (cont.)

✓ report_timing

```
*****
Report : timing
  -path full
  -delay max
  -max_paths 1
Design : DAG
Version: 2003.06
Date  : Sun Oct 10 16:06:19 2004
*****
```

Operating Conditions: slow Library: slow
Wire Load Model Mode: segmented

Startpoint: COUNT_LOAD_reg[1]
(rising edge-triggered flip-flop clocked by CLK)
Endpoint: ADDR_reg[0]
(rising edge-triggered flip-flop clocked by CLK)

Path Group: CLK

Path Type: max **Maximum delay analysis**

Point	Incr	Path
clock CLK (rise edge)	0.00	0.00
clock network delay (ideal)	0.00	0.00
COUNT_LOAD_reg[1]/CK (DFFX1)	0.00	0.00 r
COUNT_LOAD_reg[1]/QN (DFFX1)	0.56	0.56 r
U134/Y (NAND3X1)	0.23	0.79 f
U160/Y (INVX2)	0.90	1.69 r
U137/Y (MX2X2)	0.52	2.21 f
.....
U226/Y (OR4X4)	0.57	8.24 f
U206/Y (NOR2X4)	0.97	9.21 r
U149/Y (AOI22X1)	0.27	9.49 f
U148/Y (INVX2)	0.16	9.64 r
ADDR_reg[0]/D (EDFFX1)	0.00	9.64 r
data arrival time	9.64	
clock CLK (rise edge)	10.00	10.00
clock network delay (ideal)	0.00	10.00
ADDR_reg[0]/CK (EDFFX1)	0.00	10.00 r
library setup time	-0.29	9.71
data required time	9.71	
data required time	9.71	
data arrival time	-9.64	
slack (MET)	0.07	



Fix Glitch Suppression

✓ When you meet glitch suppression at 03_GATE_SIM

Warning! Glitch suppression

```
Scheduled event for delayed signal of net "dD" at time 148218322 PS was canceled!
  File: /misc/RAID2/COURSE/icsum/icsumta01/umc018/Verilog/umc18_neg.v, line = 10043
  Scope: TESTBED.U_CORE.y_reg1_reg_7_
  Time: 148217861 PS
```

- Always occur in “dD” umc18_neg.v, line = 10043
- Add “-nontcglitch” in 03_GATE ./01_run


✓ To specify cells in the target library to be excluded during optimization

- **dc_shell> set_dont_use [get_lib_cells "slow/JKFF*"]**

```
set_dont_use slow/JKFF*
```



Basic Synthesis Flow

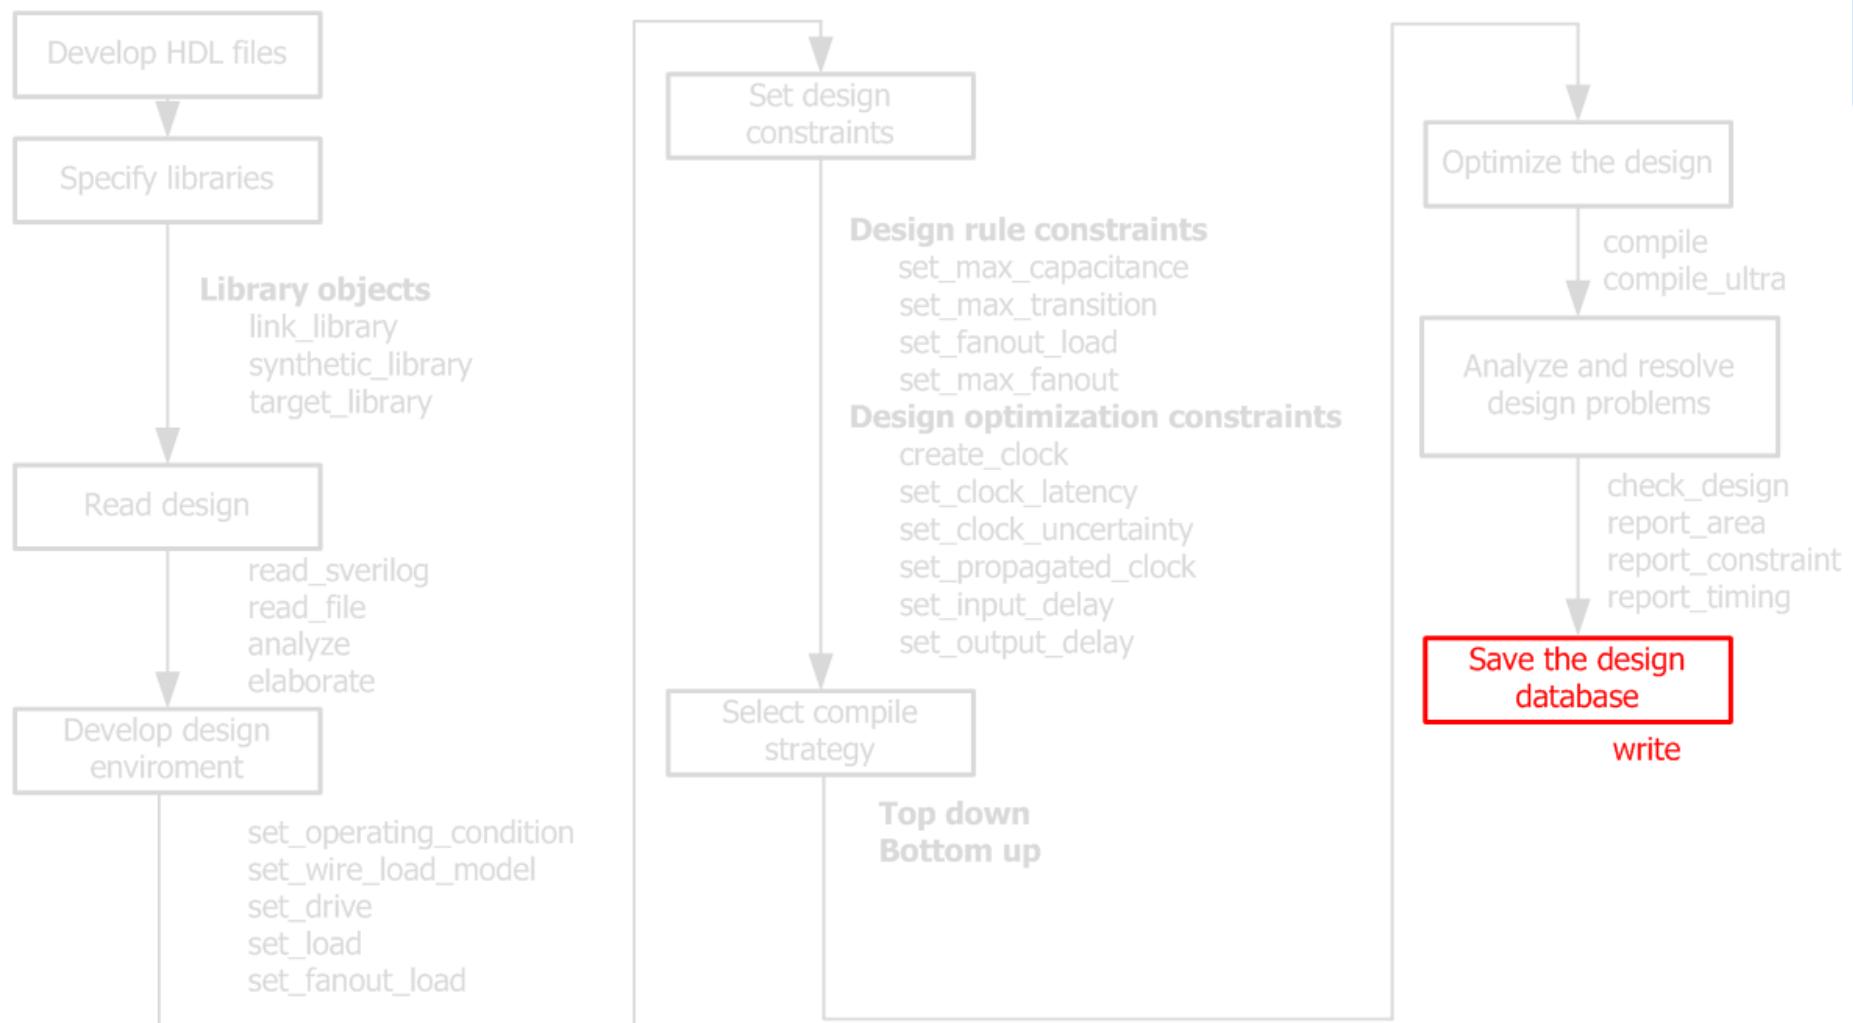

Save Design

✓ Save design

- You use the write command to save the synthesized designs. Remember that Design Compiler does not automatically save designs before exiting.

✓ Save a gate level Verilog file

- Syntax : write -f verilog -o *file_name.v* -hierarchy
 - -f : format
 - -o : output file name
 - -hierarchy : Indicates to write all designs in the hierarchy

```
write -format verilog -output Netlist/$DESIGN\_SYN.v -hierarchy
```



Save Design

✓ Change naming rule script

- Make all net and port names conform to the naming conventions for layout tool
- Execute the script after compile your design

```
set bus_inference_style "%s\[%\d\]"
set bus_naming_style "%s\[%\d\]"
set hdllout_internal_busses true
change_names -hierarchy -rule verilog
define_name_rules name_rule -allowed "a-z A-Z 0-9 _" -max_length 255 -type cell
define_name_rules name_rule -allowed "a-z A-Z 0-9 _[ ]" -max_length 255 -type net
define_name_rules name_rule -map {"\"*cell\"*\" "cell"}
define_name_rules name_rule _case_insensitive # if you want to run spice after APR
change_names -hierarchy -rules name_rule
```



Gate-level Simulation

✓ Post synthesis timing simulation


- The post synthesis design must be simulated with estimated delays from synthesis. A **SDF(standard delay format)** can be generated from design compiler for this purpose. Use the following command to generate the SDF file.
- Syntax : **write_sdf -version sdf_version file_name**
 - -version sdf_version : Selects which SDF version to use. Supported SDF versions are 1.0, 2.1 or 3.0. SDF 2.1 is the default.
 - file_name : Specifies the name of the SDF file to write.
- **dc_shell> write_sdf –version 3.0 CHIP.sdf**

✓ Modify your test file (**TESTBED.v**)

- **\$sdf_annotation("the_SDF_file_name", the_instance_name);**
- ex : **\$sdf_annotation("CHIP.sdf", I_DAG);**



Data Flow in Design Compiler

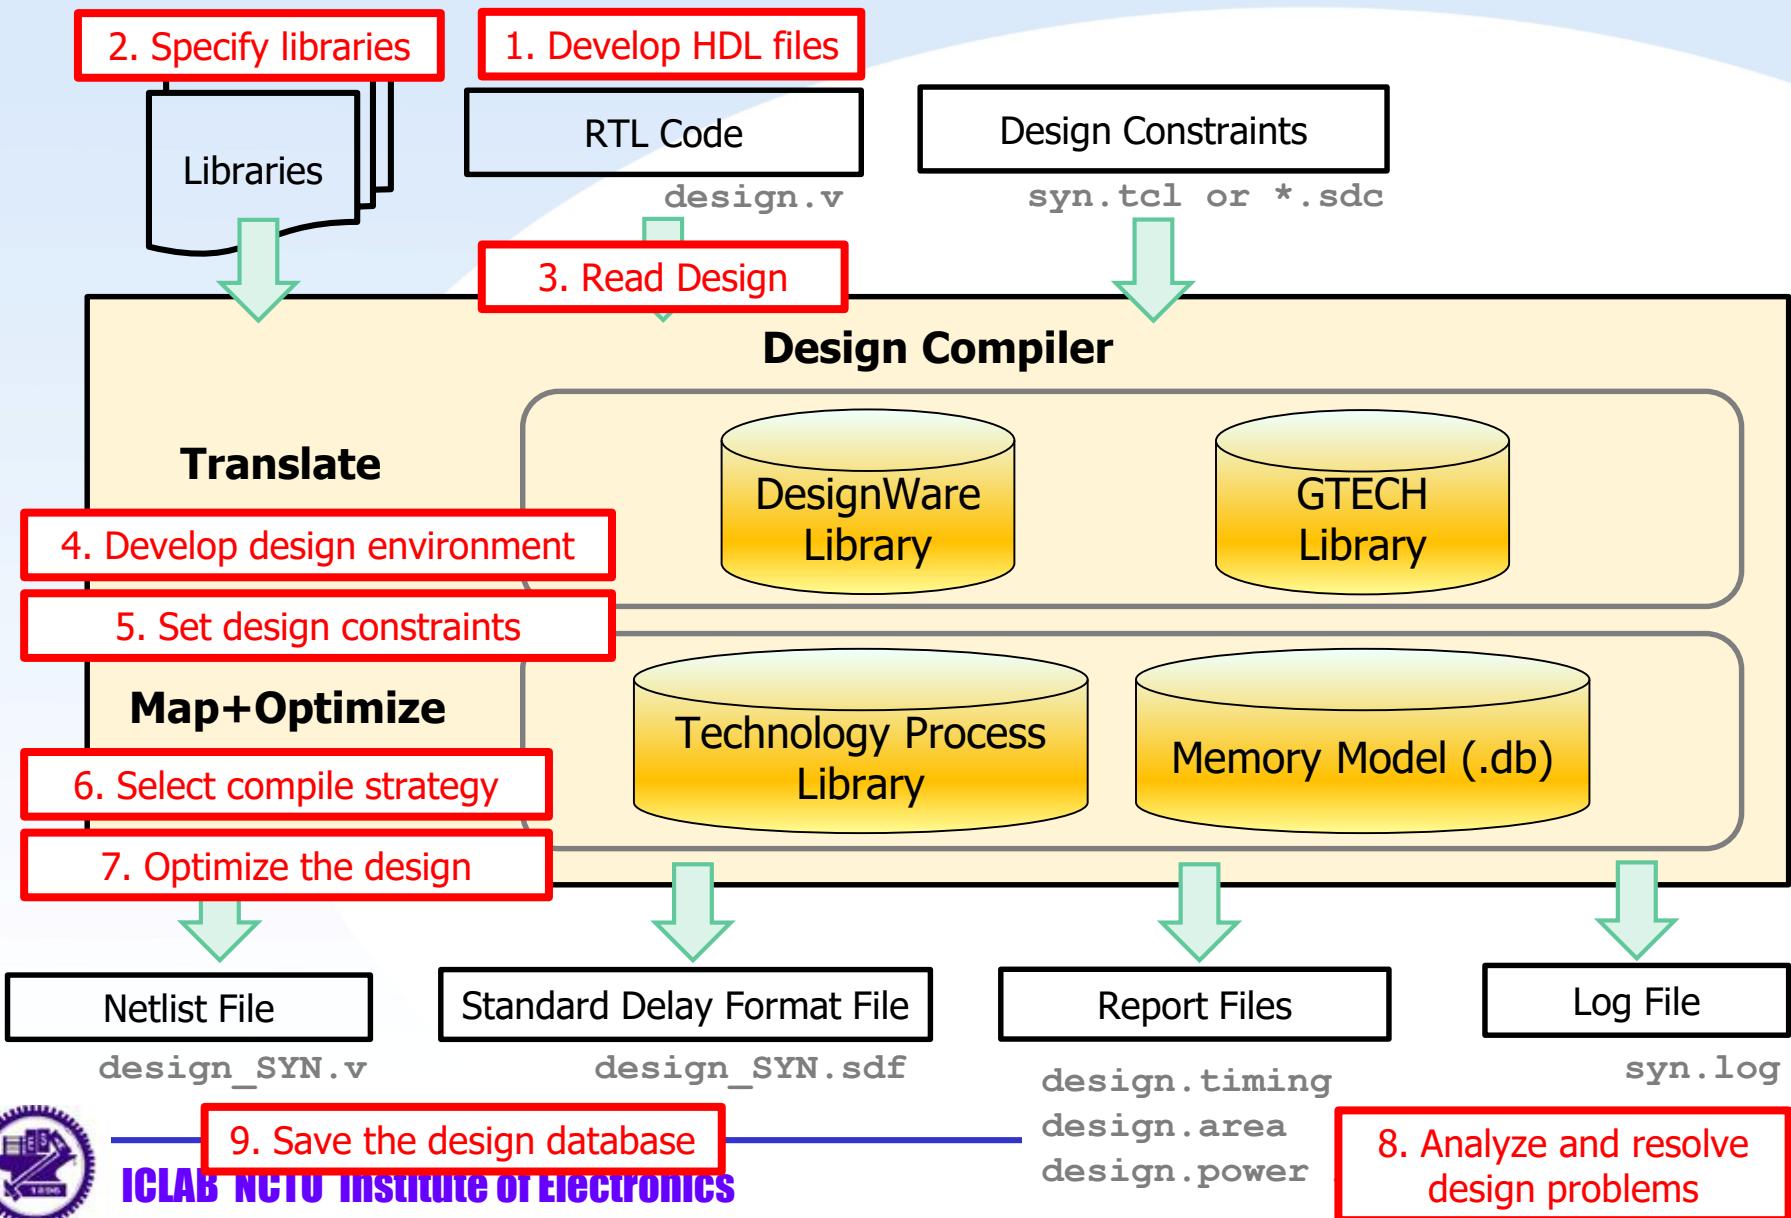

Outline

✓ **Section 1 Design Compiler Introduction**

✓ **Section 2 Basic Synthesis Flow**

- Develop HDL files
- Specify libraries
- Read design
- Develop design environment
- Set design constraints
- Select compile strategy
- Optimize the design
- Analyze and resolve design problems
- Save the design database

✓ **Section 3 Generate & For Loop**



Generate

SystemVerilog

3.1a
assertions
test program blocks
clocking domains
process control

3.0
interfaces
nested hierarchy
unrestricted ports
automatic port connect
enhanced literals
time values and units
specialized procedures

mailboxes
semaphores
constrained random values
direct C function calls

packages
2-state modeling
packed arrays
array assignments
queues
unique/priority case/if
compilation unit space

from C / C++

classes	dynamic arrays
inheritance	associative arrays
strings	references
int	globals
shortint	enum
longint	typedef
byte	structures
shortreal	unions
void	casting
alias	const

break
continue
return
do-while
++ -- += -= *= /=
>>= <<= >>>= <<<=

& |= ^= %=

Verilog-2001

ANSI C style ports
generate
localparam
constant functions

standard file I/O
\$value\$plusargs
'ifndef 'elsif 'line
@*

(* attributes *)
configurations
memory part selects
variable part select

multi dimensional arrays
signed types
automatic
** (power operator)

Verilog-1995

modules
parameters
function/tasks
always @
assign

\$finish \$fopen \$fclose
\$display \$write
\$monitor
'define 'ifdef 'else
'include 'timescale

initial
disable
events
wait # @
fork-join

wire reg
integer real
time
packed arrays
2D memory

begin-end + = * /
while %
for forever >> <<
if-else
repeat

Review : For Loop

✓ For loop in Verilog

- Duplicate same function
- Very useful for doing reset and iterated operation

```
reg [3:0] temp;  
integer i;  
always @(posedge clk) begin  
    for (i = 0; i < 3 ; i = i + 1) begin: for_name  
        temp[i] <= 1'b0;  
    end  
end
```

=

```
always @(posedge clk) begin  
    temp[0] <= 1'b0;  
    temp[1] <= 1'b0;  
    temp[2] <= 1'b0;  
end
```



Generate – generate vs regular for loop

✓ How to use for loop with generate?

- For loop in generate : three always blocks
- Regular for loop : one always block

```
reg [3:0] temp;  
genvar i;  
generate  
for (i = 0; i < 3 ; i = i + 1) begin: for_name  
    always @(posedge clk) begin  
        temp[i] <= 1'b0;  
    end  
end  
endgenerate
```

Generate block


```
reg [3:0] temp;  
integer i;  
always @(posedge clk) begin  
    for (i = 0; i < 3 ; i = i + 1) begin:  
        temp[i] <= 1'b0;  
    end  
end
```

Regular for loop



Generate

```
wire [3:0] o_data;  
  
genvar i;  
generate  
for (i=0 ; i < 4; i = i+1)begin : loop_1  
    wire tmp_result;  
    assign tmp_result = operand1[i] | operand2[i];  
    if(i == 0)begin  
        assign o_data[0] = tmp_result;  
    end  
    else begin  
        assign o_data[i] = tmp_result & loop_1[i-1].tmp_result;  
    end  
end  
endgenerate
```

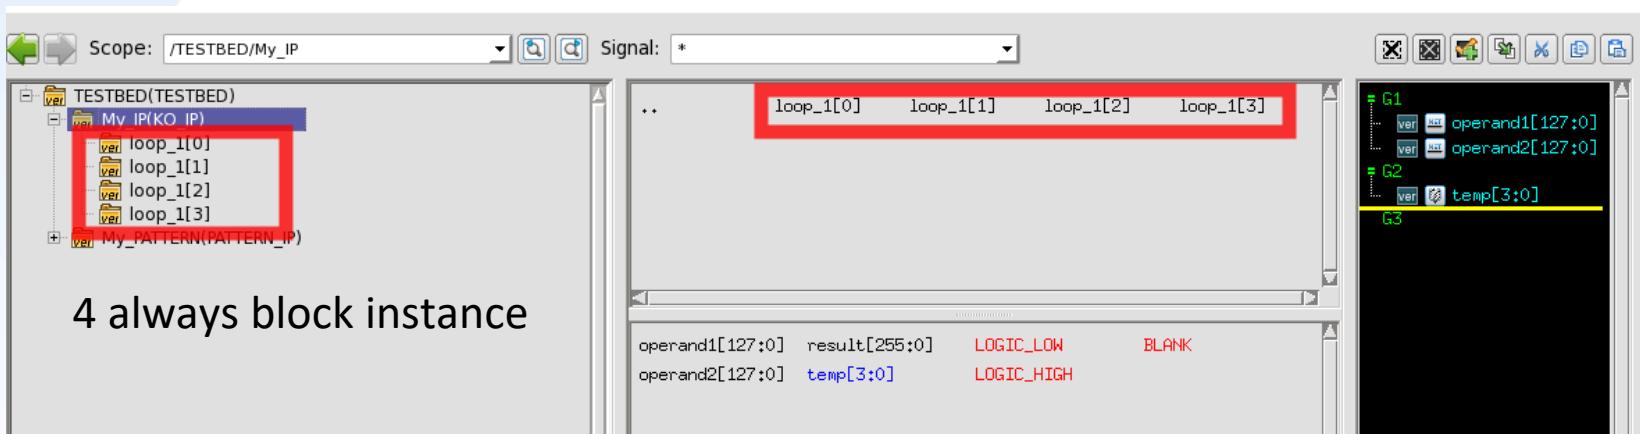

4 always block instance

How to use wire in for loop ?

Ex : loop_1[0].tmp_result

always block in for loop with genvar


If-else in generate for can only use for select circuit but not logic determination

for_name[i].wire_name


Generate

A little complicated but scalable design example

```
wire [3:0] o_data;  
  
genvar i;  
generate  
for (i=0 ; i < 4; i = i+1)begin : loop_1  
    wire tmp_result;  
    assign tmp_result = operand1[i] | operand2[i];  
    if(i == 0)begin  
        assign o_data[0] = tmp_result;  
    end  
    else begin  
        assign o_data[i] = tmp_result & loop_1[i-1].tmp_result;  
    end  
end  
endgenerate
```

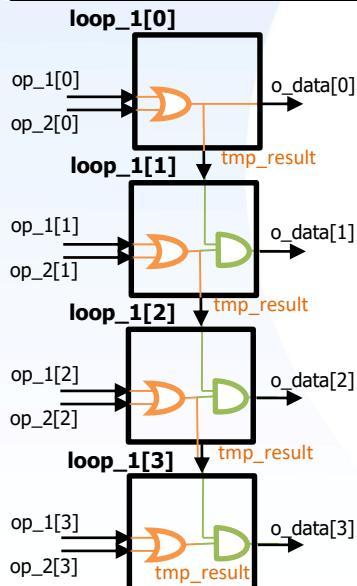

**Generate for can only
use increase idx
but not decrease!!**

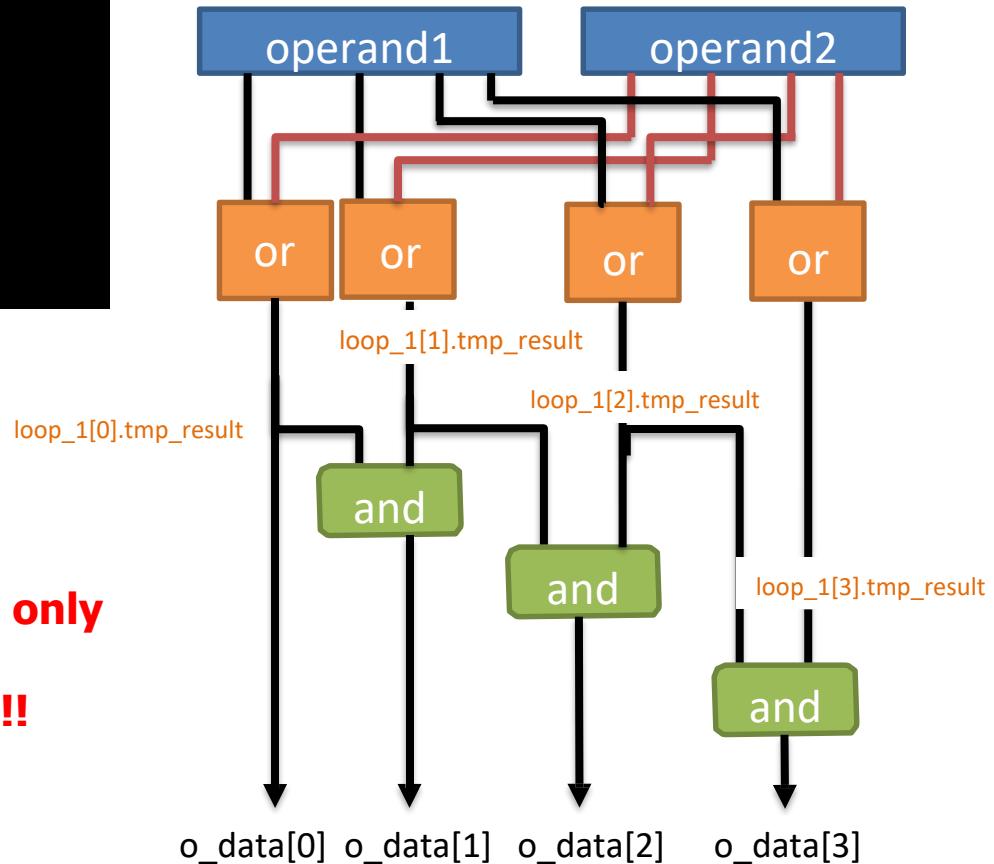

Generate

✓ Generate blocks are useful when change the physical structure of module via parameters.

- We can modify the parameter for different application

```
module top
...
adder add_8bit #(8) (.a(a0), .b(b0),
                     .sum(sum_8bit));
adder add_16bit #(16) (.a(a1), .b(b1),
                     .sum(sum_16bit));
...
endmodule
```

```
module FA
( input      a, b, cin,
  output reg sum, cout );
  always @(*) begin
    {cout, sum} = a + b + cin;
  end
endmodule
```

```
module adder
#(parameter LENGTH = 16)
( input      [LENGTH-1:0]      a,
  input      [LENGTH-1:0]      b,
  output     [LENGTH:0]       sum );
wire [LENGTH-1:0] c ;

genvar i;
generate
  for (i=0; i<LENGTH; i=i+1) begin: loop_fa
    if (i==0)
      FA u0 (.a(a[i]), .b(b[i]), .cin(1'b0), .sum(sum[i]), .cout(c[i]));
    else
      FA u1 (.a(a[i]), .b(b[i]), .cin(c[i-1]), .sum(sum[i]), .cout(c[i]));
  end
endgenerate

assign sum[LENGTH] = c[LENGTH-1];

endmodule
```



Reference

- ✓ STA - Static Timing Analysis
 - ✓ http://www.ee.bgu.ac.il/~digivlsi/slides/STA_9_1.pdf (p62, p63 圖)
- ✓ Static Timing Analysis for Nanometer Designs - A Practical Approach, Bhasker, J./ Chadha, Rakesh
 - ✓ <https://vlsitesting.files.wordpress.com/2017/02/ref-for-unit6.pdf>
- ✓ Design compiler user guide
 - ✓ <http://archive.eclass.uth.gr/eclass/modules/document/file.php/MHX303/Documentation/dcug.pdf>



Revision History

Author : 2004 Wan-Chun Liao (celestas@si21ab.org)
2006 revised Ming-Wei Lai (mwlai@si21ab.org)
2008 revised Chien-Ying Yu (cyyu@si21ab.org)
2008 revised Jia-Lung Lin (jlin@si21ab.org)
2009 revised Yung-Chih Chen (ycchen@oasis.ee.nctu.edu.tw)
2010 revised Jen-Wei Lee (circus@si21ab.org)
2011 revised Chia-Ching Chu (ccchu@oasis.ee.nctu.edu.tw)
2013 revised Rong-Jie Liu (johnny510.ee98@g2.nctu.edu.tw)
2014 revised Ming-Feng Shiu (mango@si21ab.org)
2015 revised De-An Chen (and0350283@gmail.com)
2016 revised Chien-Tung Shih (ct.shihg@gmail.com)、Heng-Wei Hsu (hengwzx@gmail.com)
2016 revised Yun-Sheng Chan (yschan.ee03g@g2.nctu.edu.tw)
2022 revised Heng-Yu, Liu (nine87129.ee10@nycu.edu.tw)
2023 revised Zhi-Ting, Dong (yjdzt918.ee11@nycu.edu.tw)

