Physical computing from Scratch using scratchClient – **Beginners**

Control servos, LEDs and more from Scratch using RPi, Arduino, scratchClient

Hans de Jong & Gerhard Hepp
Workshop for the Pi And More and Maker Faire
conferences

Part 1: Introduction



On-line videos

- For on-line videos, look at Youtube and search for *scratchClient Tutorials*.
 - This presentation has been updated in some details, but you can still use it.
- ScratchClient has two modes of representing the blocks:
 - Workshop mode: use name value pairs
 - Verbose mode: every input or output variable has its own block
- In this workshop we use the workshop mode.
 - See appendix A how to get the other representation, which may be handier in certain cases.



Workshop organisation

- Welcome and introduction presentation (5 min).
- After that everyone will work at his or her own pace.
- Choose with your "workplace partner" which topics you want to do.
 - There is more material than what can be covered in 110 minutes.
- Language: English, German and Dutch
- At the end copy the material you created to your USB stick (if you want)
- Break down & clean up (5 min)

- The major steps:
 - 1. Get a working hardware and scratchClient config using a scratchClient config tool.
 - 2. Put components on the board and test out your setup.
 - 3. Write some code in Scratch
 - 4. Add more hardware and update the config file.
 - 5. And repeat this.





- At the end the workshop you should be able to do a few of these items:
 - Reproduce the setup at home (provided you have the hardware ©)
 - You can get all files via https://github.com/hansdejongehv/scratchClient-Tutorials
 - Or go to www.github.com and search for scratchClient
 - Understand (depending on how far you get and how deep you dive in)
 - Digital output (e.g. lighting a LED)
 - Digital input (e.g. sensing a button)
 - Analog input (e.g. from a potentiometer)
 - Pulse Width Modulation (PWM)
 - For dimming LEDs
 - For controlling servos
 - For sounding a buzzer
 - Understand what all the resistors are for
 - Be able to configure and run scratchClient
 - Program Scratch to control the physical input and output
 - Monitoring the inputs and outputs
- Have fun!



Non-objective

- It is **not** an objective to create a complete useful game or other program.
 - You can do that with your own creativity at home now that you know how to control several pieces of hardware from Scratch using scratchClient.



Example of what can be created with Scratch and scratchClient

https://www.youtube.com/watch?v=Qo1gnXNzhqE





- scratchClient can work with
 - Scratch 1.4
 - The (for Raspberry Pi) new Scratch 2
- This workshop is written for Scratch 2
 - Scratch 2 on Raspberry Pi has some bugs, but we will work around it.
 - If you want to see how to do it for Scratch 1.4, see the end of the presentation in Appendix B.



Only a few rules today

- Always put a resistor in series with the components when indicated.
 - If you think there is no need then please tell us and we will explain what the reason is.



- When changing the wiring
 - 1. Detach the USB cable from the Arduino Nano



- 2. Detach the 9 volt connector
- 3. Check, double check and check again whether the wiring is correct. You may blow up components when wiring wrongly!
- Make sure that you both (4 eyes principle) are convinced the wiring is OK before reconnecting and turning on power again.
- 5. After changing a config file: restart scratchClient
- If something breaks down or gets damaged: we have some spare material
 - Do **not** put anything that is broken back into the box please.




The setup







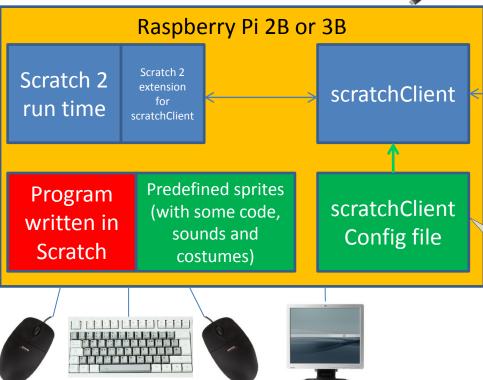

USB

scratchClient Sketch

Arduino Nano

Defines function of the GPIO pins on the Arduino (and RPi) and gives them logical names.

Standard setup

Programmed by the students (today: you)

Prepared by the teacher or expert (today: you)



Often asked: why using an Arduino?

- Question: why not just the GPIO pins of the Raspberry Pi?
- Answer:
 - Arduino has analog in and has a hardware pulsewidth modulation (PWM) for more stable servo control.
 - Arduino uses 5 volt. Raspberry Pi GPIO pins are not 5 volt tolerant.
 - If children mess up with electronics, they potentially blow up an Arduino clone of 2 euro rather than a Raspberry Pi of 35 euro.
 - Keeping the setup transportable, now only one USB plug has to be connected, rather than otherwise a large pin header.



Choose what you want to do


- Workshop is for everyone, from beginners to experts.
- Not enough time to do all, so choose what you want to do.
- Yellow slides have background information and you can skip them if you want or look at it later.
- Recommended
 - All: learn to configure scratchClient by doing LEDs (digital out) and Button (digital in)
 - All: try it out in Scratch
 - After that: select further topics from separate files
 - Intermediate level
 - Advanced level
 - Expert level


Part 2: Getting to know the components





- Used to quickly build electronic circuits
- Note the 2 rails for + (VCC) and –
 (GND)
- Note on every column (vertical) the
 2 bars with 5 interconnected holes
 each

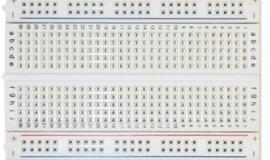

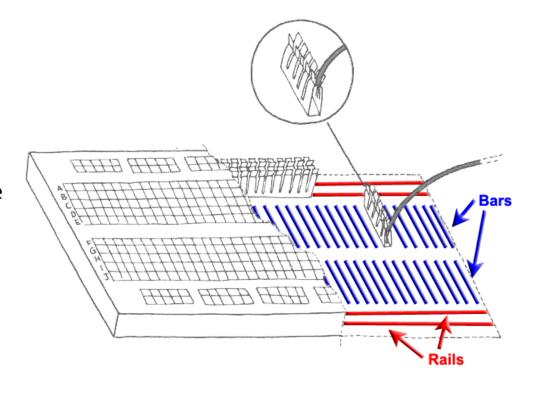


Looking at the Arduino Nano extension

board

Analog ports (most can be used as digital ports as well)

Per GPIO signal 3 headers:


S (blue = signal)
V (red = VCC = +)
G (black = GND = -)
(very handy to e.g.
connect servos)

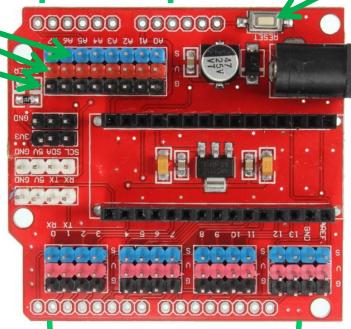

Reset button

9V power socket

Arduino Nano with 328P processor

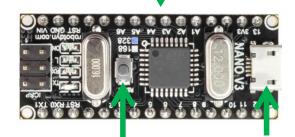


Micro USB port

Reset button




What the final board looks like ...

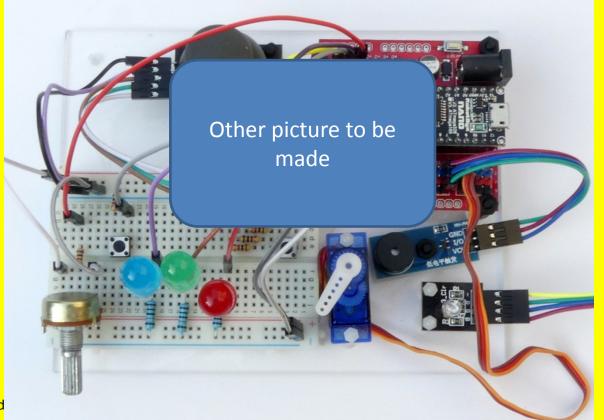

... at the end of the beginners workshop




... at the end of the intermediate level

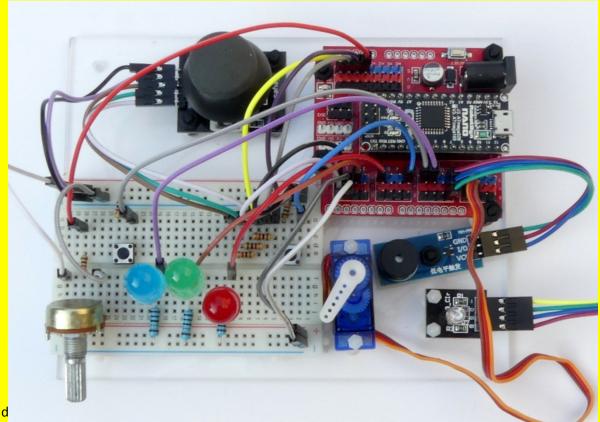

Hans d

... and at the end of the advanced level cratchelient



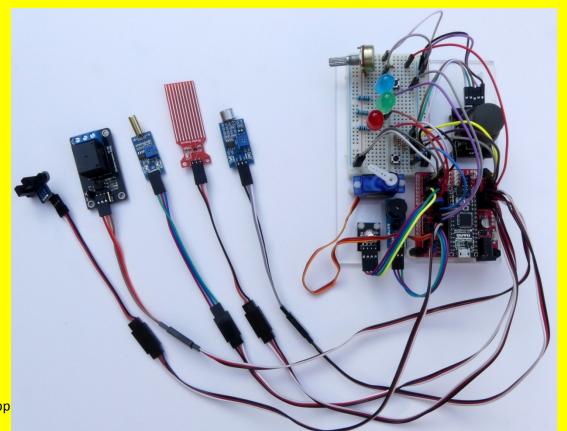

Part 3: Loading the sketch in the Arduino
(in the workshop: optional, at home: mandatory)

Preparing for programming the Arduino Nano




- The Arduino needs to run a program (in Arduino terms: sketch) so that it can communicate with the Raspberry Pi and understand the messages from scratchClient.
- We need to start putting that in.
 - However in the workshop that has already been done, so you can skip the next slide, unless you want to try for yourself.
 - If you are doing this at home, then you will need to do it however.

Uploading scratchClient to the Arduino

 Navigate to the scratchClient sketch for Arduino Uno in /home/pi/scratchClient/arduino/arduinoUno



- Double click to open the Arduino IDE
- Click Tools and make sure that these are set:
 - Board: Arduino Nano
 - Processor Atmega328
 - Port: the port where the Arduino Nano is connected (normally /dev/ttyUSB0)
- Click on the Upload button.
- Wait till the completion of the Upload is reported (without errors).

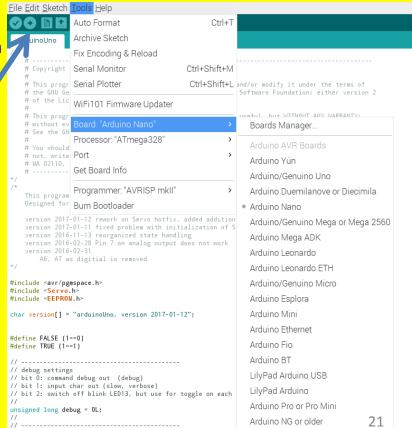


Part 4: Defining the configuration

Give names to pins and define the purpose of the pin




Starting the config tool

- We have put an empty config file on the desktop:
 - scratchClient-Tutorial.scl
- Right click the file and choose scratchClient Edit

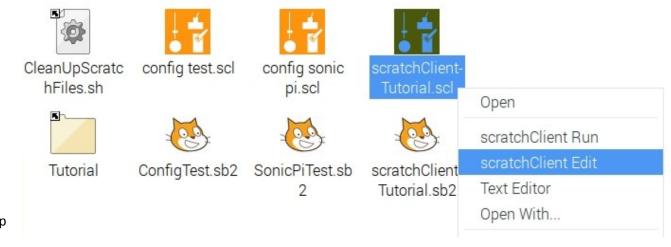





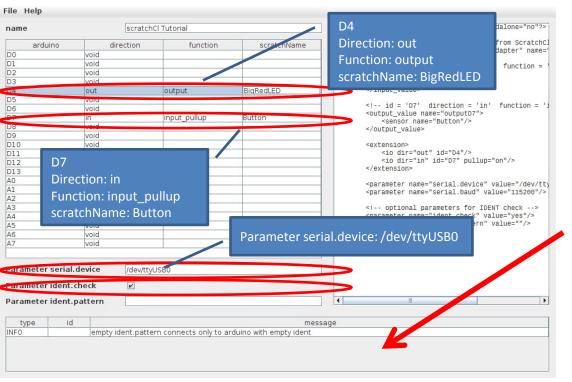

- Double click a cell to get a drop down menu
 - First for direction then for function.
- Make sure to give all pins a name if you choose something else than void in direction.
 - So make sure not to save if you still have red borders around cells. scratchClient will fail to start with such a config file.
- The tool checks wrong configurations. Examples:
 - Pins 0, 1 and 13 cannot be used at all
 - Analog In only available on A0 to A7
 - Pins A6 and A7 can only be used for Analog In
 - Pins 9 and 10 cannot be used for PWM if any pin is configured for servo (see later)



Save the config file


- Save the file (ctrl-S or File → Save).
- Warning: closing the file without saving will loose all changes.
- Leave the tool open for the next exercises.

Part 5: Wiring the board and run the first setup

Put the board in front of you in this



way

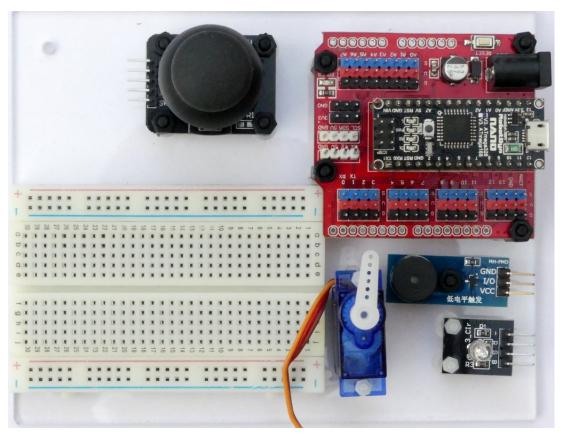


Use *short* wires and use the indicated holes



- There are some short wires (10 cm) and some longer (15 cm)
- Use the shortest that you can
 - Get a less messy setup
 - You may otherwise run out of long wires later
- Ignore wire colors.
- You can in principle build up at different places on the breadboard, however ...
 - ... please use the indicated columns to avoid running out of space on the breadboard in the later part of the workshop.




Connect the power wires

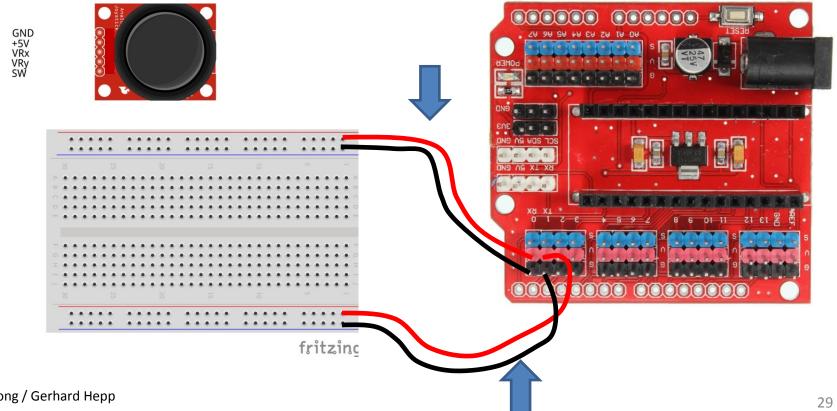




Insert the red LED and button

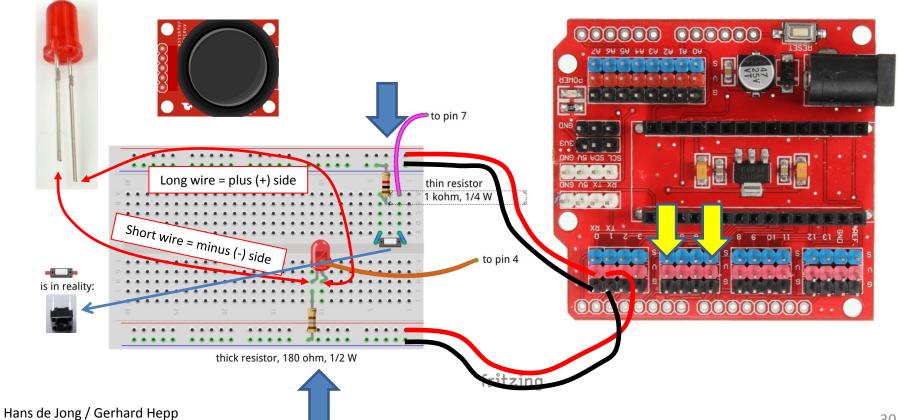


30

Why putting a resistor in series with the LED?



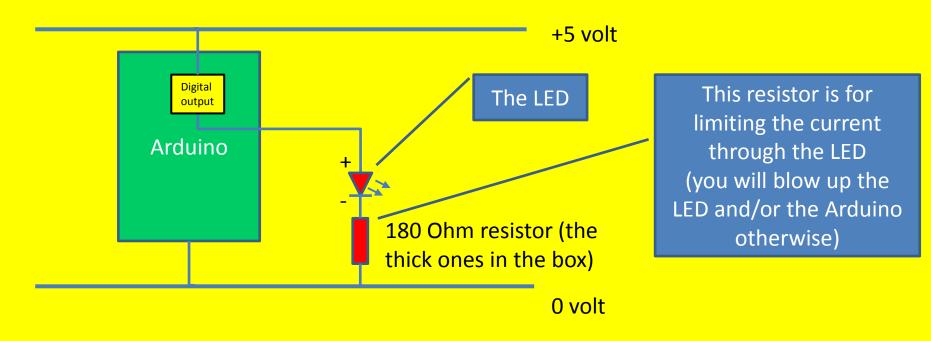

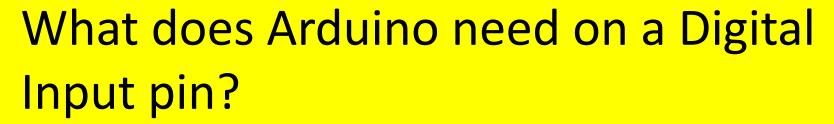




- A digital input pin of Arduino needs to get either
 - 0 volt input (actually, 0 to 1.5 volt is considered a LOW input signal)
 - 5 volt input (actually, 2.5 volt to 5 volt is considered a HIGH input signal)
- If it gets something between 1.5 volt and 2.5 volt, the interpretation will not be stable (could be LOW or HIGH).
- If it does not get any signal in, then the interpretation of the signal is not stable (could be LOW or HIGH).




Producing a LOW value

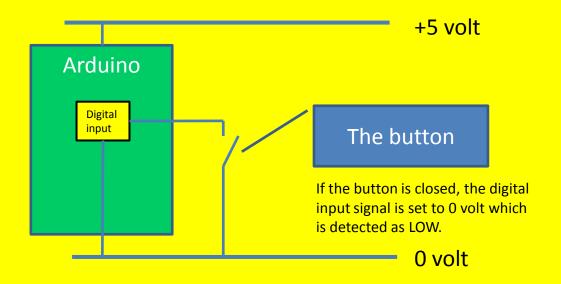

But what will the Arduino detect if the button is **open**?



Producing a HIGH value

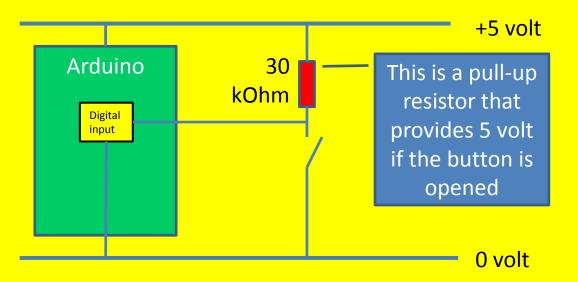


If the button is pressed, then it connects the input of the Arduino to 0 volt. There will run a small current through the resistor, but the input will be 0 volt.

If the button is open, the resistor will pull up the input to 5 volt. A very small current will flow through the resistor and through the Digital In unit in the chip, but is small enough that the voltage on the digital input will be very close to 5 volt = HIGH.


Producing a HIGH value without external resistor



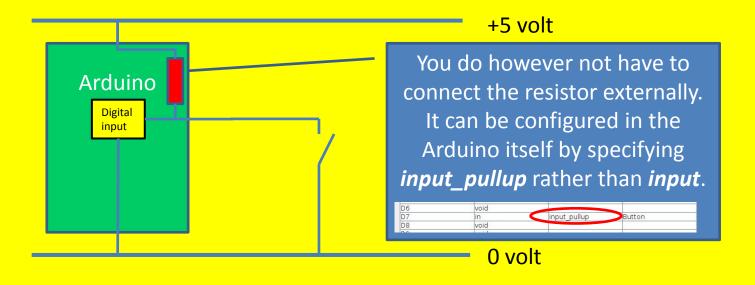



Danger when misconfiguring

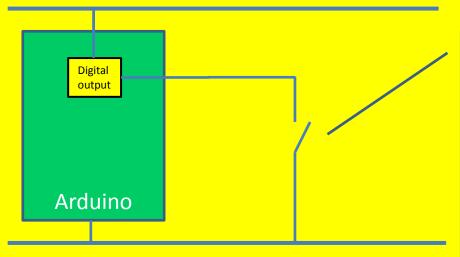


+5 volt

This works fine for input, but what happens if you misconfigure the pin to be Digital Output, set the value to HIGH and press the button?

If the Arduino makes the pin HIGH (5 volt) and the button connects to LOW (0 volt) → short circuit and the Arduino will be blown up.

Resistor in series with the switch would prevent damage




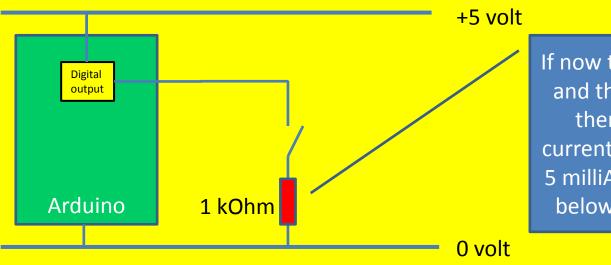

If now the pin is made HIGH and the button is pressed there will run a small current of 5 volt / 1 kOhm = 5 milliAmpere which is well below the max of 20 mA.

When port is correctly configured as Digital In, the resistor in series is OK



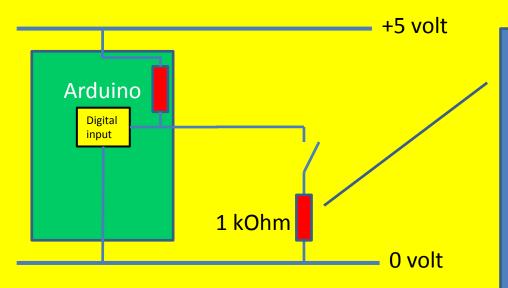

Therefore always include a 1 kOhm resistor in series with the switch.

When the switched is closed there will run a small current through the resistors.

Therefore, the input will be 1 kOhm / (30 kOhm + 1 kOhm) * 5 volt = 0,15 volt.



Check / double check

• Please now check **both of you** that the wiring is correct.



Bringing things together

- Connect the 9 volt connector to the board and switch power on
 - Although as long as you are only having a LED that is used, the power supplied via USB is sufficient
- Connect the USB connector to the Arduino
- Doubleclick *scratchClient Tutorial.scl* on the desktop to start scratchClient with the config file you have just updated



- It will also open a browser window where you can see variables
 - Explained later in the presentation
- In the terminal window you will see complaints that scratchClient has no connection to Scratch
 - Which is logical because Scratch was not started yet.






- Simplest is to start the file on the desktop
- Doubleclick the icon



- See the appendix how make such a file yourself
 - There are some anomalies to deal with in the current release of Scratch 2

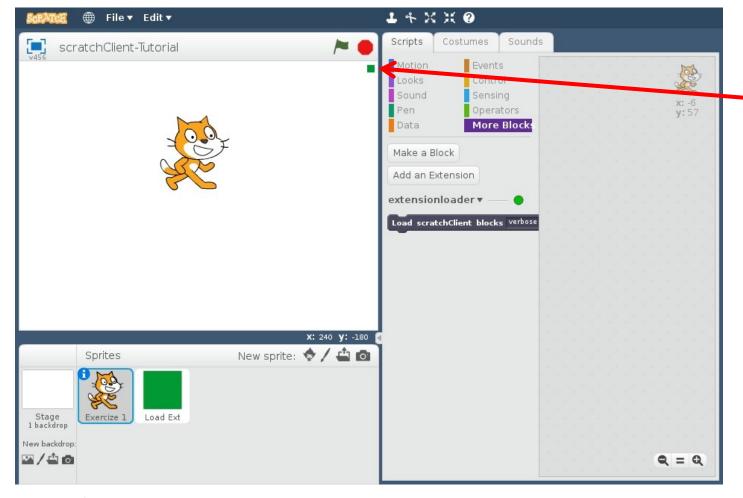




Click on this sprite to make the extension blocks visible.

You need to do this every time that you open the Scratch project.

42

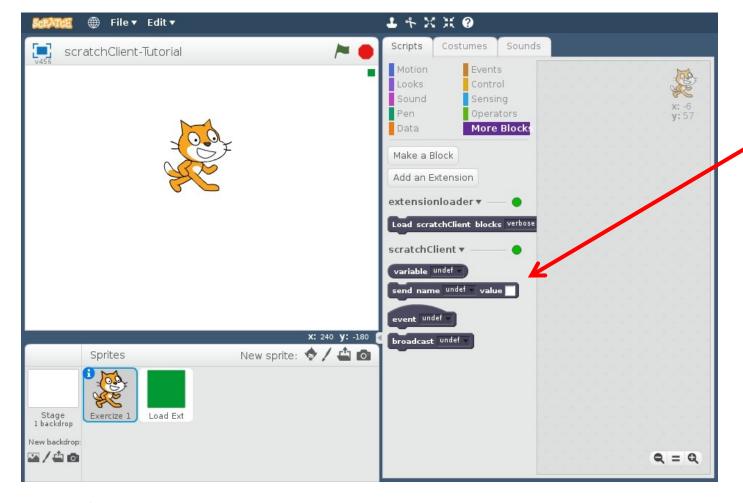




Clicking on the green sprite caused the extra blocks to appear



Create the Scratch program

- Create this program in Scratch (put it in the screen or the Cat sprite)
- Try it out (click the set of blocks or click the green flag above the animation window).
- Digital in (Button):
 - -0 = pressed
 - -1 = not pressed
- Digital out (LED)
 - -0 = off
 - -1 = on
- Analyse how the program works.

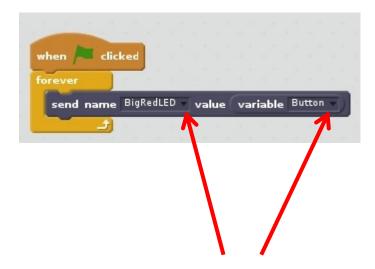

Use these arrows to select the correct value (the black on grey background is not so easily visible)




Does it work? (see next slide for help)

- If the LED on the Arduino is blinking slowly only then the config is downloaded and only then scratchClient works.
 - It may take 10 seconds after both scratchClient and the scratchClient extensions in Scratch 2 are loaded before this happens.
 - So 10 seconds after you clicked on the green sprite.

You can monitor the values that are exchanged



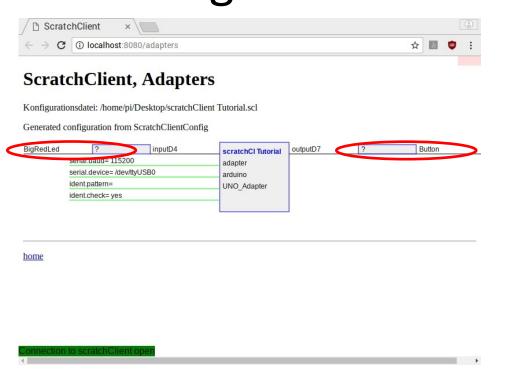

- Together with scratchClient, the browser is opened with URL localhost:8080/adapters
- Note the input & output directions:
 - Output of an adapter is an input for Scratch.
 - Output of Scratch is an input for the adapters.
 - Hence the names input and output look to be reversed from what is in the config file.
 - Therefore best refer to the variable names.
- You will see that values are only displayed after they have changed (otherwise a question mark (?) is displayed).
- Not for now, but you can click the field and type a value which then will be sent in the appropriate direction.

Change the program

- Make a change in the program so that the LED goes on when the button is pressed.
- There are (at least) two ways
- You need the blocks depicted here



```
if then send name BigRedLED value 0

else = 1 variable Button value forever
```

Blocks for method 1



Blocks for method 2



What if it does not work?

- Check whether you have multiple Scratch instances open
 - scratchClient can only work with one Scratch instance at a time (regardless of being Scratch 1.4 or Scratch 2).
- Check if the blue LED on the Arduino Nano is blinking slowly.
- Sometimes, especially after reboot, if everything seems fine, disconnecting and reconnecting the Arduino Nano may help.
- Try monitoring the variables, see before.



One reminder ...


- Save your Scratch program regularly. Otherwise it will be lost on power out.
 - Power out can easily happen since you are pulling cables and this may impact the power connector in the Raspberry Pi.
- Here come some current Scratch 2 anomalies on Raspberry Pi
 - You should **not** use spaces in filenames (if you do, Scratch 2 cannot find the file when double clicked)
 - Scratch 2 forgets the folder where the file was opened from (Desktop). Just save it in /home/pi as Scratch proposes
 - Scratch 2 will save it with a .sbx extension regardless what you specify.
- Hence once after power up
 - On the desktop, doubleclick CleanUpScratchFiles.sh
 - You can minimize the window, but let it run forever
 - This will permanently monitor the folder /home/pi, and
 - Move all files with .sbx and .sb2 to the desktop as .sb2 files
 - Any spaces in filenames are removed
 - If there is already such a file on the desktop, it will be moved to the folder *ScratchProgramsBackup* on the desktop
- If you reopen a saved file, click the green sprite once again to load the extension blocks



Part 6: Adding the Big Green LED



Adding the green LED

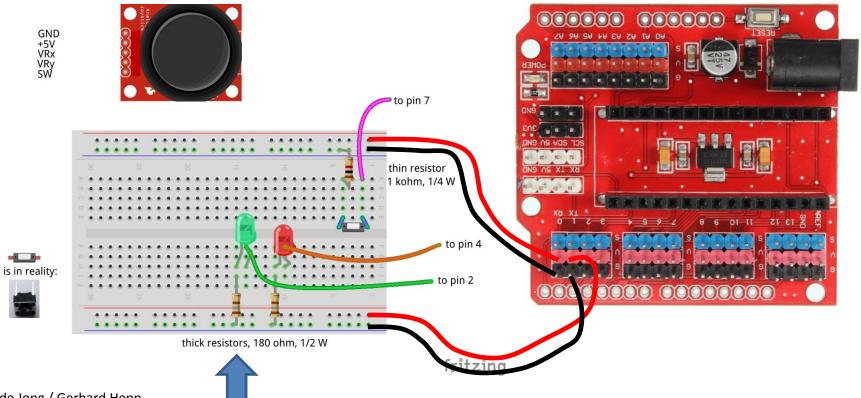



Check and reconnect

- Check the correct wiring
- Switch on the 9V power
- Connect the USB cable again

Update the config file and restart scratchClient



- Use the config tool (which should still be open)
- Define an output (direction: out, function: output) on pin 2 and call it BigGreenLED
- Save the config file (and leave the tool still open)
- Doubleclick scratchClient Tutorial.scl on the desktop again
- This will stop the previous instance of scratchClient and restart with the updated configuration.



- Remove the extension block.
 - Right click here
 - Choose Remove extension blocks
- Add the extension block again by clicking the green sprite.
 - You will see in the More Blocks section that you can also now choose to send values to BigGreenLED





Update Scratch

- Add code that does this:
 - Press button: LED goes on
 - Press once more: LED goes off
- You need these program elements.

```
when clicked wait until variable Button = 1

send name BigGreenLED value 0 wait until variable Button = 0

forever wait until variable Button = 1

send name BigGreenLED value 1 wait until variable Button = 0
```

This is the end of the beginners tutorial



- You got digital out (LED) and digital in (a button) working
- You know how to work with scratchClient and Scratch 2
- You know how to configure scratchClient
- If you want and have time you can
 - Look at some of the yellow slides if you skipped them earlier
 - Continue with one of the next levels
 - These are in different files.
- Otherwise,
 - Copy the material to a USB stick if you want to save it (see below how).
 - Pull all components from the breadboard and put them in the box.



Overview of next levels

- Intermediate level
 - Analog In: Potentiometer
 - Pulse Width Modulation (in the absence of analog out)
 - Dimming a LED
 - Controlling a servo
 - Controlling a buzzer
- Advanced level
- Expert level

Part 10: Take your work home



Do you want to take your work home?

- If you brought your own USB stick, then connect it and copy the scratchClient -Tutorial.scl file on the desktop, plus all .sb2 files that you created on the desktop
- The rest of the material you can download from <u>www.github.com</u>, search for *scratchClient-Tutorial*
- Take the flyer or business card with you to remember where to find the material on github.

Part 11: Summary & take aways



Takeaways of the beginners workshop

- With scratchClient you define:
 - Function of each pin
 - Symbolic name for each configured pin
- scratchClient config is the tool to setup the configuration
- Restart scratchClient after you changed the configuration
- Put a resistor in series with LEDs
- Put a resistor in series with switches
- Configure a pull up resistor if the input signal goes between 0 volt and being open rather than between 0 volt and 3 to 5 volt.
- In Scratch 2, you use the extension block for scratchClient to get blocks that you can use to interact with scratchClient
- You can monitor the value of all pins from the browser
- scratchClient can do much more...
- There are some anomalies, therefore
 - Save the Scratch 2 files in the home folder (as Scratch 2 proposes)
 - Run CleanUpScratchFiles.sh on the desktop (once after start up of the RPi)
 - Use the files on the desktop

- Functions that a pin on Arduino can have:
 - Digital In
 - Digital Out
 - Analog In *
 - No Analog Out
 - Pulse Width Modulation as alternative *
 - For modulating the brightness of a LFD
 - For controlling a servo
 - For controlling a buzzer
 - There a few more, see the advanced level tutorial
 - You can configure pull up resistors on Digital In

^{*} See the intermediate level tutorial

Part 12: Clean up / teardown



If your scratchClient day ends here ...

- Unplug the board from USB and power it off
- Please remove all components and wires from the breadboard
- Remove all wires from the Arduino board.
- Leave the wires on the 3 color LED (you did not use that)
- Leave the wires on the buzzer
- If something is broken, please
 - Throw it away or hand it in (if it is unclear)
 - Put a note in the box that it is missing
 - Do not put anything that is broken back in the box
- Shutdown the Raspberry Pi
- Let us know what you thought about this workshop, now orally or later by email
 - hans.piam@hanselma.nl
 - heppg@web.de


Appendix A Extension blocks in Scratch 2

How to add extension blocks in an empty Scratch file



- Because of some anomalies, the loading of extension blocks is somewhat tricky.
- You can use the way explained earlier.
- This appendix explains how to create this from scratch.
- Step 1: Make sure that scratchClient is running.


Step 2: Start Scratch 2

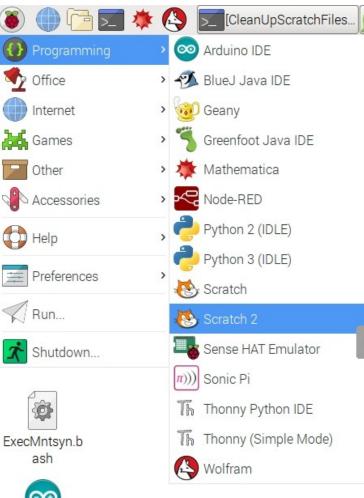



Step 3: Get scratchClient blocks (1 of 2)

- Click on *More Blocks*
- Click on Add an Extension
- Choose scratchClient
- Now a loader for the extra blocks of scratchClient get included.
- However we now need to load the real blocks ...

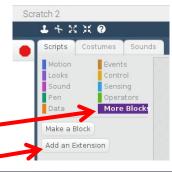






Step 4-7: Get scratchClient blocks



(2 of 2)

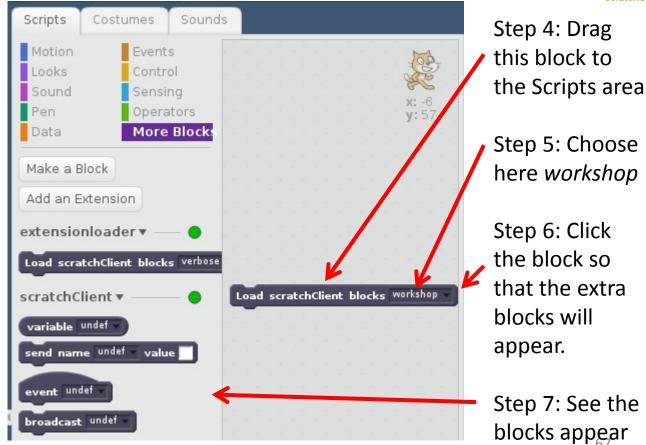



Saving will loose the blocks

- If you reopen the file after it was saved,
 - The scratchClient extension loader will have been preserved
 - The real blocks have disappared
 - And you will see many blocks like this



- Hence after opening you need to do steps 4 7 again.
- Alternatively, see next slide.



Alternative for steps 4 – 7

- Instead of doing steps 4 7 manually every time the file is loaded you can:
- Include a sprite called Load Name-Value Extension Blocks.sprite2 from the folder ~/scratchClient-Tutorials/scratchClientExtension/Sprites
- Note that when you try to load a sprite, the mouse buttons becomes unresponsive.
 - Use the keyboard instead to navigate
 - Left arrow, right arrow to move between columns
 - Up arrow, down arrow to move through the items in the column
 - Return/enter to select
 - Esc key will get you out of this mode
- That sprite has a small green square that you can click to get the extra blocks loaded every time that you reopen a file



Another representation of blocks

scratchClient blocks can also be represented with one block per

input or output value


You would then get e.g.

A separate block for BigRedLED

A separate block for BigGreenLED

A separate block for each input variable (here only *Button*)

 You can get this representation by selecting *verbose* on the — loader block

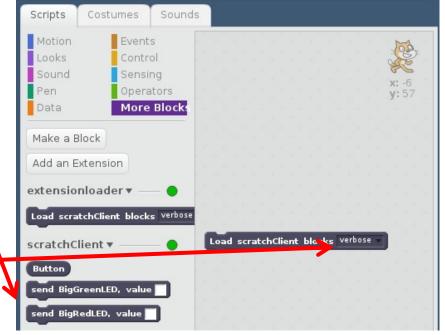

Hans de Jong / Gerhard Hepp

70

Easily get the verbose version of the blocks



- Include a sprite called
 Load Verbose Extension Blocks.sprite2 from the folder
 ~/scratchClient-Tutorials/scratchClientExtension/Sprites
- That sprite has a small green circle that you can click to get the extra blocks loaded every time that you reopen a file.
 - Contrast that with the loading of name value pairs for which you use the other sprite that has a small green rectangle.

Appendix B When using Scratch 1.4





Scratch 1.4 run time

Raspberry Pi 2B or 3B

Remote Sensor Protocol Over socket 42001 Global variables Broadcasts

Program in Scratch

Predefined sprites (with some code, sounds and costumes)

scratchClient Config file



scratchClient

Defines function of the GPIO pins on the Arduino (and RPi) and gives them logical names.

scratchClient Sketch

Arduino Nano



Standard setup
Programmed by
the students

Prepared by the teacher or expert



Defining the config file

Nothing new, you can use the exact same config file for Scratch
1.4 as for Scratch 2.



Create the Scratch program

- Start Scratch
 Programming → Scratch
- Enable remote connections (right click on *sensor value*)
- Create the variable BigRedLED, available to all sprites
- Make the variable visible (tick the box in front)
- Make the Button sensor visible
- Save the file on the desktop.







Program in Scratch 1.4

- Make this program in scratch which will let the Red LED lite up when the button is released.
- Test whether it works.

```
when clicked

forever

set BigRedLED to Button sensor value
```



Further ...

- You can now look at the Scratch 2 material earlier in the presentation.
- Try out adding the BigGreenLED and the same blocks to process it.

Appendix C Basic Electronics

To be added



Appendix D More Information



More information

- All workshop material
 - www.github.com and search for scratchClient Tutorials
- scratchClient
 - http://heppg.de/ikg/wordpress/?page_id=6
- Scratch
 - <u>https://scratch.mit.edu/</u>
- Scratch on Raspberry Pi
 - https://www.raspberrypi.org/forums/viewforum.php?f=77
- Raspberry Pi
 - https://www.raspberrypi.org/
- Arduino
 - https://www.arduino.cc/

End of the beginners workshop