




Mechatronic Modeling and Design with Applications in Robotics


Analytical Modeling (Part 1)

Representation of the input-output relationship of a physical system.

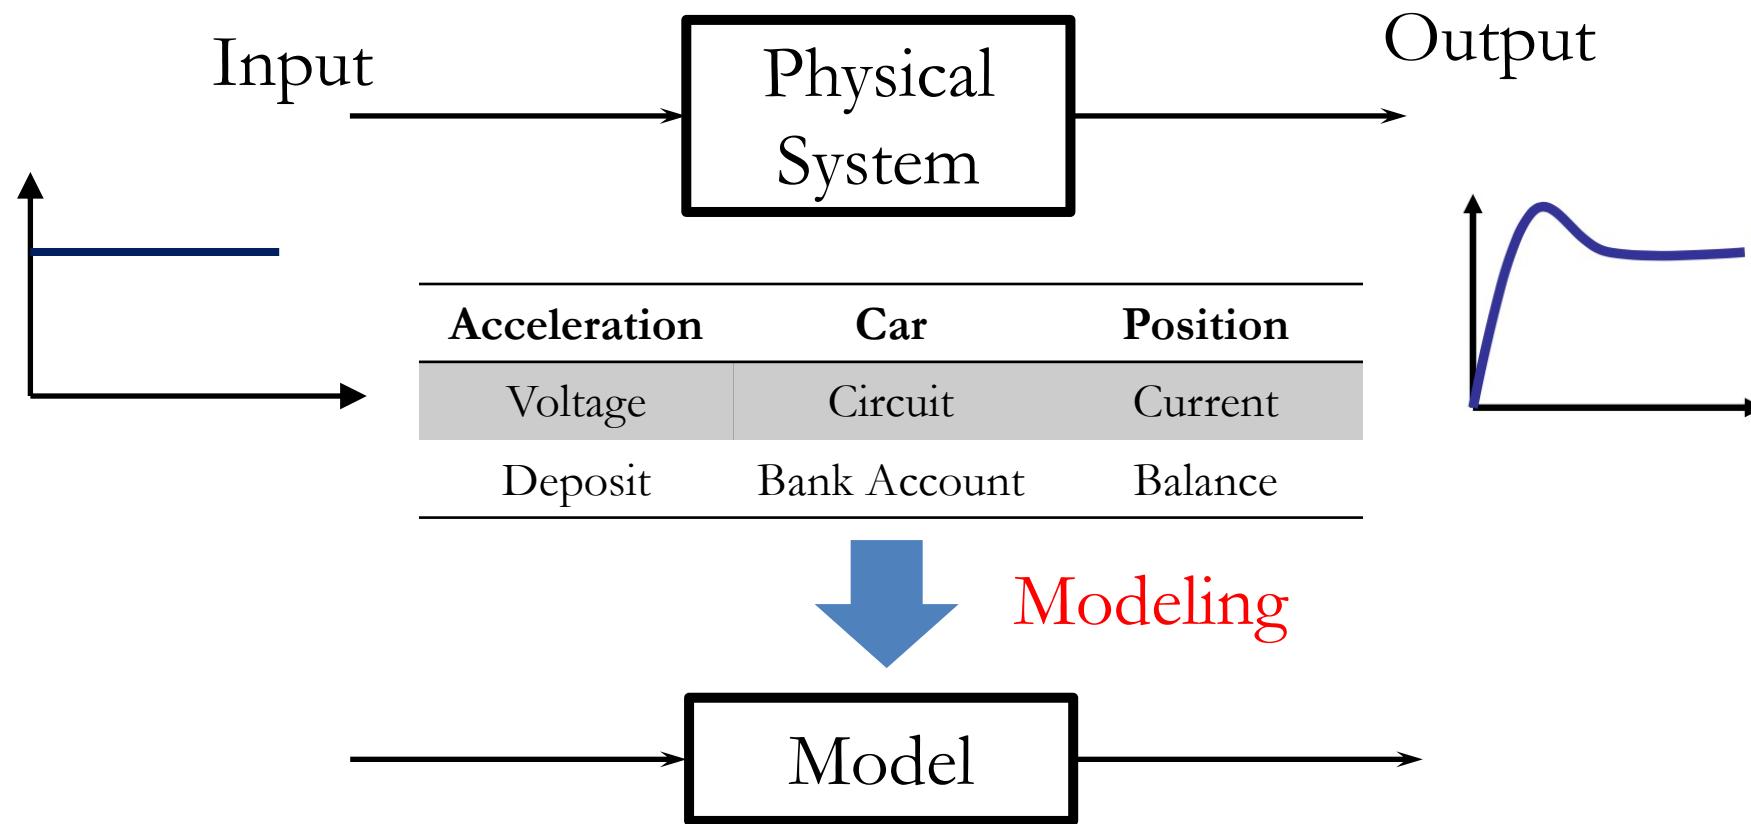

- Continuous-time and discrete-time
- Memoryless, causal and noncausal
- Lumped and distributed
- Time-invariant and time-varying
- Linear and nonlinear

Input/output vectors are continuous-time signals

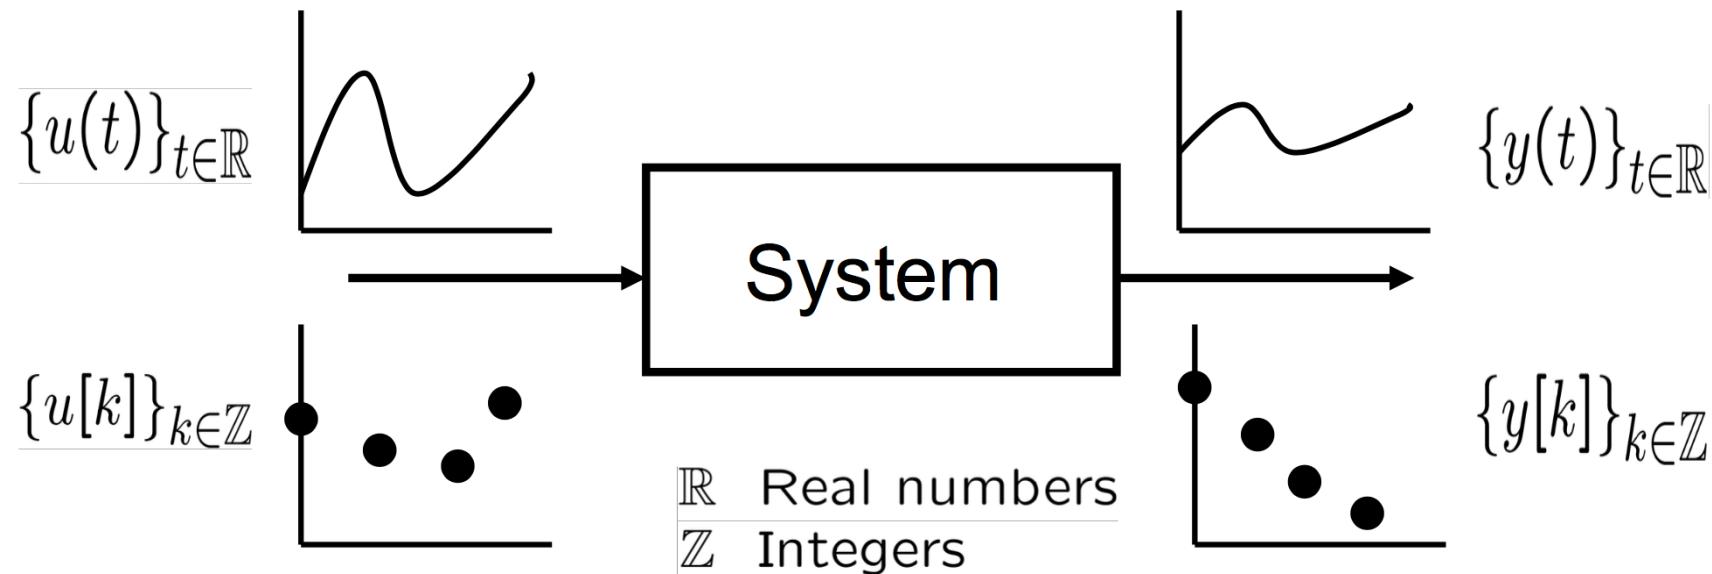

- Discrete-time system
- Input/output vectors are discrete-time signals

Example

- Continuous-time system

- Mass-spring-damper system

$$My''(t) = f(t) - By'(t) - Ky(t)$$

- RLC circuit

$$v(t) = Ri(t) + L \frac{di(t)}{dt} + \frac{1}{C} \int i(t) dt$$

- Discrete-time System



- Digital computer

- Daily balance of a bank account

$$y[k+1] = (1+a)y[k] + u[k]$$

Differential equations

difference equation

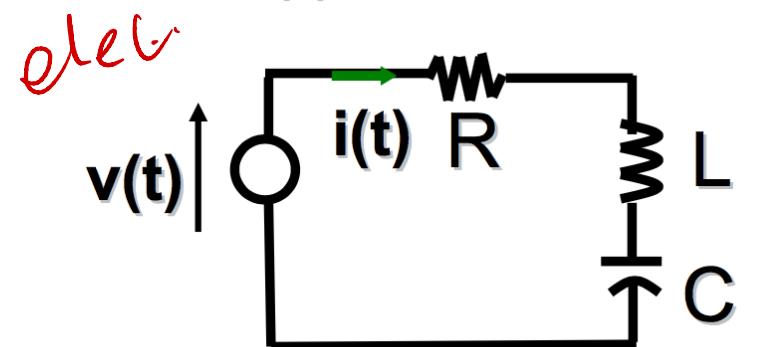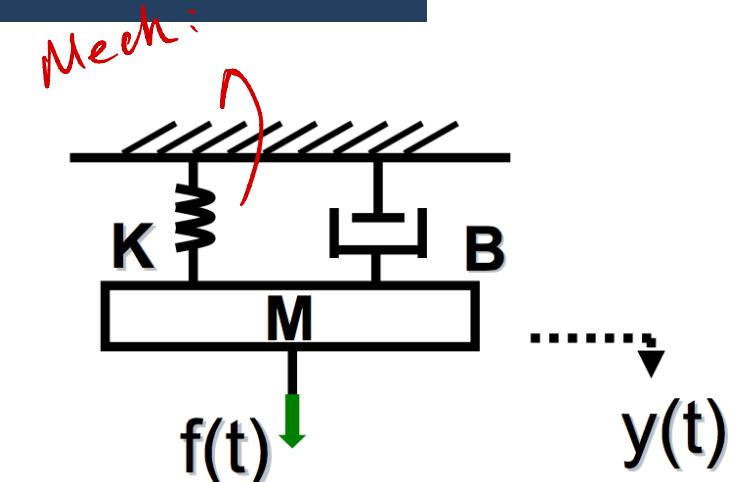


y[k] : balance at k-th day
u[k] : deposit/withdrawal
a : interest rate

- Continuous-time and discrete-time
- Memoryless, causal and noncausal
- Lumped and distributed
- Time-invariant and time-varying
- Linear and nonlinear

Memoryless system: Current output depends on ONLY current input.

Causal System: Current output depends on current and past input.

Noncausal system: Current output depends on future input.

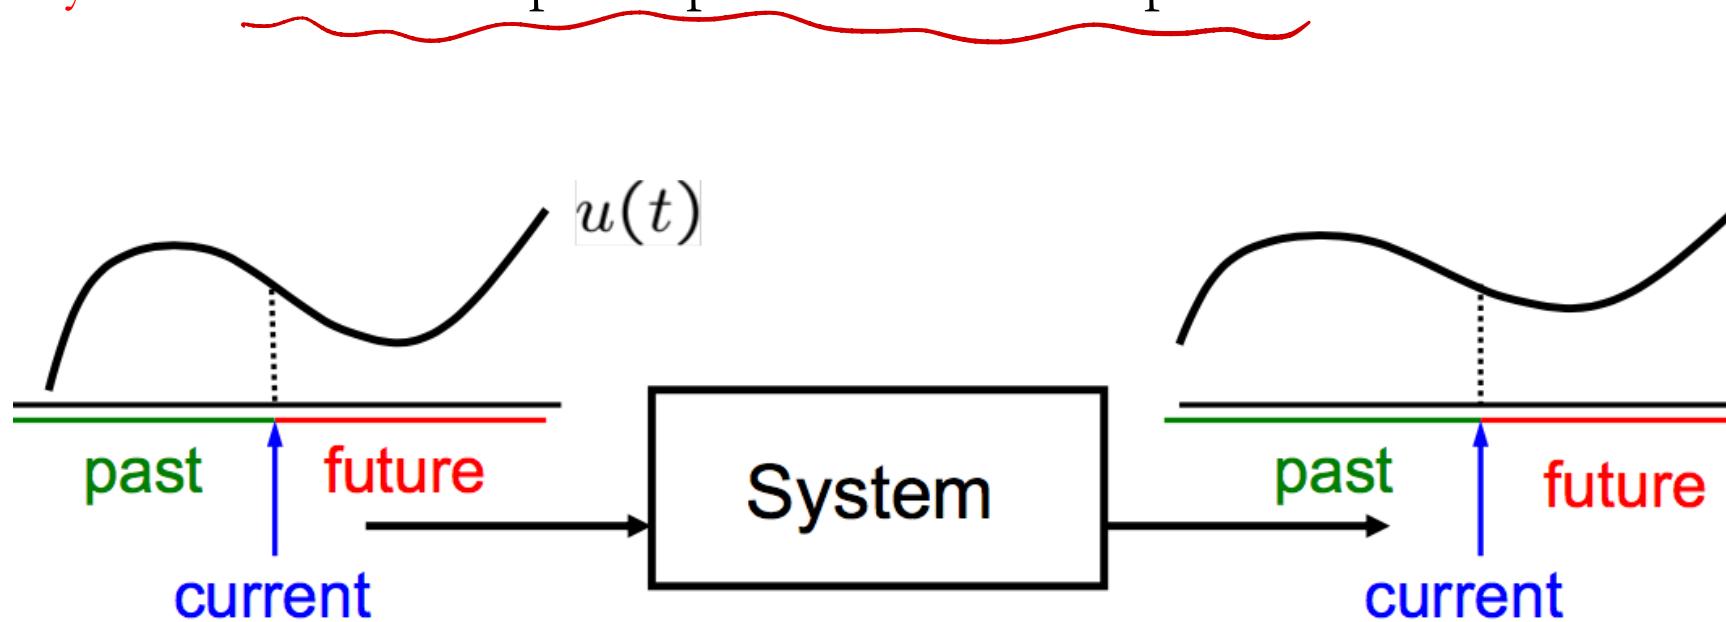

- Memoryless system

- Spring: input $f(t)$, output $x(t) \rightarrow f(t) = kx(t)$
- Resistor: input $v(t)$, output $i(t) \rightarrow v(t) = Ri(t)$

✗

- Causal System

- Input: acceleration; output: position of a car

Current position depends on not only current acceleration, but also all the past accelerations.


- **Noncausal System does not exist in real world; it exists only mathematically. (We only consider causal systems)**

- Continuous-time and discrete-time
- Memoryless, causal and noncausal
- **Lumped and distributed**
- Time-invariant and time-varying
- Linear and nonlinear

For a causal system,


(Current/future input)

(past input)

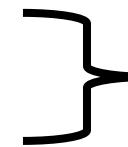

Current/Future output


To Memorize this info, we use a state vector $x(t_0)$

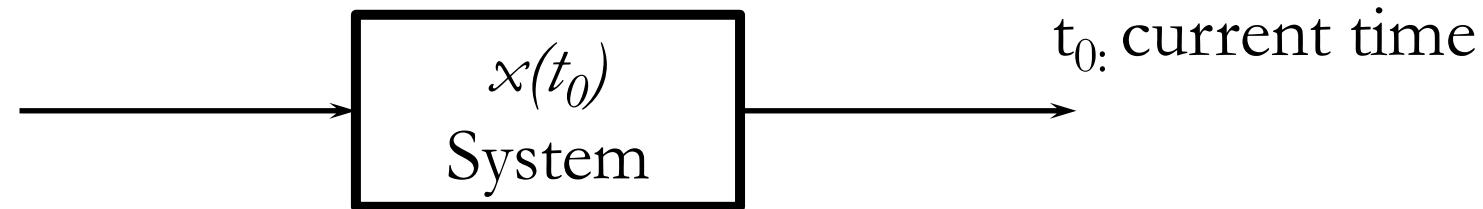


Lumped system: State vector is finite dimensional

Distributed system: State vector is infinite dimensional

- Lumped System

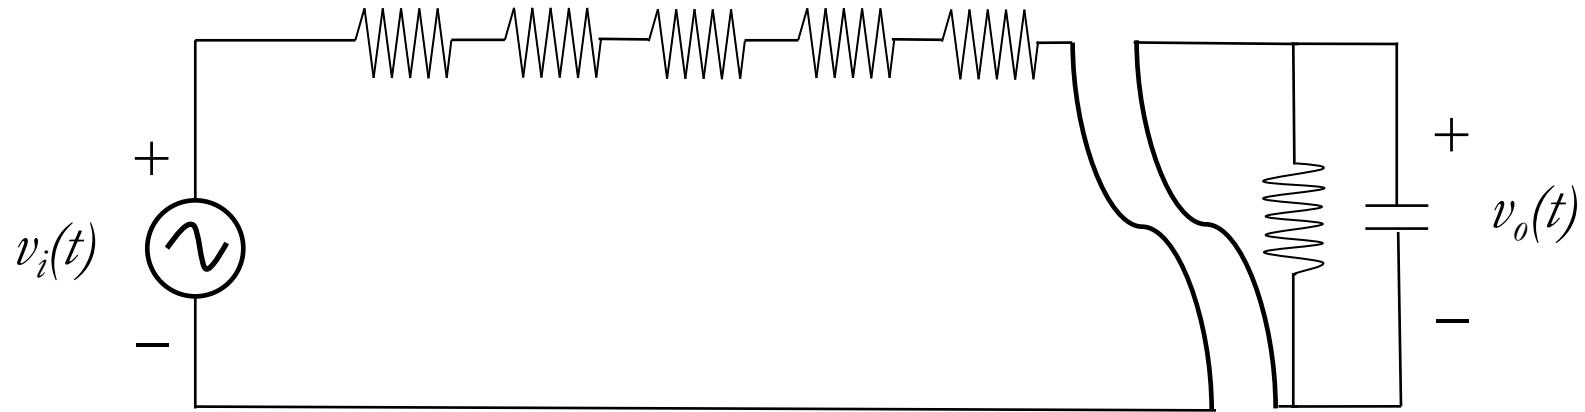

- Distributed System

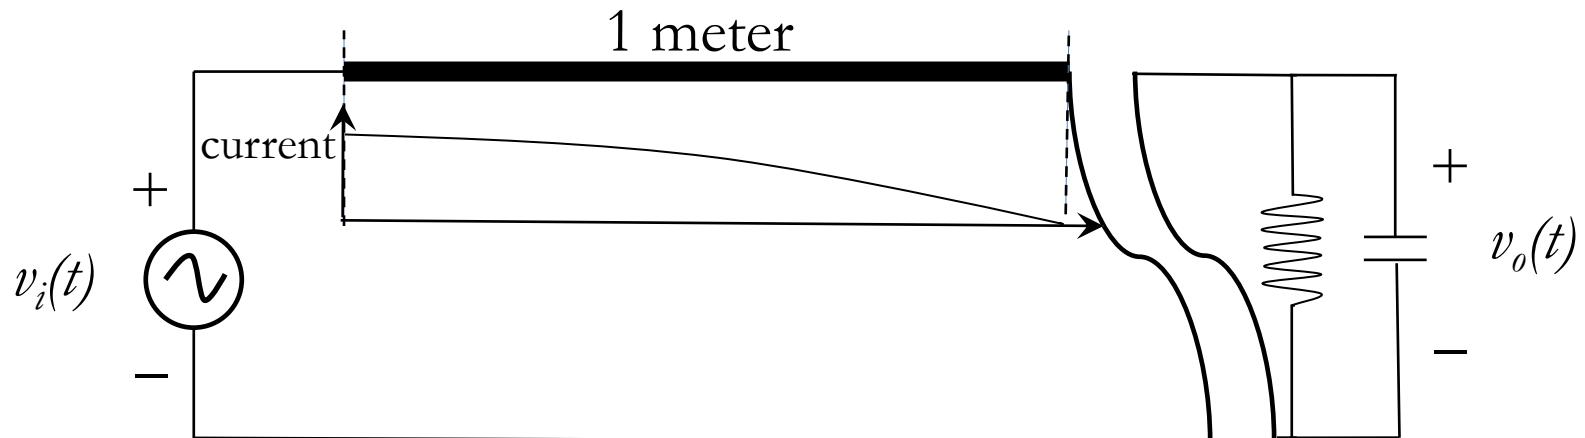


- Continuous-time and discrete-time
- Memoryless, causal and noncausal
- Lumped and distributed
- Time-invariant and time-varying
- Linear and nonlinear

For a causal system, $\left. \begin{array}{l} x(t_0) \\ u(t), t \geq t_0 \end{array} \right\} \rightarrow y(t), t \geq t_0$


Time-invariant system: For any time shift T ,

$\left. \begin{array}{l} x(t_0 + T) \\ u(t - T), t \geq t_0 + T \end{array} \right\} \rightarrow y(t - T), t \geq t_0 + T$

Time-varying system: Not time-invariant

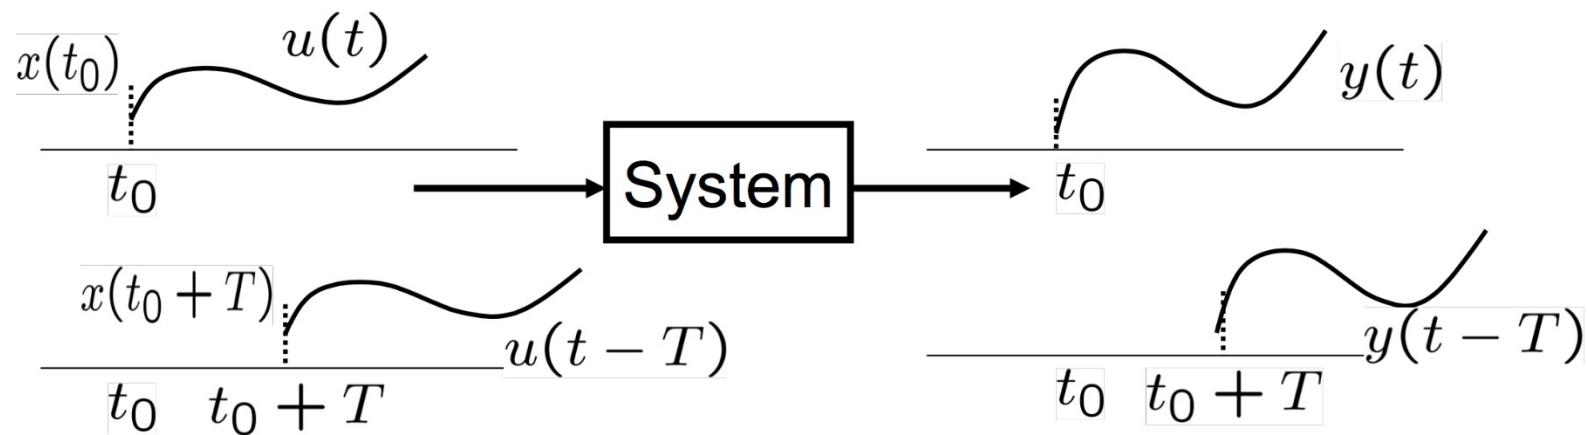


- Car, Rocket etc.

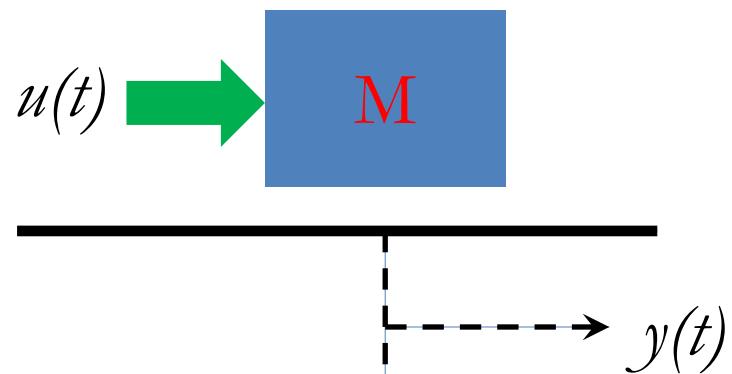

If we regard M to be **constant** (even though M changes very slowly), then this system is **time-invariant**.

$$My''(t) = u(t)$$

(Laplace applicable)

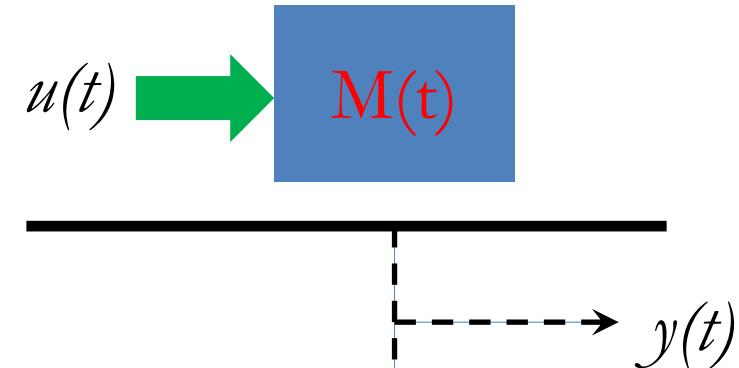

If we regard M to be **Changing** (due to fuel consumption), then this system is **time-varying**.

$$M(t)y''(t) = u(t)$$

(Laplace not applicable)

- Continuous-time and discrete-time
- Memoryless, causal and noncausal
- Lumped and distributed
- Time-invariant and time-varying
- Linear and nonlinear

For a causal system,

$$\left. \begin{array}{l} x_i(t_0) \\ u_i(t), t \geq t_0 \end{array} \right\} \rightarrow y_i(t), t \geq t_0, i = 1, 2$$

output $y = f(x)$ input $x = x_1$
 $y_1 = f(x_1)$ ① $x = x_2$
 $y_2 = f(x_2)$ ②

Linear system: A system satisfying superposition property

$$\left. \begin{array}{l} \alpha_1 x_1(t_0) + \alpha_2 x_2(t_0) \\ \alpha_1 u_1 + \alpha_2 u_2(t), t \geq t_0 \\ t \geq t_0 \quad \forall \alpha_1, \alpha_2 \in \mathbb{R} \end{array} \right\} \rightarrow \alpha_1 y_1(t) + \alpha_2 y_2(t),$$

Homogeneity $y = f(x)$
 $\alpha y = f(\alpha x)$

$f(x_1 + x_2) \stackrel{?}{=} y_1 + y_2$

Nonlinear system: A system that does not satisfy superposition property.

$$\begin{aligned} y &= 5x. & x = x_1 \Rightarrow y_1 = 5 \cdot x_1 \\ && x = x_2 \Rightarrow y_2 = 5 \cdot x_2 \\ && x = x_1 + x_2 \Rightarrow y = 5(x_1 + x_2) \\ && \quad = 5 \cdot x_1 + 5 \cdot x_2 = y_1 + y_2 = 5x_1 + 5x_2 \end{aligned}$$

$y = 5x$? Non linear system

$x = x_1$
 $y_1 = 5x_1 + 1 \checkmark$
 $x = x_2$
 $y_2 = 5x_2 + 1 \checkmark$
 $x = x_1 + x_2$
 $y = 5(x_1 + x_2) + 1$
 $= 5x_1 + 5x_2 + 1 \quad \text{Red circle}$
 $\checkmark y_1 + y_2 = 5x_1 + 1 +$
 $= 5x_1 + 5x_2 + 2 \quad \text{Red circle}$

- All systems in real world are nonlinear.

Simple model

Linear model

Linearization

$$f(t) = Ky(t) \rightarrow$$

This linear relation holds only for small $y(t)$ and $f(t)$

- However, linear approximation is often good enough for control purposes

- Linearization: approximation of a nonlinear system by linear system around some operating point



$$mL^2\ddot{\theta}(t) = T(\theta) - mgL \sin \theta(t)$$

non-linear term.

$\theta \rightarrow 0^\circ$ $\sin \theta \approx \theta$ At the operating point 0°

$mgL\theta(t)$

Taylor series expansion

Linear State-Space Models

Page 19 of 26

Continuous-time

$$\begin{cases} \dot{x} = Ax + Bu & \text{①} \\ y = Cx + Du & \text{②} \end{cases}$$


(is or differential equation)

Discrete-time

$$\begin{cases} \frac{dx(t)}{dt} = A(t)x(t) + B(t)u(t) & \text{①} \\ y(t) = C(t)x(t) + D(t)u(t) & \text{②} \end{cases}$$






$$\begin{cases} x[k+1] = A[k]x[k] + B[k]u[k] \\ y[k] = C[k]x[k] + D[k]u[k] \end{cases}$$

$t \in \mathbb{R}$ (Real number)

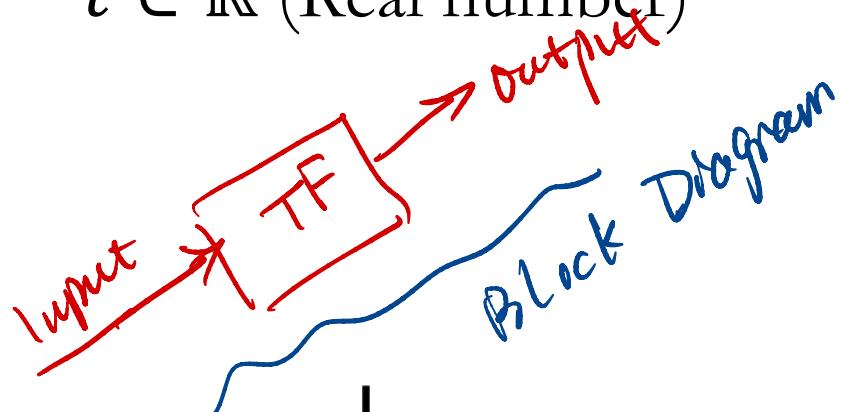

$k \in \mathbb{Z}$ (Integers)

x: state vector
u: input vector
y: output vector

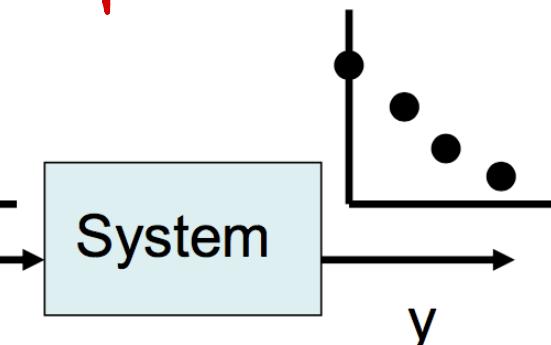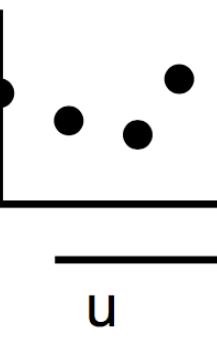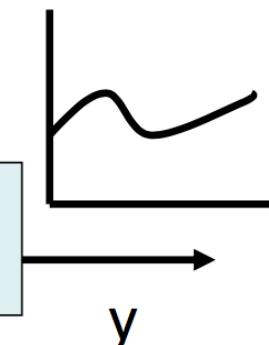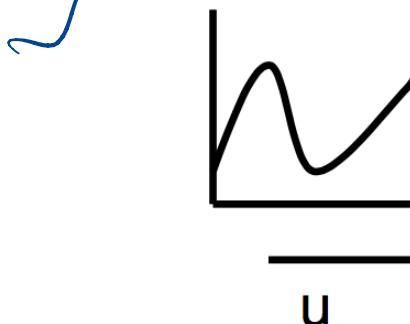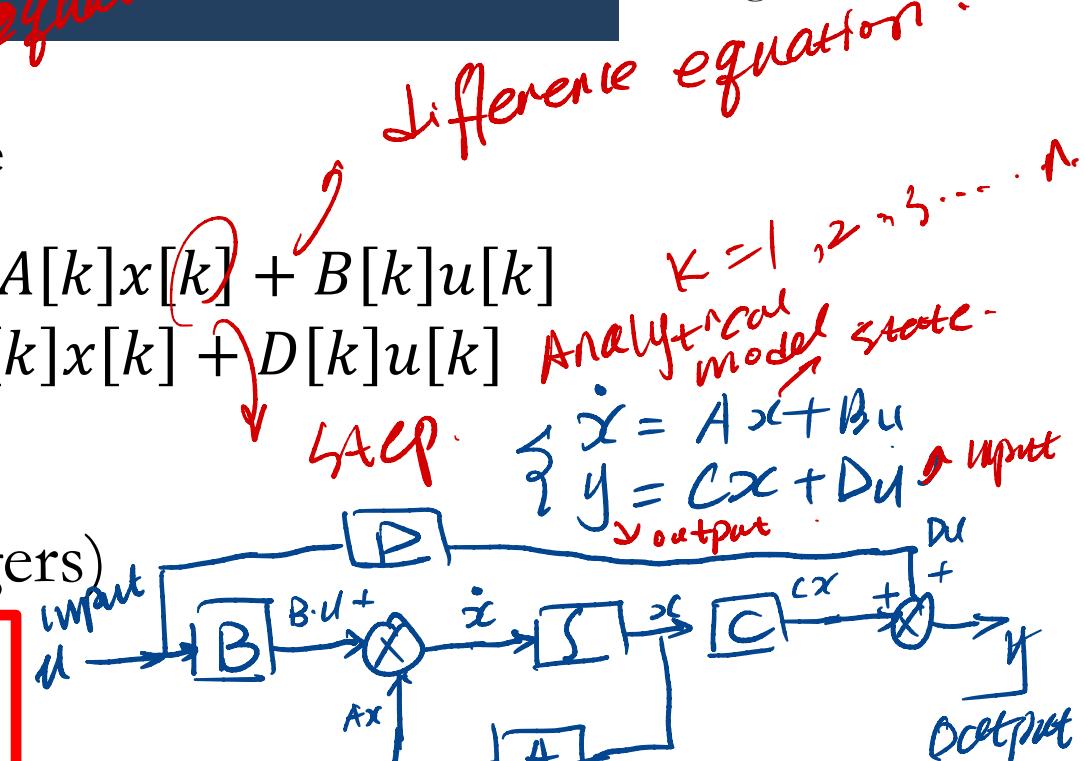

- The first equation, called **state equation**, is a first order ordinary differential (CT case) and difference (DT case) equation.

$$\begin{cases} \dot{x} = Ax + Bu \\ y = Cx + Du \end{cases}$$

- The second equation, called **output equation**, is an algebraic equation.
- Two equations are called **state-space model**.
- If a system is **time-invariant**, the matrices A, B, C, D are constant (independent of time).
- Pay attention to **sizes of matrices and vectors**. They must be always compatible!

x : states
 u : inputs

y : outputs
vectors.

Consider a general n th-order model of a dynamic system:

$$\frac{d^n y(t)}{dt^n} + a_{n-1} \frac{d^{n-1} y(t)}{dt^{n-1}} + \cdots + a_1 \frac{dy(t)}{dt} + a_0 y(t) = b_n \frac{d^n u(t)}{dt^n} + b_{n-1} \frac{d^{n-1} u(t)}{dt^{n-1}} + \cdots + b_1 \frac{du(t)}{dt} + b_0 u(t)$$

↓ output ↓ input

Assuming all initial conditions are all zeros.

Step of converting system equation \rightarrow state space model.

\nwarrow n : 1st order differential equation

Goal: to derive a systematic procedure that transforms a differential equation of order n to a state space form representing a system of n first-order differential equations.

State equation: $\dot{x} = Ax + Bu$ = 1st order differential equation

\nwarrow

Example

Page 22 of 26

Consider a dynamic system represented by the following differential equation:
6th order diff. equation

$$y^{(6)} + 6y^{(5)} - 2y^{(4)} + y^{(2)} - 5y^{(1)} + 3y = 7u^{(3)} + u^{(1)} + 4u$$

where $y^{(i)}$ stands for the i th derivative: $y^{(i)} = d^i y / dt^i$. Find the state space model of the above system.

$$\begin{aligned} A_{6 \times 6} &= \begin{bmatrix} 0 & 1 & 0 & 0 & 0 & 0 \\ 0 & 0 & 1 & 0 & 0 & 0 \\ 0 & 0 & 0 & 1 & 0 & 0 \\ 0 & 0 & 0 & 0 & 1 & 0 \\ 0 & 0 & 0 & 0 & 0 & 1 \\ 0 & 0 & 0 & 0 & 0 & 0 \end{bmatrix} \quad B_{6 \times 1} = \begin{bmatrix} 0 \\ 0 \\ 0 \\ 0 \\ 0 \\ 1 \end{bmatrix} \\ C_{1 \times 6} &= \begin{bmatrix} 4 & 1 & 0 & 7 & 0 & 0 \end{bmatrix} \quad D = [0] \end{aligned}$$

system equation
states
input
output
A, B, C, D.
6. 1st order
state space model of the dynamic system

$$\begin{cases} \dot{x} = Ax + Bu \\ y = Cx + Du \end{cases}$$

Example: Mass with a Driving Force

Page 23 of 26

- By Newton's law, we have

$$M\ddot{y}(t) = u(t)$$


u : input force

y : output position

$$\sum F = ma$$

$$u(t) = ma = M\ddot{y}(t)$$

$$\dot{x} = \begin{bmatrix} x_1 \\ x_2 \end{bmatrix} = \begin{bmatrix} y(t) \\ \dot{y}(t) \end{bmatrix} \quad \ddot{x} = \begin{bmatrix} \dot{x}_1 \\ \dot{x}_2 \end{bmatrix} = \begin{bmatrix} \ddot{y}(t) \\ \ddot{\dot{y}}(t) \end{bmatrix}$$

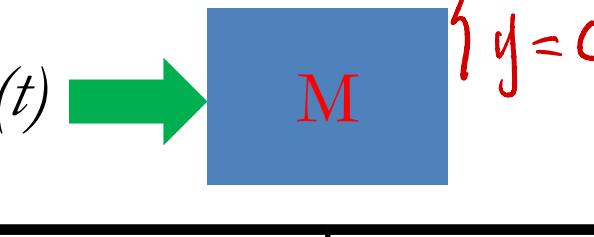

$$\begin{cases} \dot{x} = Ax + Bu \\ y = Cx + Du \end{cases}$$

- Define state variables: $x_1(t) = y(t)$, $x_2(t) = \dot{y}(t)$
- State: $\begin{bmatrix} \dot{x}_1 \\ \dot{x}_2 \end{bmatrix} = \begin{bmatrix} \dot{y}(t) \\ \ddot{y}(t) \end{bmatrix} = \begin{bmatrix} 0 & 1 \\ 0 & 0 \end{bmatrix} \begin{bmatrix} y(t) \\ \dot{y}(t) \end{bmatrix} + \begin{bmatrix} 0 \\ \frac{1}{M} u(t) \end{bmatrix} \Rightarrow \text{input: } \dot{y}(t) = y'(t)$
- Then, $\ddot{y}(t) = \frac{1}{M} u(t)$

$$\begin{cases} \dot{x}_1(t) = \dot{y}_1(t) = x_2(t) \\ \dot{x}_2(t) = \dot{y}_2(t) = \ddot{y}(t) = \frac{1}{M} u(t) \\ y(t) = x_1(t) \end{cases} \rightarrow \begin{cases} \frac{d}{dt} \begin{bmatrix} x_1(t) \\ x_2(t) \end{bmatrix} = \begin{bmatrix} 0 & 1 \\ 0 & 0 \end{bmatrix} \begin{bmatrix} x_1(t) \\ x_2(t) \end{bmatrix} + \begin{bmatrix} 0 \\ \frac{1}{M} u(t) \end{bmatrix} \\ y(t) = [1 \ 0] \begin{bmatrix} x_1(t) \\ x_2(t) \end{bmatrix} \end{cases}$$

$$\begin{aligned} A_{2 \times 2} &= \begin{bmatrix} 0 & 1 \\ 0 & 0 \end{bmatrix} \\ B &= \begin{bmatrix} 0 \\ \frac{1}{M} \end{bmatrix} \\ C &= \begin{bmatrix} 1 & 0 \end{bmatrix} \\ D &= \begin{bmatrix} 0 \end{bmatrix} \end{aligned}$$

Mass-Spring-Damper System

- By Newton's law

$$M\ddot{y}(t) = u(t) - B\dot{y}(t) - ky(t)$$


$$\ddot{y}(t) = \frac{1}{M}u(t) - \frac{B}{M}\dot{y}(t) - \frac{k}{M}y(t)$$

- Define state variables


$$x_1(t) = y(t), x_2(t) = \dot{y}(t)$$

$$\vec{x} = \begin{bmatrix} x_1 \\ x_2 \end{bmatrix} = \begin{bmatrix} y(t) \\ \dot{y}(t) \end{bmatrix} \quad \dot{\vec{x}} = \begin{bmatrix} \dot{x}_1 \\ \dot{x}_2 \end{bmatrix} = \begin{bmatrix} \dot{y} \\ \ddot{y}(t) \end{bmatrix}$$

$$\begin{cases} \frac{d}{dt} \begin{bmatrix} x_1(t) \\ x_2(t) \end{bmatrix} = \begin{bmatrix} 0 & 1 \\ -K/M & -B/M \end{bmatrix} \begin{bmatrix} x_1(t) \\ x_2(t) \end{bmatrix} + \begin{bmatrix} 0 \\ 1/M \end{bmatrix} u(t) \\ y(t) = [1 \ 0] \begin{bmatrix} x_1(t) \\ x_2(t) \end{bmatrix} \end{cases}$$

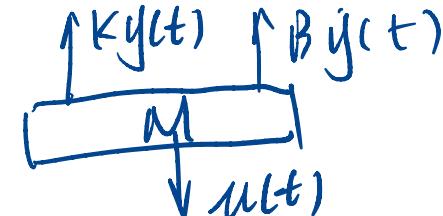

$$\begin{cases} \dot{x} = Ax + Bu \\ y = Cx + Du \end{cases}$$

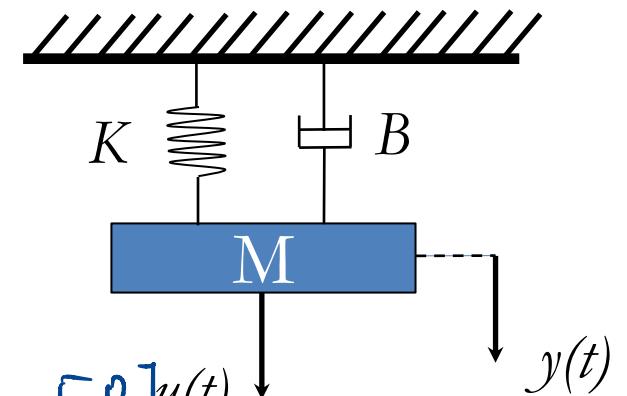

$$\begin{bmatrix} \dot{y} \\ \ddot{y} \end{bmatrix} = \begin{bmatrix} 0 & 1 \\ -\frac{K}{M} & -\frac{B}{M} \end{bmatrix} \begin{bmatrix} y \\ \dot{y} \end{bmatrix} + \begin{bmatrix} 0 \\ \frac{1}{M} \end{bmatrix} u(t)$$

$$y = \begin{bmatrix} 1 & 0 \end{bmatrix} \begin{bmatrix} y \\ \dot{y} \end{bmatrix} + \begin{bmatrix} 0 \\ 0 \end{bmatrix} u(t)$$

$A_{2 \times 2}$

$C_{1 \times 2}$

$B_{2 \times 1}$

$D = 0$


- $u(t)$: input voltage
- $y(t)$: output voltage
- By Kicchhoff's voltage law

$$u(t) = Ri(t) + L \frac{di(t)}{dt} + \frac{1}{C} \int i(\tau) d\tau$$

input

Current Law
Σ voltage = 0.

$$\begin{cases} \dot{x} = Ax + Bu \\ y = Cx + Du \end{cases}$$

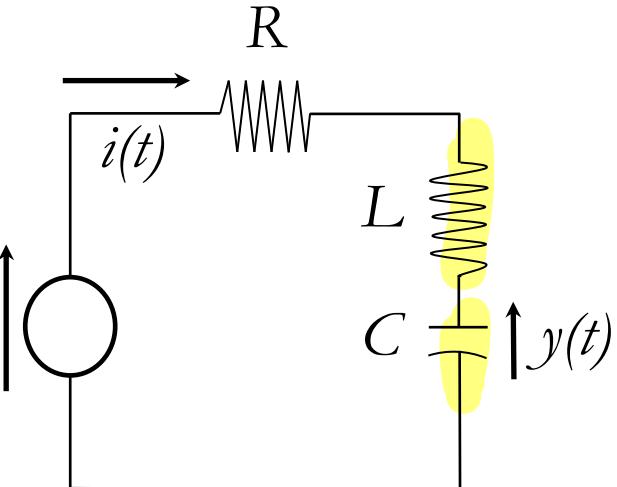

Define State Variables (current for inductor, voltage for capacitor):

$$x_1(t) = i(t), x_2(t) = \frac{1}{C} \int i(\tau) d\tau$$

$$\left\{ \begin{array}{l} \frac{d}{dt} \begin{bmatrix} x_1(t) \\ x_2(t) \end{bmatrix} = \begin{bmatrix} -R/L & -1/L \\ 1/C & 0 \end{bmatrix} \begin{bmatrix} x_1(t) \\ x_2(t) \end{bmatrix} + \begin{bmatrix} 1/L \\ 0 \end{bmatrix} u(t) \\ y(t) = \begin{bmatrix} 0 & 1 \end{bmatrix} \begin{bmatrix} x_1(t) \\ x_2(t) \end{bmatrix} + \begin{bmatrix} 0 \\ 1/C \end{bmatrix} u(t) \end{array} \right.$$

A *B*
C *D*

