

Chapter 2

Instructions: Language of the Computer

Instruction Set

- The repertoire of instructions of a computer
- Different computers have different instruction sets
 - But with many aspects in common
- Early computers had very simple instruction sets
 - Simplified implementation
- Many modern computers also have simple instruction sets

The ARMv8 Instruction Set

- A subset, called LEGv8, used as the example throughout the book
- Commercialized by ARM Holdings (<u>www.arm.com</u>)
- Large share of embedded core market
 - Applications in consumer electronics, network/storage equipment, cameras, printers, ...
- Typical of many modern ISAs
 - See ARM Reference Data tear-out card



Chapter 2 — Instructions: Language of the Computer — 3

Arithmetic Operations

- Add and subtract, three operands
 - Two sources and one destination

ADD a, b, c // a gets b + c

- All arithmetic operations have this form
- Design Principle 1: Simplicity favours regularity
 - Regularity makes implementation simpler
 - Simplicity enables higher performance at lower cost

Arithmetic Example

C code:

$$f = (g + h) - (i + j);$$

Compiled LEGv8 code:

MORGAN KAUFMANN

Chapter 2 — Instructions: Language of the Computer — 5

Register Operands

- Arithmetic instructions use register operands
- LEGv8 has a 32 × 64-bit register file
 - Use for frequently accessed data
 - 64-bit data is called a "doubleword"
 - 31 x 64-bit general purpose registers X0 to X30
 - 32-bit data called a "word"
 - 31 x 32-bit general purpose sub-registers W0 to W30
- Design Principle 2: Smaller is faster
 - c.f. main memory: millions of locations

LEGv8 Registers

- X0 X7: procedure arguments/results
- X8: indirect result location register
- X9 X15: temporaries
- X16 X17 (IP0 IP1): may be used by linker as a scratch register, other times as temporary register
- X18: platform register for platform independent code; otherwise a temporary register
- X19 X27: saved
- X28 (SP): stack pointer
- X29 (FP): frame pointer
- X30 (LR): link register (return address)
- XZR (register 31): the constant value 0



Chapter 2 — Instructions: Language of the Computer — 7

Register Operand Example

C code:

$$f = (g + h) - (i + j);$$

• f, ..., j in X19, X20, ..., X23

Compiled LEGv8 code:

```
ADD X9, X20, X21
ADD X10, X22, X23
SUB X19, X9, X10
```

Memory Operands

- Main memory used for composite data
 - Arrays, structures, dynamic data
- To apply arithmetic operations
 - Load values from memory into registers
 - Store result from register to memory
- Memory is byte addressed
 - Each address identifies an 8-bit byte
- LEGv8 does not require words to be aligned in memory, except for instructions and the stack



Chapter 2 — Instructions: Language of the Computer — 9

Memory Operand Example

C code:

$$A[12] = h + A[8];$$

- h in X21, base address of A in X22
- Compiled LEGv8 code:
 - Index 8 requires offset of 64

LDUR X9,[X22,#64] // U for "unscaled"

ADD X9,X21,X9

STUR X9, [X22, #96]

Registers vs. Memory

- Registers are faster to access than memory
- Operating on memory data requires loads and stores
 - More instructions to be executed
- Compiler must use registers for variables as much as possible
 - Only spill to memory for less frequently used variables
 - Register optimization is important!



Chapter 2 — Instructions: Language of the Computer — 11

Immediate Operands

- Constant data specified in an instruction ADDI X22, X22, #4
- Design Principle 3: Make the common case fast
 - Small constants are common
 - Immediate operand avoids a load instruction



Unsigned Binary Integers

Given an n-bit number

$$x = x_{n-1}2^{n-1} + x_{n-2}2^{n-2} + \dots + x_12^1 + x_02^0$$

- Range: 0 to +2ⁿ 1
- Example
 - 0000 0000 0000 0000 0000 0000 0000 1011₂ = 0 + ... + 1×2³ + 0×2² +1×2¹ +1×2⁰ = 0 + ... + 8 + 0 + 2 + 1 = 11₁₀
- Using 32 bits
 - 0 to +4,294,967,295



Chapter 2 — Instructions: Language of the Computer — 13

2s-Complement Signed Integers

Given an n-bit number

$$x = -x_{n-1}2^{n-1} + x_{n-2}2^{n-2} + \dots + x_12^1 + x_02^0$$

- Range: -2^{n-1} to $+2^{n-1}-1$
- Example
- Using 32 bits
 - –2,147,483,648 to +2,147,483,647

2s-Complement Signed Integers

- Bit 31 is sign bit
 - 1 for negative numbers
 - 0 for non-negative numbers
- $-(-2^{n-1})$ can't be represented
- Non-negative numbers have the same unsigned and 2s-complement representation
- Some specific numbers
 - **0**: 0000 0000 ... 0000
 - –1: 1111 1111 ... 1111
 - Most-negative: 1000 0000 ... 0000
 - Most-positive: 0111 1111 ... 1111



Chapter 2 — Instructions: Language of the Computer — 15

Signed Negation

- Complement and add 1
 - Complement means $1 \rightarrow 0, 0 \rightarrow 1$

$$x + x = 1111...111_2 = -1$$

 $x + 1 = -x$

- Example: negate +2
 - $+2 = 0000 0000 \dots 0010_{two}$
 - $-2 = 1111 \ 1111 \dots \ 1101_{two} + 1$ = 1111 \ 1111 \ \dots \ \ 1110_{two}

Sign Extension

- Representing a number using more bits
 - Preserve the numeric value
- Replicate the sign bit to the left
 - c.f. unsigned values: extend with 0s
- Examples: 8-bit to 16-bit
 - **+2**: 0000 0010 => 0000 0000 0000 0010
 - -2: 1111 1110 => 1111 1111 1111 1110
- In LEGv8 instruction set
 - LDURSB: sign-extend loaded byte
 - LDURB: zero-extend loaded byte



Chapter 2 — Instructions: Language of the Computer — 17

Representing Instructions

- Instructions are encoded in binary
 - Called machine code
- LEGv8 instructions
 - Encoded as 32-bit instruction words
 - Small number of formats encoding operation code (opcode), register numbers, ...
 - Regularity!

Hexadecimal

- Base 16
 - Compact representation of bit strings
 - 4 bits per hex digit

0	0000	4	0100	8	1000	С	1100
1	0001	5	0101	9	1001	d	1101
2	0010	6	0110	а	1010	е	1110
3	0011	7	0111	b	1011	f	1111

- Example: eca8 6420
 - 1110 1100 1010 1000 0110 0100 0010 0000



Chapter 2 — Instructions: Language of the Computer — 19

LEGv8 R-format Instructions

opcode	Rm	shamt	Rn	Rd
11 bits	5 bits	6 bits	5 bits	5 bits

- Instruction fields
 - opcode: operation code
 - Rm: the second register source operand
 - shamt: shift amount (00000 for now)
 - Rn: the first register source operand
 - Rd: the register destination

R-format Example

opcode	Rm	shamt	Rn	Rd
11 bits	5 bits	6 bits	5 bits	5 bits

ADD X9, X20, X21

1112 _{ten}	21 _{ten}	0 _{ten}	20 _{ten}	9 _{ten}
10001011000 _{two}	10101 _{two}	000000 _{two}	10100 _{two}	01001 _{two}

1000 1011 0001 0101 0000 0010 1000 $1001_{two} =$

8B150289₁₆



Chapter 2 — Instructions: Language of the Computer — 21

LEGv8 D-format Instructions

opcode	address	op2	Rn	Rt
11 bits	9 bits	2 bits	5 bits	5 bits

- Load/store instructions
 - Rn: base register
 - address: constant offset from contents of base register (+/- 32 doublewords)
 - Rt: destination (load) or source (store) register number
- Design Principle 3: Good design demands good compromises
 - Different formats complicate decoding, but allow 32-bit instructions uniformly
 - Keep formats as similar as possible

LEGv8 I-format Instructions


opcode	immediate	Rn	Rd
10 bits	12 bits	5 bits	5 bits

- Immediate instructions
 - Rn: source registerRd: destination register
- Immediate field is zero-extended



Chapter 2 — Instructions: Language of the Computer — 23

Stored Program Computers

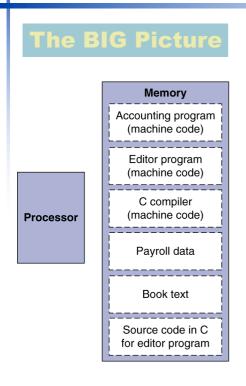

- Instructions represented in binary, just like data
- Instructions and data stored in memory
- Programs can operate on programs
 - e.g., compilers, linkers, ...
- Binary compatibility allows compiled programs to work on different computers
 - Standardized ISAs

Logical Operations

Instructions for bitwise manipulation

Operation	С	Java	LEGv8
Shift left	<<	<<	LSL
Shift right	>>	>>>	LSR
Bit-by-bit AND	&	&	AND, ANDI
Bit-by-bit OR	- 1		OR, ORI
Bit-by-bit NOT	~	~	EOR, EORI

 Useful for extracting and inserting groups of bits in a word



Chapter 2 — Instructions: Language of the Computer — 25

Shift Operations

opcode	Rm	shamt	Rn	Rd
11 bits	5 bits	6 bits	5 bits	5 bits

- shamt: how many positions to shift
- Shift left logical
 - Shift left and fill with 0 bits
 - LSL by i bits multiplies by 2ⁱ
- Shift right logical
 - Shift right and fill with 0 bits
 - LSR by i bits divides by 2ⁱ (unsigned only)

AND Operations

- Useful to mask bits in a word
 - Select some bits, clear others to 0

AND X9,X10,X11

X10	00000000 00000000 00000000 00000000 0000	0011	01 11000000
X11	00000000 00000000 00000000 00000000 0000	1111	00 00000000
X9	00000000 00000000 00000000 00000000 0000	0011	00 00000000




Chapter 2 — Instructions: Language of the Computer — 27

OR Operations

- Useful to include bits in a word
 - Set some bits to 1, leave others unchanged
 30, x10, x11

OR X9,X10,X11

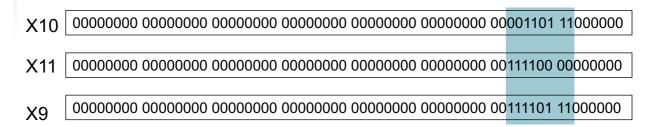

§2.7 Instructions for Making Decisions

EOR Operations

- Differencing operation
 - Set some bits to 1, leave others unchanged

EOR X9,X10,X12 // NOT operation

X10	00000000	00000000	00000000	00000000	00000000	00000000	00001101	11000000
X12	11111111	11111111	11111111	11111111	11111111	11111111	11111111	11111111
X9	11111111	11111111	11111111	11111111	11111111	11111111	11110010	00111111



Chapter 2 — Instructions: Language of the Computer — 29

Conditional Operations

- Branch to a labeled instruction if a condition is true
 - Otherwise, continue sequentially
- CBZ register, L1
 - if (register == 0) branch to instruction labeled L1;
- CBNZ register, L1
 - if (register != 0) branch to instruction labeled L1;
- B L1
 - branch unconditionally to instruction labeled L1;

Compiling If Statements

C code:

• f, g, ... in X19, X20, ...



SUB X9,X22,X23 CBNZ X9,Else ADD X19,X20,X21

B Exit

Else: SUB X19,X20,X21

Exit: ...

Assembler calculates addresses

MORGAN KAUFHANN

Chapter 2 — Instructions: Language of the Computer — 31

Exit:

Else:

f = g - h

Compiling Loop Statements

C code:

while (save[i] == k) i += 1;

- i in X22, k in X24, address of save in x25
- Compiled LEGv8 code:

SUB X11, X9, X24

CBNZ X11,Exit


ADDI X22, X22,#1

B Loop

Exit: ...

Basic Blocks

- A basic block is a sequence of instructions with
 - No embedded branches (except at end)
 - No branch targets (except at beginning)

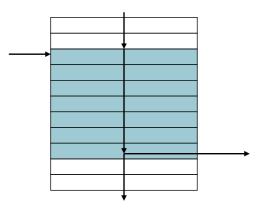

- A compiler identifies basic blocks for optimization
- An advanced processor can accelerate execution of basic blocks



Chapter 2 — Instructions: Language of the Computer — 33

More Conditional Operations

- Condition codes, set from arithmetic instruction with Ssuffix (ADDS, ADDIS, ANDS, ANDIS, SUBS, SUBIS)
 - negative (N): result had 1 in MSB
 - zero (Z): result was 0
 - overlow (V): result overflowed
 - carry (C): result had carryout from MSB
- Use subtract to set flags, then conditionally branch:
 - B.EQ
 - B.NE
 - B.LT (less than, signed), B.LO (less than, unsigned)
 - **B.LE** (less than or equal, signed), **B.LS** (less than or equal, unsigned)
 - B.GT (greater than, signed), B.HI (greater than, unsigned)
 - B.GE (greater than or equal, signed),
 - B.HS (greater than or equal, unsigned)

Conditional Example

- if (a > b) a += 1;
 - a in X22, b in X23

```
SUBS X9,X22,X23 // use subtract to make comparison
B.LTE Exit // conditional branch
ADDI X22,X22,#1
```

Exit:



Chapter 2 — Instructions: Language of the Computer — 35

Signed vs. Unsigned

- Signed comparison
- Unsigned comparison
- Example

 - x22 < x23 # signed
 -1 < +1</pre>
 - x22 > x23 # unsigned
 - **+**4,294,967,295 > +1

Procedure Calling

- Steps required
 - 1. Place parameters in registers X0 to X7
 - 2. Transfer control to procedure
 - 3. Acquire storage for procedure
 - 4. Perform procedure's operations
 - 5. Place result in register for caller
 - 6. Return to place of call (address in X30)



Chapter 2 — Instructions: Language of the Computer — 37

Procedure Call Instructions

- Procedure call: jump and link
 - BL ProcedureLabel
 - Address of following instruction put in X30
 - Jumps to target address
- Procedure return: jump registerBR LR
 - Copies LR to program counter
 - Can also be used for computed jumps
 - e.g., for case/switch statements

Leaf Procedure Example

C code:

```
long long int leaf_example (long long int
g, long long int h, long long int i, long
long int i)
{ long long int f;
  f = (g + h) - (i + j);
  return f:
}
Arguments g, ..., j in X0, ..., X3
```

f in X19 (hence, need to save \$s0 on stack)




Chapter 2 — Instructions: Language of the Computer — 39

Leaf Procedure Example

LEGv8 code:

```
leaf_example:
SUBI SP, SP, #24
                                Save X10, X9, X19 on stack
STUR X10, [SP, #16]
STUR X9, [SP, #8]
STUR X19, [SP, #0]
ADD X9, X0, X1
                                X9 = g + h
ADD X10, X2, X3
                                X10 = i + j
SUB X19,X9,X10
                                f = X9 - X10
ADD X0, X19, XZR
                                copy f to return register
LDUR X10, [SP, #16]
                                Resore X10, X9, X19 from stack
LDUR X9, [SP, #8]
LDUR X19, [SP, #0]
ADDI SP, SP, #24
                                 Return to caller
BR LR
```

Local Data on the Stack

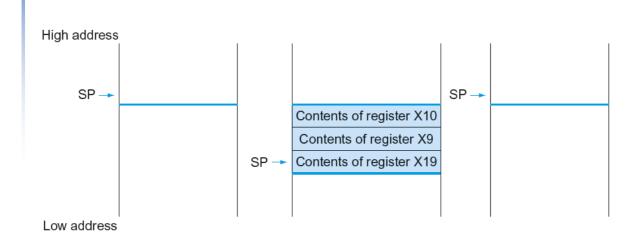



Chapter 2 — Instructions: Language of the Computer — 41

Register Usage

- X9 to X17: temporary registers
 - Not preserved by the callee
- X19 to X28: saved registers
 - If used, the callee saves and restores them

Non-Leaf Procedures

- Procedures that call other procedures
- For nested call, caller needs to save on the stack:
 - Its return address
 - Any arguments and temporaries needed after the call
- Restore from the stack after the call



Chapter 2 — Instructions: Language of the Computer — 43

Non-Leaf Procedure Example

C code:

```
int fact (int n)
{
  if (n < 1) return f;
  else return n * fact(n - 1);
}</pre>
```

- Argument n in X0
- Result in X1



Leaf Procedure Example

LEGv8 code:


```
fact:
                                       Save return address and n on stack
   SUBI SP, SP, #16
   STUR LR, [SP, #8]
   STUR X0, [SP, #0]
   SUBIS XZR,X0,#1
                                       compare n and 1
                                       if n >= 1, go to L1
   B.GE L1
   ADDI X1,XZR,#1
                                       Else, set return value to 1
   ADDI SP, SP, #16
                                       Pop stack, don't bother restoring values
   BR LR
                                       Return
L1: SUBI X0,X0,#1
                                       n = n - 1
                                       call fact(n-1)
   BL fact
   LDUR X0, [SP, #0]
                                       Restore caller's n
   LDUR LR, [SP, #8]
                                       Restore caller's return address
   ADDI SP, SP, #16
                                       Pop stack
                                       return n * fact(n-1)
   MUL X1,X0,X1
   BR LR
                                       return
```



Chapter 2 — Instructions: Language of the Computer — 45

Memory Layout

- Text: program code
- Static data: global variables
 - e.g., static variables in C, constant arrays and strings
- Dynamic data: heap
 - E.g., malloc in C, new in Java
- Stack: automatic storage

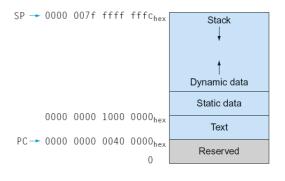

Character Data

- Byte-encoded character sets
 - ASCII: 128 characters
 - 95 graphic, 33 control
 - Latin-1: 256 characters
 - ASCII, +96 more graphic characters
- Unicode: 32-bit character set
 - Used in Java, C++ wide characters, ...
 - Most of the world's alphabets, plus symbols
 - UTF-8, UTF-16: variable-length encodings



Chapter 2 — Instructions: Language of the Computer — 47

Byte/Halfword Operations

- LEGv8 byte/halfword load/store
 - Load byte:
 - LDURB Rt, [Rn, offset]
 - Sign extend to 32 bits in rt
 - Store byte:
 - STURB Rt, [Rn, offset]
 - Store just rightmost byte
 - Load halfword:
 - LDURH Rt, [Rn, offset]
 - Sign extend to 32 bits in rt
 - Store halfword:
 - STURH Rt, [Rn, offset]
 - Store just rightmost halfword

String Copy Example

C code:

Null-terminated string
void strcpy (char x[], char y[])
{ size_t i;
 i = 0:

```
i = 0;
while ((x[i]=y[i])!='\0')
    i += 1;
}
```

MORGAN KAUFMANN

Chapter 2 — Instructions: Language of the Computer — 49

String Copy Example

LEGv8 code:

```
strcpy:
    SUBI SP, SP, 8
                        // push X19
    STUR X19, [SP, #0]
    ADD X19,XZR,XZR
                        // i=0
                       // X10 = addr of y[i]
L1: ADD X10,X19,X1
    LDURB X11, [X10, \#0] // X11 = y[i]
    ADD X12,X19,X0
                       // X12 = addr of x[i]
                       // x[i] = y[i]
    STURB X11, [X12,#0]
                       // if y[i] == 0 then exit
    CBZ X11,L2
                       // i = i + 1
    ADDI X19,X19,#1
                       // next iteration of loop
    B L1
L2: LDUR X19, [SP,#0] // restore saved $s0
    ADDI SP,SP,8
                        // pop 1 item from stack
                        // and return
    BR LR
```

32-bit Constants

- Most constants are small
 - 12-bit immediate is sufficient
- For the occasional 32-bit constant

MOVZ: move wide with zeros

MOVK: move with with keep

Use with flexible second operand (shift)

MOVZ X9,255,LSL 16

MOVK X9,255,LSL 0



Chapter 2 — Instructions: Language of the Computer — 51

Branch Addressing

- B-type
 - ullet B 1000 // go to location $10000_{
 m ten}$


5	10000 _{ten}
6 bits	26 bits

- CB-type
 - CBNZ X19, Exit // go to Exit if X19 != 0

181	Exit	19
8 bits	19 bits	5 bits

- Both addresses are PC-relative
 - Address = PC + offset (from instruction)

LEGv8 Addressing Summary

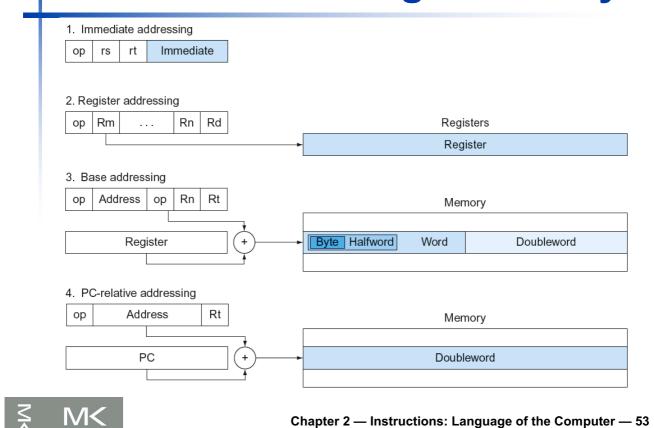

LEGv8 Encoding Summary

Name	Fields					Comments				
Field size		6 to 11 bits	5 to 10 bits	5 or 4 bits	2 bits	5 bits	5 bits	All LEGv8 instructions are 32 bits long		
R-format	R	opcode	Rm shamt		nt Rn		Rd	Arithmetic instruction format		
I-format	ı	opcode	immediate			Rn	Rd	Immediate format		
D-format	D	opcode	address		op2	Rn	Rt	Data transfer format		
B-format	В	opcode	address				Unconditional Branch format			
CB-format	СВ	opcode	address			Rt		Conditional Branch format		
IW-format	IW	opcode	immediate				Rd	Wide Immediate format		

Synchronization

- Two processors sharing an area of memory
 - P1 writes, then P2 reads
 - Data race if P1 and P2 don't synchronize
 - Result depends of order of accesses
- Hardware support required
 - Atomic read/write memory operation
 - No other access to the location allowed between the read and write
- Could be a single instruction
 - E.g., atomic swap of register

 memory
 - Or an atomic pair of instructions



Chapter 2 — Instructions: Language of the Computer — 55

Synchronization in LEGv8

- Load exclusive register: LDXR
- Store exclusive register: STXR
- To use:
 - Execute LDXR then STXR with same address
 - If there is an intervening change to the address, store fails (communicated with additional output register)
 - Only use register instruction in between

Synchronization in LEGv8

Example 1: atomic swap (to test/set lock variable)
again: LDXR X10, [X20,#0]
STXR X23,X9, [X20] // X9 = status
CBNZ X9, again
ADD X23,XZR,X10 // X23 = loaded value

Example 2: lock

```
ADDI X11,XZR,#1 // copy locked value again: LDXR X10,[X20,#0] // read lock CBNZ X10, again // check if it is 0 yet STXR X11, X9, [X20] // attempt to store BNEZ X9,again // branch if fails
```


Unlock:

```
STUR XZR, [X20,#0] // free lock
```



Chapter 2 — Instructions: Language of the Computer — 57

Translation and Startup

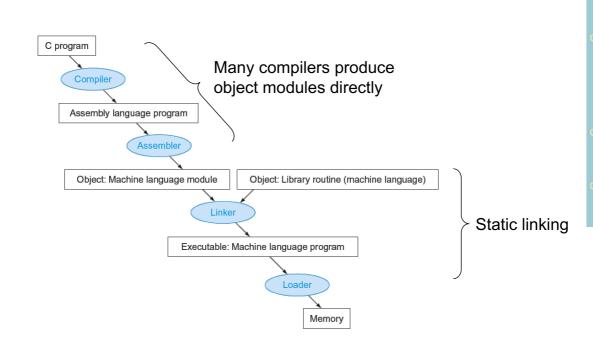

Producing an Object Module

- Assembler (or compiler) translates program into machine instructions
- Provides information for building a complete program from the pieces
 - Header: described contents of object module
 - Text segment: translated instructions
 - Static data segment: data allocated for the life of the program
 - Relocation info: for contents that depend on absolute location of loaded program
 - Symbol table: global definitions and external refs
 - Debug info: for associating with source code



Chapter 2 — Instructions: Language of the Computer — 59

Linking Object Modules

- Produces an executable image
 - 1. Merges segments
 - 2. Resolve labels (determine their addresses)
 - 3. Patch location-dependent and external refs
- Could leave location dependencies for fixing by a relocating loader
 - But with virtual memory, no need to do this
 - Program can be loaded into absolute location in virtual memory space



Loading a Program

- Load from image file on disk into memory
 - 1. Read header to determine segment sizes
 - 2. Create virtual address space
 - Copy text and initialized data into memory
 - Or set page table entries so they can be faulted in
 - 4. Set up arguments on stack
 - 5. Initialize registers (including SP, FP)
 - 6. Jump to startup routine
 - Copies arguments to X0, ... and calls main
 - When main returns, do exit syscall



Chapter 2 — Instructions: Language of the Computer — 61

Dynamic Linking

- Only link/load library procedure when it is called
 - Requires procedure code to be relocatable
 - Avoids image bloat caused by static linking of all (transitively) referenced libraries
 - Automatically picks up new library versions

Lazy Linkage

LDUR LDUR Data Data Indirection table Stub: Loads routine ID, Text Jump to linker/loader LDA Linker/loader code Dynamic linker/loader Remap DLL routine Data/Text Text Dynamically DLL routine DLL routine mapped code BR


(a) First call to DLL routine



Chapter 2 — Instructions: Language of the Computer — 63

(b) Subsequent calls to DLL routine

Starting Java Applications

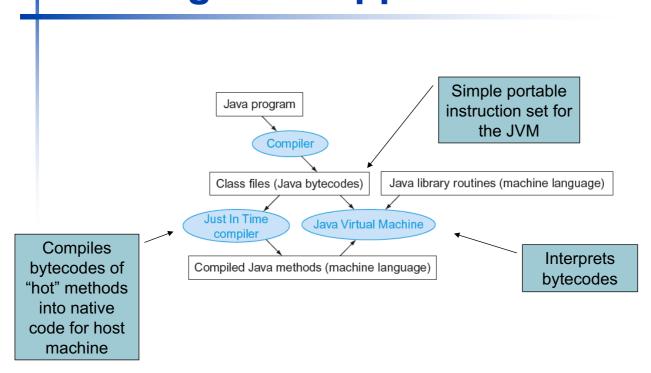

C Sort Example

- Illustrates use of assembly instructions for a C bubble sort function
- Swap procedure (leaf)

```
void swap(long long int v[],
long long int k)
{
  long long int temp;
  temp = v[k];
  v[k] = v[k+1];
  v[k+1] = temp;
}
```

v in X0, k in X1, temp in X9

MORGAN KAUFFANN

Chapter 2 — Instructions: Language of the Computer — 65

The Procedure Swap

The Sort Procedure in C

MORGAN KAUJIMANN

Chapter 2 — Instructions: Language of the Computer — 67

The Outer Loop

Skeleton of outer loop:

The Inner Loop

Skeleton of inner loop:

```
• for (i = i - 1; i >= 0 \&\& v[i] > v[i + 1]; i -= 1) {
     SUBI X20, X19, #1 // j = i - 1
for2tst: CMP X20,XZR
                            // compare X20 to 0 (j to 0)
                            // go to exit2 if X20 < 0 (j < 0)
     B.LT exit2
     LSL X10, X20, #3
                            // \text{ reg } x10 = j * 8
     ADD X11, X0, X10
                            // \text{ reg } X11 = v + (j * 8)
     LDUR X12, [X11,#0]
                            // \text{ reg } X12 = v[j]
     LDUR X13, [X11,#8]
                            // \text{ reg } X13 = v[j + 1]
     CMP X12, X13
                            // compare X12 to X13
     B.LE exit2
                            // go to exit2 if X12 \le X13
     MOV X0, X21
                            // first swap parameter is v
     MOV X1, X20
                            // second swap parameter is j
                            // call swap
     BL swap
     SUBI X20, X20, #1
                            // j -= 1
     B for2tst
                            // branch to test of inner loop
  exit2:
```



Chapter 2 — Instructions: Language of the Computer — 69

Preserving Registers

Preserve saved registers:

```
      SUBI SP,SP,#40
      // make room on stack for 5 regs

      STUR LR,[SP,#32]
      // save LR on stack

      STUR X22,[SP,#24]
      // save X22 on stack

      STUR X21,[SP,#16]
      // save X21 on stack

      STUR X20,[SP,#8]
      // save X20 on stack

      STUR X19,[SP,#0]
      // save X19 on stack

      MOV X21, X0
      // copy parameter X0 into X21

      MOV X22, X1
      // copy parameter X1 into X22
```

Restore saved registers:

```
exit1: LDUR X19, [SP,#0] // restore X19 from stack

LDUR X20, [SP,#8] // restore X20 from stack


LDUR X21,[SP,#16] // restore X21 from stack

LDUR X22,[SP,#24] // restore X22 from stack


LDUR X30,[SP,#32] // restore LR from stack

SUBI SP,SP,#40 // restore stack pointer
```

Effect of Compiler Optimization

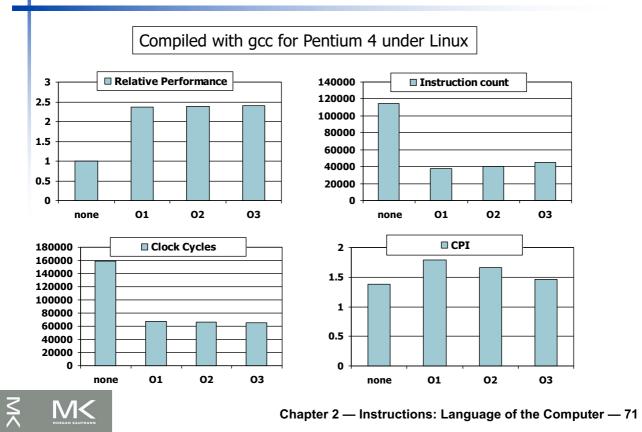

Effect of Language and Algorithm

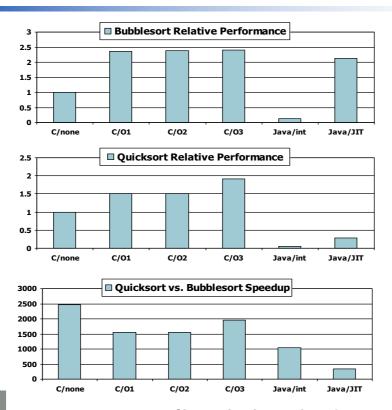

Lessons Learnt

- Instruction count and CPI are not good performance indicators in isolation
- Compiler optimizations are sensitive to the algorithm
- Java/JIT compiled code is significantly faster than JVM interpreted
 - Comparable to optimized C in some cases
- Nothing can fix a dumb algorithm!



Chapter 2 — Instructions: Language of the Computer — 73

Arrays vs. Pointers

- Array indexing involves
 - Multiplying index by element size
 - Adding to array base address
- Pointers correspond directly to memory addresses
 - Can avoid indexing complexity

Example: Clearing an Array

```
clear1(int array[], int size) {
                                           clear2(int *array, int size) {
 for (i = 0; i < size; i += 1)
                                             for (p = &array[0]; p < &array[size];</pre>
   array[i] = 0;
                                                  p = p + 1)
                                               p = 0;
                      // i = 0
                                                                   // p = address of
      MOV X9,XZR
                                                  MOV X9, X0
loop1: LSL x10, x9, \#3 // x10 = i * 8
                                                                   // array[0]
       ADD X11,X0,X10 // X11 = address
                                                  LSL X10,X1,#3
                                                                   // x10 = size * 8
                      // of array[i]
                                                  ADD X11, X0, X10 // X11 = address
       STUR XZR, [X11,#0]
                                                                   // of array[size]
                      // array[i] = 0
                                           loop2: STUR XZR,0[X9,#0]
       ADDI x9, x9, #1 // i = i + 1
                                                                  // Memory[p] = 0
                      // compare i to
       CMP X9,X1
                                                  ADDI X9, X9, \#8 // p = p + 8
                      // size
                                                  CMP X9,X11
                                                                  // compare p to <</pre>
                      // if (i < size)
       B.LT loop1
                                                                  // &array[size]
                      // go to loop1
                                                  B.LT loop2
                                                                  // if (p <
                                                                  // &array[size])
                                                                  // go to loop2
```

S MS

Chapter 2 — Instructions: Language of the Computer — 75

Comparison of Array vs. Ptr

- Multiply "strength reduced" to shift
- Array version requires shift to be inside loop
 - Part of index calculation for incremented i
 - c.f. incrementing pointer
- Compiler can achieve same effect as manual use of pointers
 - Induction variable elimination
 - Better to make program clearer and safer

ARM & MIPS Similarities


- ARM: the most popular embedded core
- Similar basic set of instructions to MIPS

	ARM	MIPS		
Date announced	1985	1985		
Instruction size	32 bits	32 bits		
Address space	32-bit flat	32-bit flat		
Data alignment	Aligned	Aligned		
Data addressing modes	9	3		
Registers	15 × 32-bit	31 × 32-bit		
Input/output	Memory mapped	Memory mapped		



Chapter 2 — Instructions: Language of the Computer — 77

Instruction Encoding

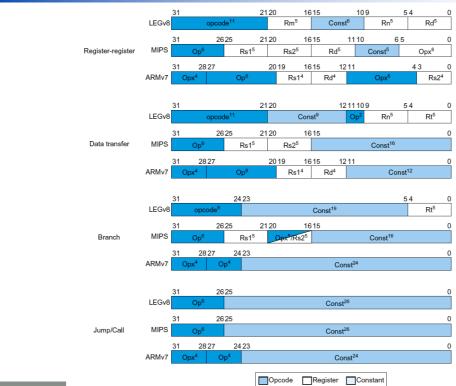

The Intel x86 ISA

- Evolution with backward compatibility
 - 8080 (1974): 8-bit microprocessor
 - Accumulator, plus 3 index-register pairs
 - 8086 (1978): 16-bit extension to 8080
 - Complex instruction set (CISC)
 - 8087 (1980): floating-point coprocessor
 - Adds FP instructions and register stack
 - 80286 (1982): 24-bit addresses, MMU
 - Segmented memory mapping and protection
 - 80386 (1985): 32-bit extension (now IA-32)
 - Additional addressing modes and operations
 - Paged memory mapping as well as segments



Chapter 2 — Instructions: Language of the Computer — 79

The Intel x86 ISA

- Further evolution...
 - i486 (1989): pipelined, on-chip caches and FPU
 - Compatible competitors: AMD, Cyrix, ...
 - Pentium (1993): superscalar, 64-bit datapath
 - Later versions added MMX (Multi-Media eXtension) instructions
 - The infamous FDIV bug
 - Pentium Pro (1995), Pentium II (1997)
 - New microarchitecture (see Colwell, The Pentium Chronicles)
 - Pentium III (1999)
 - Added SSE (Streaming SIMD Extensions) and associated registers
 - Pentium 4 (2001)
 - New microarchitecture
 - Added SSE2 instructions




The Intel x86 ISA

- And further...
 - AMD64 (2003): extended architecture to 64 bits
 - EM64T Extended Memory 64 Technology (2004)
 - AMD64 adopted by Intel (with refinements)
 - Added SSE3 instructions
 - Intel Core (2006)
 - Added SSE4 instructions, virtual machine support
 - AMD64 (announced 2007): SSE5 instructions
 - Intel declined to follow, instead...
 - Advanced Vector Extension (announced 2008)
 - Longer SSE registers, more instructions
- If Intel didn't extend with compatibility, its competitors would!
 - Technical elegance ≠ market success



Chapter 2 — Instructions: Language of the Computer — 81

Basic x86 Registers

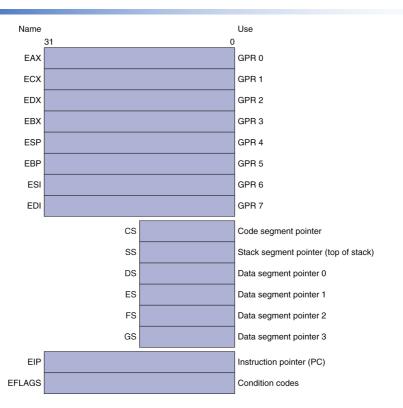



Basic x86 Addressing Modes

Two operands per instruction


Source/dest operand	Second source operand				
Register	Register				
Register	Immediate				
Register	Memory				
Memory	Register				
Memory	Immediate				

- Memory addressing modes
 - Address in register
 - Address = R_{base} + displacement
 - Address = R_{base} + 2^{scale} × R_{index} (scale = 0, 1, 2, or 3)
 - Address = R_{base} + 2^{scale} × R_{index} + displacement



Chapter 2 — Instructions: Language of the Computer — 83

x86 Instruction Encoding

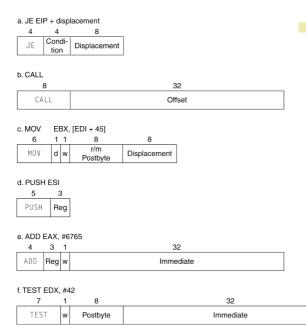

- Variable length encoding
 - Postfix bytes specify addressing mode
 - Prefix bytes modify operation
 - Operand length, repetition, locking, ...

Implementing IA-32

- Complex instruction set makes implementation difficult
 - Hardware translates instructions to simpler microoperations
 - Simple instructions: 1–1
 - Complex instructions: 1-many
 - Microengine similar to RISC
 - Market share makes this economically viable
- Comparable performance to RISC
 - Compilers avoid complex instructions




Chapter 2 — Instructions: Language of the Computer — 85

Fallacies

- Powerful instruction ⇒ higher performance
 - Fewer instructions required
 - But complex instructions are hard to implement
 - May slow down all instructions, including simple ones
 - Compilers are good at making fast code from simple instructions
- Use assembly code for high performance
 - But modern compilers are better at dealing with modern processors
 - More lines of code ⇒ more errors and less productivity

Fallacies

- Backward compatibility ⇒ instruction set doesn't change
 - But they do accrete more instructions

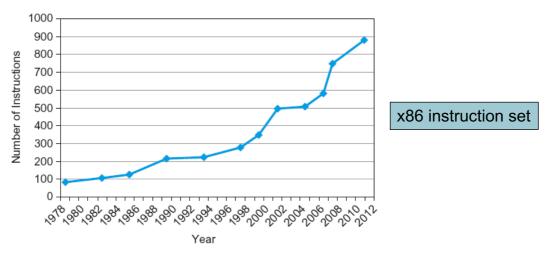



Chapter 2 — Instructions: Language of the Computer — 87

Pitfalls

- Sequential words are not at sequential addresses
 - Increment by 4, not by 1!
- Keeping a pointer to an automatic variable after procedure returns
 - e.g., passing pointer back via an argument
 - Pointer becomes invalid when stack popped

Concluding Remarks

- Design principles
 - 1. Simplicity favors regularity
 - 2. Smaller is faster
 - 3. Make the common case fast
 - 4. Good design demands good compromises
- Layers of software/hardware
 - Compiler, assembler, hardware
- LEGv8: typical of RISC ISAs
 - c.f. x86



Chapter 2 — Instructions: Language of the Computer — 89

Concluding Remarks

- Additional ARMv8 features:
 - Flexible second operand
 - Additional addressing modes
 - Conditional instructions (e.g. CSET, CINC)

Class	Loads/Stores		Operations		Branches		Total	
	AL	ML	AL	ML	AL	ML	AL	ML
Integer	49	145	74	105		_	123	250
Floating Point & Int Mul/Div	0	18	63	156		_	63	174
SIMD/Vector	16	166	229	371		_	245	537
System/Special	11	55	52	40		_	63	95
_	_	_			23	14	23	14
Total	76	384	418	672	23	14	517	1070