CE394M: Tresca and Mohr-Coulomb

Krishna Kumar

University of Texas at Austin

krishnak@utexas.edu

Overview

Constitutive modeling

2 Tresca model

Stress invariants

- The magnitudes of the component of the stress vector depend on the chosen direction of the coordinate axes (in 3D: 6 variables).
- Principal stresses always act on the same planes and have the same magnitude (invariant to the coordinate axes), but still need to define the corresponding orientations (in 3D: 6 variables).
- For isotropic materials, it is very convenient to work with alternative invariant quantities which are combinations of principal stresses.

Stress invariants

- Mean effective stress $p = \frac{1}{3}(\sigma_I + \sigma_{II} + \sigma_{III})$
- Deviatoric stress: $J = \frac{1}{\sqrt{6}} \sqrt{(\sigma_I \sigma_{II})^2 + (\sigma_{II} \sigma_{III})^2 + (\sigma_{III} \sigma_I)^2}$
- ullet Lode's angle $heta= an^{-1}\left[rac{1}{\sqrt{3}}\left(2rac{(\sigma_{II}-\sigma_{III})}{\sigma_{I}-\sigma_{III}}-1
 ight)
 ight]$

Principal stresses can be expressed in terms of invariants:

$$\begin{bmatrix} \sigma_{I} \\ \sigma_{II} \\ \sigma_{III} \end{bmatrix} = p \begin{bmatrix} 1 \\ 1 \\ 1 \end{bmatrix} + \frac{2}{\sqrt{3}} J \begin{bmatrix} \sin\left(\theta + \frac{2\pi}{3}\right) \\ \sin\theta \\ \sin\left(\theta - \frac{2\pi}{3}\right) \end{bmatrix}$$

Overview

Constitutive modeling


Tresca model

Tresca model

Simulation of undrained behavior of saturated clay Failure criteria:

$$\tau_f = s_u$$

where τ_f is the shear stress at failure. s_u is the undrained strength.

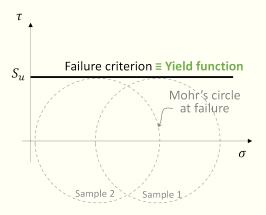


Tresca model

Yield function


$$F(\sigma, W_p) = \sigma_I - \sigma_{III} - 2s_u = 0$$

= $J\cos\theta - s_u = 0$

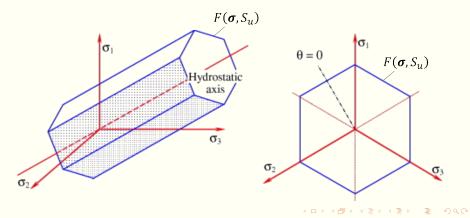

Tresca model

- The model is intended to predict the undrained behavior of saturated clay, hence it should predict zero volumetric strains.
- This fact constrains the plastic potential, and an associated flow rule should be considered.
- In general, this is a perfectly plastic model (no hard/soft law)
- Parameters required (3): s_u, E_u, ν_u .

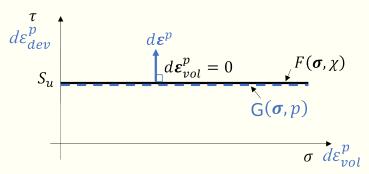

Overview


Constitutive modeling


2 Tresca model


Mohr-Coulomb model

Failure criteria: $\tau_f = c' = \sigma_f' \tan \phi'$.

$$F(\sigma', c', \phi') = \frac{1}{2}(\sigma'_I - \sigma'_{III}) - \frac{1}{2}(\sigma'_I + \sigma'_{III})\sin\phi' - c'\cos\phi' = 0.$$

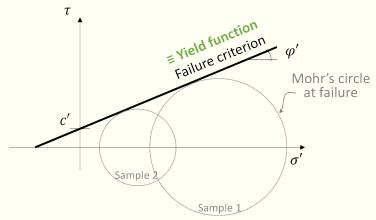

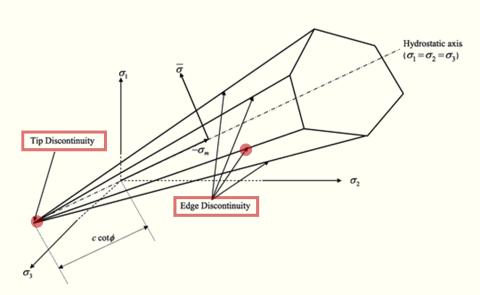


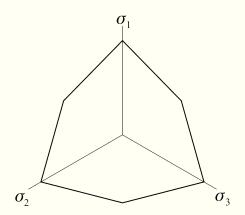

Mohr-Coulomb: flow rule?

Can we consider an associative flow rule? Failure criteria:

$$F(\sigma', c', \phi') = G(\sigma', c', \phi')$$

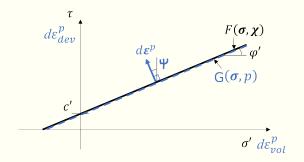

 ε^p is inclined at an angle of ϕ' , and indicates negative (tensile) plastic strains. This results in a dilatant volumetric plastic strain $(d\varepsilon^p_{vol})$, in which the angle of dilation ψ is equal to the effective friction angle (ϕ') .

Mohr-Coulomb: Drawbacks (associative)


- **①** The magnitude of the plastic volumetric strains $(d\varepsilon)$ is much larger than that observed in real soils.
- Once the soil yields it will dilate for ever! (note: real soil, which may dilate initially on meeting the failure surface, will often reach a constant volume condition at large strains).

Solutions:

- \bullet Adopt a non-associated flow rule with a more realistic angle of dilation ψ
- @ Allow angle of dilation vary with plastic strain (hardening/softening law) $\psi = f(\varepsilon)$

Mohr-Coulomb: non-associative model


Consider a non-associated model with $\psi=0$. In which case $d\varepsilon_{vol}^{p}=0$. Parameters (5): c', ϕ', ψ, E, ν .

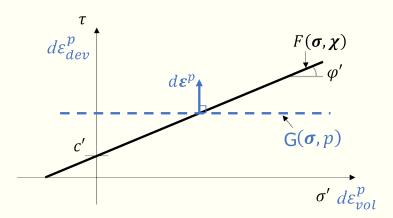

Mohr-Coulomb: Yield and Potential fn


Yield fn: $F = \sigma_1' - \sigma_3' N_\phi + 2c\sqrt{N_\phi} = 0$., where $N_\phi = \frac{1+\sin\phi'}{1-\sin\phi'}$ Potential fn: $G = \sigma_1' - \sigma_3' N_\psi + constant = 0$., where $N_\psi = \frac{1+\sin\psi'}{1-\sin\psi'}$



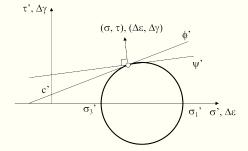

Mohr-Coulomb: plastic strains

$$\begin{split} d\varepsilon_1^p &= \lambda \frac{\partial G}{\partial \sigma_1} = \lambda \cdot 1 = \lambda \\ d\varepsilon_2^p &= \lambda \frac{\partial G}{\partial \sigma_2} = \lambda \cdot 0 = 0 \quad \text{Zero strain increment in 2-dir} \\ d\varepsilon_3^p &= \lambda \frac{\partial G}{\partial \sigma_3} = \lambda \cdot (-N_\psi) = -\lambda N_\psi \end{split}$$

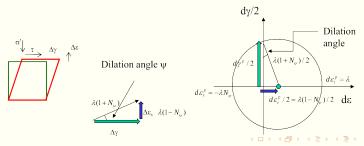



Interpretation of drained TXC


Plastic volumetric strain:

$$\begin{split} d\varepsilon_{v}^{p} &= d\varepsilon_{1}^{p} + d\varepsilon_{2}^{p} + d\varepsilon_{3}^{p} = \lambda(1 - N_{\psi}) \\ &= \lambda \frac{2\sin\psi}{1 - \sin\psi} \\ \frac{d\varepsilon_{v}^{p}}{d\varepsilon_{1}^{p}} &= \frac{\frac{2\sin\psi}{1 - \sin\psi}}{\lambda} = \frac{2\sin\psi}{1 - \sin\psi} \end{split}$$

Note that ψ changes with plastic strain in real soils

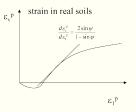


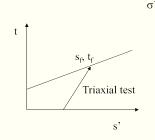

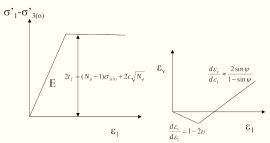

Mohr-Coulomb: Tension cut-off

- For c = 0, the standard Mohr-Coulomb criterion allows for tension. Allowable stress increase with cohesion.
- ② In reality, soil can sustain none or only very small tensile stresses.
- This behavior is usually included by specifying a tension cut-off, which is equivalent to include an additional yield surface: $F(\sigma, \sigma_t) = \sigma_i \sigma_t = 0$.

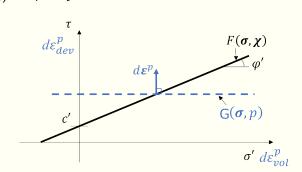

2020-04-18

CE394M: Tresca & MC

Mohr-Coulomb model

-Mohr-Coulomb: Tension cut-off

Mohr-Coulomb: Tension cut-off

9 For c = 0, the standard Make Coulomb existerion allows for tension

- For c = 0, the standard Mohr-Coulomb criterion allows for tension Allowable stress increase with cohesion.
- In reality, soil can sustain none or only very small tensile stresses.
 This behavior is usually included by specifying a tension cut-off, which is equivalent to include an additional yield surface:
 E(m, m) = m = m = m = m
- $F(\sigma, \sigma_t) = \sigma_t \sigma_t = 0.$ $dx_{ter}^T = F(\sigma, \chi)$



Drucker Prager

Yield Surface - linear pressure dependent

$$F=q-pM=0$$

Mohr-Coulomb model assumes that failure is independent of the value of the intermediate principal stress. The Drucker-Prager model does not.

Plastic potential - Non-associated flow rule

$$G = q - (p_c \frac{M}{M^p} - p_c + p)M^p = 0$$

$$G = q - (p_c \frac{M}{M^p} - p_c + p)M^p = 0$$

$$\varphi = 0$$

 Ψ =tan⁻¹M^p is called dilation angle Ψ = 0, the material is non-dilational. Ψ = tan⁻¹M, the material is associated.

Drucker Prager