CE394M: Stress-strain-strength relationship of clay

Krishna Kumar

University of Texas at Austin

April 24, 2020

Overview

Stress-strain-strength relationship

Simple shear

L-soil v D-soil

L-soils:

- yield at sub-critical stress ratios
- looser than their critical density at their projected yield stress
- lightly over-consolidated at yield
- contractile when sheared slowly
- "wet" when sheared quickly
- tend to strain-harden to a critical state if sheared beyond yield point

D-soils:

- fail at super-critical stress ratios
- denser than their critical density at their projected yield stress
- heavily over-consolidated at yield
- dilatant when sheared slowly
- "dry" when sheared quickly
- tend to strain-soften to a critical state if sheared beyond yield point

L-soils:

• yield at sub-critical stress ratios

looser than their critical density at their projected yield stress

contractile when sheared slowly
 "wet" when sheared quickly

tend to strain-harden to a critical state if sheared beyond yield point
D-soils:
 fail at super-critical stress ratios

denser than their critical density at their projected yield stress

heavily over-consolidated at yield
 dilatant when sheared slowly

dilatant when sheared slowly
 "dry" when sheared quickly

· lightly over-consolidated at yield

"dry" when sheared quickly
 tend to strain-soften to a critical state if sheared beyond yield point


The terms "wet" and "dry" come from the idea of working a specimen of soil by hand. On the wet side of critical state the soil skeleton is too loosely compacted to support pressure stress—such stress, if applied (such as by squeezing the soil by hand) passes immediately into the pore water and thus causes this water to bleed out of the specimen and wet the hands. The opposite effect occurs when the soil is on the dry side of critical state.

Overview


1 Stress-strain-strength relationship

Simple shear


Simple shear

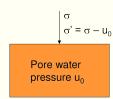

Initial consolidation Void ratio e₀

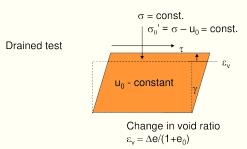


Undrained test

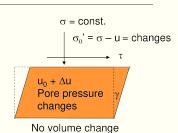


· ·

Simple shear: Normally Consolidated Clay - L-soil

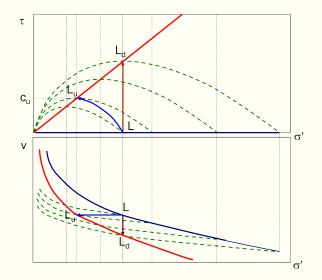

Drained shear: $L \to L_d$ and $\delta u = 0$. Undrained shear: $L \to L_u$ and $\delta v = 0$.

NCL: L-soil (drained v undrained)

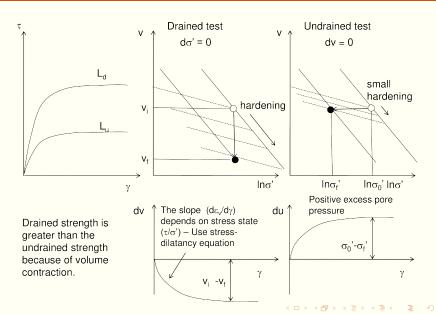

NCL: L-soil (drained v undrained)




Note that the stack of $\kappa-$ lines with their associated Cam Clay yield surfaces creates a 3D boundary surface in (τ, σ', v) space.

State paths starting inside the boundary surface begin as elastic until they hit the surface. Then they are forced to follow the boundary surface, obeying whatever test constraint is imposed (undrained v = const, or drained $\sigma'=$ const) until the path reaches the critical state line. Then the soil shears at constant (τ,σ',ν) state.


VCL: $d\varepsilon_p^e + d\varepsilon_p^p$ Elasto-plastic yielding RCL: $d\varepsilon_p^e$ only elastic Isotropic loading along VCL (q=0) can develop plastic strains: essentially hardening cap.

VCL:
$$N - \lambda \ln p' \quad \eta = 0 \text{ RCL: } \Gamma - \lambda \ln p' \quad \eta = M \ N = \Gamma + (\lambda - \kappa)$$

SS: LOC-soil (L-soils)

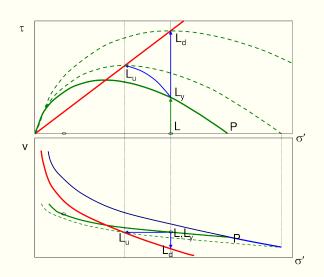



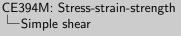


SS: LOC-soil (L-soils)




In undrained conditions, the effective stress path will be $d\sigma'=0$ during elastic response.

$$d\sigma' = (vp'/\kappa)d\varepsilon_v$$
.
 $d\varepsilon_v = 0$ hence $d\sigma' = 0$.


SS: LOC-soil (L-soils) (drained v undrained)

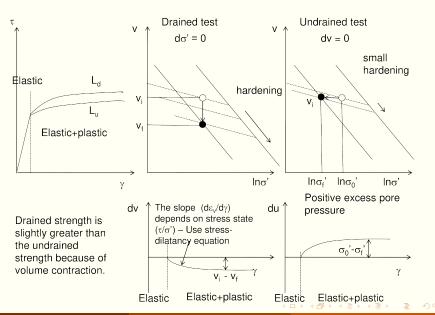


SS: HOC-soil (D-soils)

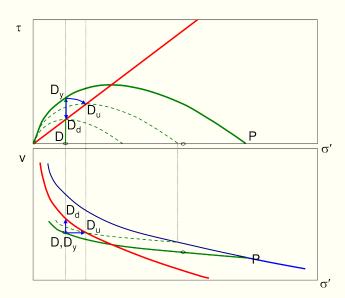

SS: HOC-soil (D-soils) (drained v undrained)

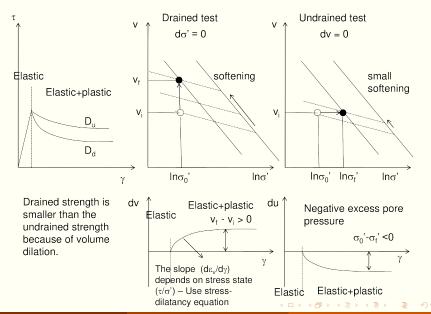


TXC: Drained strength and volume at failure using CS

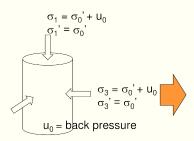

Initial consolidation condition

$$e_0 = Gsw_0$$

Increase in σ_1

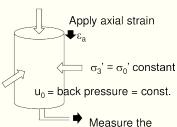


Measure the amount of water coming in or out


 ε_{v}

Changes in void ratio $\varepsilon_v = de/(1+e_0)$


TXC: Drained (Mohr-Coulomb ESA)

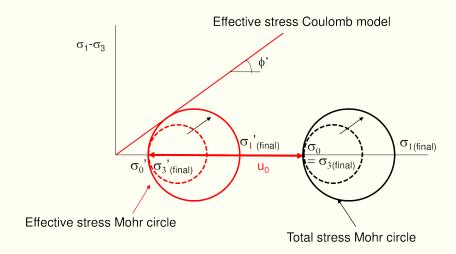

TXC: Drained Cam-Clay yield and failure

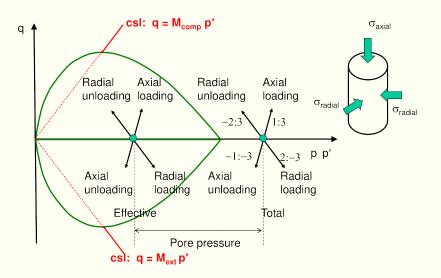

TXC Drained (axial loading)

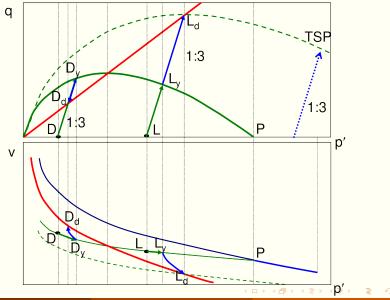

CE394M: Stress-strain-strength


—Simple shear

—TXC Drained (axial loading)




The total stress path of triaxial compression has a slope of 1:3. In drained test, the pore pressure is kept constant. Hence, the effective stress path will have a slope of 1:3.


TXC Drained (axial loading)

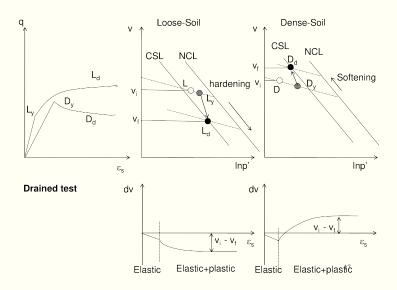

TXC: Undrained strength and excess PWP at failure

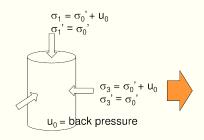

Increase in σ_1 and σ_1 '= σ_1 -u

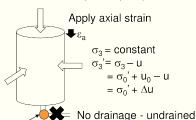

Measure pore pressure (u) by a pressure transducer


Excess pore pressure $\Delta u = u - u_0$

e₀ or w₀ is kept constant


Initial consolidation condition

$$e_0 = Gsw_0$$

TXC: Undrained (Mohr-Coulomb ESA)

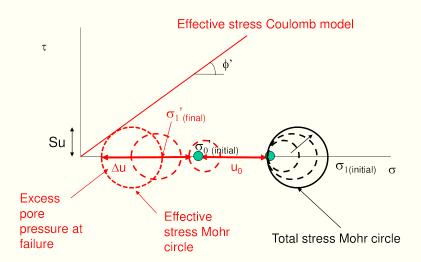

TXC Undrained (axial loading)

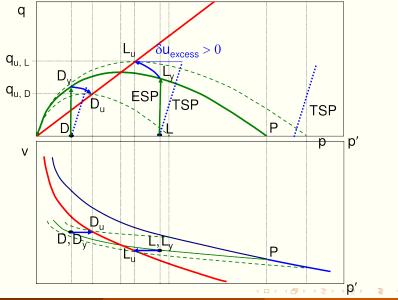

☐TXC Undrained (axial loading)




Elastic deformation: $dp' = Kd\varepsilon_v$ and $dq = 3Gd\varepsilon_s$.

$$K = rac{vp'}{\kappa}$$
 $G = rac{3K(1-2
u)}{2(1+
u)}$


In undrained conditions, the effective stress path will be $dp^\prime=0$ during elastic response.


$$d\varepsilon_v = 0$$
 $dp' = 0$


TXC Undrained (axial loading)

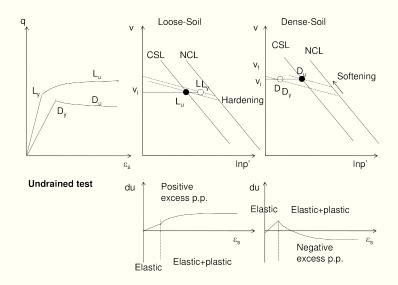


Critical state concept

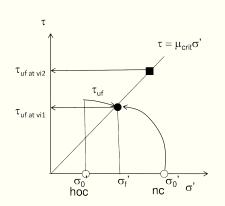

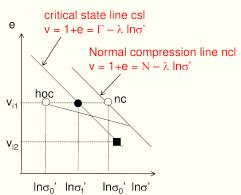

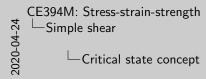

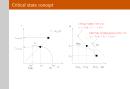

The critical state concept shows that undrained shear strength is purely a function of initial void ratio (or water content).