# **ELASTIC3rd Documentation**

Release 1.0

**ELASTIC3rd Developers** 

## Contents

1	Introduction1.1 Features1.2 Features under developing			
2	Installation2.1 Requirements2.2 Installation	3 3 3		
3	Get Started 3.1 Simplest way to run 3.2 Inputs 3.3 Calculation 3.4 Post 3.5 Outputs	7		
4	Theory Background	11		
5	5.2 Submit jobs	13 13 14 14		
6	Citing	17		
7	Author Information 1			
8	Indices and tables			

### Introduction

Elastic3rd is an open source code to calculate the higher order elastic constants(HOECs) of materials from first principles.

### 1.1 Features

- Support strain-energy method for calculating TOECs, FOECs for all symmetry and FFOECs for cubic
- Support post processing by considering higher order effect
- Support CASTEP(in Materials Studio, both under Windows and Linux) and VASP
- Support python 2.7.x and pyython 3.5 +

### 1.2 Features under developing

- Strain-stress method
- Separate elastic constants method (ref. PRL. 121, 216001, 2018)

Installation

## 2.1 Requirements

python, numpy, scipy, matplotlib

### 2.2 Installation

- by pip pip install elastic3rd
- by setup.py

Download the code and entre the folder *ELASTIC3rd/src*, and then run python setup.py install

Get Started

## 3.1 Simplest way to run

- Prepare the INPUT file and the input file for first principlec code
- Enter the folder
- ullet Simply run elastic3rd run

## 3.2 Inputs

The inputs for Elastic3rd can be divided into two parts. The first one is the INPUT file, and the second is the input files for first princples code.

#### 3.2.1 INPUT

Parameters	Default	Comments
BaseName	Si	The folder name of the result. In addition, For CASTEP, it must equals to the name of <i>cell</i> and <i>param</i> file For VASP, no above required
CrystalType	Cubic1	The symmetry of the crystal. It should be one of the triclinic or n, monoclinic or m, orthorhombic or o, tetragonal1 or t1 tetragonal2 or t2, rhombohedral1 or r1, rhombohedral2 or r2 hexagonal1 or h1, hexagonal2 or h2, cubic1 or c1, cubic2 or c2
Ord	3	The order of elastic constants
EnergyCode	CASTEP	The first principles code, currently support CASTEP and VASP
EnergyRun	1	The way to run the first principles code
		1 is the default way. For CASTEP: RunCASTI For VASP: mpirun -np NP vasp_std  0 means user defined. It will read the energyru And it can be overwrite by elastic3rd.energy.glue.write_energyrun(RunStr) function
MaxStrain	5	The maximum strain, in unit of %. e.g. 5 means the strain range is -5% to 5%
STEPS	5	The number of points in each strain mode
NP	1	The number of cores used in the first principles codes

### 3.2.2 First principles inputs

- CASTEP For CASTEP, two files are required for calculating, *BaseName.cell* and *BaseName.param*. For details, ref. CASTEP files .
- VASP To run VASP, four files are required: *INCAR*, *POSCAR*, *KPOINTS* and *POTCAR*. For details, ref. VASP files .

#### 3.3 Calculation

#### 3.3.1 Using CASTEP or VASP

Currently, Elastic3rd support CASTEP and VASP to calculate the energy or stress. Hence, the user can call vasp or castep by setting the INPUT file.

Note: The CASTEP is tested using the CASTEP module in Materials Studio. By default, the user should provide RunCASTEP.bat (windows) or RunCASTEP.sh (linux) in current folder. Usually, this file loacted in *Materials\_Studio\_install\_pathetcCASTEPbin* 

For VASP, it runs vasp by *mpirun -np NP vasp\_std*. So, please ensure that mpirun and vasp\_std can be found in yout PATH.

#### 3.3.2 Using other first principles code

If the user want to use other first principles code to calculate the energy of stress, the user only need to prepare the following thing:

- write a python file named with the code's name(e.g. qe.py, lower required) under elastic3rd/energy/ In this file, the user need to write the following functions
  - get\_base\_vec(BaseName): this function get the lattice vector from the code's input file
  - write\_base\_vec(BaseName, BaseVec): this function write out the lattice vector to the code's input file
  - run(NP, BaseName): this function return the string to run the code
  - get\_energy(BaseName): this function get the energy from the code's output file
  - copy\_files(BaseName, Path): this function copy the required files of the code
- Then in the INPUT file, the file can call the code by specify "EnergyCode QE"

#### 3.4 Post

The SOECs and TOECs (only taking second and third order effect into consideration) are printed in the log file on the screen.

If the author want to taken higher-order effect into consideration, the user can run *elastic3rd post* command in the folder where the job submitted or use *Elastic3rdPost.py* script in the *example* folder

For *elastic3rd post* command, please use -h for detail help.

For test, the user can run *elastic3rd post* in the *example/Si/CASTEP* folder directly.

### 3.5 Outputs

#### 3.5.1 The structure of outputs

All the output are stored in the folder named BaseName, of which the value is set in INPUT file. The following is the structure of the results.

3.3. Calculation 7

```
Si
-INPUT
-EEnergy.txt
-Mode0
-Mode1
-Energy_Mode.txt
-Strain-2.0
-Energy_Strain.txt
...
-Strain-4.0
...
-Mode2
-...
```

#### 3.5.2 Output files

This section gives an explanation for each file generated by Elastic3rd.

File name	Comments
INPUT	A backup of INPUT file
EEnergy.txt	The energy of each strain mode(each column) and each strain(each row)
Energy_Strain.txt	The energy of single strain, in which there are several values in different unit
Energy_Mode.txt	The eneargy of single strain mode. In unit of eV

Folders	Comments
Mode0	This folder contains the result of undeformed structure
ModeN	This folder contains the result of differen strain modes
StrainN	This folder contains the result of different strains

Note: here N is integer and N>0

#### 3.5.3 Log file

By default, the log file is not saved, but print in the screen. And it can be saved by re-direction.

It can be divided into five parts

• Part1: the logo part

(continues on next page)

(continued from previous page)

#### • Part2: The summary of the calculation

```
The Runing mode is: NEW
The BaseName is: Si
The crystal symmetry is: c1
The order of elastic is: 3.0
The code for calculating the energy: CASTEP
The maximum of the strain: 8.0
The steps run in every mode: 9.0
The core used in energy calculate: 8.0
```

#### • Part3: the result of intial structure

```
BaseVec:
  5.4647128853 0.0000000210 -0.0000000454
   -0.000000000 5.4647128382
                            -0.0000000222
   0.0000000000 0.000000000
                           5.4647129020
Lattice Parameter:
              c alpha beta gamma
  a b
5.464713 5.464713 5.464713 90.000 90.000 90.000
Volume: 163.193194972
Energy of undeformed structure:
    eV Hartree
                            kJ/mol
                                          kcal/mol
-858.6574758785 -31.5550611783 -82847.8330874176 -19801.1085892908
```

#### • Part4: the result of different strains and strain modes

```
========Deformed Crystal==========
______
Start calculating Mode 1
Start calculating Strain -8.0 in Mode 1
[[0.84 0. 0. ]
[0. 1. 0.]
[0. 0. 1. ]]
BaseVec:

      5.0084920896
      0.0000000210
      -0.0000000454

      0.0000000000
      5.4647128382
      -0.0000000222

      0.0000000000
      0.0000000000
      5.4647129020

Lattice Parameter:
                         C
                                 alpha beta gamma
  a b
5.008492 5.464713 5.464713 90.000 90.000 90.000
Volume: 149.569033772
Energy:
              Hartree kJ/mol
    eV
                                                                 kcal/mol
-858.0935122952 \quad -31.5343359114 \quad -82793.4188860286 \quad -19788.1032822074
End of Strain -8.0 in Mode 1
```

(continues on next page)

3.5. Outputs 9

(continued from previous page)

```
Start calculating Strain -6.0 in Mode 1
[[0.88 0. 0.]
[0. 1. 0.]
[0. 0. 1.]]
BaseVec:

      5.1263550880
      0.0000000210
      -0.0000000454

      0.0000000000
      5.4647128382
      -0.0000000222

      0.000000000
      5.4647128382
      -0.00000000222

     0.000000000
                        0.000000000
                                              5.4647129020
Lattice Parameter:
   a b
                         c alpha beta gamma
5.126355 5.464713 5.464713 90.000 90.000 90.000
Volume: 153.088786718
Energy:
       eV
                                                 kJ/mol
                                                                 kcal/mol
                          Hartree
-858.3477769585 \quad -31.5436799598 \quad -82817.9516909908 \quad -19793.9667636885
End of Strain -6.0 in Mode 1
                           . . .
```

#### • Part5: the post process part

### Theory Background

The strain-energy method to calculate TOECs is based on the conituumn elasticity theory. The base equation is as follows (note: the Einstein summation notation is used in the following equations):

$$E=E_0+\frac{1}{2!}V_0C_{ijkl}\eta_{ij}\eta_{kl}+\frac{1}{3!}V_0C_{ijklmn}\eta_{ij}\eta_{kl}\eta_{mn}+\dots$$

Where

- E is the energy of the deformed structure
- $E_0$  is the energy of the initial structure
- $V_0$  is the volume of the initial structure
- $C_{ijkl}$  is SOECs
- $C_{ijklmn}$  is TOECs
- $\eta_{ij}$  is the Lagrangian strain

And the Lagrangian strain can be written as follows:

$$\eta_{ij} = \frac{1}{2}(F_{ki}F_{kj} - \delta_{ij})$$

The F is the deformation gradient, and can be expressed by the lattic vector of deformed structure(r') and intial structure (r).

$$r'=Fr$$

when using symmetrical strain, the deformation gradient can be expressed by the Lagrangian strain.

$$F = Q\sqrt{\lambda}Q^{T}$$

$$Y = 2\eta + I$$

$$Q = (y_{1}, y_{2}, y_{3})$$

$$\lambda = diag(\lambda_{1}, \lambda_{2}, \lambda_{3})$$

where  $y_i$  and  $\lambda_i$  are the eigenvector and eigenvalue of Y, I is the identity matrix.

For each strain mode, we only adjust the amplitude. Hence, we can express the strain as a function of strain amplitude  $\eta$ , then we have

$$\frac{E - E_0}{V_0} = \frac{1}{2}A_2\eta^2 + \frac{1}{6}A_3\eta^3 + O(\eta^4)$$

Finally, we can choose different strain modes, then get different equations about TOECs and SOECs. By solving the equations, we can get the value of SOECs and TOECs.

Examples

### 5.1 Help on the elastic3rd command

There are two command to submit jobs or do post process.

• elastic3rd run command

#### • elastic3rd post command

(continues on next page)

(continued from previous page)

```
-fig FIG, --fig FIG Show the fitting fig. Default: 0
-v VOLUME, --volume VOLUME

The volume of initial structure. Default: None
-e ENERGY, --energy ENERGY

The file of the energy result. If None, it will try to find

in current folder or in the

BaseName folder. Default: None
```

### 5.2 Submit jobs

There are several examples in example folder.

For Si and C, both VASP and CASTEP input files are prepared in the folder, and for Mg, only CASTEP input file is prepared.

The user can run these examples by following steps

- 1. For copy right, the author can't provide the RunCASTEP.bat or RunCASTEP.sh (for CASTEP) and POTCAR (for VASP) files. The user should provide these file in the current folder.
- For CASTEP, the user should copy RunCASTEP.bat or RunCASTEP.sh in their Materils Studio installation folder.
- For VASP, the user should provide the POTCAR file
- 2. Submit the job

There are several ways to submit the job.

- Using *elastic3rd run* command.
- Using the *runElastic3rd.py* (in *example* folder) script by running *python runElastic3rd.py*. If the user want to save the log into file, please run *python runElastic3rd.py* >> *Result.txt*
- Submit jobs in queue system. If the user want to run Elastic3rd in queue system, the following is an example. Please note that it assume the python and vasp is exists in the *PATH*

```
#PBS -l nodes=1:ppn=24
#PBS -l walltime=48:00:00
#PBS -l pmem=8gb
#PBS -A open
#PBS -j oe

cd $PBS_O_WORKDIR

python runElastic3rd.py
```

#### **5.3 Post**

There are several ways to do the post processing.

• Using elastic3rd post command

Assumpt that the current folder is the folder where the job has been submitted. When enter the current folder, the user can do the post process by *elastic3rd post* to get the SOECs and TOECs. For more options, please run *elastic3rd post* -h.

For test, the user can run elastic3rd post in the *example/Si/CASTEP* folder directly. It should print the following lines in the screen.

```
ELASTIC3RD version: 2.5.1
Copyright © FGMS @ HIT
BaseVec:
    5.4647128853 0.0000000210 -0.0000000454
    -0.000000000
                   5.4647128382
                                    -0.0000000222
    0.0000000000
                  0.000000000
                                   5.4647129020
Lattice Parameter:
                     С
                            alpha beta
                                           gamma
            h
5.464713 5.464713 5.464713 90.000 90.000 90.000
Volume : 163.1931949715094
[11 12 44]
[153.05111127 65.0171889
                        73.22518077]
[111 112 123 144 155 456]
[-703.9889652 -435.4462948
                          -88.79485798
                                         71.7458725 -257.35598339
 -51.04707056]
```


• Using *Elastic3rdPost.py* script

Change some parameters (e.g. Flag\_Ord) by the user, then run python Elastic3rdPost.py

By running this script, it will print the following thing in the screen and show some figures of fitting result (here only show 1 figure)

```
BaseVec:
                   0.0000000210
                                    -0.0000000454
    5.4647128853
    -0.000000000
                    5.4647128382
                                     -0.0000000222
    0.0000000000
                    0.0000000000
                                     5.4647129020
Lattice Parameter:
            h
                     C
                            alpha
                                    beta
                                            gamma
5.464713 5.464713 5.464713 90.000 90.000 90.000
Volume : 163.1931949715094
[ 77.22101104 -117.33149423]
[ 217.27559666 -670.10928332]
[218.3870861 26.16025386]
[ 227.66199634 -632.04346107]
[ 424.89246807 -1747.1282253 ]
[ 439.3186686 -408.37656319]
[153.05111127 65.01718889 73.22518077]
[-703.98896537 - 435.44629486 - 88.79485803 71.74587404 - 257.35598342
 -51.0470704 1
```

5.3. Post 15

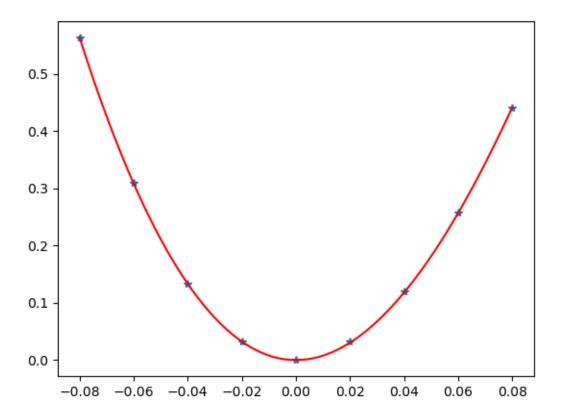

• By calling the *post* or *post\_single* or *post\_mode* from *elastic3rd.post.post* Ref *Elastic3rdPost.py*.

CHAP <sup>*</sup>	TED	h
UHAP		U

Citing

Mingqing Liao, Yong Liu, Shun-li Shang e.t. al. Elastic3rd: A tool for calculating third-order elastic constants from first principles submitted to computer physics communication (2020)

and give the following link: Elastic3rd

18 Chapter 6. Citing

## **Author Information**

Mingqing Liao() liaomq1900127@163.com

FGMS group @ Harbin Institute of Technology(HIT)

## Indices and tables

- genindex
- modindex
- search