

N1 Manual

Dirk Heisswolf

 $\mathrm{May}\ 15,\ 2025$ 

# Revision History

| Date              | Change   |  |  |
|-------------------|--|--|--|
| March 21, 2019    | Initial release  |  |  |
| March 22, 2019    | Changed encoding of ALU operands (see Table 2-1 and Table ??)  |  |  |
| April 17, 2019    | Fixed some copy & paste errors   |  |  |
| April 26, 2019    | Fixes and a description of the branch condition in<br>Section 2.4 "Conditional Branches"   |  |  |
| May 6, 2019       | Added input pbus_rty_i Corrected and specified reference point for relative addresses  |  |  |
| May 7, 2019       | Changed definition of reference point for relative addresses   |  |  |
| October 14 2019   | Added Section 3 "Extensions" Updated Section 7.1 "Integratation Parameters"  |  |  |
| November 11, 2022 | Fixed typos Started chapter Section 8 "Architecture Description"   |  |  |
| January 4, 2024   | Modified "Status and Control Instructions" in Figure 2-1 and<br>Section 2.9 "Function Register Access"   |  |  |
| February 5, 2024  | Extended sections Section 2.7 "Stack Instructions" and Section 3.1 "ROT Extension", including a description of the stack underflow detection   |  |  |
| February 12, 2024 |  |  |  |
| February 29, 2024 | Added Section ?? "??", Section 3.2 "Interrupt Extension", Section ?? "??", and Section 4-2 "Non-standard Forth words" Updated multiplication operators in Table 2-1 Added Section 8.2 "Common Internal Interfaces" and |  |  |
| April 24, 2025    | Section 8.2.1 "Stack Interface"  Removed "Stack Bus" in Section 7.2 "Interfaces"   |  |  |
| May 2, 2025       | Added Section 8.2.2 "Memory Interface"   |  |  |
| May 14, 2025      | Updated Section 8.2.2 "Memory Interface"   |  |  |
| May 15, 2025      | Updated Section 8.1.1 "Naming Convention of Interface Signals" Added Section 8.2.3 "Register Interface" Updated Section 2.9 "Function Register Access" mapping   |  |  |

CONTENTS CONTENTS

# Contents

| 1         | Overview                          | 5  |  |  |  |
|-----------|-----------------------------------|----|--|--|--|
| 2         | Instruction Set                   | 7  |  |  |  |
|           | 2.1 Return from a Call (;)        | 8  |  |  |  |
|           | 2.2 Jump Instructions             | 8  |  |  |  |
|           | 2.3 Call Instructions             | 8  |  |  |  |
|           | 2.4 Conditional Branches          | 8  |  |  |  |
|           | 2.5 Literals                      | 8  |  |  |  |
|           | 2.6 ALU Instructions              | 8  |  |  |  |
|           | 2.7 Stack Instructions            | 10 |  |  |  |
|           | 2.8 Memory Access Instructions    | 14 |  |  |  |
|           | 2.9 Function Register Access      | 14 |  |  |  |
| 3         | Extensions                        | 17 |  |  |  |
|           | 3.1 ROT Extension                 | 17 |  |  |  |
|           | 3.2 Interrupt Extension           | 19 |  |  |  |
|           | 3.3 KEY/EMIT Extension            | 19 |  |  |  |
| 4         | Forth Words                       | 22 |  |  |  |
|           | 4.1 ANS Forth Words               | 22 |  |  |  |
|           | 4.2 Non-Standard Forth Words      | 24 |  |  |  |
| 5         | Stacks                            | 26 |  |  |  |
|           | 5.1 Parameter Stack               | 26 |  |  |  |
|           | 5.2 Return Stack Stack            | 27 |  |  |  |
| 6         | Reset, Exceptions, and Interrupts | 28 |  |  |  |
|           | 6.1 Reset                         | 28 |  |  |  |
|           | 6.2 Exceptions                    | 28 |  |  |  |
|           | 6.3 Interrupts                    | 29 |  |  |  |
| 7         | Integration Guide                 | 30 |  |  |  |
|           | 7.1 Integratation Parameters      | 30 |  |  |  |
|           | 7.2 Interfaces                    | 31 |  |  |  |
|           | 7.3 Target Specific Design Files  | 33 |  |  |  |
| 8         | Architecture Description          | 34 |  |  |  |
|           | 8.1 Design Principles             | 34 |  |  |  |
|           | 8.2 Common Internal Interfaces    | 34 |  |  |  |
|           | 8.3 Instruction Execution Cycle   | 37 |  |  |  |
|           | 8.4 Design Components             | 39 |  |  |  |
| 9         | Verification Status               | 42 |  |  |  |
| 10        | Tool Summary                      | 43 |  |  |  |
|           |                                   |    |  |  |  |
|           | Glossary 44                       |    |  |  |  |
| <b>12</b> | References                        | 47 |  |  |  |

# List of Figures

| 2-1 | Instruction encoding                           |
|-----|--|
| 2-2 | Transition encoding of stack instructions      |
| 2-3 | Transitions to and from the intermediate stack |
| 3-1 | Stack transitions of the ROT extension         |
| 3-2 | Interrupt Enable Register                      |
| 3-3 | KEY? Register                                  |
| 3-4 | EMIT? Register                                 |
| 3-5 | KEY/EMIT Register                              |
| 5-1 | Stack Architecture                             |
| 8-1 | Plain Linear Execution                         |
| 8-2 | Execution of an Extended Instruction           |
| 8-3 | Execution of a Memory Access Instruction       |
| 8-4 | Execution of a Change of Flow Instruction      |
| 8-5 | Program flow interruted by an exception - TBD  |
| 8-6 | Block Diagram                                  |

# List of Tables

| 2-1  | ALU operations  | 9  |
|------|---|----|
| 2-2  | Common stack operations                               | 11 |
| 2-2  | Common stack operations                               | 12 |
| 2-2  | Common stack operations                               | 13 |
| 2-3  | Rules of Stack Underflow Detection                    | 14 |
| 2-4  | Function registers                                    | 14 |
| 2-5  | Parameter Stack Depth Register Bit Description        | 15 |
| 2-6  | Return Stack Depth Register Bit Description           | 15 |
| 2-6  | Return Stack Depth Register Bit Description           | 16 |
| 3-1  | Improved stack operations                             | 18 |
| 3-2  | Rules of Stack Underflow Detection                    | 18 |
| 3-3  | Exception and Interrupt Mask Register Bit Description | 19 |
| 3-4  | Exception and Interrupt Mask Register Bit Description | 20 |
| 3-5  | Exception and Interrupt Mask Register Bit Description | 20 |
| 3-6  | Exception and Interrupt Mask Register Bit Description | 21 |
| 4-1  | ANS Forth words                                       | 22 |
| 4-1  | ANS Forth words                                       | 23 |
| 4-1  | ANS Forth words                                       | 24 |
| 4-2  | Non-standard Forth words                              | 25 |
| 6-1  | Throw codes   | 29 |
| 10-1 | Tool Summary  | 43 |

# 1 Overview

The N1 is a 16-bit stack machine, targeted for low-end FPGA applications. Its instruction set and architecture are designed for efficient execution of Forth code. Here is a summary of the N1's characteristics:

### Memory connection:

- 16-bit Von-Neumann-Architecture
- Separate address space for stack content
- Wishbone interfaces to main and stack memory
- Up to 128KB (main) memory space
- Memory addressable in 16-bit entities only

#### Stacks:

- Two hardware stacks (parameter and return stack)
- Each stack consists of three segments:

# Upper stack:

- Shift registers with selectable shift direction for each individual cell
- Fixed size
  - \* Upper parameter stack: 4 cells
  - \* Upper return stack: 1 cell

### Intermediate stack:

- Buffer with lazy data transfers to and from the lower stack
- Configurable size

#### Lower stack:

- RAM space shared by both stacks
- Stacks grow towards each other
- Up to 128KB in size

### Instruction set:

- Fixed instruction size of 16-bit
- Jumps and calls
  - Indirect addressing
  - Direct addressing within a 32KB window
  - Two bus cycle execution time
  - Return from calls performed concurrently with last instruction
- Conditional branches
  - Direct relative addressing within a 16KB range
  - Two bus cycles of execution time if branch is taken, one cycle if not
- Literals
  - Immediate encoding of literals between -2048 and 2047
  - Literals out of this range requre one additional instruction
- Arithmetic and logic operations
  - Single cycle ALU operations include:

- \* Sum and Difference
- \* Comparisons
- \* Signed and unsigned products
- \* Bitwise logic operations
- \* Milti-bit shifts
- Optional immediate encoding of one operand, using 5-bit encoding
- Stack operations
  - All 1024 stack transitions of the upper stack encodable
- Memory I/O
  - Indirect addressing
  - Direct addressing within a 511B window
  - Two bus cycle execution time if branch is taken, one cycle if not

## **Exceptions:**

- Exception handler invoked by five error conditions:
  - Parameter stack overflow
  - Parameter stack underflow
  - Return stack overflow
  - Return stack underflow
  - Access violations in the (main) address space

# Interrupts:

- $\bullet$  Optional interrupt support through external interrupt controller
- Automatic interrupt acknowledge (flag clearing) supported

# 2 Instruction Set

The intent of the N1's instruction set is to map most of the essential Forth words to single cycle instructions. Figure 2-1 illustrates the instruction format.

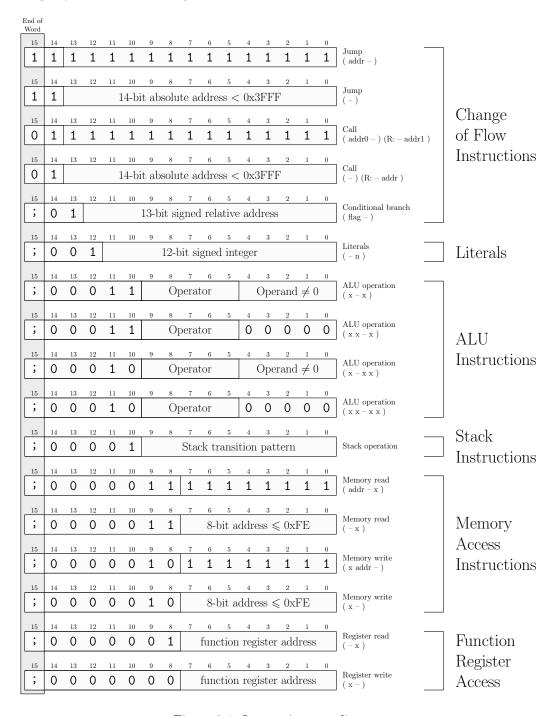


Figure 2-1: Instruction encoding

# 2.1 Return from a Call (;)

Rather than providing a dedicated instruction to end the execution of word in Forth and to return the caller's program flow, the N1 allows to perform this operation in parallel to the execution of any of its instructions. Each opcode contains a bit (bit 15) to indicate, that the current instruction is the last operation of the current word. If this bit is set, the program flow will resume at the calling word as soon as the operationis performed.

As shown in Figure 2-1, bit 15 is also distinction between the encoding of jump and of call instructions. Considering that the last call in a word definition can be optimized to a jump, bit 15 can be regarded as the termination bit for call instructions as well. For a Forth compiler, this means that the semi-colon (;) always translates to setting bit 15 of the last instruction.

# 2.2 Jump Instructions

Jump instructions transfer the program flow to any address location within the supported 128KB program space. Jump instructions consume an absolute destination address which can either be placed on the top of the parameter stack or encoded into the opcode of the instruction (only for destination addresses < 0x3FFF).

#### 2.3 Call Instructions

Call instructions temporarily transfer the program flow to any address location within the supported 128KB program space, while pushing a return address onto the return stack. Call instructions consume an absolute destination address which can either be placed on the top of the Parameter stack or encoded into the opcode of the instruction (only for destination addresses < 0x3FFF).

#### 2.4 Conditional Branches

Conditional branches invoke a change of program flow depending on the argument at the top of the parameter stack. If it is zero, then the branch is taken. The branch destination is a relative address, encoded into the opcode of the instruction in the range of  $\pm$  8KB. A relative address of value zero points to the istruction following the conditional branches.

#### 2.5 Literals

Signed integer literals of 12-bit length can be pushed onto the parameter stack within a single instruction. For larger integers a supplemental ALU instruction is required. (see encoding 11100 in Table 2-1)

#### 2.6 ALU Instructions

ALU instructions perform an operation on two cell values, resulting in a new double cell value. The result can either be placed entirely onto the parameter stack, or truncated, discarding the most significant cell. The first operand is always taken from the parameter stack. The second operand can either be taken from the parameter stack or encoded into the opcode of the instruction. In the latter case, the interpretation of the embedded 5-bit value depends on the operation. The immediate value

is interpreted as either an unsigned (uimm), a sign extended (simm), or an offsetted (oimm) integer value:

$$\begin{aligned} &uimm = \text{opcode}[4:0]\\ &simm = \begin{cases} \text{opcode}[4:0], & \text{if opcode}[4:0] < 16\\ \text{opcode}[4:0] - 32, & \text{if opcode}[4:0] \ge 16 \end{cases}\\ &oimm = \text{opcode}[4:0] - 16 \end{aligned}$$

Table 2-1 lists the supported ALU operations.

Table 2-1: ALU operations

| Encoding | Operation                        | ( x1 – d )       | ( x1 x2 - d )  |
|----------|----------------------------------|------------------|----------------|
| 00000    | Sum                              | uimm + x1        | x1 + x2        |
| 00001    | Absolute value                   | oimm + ABS(x1)   | x1 + ABS(x2)   |
| 00010    | Difference                       | x1 - uimm        | x2-x1          |
| 00011    | Difference                       | oimm - x1        | x1 - x2        |
| 00100    | Unsigned minimum value           | UMIN(uimm, x1)   | UMIN(x1, x2)   |
| 00101    | Signed maximum value             | MAX(oimm, x1)    | MAX(x1, x2)    |
| 00110    | Unsigned maximum value           | UMAX(uimm, x1)   | UMAX(x1, x2)   |
| 00111    | Signed minimum value             | MIN(oimm, x1)    | MIN(x1, x2)    |
| 01000    | Equals comparison                | uimm = x1?       | x1 = x2?       |
| 01001    | Equals comparison                | oimm = x1?       | x1 = x2?       |
| 01010    | Not-equals comparison            | $uimm \neq x1?$  | $x1 \neq x2$ ? |
| 01011    | Not-equals comparison            | $oimm \neq x1?$  | $x1 \neq x2?$  |
| 01100    | Unsigned greater-than comparison | uimm > x1?       | x1 > x2?       |
| 01101    | Signed lower-than comparison     | oimm < x1?       | x1 < x2?       |
| 01110    | Unsigned lower-than comparison   | uimm < x1?       | x1 < x2?       |
| 01111    | Signed greater-than              | oimm > x1?       | x1 > x2?       |
| 10000    | Unsigned product                 | uimm * x1        | x1 * x2        |
| 10001    | Signed product                   | simm * x1        | x1 * x2        |
| 10010    | Reserved                         |                  |                |
| 10011    |                                  | served           |                |
| 10100    | Logic AND                        | $simm \wedge x1$ | x1 ∧ x2        |
| 10101    | Logic XOR                        | $simm \oplus x1$ | $x1 \oplus x2$ |
| 10110    | Logic OR                         | $uimm \lor x1$   | $x1 \lor x2$   |
| 10111    | Reserved                         |                  |                |
| 11000    | Logic right shift                | $x1 \gg uimm$    | $x1 \gg x2$    |
| 11001    | 8                                |                  | $x1 \ll x2$    |
| 11010    | Arithmetic right shift           | $x1 \gg uimm$    | $x1 \gg x2$    |
| 11011    | Reserved                         |                  |                |
| 11100    |                                  |                  | simm, x2[11:0] |
| 11101    | Reserved                         |                  |                |
| 11110    | Reserved                         |                  |                |
| 11111    | Reserved                         |                  |                |

# 2.7 Stack Instructions

The N1's stack instruction aims at efficiently implementing common stack operations of the Forth language, while only implementing the essential data paths, which are needed for plain push and pull operations.

The opcode of the stack instruction contains a 10-bit field to specify a transition pattern of the upper cells of the parameter stack and the return stack. The structure transition pattern is shown in Figure 2-2.

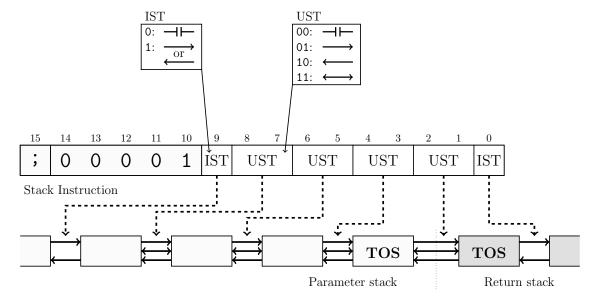


Figure 2-2: Transition encoding of stack instructions

The stack instruction contains four UST fields which control the data movement within the upper four cells of the parameter stack and the top cell of the return stack. Each UST field determines the direction of data transfer between two neighboring stack cells. Four options are selectable:

- No data transfer
- Data transfer upwards (or towards the return stack)
- Data transfer downwards (or towards the parameter stack)
- Data exchange between two stack cells

It is possible to put the UST fields into a combination which would trigger a data transfer of two source cells to a single desination cell. These combinations are reserved for instruction set extensions (see Section 3 "Extensions"). If no related instruction set extension is implemented, the outcome of these stack operations is undefined. In practice, the resulting data in the desination cell is then a logic OR of all sources. The two remaining IST fields in the stack instruction control the data movement of the lower stacks. Two options are selectable:

- No data transfer
- Data shift throughout the entire intermediate stack. The direction is determined by the data movement of the lowest cell of the upper stack (see Figure 2-3).

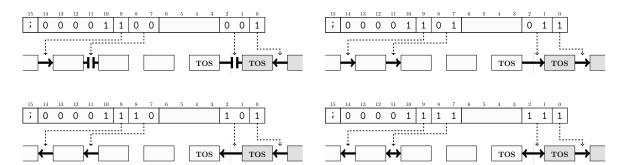


Figure 2-3: Transitions to and from the intermediate stack

### 2.7.1 Common Stack Operations

Table 2-2 shows how common stack operations in Forth are mapped N1 instructions.

Word Opcode Description Transitions DROP 0x06A8 (x-)→ TOS TOS DUP (x-xx)TOS 0x0750 TOS (x1 x2 - x2 x1)SWAP ↔ Tos TOS 0x0418 OVER (x1 x2 - x1 x2 x1)0x0758 ↔ Tos TOS (x1 x2 - x2)NIP 0x06A0 TOS TOS ← TOS TOS 0x0750 TUCK (x1 x2 - x2 x1 x2) $\leftrightarrow$ TOS TOS 0x0460 TOS TOS0x0460 ROT (x1 x2 x3 - x2 x3 x1)↔ Tos TOS 0x0418 ↔ Tos TOS 0x0418 -ROT (x1 x2 x3 - x3 x1 x2)TOS TOS 0x0460 RDROP (R: x -)TOS TOS **←** 0x0401 TOS ← → TOS 0x0407 (R: x - xx)RDUP 0x0406 TOS 🗲 (x-) → TOS 0x06AB >R → TOS (R:-x)(-x)TOS 🗲 TOS R@ 0x0754(R: x - x)(-x)R> Tos **←** TOS 0x0755 (R:x-)→ TOS TOS 0x06A8 2DROP (x1 x2 - )→ TOS TOS 0x06A8

Table 2-2: Common stack operations

...continued

Table 2-2: Common stack operations

| Word  | Description   | Transitions   | Opcode           |
|-------|---|---|------------------|
| ODIID | ( 1 0 1 0 1 0)  | ← ← tos Tos   | 0x0758           |
| 2DUP  | ( x1  x2 - x1  x2  x1  x2 )                               | Tos   | 0x0758           |
|       |   | → Tos Tos   |                  |
| 2SWAP | ( x1 x2 x3 x4 - x3 x4 x1 x2 )                             | ↔ Tos Tos   | 0x0460           |
|       | ,   | Tos Tos   | 0x0598<br>0x0460 |
|       |   | Tos Tos   | 0110100          |
|       |   | Tos Tos   | 0x0780           |
| 20VER | $\left( \ x1\ x2\ x3\ x4-x1\ x2\ x3\ x4\ x1\ x2\ \right)$ |   | 0x0760<br>0x0460 |
|       |   | ← ← Tos Tos   | 0x0798           |
|       |   | Tos Tos   | 0x0460           |
| 2NIP  | ( x1 x2 x3 x4 - x3 x4 )                                   | Tos Tos   | 0x06A0           |
| 21111 | ( X1 X2 X3 X4 - X3 X4 )                                   | TOS   | 0x06A0           |
|       | ( x1 x2 x3 x4 - x3 x4 x1 x2 x3 x4 )                       | $\longrightarrow \text{Tos} \longrightarrow \text{Tos} \longrightarrow$ |                  |
|       |   | Tos tos   |                  |
|       |   | → TOS TOS   | 0x046B<br>0x0587 |
| 2TUCK |   | TOS TOS   | 0x0307<br>0x0418 |
|       |   | ← ← TOS ← TOS ←   | 0x0460           |
|       |   | ← ← TOS ← TOS ←   | 0x0755<br>0x0755 |
|       |   |   | 0110100          |
|       | ( x1 x2 x3 x4 x5 x6 - x3 x4 x5 x6 x1 x2 )                 | Tos Tos   |                  |
|       |   | Tos Tos   |                  |
|       |   | ↔ Tos Tos   | 0x06AB           |
| 2ROT  |   |   | 0x0580<br>0x06AB |
|       |   |   | 0x0598           |
|       |   | → Tos Tos   | 0x0755           |
|       |   |   | 0x0598           |
|       |   | → Tos Tos   | 0x0755<br>0x0598 |
|       |   | TOS TOS   | 0x0460           |

...continued

Word Description Transitions Opcode TOS TOS ↔ Tos TOS → TOS TOS 0x0460 ↔ Tos TOS 0x0598 -2ROT ( x1 x2 x3 x4 x5 x6 - x5 x6 x1 x2 x3 x4 ) 0x06AB  $\rightarrow$  TOS TOS 0x0598 ↔ Tos TOS 0x06AB **←** TOS **←** TOS 0x0598 0x0755↔ Tos TOS 0x0418 **←** TOS **←** TOS 0x0755 TOS TOS0x0401 (R: x1 x2 -) 2RDROP TOS TOS 🗲 0x0401 TOS 🗲 TOS Tos 🗲 → TOS 0x0755 2RDUP (R: x1 x2 - x1 x2 x1 x2)0x0757 → TOS TOS 0x06AB TOS → TOS 0x06AB → TOS TOS (x1 x2 - )0x06AB 2>R (R: -x1 x2) $\rightarrow$  Tos 0x06AB Tos **←** (-x1 x2)0x0755 2R@ (R: x1 x2 - x1 x2)TOS 0x0757 TOS TOS (-x1 x2)0x0755 2R> TOS 🗲 TOS 🗲 (R: x1 x2 - )0x0755

Table 2-2: Common stack operations

# 2.7.2 Stack Underflow Detection

The required number of arguments for a stack instruction is determined by the transition pattern (UST and IST fields). The rules listed in Table 3-2 are applied. subsubsectionCommon Stack Operations Table 2-2 shows how common stack operations in Forth are mapped N1 instructions.

Table 2-3: Rules of Stack Underflow Detection

| Rule            | Transitions                | Description  |
|-----------------|----------------------------|--|
| "DROP"<br>Rule  |                            | A cell that will be dropped (overwritten, without passing on it's content) from either direction must hold content, otherwise a stack underflow exception will be triggered. |
| "DUP" Rule      | _ <del>-</del>             | A cell that will be duplicated in either direction must hold content, otherwise a stack underflow exception will be triggered.   |
| "SWAP"<br>Rule  | ↔                          | Two neighboring cells that will be swapped must both hold content, otherwise a stack underflow exception will be triggered.  |
| "Shift"<br>Rule |                            | Cells that will be shifted in either direction, will not be checked for content  |
| "Cross"<br>Rule | <b>→ → → → → → → → → →</b> | Any cell that is shifted, swapped or duplicated across the parameter stack/return stack boundary must hold content, otherwise a stack underflow exception will be triggered. |

# 2.8 Memory Access Instructions

Memory access instruction perform read or write acesses to the system's 64K word (128KB) address space. Data is solely accessed in 16-bit entities. Accesses to a 255 word (510B) window in the main address space, can be done through an immediate addressing. This offers faster access to frequently used system variables.

# 2.9 Function Register Access


The N1 processor provides a set function registers, which provide access to a number of processor features (see Table 2-4). These function registers are read and written through special opcodes.

Table 2-4: Function registers

| Address | Mnemonic | Name                               |  |
|---------|----------|------------------------------------|--|
| 0x00    | PSD      | Parameter Stack Depth Register     |  |
| 0x01    | RSD      | D Return Stack Depth Register      |  |
| 0x02    | IEN      | Optional Interrupt Enable Register |  |
| 0x04    | KEY?     | Optional KEY? Register             |  |
| 0x05    | EMIT?    | Optional EMIT? Register            |  |
| 0x06    | KEY      | Optional KEY/EMIT Register         |  |

# 2.9.1 Parameter Stack Depth Register (PSD)

Offset: 0x00

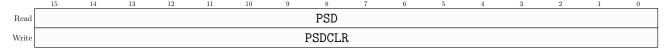

The current depth of the parameter stack is captured in the parameter stack depth register.


Writing 0x0000 to this register will clear the parameter stack.

Table 2-5: Parameter Stack Depth Register Bit Description

| Bit    | Postion | Description   |
|--------|---------|---|
| PSD    | 150     | Parameter Stack Depth Read:   |
|        |         | Current parameter stack depth   |
|        |         | Clear Parameter Stack   |
| PSDCLR | 150     | Write: Writing the value 0x0000 will clrear the parameter stack. All other write accesses have no effect. |

# 2.9.2 Return Stack Depth Register (RSD

Offset: 0x01

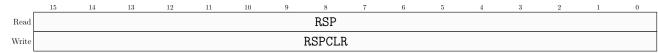

The current depth of the return stack is captured in the parameter stack depth register.

Writing 0x0000 to this register will clear the return stack.

Table 2-6: Return Stack Depth Register Bit Description

| Bit | Postion | Description  |
|-----|---------|--|
| RSD | 150     | Return Stack Depth Read: Current return stack depth. |

...continued

Table 2-6: Return Stack Depth Register Bit Description


| Bit    | Postion | Description  |
|--------|---------|--|
|        |         | Return Stack Depth                                     |
| RSDCLR | 150     | Write:   |
|        |         | Writing the value 0x0000 will clrear the return stack. |
|        |         | All other write accesses have no effect.               |
|        |         |  |


# 3 Extensions

The instruction set of the N1 processor (see Section 2 "Instruction Set") reserves a number of undefined opcodes for functional extensions. These extensions imply a trade-off between hardware complexity and functional improvements. They can be selected individually for each system integrating the N1 processor (see Section 7 "Integration Guide").

# 3.1 ROT Extension

The ROT extension adds two data paths to the upper stack, allowing direct data transfers between the top and the third element of the parameter stack. These new stack transitions are performed by the regular stack instructions (see Section 2.7 "Stack Instructions"), using some of the reserved stack transition patterns. Figure 3-1 illustrates the usage of the ROT extension.

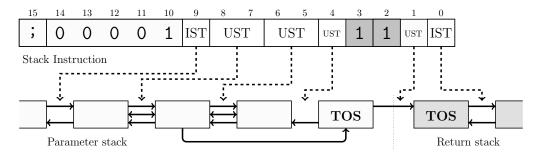

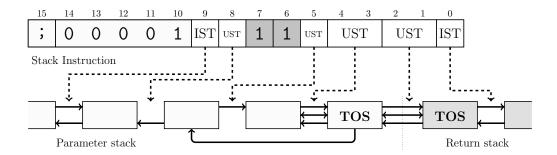

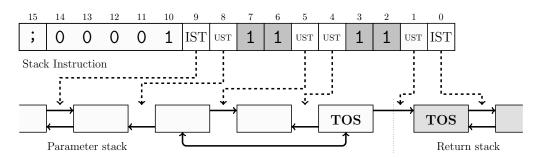


Figure 3-1: Stack transitions of the ROT extension

# 3.1.1 Accellerated Stack Operations

The ROT extension improves the execution time and code density of the three common stack operations TUCK, ROT, and ¬ROT (see Table 3-1). This means that all common single-cell parameter stack operations shown in Table 2-2 can be executed in one cycle if the ROT extension is enabled.

Table 3-1: Improved stack operations

| Word | Description             | Transitions | Opcode |
|------|-------------------------|-------------|--------|
| TUCK | ( x1 x2 - x2 x1 x2 )    | Tos Tos     | 0x07C0 |
| ROT  | ( x1 x2 x3 - x2 x3 x1 ) | Tos Tos     | 0x041C |
| -ROT | ( x1 x2 x3 - x3 x1 x2 ) | Tos Tos     | 0x04E0 |

N1 processors with ROT extension are backward compatible to the ones without. All stack operations can still be executed as listed in Table 2-2, even if the ROT extension is enabled.

#### 3.1.2 Stack Underflow Detection

The ROT extension introduces three new stack underflow detection rules. These rules are listed in Table 3-2.

Table 3-2: Rules of Stack Underflow Detection

| Rule           | Transitions                     | Description  |
|----------------|---------------------------------|--|
| "TUCK"<br>Rule | Tos                             | If the downward ROT extension path is used and the target cell is shifted further downward, then the parameter stack must hold at least <b>two</b> values prior to the stack operation.                  |
| "ROT"<br>Rule  | TOS TOS TOS TOS TOS TOS TOS TOS | For all other stack operations, which use any of the ROT extension paths and for which the "TUCK" rule does not apply, the parameter stack must hold at least three values prior to the stack operation. |

# 3.2 Interrupt Extension

Interrupt support is optional on the N1 processor. If it is available, the Interupt Enable Register (IEN) (see Figure 3-2) is mapped into the function register space, allowing interrupts to be temporarily disabled.



Figure 3-2: Interrupt Enable Register

Interrupt handling can be disabled through clearing the interrupt Enable Flag IEN. The IEN bit is automatically cleared when an interrupt service routine is started and must be set manually by writing a true value to the Interrupt Enable Register (see Table 3-3).

Table 3-3: Exception and Interrupt Mask Register Bit Description

| Bit | Postion | Description |                         |
|-----|---------|-------------|-------------------------|
|     |         |             | Interrupt Enable Flag   |
|     | 15 0    | Read:       |                         |
| IEN | 150     | true:       | Interrupts are enabled  |
|     |         | false:      | Interrupts are disabled |
|     |         | Write:      |                         |
|     |         | true:       | Enable interrupts       |
|     |         | false:      | Disable interrupts      |
|     |         |             |                         |

# 3.3 KEY/EMIT Extension

The KEY/EMIT extension adds support for an I/O device to the N1 core. Forth words KEY, KEY?, EMIT, ands EMIT? dre directly mapped to a set of function register.

## 3.3.1 KEY? Register

The KEY? register (see Figure 3-3) indicates whether there is data to be received from the input device.

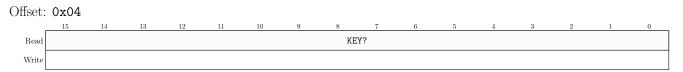


Figure 3-3: KEY? Register

The KEY? field in this read only register resembles the functionality of the KEY? word (see Table 3-5.

Table 3-4: Exception and Interrupt Mask Register Bit Description

| Bit  | Postion | Description |                             |
|------|---------|-------------|-----------------------------|
|      |         |             | Input Data Available Query  |
| KEY? | 150     | Read:       |                             |
|      |         | true:       | Input data is available     |
|      |         | false:      | Input data is not available |
|      |         |             |                             |

## 3.3.2 EMIT? Register

The EMIT? (see Figure 3-4) register indicates whether the I/O device is ready to transmit data.

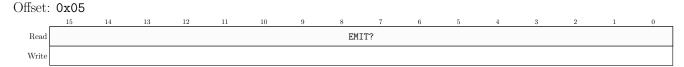


Figure 3-4: EMIT? Register

The EMIT? field in this read only register resembles the functionality of the EMIT? word (see Table ??.

Table 3-5: Exception and Interrupt Mask Register Bit Description

| Bit   | Postion | Description |   |
|-------|---------|-------------|---|
|       |         |             | Output Device Ready Query                   |
| EMIT? | 150     | Read:       |   |
|       |         | true:       | Output device is ready to transmit data     |
|       |         | false:      | Output device is not ready to transmit data |
|       |         |             |   |

## 3.3.3 KEY/EMIT Register

The KEY/EMIT register (see Figure 3-5 is used to receive data from and to transmit daza to the I/O device. Accesses to this register are blocking.

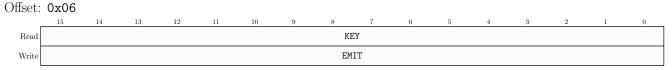


Figure 3-5: KEY/EMIT Register

The  $\mathtt{KEY}$  field resembles the  $\mathtt{KEY}$  word and the  $\mathtt{EMIT}$  field resembles the  $\mathtt{EMIT}$  word (see Table 3-6),

Table 3-6: Exception and Interrupt Mask Register Bit Description

| Bit  | Postion | Description                                      |
|------|---------|--|
| KEY  | 150     | Input Data Read:                                 |
|      |         | Input data, removed from input device when read. |
| EMIT | 150     | Output Data  Read: Output data                   |

# 4 Forth Words

The following sections show recomended implementations of Forth words.

# 4.1 ANS Forth Words

The N1 processor aims at executing Forth code in an efficient way. Table 4-1 provides a list of standard ANS Forth[1] words which can be directly mapped to N1 instructions.

Table 4-1: ANS Forth words

| Word  | Stack   | Description   | Opcode |
|-------|---|---|--------|
| !     | ( x addr - )  | Store x at addr   | 0x02FF |
| *     | ( n1 u1 n2 u2 - n3 u3 )   | Multiply n1 u1 by n2 u2   | 0x0E00 |
| +     | ( n1 u1 n2 u2 - n3 u3 )   | Add n1 u1 to n2 u2  | 0x0C00 |
|       |   |   | 0x0403 |
| +!    | ( n1 u1 a-adr - )   | Add n1 u1 to the cell at addr                                     | 0x03FF |
|       |   |   | 0x0C00 |
|       |   |   | 0x0755 |
|       |   |   | 0x02FF |
| _     | ( n1 u1 n2 u2 - n3 u3 )   | Subtract n2 u2 from n1 u1   | 0x0C40 |
| 0<    | (n-flag)  | Test if n is negative   | 0x0DF0 |
| 0<>   | (x - flag)  | Test if x is not zero   | 0x0D70 |
| 0>    | (n-flag)  | Test if n is greater than zero                                    | 0x0DB0 |
| 0=    | (x - flag)  | Test if x is not zero   | 0x0D30 |
| 1+    | ( n1 u1 - n2 u2 )   | Increment n1 u1   | 0x0C01 |
| 1-    | ( n1 u1 - n2 u2 )   | Decrement n1 u1   | 0x0C1F |
|       |   |   | 0x0750 |
| 2!    | (x1 x2 addr -)  | Store x2 at addr and x1 at addr+1                                 | 0x0460 |
|       |   |   | 0x02FF |
|       |   |   | 0x0C01 |
|       |   |   | 0x02FF |
| 2*    | (x1 - x2)   | Shift x1 one bit towards the MSB                                  | 0x0F41 |
| 2/    | (x1 - x2)   | Shift x1 one bit towards the LSB, while the MSB remains unchanged | 0x0F40 |
|       |   | while the MSD remains unchanged                                   | 0x0750 |
| 2@    | (addr - x1 x2)  | Fetch x2 from addr and x1 at                                      | 0x0C01 |
| 2.6   | (addi xi xz)  | addr+1  | 0x03FF |
|       |   |   | 0x0418 |
|       |   |   | 0x03FF |
| 2DROP | ( x1 x2 - )   | Drop cell pair x1 x2  | 0x06A8 |
| ZDRUP | (XIXZ - )   | Drop cen pair x1 x2   | 0x06A8 |
| 2DUP  | ( x1 x2 - x1 x2 x1 x2 )   | Duplicate cell pair x1 x2   | 0x0758 |
| ZDOF  | (X1XZ - X1XZX1XZ)   | Dupitcate cen pan x1 x2   | 0x0758 |
|       |   |   | 0x0750 |
| 20VER | $( \ x1 \ x2 \ x3 \ x4 - x1 \ x2 \ x1 \ x2 \ x3 \ x4 \ x1 \ x2 \ )$ | Copy cell pair x1 x2 to the TOS                                   | 0x0460 |
|       |   |   | 0x0789 |
|       |   |   | 0x0460 |

 $\dots$ continued

Table 4-1: ANS Forth words

| Word    | Stack  | Description   | Opcode           |
|---------|--|---|------------------|
| 2>R     | ( x1 x2 - ) (R: - x1 x2 )                    | Shift cell pair x1 x2 to the                                    | 0x06AB           |
|         | , , , , , ,                                  | return stack  | 0x06AB           |
| 2R>     | $(-x1 \ x2) \ (R: x1 \ x2 - )$               | Shift cell pair x1 x2 to the                                    | 0x0755           |
|         | ,      | parameter stack   | 0x0755           |
| 2R@     | $(-x1 \ x2) \ (R: x1 \ x2 - x1 \ x2)$        | Copy cell pair x1 x2 to the                                     | 0x0755           |
|         |  | parameter stack   | 0x0757           |
|         |  |   | 0x06AB           |
| 0000    | (1004476047610)                              | D ( ) (1 ) 11 .   | 0x0580           |
| 2ROT    | ( x1 x2 x3 x4 x4 x5 x6 - x3 x4 x5 x6 x1 x2 ) | Rotate three cell pairs   | 0x06AB           |
|         |  |   | 0x0598           |
|         |  |   | 0x0755<br>0x0598 |
|         |  |   | 0x0398           |
|         |  |   | 0x0598           |
|         |  |   | 0x0460           |
|         | ( 1 2 2 1 2 1 2 )                            | 2   | 0x0460           |
| 2SWAP   | ( x1  x2  x3  x4  - x3  x4  x1  x2 )         | Swap two cell pairs   | 0x0598           |
|         |  |   | 0x0460           |
| ;       | ( - ) (R: addr - )                           | Return to the calling word                                      | 0x8400           |
| <       | ( n1 n2 – flag )                             | Test if n1 is lower than n2                                     | OxODAO           |
| <>      | (x1 x2 - flag)                               | Test if x1 is different than x2                                 | 0x0D40           |
| =       | (x1 x2 - flag)                               | Test if x1 equals x2  | 0x0D00           |
| >       | ( n1 n2 – flag )                             | Test if n1 is greater than n2                                   | 0x0DE0           |
| >R      | (x-)(R:-x)                                   | Shift x on to the return stack                                  | 0x06AB           |
| 00110   | ( 0  )                                       | D 1:  | 0x0750           |
| ?DUP    | $( \mathbf{x} - 0   \mathbf{x} \mathbf{x} )$ | Duplicate x if it is not zero                                   | 0x0D30           |
|         |  |   | 0x2001           |
|         |  |   | 0x06A8           |
| 0       | (addr - x)                                   | Fetch x from addr   | 0x03FF           |
| ABS     | ( n - u )                                    | Absolute vale of n  | 0x0C30           |
| AND     | $(x1 \ x2 - x3)$                             | Bitwise logic AND of x1 and x2                                  | 0x0E80           |
| BL      | ( - char )                                   | Space character   | 0x1020           |
| CELL+   | ( addr1addr2 )                               | Increment addr1   | 0x0C01           |
| DEPTH   | (-+n)  | +n is the number of cells on the                                | 0x0100           |
| 2202    |  | parameter stack without +n                                      | 0.0010           |
| DROP    | (x-)   | Drop x from the /glsps  | 0x06A8           |
| DUP     | ( x - x x )                                  | Duplicate x   | 0x0750           |
| EKEY    | ( - x )                                      | Receive one input event u <sup>1</sup>                          | 0x0107           |
| EKEY?   | ( – flag )                                   | Return true if input event is available <sup>4</sup>            | 0x0104           |
| EMIT    | (x-)   | Send x to the output device <sup>4</sup>                        | 0x0005           |
| EMIT?   | ( – flag )                                   | Return true if the output device is ready for data <sup>4</sup> | 0x0105           |
| EXECUTE | (i*x xt - j*x)                               | Execute xt  | 0x7FFF           |
| FALSE   | ( - false )                                  | FALSE flag  | 0x1000           |

...continued

 $<sup>^{1}</sup>$ Requires the EKEY/EMIT extension

Table 4-1: ANS Forth words

| Word   | Stack                            | Description  | Opcode              |
|--------|----------------------------------|--|---------------------|
| I      | (-n u ) $(R:n u-n u )$           | Copy the innermost loop index n u onto the parameter stack | 0x0754              |
| INVERT | (x1 - x2)                        | Bitwise inverse of x1                                      | 0x0EBF              |
| J      | (-n u ) (R: x n u - x n u )      | Copy the next-outer loop index                             | 0x0755              |
|        | ( 11/4 ) ( 10/11 11/4 11 11/4 )  | n u onto the parameter stack                               | 0x0407              |
| LSHIFT | ( x1 u - x2 )                    | Shift x1 u bits towards the MSB                            | 0x0F20              |
| M*     | ( n1 n2 – d )                    | Multiply n1 by n2  | 0x0A40              |
| M+     | ( n1 n2 – d )                    | Add n1 to n2   | 0x0800              |
| MAX    | ( n1 n2 - n3 )                   | n3 is the greater of n1 and n2                             | 0x0CA0              |
| MIN    | ( n1 n2 – n3 )                   | n3 is the lesser of n1 and n2                              | 0x0CE0              |
| NEGATE | ( n1 – n2 )                      | n2 is the two's complement of n1                           | 0x0C70              |
| NIP    | ( x1 x2 - x2 )                   | Drop x1  | 0x06A0              |
| OR     | ( x1 x2 - x3 )                   | Bitwise logic OR of x1 and x2                              | 0x0EC0              |
| OVER   | (x1 x2 - x1 x2 x1)               | Copy x1 to the TOS   | 0x0758              |
| R>     | ( - x ) (R: x - )                | Shift x to the parameter stack                             | 0x0755              |
| R@     | (-x)(R: x - x)                   | Copy x to the parameter stack                              | 0x0754              |
| RSHIFT | ( x1 u - x2 )                    | Shift x1 u bits towards the LSB                            | 0x0F00              |
|        | ,                                |  | 0x0460              |
| ROT    | ( x1  x2  x3  - x2  x3  x1)      | Rotate the three topmost cells                             | 0x0418              |
|        |                                  |  | or                  |
|        |                                  |  | 0x041C <sup>2</sup> |
| S>D    | ( n – d )                        | Sign-extend n  | 0x0A41              |
| SWAP   | ( x1  x2 - x2  x1 )              | Swap x1 and x2   | 0x0418              |
| TRUE   | (-true)                          | TRUE flag  | 0x1FFF              |
|        | ( 1 0 0 1 0)                     | G 11 1 2   | 0x0750              |
| TUCK   | $( \ x1 \ x2 - x2 \ x1 \ x2 \ )$ | Copy x1 below x2   | 0x0460              |
|        |                                  |  | or                  |
|        |                                  |  | 0x07C0 <sup>2</sup> |
| U<     | (u1 u2 - flag)                   | Test if u1 is lower than u2                                | 0x0DC0              |
| U>     | ( u1 u2 – flag)                  | Test if u1 is greater than u2                              | 0x0D80              |
| UM*    | ( u1 u2 – d )                    | Multiply u1 by u2  | 0x0A00              |
| XOR    | (x1 x2 - x3)                     | Bitwise logic XOR of x1 and x2                             | 0x0EA0              |

# 4.2 Non-Standard Forth Words

To provide access to features wich are unique to the N1 processor, the word definitions listed in Table 4-2 are recommended.

 $<sup>^2</sup>$ Requires the ROT extension

Table 4-2: Non-standard Forth words

| Word   | Stack      | Description                             | Opcode |
|--------|------------|---|--------|
| CLRPS  | ( i*x- )   | Clears the parameter stack              | 0x1000 |
|        | ,          | •                                       | 0x0000 |
| CLRRS  | ( i*x- )   | Clears the return stack                 | 0x1000 |
|        | ,          |   | 0x0001 |
| IDIS   | ( - )      | Disable interrupts <sup>3</sup>         | 0x1000 |
|        |            | 1                                       | 0x0003 |
| IEN    | ( - )      | Enable interrupts <sup>3</sup>          | 0x1FFF |
|        | ,          | 1                                       | 0x0003 |
| IEN?   | ( - flag ) | Return true if interrupts are           | 0x0103 |
|        | ( 0 /      | enabled $^3$                            |        |
| PEEK   | ( - x )    | Read from the input device, while       | 0x0106 |
|        | ,          | preserving the input event <sup>4</sup> |        |
| RDEPTH | (-+n)      | +n is the number of cells on the        | 0x0101 |
|        | , , ,      | return stack                            |        |

 $<sup>^3</sup>$ Requires the Interrupt extension  $^4$ Requires the EKEY/EMIT extension

# 5 Stacks

The N1 operates with two stacks: the parameter stack to perform data transactions and the return stack to manage the program flow. As illustrated in Figure 5-1, each of these stacks consists of three segments: the upper stack, the intermediate stack, and the lower stack.

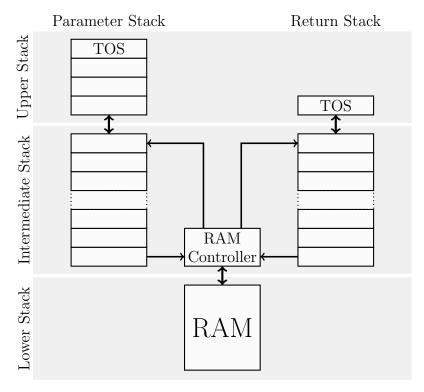


Figure 5-1: Stack Architecture

## 5.1 Parameter Stack

The upper parameter stack holds the four topmost data entries. Its purpose is to perform stack and ALU operations (see Section 2.7 "Stack Instructions" and Section 2.6 "ALU Instructions"). When the capacity of the upper stack is exceeded, older data entries are shifted to the intermediate stack.

The intermediate stack serves as a buffer between the upper stack and the lower stack, which resides in RAM. The purpose of the intermediate stack is to minimize RAM traffic to and from the lower stack. Push operations to the intermediate stack are only propagated to the lower stack when the buffer capacity is exceeded. Pull operations are only propagated when the intermediate stack is empty. Stack fluctuations within the intermediate stack's capacity are not visible to the lower stack.

The lower stack is a region of the RAM, which is managed by a memory controller that is shared by the parameter stack and the return stack. Within the RAM, both stacks will grow towards each other. Moving cell content from one stack to the other (>R or R>) will never lead to a stack overflow.

# 5.2 Return Stack Stack

The upper stack of the return stack has the capacity of one cell. The intermediate stack and lower stack are identical to the ones of the parameter stack.

# 6 Reset, Exceptions, and Interrupts

There are three hardware mechanisms in the N1 processor, which can stop the ongoing program flow in order to react to an urgent hardware condition: Reset, Exceptions and Interrupts.

#### 6.1 Reset

A reset puts the entire sequential logic of the N1 into a defined initial state. The return stack becomes completely cleared and the parameter stack is initialized to hold exactly one cell, containing the reset indicator 0x0000 (see Table 6-1). After every reset, program execution will begin at address 0x0000. Any context of the previous program flow is lost. Resets are generated by the system's hardware and occur at least once during power-up.

# 6.2 Exceptions

Exceptions are triggered by error conditions and allow the software to restore the functionality of the system. There are five error conditions, which can be detected by the N1 hardware:

#### Parameter stack overflow

A parameter stack overflow occurs when the capacity of the lower stack's RAM is exceeded

#### Return stack stack underflow

A parameter stack underflow occurs when an instruction requires more arguments than available on the stack and when a stack instruction would result in non-continuous filling of the stack.

## Return stack overflow

A return stack overflow occurs when the capacity of the lower stack's RAM is exceeded

## Return stack underflow

A return stack underflow occurs when an instruction requires more arguments than available on the return stack.

#### Address out of range

This error condition indicates a memory access to a restricted address. This can either be caused by an instruction fetch or a data access

#### Undefined word

This error condition is triggered whenever an undefined opcode is executed or an unimplemented function register is accessed.

In any of these cases, the N1 processor will push a throw code (see Table 6-1) onto the parameter stack and proceed with code execution at address 0x0000. In case of a parameter stack overflow or a return stack overflow, both stacks will be cleared. Otherwise, the return stack and the lower content of the parameter stack remain untouched, allowing the exception to be caught by software. The parameter stack and the parameter stack remain untouched.

The context of the previous program execution is not preserved. The throw codes listed in Table 6-1 comply with the exception word set of the ANS Forth standard [1].

Table 6-1: Throw codes

| Throw Code   | Condition                 |
|--------------|---------------------------|
| 0x0000 (0)   | Reset                     |
| OxFFFD (-3)  | Parameter stack overflow  |
| 0xFFFC (-4)  | Parameter stack underflow |
| 0xFFFB (-5)  | Parameter stack overflow  |
| OxFFFA (-6)  | Parameter stack underflow |
| 0xFFF7 (-9)  | Invalid memory address    |
| 0xFFF3 (-13) | Undefined word            |

The five hardware exceptions can be easily complemented by user defined software exceptions. Software exceptions can be thrown by pushing a unique throw code onto the parameter stack and performing a jump to address 0x0000. Hardware and software exceptions can then be handled by a common exception handler routine.

# 6.3 Interrupts

interrupts are an optional feature (see Section 3.2 "Interrupt Extension")

# 7 Integration Guide

This section outlines the interfaces and configurations of the N1 processor for system integration.

# 7.1 Integratation Parameters

The N1 processor supports six Verilog integration parameters to configure the design for application specific needs:

#### SP\_WIDTH

Stack pointer width.

This parameter determines the address width of the lower stack. Values in the range of 5 to 16 are valid. The default value is 12.

#### IPS\_DEPTH

Depth of the intermediate parameter stack.

This parameter determines the number of cells in the intermediate stack of the parameter stack. Any value larger than 2 is valid. The default value is 8. The purpose of the intermediate stack is to conceal fluctuations in stack usage to the lower stack. The optimal value should be derived from the application use case.

#### IPS\_BYPASS

Bypass the intermediate parameter stack.

This parameter provides the option of bypassing the intermediate parameter stack. If set to a non-zero value, the lower stack will be directly connected to the upper stack. The default value is 0.

### IRS\_DEPTH

Depth of the intermediate return stack.

This parameter determines the number of cells in the intermediate stack of the return stack. Any value larger than 2 is valid. The default value is 8. The purpose of the intermediate stack is to conceal fluctuations in stack usage to the lower stack. The optimal value should be derived from the application use case.

### IRS\_BYPASS

Bypass the intermediate return stack.

This parameter provides the option of bypassing the intermediate return stack. If set to a non-zero value, the lower stack will be directly connected to the upper stack. The default value is 0.

#### PBUS\_AADR\_OFFSET

Offset for direct jump or call addressing.

This parameter determines the location of the 32KB window for jumps and calls with direct addressing. The default value is 0x0000.

#### PBUS\_MADR\_OFFSET

Offset for direct data accesses.

This parameter determines the location of the 511B window for memory I/O with direct addressing. This window should cover commonly used Forth variables. The default value is 0xFFFF.

#### EXT\_ROT

Enable the ROT extension.

Recovering from an exception requires some free stack space. This parameter enables the ROT extension if set to a non-zero value. It is disabled by default.

### 7.2 Interfaces

The N1 processor provides four interfaces which must be connected at system level. A fifth one (see Section 7.2.4 "Probe Signals") is only to be used for verification and debug purposes.

#### 7.2.1 Clock and Resets

This interface provides clocks and resets for all sequential logic in the N1 design.

#### clk\_i

Single clock input.

This clock is used for all interfaces as well as all internal sequential logic.

#### async\_rst\_i

Asynchronous reset input.

This active high reset input may assert asynchronously, but must deassert synchronously. This signal is not required if a synchronous reset (sync\_rst\_i) is implemented. If unused, this input must be tied to 0.

#### sync\_rst\_i

Synchronous reset input.

This active high reset input must assert and deassert synchronously. This signal is not required if an asynchronous reset (async\_rst\_i) is implemented. If unused, this input must be tied to 0.

# 7.2.2 Program Bus

This interface connects the N1 to the main memory. All signals comply to the Wishbone protocoll [2].

# pbus\_cyc\_o

Cycle indicator output.

This output signal corresponds to signal CYC\_O of the Wishbone specification [2].

# pbus\_stb\_o

Strobe output.

This output signal corresponds to signal STB\_O of the Wishbone specification [2].

#### pbus\_we\_o

Write enable output.

This output signal corresponds to signal WE\_O of the Wishbone specification [2].

#### pbus\_adr\_o

Address bus

These output signals correspond to bus ADR\_O of the Wishbone specification [2].

### pbus\_dat\_o

Write data bus.

These output signals correspond to bus DAT\_O of the Wishbone specification [2].

#### pbus\_tga\_cof\_jmp\_o

Change of flow indicator.

This output signal corresponds to bus TGA\_O of the Wishbone specification [2]. It indicates, that the current bus access was caused by a jump instruction. This information may be used to trace the program flow.

#### pbus\_tga\_cof\_cal\_o

Change of flow indicator.

This output signal corresponds to bus TGA\_O of the Wishbone specification [2]. It indicates, that the current bus access was caused by either a call instruction or an interrupt service request. This information may be used to trace the program flow.

# pbus\_tga\_cof\_bra\_o

Change of flow indicator.

This output signal corresponds to bus TGA\_O of the Wishbone specification [2]. It indicates, that the current bus access was caused by a conditional branch instruction. This information may be used to trace the program flow.

#### pbus\_tga\_cof\_eow\_o

Change of flow indicator.

This output signal corresponds to bus TGA\_O of the Wishbone specification [2]. It indicates ,that the current bus access was caused by a return from a call. This information may be used to trace the program flow.

#### pbus\_ack\_i

Acknowlede input.

This input signal corresponds to signal ACK\_I of the Wishbone specification [2]. If unused, this input must be tied to 1.

#### pbus\_err\_i

Error indicator input.

This input signal corresponds to signal ERR\_I of the Wishbone specification [2]. It informs the N1 processor, that the current address exceeds the valid range of the connected memory system. If unused, this input must be tied to 0.

#### pbus\_rty\_i

Retry input.

This input signal corresponds to signal RTY\_I of the Wishbone specification [2]. It terminates the bus cycle, indicating that the target is not ready to accept or provide new data. In contrast to asserting pbus\_stall\_i or delaying pbus\_ack\_i, the bus cycle termination via pbus\_rty\_i does not block the processor from handing interrupts. If unused, this input must be tied to 0.

#### pbus\_stall\_i

Pipeline stall input.

This input signal corresponds to signal STALL\_I of the Wishbone specification [2]. If unused, this input must be tied to 0.

#### pbus\_dat\_i

Read data bus.

These input signals correspond to bus DAT\_I of the Wishbone specification [2].

# 7.2.3 Interrupt Interface

This interface connects an optional interrupt controller to the N1 processor.

#### irq\_ack\_o

Interrupt acknowledge.

This output signal asserts for one clock cycle, whenever the current interrupt is serviced. It may be used for automatic flag clearing.

#### irq\_req\_i

Interrupt request.

Any non-zero value driven to this bus interface is interpreted as interrupt request. The value determines the start address of the interrupt service routine that is to be executed by the N1 processor. This bus must be tied to 0x0000 if no interrupt controller is connected.

# 7.2.4 Probe Signals

This interface propagates all internal states of the N1 processor to the outside. It is solely intended for verification and debug purposes and should be left unconnected for system integration. The signals in this interface are specific to the internal implementation of the N1 processor and may change with every revision.

# 7.3 Target Specific Design Files

All adder and multiplier logic of the N1 design ls located in a single Verilog module called N1\_dsp. A synthesizable implementation of this module, can be found in the file rtl/verolog/N1\_dsp\_synth.v. If desired, this file can be replaced by one containing a alternative implementation of the N1\_dsp module. An example is given in in the file rtl/verolog/N1\_dsp\_iCE40UP5K.v. It contains a custom implementation for Lattice iCE40 FPGAs, utilizing four hard instantiated SB\_MAC16 macro cells.

# 8 Architecture Description

The following sections provide some descriptions of the internal N1 design.

# 8.1 Design Principles

The RTL implementation of the N1 follows a number of design principles which are captured in following sections.

# 8.1.1 Naming Convention of Interface Signals

For all signals, which do not implement a common standard (e.g. Wishbone), the following signal naming rules are used throughout the design:

• Signals which are grouped into an interface are prefixed with a meaningful interface name.

Example: ups\_push

• All other point-to-point connections, contain a mnemonic of the sending and the receiving block in its prefix. The format of the prefix is: <sender mnemonic>2<receiver mnemonic>....

Example: fc2ir\_capture

- Control signals which represent a request, end with a verb in imperative form. Example: fc2ir\_expend
- Status signals represening a busy indicator, have the postfix ...\_bsy Example: prs2fc\_bsy
- If a signal is connected to the interface of a module, a further postfix is added to indicate the signal direction:
  - Input signals: ...\_i
  - Output signals: ... ₋o

Example: prs2fc\_bsy\_o

• Names of signals which are only used within one design block are kept short and don't follow a particular naming convention.

#### 8.1.2 Handshaking

A high signal level of a contol signal is interpreted a request by the receiving design block. The request is expected to be immediately accepted by the receiver and processed in the next clock cycle, unless the receiver provides a busy indicator (...\_bsy). In this case the request in only accepted if the busy indicator was deasserted in the cycle, in which the request is made.

## 8.2 Common Internal Interfaces

The subblocks in the N1 design use common interfaces for common functionality. These interfaces follow the naming conventions and handshaking concept described in Section 8.1 "Design Principles".

#### 8.2.1 Stack Interface

All stacks are controlled using the following interface:

## < $stack name > \_clear_o/\_i (controller <math>\rightarrow stack)$

Request to clear the stack.

### < stack name>\_clear\_bsy\_i/\_o (controller $\leftarrow$ stack)

Busy indicator.

The stack will be cleared if <stack name>\_clear\_i is assected while <stack name>\_clear\_bsy\_o is deasserted.

# < stack name > \_push\_o/\_i (controller $\rightarrow$ stack)

Request to push a data word onto the stack.

## $<\!stack\ name\!>$ \_push\_data\_o/\_i[15:0] (controller ightarrow stack)

Data word to be pushed onto the stack.

The data word must be supplied in the same clock cycle as the request.

# < stack name>\_push\_bsy\_i/\_o (controller $\leftarrow$ stack)

Busy indicator.

< stack name>\_push\_data\_i will be pushed onto the stack if < stack name>\_push\_i is asserted while < stack name>\_push\_bsy\_o and < stack name>\_full\_o are deasserted.

#### <stack name>\_full\_i/\_0 (controller \( \) stack)

Overflow indicator.

< stack name>\_full\_o is asserted when the stack is full and a new push request would cause an overflow.

# < $stack \ name>$ \_pull\_o/\_i (controller $\rightarrow$ stack)

Request to pull a data word from the stack.

## <stack name>\_pull\_data\_i/\_o[15:0] (controller \( \) stack)

Data word to be pulled from the stack. If the stack is not empty (<stack name>\_empty\_o deasserted) and ready for a pull operation (<stack name>\_pull\_bsy\_o deasserted), then <stack name>\_pull\_data\_o always shows the data at the top of the stack.

# < stack name > \_pull\_bsy\_i/\_o (controller $\leftarrow$ stack)

Busy indicator.

The data at the top of the stack will be removed if *<stack name>\_pull\_i* is asserted while *<stack name>\_pull\_bsy\_o* and *<stack name>\_empty\_o* are deasserted.

# < stack name > \_empty\_i/\_o (controller $\leftarrow$ stack)

Underflow indicator.

< stack name>\_empty\_o is asserted when the stack is empty and a new pull request would cause an underflow.

The stack interface is also used for FIFOs.

### 8.2.2 Memory Interface

Memories are connected through the following interface:

< memory name>\_addr\_o/\_i[n-1:0] (controller  $\rightarrow$  memory) Memory address.

< memory name>\_access\_0/\_i (controller  $\rightarrow$  memory) Access request.

<memory name>\_rwb\_o/\_i (controller → memory)
Data direction selector (high for read, low fro write).

 $<\!\!memory\ name\!\!>_{\mathtt{access\_bsy\_i/_o}}$  (controller  $\leftarrow$  memory)

Busy indicator.

A request is valid if <memory name>\_access\_i is asserted while <memory name>\_access\_bsy\_o is deasserted.

 $<\!\!memory$   $name\!\!>_{\mathtt{LW}}$ data\_o/\_i[15:0] (controller  $\to$  memory)

Write data.

Write data must be driven in the same clock cycle as the request.

 $<\!\!memory\ name\!\!>$ \_rdata\_i/\_o[15:0] (controller  $\leftarrow$  memory)

Read data.

Read data must be captured one clock cyle after a valid request has been captured, unless a delay is indicated.

 $<\!memory\;name\!>$ \_rdata\_del\_o/\_i[15:0] (controller  $\rightarrow$  memory)

Read data delay indicator.

If asserted, this signalwill postpone expected read data by one clock cycle..

#### 8.2.3 Register Interface

Registers are accessed through the following interface:

 $<\!\!register\ block\ name\!\!>_{\texttt{addr_o/_ii}[n-1:0]}\ (controller \to register\ block)}$  Register address.

 $<\!register\ block\ name\!>$ \_set\_o/\_i (controller  $\rightarrow$  register block)

Register write request.

Register address and write data must be supplied in the same clock cycle as the write request.

<register block name>\_set\_data\_o/\_i[n-1:0] (controller  $\rightarrow$  register block) Register write data.

<register block name>\_set\_bsy\_i/\_0 (controller ← register block)
Register write busy indicator.

 $<\!register\ block\ name\!>$ \_get\_o/\_i (controller  $\rightarrow$  register block)

Register read request.

The register address must be supplied in the same clock cycle as the write request. Unless the busy indicator is asserted, read data is available in the same clock cycle as the request.

 $<\!register\ block\ name\!>_{\tt get\_data\_o/_i[n-1:0]}\ (controller \to register\ block)$  Register read data.

<register block name>\_get\_bsy\_i/\_o (controller ← register block)
Register read busy indicator.

#### 8.2.4 Instruction Boundaries

The instruction register always contains the instruction which is currently in execution. Before the execution of an instruction can ce concluded and the next one can begin, the fillowing conditions must be fulfilled:

- The program bus must be available TBD
- The parameter and the return stack must be available TBD

# 8.3 Instruction Execution Cycle

The execution cycle of the N1 processor characterized by the following design components:

#### Program Counter

A 16-bit register, which contains the memory location on the next instruction to be executed. It is implemented within the DSP Block.

#### Address Bus

The address output of the Program Bus (pbus\_adr\_o).

#### Read Data Bus

The read data input of the Program Bus (pbus\_dat\_i)

## Instruction Register

A 16-bit register holding the opcode of the instruction, which is currently executed (see Section 8.4.2 "Instruction Register (ir)").

#### Instruction Stash Register

A 16-bit register to temoprarily store an upcoming opcode. (see Section 8.4.2 "Instruction Register (ir)").

The following sections show the timing relation of these design components in different execution scenarios.

#### 8.3.1 Plain Linear Execution

Most of the N1 instructuins are executed in a single clock cycle. Figure 8-1 the typical linear execution flow of single cycle instructions.

The opcode stored in the instruction register determines which instruction is currently being executed. The program counter points to the address of the next instruction. The address bus is unregistered and always runs one clock cycle ahead of the program counter. The resulting data on the read data bus is captured by the instruction register in the next clock cycle.

#### 8.3.2 Execution of Extended Instructions

In some cases the execution of an instruction can span multiple cycles (i.e. non-concurrent control instructions or any instruction waiting for a blocked stack access). Figure 8-2 illustrates the timing in these scenarios.

| Program Counter      |    | PC0 | PC1 | PC2 | PC3 | PC4 |    |
|----------------------|----|-----|-----|-----|-----|-----|----|
| Address Bus          | A0 | A1  | A2  | A3  | A4  |     |    |
| Read Data Bus        |    | D0  | D1  | D2  | D3  | D4  |    |
| Instruction Register |    |     | 10  | I1  | I2  | I3  | I4 |

Figure 8-1: Plain Linear Execution

Whenever an opcode needs to be captured from the read data bus, but the instruction register is blocked by an instruction spaning multiple cycles, The incoming opcode needs to be temourarely stashed away in a separate register. When the execution of the ongoing instruction is finished, the stashed opcode is moved into the instruction register.

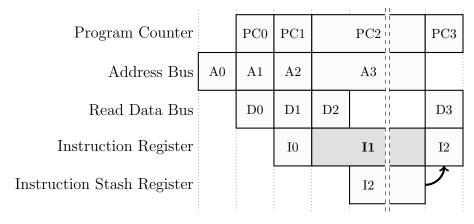


Figure 8-2: Execution of an Extended Instruction

## 8.3.3 Execution of Memory Access Instructions

A special case of multi-cycle instructions are memory access instructions. These instructions perform their memory acesses on the program bus. Figure 8-3 illustrates how opcode fetches and data accesses are interleaved.

#### 8.3.4 Change of Flow Instructions

TBD

## 8.3.5 Exceptions and Interrupts

TBD

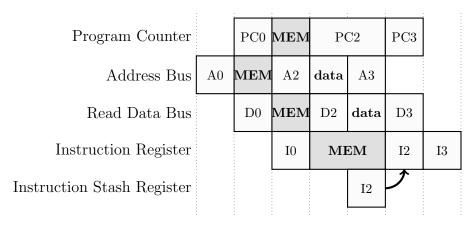


Figure 8-3: Execution of a Memory Access Instruction

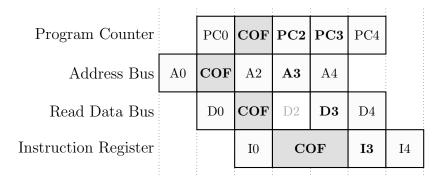


Figure 8-4: Execution of a Change of Flow Instruction

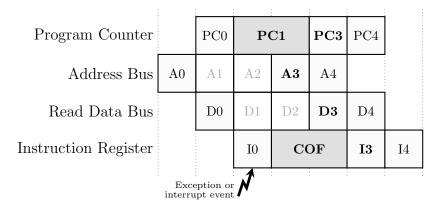


Figure 8-5: Program flow interruted by an exception - TBD

# 8.4 Design Components

The N1 architecture is divided in 11 subblocks as shown in Figure 8-6.

#### **TBD**

Figure 8-6: Block Diagram

## 8.4.1 Flow Control Block (fc)

The flow control block is implemented in the Verilog module N1\_fc (N1\_fc.v). It manages the instruction cycles of the N1 core. It handles the control and resonse signals of the program bus's Wishbone interface and it communicates with the other N1 componenents by sending requests and receiving status information. No actual data passes through the N1\_fc module. The interfaces to the N1 compunents, which are under the control of the flow control block, are explained in the following sections.

## 8.4.1.1 Control and Status Interface to the Instruction Register

The flow control block is able to request has the following request signals to the instruction register:

## fc2ir\_capture

Capture the program bus's read data (pbus\_dat\_i) in the instruction register at the next clock edge.

#### fc2ir\_stash

Capture the program bus's read data (pbus\_dat\_i) in the stash register at the next clock edge.

#### fc2ir\_expend

The read data input of the Program Bus (pbus\_dat\_i)

## fc2ir\_expend

Copy the stash regiesr's content into the instruction register at the next clock cycle.

The following status signala are coming from the instruction register:

#### 8.4.2 Instruction Register (ir)

## 8.4.3 Arithmetic Logic Unit (alu)

TBD

## 8.4.4 DSP Block (dsp)

TBD

#### 8.4.5 Exception Handler (excpt)

TBD

## 8.4.6 Upper Stack (us)

TBD

8.4.7 Intermediate Parameter Stack (ips)

TBD

8.4.8 Intermediate Return Stack (irs)

TBD

8.4.9 Lower Stack (ls)

TBD

# 9 Verification Status

The implementation of the N1 design is currently still ongoing. Verification has not yet begun.

# 10 Tool Summary

One of the main goals of the N1 project is to use a design and verification flow, based on open source EDA tools. Table 10-1 summarizes the tools, used for this project.

Table 10-1: Tool Summary

| Tool Version      |               | $_{ m Usage}$                             |  |  |  |
|-------------------|---------------|---|--|--|--|
| Verrilator[4]     | 3.874         | Linting                                   |  |  |  |
| Icarus Verilog[6] | 0.9.7         | Linting                                   |  |  |  |
| Yosys[8]          | 0.7 + 627     | Linting, Formal Verification              |  |  |  |
| SymbiYosys[7]     | Sep. 12, 2018 | Formal Verification                       |  |  |  |
| GTKWave[3]        | 3.3.95        | Waveform Viewer                           |  |  |  |
| Verilog-Perl[5]   | 3.418-1       | Gerneration of design data for GTKWave[3] |  |  |  |

# 11 Glossary

;

End of a word definition in Forth.

#### $\mathbf{ALU}$

Arithmetic Logic Unit.

#### call

A change of the program flow, where a return address is kept on the return stack (see Section 2.3 "Call Instructions").

#### cell

A data entity within a stack.

#### conditional branch

A change of the program flow without return option, only if a certain (non-zero) argument value is given (see Section 2.4 "Conditional Branches").

## direct addressing

Addressmode, where the address is encoded into the opcode of an instruction

## EKEY/EMIT extension

An optional extension to support EKEY and EMIT functionality, described in Section ?? "??"

## exception

An error condition that will disrupt the program flow.

#### Forth

Forth is an extensible stack-based programming language.

## function register

A processor internal register, that provides access to a hardware feature.

# immediate data

A data value, which is encoded into the opcode of an instruction

#### indirect addressing

Address mode, where the address ist stored on the parameter stack.

## intermediate stack

The section of the stack that serves as a buffer between the lower stack and the upper stack. See Section 5 "Stacks".

### Interrupt extension

An optional extension to support interrupts, described in Section 3.2 "Interrupt Extension"

Glossary

## IST

A bit field in the stack instruction which contols data movement on the intermediate parameter stack or return stack. The mnemonic stands for "Intermediate Stack Transition".

## jump

A change of the program flow without return option (see Section 2.2 "Jump Instructions").

#### LIFO

A memory which is accessible in last in - first out order.

#### literal

A fixed numerical value within the program code (see Section 2.5 "Literals").

#### lower stack

The section of the stack which is stored in RAM. See Section 5 "Stacks".

## LSB

The least significant bit.

## MSB

The most significant bit.

## opcode

Encoding of a machine instruction. Short for "operation code".

### parameter stack

A LIFO storage mainly for keeping call parameters and return values.

#### RAM

Random access memory.

## relative addressing

Addressmode, where the address is given relative to the current position in the execution flow

#### return stack

A LIFO storage mainly for maintaining return addresses of calls.

#### ROT extension

An optional extension of the N1 instruction set, described in Section 3.1 "ROT Extension"

#### stack

A LIFO storage.

Glossary Glossary

#### throw code

A unique identifier for each type of exception.

# TOS

The top cell of a stack.

## upper stack

The section of the stack that contains the TOS. It supports reordering of its storage cell. See Section 5 "Stacks".

## UST

A bit field in the stack instruction which contols data movement between two neighboring cells in the upper parameter stack or return stack. The mnemonic stands for "Upper Stack Transition".

# Verilog

The harware description language used for the N1 implementation.

#### Von-Neumann-Architecture

A computer architecture where intruction fetches and data I/O occur over the same memory interface.

#### Wishbone

An open bus prototocoll. see [2]

## word

The term word refers to a callable code sequence in Forth terminology.

# 12 References

- [1] American National Standard for Information Systems, 1994.
- [2] Wishbone b4. http://cdn.opencores.org/downloads/wbspec\_b4.pdf, 2010.
- [3] BSI. Gtkwave. http://gtkwave.sourceforge.net.
- [4] Wilson Snyder. Verilator. http://www.veripool.org/verilator.
- [5] Wilson Snyder. Verilog-perl. http://www.veripool.org/verilog-perl.
- [6] Stephen Williams. Icarus verilog. http://iverilog.icarus.com.
- [7] Clifford Wolf. Symbiyosys. https://github.com/cliffordwolf/SymbiYosys.
- [8] Clifford Wolf. Yosys open synthesis suite. http://www.clifford.at/yosys.