ASME 2020 Schematic V3.1
Blue Shift – HPVDT UofT

Based largely on TITAN (WHPSC 2019/20)

Circuit Design / PCB Layout:
Catherine Kucaba / Savo Bajic

Programming:
Ethan Baron / Yvonne Yang / Savo Bajic

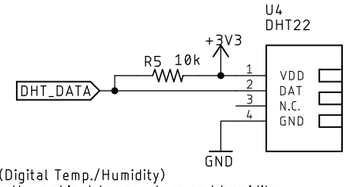

DHT22 (Digital Temp./Humidity)
Monitors the ambient temperature and humidity in proximity to the sensor. Likely mounted to the board.

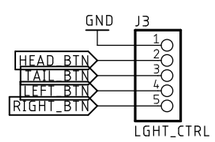

Light Control Buttons
Pulling these lines to GND will toggle the corresponding lights.

Battery Level Monitoring (main and analog sys batt.)

Uses resistor voltage dividers to bring the battery voltage (nominally 10V) down to the 3V3 level the STM32 is tolerant to. There are protection diodes for the main battery.

NOTE: THE CONNECTOR FOR THE ANALOG SYSTEM ASSUMES THE INPUT IS ALREADY DIVIDED AND LACKS ANY PROTECTION!



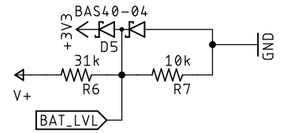

Lighting Lines
Constant current boost converters. Take in the battery voltage and boost it to generate a desired current through the LEDs.

Current set by resistors downstream of LEDs, I = 0.2/R. The 0.2 can be tweaked using the potentiometer and solder the jumper. Solder to ground to decrease the 0.2, +V to raise the 0.2.

Dimming is achieved though software by applying an approximately1kHz PWM signal to the control pin.

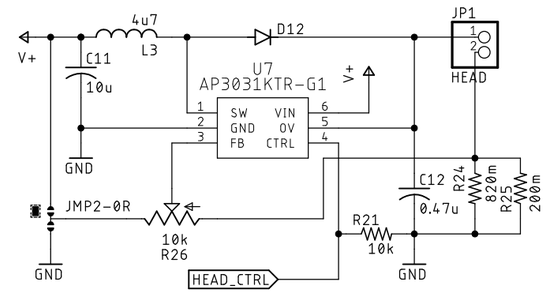

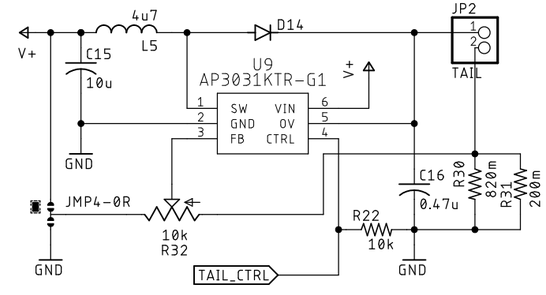

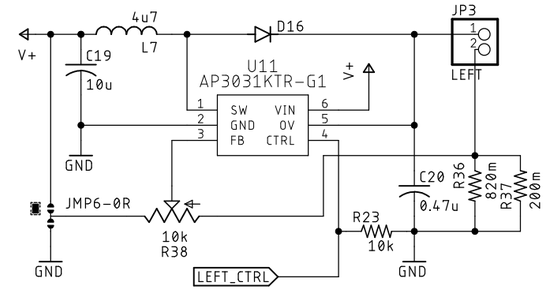

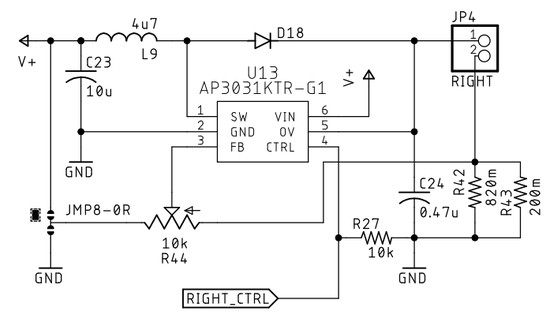

Raspberry Pi (RPi)
Connected to the digital camera and display to provide a view out of the vehicle. This view is overlaid with the datas from the sensors.

Communicates with the system over USART (serial), with protection.
SHDN button pulls down a pin to signal the RPi to shutdown properly.

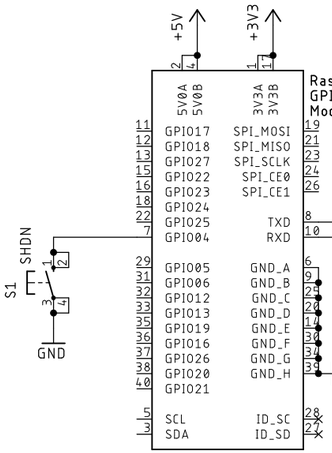

Data Connections
A slight mess.
STM32 sits in the middle to connect everything, collect data, and handle real-time events.
Protection diodes installed to shield subsytems systems in the event of any over/underloads on data lines.

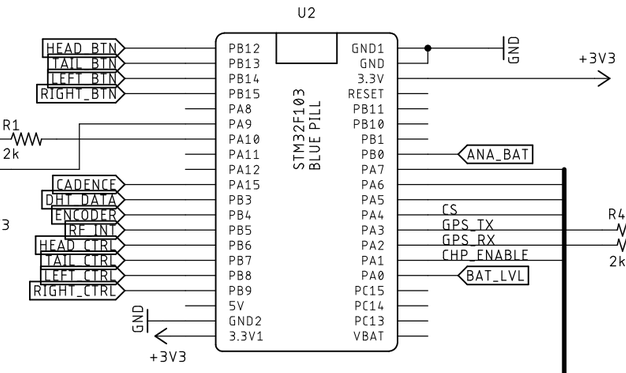

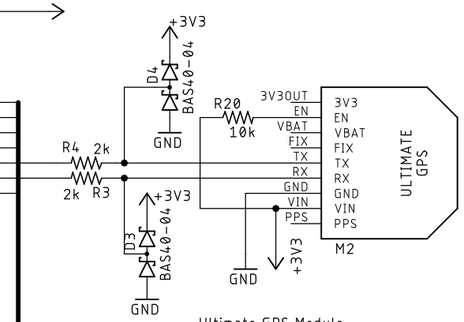

Ultimate GPS Module
Used to gather GPS data, including speed as a backup for the encoder.

STM32F103C8 "Bluepill" Development Board (U2)
The heart of the data system for the vehicle.
Collects data accross pins from sensors and routes communication between the different modules as needed. Operates in a "call and response" manner,where a connected device needs to make a request for data otherwise the STM32 will not provide any information.

This board operates at 3V3, although some pins are 5V tolerant.

STM32 connections:
- RPi – Serial1
- GPS – Serial2
- nRF24 – SPI (chip select on PA4, operating mode on PA1, interupt pulls down PB5)
- Analog In – Battery levels (after resistor voltage divider)
- Digital I/O for everything else (PWM for light control)

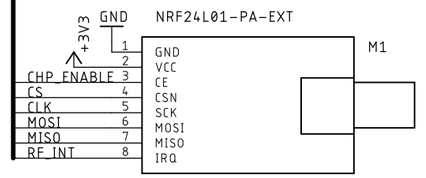

nRF24L01-PA Module
Used for potential telecommunication to pit or chase vechicle.
Functional range proven to be up to 1.1km.

Rotational Speed Encoders

Used to determine the rotational speed of either the pedals (cadence) or wheel (encoder), using a digital interupt to pull down pins on the STM32.

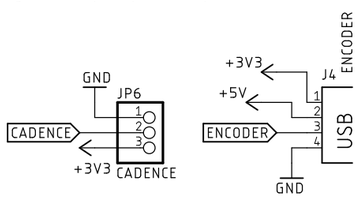

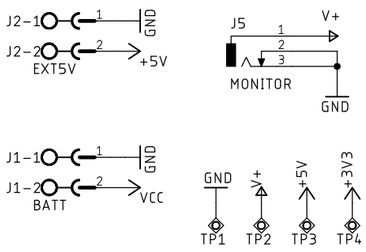

Power connections and test points

- One connector to the battery.
- Another to pass power to the monitor used.
- One connector for an external 5V supply if the built in one is non-functional or 5V is needed externally.

Test points are for the power buses.

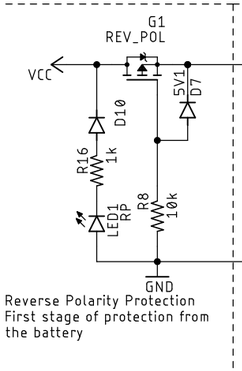

Reverse Polarity Protection
First stage of protection from the battery

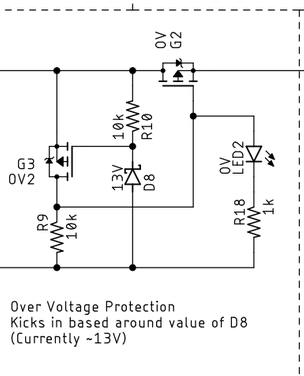

Over Voltage Protection
Kicks in based around value of D8
(Currently ~13V)

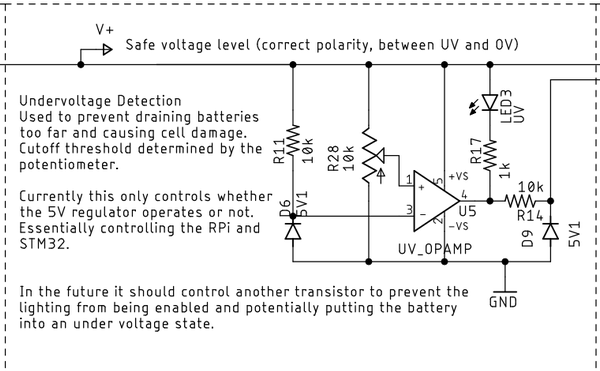

Undervoltage Detection
Used to prevent draining batteries too far and causing cell damage.
Cutoff threshold determined by the potentiometer.

Currently this only controls whether the 5V regulator operates or not. Essentially controlling the RPi and STM32.

In the future it should control another transistor to prevent the lighting from being enabled and potentially putting the battery into an under voltage state.

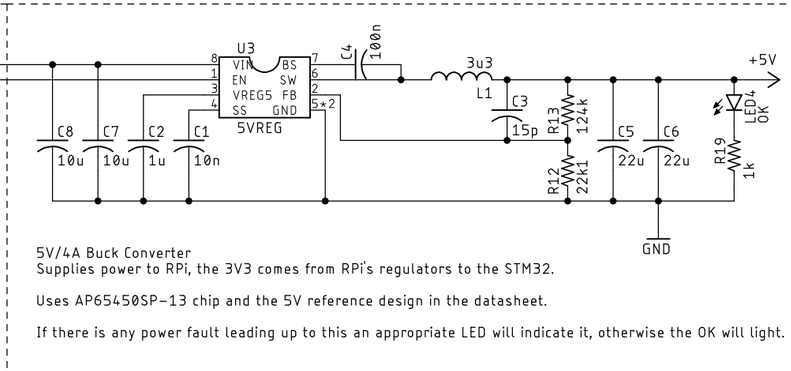

5V/4A Buck Converter
Supplies power to RPi, the 3V3 comes from RPi's regulators to the STM32.

Uses AP65450SP-13 chip and the 5V reference design in the datasheet.

If there is any power fault leading up to this an appropriate LED will indicate it, otherwise the OK will light.