

### **Datasheet**

### **Key Features**

- High-end security controller
- Turnkey solution
- Mutual authentication using ECDSA
- DTLS client IETF standard RFC 6347
- Secure communication using DTLS
- Compliant with the USB Type-C<sup>™</sup> Authentication standard
- I2C interface
- Up to 10 kB user memory
- Cryptographic support: ECC NIST P256 and P384, AES-128 (via DTLS client), SHA-256, TRNG, DRNG
- PG-USON-10-2 package (3 x 3 mm)
- Standard & extended temperature ranges
- Full system integration support with Host Software Library
- Common Criteria Certified EAL6+ (high) hardware
- Crypto ToolBox with ECC NIST P256, P384, SHA-256 (sign, verify, key generation, ECDH, key derivation)
- Device Security Monitor
- Lifetime for Industrial Automation and Infrastructure is 20 years and 15 years for other Application Profiles

### **Benefits**

- Protection of IP and data
- Protection of business case
- Protection of corporate image
- · Safeguarding of quality and safety

### **Applications**

- Industrial control and automation
- Consumer electronics and Smart home
- Medical devices

# About this document

# Scope and purpose

This Datasheet provides information to enable integration of a security device, and includes package, connectivity and technical data.

## Intended audience

This Datasheet is intended for device integrators and board manufacturers.



# Datasheet

# Introduction



Abou <sup>.</sup>	t this document	1
1	Introduction	3
1.1	Broad range of benefits	3
1.2	Enhanced security	3
1.3	Fast and easy integration	3
1.4	Applications	3
1.5	Device Features	3
2	System Block Diagram	6
3	Interface and Schematics	8
3.1	System Integration Schematics	8
4	Description of packages	9
4.1	PG-USON-10-2	9
4.2	Production sample marking pattern	10
5	Technical Data	12
5.1	I2C Interface Characteristics	12
5.1.1	I2C Standard/Fast Mode Interface Characteristics	12
5.1.2	I2C Fast Mode Plus Interface Characteristics	13
5.1.3	Electrical Characteristics	14
5.1.4	DC Electrical Characteristics	14
5.1.5	AC Electrical Characteristics	14
5.1.6	Start-Up of I2C Interface	15
5.1.6.	1 Startup after Power-On	15
5.1.6.	2 Startup for Warm Resets	16
6	Connecting to Host	18
6.1	OPTIGA™ Trust X Host Software Architecture	18
6.2	Release Package Folder Structure	18
6.3	Host Software Folder Structure	19
6.4	Porting Notes	21
6.5	Communication with OPTIGA™ Trust X	
6.6	Reference code on XMC4500 for communicating with OPTIGA™ Trust X	23
7	OPTIGA™ Trust X Commands	26
8	Security Monitor	27
8.1	Security Events	27
8.2	Security Policy	27
9	RoHS Compliance	28
10	Appendix A – Infineon I2C Protocol Registry Map	29
10.1	IFX I2C Protocol Variations	31
11	Appendix B – Power Management	33
11.1	Low Power Sleep Mode	33
Revis	ion history	34

Introduction



### 1 Introduction

As embedded systems (e.g. IoT devices) are increasingly gaining the attention of attackers, Infineon offers the OPTIGA™ Trust X as a turnkey security solution for industrial automation systems, smart homes, consumer devices and medical devices. This high-end security controller comes with full system integration support for easy and cost-effective deployment of high-end security for your assets.

# 1.1 Broad range of benefits

Integrated into your device, the OPTIGA™ Trust X supports protection of your brand and business case, differentiates your product from your competitors, and adds value to your product, making it stronger against cyberattacks.

# 1.2 Enhanced security

The OPTIGA™ Trust X is based on advanced security controller with built-in tamper proof NVM for secure storage and Symmetric/Asymmetric crypto engine to support ECC 256, AES-128 and SHA-256. This new security technology greatly enhances your overall system security.

# 1.3 Fast and easy integration

The turnkey setup – with full system integration and all key/certificate material preprogrammed – reduces your efforts for design, integration and deployment to a minimum. As a turnkey solution, the OPTIGA™ Trust X comes with preprogrammed OS/Application code locked and with host-side modules to integrate with host micro controller software. The extended temperature range of −40°C to +105°C combined with a standardized I2C interface and the small PG-USON-10-2 footprint will facilitate onboarding in your existing ecosystem. Almost 30 years in a market-leading position with nearly 20 billion security controllers shipped worldwide are the result of Infineon's strong expertise and its commitment to make security a success factor for you.

# 1.4 Applications

The OPTIGA™ Trust X covers a broad range of use cases necessary for many types of applications that include the following:

- a) Network node protection such as TLS or DTLS
- b) Protect the Authenticity, Integrity and Confidentiality of your product, data and IP
- c) Mutual Authentication
- d) Secure Communication
- e) Datastore Protection
- f) Lifecycle Management
- g) Platform Integrity Protection
- h) Secure Updates

### 1.5 Device Features

The OPTIGA™ Trust X comes with upto 10kB user memory that can be used to store X.509 certificates. OPTIGA™ Trust X is based on Common Criteria Certified EAL6+ (high) hardware enabling it to prevent physical attacks on the device itself and providing high assurance that the keys or arbitrary data stored cannot be accessed by an unauthorized entity. OPTIGA™ Trust X supports a highspeed I2C communication interface of up to 1MHz (FM+).

# Datasheet

# Introduction



Table 1 Products

Туре	Description	Temperature range	Package
OPTIGA™ Trust X	Embedded security solution	−25°C to +85°C Standard	PG-USON-10-2
SLS 32AIA020X4	for connected devices	Temperature Range (STR)	
OPTIGA™ Trust X	Embedded security solution	−40°C to +105°C Extended	PG-USON-10-2
SLS 32AIA020X2	for connected devices	Temperature Range (ETR)	
Evaluation Kit	Includes host micro controller connected to OPTIGA™ Trust X with USB/Ethernet adapters to connect to external world which enables you to evaluate OPTIGA™ Trust X features and start the Design-In activity		Board

Infineon and its distribution partners offer a wide range of customization options (e.g. X.509 certificate generation and key provisioning) for the security chip.

Table 2 Abbreviations

Abbreviation	Definition				
AES	Advanced Encryption Standard				
API	Application Programming Interface				
AUTH	Authentication				
CA	Certification Authority				
DTLS	Datagram Transport Layer Security				
DRNG	Deterministic Random Number Generator				
EAL	Evaluation Assurance Level				
ECC	Elliptic Curve Cryptography				
ECDH	Elliptic Curve Diffie Hellman				
ECDSA	Elliptic Curve Digital Signature Algorithm				
ETR	Extended Temperature Range				
IETF	Internet Engineering Task Force				
IOT	Internet of Things				
IP	Intellectual Property				
I2C	Inter-Integrated Circuit				
NIST	National Institute of Standards and Technology				
OCP	OPTIGA™ Crypto and Protected Communication				
os	Operating System				
PAL	Platform Abstraction Layer				
PKI	Public Key Infrastructure				
RFC	Request For Comments				
TLS	Transport Layer Security				

# Datasheet





# Introduction

Abbreviation	Definition
TRNG	True Random Number Generator
SHA	Secure Hash Algorithm
SKU	Stock Keeping Unit
STR	Standard Temperature Range
USB	Universal Synchronous Bus

System Block Diagram



# 2 System Block Diagram

The following figure depicts the system block diagram for OPTIGA™ Trust X.

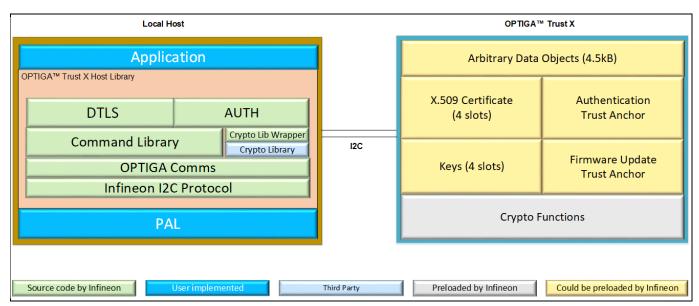


Figure 1 System Block Diagram

The System Block Diagram is explained below for each layer.

### 1. Local Host

- o Application This is the target application which utilizes OPTIGA™ Trust X for its security needs
- o DTLS DTLS client aka. OCP Library provides APIs for performing Mutual Authentication and Encrypted Communication using OPTIGA™ Trust X
- o AUTH Authentication aka. Integration Library provides APIs for performing One Way Authentication for Brand Protection and IP Protection using OPTIGA™ Trust X
- Command Library Provides APIs to send and receive commands to and from OPTIGA™ Trust X.
   Any TLS stack can be integrated to offload crypto operations to OPTIGA™ Trust X via this Command Library.
- Crypto Lib Wrapper Provides wrapper APIs for Third Party crypto library, mainly used in One Way Authentication
- o Crypto Library External cryptographic software which is used for One Way Authentication
- o OPTIGA Comms Provides wrapper APIs for communication with OPTIGA™ Trust X
- o Infineon I2C Protocol Infineon protocol over I2C (IFX I2C) to communicate with OPTIGA™ Trust x
- PAL A layer that abstracts platform specific drivers (e.g. i2c, timer, gpio, sockets etc.)

### 2. OPTIGA™ Trust X

- Arbitrary Data Objects The target application can store upto 4.5kB (~4600 bytes) of data into OPTIGA™ Trust X
- o X.509 Upto 4, X.509 based Certificates can be stored into OPTIGA™ Trust X
- Keys Upto 4, ECC based keys can be stored into OPTIGA™ Trust X

### **Datasheet**

# **System Block Diagram**



- o Mutual Authentication Trust Anchor Customer PKI domain Trust Anchor for Mutual Authentication (TLS/DTLS) can be stored into OPTIGA™ Trust X
- o Firmware Update Trust Anchor Customer PKI domain Trust Anchor for Firmware Updates can be stored into OPTIGA™ Trust X
- Crypto Functions OPTIGA™ Trust X provides cryptographic functions and protocols that can be invoked via local host

Note:

Unique ECC private keys and X.509 Certificates – During production at Infineon fab, unique asymmetric keys (private and public) are generated. The public key is signed by customer specific CA and resulting X.509 certificate issued is securely stored on OPTIGA™ Trust X. Special measures are taken to prevent leakage and modification of private key at the Common Criteria Certified production site

**Interface and Schematics** 



# 3 Interface and Schematics

This section explains the schematics of the product and gives some recommendations as to how the controller should be externally connected.

# 3.1 System Integration Schematics

Figure 1 illustrates how to integrate OPTIGA™ Trust X to your local host.

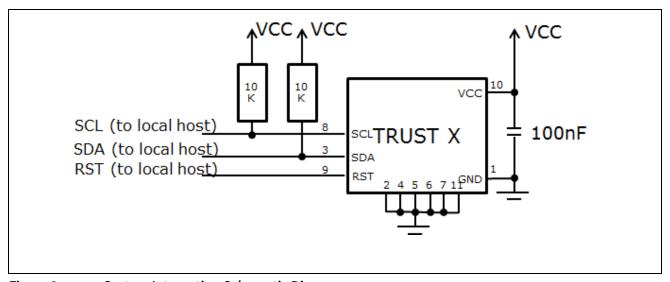


Figure 2 System Integration Schematic Diagram

Note: Value of the pullup resistors depends on the target application circuit and the targeted I2C frequency.

**Description of packages** 



# 4 Description of packages

This chapter provides information on the package types and how the interfaces of each product are assigned to the package pins. For further information on compliance of the packages with European Parliament Directives, see "RoHS Compliance" on Page 28.

For details and recommendations regarding the assembly of packages on PCBs, please see the following: <a href="http://www.infineon.com/cms/en/product/technology/packages/">http://www.infineon.com/cms/en/product/technology/packages/</a>

### 4.1 PG-USON-10-2

The package dimensions (in mm) of the controller in PG-USON-10-2 packages are given below.

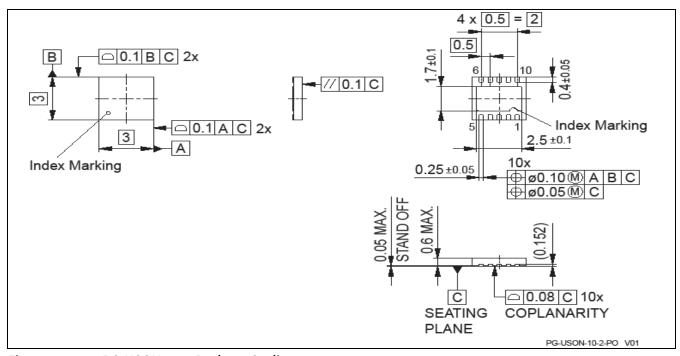


Figure 3 PG-USON-10-2 Package Outline

The following figure shows the footprint of the PG-USON-10-2 package:

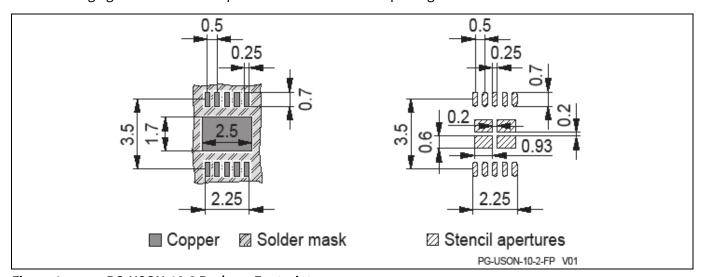


Figure 4 PG-USON-10-2 Package Footprint

### **Description of packages**



The figure below shows the PG-USON-10-2 in top view:

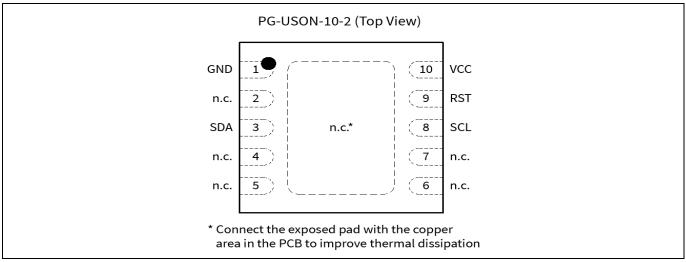


Figure 5 PG-USON-10-2 top view

# 4.2 Production sample marking pattern

The following figure describes the productive sample marking pattern on PG-USON-10-2.

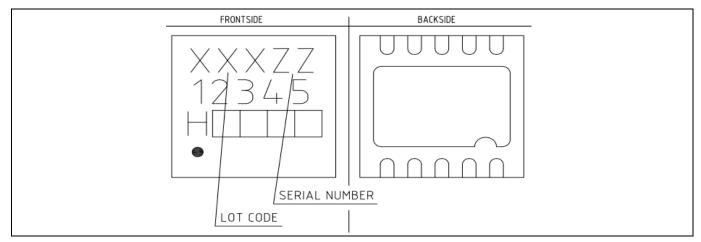


Figure 6 PG-USON-10-2 sample marking pattern

The black dot indicates pin 01 for the chip. The following table describes the sample marking pattern:

Table 3 Marking table for PG-USON-10-2 Packages

ndicator Description						
LOT CODE	Defined and inserted during fabrication					
ZZ	Indicates the Certifying Authority Serial Number / SKU#, e.g. "00" would mean "SKU#0"					
H/E	H = "Halogen-free", E = "Engineering samples" This indicator is followed by "YYWW", where YY is the "Year" and WW is the "Work Week" of the production. This is inserted during fabrication. Engineering samples have "E YYWW" and productive samples have "H YYWW"					

# Datasheet

# infineon

# Description of packages

Indicator	Description
12345	Convention: T&#\$@</td></tr><tr><td></td><td>where:</td></tr><tr><td></td><td>The letter "T" indicates the OPTIGA Trust family</td></tr><tr><td></td><td>• & indicates whether the product is a Trust X or Trust E controller</td></tr><tr><td></td><td>• # indicates whether the controller is an ETR (E) or STR (S) variant</td></tr><tr><td></td><td>• \$ specifies the OPTIGA™ Trust X/E release version number</td></tr><tr><td></td><td>@ specifies the software version</td></tr><tr><td></td><td>Example: "TXE10" means 'OPTIGA™ Trust X', 'ETR variant', 'release version 1', 'software version 0'</td></tr></tbody></table>

The contacts and their functionality are given in the table below.

Table 4 Contact Definitions and Functions of PG-USON-10-2 Packages

Pin	Туре	Function		
01	GND	Supply voltage (Ground)		
02	NC	Not connected		
03	I/O	Serial Data Line (SDA)		
04	NC	Not connected		
05	NC	Not connected		
06	NC	Not connected		
07	NC	Not connected		
08	I/O	Serial Clock Line (SCL)		
09	IN	Active Low Reset (RST)		
10	PWR	Supply voltage (V <sub>cc</sub> )		



# 5 Technical Data

This section summarizes the technical data of the product. It provides the operational characteristics as well as the electrical DC and AC characteristics.

### 5.1 I2C Interface Characteristics

Table 5 I2C Operation Supply and Input Voltages

Parameter	Symbol	Values				Note or Test Condition	
		Min.	Тур.	Max.			
Supply voltage	$V_{\rm CC\_I2C}$	1.62	_	5.5	V		
SDA, SCL input voltage	V <sub>IN_I2C</sub>	-0.3	-	$V_{CC_{-12C}} + 0.5 \text{ or}$ 5.5 <sup>1</sup>	V	V <sub>CC_I2C</sub> is in the operational supply range	
		-0.3	_	5.5	V	$V_{\rm CC\_I2C}$ is switched off	

<sup>1)</sup> Whichever is lower

Table 6

# 5.1.1 I2C Standard/Fast Mode Interface Characteristics

**I2C Standard Mode Interface Characteristics** 

For operation of the I2C interface, the electrical characteristics are compliant with the I<sup>2</sup>C bus specification Rev. 4 for "standard-mode" ( $f_{SCL}$  up to 100 kHz) and "fast-mode" ( $f_{SCL}$  up to 400 kHz), with certain deviations as stated in the table below.

Note:  $T_A$  as given for the operating temperature range of the controller unless otherwise stated.

Parameter	Symbol	Values			Unit	<b>Note or Test Condition</b>
		Min.	n. Typ.	Max.		
SCL clock frequency	f <sub>SCL</sub>	0	-	100	kHz	
Input low-level	V <sub>IL</sub>	-0.3	_	0.3 * V <sub>CC_I2C</sub>	V	
Low-level output voltage	V <sub>OL1</sub>	0	-	0.4	V	Sink current 3 mA; $V_{CC\_12C} \ge 2.7 \text{ V}$ Sink current 2 mA; $V_{CC\_12C} < 2.7 \text{ V}$
Low-level output current	I <sub>OL</sub>	3 2	-	-	mA	$V_{OL} = 0.4 \text{ V}; V_{CC\_I2C} \ge 2.7 \text{ V}$ $V_{OL} = 0.4 \text{ V}; V_{CC\_I2C} < 2.7 \text{ V}$
Output fall time from V <sub>IHmin</sub> to V <sub>ILmax</sub> (at device pin)	t <sub>OF</sub>	-	-	250	ns	$C_b \le 400 \text{ pF; } V_{CC\_I2C} \ge 2.7 \text{ V}$ $C_b \le 200 \text{ pF; } V_{CC\_I2C} \le 2.7 \text{ V}$
Capacitive load for each bus line	Сь	-	-	400 200	pF	$V_{CC\_I2C} \ge 2.7 \text{ V}$ $V_{CC\_I2C} < 2.7 \text{ V}$

Table 7 I2C Fast Mode Interface Characteristics

Parameter	Symbol	Values			Unit	Note or Test Condition
		Min.	Тур.	Max.		

### **Datasheet**

### **Technical Data**



Parameter	Symbol	Values			Unit	Note or Test Condition
		Min.	Тур.	Max.		
SCL clock frequency	$f_{SCL}$	0	_	400	kHz	
Input low-level	V <sub>IL</sub>	-0.3	_	0.3 * V <sub>CC_I2C</sub>	V	
Low-level output voltage	V <sub>OL1</sub>	0	-	0.4	V	Sink current 3 mA; $V_{CC_{12C}} \ge 2.7 \text{ V}$ Sink current 2 mA; $V_{CC_{12C}} < 2.7 \text{ V}$
Low-level output current	I <sub>OL</sub>	3 2	-	-	mA	$V_{OL} = 0.4 \text{ V}; V_{CC\_I2C} \ge 2.7 \text{ V}$ $V_{OL} = 0.4 \text{ V}; V_{CC\_I2C} < 2.7 \text{ V}$
Output fall time from V <sub>IHmin</sub> to V <sub>ILmax</sub> (at device pin)	t <sub>OF</sub>	20 * V <sub>CC_I2C</sub> / 5.5 V <sup>1</sup>	-	250	ns	$C_b \le 400 \text{ pF}; V_{CC\_I2C} \ge 2.7 \text{ V}$ $C_b \le 200 \text{ pF}; V_{CC\_I2C} \le 2.7 \text{ V}$
Capacitive load for each bus line	Сь	15 <sup>2</sup>	-	400 200	pF	$V_{CC\_12C} \ge 2.7 \text{ V}$ $V_{CC\_12C} < 2.7 \text{ V}$

<sup>1)</sup> A min. capacitive load is necessary to reach  $t_{\text{OF}}$ 

# 5.1.2 I2C Fast Mode Plus Interface Characteristics

For operation of the I2C interface, the electrical characteristics are compliant with the  $I^2C$  bus specification Rev. 4 for "fast mode plus" ( $f_{SCL}$  up to 1 MHz), with certain deviations as stated in the table below.

Note:  $T_A$  as given for the operating temperature range of the controller unless otherwise stated.

Table 8 I2C Fast Mode Plus Interface Characteristics

Parameter	Symbol	Values			Unit	Note or Test Condition
		Min.	Тур.	Max.		
SCL clock frequency	f <sub>SCL</sub>	0	_	1000	kHz	
Input low-level	V <sub>IL</sub>	-0.3	_	0.3 * V <sub>CC_I2C</sub>	V	
Low-level output voltage	V <sub>OL1</sub>	0	-	0.4	V	Sink current 3 mA; $V_{CC_12C} \ge 2.7 \text{ V}$ Sink current 2 mA; $V_{CC_12C} < 2.7 \text{ V}$
Low-level output current	I <sub>OL</sub>	3 2	-	_	mA	$V_{OL} = 0.4 \text{ V}; V_{CC\_I2C} \ge 2.7 \text{ V}$ $V_{OL} = 0.4 \text{ V}; V_{CC\_I2C} < 2.7 \text{ V}$
Output fall time from V <sub>IHmin</sub> to V <sub>ILmax</sub> (at device pin)	t <sub>OF</sub>	20 * V <sub>CC_I2C</sub> / 5.5 V <sup>1</sup>	-	120	ns	C <sub>b</sub> ≤ 150 pF
Capacitive load for each bus line	Сь	15¹	-	150	pF	

<sup>1)</sup> A min. capacitive load is necessary to reach top

<sup>2)</sup> A min. capacitive load is necessary to reach t<sub>fmin</sub>



## 5.1.3 Electrical Characteristics

Note:

 $T_A$  as given for the operating temperature range of the controller unless otherwise stated. All currents flowing into the controller are considered positive.

### 5.1.4 DC Electrical Characteristics

 $T_{\text{\tiny A}}$  as given for the controller's operating ambient temperature range unless otherwise stated.

All currents flowing into the controller are considered positive.

Table 9 Electrical Characteristics

Parameter	Symbol		Values		Unit	Note or Test Condition
		Min.	Тур.	Max.		
Supply voltage	<b>V</b> cc	1.62	_	5.5	V	Overall functional range
	V <sub>CC_I2C</sub>	1.62	-	5.5	V	Supply voltage range for operation of I2C
Supply current <sup>1</sup>	I <sub>CCAVG</sub>	-	20.0	-	mA	While running a typical authentication profile T <sub>A</sub> = 25°C; V <sub>CC</sub> = 5.0 V
Supply current, in sleep mode	I <sub>CCS3</sub>	-	70	100	μА	$T_A = 25$ °C; $V_{CC\_12C} = 3.3$ V; I2C ready for operation (no bus activity), all other inputs at $V_{CC}$ , no other interface activity
RST input low voltage	V <sub>IL</sub>	-0.3	_	0.2 * V <sub>cc</sub>	V	$I_{IL} = -50 \mu\text{A} \text{ to } +20 \mu\text{A}$
RST input high voltage	V <sub>IH</sub>	0.7 * V <sub>cc</sub>	_	V <sub>CC</sub> + 0.3	V	$I_{IL} = -50 \mu A \text{ to } +20 \mu A$

<sup>1)</sup> Supply current can be limited from 6mA to 15mA by software commands.

### 5.1.5 AC Electrical Characteristics

 $T_A$  as given for the controller's operating ambient temperature range unless otherwise stated. All currents flowing into the controller are considered positive.

Table 10 AC Characteristics

Parameter	Symbol	Values			Unit	Note or Test Condition
		Min.	Тур.	Max.		
V <sub>cc</sub> rampup time	t <sub>VCCR</sub>	1	-	1000	μs	400 mV to 90% of V <sub>CC</sub>
						target voltage ramp

The  $V_{CC}$  ramp is depicted in Figure 7. 90% of the target supply voltage must be reached within  $t_{VCCR}$  after it has exceeded 400 mV. Moreover, its variation must be kept within a  $\pm 10\%$  range.



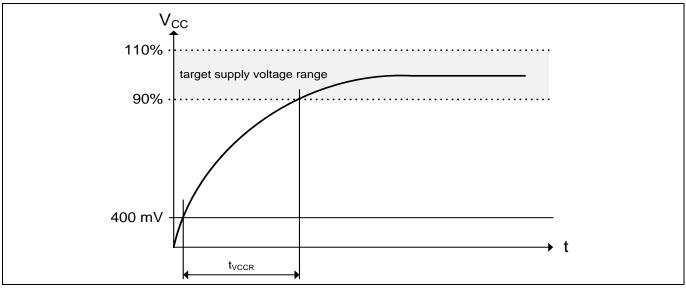


Figure 7 V<sub>cc</sub> Rampup

# 5.1.6 Start-Up of I2C Interface

There are 2 variants possible for performing the startup procedure:

- Startup after power-on
- · Startup for warm resets

# 5.1.6.1 Startup after Power-On

The activation of the I2C interface after power-on needs the following reset procedure.

- VCC is powered up and the state of the SDA and SCL line are set to high level during power-up
- The first transmission may start at the earliest  $t_{\text{STARTUP}}$  after power-up of the device

The following figure shows the startup timing of the I2C interface for this case.

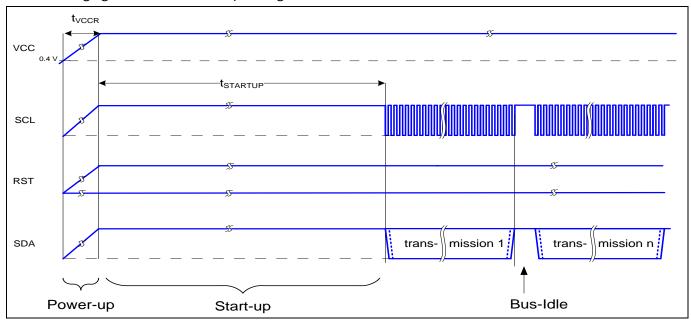


Figure 8 Startup of I2C Interface after Power-On



Table 11 Startup of I2C Interface After Power-On

Parameter	Symbol	Values			Unit	Note or Test Condition
		Min.	Тур.	Max.		
Startup time	t <sub>STARTUP</sub>	10			ms	

# 5.1.6.2 Startup for Warm Resets

When using the reset signal for triggering a warm reset after power-on, the activation of the I2C interface needs the following reset procedure

- VCC remains powered up.
- The terminal stops I2C communication. SDA and SCL lines are set to high level before RST is set to low level.
- After its falling edge, RST has to be kept at low level for at least t1. At the latest t2 after the falling edge of RST, the terminal must set RST to high level.
- The first transmission may start at the earliest t<sub>STARTUP</sub> after the rising edge of RST

The following figure shows the timing for this startup case.

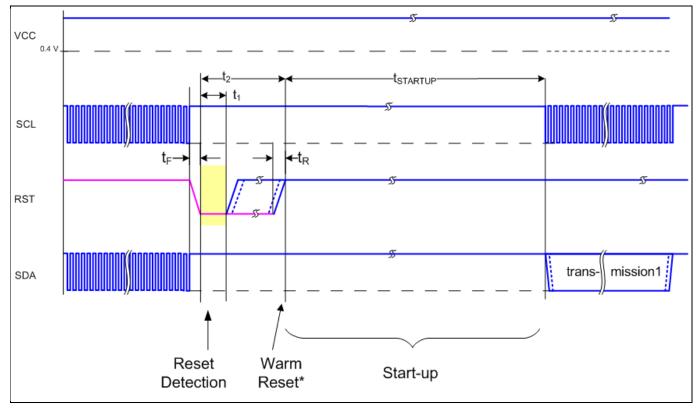


Figure 9 Startup of I2C Interface for Warm Resets

Note: If NVM programming was requested prior to the reset,  $t_{STARTUP}$  will be extended from a typical value of 10 ms to a maximum of 12 ms.

# Datasheet

# **Technical Data**



Table 12 Startup of I2C Interface for Warm Resets<sup>1</sup>

Parameter	Symbol	Values			Unit	Note or Test Condition	
		Min.	Тур.	Max.			
Startup time	t <sub>STARTUP</sub>	10			ms		
Rise time	t <sub>R</sub>			1	μs	From 10% to 90% of signal amplitude	
Fall time	t₅			1	μs	From 10% to 90% of signal amplitude	
Reset detection	t <sub>1</sub>	10			μs		
Reset low		10		2500	μs		

<sup>1)</sup> Reset triggered by software (without power off/on cycle)

**Connecting to Host** 



# 6 Connecting to Host

# 6.1 OPTIGA™ Trust X Host Software Architecture

In Figure 1 the System Block Diagram was explained which covered the OPTIGA™ Trust X Host Library layers. In following sections, we will cover how to communicate with OPTIGA™ Trust X using I2C.

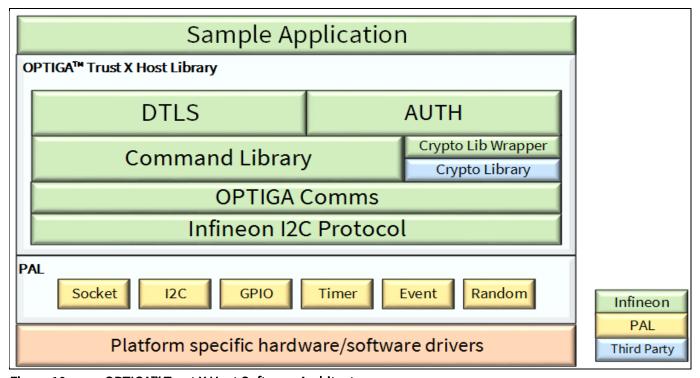


Figure 10 OPTIGA™ Trust X Host Software Architecture

# 6.2 Release Package Folder Structure

The following figure shows the release package structure when OPTIGA™ Trust X is installed/extracted on PC.

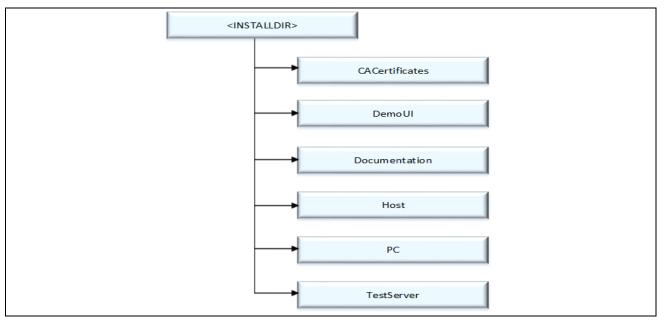


Figure 11 Release Package Folder Structure

### **Connecting to Host**

- 1. <INSTALLDIR> is the root directory to which the release contents are installed or extracted. The content of each subdirectory under installed directory <INSTALLDIR> is explained below.
- 2. CACertificates

This directory contains OPTIGA™ Trust X Test and Productive Trust-Anchor/CA certificates.

3. DemoUI

This directory contains binaries and Demo UI Application for OPTIGA™ Trust X.

4. Documentation

This directory contains all common OPTIGA™ Trust X documentation.

5. Host

This directory contains source files, header files, binaries, documents, API as compiled help (CHM) and sample application for OPTIGA™ Trust X Host Software.

6. PC

This directory contains source files, header files, binaries and sample application for OPTIGA™ Trust X PC Software.

7. TestServer

This directory contains Sample Test Server Application and Test certificates required for DTLS client feature demonstration

### 6.3 Host Software Folder Structure

The following figure shows the Host Software folder structure when OPTIGA™ Trust X is installed on PC.

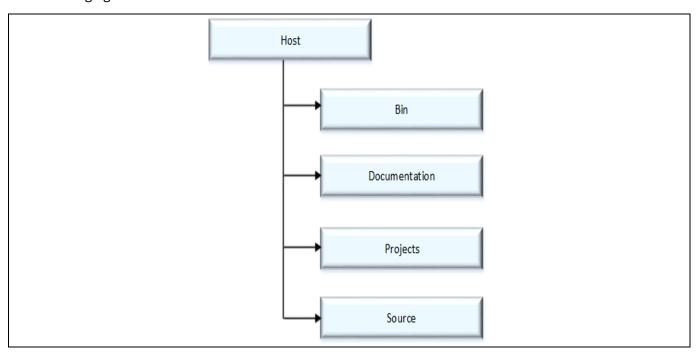


Figure 12 Host Software Folder Structure

### 1. Bin

This directory contains prebuilt binaries for Eval Kit based on XMC4500 Relax Kit v1 that communicates with OPTIGA™ Trust X.

### 2. Documentation

### **Datasheet**

### **Connecting to Host**



This directory contains documentation outlining software for Eval Kit based on XMC4500 Relax Kit v1.

### 3. Projects

This directory contains project files for Eval Kit based on XMC4500 Relax Kit v1.

### 4. Source

This directory contains all source files for OPTIGA™ Trust X Host Software Library.

Further the following figure elaborates the Host Software source folder structure.

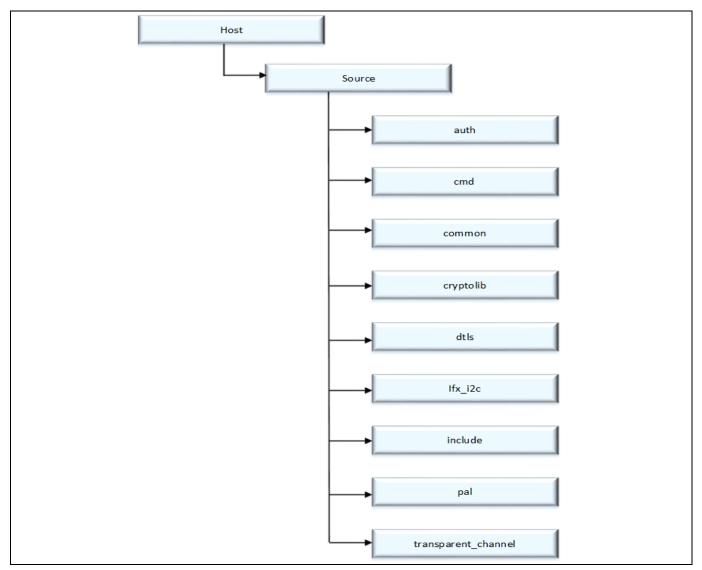


Figure 13 Host Source Folder Structure

- 1. auth This folder contains sources for One Way Authentication which are platform independent. The layer is also known as Integration Library.
- 2. cmd This folder contains sources for all OPTIGA™ Trust X commands which are platform independent.
- 3. common This folder contains sources that are common for all functionality (e.g. utilities).
- 4. cryptolib This folder contains binaries for crypto library wrapper which is platform independent.
- 5. dtls This folder contains sources for Mutual Authentication and Encrypted Communication using DTLS client, which are platform independent. The layer is also known as OCP Library.

### Datasheet

### **Connecting to Host**



- 6. ifx\_i2c This folder contains sources for Infineon protocol over I2C (aka IFX I2C).
- 7. include This folder contains header files for all Host Software.
- 8. pal This folder contains all the platform dependent code.
- 9. transparent\_channel This folder contains transparent channel communication mainly used for Eval Kit.

# 6.4 Porting Notes

The Platform Abstraction Layer (PAL) APIs have to be updated to integrate the OPTIGA™ Trust X host libraries in the local host target platform.

The PAL reference code for the XMC4500 Relax kit is provided as part of package which can be used. The implementation can be referred in "<INSTALLDIR>/Host/Source/pal/xmc4500" and the header files are available in "<INSTALLDIR>/Host/Source/Include" with the required APIs used by upper layers. The header files are platform agnostic and would not require any change.

# 6.5 Communication with OPTIGA™ Trust X

The hardware/platform resource configuration with respect to I2C master and GPIOs (Vdd and Reset) are to be updated in *pal\_ifx\_i2c\_config.c*. These configurations are used by the IFX I2C implementation to communicate with OPTIGA™ Trust X.

1. Update I2C master platform specific context[e.g. (void\*)&i2c\_master\_0]

```
* \brief PAL I2C configuration for OPTIGA
002
003
            */
            pal i2c t optiga pal i2c context 0 =
004
005
006
                 /// Pointer to I2C master platform specific context
007
                 (void*)&i2c master 0,
800
                 /// Slave address
009
                 0x30,
010
                 /// Upper layer context
011
                 NULL,
012
                 /// Callback event handler
013
                 NULL
014
            };
```

2. Update platform specific context for GPIOs (Vdd and Reset) [e.g. (void\*)&pin\_3\_4]

```
001
             * \brief Vdd pin configuration for OPTIGA
002
            */
003
004
            pal gpio t optiga vdd 0 =
005
006
                 // Platform specific GPIO context for the pin used to toggle Vdd
007
                 (void*) &pin 3 4
008
            };
009
            /**
010
011
             * \brief Reset pin configuration for OPTIGA
012
013
            pal gpio t optiga reset 0 =
014
015
                 // Platform specific GPIO context for the pin used to toggle Reset
016
                 (void*) &pin 3 3
017
            };
```

### **Datasheet**

### **Connecting to Host**



3. Update PAL I2C APIs [pal i2c.c] to communicate with OPTIGA™ Trust X

The pal\_i2c is expected to provide the APIs for I2C driver initialization, de-initialization, read, write and set bitrate kind of operations

- a) pal\_i2c\_initb) pal\_i2c\_deinitc) pal\_i2c\_read
- -1) pal\_i2o\_rodd
- d) pal\_i2c\_write
- e) pal\_i2c\_set\_bitrate

In few target platforms, the I2C master driver initialization (<code>pal\_i2c\_init</code>) is done during the platform start up. In such an environment, there is no need to implement <code>pal\_i2c\_init</code> and <code>pal\_i2c\_deinit</code> functions. Otherwise, these (<code>pal\_i2c\_init</code> & <code>pal\_i2c\_deinit</code>) functions must be implemented as per the upper layer expectations based on the need. The details of these expectations are available in the Host library API documentation (chm).

The reference implementation of PAL I2C based on XMC4500 Relax kit does not need to have the platform I2C driver initialization explicitly done as part of *pal\_i2c\_init* as it is taken care by the DAVE library initialization. Hence *pal\_i2c\_init* & *pal\_i2c\_deinit* are not implemented.

In addition to the above specified APIs, the PAL I2C must handle the events from the low level I2C driver and invoke the upper layer handlers registered with PAL I2C context for the respective transaction as shown in the below example.

In above example the I2C driver callback, when transmit is successful invokes the handler to inform the result.

- 4. Update PAL GPIO [pal gpio.c] to power on and reset the OPTIGA™ Trust X
  - a) pal\_gpio\_set\_high
  - b) pal\_gpio\_set\_low
- 5. Update PAL Timer [pal\_os\_timer.c] to enable timer
  - a) pal os timer get time in milliseconds
  - b) pal\_os\_timer\_delay\_in\_milliseconds
- 6. Update Event management for the asynchronous interactions for IFX I2C [pal\_os\_event.c]
  - a) pal\_os\_event\_register\_callback\_oneshot
  - b) scheduler\_timer\_isr

The *pal\_os\_event\_register\_callback\_oneshot* function is expected to register the handler and context provided as part of input parameters and triggers the timer for the requested time.

### **Datasheet**



### **Connecting to Host**

```
//lint --e{534} suppress "Return value is not required to be checked"

TIMER_SetTimeInterval(&scheduler_timer , (time_us*100));

TIMER_Start(&scheduler_timer);

TIMER_Start(&scheduler_timer);
```

And the handler registered must be invoked once the timer is elapsed as shown in scheduler\_timer\_isr

```
001
           void scheduler timer isr(void)
002
003
               TIMER ClearEvent (&scheduler timer);
004
                //lint --e{534} suppress "Return value is not required to be checked"
005
               TIMER_Stop(&scheduler_timer);
006
               TIMER Clear (&scheduler timer);
007
800
               if (callback registered)
009
                {
010
                    callback registered((void*)callback ctx);
011
                }
012
           }
```

# 6.6 Reference code on XMC4500 for communicating with OPTIGA™ Trust X

```
001
          static volatile uint32 t optiga pal event status;
002
          extern void ifx i2c pl pal event handler(
003
                                      void *p ctx,uint8 t event);
004
          void optiga pal i2c event handler (
005
                                      void* upper_layer_ctx,
006
                                      uint8 t event);
007
800
          pal i2c t optiga pal i2c context 0 =
009
               /// Pointer to I2C master context
010
011
               (void*)&i2c master 0,
               /// Slave address
012
013
               0x30,
014
               /// Upper layer context
015
              NULL,
016
               /// Callback event handler
017
              pal i2c slave 1 event handler
018
          };
019
020
          // Pal optiga slave 1 event handler
021
          void optiga pal i2c event handler(
                                       void* upper layer ctx,
022
023
                                       uint8 t event)
024
          {
025
               optiga pal event status = event;
026
          }
027
028
          /* Function to verify I2C communication*/
029
          pal status t test optiga communication(void)
030
031
               pal status t pal return status;
032
              uint8 t data buffer[10] = \{0x82\};
033
              uint16 t data length =1;
```



### **Connecting to Host**

```
034
035
              // Set callback handler for i2c
              optiga pal i2c context 0.upper layer event handler
036
037
                                 = optiga pal i2c event handler;
038
             // Send 0x82 command to slave to check the state
039
040
             optiga pal event status = PAL I2C EVENT BUSY;
041
042
             do
043
              {
044
                 pal return status =
045
                           pal_i2c_write(&optiga_pal_i2c_context_0,
046
                                       data buffer, data length);
047
                  if (pal return status == PAL STATUS FAILURE)
048
049
                     break;
050
051
052
              // Wait until slave completes write operation
053
               while (optiga pal event status !=
                                             PAL 12C EVENT TX SUCCESS);
054
055
056
             optiga pal event status = PAL I2C EVENT BUSY;
057
058
             data length = 4;
059
              // Read the response for 0x82 command
060
             do
061
              {
062
                  pal return status =
063
                       pal i2c read(&optiga pal i2c context 0 ,
064
                                                   data buffer ,
                                                   data length);
065
066
                  if (pal return status == PAL STATUS FAILURE)
067
                  {
068
                     break;
069
                  }
070
              // Wait until slave completes read operation
              } while (optiga_pal_event status !=
071
072
                                            PAL I2C EVENT RX SUCCESS);
073
074
             return pal return status;
075
          }
076
077
078
          /**********************
079
           * Main Function
080
           ******************
081
082
083
084
           * This function is the entry point of sample.
085
           * \retval
086
087
             0 on success
880
             1 on failure
089
           * /
```

### **Datasheet**



### **Connecting to Host**

```
090
          int32 t main(Void)
091
          {
              DAVE STATUS t status;
092
093
              pal status t pal return status;
094
095
              // Initialize your host code here (e.g. timers etc)
              // Initialisation of DAVE Apps for XMC4500
096
              status = DAVE Init();
097
098
099
              // Stop if DAVE init fails
100
              if (status == DAVE STATUS FAILURE)
101
102
                  while (1U)
103
                   { ; }
104
               }
105
              pal_return_status = test_optiga_communication();
106
107
108
              return pal return status;
109
          }
```

**OPTIGA™ Trust X Commands** 



# 7 OPTIGA™ Trust X Commands

This section provides short description of OPTIGA™ Trust X commands and mapping of these commands w.r.t Use Cases.

Table 13 OPTIGA™ Trust X command table

Command Name	Description
GetDataObject	Command to get (read) a data object
SetDataObject	Command to set (write) a data object
GetRandom	Command to generate a random stream
SetAuthScheme	Command to set the authentication scheme which gets used
	subsequently
GetAuthMsg	Command to get (receive from OPTIGA™ Trust X) an authentication
	message
SetAuthMsg	Command to set (send to OPTIGA™ Trust X) an authentication
	message
ProcUpLinkMsg	Command to process an up-link message for DTLS(receive from
	OPTIGA™ Trust X)
ProcDownLinkMsg	Command to process a down-link message for DTLS (send to
	OPTIGA™ Trust X)
CalcHash	Command to calculate a Hash
CalcSign	Command to calculate a signature
VerifySign	Command to verify a signature
CalcSSec	Command to execute a Diffie-Hellmann key agreement
DeriveKey	Command to derive keys
GenKeyPair	Command to generate public/private key pairs
OpenApplication	Command to launch an application

Table 14 Mapping of OPTIGA™ Trust X command with Use cases

Use Case	OPTIGA™ Trust X commands used
Mutual Authentication using DTLS	SetAuthScheme, ProcUpLinkMsg & ProcDownLinkMsg
One Way Authentication	GetRandom, GetDataObject, SetAuthScheme, SetAuthMsg &
	GetAuthMsg
Crypto Toolbox	GetRandom, SetAuthScheme, SetAuthMsg, GetAuthMsg, CalcHash,
	CalcSign, VerifySign, CalcSSec, DeriveKey, GenKeyPair
Read General Purpose Data	GetDataObject
Write General Purpose Data	SetDataObject

**Security Monitor** 



# 8 Security Monitor

The Security Monitor is a central component which enforces the security policy of the OPTIGA™ Trust X. It consumes security events sent by security aware parts of the OPTIGA™ Trust X embedded SW and takes actions accordingly

# 8.1 Security Events

The following table provides the definition of not permitted security events considered by the OPTIGA™ Trust X implementation.

Table 15 Security Events

Event	Description					
Decryption Failure	This event occurs in case a decryption and/ or integrity check of provided data lead to an integrity failure.					
Private Key Use	This event occurs in case the internal services are going to use an OPTIGA™ Trust X hosted private key.					
Suspect System Behavior	This event occurs in case the embedded software detects inconsistencies with the expected behavior of the system. Those inconsistencies might be redundant information which doesn't fit to their counterpart.					

# 8.2 Security Policy

Security Monitor judges the notified security events regarding the number of occurrence over time and in case those violate the permitted usage profile of the system takes actions to throttle down the performance and thus the possible frequency of attacks.

The permitted usage profile is defined as:

- 1. One protected operation (refer to Table 15) events per  $t_{max}$  period.
- 2. A Suspect System Behavior event is never permitted and will cause setting the SEC to its maximum.
- 3.  $t_{max}$  is set to 5 seconds (± 5%).

With other words it must not allow more than one out of the protected operations per  $t_{max}$  period (worst case, ref to bullet 1. above). This condition must be stable, at least after 500 uninterrupted executions of protected operations.

For more information, please refer to Solution Reference Manual document available as part of the package.

**RoHS Compliance** 



# 9 RoHS Compliance

On January 27, 2003 the European Parliament and the council adopted the directives:

- 2002/95/EC on the Restriction of the use of certain Hazardous Substances in electrical and electronic equipment ("RoHS")
- 2002/96/EC on Waste Electrical and Electrical and Electronic Equipment ("WEEE")

Some of these restricted (lead) or recycling-relevant (brominated flame retardants) substances are currently found in the terminations (e.g. lead finish, bumps, balls) and substrate materials or mold compounds.

The European Union has finalized the Directives. It is the member states' task to convert these Directives into national laws. Most national laws are available, some member states have extended timelines for implementation. The laws arising from these Directives have come into force in 2006 or 2007.

The electro and electronic industry has to eliminate lead and other hazardous materials from their products. In addition, discussions are on-going with regard to the separate recycling of ceratin materials, e.g. plastic containing brominated flame retardants.

Infineon Technologies is fully committed to giving its customers maximum support in their efforts to convert to lead-free and halogen-free<sup>1</sup> products. For this reason, Infineon Technologies' "Green Products" are ROHS-compliant.

Since all hazardous substances have been removed, Infineon Technologies calls its lead-free and halogen-free semiconductor packages "green." Details on Infineon Technologies' definition and upper limits for the restricted materials can be found here.

The assembly process of our high-technology semiconductor chips is an integral part of our quality strategy. Accordingly, we will accurately evaluate and test alternative materials in order to replace lead and halogen so that we end up with the same or higher quality standards for our products.

The use of lead-free solders for board assembly results in higher process temperatures and increased requirements for the heat resistivity of semiconductor packages. This issue is addressed by Infineon Technologies by a new classification of the Moisture Sensitivity Level (MSL). In a first step the existing products have been classified according to the new requirements.



<sup>&</sup>lt;sup>1</sup>Any material used by Infineon Technologies is PBB and PBDE-free. Plastic containing brominated flame retardants, as mentioned in the WEEE directive, will be replaced if technically/economically beneficial.

Appendix A – Infineon I2C Protocol Registry Map



# 10 Appendix A – Infineon I2C Protocol Registry Map

OPTIGA™ Trust X supports IFX I2C v1.65 and is implemented as I2C slave, which uses different address locations for status, control and data communication registers. These registers with description are outlined below in the following table.

Table 16 IFX I2C Registry Map Table

Register Address	Name	Size in Bytes	Description	Master Access
0x80	DATA	DATA_REG_LEN	This is the location where data shall be read from or written to the I2C slave	Read / Write
0x81	DATA_REG_LEN	2	This register holds the maximum data register (Addr 0x80) length. The allowed values are 0x0010 up to 0xFFFF. After writing the new data register length it becomes effective with the next I2C master access. However, in case the slave could not accept the new length it indicates its maximum possible length within this register. Therefore it is recommended to read the value back after writing it to be sure the I2C slave did accept the new value.  Note: the value of MAX_PACKET_SIZE is derived from this value or vice versa (MAX_PACKET_SIZE= DATA_REG_LEN-5)	Read / Write
0x82	I2C_STATE	4	Bits 31:24 of this register provides the I2C state in regards to the supported features (e.g. clock stretching) and whether the device is busy executing a command and/or ready to return a response etc.  Bits 15:0 defining the length of the response data block at the physical layer.	Read only
0x83	BASE_ADDR	2	This register holds the I2C base address as specified by Table 17. If not differently defined by a particular project the default value at reset is 0x20. After writing a different address the new address become effective with the next I2C master access. In case the bit 15 is set in addition to the new address (bit 6:0) it becomes the new default address at reset (persistent storage).	Write only
0x84	MAX_SCL_FREQU	4	This register holds the maximum clock frequency in KHz supported by the I2C slave. The value gets adjusted to the register I2C_Mode setting. Fast Mode (Fm): The allowed values are 50 up to 400. Fast Mode (Fm+): The allowed values are 50 up to 1000.	Read
0x85	GUARD_TIME <sup>1</sup>	4	For details refer to Table 20	Read only

<sup>&</sup>lt;sup>1</sup> In case the register returns 0xFFFFFFF the register is not supported and the default values specified in Table 'List of protocol variations' shall be applied.

# Datasheet



# Appendix A – Infineon I2C Protocol Registry Map

Register Address	Name	Size in Bytes	Description	Master Access
0x86	TRANS_TIMEOUT <sup>1</sup>	4	For details refer to Table 20	Read only
0x88	SOFT_RESET	2	Writing to this register will cause a device reset. This feature is optional	Write only
0x89	I2C_MODE	2	This register holds the current I2C Mode as defined by Table 18. The default mode is SM & FM (011B).	Read / Write

# Table 17 Definition of BASE\_ADDR

Fields	Bits	Value	Description							
DEF_ADDR	15	0	Volatile address setting by bit 6:0, lost after reset.							
		1	Persistent address setting by bit 6:0, becoming default after reset.							
BASE_ADDR	6:0	0x00-0x7F	I <sup>2</sup> C base address specified by Table 16							

15	14	13	12	11	10	9	8		
DEF_ADDR		RFU							
7	6	5	4	3	2	1	0		
RFU				BASE_ADDR					

15	14	13	12	11	10	9	8	
DEF_MODE	PE RFU							
7	6	5	4	3	2	1	0	
		RFU		Mode				

# Table 18 Definition of I2C\_MODE

Fields	Bits	Value	Description
DEF_MODE	15	0	Volatile mode setting by bit 2:0, lost after reset.
		1	Persistent mode setting by bit 2:0, becoming
			default after reset. This bit is always read as 0.
MODE <sup>2</sup>	2:0	001	Sm
		010	Fm
		011	SM & Fm (fab out default)
		100	Fm+
		other values	not valid; writing will be ignored

 $<sup>^{\</sup>rm 1}$  In case the register returns 0xFFFFFFF the register and its functionality is not supported

<sup>&</sup>lt;sup>2</sup> This mode defines the adherence of the bus signals to the electrical characteristics according standard I2C bus specification

# Datasheet



# Appendix A – Infineon I2C Protocol Registry Map

31	30	29	28	27	26	25	24
BUSY	RESP_RDY	RFU		SOFT_RESET	CONT_READ	REP_START	CLK_STRETCHING
23	22	21	20	19	18	17	16
RFU							
15-0							
Length of data block to be read							

Table 19 Definition of I2C\_STATE

Field	Bit(s)	Value	Description	
BUSY	31	0	Device is not busy	
		1	Device is busy executing a command	
RESP_RDY	30	0	Device is not ready to return a response	
		1	Device is ready to return a response	
SOFT_RESET	27	0	SOFT_RESET not supported	
		1	SOFT_RESET supported	
CONT_READ	26	0	Continue Read not supported	
		1	Continue Read supported	
REP_START	25	0	Repeated start not supported	
		1	Repeated start supported	
CLK_STRETCHING	24	0	Clock stretching not supported	
		1	Clock stretching supported	

# 10.1 IFX I2C Protocol Variations

To fit best to application specific requirements the protocol might be tailored by specifying a couple of parameters which is described in the following table.

Table 20 List of Protocol Variations

Parameter	Default Value	Description
MAX_PACKET_SIZE	0x110	Maximum packet size accepted by the receiver. The protocol limits this value to 0xFFFF, but there might be project specific requirements to reduce the transport buffers size for the sake of less RAM footprint in the communication stack. If shortened, it could be statically defined or negotiated at the physical layer.
WIN_SIZE	1	Window size of the sliding windows algorithm. The value could be 1 up to 2.
MAX_NET_CHAN	1	Maximum number of network channels. The value could be 1 up to 16.  One indicates the OSI Layer 3 is not used and the CHAN field of the PCTR must be set to 0000.
CHAINING	TRUE	Chaining on the transport layer is supported (TRUE) or not (FALSE)
TRANS_TIMEOUT	10 ms	(Re) transmission timeout specifies the number of milliseconds to be elapsed until the transmitter considers a frame transmission is lost and retransmits the non-acknowledged

# Datasheet



# Appendix A – Infineon I2C Protocol Registry Map

Parameter	Default Value	Description
		frame. The Timer gets started as soon as the complete frame is transmitted. The value could be 1 up to 1000. However, as higher the number as longer does it take to recover from a frame transmission error.  Note: The acknowledge timeout on the receiver side must be shorter than the retransmission timeout to avoid unnecessary frame repetitions.
TRANS_REPEAT	3	Number of transmissions to be repeated until the transmitter considers the connection is lost and starts a re-synchronization with the receiver. The value could be 1 up to 4.
BASE_ADDR	0x30	I2C (base) address. This address could be statically defined or dynamically negotiated by the physical layer. If not different specified the default value is 0x30.
MAX_SCL_FREQU	1000 kHz	Maximum SCL clock frequency in kHz.
GUARD_TIME	50 μs	Minimum time to be elapsed at the I2C master measured from read data (STOP condition) until the next write data (Start condition) is allowed to happen.  Note 1: For two consecutive accesses on the same device GUARD_TIME re-specifies the value of $t_{\it BUF}$ as specified by [I2Cbus]. Note 2: Even if another I2C address is accessed in between GUARD_TIME has to be respected for two consecutive accesses on the same device.
SOFT_RESET		Any write attempt to the SOFT_RESET register will trigger a warm reset (reset w/o power cycle). This register is optional and its presence is indicated by the I2C_STATE register's "SOFT_RESET" flag.



# 11 Appendix B – Power Management

When operating, the power consumption of OPTIGA™ Trust X is limited to meet the requirements regarding the power limitation set by the Host. The power limitation is implemented by utilizing the current limitation feature of the underlying hardware device in steps of 1mA from 6mA to 15 mA with a precision of ±5%.

# 11.1 Low Power Sleep Mode

The OPTIGA™ Trust X automatically enters a low-power mode after a configurable delay. Once it has entered Sleep mode, the OPTIGA™ Trust X resumes normal operation as soon as its address is detected on the I2C bus. In case no command is sent to the OPTIGA™ Trust X it behaves as shown in Figure 14.

- 1. As soon as the OPTIGA™ Trust X is idle it starts to count down the "delay to sleep" time (tsdy).
- 2. In case this time elapses the device enters the "go to sleep" procedure.
- 3. The "go to sleep" procedure waits until all idle tasks are finished (e.g. counting down the SEC). In case all idle tasks are finished and no command is pending, the OPTIGA™ Trust X enters sleep mode.

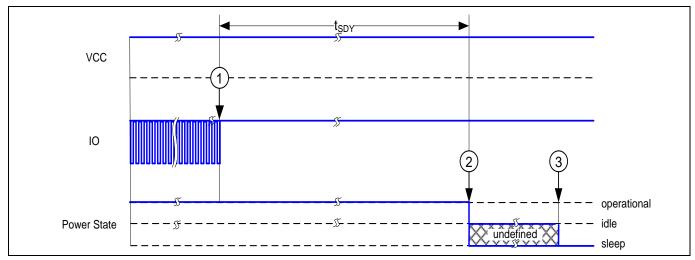


Figure 14 Go-to-Sleep Diagram

# Datasheet

**Revision history** 



# **Revision history**

Document version	Date of release	Description of changes
2.5	31.01.2018	Feedback incorporation from all internal regions
2.4	11.01.2018	Feedback incorporation from all internal regions
2.3	01.01.2018	Feedback incorporation from all internal regions
2.2	12.12.2017	Feedback from all internal regions
2.1	23.06.2017	Updated Key features and Enhanced Security
2.0	08.06.2017	Updated Key features and Enhanced Security
1.4	22.02.2017	First version release
1.3		Internal review
1.2		Internal review
1.1		Internal review
1.0		Internal review

### Trademarks

All referenced product or service names and trademarks are the property of their respective owners.

Edition 2018.01.31

Published by Infineon Technologies AG 81726 Munich, Germany

© 2018 Infineon Technologies AG. All Rights Reserved.

Do you have a question about this document?

Email:

security. chip card. ics@infine on. com

Document reference

### **IMPORTANT NOTICE**

The information given in this document shall in no event be regarded as a guarantee of conditions or characteristics ("Beschaffenheitsgarantie").

With respect to any examples, hints or any typical values stated herein and/or any information regarding the application of the product, Infineon Technologies hereby disclaims any and all warranties and liabilities of any kind, including without limitation warranties of non-infringement of intellectual property rights of any third party.

In addition, any information given in this document is subject to customer's compliance with its obligations stated in this document and any applicable legal requirements, norms and standards concerning customer's products and any use of the product of Infineon Technologies in customer's applications.

The data contained in this document is exclusively intended for technically trained staff. It is the responsibility of customer's technical departments to evaluate the suitability of the product for the intended application and the completeness of the product information given in this document with respect to such application.

For further information on the product, technology, delivery terms and conditions and prices please contact your nearest Infineon Technologies office (www.infineon.com).

### **WARNINGS**

Due to technical requirements products may contain dangerous substances. For information on the types in question please contact your nearest Infineon Technologies office.

Except as otherwise explicitly approved by Infineon Technologies in a written document signed by authorized representatives of Infineon Technologies, Infineon Technologies' products may not be used in any applications where a failure of the product or any consequences of the use thereof can reasonably be expected to result in personal iniury.