

APS014 APPLICATION NOTE

ANTENNA DELAY CALIBRATION OF DW1000-BASED PRODUCTS AND SYSTEMS

Version 1.2

This document is subject to change without notice



TABLE OF CONTENTS

LIST OF TABLES		2
LIST OF FIGURES		2
1 INTRODUCTION		3
1.1 OVERVIEW		3
1.2 ABOUT THIS DOCUMENT	Т	4
2 ANTENNA DELAY CALIBF	RATION	5
2.1 APPLICATION REQUIREN	MENTS	5
2.1.1 Ranging Metho	d and Antenna Delay Calibration	5
•	ariation	
	NERATION Delay Calibration Reference Device Generation	
	Delay Calibration Reference Device Generation Delay Calibration Reference Device Generation Example	
	RATION USING A KNOWN REFERENCE DEVICE	
	annels in Antenna Delay Calibration Setups	
3	Calibration Using TWR with a Reference Device	
2.3.3 Antenna Delay	Calibration for an RTLS Environment	11
3 GLOSSARY		13
4 REFERENCES		14
7 FURTHER INFORMATION	N	15
	LIST OF TABLES	
TABLE 1: ANTENNA DELAYS REQU	UIRED BY RANGING REQUIREMENTS	5
TABLE 2: DW1000-BASED EVK1	1000 antenna delay calibration based on standard deviation c	OF ANTENNA
-	IRED LOCATION ACCURACY	
	AY CALIBRATION EDM POPULATION	
	AND RECEIVE ANTENNA DELAY IN TOTAL AGGREGATE DELAY	
TABLE O. TABLE OF REFERENCES		14
	LIST OF FIGURES	
	LIST OF FIGURES	
FIGURE 1: ANTENNA DELAY DIAGE	RAM	3
	E GENERATION SETUP	
	CALIBRATION ALGORITHM - OVERALL FLOWCHART	
HOURE S. I WIN MINIEMINA DELAT		
FIGURE 4: POPULATE THE SET OF O	CANDIDATE DELAY ESTIMATES - FLOWCHARTY OF THE CANDIDATES - FLOWCHART	



1 Introduction

1.1 Overview

DecaWave's DW1000, a multi-channel transceiver based on Ultra Wideband (UWB) radio communications, allows very accurate time-stamping of messages as they leave from and arrive at the transceiver.

The delays which are measured in these timestamps include the propagation delay through the DW1000 devices from the points at which the transmitter timestamps are applied to the points at which the receiver timestamps are captured. These delays are referred to as the transmit/receive antenna delays.

These antenna delays are internal to the chip and not included in the Time of Flight (ToF) but are included in the propagation delay from transmission timestamp to receive message timestamp, see Figure 1. Refer to [2] for more information on timestamps.

When measuring the Time of Flight (ToF) from a transmitter to a receiver the delay measured includes the antenna delays (see Figure 1):

$$t_{Measured} = t_{ADTX} + ToF + t_{ADRX}$$

where:

ToF = Time of Flight

 $t_{Measured}$ = The measured time from the transmit timestamp to the receive timestamp

 t_{ADTX} = Transmit antenna delay t_{ADRX} = Receive antenna delay

To find the Time of Flight, we need to know the transmit and receive antenna delays.

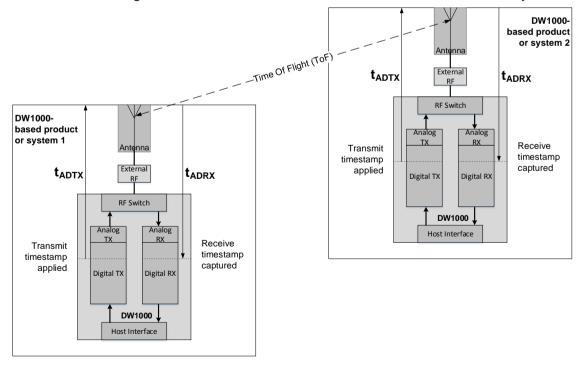


Figure 1: Antenna Delay Diagram



The internal propagation delays in DW1000 devices vary slightly from chip to chip. There can also be variations due to components between DW1000 and the antenna. Since we are measuring RF signals moving at the speed of light these variations can make differences to ranging measurements in the tens of centimeters. Antenna delay calibration is used to remove these variations.

1.2 About this document

This document is intended to be read together with [4] which gives a guide to production testing and calibration for DW1000-based products to understand how to integrate antenna delay calibration into the production test environment.

The document is divided into three main sections:

- A description of antenna delay and application requirements.
- How to generate a reference device for antenna delay calibration.
- How to carry out antenna delay calibration using reference devices on the production line.



2 Antenna Delay Calibration

Depending on the accuracy needed in an application, antenna delay calibration may or may not be required. Table 1 shows the accuracy that can be expected with and without calibration.

Antenna delay calibration should be carried out using the exact use case(s) that will be used in the final application. For example; PRF, channels, and power-up modes. You should refer to [3] for a detailed treatment of the sources of error in TWR.

2.1 Application Requirements

Two-Way Ranging (TWR) is the calibration method described in this document for all applications including TDoA applications.

2.1.1 Ranging Method and Antenna Delay Calibration

Depending on whether TWR, Time difference of Arrival (TDoA) and on whether wireless or wired synchronization is required in the final application, the system will need different antenna delay information.

For a TWR system, the aggregate antenna delay (the sum of the transmitter and receiver antenna delay) is required in the calculations. Where antenna delay calibration is required, both anchors and tags should be calibrated.

In a TDoA system using **wired** synchronization, the receiver (anchor) antenna delay only is required.

In a TDoA system using **wireless** synchronization, the individual transmitter and receiver delays is required.

Table 1 summarises the system ranging requirements and the associated types of antenna delays needed.

Table 1: Antenna Delays Required by Ranging Requirements

Application Type	Antenna Delays Needed
TWR	Aggregate (sum of) transmitter and receiver antenna delays. Both anchors and tags require calibration if calibration is being carried out.
TDoA / Wired Synchronization	Receiver antenna delay, calibrate anchors only, if calibration is being carried out.
TDoA / Wireless Synchronization	Both transmitter and receiver antenna delays are needed in systems that are required to perform wireless synchronization. Calibrate anchors only, if calibration is being carried out.

DecaWave calibrates antenna delay using a method described below using TWR.

For that reason, devices which are intended to be calibrated for antenna delay using this method must be capable of acting as a transmitter and as a receiver. If the device to be calibrated includes an LNA, for example, a transmit path must be included in order to carry



out TWR for antenna delay calibration.

2.1.2 Accuracy

Whether antenna delay calibration is needed for a product depends on the location accuracy required in the application and on the antenna delay variation observed between parts.

Ranging data for 2000 DW1000-based DecaWave EVB1000's was analysed to find the standard deviation of the antenna delay variation before and after the EVB1000's had been calibrated.

The 3-sigma variation (99.7% of samples) of the antenna delay was found to be 30 cm before calibration and 4.5 cm after calibration.

So, applications requiring accuracy of 30 cm or less do not require any per-board antenna delay calibration. For such applications, a default value must be worked out during product characterization using a statistically significant sample. If the EVB1000's were calibrated for antenna delay, the best accuracy achievable would be 4.5 cm. See Table 2.

Table 2: DW1000-based EVK1000 antenna delay calibration based on standard deviation of antenna delay variation and required location accuracy

TWR Accuracy Required	Example Antenna Delay Calibration Recommended	
30 cm	No per-board antenna delay calibration needed	
4.5 cm	Calibration using known reference device(s)	

2.1.3 Temperature Variation

The antenna delay will vary with temperature. It is recommended that the temperature at which calibration was carried out is recorded. This will allow the application to adjust measurements if required.

Range has been shown to vary by 2.15 mm / $^{\circ}$ C (or 7.17 ps / $^{\circ}$ C) per device for DW1000 devices.

2.2 Reference Device Generation

To carry out antenna delay calibration on a production line as described in section 2.3, a known reference device is required. Before the production calibration can be carried out it is necessary to have a reference device.

2.2.1 TWR Antenna Delay Calibration Reference Device Generation

This calibration method gives accurate measurements of aggregate transmitter and receiver antenna delay.

This method is performed by carrying out TWR using at least three devices. A Euclidean Distance Matrix (EDM) is constructed using ranges obtained using TWR, having set the antenna delay to zero. The device temperature should be noted.

A Euclidean Distance Matrix is an n x n matrix representing the spacing of a set of n points in Euclidean space (3-D space in this case). To construct an EDM suitable for this antenna delay calibration with devices numbered 1 to n, the average ranges for each pair



permutation are entered in the matrix:

$$EDM = \begin{bmatrix} d_{11} & d_{12} & \dots & d_{1n} \\ d_{21} & d_{22} & \dots & d_{2n} \\ \dots & \dots & \dots & \dots \\ d_{31} & d_{32} & \dots & d_{nn} \end{bmatrix}$$

where:

 $d_{XY} = distance from device X to device Y$

The entries along the diagonal are always zero; the distance from device 1 to device 1 is zero. The other entries are filled with the ranges measured by TWR between each pair of devices used.

The actual distances must be known; measure the actual distances between devices.

The distances between devices should be the same, or close to the same so that treatment of the range bias (see [3] for a full description of range bias) in the calculations is simplified. See [4] for a description of how to use a known wired channel instead of an over the air channel.

The devices can be arranged as shown in Figure 2 or the paired measurements can be done in turn using two devices at a time. Keeping the distances between the devices the same is recommended.

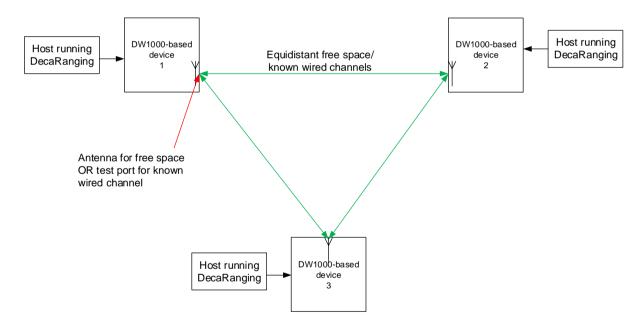


Figure 2: TWR reference device generation setup

The antenna delays can be determined by minimizing the norm of the difference between the two EDM's:

$$min_{\forall \tau} || (EDM_{Actual} - EDM_{Measured}) ||$$

where EDM_{Actual} is given by the known distances between the devices in the calibration array as measured using a laser range finder or other calibrated measuring device and $EDM_{Measured}$ is given by the ranges measured using the DW1000-based devices performing TWR.



$$EDM = \begin{bmatrix} 0 & d_{12} & d_{13} \\ d_{21} & 0 & d_{23} \\ d_{31} & d_{32} & 0 \end{bmatrix}$$

Figure 3, Figure 4 and Figure 5 below show an example flowchart of an algorithm to carry out the reference device calibration.

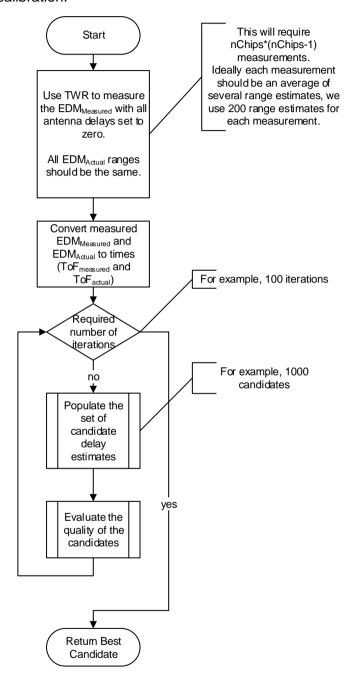


Figure 3: TWR Antenna delay calibration algorithm - overall flowchart



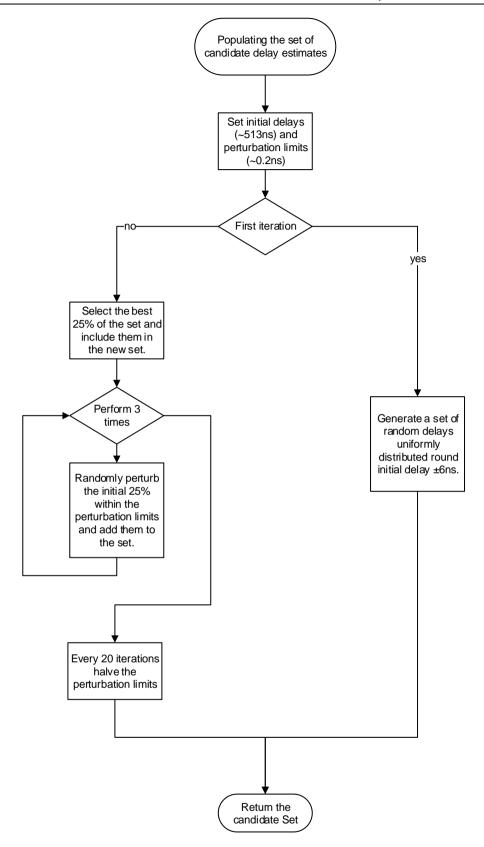


Figure 4: Populate the set of candidate delay estimates - flowchart



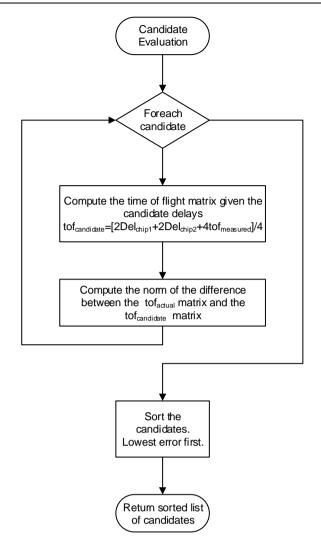


Figure 5: Evaluate the quality of the candidates - flowchart

2.2.2 TWR Antenna Delay Calibration Reference Device Generation Example

Three DW1000 evaluation boards, EVB1000's, were used in pair permutations to generate the Euclidean Distance Matrix (EDM).

The distance between the two ranging points was measured as: 7.914 m.

DecaWave's DecaRanging TWR application was used to capture the ranging measurements, setting the antenna delay of the two EVB1000's to 0.000. The following measurements were taken using 1000 TWR range measurements in each case:

Table 3: Example antenna delay calibration EDM population

	d ₁₂	d ₁₃	d ₂₁	d ₂₃	d ₃₁	d ₃₂
Average Range Measured (inc. Range Bias)	162.23	162.3218	162.2407	162.3136	162.2842	162.3269
Range Bias @ 162 m, PRF = 16 MHz, Channel = 2	+0.13	+0.13	+0.13	+0.13	+0.13	+0.13
Average Measured Range (excl. Range Bias correction)	162.0913	162.1813	162.1020	162.1749	162.1455	162.1882



	d ₁₂	d ₁₃	d ₂₁	d ₂₃	d ₃₁	d ₃₂
Range Bias @ 7.914 m, PRF = 16 MHz, Channel = 2	-0.07	-0.07	-0.07	-0.07	-0.07	-0.07
Average Measured Range (incl. Range Bias correction)	162.1613	162.2531	162.172	162.2449	162.2155	162.2582

Note that a detailed description of range bias is given in [3]. The range bias values in Table 3 are as applied in the DecaRanging application.

The expression to be minimized is then given by:

$$EDM_{Actual} - EDM_{Decaranging} = \begin{bmatrix} 0 & 7.914 & 7.914 \\ 7.914 & 0 & 7.914 \\ 7.914 & 7.914 & 0 \end{bmatrix} - \begin{bmatrix} 0 & 162.1613 & 162.2531 \\ 162.1720 & 0 & 162.2449 \\ 162.2155 & 162.2582 & 0 \end{bmatrix}$$

Applying an algorithm as described above, the following values are found as the best fit for the aggregate antenna delays of the three devices:

Aggregate antenna delay, device 1 = 514.4747 ns Aggregate antenna delay, device 2 = 514.5911 ns Aggregate antenna delay, device 3 = 515.0413 ns

2.3 Antenna Delay Calibration Using a Known Reference Device

2.3.1 Using Wired Channels in Antenna Delay Calibration Setups

Please refer to [4] for details of free space measurements and test setup calibration procedures.

2.3.2 Antenna Delay Calibration Using TWR with a Reference Device

For TWR systems, if the antenna delay of the reference device and the delay of the test setup are known then the antenna delay of the device under test (DUT) can be calculated.

2.3.2.1 Antenna Delay Calibration Using TWR with a Reference Device Procedure

The following procedure may be used to carry out antenna delay calibration:

- 1. Set the antenna delay in the DUT to some initial value, e.g. 515 ns, and set the antenna delay in the reference device to its known value.
- 2. Carry out say 1000 TWR measurements of the range between the reference device and the DUT across the known channel.
- 3. Average the measurements taken.
- 4. Find the difference between the known range and the measured range and adjust the antenna delay of the DUT to give the correct range.

2.3.3 Antenna Delay Calibration for an RTLS Environment

For RTLS systems generally, the receiver antenna delay should be known for most accurate ranging in a system using wired synchronization and both the transmitter and receiver antenna delays should be known in a system using wireless synchronization.

Currently, DecaWave recommends using a TWR antenna delay calibration to determine the aggregate antenna delay and then to apportion the aggregate delay to the transmitter and



receiver in the percentages given in Table 4 below.

Table 4: Percentage transmit and receive antenna delay in total aggregate delay

Antenna Delay	Percentage of Total
Transmit	44%
Receive	56%



3 GLOSSARY

Table 5: Glossary of terms

Abbreviation	Full Title	Explanation
EDM	Euclidean Distance Matrix	A Euclidean Distance Matrix is an n x n matrix representing the spacing of a set of n points in Euclidean space.
EVB1000	Evaluation Board	DW1000 evaluation board and antenna.
EVK1000	Evaluation Kit	DW1000 evaluation kit including two PCB boards and antennas.
LNA	Low Noise Amplifier	Circuit normally found at the front-end of a radio receiver designed to amplify very low level signals while keeping any added noise to as low a level as possible
RF	Radio Frequency	Generally used to refer to signals in the range of 3 kHz to 300 GHz. In the context of a radio receiver, the term is generally used to refer to circuits in a receiver before down-conversion takes place and in a transmitter after up-conversion takes place.
RTLS	Real Time Location System	System intended to provide information on the location of various items in real-time.
тсхо	Temperature Controlled Crystal Oscillator	A crystal oscillator whose output frequency is very accurately maintained at its specified value over its specified temperature range of operation.
ToF	Time of Flight	Time taken for an object or a wave to travel through a medium.
TWR	Two Way Ranging	Method of measuring the physical distance between two radio units by exchanging messages between the units and noting the times of transmission and reception. Refer to DecaWave's website for further information.
TDoA	Time Difference of Arrival	Method of deriving information on the location of a transmitter. The time of arrival of a transmission at two physically different locations whose clocks are synchronized is noted and the difference in the arrival times provides information on the location of the transmitter. A number of such TDoA measurements at different locations can be used to uniquely determine the position of the transmitter. Refer to DecaWave's website for further information.
UWB	Ultra Wideband	A radio scheme employing channel bandwidths of, or in excess of, 500 MHz.



4 REFERENCES

4.1 Listing

Reference is made to the following documents in the course of this application note: -

Table 6: Table of references

Ref	Author	Version	Title
[1]	DecaWave	Current	DW1000 Data Sheet
[2]	DecaWave	Current	DW1000 User Manual
[3]	DecaWave	Current	APS011 Sources of error in TWR
[4]	DecaWave	Current	APS012 Production Tests for DW1000-based Products
[5]	DecaWave	Current	APS013 Two-way ranging implementation with the DW1000

5 DOCUMENT HISTORY

Table 7: Document History

Revision	Date	Description
1.00		Initial release.
1.01		Scheduled update
1.2	31 st July 2018	Scheduled update

6 Major Changes

Revision 1.00

Page	Change Description
All	Initial release

Revision 1.01

Page	Change Description
All	Scheduled update

Revision 1.2

Page	Change Description	
Front page	Change in version number from 1.01 to 1.2	
All	Update of company logo	



7 FURTHER INFORMATION

Decawave develops semiconductors solutions, software, modules, reference designs - that enable real-time, ultra-accurate, ultra-reliable local area micro-location services. Decawave's technology enables an entirely new class of easy to implement, highly secure, intelligent location functionality and services for IoT and smart consumer products and applications.

For further information on this or any other Decawave product, please refer to our website www.decawave.com.