FIT1047 - Week 4

I/O and Interrupts

Overview

Computers are almost useless without input/output.

- How does the CPU communicate with I/O devices?
- How does it handle time critical I/O?



Early I/O


The first computers had limited I/O:

- Punched paper tape or cards
- Teleprinters

Early I/O

The first computers had limited I/O:

- Punched paper tape or cards
- Teleprinters

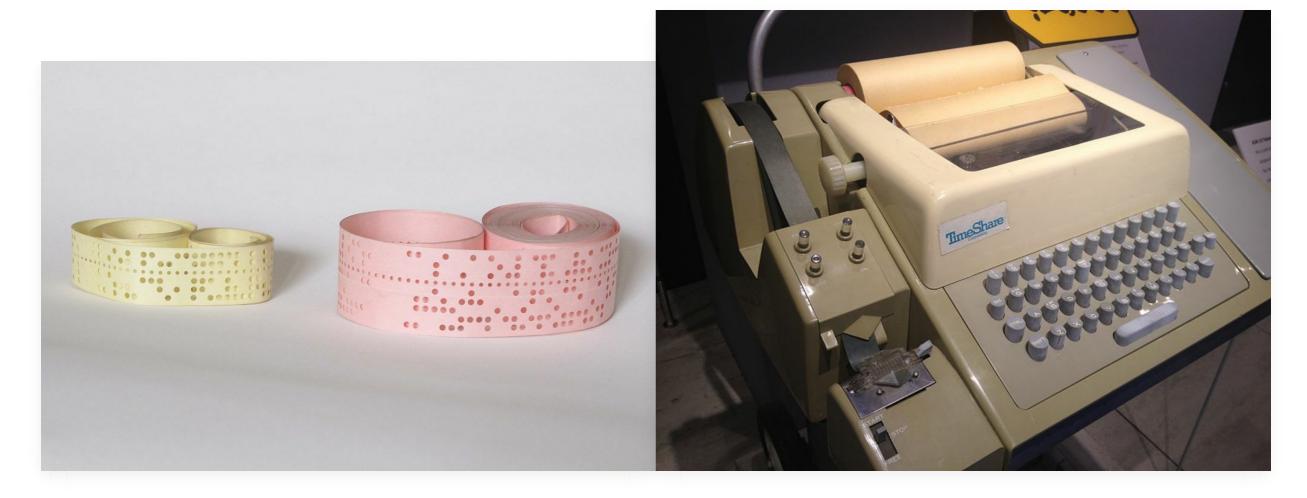



 Keyboard, mouse, touch pad, touch screen, voice control, gestures, accelerometers, barometers, GPS



- Keyboard, mouse, touch pad, touch screen, voice control, gestures, accelerometers, barometers, GPS
- Screens, printers, audio, robots, ...



- Keyboard, mouse, touch pad, touch screen, voice control, gestures, accelerometers, barometers, GPS
- Screens, printers, audio, robots, ...

Also classed as I/O:



- Keyboard, mouse, touch pad, touch screen, voice control, gestures, accelerometers, barometers, GPS
- Screens, printers, audio, robots, ...

Also classed as I/O:

 External storage, network devices (WiFi, 4G, Ethernet)



Modern I/O interfaces

I/O devices are now usually connected via interfaces:

- Standardised connectors and protocol
- Can be internal or external
- E.g. USB, SATA, HDMI, PCI Express



The CPU needs to

- read data from an I/O device
- write data to an I/O device

The CPU needs to

- read data from an I/O device
- write data to an I/O device

Why write to input devices?

• E.g. set sensitivity, calibrate, ...



The CPU needs to

- read data from an I/O device
- write data to an I/O device

Why write to input devices?

• E.g. set sensitivity, calibrate, ...

Why read from output devices?

• E.g. check if ready for output, check if successful, ...



I/O devices have their own registers.

Two ways to communicate:

Memory-mapped:

I/O registers are mapped into CPU address space.

Use Load, Store etc to communicate with I/O.

Instruction-based:

CPU has special I/O instructions.

Similar to Load, Store etc but with separate address space.



When to do I/O

Now we know how to communicate with I/O devices.

But most I/O devices are much, much slower than the CPU. So when should the CPU communicate?



When to do I/O

Now we know how to communicate with I/O devices.

But most I/O devices are much, much slower than the CPU. So when should the CPU communicate?

 How does it know that a new character is available from the keyboard?



When to do I/O

Now we know how to communicate with I/O devices.

But most I/O devices are much, much slower than the CPU. So when should the CPU communicate?

- How does it know that a new character is available from the keyboard?
- How does it know a network device is ready for sending?



Programmed I/O

Program checks registers periodically.

Also called polling I/O.



Programmed I/O

Program checks registers periodically.

Also called polling I/O.

Pseudocode:

```
while (true) {
   if (IORegister1.canRead()) {
     processRegister1();
   } else if (IORegister2.canRead()) {
     processRegister2();
   } else if (IORegister3.canWrite()) {
     processRegister3();
   }
}
```

Programmed I/O

Advantage:

 We can decide how often to poll a device (prioritisation!)

Disadvantage:

- Program is I/O-driven
- CPU is constantly in "busy loop"

Programmed I/O is mostly used in embedded special-purpose systems.



FIT1047, week 4

Interrupts

Opposite of polling:

- CPU is notified when I/O is available.
- CPU interrupts what it's doing, processes I/O, then continues normal program.



11

Interrupt signals

Device notifies CPU of pending interrupt by setting a bit in a special register.

CPU checks before each fetch-decode-execute cycle:

- Is interrupt bit set? Process interrupt.
- Otherwise: fetch-decode-execute.



Interrupt signals

RTL for fetch cycle with interrupts:

The interrupt handler code is always stored at a fixed address InterruptHandler.

Interrupt handler

Must leave the CPU in the exact same state!

 For MARIE, contents of AC must be the same as before the interrupt.

Can be achieved by

- shadow registers, a separate register file that the CPU uses while processing interrupts; or
- saving all registers to memory



FIT1047, week 4

Interrupt vectors

So how can we process interrupts from different devices?

- Each device is assigned an identification number
- When raising an interrupt, stores that number (in special register or in memory)
- Interrupt handler jumps into an interrupt vector



Interrupt vectors

```
B00
          Store ACInt
B01
          Load
               IVec
B02
          Add DeviceID
B03
         Store Dest
B04
          JumpI Dest
C00 ACInt, HEX 0
                   / Temporary storage for AC
C01 Dest, HEX 0
                   / Destination of jump
C02 IVec, HEX C03
C03
                   / Address of first handler
       HEX OFO
C04
                   / Address of second handler
        HEX OFA
C05
        HEX 1B0 / Address of third handler
```



Interrupts in x86 PCs

Original design:

- 15 interrupt request (IRQ) signals
- hardware must be configured to use correct IRQ
- e.g. setting jumper on a network or sound card
- devices have to share IRQs




Interrupts in x86 PCs





Interrupts in x86 PCs

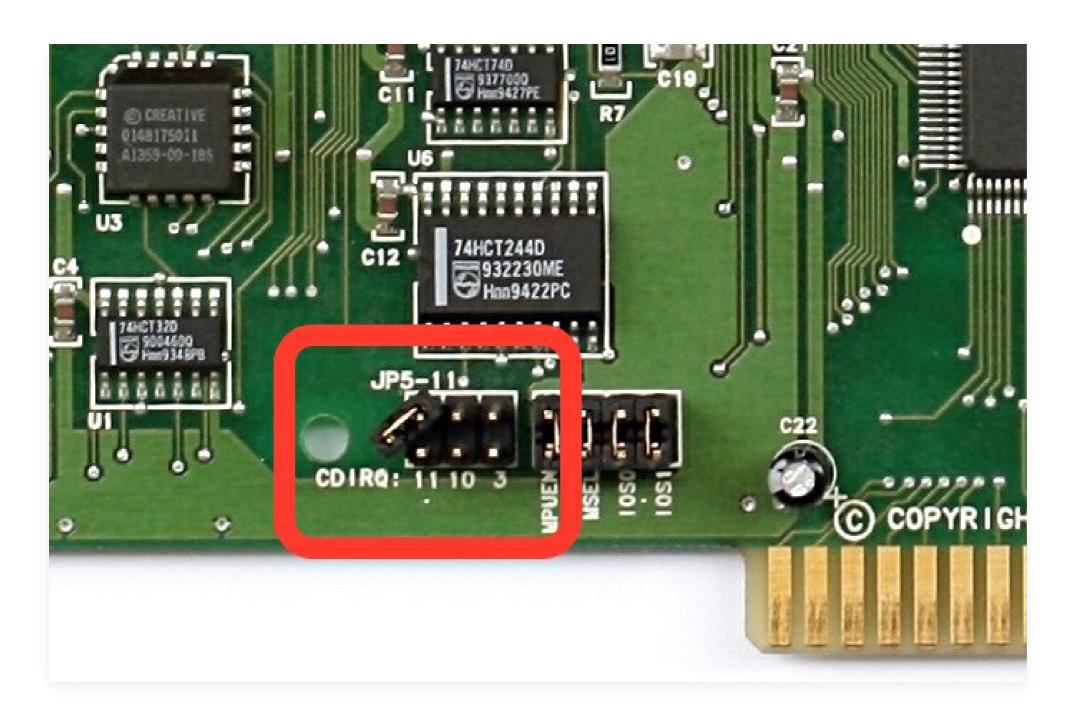



Modern Interrupts

Use Advanced Programmable Interrupt Controllers (APICs).

- nowadays integrated into CPUs
- allow more IRQs (fewer conflicts)
- include high-resolution timers



Disadvantages

- Different I/O devices need different priorities
 - can be achieved using different interrupt signals
- All memory transfers run through the CPU:
 - e.g. reads word from disk storage, writes word to memory
 - reads word from memory, writes word to graphics card
- I/O devices are fully controlled by CPU



FIT1047, week 4 2

DMA

(Direct Memory Access)
CPU can delegate memory transfer operations to dedicated controller.

- hard disk controller can transfer data to memory
- graphics card can fetch image from memory
- while CPU can perform other tasks

CPU and DMA controller share the data bus:

only one can do memory transfers at the same time



FIT1047, week 4

Summary

1/0

- memory-mapped vs. instruction-based
- programmed vs. interrupt-driven

Interrupts

- require context switch
- jump into interrupt vector

DMA

- off-load responsibility for data transfers to special controller
- keeps CPU free to do more interesting tasks



FIT1047, week 4 2

Next lecture

- Booting up a computer
- BIOS, UEFI

