UcConditioner Pro 5V (#25C) UcConditioner MkII 5V (#25B) Ultracapacitor Conditioner Board

By IanCanada Feb 25, 2024 Ver. 3.0

lancanada.ca



Page 1 iancanada.ca

A. Introduction

UcConditioner works with any 5V power supply as a super filter to promote the performance. UcConditioner can significantly improve the power supply quality by reducing both internal ESR and the EMI noise. It will make a big difference to the dynamic performance of the power supply, as well as the noise levels.

For audiophiles, upgrading a power supply with an UcConditioner could be a one of the best and easiest solutions to achieve better sound quality.

B. Highlighted Features and Specifications

- Fully ultra-low ESR MOS FET architecture.
- Built-in automatic per-charge/charge circuits with current limitation.
- Enable/disable conditioning mode automatically by monitoring ultracapacitor and DC input status.
- All control logics are running automatically at background, no need any external control signal.
- On-board active balancers for ultracapacitor protection.
- LED indications for power on, power good, ultracapacitor full and conditioning modes.
- Double thickness PCB copper layers.
- Optical isolators for internal control signals.
- Output is 100% following the input without any delay.
- With ON/OFF control signal output for possible application requirement.
- Compatible with both new and old ultracapacitor footprints
- USB-C input J4 supports USB PD protocol.
- DIY friendly, works for any 5V power supply, no software is required.


C. UcConditioner Pro new features

- High quality low ESR ultracapacitors are pre-assembled. Plug and play. No need for any soldering job.
- Overall ESR is 30% lower than the previous versions
- New high efficiency power management solution to reduce the peak charging current, speed up the charging time and make the overall EMI noise even lower
- Optimized PCB layout for better performance
- Equipped with vertical mounting brackets


Page 2 iancanada.ca

D. Layout and Dimensions (in mm)

UcConditioner MkII PCB layout

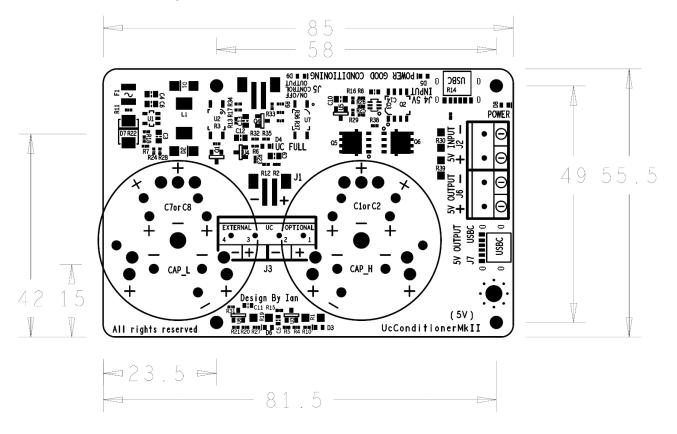

UcConditioner Pro PCB layout

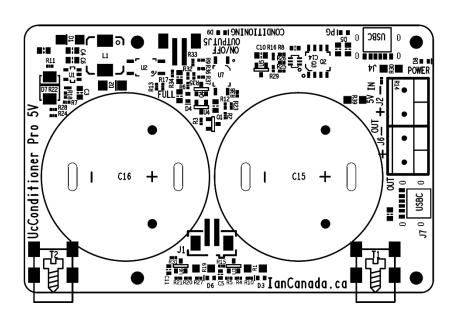

Page 3 iancanada.ca

You can also download the dxf file at:

https://github.com/iancanada/DocumentDownload/tree/master/UltraCapacitorPowerSupply/UcConditioner

E. Getting start

1. Solder two ultra capacitors to the positions of CAP_L and CAP_H (No need for UcConditioner Pro)

Recommended ultracapacitor P/Ns are:

BCAP0325 P270 S19, BCAP0450 P270 S18, DSF407Q3R0, BCAP0350 P270 S18, XV3560-2R7407-R,

Lower ESR capacitors are always preferred.

Please make sure using solder iron with **80W or higher** power for durable connections of this high current conditioner board.

- 2. Connect a 5V power supply to either the USB-C connector J4 or the input terminal block J2.
- 3. Turn on the 5V power supply, both power LED and power good LED will be lit up.
- 4. For the first time power up, it can take up to 10 to 20 minutes charging the ultracapacitors from 0V to 5V. Once they are fully charged, both FULL LED and CONDITIONING LED will light up.
- 5. After that, turn off the 5V input power supply. Connect UcConditioner output (J6 or J7) to the load that needs to be powered.
- Turn on the 5V power supply. All of the above 4 LEDs will be lit up shortly after to indicate that the UcConditioner is in conditioning state. Now you can start to enjoy the improvement that the UcConditioner makes.

Note: It can take up to 72 hours for new ultracapacitors to reach the best performance. Please take serious listening only after that time.

F. Connectors

J2: 5V DC power input connector

A 5V DC power supply that needs to be conditioned must be connected to this (or J4) 2-pin 5.0mm terminal to operate. The voltage range must be within 4.9V to 5.3V. To power Raspberry Pi, rated current 2A or higher linear power supply would be recommended for this input. **Voltage higher than 5.5V (even at short time) may cause damage to UcConditioner.**

J4: 5V USB type-C input power connector (Support USB PD)

If you want to use a USB power supply, you can connect it to J4 and at the same time leave J2 unconnected. Rated current 2A or higher would be recommended. J4 and J2 are connected together internally.

Page 4 iancanada.ca

J8: Additional 5V DC power input connector (UcConditioner Pro only)

J6: UcConditioner 5V output in 2-pin 5.0mm terminal

This is the ultracapacitor conditioned 5V output when conditioning LED is lit, otherwise it will be connected directly to 5V input.

UcConditioner output will be turned on or off automatically when 5V DC input voltage is applied or removed.

This output can deliver maximal current higher than 100A, so has to be very careful not to short circuit.

J7: UcConditioner 5V output in USB type-C connector

This output is alternative to J6 if you need the USB cable. Internally J6 and J7 are connected together.

J9: Additional 5V output connector (UcConditioner Pro only)

J1: Ultra capacitor package testing/monitoring connector in 2-pin PH2.0

- 1: V- of ultra capacitor package
- 2: V+ of ultra capacitor package

J3: Optional external ultra capacitor terminal connector (un-installed by default, UcConditioner only)

- 1: CAP H+
- 2: CAP H -
- 3: CAP L+
- 4: CAP_L -

J5: ON/OFF control signal output in 2-pin PH2.0

Can be used for the isolated input of other possible device that needs this on/off control signal. No need in normal application. This signal is non-isolated.

G. LED indicators

D8: Power indicator. Indicating that the DC input voltage is applied when lit. The output of UcConditioner will be valid at same time.

D5: Power good indicator. Indicating that the DC input voltage is higher than 4.9V when lit.

D4: Ultra capacitor full indicator. Indicating that the ultracapacitor package is full when lit.

D9: Conditioning indicator. Indicating that the UcConditioner output is in conditioning state when lit.

D3, D6: Ultra capacitor over voltage alarm indicator. Indicating the charging voltage of CAP_H (C15) or CAP_L (C16) is higher than 2.7V.

Page 5 iancanada.ca

H. Application notes

- 1. It will be very hard to remove if the ultracapacitors are soldered to the UcConditioner PCB. So, if you are new to UcConditioner, I would suggest soldering them first to the option external UC connector J3. And then solder them to PCB only after you make sure everything is good.
- 2. UcConditioner is kind of passive power supply. Please use wires as big and short as possible to the output to get the best possible performance.
- 3. UcConditioner doesn't regulate the voltage. The output voltage will be as same as the input voltage. So, the input voltage must be within range of 4.9V to 5.3V. If it is lower, the UcConditioner will not go to conditioning state. If it is higher, the ultracapacitors can get damaged or reduced the life time.
- 4. The internal charging current limitation is 1A. If the input power supply delivers less current than that, it may take longer time to charge the UcConditioner to 5V if it is fully empty. In this case, I would suggest pre-charge the UcConditioner with a 5V USB power adapter at the first time of use. Both the UC FULL LED and CONDITIONING LED will light up when UcConditioner is full.
- 5. The output of UcConditioner will follow the 5V DC input voltage without any delay. However, some power supply doesn't remove the output voltage immediately when you turn off the switch. So, in this case, some delay will be expected to the UcConditioner output. This kind of delay is caused by the power supply itself, not the UcConditioner.
- 6. If the power LED D8 is lit up, but the PG LED D5 keeps off, that means that the input voltage is lower than 4.9V. There could be two possible reasons:
 - A. The 5V input power supply is not qualified.
 - B. The input power cable is too long or the resistance is not low enough

Page 6 iancanada.ca

I. Typical Application examples

1. Using UcConditioner to improve a USB power supply




2. Upgrade a 5V linear power supply (great for RPi, LinearPi 5V is in the picture)



Page 7 iancanada.ca

Build ultra-high quality +/- 5V analog power supply (great for OPA861 I/V)
 Configuration: LinearPi Dual 5V (S+/S- are optional) + Two UcConditioner 5V




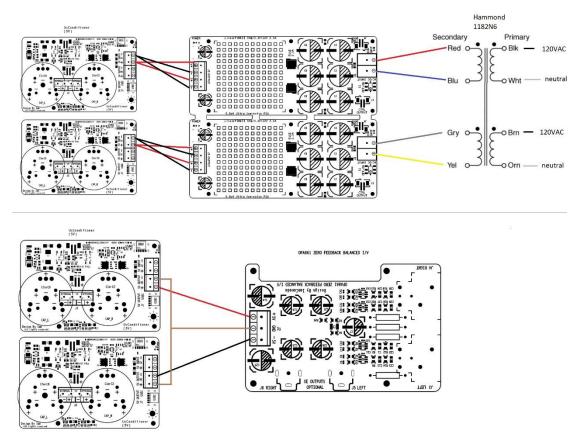


Page 8 iancanada.ca

J. UcConditioner dynamic performance measurements

1. Dynamic 500mA load transient response of a typical 5V/3A external linear power supply

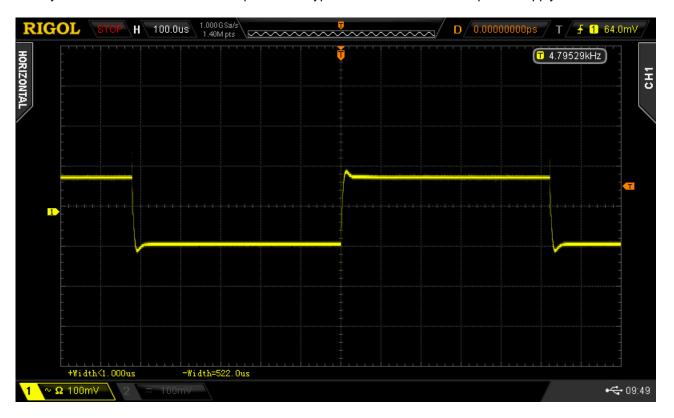

2. Dynamic 500mA load transient response of the same linear power supply with UcConditioner attached

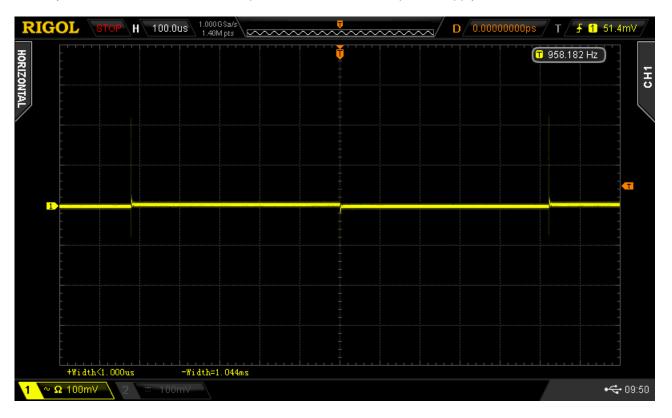

Page 9 iancanada.ca

K. History of revising

May 28, 2020 V0.9b released

Aug 23, 2020 V1.0b released

June 23,2023 V2.0 released

Feb 25, 2024 V3.0 released for UcConditioner Pro 5V

© 2024 IanCanada. The firmware code embedded in the UcConditioner is the property of IanCanada. You are granted a non-exclusive, non-transferable, non-sublicenseable, royalty-free right to use the UcConditioner solely for your own, non-commercial purposes. You may not distribute, sell, lease, transfer, modify, adapt, translate, reverse engineer, prepare derivative works of, decompile, or disassemble the software provided. All rights reserved.

Page 10 iancanada.ca