teqp Release 0.17.0

Ian Bell

CONTENTS:

1	Getting Started	1
	1.1 Introduction	. 1
	1.2 Installation	. 1
2	C++ interface	3
	2.1 Introduction	. 3
3	Models	5
	3.1 Constructing Models	. 5
	3.2 General cubics	
	3.3 Quantum PR	
	3.4 Advanced cubic mixing rules	
	3.5 Model Potentials	
	3.6 Cubic Plus Association (CPA)	
	3.7 PC-SAFT	
	3.8 Multi-fluid EOS	
	3.9 Multfluid mutant	
	3.10 SAFT-VR-Mie	
	3.11 SAFT-VR-Mie with polar contributions	
	3.12 Extended Corresponding States	
4	Derivatives	39
	4.1 Thermodynamic Derivatives	. 39
	4.2 Term conversion	. 42
5	Algorithms	45
	5.1 Phase equilibria	
	5.2 Tracing (isobars and isotherms)	
	5.3 VLLE	
	5.4 VLLE @ constant pressure	
	5.5 Critical curves & points	
	5.6 Information	. 60
6	Examples	61
	6.1 The teqp paper in I&ECR	
7	teqp	67
•	7.1 teqp package	
8	Indices and tables	79

Python Module Index	81
Index	83

CHAPTER

ONE

GETTING STARTED

1.1 Introduction

teqp (phonetically: tɛk pi) is a C++-based library with wrappers. It was written because implementing EOS (particularly working out the derivatives) is a painful, error-prone, and slow process. The advent of open-source automatic differentiation libraries makes the implementation of EOS as fast as hand-written derivatives, and much easier to implement without errors.

There is a paper about teqp: https://doi.org/10.1021/acs.iecr.2c00237

The documentation is based on the Python wrapper because it can be readily integrated with the documentation tools (sphinx in this case) and can be auto-generated at documentation build time.

1.2 Installation

1.2.1 Python

The library can be installed with:

```
pip install teqp
```

because the binary wheels for all major platforms are provided on pypi.

If you desire to build teap yourself, it is recommended to pull from github and build a binary wheel, and then subsequently install that wheel:

```
git clone --recursive https://github.com/usnistgov/teqp
cd teqp
python setup.py bdist_wheel
pip install dist/*.whl # or replace with the appropriate binary wheel
```

1.2.2 C++

The build is cmake based. There are targets available for an interface library, etc. Please see CMakeLists.txt

CHAPTER

TWO

C++ INTERFACE

2.1 Introduction

The abstract base class defining the public C++ interface of teqp is documented in AbstractModel. This interface was developed because re-compilation of the core of teqp is VERY slow, due to the heavy use of templates, which makes the code very flexible, but difficult to work with when doing development. Especially users that would like to only use the library but not be forced to pay the price of recompilation benefit from this approach.

The models that are allowed in this abstract interface are defined in AllowedModels. A new model instance can be created by passing properly formatted JSON data structure to the make_model() function.

CHAPTER

THREE

MODELS

3.1 Constructing Models

With a few exceptions, most models are constructed by describing the model in JSON format, and passing the JSON-formatted information to the make_model function. There are some convenience functions exposed for backwards compatibility, but as of version 0.14.0, all model construction should go via this route.

At the C++ level, the returned value from the make_model function is a shared_ptr that wraps a pointer to an AbstractModel class. The AbstractModel class is an abstract class which defines the public C++ interface.

In Python, construction is in two parts. First, the model is constructed, which only includes the common methods. Then, the model-specific attributes and methods are attached with the attach_model_specific_methods method.

The JSON structure is of two parts, the kind field is a case-sensitive string defining which model kind is being constructed, and the model field contains all the information needed to build the model. In the case of hard-coded models, nothing is provided in the model field, but it must still be provided.

Also, the argument to make_model must be valid JSON. So if you are working with numpy array datatypes, make sure to convert them to a list (which is convertible to JSON). Example below.

```
[1]: import teqp, numpy as np
    teqp.__version__
[1]: '0.17.0'
[2]: tegp.make_model({'kind': 'vdW1', 'model': {'a': 1, 'b': 2}})
[2]: <teqp.teqp.AbstractModel at 0x7fb062cd4590>
[3]: # Fields are case-sensitive
    teqp.make_model({'kind': 'vdW1', 'model': {'a': 1, 'B': 2}})
    RuntimeError
                                                Traceback (most recent call last)
    Cell In[3], line 2
          1 # Fields are case-sensitive
     ----> 2 teqp.make_model({'kind': 'vdW1', 'model': {'a': 1, 'B': 2}})
    File /opt/conda/lib/python3.11/site-packages/teqp/__init__.py:47, in make_model(*args,

    **kwargs)

         42 def make_model(*args, **kwargs):
         43
         44
                 This function is in two parts; first the make_model function (renamed to _
     →make_model in the Python interface)
                is used to make the model and then the model-specific methods are.
                                                                                (continues on next page)
```

```
→attached to the instance
         46
     ---> 47
                AS = _make_model(*args, **kwargs)
         48
                attach_model_specific_methods(AS)
          49
                return AS
    RuntimeError: :{"B":2,"a":1}': required property 'b' not found in object
     |/|\|:{"B":2, "a":1}': validation failed for additional property 'B': instance invalid
     →as per false-schema
[4]: # A hard-coded model
    teqp.make_model({
        'kind': 'AmmoniaWaterTillnerRoth',
        'model': {}
    })
[4]: <teqp.teqp.AbstractModel at 0x7fb0504d86b0>
[5]: # Show what to do with numpy array
    Tc_K = np.array([100,200])
    pc_Pa = np.array([3e6, 4e6])
    teqp.make_model({
        "kind": "vdW",
        "model": {
            "Tcrit / K": Tc_K.tolist(),
            "pcrit / Pa": pc_Pa.tolist()
     })
[5]: <teqp.teqp.AbstractModel at 0x7fb0504d8890>
[6]: # methane with conventional PC-SAFT
    j = {
         'kind': 'PCSAFT',
         'model': {
             'coeffs': [{
                 'name': 'methane',
                  'BibTeXKey': 'Gross-IECR-2001',
                  'm': 1.00,
                  'sigma_Angstrom': 3.7039,
                  'epsilon_over_k': 150.03,
             } ]
        }
    model = teqp.make_model(j)
```

3.2 General cubics

The reduced residual Helmholtz energy for the main cubic EOS (van der Waals, Peng-Robinson, and Soave-Redlich-Kwong) can be written in a common form (see https://www.ncbi.nlm.nih.gov/pmc/articles/PMC7365965/)

$$\alpha^{r} = \psi^{(-)} - \frac{\tau a_m}{RT_r} \psi^{(+)}$$

$$\psi^{(-)} = -\ln(1 - b_m \rho)$$

$$\psi^{(+)} = \frac{\ln\left(\frac{\Delta_1 b_m \rho + 1}{\Delta_2 b_m \rho + 1}\right)}{b_{rr}(\Delta_1 - \Delta_2)}$$

with the constants given by:

- vdW: $\Delta_1 = 0, \Delta_2 = 0$
- SRK: $\Delta_1 = 1, \Delta_2 = 0$
- PR: $\Delta_1 = 1 + \sqrt{2}, \Delta_2 = 1 \sqrt{2}$

The quantities a_m and b_m are described (with exact solutions for the numerical coefficients) for each of these EOS in https://pubs.acs.org/doi/abs/10.1021/acs.iecr.1c00847.

The models in teqp are instantiated based on knowledge of the critical temperature, pressure, and acentric factor. Thereafter all quantities are obtained from derivatives of α^r .

The Python class is here: GeneralizedCubic

```
[1]: import teqp
    teqp.__version_
[1]: '0.17.0'
[2]: import json
    import CoolProp.CoolProp as CP
    # Values taken from http://dx.doi.org/10.6028/jres.121.011
    Tc_K = [190.564, 154.581, 150.687]
    pc_Pa = [4599200, 5042800, 4863000]
    acentric = [0.011, 0.022, -0.002]
    # Instantiate Peng-Robinson model
    modelPR = teqp.canonical_PR(Tc_K, pc_Pa, acentric)
    # Instantiate Soave-Redlich-Kwong model
    modelSRK = teqp.canonical_SRK(Tc_K, pc_Pa, acentric)
[3]: # And you can get information about the model in JSON format
    # from the get_meta function
    modelPR.get_meta()
[3]: {'Delta1': 2.414213562373095,
     'Delta2': -0.41421356237309515,
     'OmegaA': 0.4572355289213822,
     'OmegaB': 0.07779607390388846,
     'kind': 'Peng-Robinson'}
```

3.2. General cubics 7

3.2.1 Adjusting k_ij

Fine-tuned values of k_{ij} can be provided when instantiating the model, for Peng-Robinson and SRK. A complete matrix of all the k_{ij} values must be provided. This allows for asymmetric mixing models in which $k_{ij} \neq k_{ji}$.

```
[4]: k_12 = 0.01
kmat = [[0,k_12,0],[k_12,0,0],[0,0,0]]
teqp.canonical_PR(Tc_K, pc_Pa, acentric, kmat)
teqp.canonical_SRK(Tc_K, pc_Pa, acentric, kmat)
[4]: <teqp.teqp.AbstractModel at 0x7ff14c7e1eb0>
```

3.2.2 Superancillary

The superancillary equation gives the co-existing liquid and vapor (orthobaric) densities as a function of temperature. The set of Chebyshev expansions was developed in https://pubs.acs.org/doi/abs/10.1021/acs.iecr.1c00847. These superancillary equations are more accurate than iterative calculations in double precision arithmetic and also at least 10 times faster to calculate, and cannot fail in iterative routines, even extremely close to the critical point.

The superancillary equation is only exposed for pure fluids to remove ambiguity when considering mixtures. The returned tuple is the liquid and vapor densities

```
[5]: teqp.canonical_PR([Tc_K[0]], [pc_Pa[0]], [acentric[0]]).superanc_rhoLV(100)

[5]: (30846.392909514052, 42.480231719002326)
```

3.2.3 a and b

For the cubic EOS, it can be useful to obtain the a and b parameters directly. The b parameter is particularly useful because 1/b is the maximum allowed density in the EOS

```
[6]: import numpy as np
z = np.array([0.3, 0.4, 0.3])
modelPR.get_a(140, z), modelPR.get_b(140, z)
[6]: (0.1874177858906821, 2.1984349667726406e-05)
```

3.2.4 alpha functions

It can be advantageous to modify the alpha function to allow for more accurate handling of the attractive interactions. Coefficients are tabulated for many species in https://pubs.acs.org/doi/10.1021/acs.jced.7b00967 for the Peng-Robinson EOS with Twu alpha function and the values from the SI of that paper are in the csv file next to this file.

```
[7]: import pandas

dfTwu = pandas.read_csv('fitted_Twu_coeffs.csv')

def get_model(INCHIKey):
    row = dfTwu.loc[dfTwu['inchikey']==INCHIKey]
    if len(row) == 1:
        row = row.iloc[0]
    Tc_K = row['Tc_K']
    pc_MPa = row['pc_MPa']
    c = [row['c0'], row['c1'], row['c2']]

(continues on next page)
```

```
# The JSON definition of the EOS,
# here a generic cubic EOS to allow for
# specification of the alpha function(s)

j = {
    'kind': 'cubic',
    'model': {
        'type': 'PR',
        'Tcrit / K': [Tc_K],
        'pcrit / Pa': [pc_MPa*1e6],
        'acentric': [0.1],
        'alpha': [{'type': 'Twu', 'c': c}]

}
model = teqp.make_model(j)
return model, j

# Hexane
model, j = get_model(INCHIKey='VLKZOEOYAKHREP-UHFFFAOYSA-N')
```

```
[8]: # And how about we calculate the pressure and s^+ = -sr/R at NBP of water
model, j = get_model(INCHIKey='XLYOFNOQVPJJNP-UHFFFAOYSA-N') # WATER

T = 373.1242958476844 # K, NBP of water
rhoL, rhoV = model.superanc_rhoLV(T)
z = np.array([1.0])
pL = rhoL*model.get_R(z)*T*(1.0 + model.get_Ar01(T, rhoL, z))
splusL = model.get_splus(T, rhoL*z)
print(pL, splusL)

102739.27983424198 6.03697343297877
```

Also implemented in version 0.17 are the alpha functions of Mathias-Copeman.

$$\alpha = (1 + c_0 x + c_1 x^2 + c_2 x^3)^2$$

with

$$x = 1 + \sqrt{\frac{T}{T_c i}}$$

Parameters are tabulated for many fluids in the paper of Horstmann (https://doi.org/10.1016/j.fluid.2004.11.002) for the SRK EOS (only)

3.2. General cubics 9

(continues on next page)

```
model = teqp.make_model(j)
T = 373.1242958476844 # K
rhoL, rhoV = model.superanc_rhoLV(T)
z = np.array([1.0])
pL = rhoL*model.get_R(z)*T*(1.0 + model.get_Ar01(T, rhoL, z))
print('And with SRK and Mathias-Copeman parameters:', pL, 'Pa')
And with SRK and Mathias-Copeman parameters: 101639.22259842217 Pa
```

3.3 Quantum PR

The quantum-corrected Peng-Robinson model of Aasen *et al.* (https://doi.org/10.1063/1.5111364) can be used to account for quantum effects by empirical fits to the Feynman-Hibbs corrections.

The conventional Peng-Robinson approach is used, with an adjusted covolume b_i given by

$$b_i = b_{i,PR}\beta_i(T)$$

with

$$\beta_i(T) = \left(\frac{1 + A_i/(T + B_i)}{1 + A_i/(T_{ci} + B_i)}\right)^3$$


and Twu alpha functions are used to correct the attractive part.

```
[1]: import numpy as np, matplotlib.pyplot as plt, pandas
    import CoolProp.CoolProp as CP
    import teqp
    teqp.__version_
[1]: '0.17.0'
[2]: kij_library = {
         ('H2','Ne'): 0.18,
         ('He','H2'): 0.17
    lij_library = {
         ('H2','Ne'): 0.0,
         ('He','H2'): -0.16
    def get_model(names, c_factor=0):
        param_library = {
             'H2': {
                 "Ls": [156.21],
                 "Ms": [-0.0062072],
                 "Ns": [5.047],
                 "As": [3.0696],
                 "Bs": [12.682],
                 "cs / m^3/mol": [c_factor*-3.8139e-6],
                 "Tcrit / K": [33.19],
                 "pcrit / Pa": [12.964e5]
             },
                                                                                  (continues on next page)
```

```
'Ne': {
            "Ls": [0.40453],
            "Ms": [0.95861],
            "Ns": [0.8396],
            "As": [0.4673],
            "Bs": [2.4634],
            "cs / m^3/mol": [c_factor*-2.4665e-6],
            "Tcrit / K": [44.492],
            "pcrit / Pa": [26.79e5]
        },
        'He': {
            "Ls": [0.48558],
            "Ms": [1.7173],
            "Ns": [0.30271],
            "As": [1.4912],
            "Bs": [3.2634],
            "cs / m^3/mol": [c_factor*-3.1791e-6],
            "Tcrit / K": [5.1953],
            "pcrit / Pa": [2.276e5]
    }
    params = [param_library[name] for name in names]
    model = {k: [param[k][0] for param in params] for k in ['Ls','Ms','Ns','As','Bs',
→'cs / m^3/mol','Tcrit / K','pcrit / Pa']}
    if len(names) == 1:
        model['kmat'] = [[0]]
        model['lmat'] = [[0]]
    else:
        kij = kij_library[names]
        model['kmat'] = [[0,kij],[kij,0]]
        lij = lij_library[names]
        model['lmat'] = [[0,lij],[lij,0]]
    j = {
        "kind": "QCPRAasen",
        "model": model
    return teqp.make_model(j), j
model = get_model(('H2','Ne'))[0]
modelH2 = get_model(('H2',))[0]
modelNe = get_model(('Ne',))[0]
def get_traces(T, ipures):
    traces = []
    for ipure in ipures:
        rhovecL0 = np.array([0.0, 0.0])
        rhovecV0 = np.array([0.0, 0.0])
        if ipure == 1:
            rhoL, rhoV = modelNe.superanc_rhoLV(T)
            rhoL, rhoV = modelH2.superanc_rhoLV(T)
        rhovecL0[ipure] = rhoL
        rhovecV0[ipure] = rhoV
        opt = teqp.TVLEOptions();
                                                                           (continues on next page)
```

3.3. Quantum PR 11

```
opt.polish=True;
          opt.integration_order=5; opt.rel_err=1e-10;
          opt.calc_criticality = True;
        opt.crit\_termination=1e-10
        trace = model.trace_VLE_isotherm_binary(T, rhovecL0, rhovecV0, opt)
       traces.append(trace)
    return traces
for T in [24.59, 28.0, 34.66, 39.57, 42.50]:
   if T < 26.0:
       traces = get_traces(T, [0, 1])
    else:
       traces = get_traces(T, [1])
   for trace in traces:
       df = pandas.DataFrame(trace)
        # Plot the VLE solution
       line, = plt.plot(df['xL_0 / mole frac.'], df['pL / Pa']/1e5)
        plt.plot(df['xV_0 / mole frac.'], df['pL / Pa']/1e5, color=line.get_color())
    # Plot the VLLE solution if found
   for soln in model.find_VLLE_T_binary(traces):
        for rhovec in soln['polished']:
           rhovec = np.array(rhovec)
           rhotot = sum(rhovec)
           x = rhovec/rhotot
           p = rhotot*model.get_R(x)*T*(1+model.get_Ar01(T, rhotot, x))
           plt.plot(x[0], p/1e5, 'X', color=line.get_color())
            # print(T, rhovec, x[0], p/1e5, 'bar')
plt.gca().set(xlabel='x/y H$_2$', ylabel='$P$ / bar', xlim=(0,1), ylim=(0,30));
```

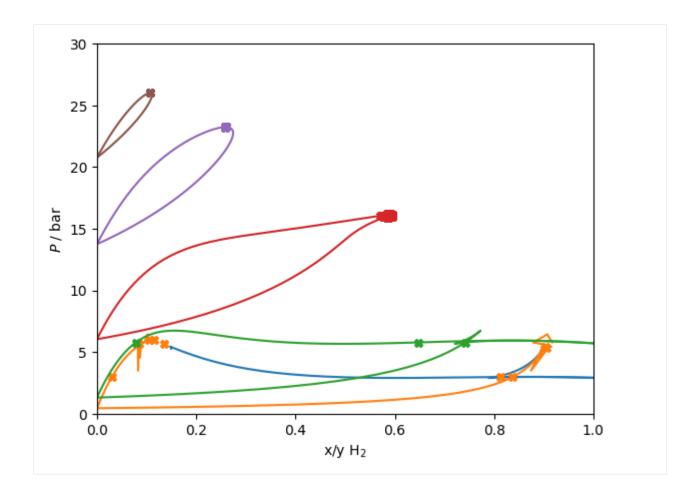

3.4 Advanced cubic mixing rules

In the advanced cubic mixing rules, the conventional cubic EOS is taken as the basis for the method (usually Peng-Robinson), but different rules are used for the attractive term a_m . The formulation reads:

$$\frac{a_m}{b_m} = \sum_{i} z_i \frac{a_i}{b_i} + \frac{a_{\text{res}}^{E,\gamma}}{CEoS}$$

where CEoS is a scaling parameter that is in principle linked with the EOS coefficients, but can also be allowed to be an adjustable parameter. The a_i and b_i are the pure fluid values of component i. The z_i are mole fractions. The mixture covolume is given by

$$b_m = \sum_i \sum_j z_i z_j b_{ij}$$

with

$$b_{ij} = \left(\frac{b_i^{1/s} + b_j^{1/s}}{2}\right)^s$$

The heart of the method is the definition of $a_{\rm res}^{E,\gamma}$, the residual contribution (not in the conventional thermodynamic sense) to the excess Helmholtz energy. There are many possible models here, but one that seems to work well is that of Wilson,

for which the expression reads:

$$\frac{a_{\mathrm{res}}^{E,\gamma}}{RT} = -\sum_{i} z_{i} \ln \left(\sum_{j} z_{j} \Omega_{ji}(T) \right) - \sum_{i} z_{i} \ln \left(\frac{\phi_{i}}{z_{i}} \right)$$

with

$$\Omega_{ji} = \frac{v_j}{v_i} \exp(-A_{ij}/T)$$

and

$$\frac{\phi_i}{z_i} = \frac{v_i}{\sum_k z_k v_k}$$

with the $v_i = b_i$. The parameter $A_{ij} \neq A_{ji}$ in general, and is also given temperature dependence, which is also not supposed to be present according to the derivation. Thus, the models for A_{ij} read something like this here:

$$A_{ij} = m_{ij}T + n_{ij}$$

so m is non-dimensional and n has units of temperature.

```
[1]: import numpy, matplotlib.pyplot as plt, numpy as np, pandas
  import teqp
  teqp.__version__
[1]: '0.17.0'
```

```
[2]: # Four isotherms of experimental data from doi: 10.1016/j.fluid.2016.05.015
    import io, pandas
    dat = pandas.read_csv(io.StringIO("""PointID y1 uy1 x1 ux1 p/bar up T/K
    1 0.0274 0.0007 0.0068 0.0002 59.830 0.053 293.10
    2 0.0664 0.0014 0.0183 0.0004 64.864 0.080 293.10
    3 0.0978 0.0020 0.0298 0.0007 69.772 0.080 293.10
    4 0.1199 0.0024 0.0424 0.0009 74.737 0.080 293.10
    5 0.1219 0.0028 0.1132 0.0023 89.869 0.080 293.10
    6 0.1339 0.0024 0.0995 0.0022 89.198 0.080 293.10
    7 0.1399 0.0026 0.0943 0.0020 88.853 0.080 293.10
    8 0.1461 0.0027 0.0823 0.0019 86.962 0.080 293.10
    9 0.1466 0.0028 0.0778 0.0017 85.942 0.080 293.10
    10 0.1466 0.0028 0.0772 0.0016 85.868 0.080 293.10
    1 0.1378 0.0027 0.0159 0.0004 42.667 0.051 273.08
    2 0.2143 0.0038 0.0297 0.0007 49.547 0.051 273.08
    3 0.2612 0.0043 0.0411 0.0009 55.238 0.051 273.08
    4 0.3209 0.0049 0.0609 0.0013 65.069 0.088 273.08
    5 0.3554 0.0051 0.0786 0.0016 73.395 0.088 273.08
    6 0.3758 0.0052 0.0978 0.0019 81.061 0.088 273.08
    7 0.3903 0.0053 0.1190 0.0023 90.706 0.088 273.08
    8 0.3914 0.0053 0.1477 0.0028 100.966 0.088 273.08
    9 0.3879 0.0053 0.1614 0.0030 104.806 0.088 273.08
    10 0.3724 0.0052 0.1875 0.0033 110.846 0.088 273.08
    11 0.3550 0.0051 0.2068 0.0036 114.105 0.088 273.08
    12 0.2727 0.0044 0.2531 0.0041 118.020 0.088 273.08
    13 0.3343 0.0049 0.2268 0.0038 116.295 0.088 273.08
    1 0.2048 0.0038 0.0106 0.0003 25.754 0.050 253.05
    2 0.3019 0.0049 0.0217 0.0005 30.479 0.050 253.05
    3 0.4638 0.0056 0.0436 0.0010 45.352 0.050 253.05
    4 0.5319 0.0056 0.0647 0.0014 58.188 0.050 253.05
```

14 Chapter 3. Models

(continues on next page)

```
5 0.5854 0.0054 0.1077 0.0021 78.315 0.084 253.05
    6 0.5979 0.0054 0.1497 0.0028 98.276 0.084 253.05
    7 0.5898 0.0054 0.1801 0.0032 109.241 0.084 253.05
    8 0.5042 0.0057 0.0570 0.0012 51.343 0.084 253.05
    9 0.5644 0.0055 0.0861 0.0017 67.594 0.084 253.05
    10 0.5949 0.0054 0.1267 0.0024 86.883 0.084 253.05
    11 0.5826 0.0054 0.2015 0.0035 116.614 0.084 253.05
    12 0.5537 0.0055 0.2431 0.0040 129.873 0.084 253.05
    13 0.4973 0.0055 0.2971 0.0046 139.161 0.084 253.05
    14 0.4971 0.0055 0.2972 0.0046 139.261 0.084 253.05
    1 0.7076 0.0050 0.0257 0.0006 27.983 0.056 223.10
    2 0.7774 0.0041 0.0522 0.0011 44.918 0.056 223.10
    3 0.8077 0.0036 0.0930 0.0019 64.906 0.081 223.10
    4 0.8131 0.0035 0.1261 0.0024 84.799 0.081 223.10
    5 0.8057 0.0035 0.1584 0.0029 104.410 0.081 223.10
    6 0.7843 0.0038 0.1982 0.0035 125.782 0.081 223.10
    7 0.7533 0.0041 0.2380 0.0040 144.287 0.081 223.10
    8 0.7150 0.0045 0.2813 0.0044 159.015 0.081 223.10
    9 0.6942 0.0047 0.3064 0.0047 165.347 0.081 223.10
    """), sep='\s+', engine='python')
[3]: # Model from Lasala, FPE, 2016: https://doi.org/10.1016/j.fluid.2016.05.015
        "kind": "advancedPRaEres",
         "model": {
            "Tcrit / K": [304.21, 126.19],
            "pcrit / Pa": [7.383e6, 3395800.0],
           "alphas": [{"type": "PR78", "acentric": 0.22394}, {"type": "PR78", "acentric": __
     \rightarrow 0.0372
           "aresmodel": {"type": "Wilson", "m": [[0.0, -3.4768], [3.5332, 0.0]], "n": [[0.
     \rightarrow 0, 825], [-585, 0.0]]},
            "options": {"s": 2.0, "brule": "Quadratic", "CEoS": -0.52398}
    }
    model = teqp.make_model(j)
    for T in [223.15, 253.05, 273.08, 293.1]:
        ipure = 0
        [rhoL0, rhoV0] = model.superanc_rhoLV(T, ipure)
        rhovecL0 = np.array([0.0, 0.0]); rhovecL0[ipure] = rhoL0
        rhovecV0 = np.array([0.0, 0.0]); rhovecV0[ipure] = rhoV0
        J = model.trace_VLE_isotherm_binary(T, rhovecL0, rhovecV0, opt)
        df = pandas.DataFrame(J)
        plt.plot(df['xL_0 / mole frac.'], df['pL / Pa']/1e6,'k')
        plt.plot(df['xV_0 / mole frac.'], df['pV / Pa']/1e6,'k')
    plt.plot(1-dat['x1'], dat['p/bar']/10, 'o')
    plt.plot(1-dat['y1'], dat['p/bar']/10, '^')
    plt.gca().set(xlabel='$x_1$ / mole frac.', ylabel='$p$ / MPa', ylim=(0, 25))
    plt.show()
```

(continues on next page)

Traceback (most recent call last)

ValueError

```
Cell In[3], line 13
      1 # Model from Lasala, FPE, 2016: https://doi.org/10.1016/j.fluid.2016.05.015
           "kind": "advancedPRaEres",
          "model": {
      4
   (...)
    10
    11 }
---> 13 model = teqp.make_model(j)
    14 for T in [223.15, 253.05, 273.08, 293.1]:
           ipure = 0
File /opt/conda/lib/python3.11/site-packages/teqp/__init__.py:47, in make_model(*args,

    **kwarqs)

    42 def make_model(*args, **kwargs):
            \pi \pi \pi
    43
    44
          This function is in two parts; first the make_model function (renamed to _
→make_model in the Python interface)
         is used to make the model and then the model-specific methods are _
⇒attached to the instance
---> 47
           AS = _make_model(*args, **kwargs)
    48
          attach_model_specific_methods(AS)
     49
          return AS
ValueError: Don't understand "kind" of: advancedPRaEres
```

3.5 Model Potentials

These EOS for model potentials are useful for understanding theory, and capture some (but perhaps not all) of the physics of "real" fluids.

```
[1]: import teqp
teqp.__version__
[1]: '0.17.0'
```

3.5.1 Square-well

The potential is defined by

$$V(r) = \begin{cases} \infty & r < \sigma \\ -\varepsilon & \sigma < r < \lambda \sigma \\ 0 & r > \lambda \sigma \end{cases}$$

from which an EOS can be developed by correlating results from molecular simulation. The EOS is from:

Rodolfo Espíndola-Heredia, Fernando del Río and Anatol Malijevsky Optimized equation of the state of the square-well fluid of variable range based on a fourth-order free-energy expansion J. Chem. Phys. 130, 024509 (2009); https://doi.org/10.1063/1.3054361

```
[2]: model = teqp.make_model({
    "kind": "SW_EspindolaHeredia2009",
    "model": {
        "lambda": 1.3
     }
})
```

3.5.2 EXP-6

```
[3]: model = teqp.make_model({
    "kind": "EXP6_Kataoka1992",
    "model": {
        "alpha": 12
     }
})
```

3.5.3 Lennard-Jones Fluid

The Lennard-Jones potential is given by

$$V(r) = 4\varepsilon \left((\sigma/r)^{12} - (\sigma/r)^6 \right)$$

and EOS are available from many authors. teqp includes the EOS from Thol, Kolafa-Nezbeda, and Johnson.

3.5.4 Two-Center Lennard-Jones Fluid

```
[5]: model = teqp.make_model({
    'kind': '2CLJF-Dipole',
    'model': {
        "author": "2CLJF_Lisal",
        'L^*': 0.5,
        '(mu^*)^2': 0.1
    }
})
print(model.solve_pure_critical(1.3, 0.3))

model = teqp.make_model({
    'kind': '2CLJF-Quadrupole',
    'model': {
        (continues on next page)
```

3.5. Model Potentials 17

```
"author": "2CLJF_Lisal",
    'L^*': 0.5,
    '(Q^*)^2': 0.1
}

print(model.solve_pure_critical(1.3, 0.3))

(2.8282972062188056, 0.2005046666634018)
(2.832574303561834, 0.2003194655463274)
```

3.6 Cubic Plus Association (CPA)

The combination of a cubic EOS with association

3.7 PC-SAFT

The PC-SAFT implementation in teqp is based on the implementation of Gross and Sadowski (https://doi.org/10.1021/ie0003887), with the typo from their paper fixed. It does NOT include the association contribution, only the dispersive contributions.

The model in teqp requires the user to specify the values of sigma, epsilon/kB, and m for each substance. A very few substances are hardcoded in teqp, for testing purposes.

The Python class is here: PCSAFTEOS

```
[1]: import teqp
    import numpy as np
    teqp.__version__
[1]: '0.17.0'
[2]: TeXkey = 'Gross-IECR-2001'
    ms = [1.0, 1.6069, 2.0020]
    eoverk = [150.03, 191.42, 208.11]
    sigmas = [3.7039, 3.5206, 3.6184]
    coeffs = []
    for i in range(len(ms)):
        c = teqp.SAFTCoeffs()
        c.m = ms[i]
        c.epsilon_over_k = eoverk[i]
        c.sigma_Angstrom = sigmas[i]
        coeffs.append(c)
    model = teqp.PCSAFTEOS(coeffs)
```

```
[3]: # Here are some rudimentary timing results
T = 300.0
rhovec = np.array([3.0, 4.0, 5.0])
rho = rhovec.sum()
x = rhovec/np.sum(rhovec)
%timeit model.get_fugacity_coefficients(T,rhovec)

(continues on next page)
```

```
%timeit (-1.0) *model.get_Ar20(T, rho, x)
%timeit model.get_partial_molar_volumes(T, rhovec)

4.57 µs ± 123 ns per loop (mean ± std. dev. of 7 runs, 100,000 loops each)
4.2 µs ± 12.2 ns per loop (mean ± std. dev. of 7 runs, 100,000 loops each)
17 µs ± 652 ns per loop (mean ± std. dev. of 7 runs, 100,000 loops each)
```

The model parameters can be queried:

3.7.1 Adjusting k_ij

Fine-tuned values of k_{ij} can be provided when instantiating the model. A complete matrix of all the k_{ij} values must be provided. This allows for asymmetric mixing models in which $k_{ij} \neq k_{ji}$.

3.7.2 Superancillary

The superancillary equation for PC-SAFT has been developed, and is much more involved than that of the cubic EOS. As a consequence, the superancillary equation has been provided as a separate package rather than integrating it into to teqp to minimize the binary size of teqp. It can be installed from PYPI with: pip install PCSAFTsuperanc

The scaling in the superancillaries uses reduced variables:

```
\tilde{T} = T/(\epsilon/k_{\rm B})\tilde{\rho} = \rho_{\rm N}\sigma^3
```

where $\rho_{\rm N}$ is the number density, and the other parameters are from the PC-SAFT model

```
[7]: import PCSAFTsuperanc

sigma_m = 3e-10 # [meter]
e_over_k = 150.0 # [K]
m = 5

# The saturation temperature
T = 300

(continues on next page)
```

3.7. PC-SAFT 19

```
[Ttilde_crit, Ttilde_min] = PCSAFTsuperanc.qet_Ttilde_crit_min(m=m)
print('Ttilde crit:', Ttilde_crit)
# Get the scaled densities for liquid and vapor phases
[tilderhoL, tilderhoV] = PCSAFTsuperanc.PCSAFTsuperanc_rhoLV(Ttilde=T/e_over_k, m=m)
# Convert back to molar densities
N_A = PCSAFTsuperanc.N_A # The value of Avogadro's constant used in superancillaries
rhoL, rhoV = [tilderho/(N_A*siqma_m**3) for tilderho in [tilderhoL, tilderhoV]]
# As a sanity check, confirm that we got the same pressure in both phases
c = teqp.SAFTCoeffs()
c.sigma_Angstrom = sigma_m*1e10
c.epsilon_over_k = e_over_k
c.m = m
model = teqp.PCSAFTEOS([c])
z = np.array([1.0])
pL = rhoL*model.get_R(z)*T*(1+model.get_Ar01(T, rhoL, z))
pV = rhoV*model.get_R(z)*T*(1+model.get_Ar01(T, rhoV, z))
print('Pressures are:', pL, pV, 'Pa')
Ttilde crit: 2.648680568587752
Pressures are: 227809.12314460654 227809.12314409122 Pa
```

3.7.3 Maximum density

The maximum number density allowed by the EOS is defined based on the packing fraction. To get a molar density, divide by Avogadro's number. The function is conveniently exposed in Python:

```
[8]: max_rhoN = teqp.PCSAFTEOS(coeffs).max_rhoN(130.0, np.array([0.3, 0.3, 0.4]))
    display(max_rhoN)
    max_rhoN/6.022e23 # the maximum molar density in mol/m^3
    1.9139171771761775e+28
[8]: 31782.085306811314
```

3.7.4 Polar contributions

As of teqp version 0.15, quadrupolar and dipolar contributions have been added to the hard chain plus dispersion model which is referred to conventionally as PC-SAFT. The definitions of the reduced dipolar and quadrupolar parameters are not well documented, so they are given here. The work of Stoll, Vrabec, and Hasse (https://doi.org/10.1063/1.1623475) clearly describes the formulation of the star-scaling.

In SI units, the reduced squared dipole moment is defined by

$$(\mu^*)_{\text{conventional}}^2 = \frac{(\mu[Cm])^2}{4\pi\epsilon_0(\varepsilon[J])(\sigma[m])^3}$$

$$(Q^*)_{\text{conventional}}^2 = \frac{(\mu[Cm])^2}{4\pi\epsilon_0(\varepsilon[J])(\sigma[m])^5}$$

In the PC-SAFT formulation, the only difference is the addition of dividing the denominator by the number of segments m

$$(\mu^*)^2 = \frac{(\mu[Cm])^2}{4\pi\epsilon_0 m(\varepsilon/k_{\rm B}[K])k_B(\sigma[m])^3} \label{eq:multiple}$$

$$(Q^*)^2 = \frac{(Q[Cm^2])^2}{4\pi\epsilon_0 m(\varepsilon/k_B[K])k_B(\sigma[m])^5}$$

The unit conversions are obtained from


$$(\sigma[m]) = (10^{-10}m/A)(\sigma[A])$$

$$(\mu[Cm]) = (3.33564 \times 10^{-30}Cm/D)(\mu[D])$$

and $\epsilon_0 = 8.85419e - 12 \text{ C}^2 \text{ N}^{-1} \text{ m}^{-2}$ is the permittivity of vacuum.

```
[9]: # CO2 with quadrupolar contributions
    j = {
        'kind': 'PCSAFT',
         'model': {
             'coeffs': [{
                 'name': 'CO2',
                  'BibTeXKey': 'Gross-AICHEJ',
                  'm': 1.5131,
                  'sigma_Angstrom': 3.1869,
                  'epsilon_over_k': 169.33,
                  '(Q^*)^2': 1.26, # modified from the values in Gross and Vrabec since
     \rightarrowthe base model is different
                  'nQ': 1
             } ]
         }
    model = teqp.make_model(j)
    Tc, rhoc = model.solve_pure_critical(300, 11000)
    T = Tc*0.999
    rhoL_, rhoV_ = model.extrapolate_from_critical(Tc, rhoc, T)
    rhoL, rhoV = model.pure_VLE_T(T, rhoL_, rhoV_, 10)
    import CoolProp.CoolProp as CP
    import matplotlib.pyplot as plt
    import pandas
    0 = []
    for T_ in np.linspace(T, 215, 1000):
        rhoL, rhoV = model.pure_VLE_T(T_, rhoL, rhoV, 10)
        try:
             o.append({
               'T': T_, 'rhoL': rhoL, 'rhoV': rhoV,
               'rhoLSW': CP.PropsSI('Dmolar', 'T', T_, 'Q', 0, 'CO2'),
               'rhoVSW': CP.PropsSI('Dmolar', 'T', T_, 'Q', 1, 'CO2')
             })
        except:
             pass
    df = pandas.DataFrame(o)
    plt.plot(df['rhoL'], df['T'], 'r', label='PCSAFT+Q')
    plt.plot(df['rhoV'], df['T'], 'r')
    plt.plot(df['rhoLSW'], df['T'], 'k', label='S&W')
    plt.plot(df['rhoVSW'], df['T'], 'k')
    plt.legend()
    plt.gca().set(xlabel=r'$\rho$ / mol/m$^3$', ylabel='$T$ / K')
    plt.show()
```

3.7. PC-SAFT 21

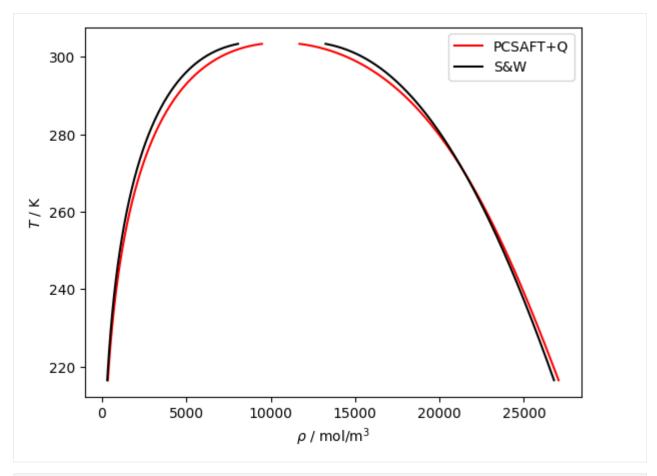

```
[10]: # Acetone with dipolar contributions
          'kind': 'PCSAFT',
          'model': {
              'coeffs': [{
                  'name': 'acetone',
                   'BibTeXKey': 'Gross-IECR',
                   'm': 2.7447,
                    'sigma_Angstrom': 3.2742,
                    'epsilon_over_k': 232.99,
                   '(mu^*)^2': 1.9, # modified from the values in Gross and Vrabec since.
      \rightarrowthe base model is different
                   'nmu': 1
              } ]
          }
     model = teqp.make_model(j)
     Tc, rhoc = model.solve_pure_critical(300, 11000)
      T = Tc*0.999
      rhoL_, rhoV_ = model.extrapolate_from_critical(Tc, rhoc, T)
      rhoL, rhoV = model.pure_VLE_T(T, rhoL_, rhoV_, 10)
     import CoolProp.CoolProp as CP
      import matplotlib.pyplot as plt
                                                                                   (continues on next page)
```

```
import pandas
0 = []
for T_ in np.linspace(T, 215, 1000):
    rhoL, rhoV = model.pure_VLE_T(T_, rhoL, rhoV, 10)
    try:
        o.append({
          'T': T_, 'rhoL': rhoL, 'rhoV': rhoV, 'rhoLSW': CP.PropsSI('Dmolar','T',T_,'Q',0,'acetone'),
           'rhoVSW': CP.PropsSI('Dmolar','T',T_,'Q',1,'acetone')
        })
    except:
        pass
df = pandas.DataFrame(o)
plt.plot(df['rhoL'], df['T'], 'r', label='PCSAFT+D')
plt.plot(df['rhoV'], df['T'], 'r')
plt.plot(df['rhoLSW'], df['T'], 'k', label='S&W')
plt.plot(df['rhoVSW'], df['T'], 'k')
plt.legend()
plt.gca().set(xlabel=r'$\rho$ / mol/m$^3$', ylabel='$T$ / K')
plt.show()
                                                                        PCSAFT+D
    500
                                                                        S&W
    450
    400
 ¥
1350
     300
    250
             0
                    2000
                             4000
                                      6000
                                               8000
                                                       10000
                                                                12000
                                                                          14000
                                          \rho / mol/m<sup>3</sup>
```

3.7. PC-SAFT 23

3.8 Multi-fluid EOS

Peering into the innards of teqp

```
[1]: import timeit, json
  import pandas
  import numpy as np
  import teqp
  teqp.__version__
[1]: '0.17.0'
```

3.8.1 Ancillary Equations

Ancillary equations are provided along with multiparameter equations of state. The give a good *approximation* to the phase equilibrium densities. There are routines in teqp to use the ancillary equations provided with the EOS. First a class containing the ancillary equations is obtained, then methods on that class are called

```
[2]: model = teqp.build_multifluid_model(["Methane"], teqp.get_datapath())
anc = model.build_ancillaries()
T = 100.0 # [K]
rhoL, rhoV = anc.rhoL(T), anc.rhoV(T)
print('Densities are:', rhoL, rhoV, 'mol/m^3')

Densities are: 27357.335621492966 42.04100696197727 mol/m^3
```

But those densities do not correspond to the *true* phase equilibrium solution, so we need to polish the solution:

```
[3]: Niter = 10
    rhoLtrue, rhoVtrue = model.pure_VLE_T(T, rhoL, rhoV, Niter)
    print('VLE densities are:', rhoLtrue, rhoVtrue, 'mol/m^3')

VLE densities are: 27357.147019094467 42.047982278351704 mol/m^3
```

And looking the densities, they are slightly different after the phase equilibrium calculation

3.8.2 Ammonia-Water

Tillner-Roth and Friend provided a hard-coded model that is in a form not compatible with the other multi-fluid models. It is available via the high-level factory function

```
[4]: AW = teqp.AmmoniaWaterTillnerRoth()
   AW.get_Ar01(300, 300, np.array([0.9, 0.0]))
[4]: -0.09731055757504622
```

3.8.3 Pure fluid loading

 $37.9 \text{ ms} \pm 82.3 \text{ µs} \text{ per loop} \text{ (mean} \pm \text{ std. dev. of } 7 \text{ runs, } 10 \text{ loops each)}$

So, how to make it faster? Only do it once and cache

```
[7]: # Here is the set of possible aliases to absolute paths of files
     # Building this map takes a little while (somewhat faster in C++) due to all the file.
     → reads
     # If you know your files will not change, good idea to build this alias map yourself.
     %timeit aliasmap = teqp.build_alias_map(teqp.get_datapath())
     aliasmap = teqp.build_alias_map(teqp.get_datapath())
     list(aliasmap.keys())[0:10] # the first 10 aliases in the dict
     37.8 \text{ ms} \pm 634 \text{ } \mu \text{s} \text{ per loop (mean} \pm \text{ std. dev. of } 7 \text{ runs, } 10 \text{ loops each)}
[7]: ['1,2-DICHLOROETHANE',
      '1,2-dichloroethane',
      '1-BUTENE',
      '1-Butene',
      '100-41-4',
      '10024-97-2',
      '102687-65-0',
      '106-42-3',
      '106-97-8',
      '106-98-9'1
```

```
[8]: # Then load the absolute paths from the alias map,
    # which will guarantee that you hit exactly what you were looking for,
    # resolving aliases as needed
    identifiers = [aliasmap[n] for n in ["n-C1H4"]]
    %timeit model = teqp.build_multifluid_model(identifiers, teqp.get_datapath())

621 µs ± 1.99 µs per loop (mean ± std. dev. of 7 runs, 1,000 loops each)
```

At some point soon teqp will support in-memory loading of JSON data for the pure components, without requiring reads from the operating system

```
[9]: # And you can also load the JSON that teqp is loading for the pure fluids
pureJSON = teqp.collect_component_json(['Neon','Hydrogen'], teqp.get_datapath())
```

3.8. Multi-fluid EOS 25

3.8.4 Mixture model loading

```
[10]: # Load the default JSON for the binary interaction parameters
     BIP = json.load(open(teqp.qet_datapath()+'/dev/mixtures/mixture_binary_pairs.json'))
[11]: # You can obtain interaction parameters either by pairs of names, where name is the
      →name that teqp uses, the ["INFO"]["NAME"] field
     params, swap_needed = teqp.get_BIPdep(BIP, ['Methane','Ethane'])
     params
[11]: {'BibTeX': 'Kunz-JCED-2012',
      'CAS1': '74-82-8',
      'CAS2': '74-84-0',
      'F': 1.0,
      'Name1': 'Methane',
      'Name2': 'Ethane',
      'betaT': 0.996336508,
      'betaV': 0.997547866,
      'function': 'Methane-Ethane',
      'gammaT': 1.049707697,
      'gammaV': 1.006617867}
[12]: # Or also by CAS#
     params, swap_needed = teqp.get_BIPdep(BIP, ['74-82-8','74-84-0'])
     params
[12]: {'BibTeX': 'Kunz-JCED-2012',
      'CAS1': '74-82-8',
      'CAS2': '74-84-0',
      'F': 1.0,
      'Name1': 'Methane',
      'Name2': 'Ethane',
      'betaT': 0.996336508,
      'betaV': 0.997547866,
      'function': 'Methane-Ethane',
      'gammaT': 1.049707697,
      'gammaV': 1.006617867}
[13]: # But mixing is not allowed
     params, swap_needed = teqp.get_BIPdep(BIP, ['74-82-8','Ethane'])
     params
     ValueError
                                                Traceback (most recent call last)
     Cell In[13], line 2
          1 # But mixing is not allowed
      ----> 2 params, swap_needed = teqp.get_BIPdep(BIP, ['74-82-8','Ethane'])
           3 params
     ValueError: Can't match the binary pair for: 74-82-8/Ethane
```

3.8.5 Estimation of interaction parameters

Estimation of interaction parameters can be used when no mixture model is present. The flags keyword argument allows the user to control how estimation is applied. The flags keyword argument should be a dictionary, with keys of "estimate" to provide the desired estimation scheme as-needed. For now, the only allowed estimation scheme is Lorentz-Berthelot.

If it is desired to force the estimation, the "force-estimate" to force the use of the provided estimation scheme for all binaries, even when a proper mixture model is available. The value associated with "force-estimate" is ignored.

```
[14]: params, swap_needed = teqp.get_BIPdep(BIP, ['74-82-8','74-84-0'], flags={'force-
      →estimate':'yes', 'estimate': 'Lorentz-Berthelot'})
[14]: {'F': 0.0, 'betaT': 1.0, 'betaV': 1.0, 'gammaT': 1.0, 'gammaV': 1.0}
[15]: # And without the force, the forcing is ignored
     params, swap_needed = teqp.get_BIPdep(BIP, ['74-82-8','74-84-0'], flags={'estimate':
     →'Lorentz-Berthelot'})
     params
[15]: {'BibTeX': 'Kunz-JCED-2012',
      'CAS1': '74-82-8',
      'CAS2': '74-84-0',
      'F': 1.0,
      'Name1': 'Methane',
      'Name2': 'Ethane',
      'betaT': 0.996336508,
      'betaV': 0.997547866,
      'function': 'Methane-Ethane',
       'gammaT': 1.049707697,
       'gammaV': 1.006617867}
[16]: # And the same flags can be passed to the multifluid model constructor
     model = tegp.build_multifluid_model(
         ['74-82-8','74-84-0'],
         teqp.get_datapath(),
         flags={'force-estimate':'yes', 'estimate': 'Lorentz-Berthelot'})
```

3.9 Multfluid mutant

These adapted multifluid models are used for fitting departure functions. The pure fluids remain fixed while you can adjust the mixture model, both the interaction parameters as well as the departure function terms

3.9. Multfluid mutant 27

```
[3]: %timeit teqp.build_multifluid_mutant(basemodel, s)

27.9 µs ± 1.65 µs per loop (mean ± std. dev. of 7 runs, 10,000 loops each)
```

```
[4]: mutant.get_Ar01(300, 3.0, np.array([0.5, 0.5]))
[4]: -0.00017517184039893556
```

3.10 SAFT-VR-Mie

The SAFT-VR-Mie EOS of Lafitte et al. (https://doi.org/10.1063/1.4819786) is based on the use of a Mie potential of the form

$$u(r) = C\epsilon \left((\sigma/r)^{\lambda_r} - (\sigma/r)^{\lambda_a} \right)$$

with

$$C = \frac{\lambda_r}{\lambda_r - \lambda_a} \left(\frac{\lambda_r}{\lambda_a} \right)^{\lambda_a / (\lambda_r - \lambda_a)}$$

which allows for a better representation of thermodynamic properties in general, but not always.

number of molecules are provided for testing, you should

plan on providing your own parameters.

```
[1]: import teqp
    teqp.__version__
[1]: '0.17.0'

[2]: import numpy as np
    import pandas
    import matplotlib.pyplot as plt
    import CoolProp.CoolProp as CP
    import scipy.integrate

[3]: # Show two ways to instantiate a SAFT-VR-Mie model, the
    # first by providing the coefficients, and the second
    # by providing the name of the species. Only a very small
```

(continues on next page)

```
# Show that both give the same result for the residual pressure
z = np.array([1.0])
model = teqp.make_model({
   "kind": 'SAFT-VR-Mie',
    "model": {
        "coeffs": [{
            "name": "Ethane",
            "BibTeXKey": "Lafitte",
            "m": 1.4373,
            "epsilon_over_k": 206.12, # [K]
            "sigma_m": 3.7257e-10,
            "lambda_r": 12.4,
            "lambda_a": 6.0
        }]
    }
})
display(model.get_Ar01(300, 300, z))
model = teqp.make_model({
    "kind": 'SAFT-VR-Mie',
    "model": {
        "names": ["Ethane"]
})
display(model.get_Ar01(300, 300, z))
-0.04926724350863724
-0.04926724350863724
```

```
[4]: # Here is an example of using teqp to trace VLE for propane
    # with the default parameters of PC-SAFT and SAFT-VR-Mie
    # models
    for kind in ['SAFT-VR-Mie', 'PCSAFT']:
        j = {
             "kind": kind,
             "model": {
                 "names": ["Propane"]
        model = teqp.make_model(j)
        z = np.array([1.0])
        Tc, rhoc = model.solve_pure_critical(300, 10000)
        # Extrapolate away from the critical point
        Ti = Tc*0.9997
        rhoL, rhoV = model.extrapolate_from_critical(Tc, rhoc, Ti)
        \circ = []
        T = Ti
        while T > 88:
            rhoL, rhoV = model.pure_VLE_T(T, rhoL, rhoV, 10)
            T -= 0.1
             o.append({'rhoL': rhoL, 'rhoV': rhoV, 'T': T})
                                                                                (continues on next page)
```

3.10. SAFT-VR-Mie 29

```
(continued from previous page)
    df = pandas.DataFrame(o)
    line, = plt.plot(df['rhoL'], df['T'], label=kind)
    plt.plot(df['rhoV'], df['T'], color=line.get_color())
# From the reference EOS of Lemmon et al. via CoolProp
name = 'Propane'
Tc = CP.PropsSI(name, 'Tcrit')
Ts = np.linspace(88, Tc, 1000)
rhoL = CP.PropsSI('Dmolar','T',Ts,'Q',0,name)
rhoV = CP.PropsSI('Dmolar','T',Ts,'Q',1,name)
line, = plt.plot(rhoL, Ts, label='Reference EOS')
plt.plot(rhoV, Ts, line.get_color())
plt.gca().set(xlabel=r'$\rho$ / mol/m$^3$', ylabel=r'$T$ / K')
plt.legend()
plt.tight_layout(pad=0.2)
plt.savefig('SAFTVRMIE_PCSAFT.pdf')
plt.show()
                                                                       SAFT-VR-Mie
                                                                       PCSAFT
    350
                                                                       Reference EOS
    300
    250
    200
    150
    100
                                                               12500
                     2500
                               5000
                                          7500
                                                    10000
                                                                         15000
                                                                                    17500
                                           \rho / mol/m<sup>3</sup>
```


```
"model": {
         "names": ["Propane"]
    }
}
model = teqp.make_model(j)

z = np.array([1.0])
%timeit model.solve_pure_critical(300, 10000)

1.4 ms ± 827 ns per loop (mean ± std. dev. of 7 runs, 1,000 loops each)
253 µs ± 2.77 µs per loop (mean ± std. dev. of 7 runs, 1,000 loops each)
```

```
[6]: # Checking the effective hardness of interaction,
    # the neff parameter defined in https://doi.org/10.1063/5.0007583
    # SAFT-VR-Mie comes closest to the right behavior
    modelVR = teqp.make_model({
            "kind": 'SAFT-VR-Mie',
            "model": { "names": ["Methane"] }
    })
    modelPCSAFT = teqp.make_model({
             "kind": 'PCSAFT',
             "model": { "names": ["Methane"] }
    })
    modelMF = teqp.build_multifluid_model(["Methane"], teqp.get_datapath())
    for model, label in [(modelVR, 'SAFT-VR-Mie'),
                          (modelPCSAFT, 'PC-SAFT'),
                          (modelMF, 'reference EOS')]:
        z = np.array([1.0])
        rho = 1e-5
        T = np.geomspace(8, 10000, 10000)
        neff = []
        for T_ in T:
            neff.append(model.get_neff(T_, rho, z))
        plt.plot(T, neff, label=label)
    plt.xscale('log')
    plt.ylim(0, 30)
    plt.gca().set(xlabel=r'$T$ / K', ylabel=r'$n_{\rm eff}$')
    plt.legend()
    plt.show()
```

3.10. SAFT-VR-Mie 31

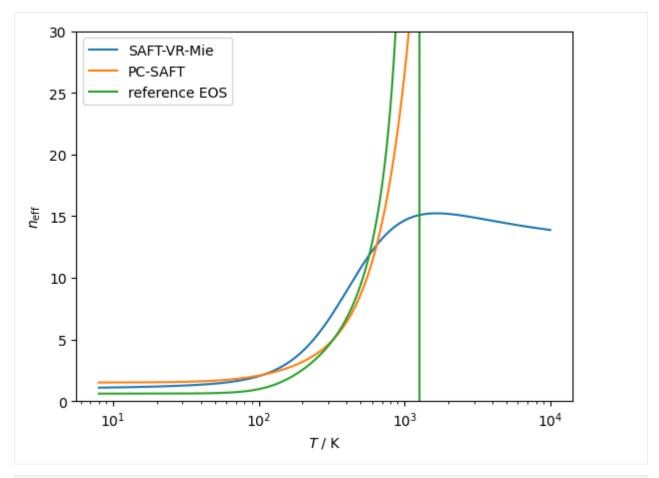

```
[7]: # Checking the temperature derivative of the virial coefficient
    name = 'Methane'
    modelVR = teqp.make_model({
             "kind": 'SAFT-VR-Mie',
             "model": { "names": [name] }
    })
    modelPCSAFT = teqp.make_model({
             "kind": 'PCSAFT',
             "model": { "names": [name] }
    modelMF = teqp.build_multifluid_model([name], teqp.get_datapath())
    for model, label in [(modelVR, 'SAFT-VR-Mie'),
                          (modelPCSAFT, 'PC-SAFT'),
                           (modelMF, 'reference EOS')]:
         z = np.array([1.0])
        T = np.geomspace(8, 10000, 10000)
        n = 2
        B, TdBdT, thetan = [],[],[]
        for T_ in T:
             TdBdT.append(model.get_dmBnvirdTm(n, 1, T_, z)*T_)
             B.append(model.get_dmBnvirdTm(n, 0, T_, z))
            thetan.append(B[-1]+TdBdT[-1])
        plt.plot(T, thetan, label=label)
    plt.xscale('log')
    plt.yscale('log')
                                                                                (continues on next page)
```

```
plt.gca().set(xlabel=r'$T$ / K', ylabel=r'$B+T\times $d$B$/d$T$')
plt.legend()
plt.show()
         10<sup>2</sup>
                                                                                                   SAFT-VR-Mie
                                                                                                   PC-SAFT
         10<sup>1</sup>
                                                                                                   reference EOS
        10<sup>0</sup>
 B + T \times dB/dT
       10^{-1}
      10^{-2}
       10^{-3}
       10^{-4}
                     10<sup>1</sup>
                                                                                    10^{3}
                                                                                                                    10<sup>4</sup>
                                                     10<sup>2</sup>
                                                                  T/K
```

3.10. SAFT-VR-Mie 33

3.10.1 Calculation of diameter

The calculation of the diameter is based upon

$$d_{ii} = \int_0^{\sigma_{ii}} (1 - \exp(-\beta u_{ii}^{\text{Mie}}(r)) dr$$

but the integrand is basically constant from 0 to some cutoff value of r, which we'll call $r_{\rm cut}$. So first we need to find the value of $r_{\rm cut}$ that makes the integrand take its constant value, which is explained well in the paper from Aasen (https://github.com/ClapeyronThermo/Clapeyron.jl/issues/152#issuecomment-1480324192). Finding the cutoff value is obtained when

$$\exp(-\beta u_{ii}^{\text{Mie}}(r)) = EPS$$

where EPS is the numerical precision of the floating point type. Taking the logs of both sides,

$$-\beta u_{ii}^{\text{Mie}} = \ln(EPS)$$

To get a starting value, it is first assumed that only the repulsive contribution contributes to the potential, yielding $u^{\text{rep}} = C\epsilon(\sigma/r)^{\lambda_r}$ which yields

$$-\beta C\epsilon(\sigma/r)^{\lambda_r} = \ln(EPS)$$

and

$$(\sigma/r)_{\text{guess}} = (-\ln(EPS)/(\beta C\epsilon))^{1/\lambda_r}$$

Then we solve for the residual R(r) = 0, where $R_0 = \exp(-u/T) - EPS$. Equivalently we can write the residual in logarithmic terms as $R = -u/T - \ln(EPS)$. This simplifies the rootfinding as you need R, R' and R'' to apply Halley's method, which are themselves quite straightforward to obtain because R' = -u'/T, R'' = -u''/T, where the primes are derivatives taken with respect to σ/r .

```
[9]: # Calculation of the residual function (needed for Halley's method) import sympy as sy kappa, j, lambda_r, lambda_a = sy.symbols('kappa, j, lambda_r, lambda_a') u = kappa*(j**lambda_r - j**lambda_a) display(sy.diff(u, j)) display(sy.simplify(sy.diff(u, j, 2))) \kappa \left(-\frac{j^{\lambda_a}\lambda_a}{j} + \frac{j^{\lambda_r}\lambda_r}{j}\right)\frac{\kappa \left(-j^{\lambda_a}\lambda_a^2 + j^{\lambda_a}\lambda_a + j^{\lambda_r}\lambda_r^2 - j^{\lambda_r}\lambda_r\right)}{j^2}
```

```
[10]: # Here is a small example of using adaptive quadrature
# to obtain the quasi-exact value of d for ethane
# according to the pure-fluid parameters given in
# Lafitte et al.

epskB = 206.12 # [K]
sigma_m = 3.7257e-10 # [m]
lambda_r = 12.4
lambda_a = 6.0
C = lambda_r/(lambda_r-lambda_a)*(lambda_r/lambda_a)**(lambda_a/(lambda_r-lambda_a))
T = 300.0 # [K]

(continues on next page)
```

34 Chapter 3. Models


```
# The classical method based on adaptive quadrature
def integrand(r_m):
   u = C*epskB*((sigma_m/r_m)**(lambda_r) - (sigma_m/r_m)**(lambda_a))
   return 1.0 - np.exp(-u/T)
print('quasi-exact; (value, error estimate):')
exact, exact_error = scipy.integrate.quad(integrand, 0.0, sigma_m, epsrel=1e-16,_
⇔epsabs=1e-16)
print (exact*1e10, exact_error*1e10)
j = {"kind": 'SAFT-VR-Mie', "model": {"names": ["Ethane"]}}
model = teqp.make_model(j)
d = model.get_core_calcs(T, -1, z)["dmat"][0][0]
print('teqp; (value, error from quasi-exact in %)')
print(d, abs(d/(exact*1e10)-1)*100)
quasi-exact; (value, error estimate):
3.597838592720949 3.2280056122233332e-12
teqp; (value, error from quasi-exact in %)
3.597838640613809 1.331156429529301e-06
```

3.11 SAFT-VR-Mie with polar contributions

```
[1]: import teqp
    teqp.__version_
[1]: '0.17.0'
[2]: import numpy as np
    import matplotlib.pyplot as plt
    import math
[3]: ek = 100 \# [K]
    sigma_m = 3e-10
    N_A = 6.022e23
     fig, (ax1, ax2) = plt.subplots(2, 1)
     # # From https://arxiv.org/pdf/mtrl-th/9501001.pdf which pulled from M. van Leeuwen_
     →and B. Smit, Phys. Rev. Lett. 71, 3991 (1993)
     # These data need to be rescaled according to Hentschke et al. (DOI: https://doi.org/
     →10.1103/physreve.75.011506)
     \# mustar2 = [2.5, 3.0, 3.5, 4.0]
     \# T = [2.63, 3.35, 4.20, 5.07]
     # rho = [0.29, 0.25, 0.24, 0.24]
     # ax1.plot(mustar2, T, 'd')
     # ax2.plot(mustar2, rho, 'd')
     # Comparing with Hentschke, DOI: https://doi.org/10.1103/physreve.75.011506
    mustar2 = [1, 2, 3, 4]
    T = [1.41, 1.60, 1.82, 2.06]
    rho = [0.30, 0.31, 0.312, 0.289]
    ax1.plot(mustar2, T, 's')
    ax2.plot(mustar2, rho, 's')
```

```
kB = 1.380649e-23 \# Boltzmann's constant, J/K
epsilon_0 = 8.8541878128e-12 # Vacuum permittivity
for polar_model in ['GrossVrabec','GubbinsTwu+GubbinsTwu','GubbinsTwu+Luckas']:
    x = []; y = []; TT = []; DD = []
    rhostar\_guess = 0.27
   Tstar\_guess = 1.5
    for mustar2 in np.arange(0.001, 5, 0.1):
        z = np.array([1.0])
        mu2_C2m2 = 4.0*np.pi*epsilon_0*sigma_m**3*ek*kB*mustar2
        mu_Cm = mu2_C2m2**0.5
        model = teqp.make_model({
            "kind": 'SAFT-VR-Mie',
            "model": {
                "polar_model": polar_model,
                "coeffs": [{
                    "name": "Stockmayer",
                    "BibTeXKey": "me",
                    "m": 1.0,
                    "epsilon_over_k": ek, # [K]
                    "sigma_m": sigma_m,
                    "lambda_r": 12.0,
                    "lambda_a": 6.0,
                    "mu_Cm": mu_Cm,
                    "nmu": 1.0
                } ]
            }
        })
        T, rho = model.solve_pure_critical(Tstar_guess*ek, rhostar_guess/(N_A*sigma_
\hookrightarrowm**3))
        # Store the values
        x.append(mustar2)
        TT.append(T/ek)
        DD.append(rho*N_A*sigma_m**3)
        # Update the guess for the next calculation
        Tstar\_guess = TT[-1]
        rhostar\_guess = DD[-1]
   ax1.plot(x, TT, label=polar_model)
   ax2.plot(x, DD)
ax1.legend(loc='best')
ax1.set(ylabel=r'$T^*$')
ax2.set(ylabel=r'$\rho^*$', xlabel=r'$(\mu^*)^2$')
plt.show()
```

36 Chapter 3. Models

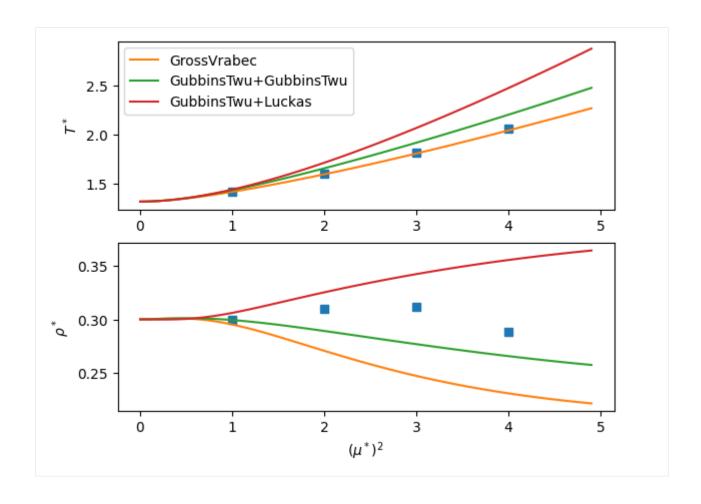

3.12 Extended Corresponding States

This implements the method of Huber and Ely: https://doi.org/10.1016/0140-7007(94)90083-3

It does not include the undocumented temperature and density terms that are included in REFPROP

```
[1]: import teqp
     teqp.__version_
[1]: '0.17.0'
[2]: import numpy as np
     import CoolProp.CoolProp as CP
[3]: # These parameters are from Huber & Ely
     j = {
         "kind": "multifluid-ECS-HuberEly1994",
         "model": {
           "reference_fluid": {
                 "name": teqp.get_datapath() + "/dev/fluids/R134a.json",
                 "acentric": 0.326680,
                 "Z_crit": 4.056e6/(5030.8*8.314471*374.179),
                 "T_crit / K": 374.179,
                 "rhomolar_crit / mol/m^3": 5030.8
                                                                                 (continues on next page)
```

```
},
      "fluid": {
            "name": "R143a",
            "f_T_coeffs": [ -0.22807e-1, -0.64746],
            "h_T_coeffs": [ 0.36563, -0.26004e-1],
            "acentric": 0.25540,
            "T_crit / K": 346.3,
            "rhomolar_crit / mol/m^3": (1/0.194*1000),
            "Z_crit": 3.76e6/(346.3*8.314471*(1/0.194*1000))
     }
    }
}
model = teqp.make_model(j)
z = np.array([1.0])
R = model.get_R(z)
T, rho = 400, 2600
p = rho*R*T*(1+model.get_Ar01(T, rho, z))
display('pressure from ECS:', p)
display('pressure from EOS:', CP.PropsSI('P','T',T,'Dmolar',rho,'R143a'))
'pressure from ECS:'
5556329.442047298
'pressure from EOS:'
5478978.746656995
```

38 Chapter 3. Models

CHAPTER

FOUR

DERIVATIVES

4.1 Thermodynamic Derivatives

4.1.1 Helmholtz energy derivatives

Thermodynamic derivatives are at the very heart of teqp. All models are defined in the form $\alpha^r(T, \rho, z)$, where ρ is the molar density, and z are mole fractions. There are exceptions for models for which the independent variables are in simulation units (Lennard-Jones and its ilk).

Thereofore, to obtain the residual pressure, it is obtained as a derivative:

$$p^r = \rho RT \left(\rho \left(\frac{\partial \alpha^r}{\partial \rho} \right)_T \right)$$

and other residual thermodynamic properties are defined likewise.

We can define the concise derivative

$$\Lambda_{xy}^r = (1/T)^x (\rho)^y \left(\frac{\partial^{x+y} (\alpha^r)}{\partial (1/T)^x \partial \rho^y} \right)$$

so we can re-write the derivative above as

$$p^r = \rho RT\Lambda_{01}^r$$

Similar definitions apply for all the other thermodynamic properties, with the tot superscript indicating it is the sum of the residual and ideal-gas (not included in teqp) contributions:

$$\frac{p}{\rho RT} = 1 + \Lambda_{01}^r$$

Internal energy (u = a + Ts):

$$\frac{u}{RT} = \Lambda_{10}^{\rm tot}$$

Enthalpy $(h = u + p/\rho)$:

$$\frac{h}{RT} = 1 + \Lambda_{01}^r + \Lambda_{10}^{\rm tot}$$

Entropy $(s \equiv -(\partial a/\partial T)_v)$:

$$\frac{s}{B} = \Lambda_{10}^{\rm tot} - \Lambda_{00}^{\rm tot}$$

Gibbs energy (g = h - Ts):

$$\frac{g}{RT} = 1 + \Lambda_{01}^r + \Lambda_{00}^{\text{tot}}$$

Derivatives of pressure:

$$\left(\frac{\partial p}{\partial \rho}\right)_T = RT \left(1 + 2\Lambda_{01}^r + \Lambda_{02}^r\right)$$

$$\left(\frac{\partial p}{\partial T}\right)_{\rho} = R\rho \left(1 + \Lambda_{01}^{r} - \Lambda_{11}^{r}\right)$$

Isochoric specific heat $(c_v \equiv (\partial u/\partial T)_v)$:

$$\frac{c_v}{R} = -\Lambda_{20}^{\mathrm{tot}}$$

Isobaric specific heat $(c_p \equiv (\partial h/\partial T)_p)$; see Eq. 3.56 from Span [?] for the derivation):

$$\frac{c_p}{R} = -\Lambda_{20}^{\text{tot}} + \frac{(1 + \Lambda_{01}^r - \Lambda_{11}^r)^2}{1 + 2\Lambda_{01}^r + \Lambda_{02}^r}$$

```
[1]: import teqp
    teqp.__version__
[1]: '0.17.0'
```

[2]: import numpy as np

```
[3]: Tc_K = [300]
pc_Pa = [4e6]
acentric = [0.01]
model = teqp.canonical_PR(Tc_K, pc_Pa, acentric)
```

```
[4]: z = np.array([1.0])
    model.get_Ar01(300,300,z)

[4]: -0.06836660379313926
```

And there are additional methods to obtain all the derivatives up to a given order:

```
[5]: model.get_Ar06n(300,300,z) # derivatives 00, 01, 02, ... 06
[5]: array([-6.96613834e-02, -6.83666038e-02, 2.53578225e-03, -1.57011622e-04, 1.68186288e-05, -2.23059409e-06, 3.82592585e-07])
```

But more derivatives are slower than fewer:

```
[6]: %timeit model.get_Ar01(300,300,z)
%timeit model.get_Ar04n(300,300,z)

601 ns ± 6.75 ns per loop (mean ± std. dev. of 7 runs, 1,000,000 loops each)
1.11 µs ± 6.21 ns per loop (mean ± std. dev. of 7 runs, 1,000,000 loops each)
```

Note: calling overhead is usually on the order of 1 microsecond

4.1.2 Virial coefficients

Virial coefficients represent the thermodynamics of the interaction of two-, three-, ... bodies interacting with each other. They can be obtained rigorously if the potential energy surface of interaction is fully known. In general, such a surface can only be constructed for small rigid molecules. Many simple thermodynamic models do a poor job of predicting the thermodynamics captured by the virial coefficients.

The i-th virial coefficient is defined by

$$B_i = \frac{(\alpha^r)^{(i-1)}}{(i-2)!}$$

with the concise derivative term

$$(\alpha^r)^{(i)} = \lim_{\rho \to 0} \left(\frac{\partial^i \alpha^r}{\partial \rho^i} \right)_{T,\vec{x}}$$

teqp supports the virial coefficient directly, there is the get_B2vir method for the second virial coefficient:

```
[7]: model.get_B2vir(300, z)
[7]: -0.00023661263734465424
```

And the get_Bnvir method that allows for the calculation of higher virial coefficients:

The get_Bnvir method was implemented because when doing automatic differentiation, all the intermediate derivatives are also retained.

There is also a method to calculate temperature derivatives of a given virial coefficient

4.1.3 Isochoric Thermodynamics Derivatives

In the isochoric thermodynamics formalism, the EOS is expressed in the Helmholtz energy density Ψ as a function of temperature and molar densities $\vec{\rho}$. This formalism is handy because it allows for a concise mathematical structure, well suited to implementation in teqp. For instance the pressure is obtained from (see https://doi.org/10.1002/aic.16074):

$$p = -\Psi + \sum_{i=1}^{N} \rho_i \mu_i$$

with the chemical potential μ_i obtained from

$$\mu_i = \left(\frac{\partial \Psi}{\partial \rho_i}\right)_{T, \rho_{j \neq i}}$$

The molar densities ρ_i are related to the total density and the mole fractions:

$$\rho_i = x_i \rho$$

In teqp, the isochoric derivative functions like <code>get_fugacity_coefficients</code>, <code>get_partial_molar_volumes</code> take as arguments the temperature <code>T</code> and the vector of molar concentrations <code>rhovec= $\vec{\rho}$ </code>, which are obtained by multiplying the mole fractions by the total density.

Example:

```
[10]: model = teqp.build_multifluid_model(["CO2","Argon"], teqp.get_datapath())
   T, rhovec = 300, np.array([0.3,0.4])*300 # K, mo1/m^3
   display(model.get_fugacity_coefficients(T, rhovec))
   display(model.get_partial_molar_volumes(T, rhovec))
   array([0.97884567, 0.99866748])
   array([0.00470644, 0.00480351])
```

4.2 Term conversion

$$\begin{split} \alpha_0 &= \frac{a_0}{RT} = -1 + \ln \frac{\rho T}{\rho_0 T_0} + \frac{h_0^0}{RT} - \frac{s_0^0}{R} + \frac{1}{RT} \int_{T_0}^T c_p^0(T) dT - \frac{1}{R} \int_{T_0}^T \frac{c_p^0(T)}{T} dT \\ \alpha_0 &= \frac{a_0}{RT} = \ln(\rho) + \ln(T) - \ln(\rho_0 T_0) - 1 + \frac{h_0^0}{RT} - \frac{s_0^0}{R} + \frac{1}{RT} \int_{T_0}^T c_p^0(T) dT - \frac{1}{R} \int_{T_0}^T \frac{c_p^0(T)}{T} dT \end{split}$$

You can set the values of h_0^0 and h_0^0 to any value, including zero. So if you are converting a term from c_p^0/R , then you could do

$$\alpha_0 = \frac{a_0}{RT} = \ln(\rho) + \ln(T) - \ln(\rho_0 T_0) - 1 + \frac{1}{RT} \int_{T_0}^T c_p^0(T) dT - \frac{1}{R} \int_{T_0}^T \frac{c_p^0(T)}{T} dT$$

4.2.1 From CP0

Terms obtained in the form of contributions to c_p^0/R .

Constant term

A constant term of the form

$$c_n^0/R = c$$

yields a contribution of

$$\frac{c(T-T_0)}{T} - c\log\left(\frac{T}{T_0}\right)$$

Power term

A power term of the form

$$c_p^0/R = cT^t, t \neq 0, t \neq -1$$

yields a contribution of

$$cT^{t}\left(\frac{1}{t+1} - \frac{1}{t}\right) - c\frac{T_{0}^{t+1}}{T(t+1)} + c\frac{T_{0}^{t}}{t}$$

Planck-Einstein term

A term of the form

$$c_{p}^{0}/R = \sum_{k} a_{k} \frac{\left(b_{k}/T\right)^{2} \exp\left(b_{k}/T\right)}{\left(\exp\left(b_{k}/T\right) - 1\right)^{2}}$$

yields a contribution of

$$\sum_{k} a_k \ln \left[1 - \exp \left(\frac{-\theta_k}{T} \right) \right]$$

```
[1]: import teqp, os, numpy as np
teqp.__version__
[1]: '0.17.0'

[2]: path = teqp.get_datapath()+'/dev/fluids/n-Propane.json'
    os.path.exists(path)
    jig = teqp.convert_CoolProp_idealgas(path, 0)
    aig = teqp.IdealHelmholtz([jig])
    -aig.get_Ar20(300, 3, np.array([1.0]))
[2]: 7.863830967842212
```

4.2. Term conversion 43

CHAPTER

FIVE

ALGORITHMS

5.1 Phase equilibria

Two basic approaches are implemented in teqp:

- Iterative calculations given guess values
- Tracing along iso-curves (constant temperature, etc.) powered by the isochoric thermodynamics formalism

```
[1]: import teqp
  import numpy as np
  import pandas
  import matplotlib.pyplot as plt
  teqp.__version__
[1]: '0.17.0'
```

5.1.1 Iterative Phase Equilibria

Pure fluid

For a pure fluid, phase equilibrium between two phases is defined by equating the pressures and Gibbs energies in the two phases. This represents a 2D non-linear rootfinding problem. Newton's method can be used for the rootfinding, and in teqp, automatic differentiation is used to obtain the necessary Jacobian matrix so the implementation is quite efficient.

The method requires guess values, which are the densities of the liquid and vapor densities. In some cases, ancillary or superancillary equations have been developed which provide curves of guess densities as a function of temperature.

For a pure fluid, you can use the pure_VLE_T method to carry out the iteration.

The Python method is here: pure VLE T

```
[2]: # Instantiate the model
model = teqp.canonical_PR([300], [4e6], [0.1])

T = 250 # [K], Temperature to be used

# Here we use the superancillary to get guess values (actually these are more
# accurate than the results we will obtain from iteration!)
rhoL0, rhoV0 = model.superanc_rhoLV(T)
display('guess:', [rhoL0, rhoV0])

# Carry out the iteration, return the liquid and vapor densities
```

(continues on next page)

```
# The guess values are perturbed to make sure the iteration is actually
# changing the values
model.pure_VLE_T(T, rhoL0*0.98, rhoV0*1.02, 10)

'guess:'
[12735.311173407898, 752.4082303122791]
[2]: array([12735.31117341, 752.40823031])
```

Binary Mixture

For a binary mixture, the approach is roughly similar to that of a pure fluid. The pressure is equated between phases, and the chemical potentials of each component in each phase are forced to be the same.

Again, the user is required to provide guess values, in this case molar concentrations in each phase, and a Newton method is implemented to solve for the phase equilibrium. The analytical Jacobian is obtained from automatic differentiation.

The mix_VLE_Tx function is the binary mixture analog to pure_VLE_T for pure fluids.

The Python method is here: mix_VLE_Tx

```
[3]: zA = np.array([0.01, 0.99])
    model = teqp.canonical_PR([300,310], [4e6,4.5e6], [0.1, 0.2])
    model1 = teqp.canonical_PR([300], [4e6], [0.1])
    T = 273.0 \# [K]
     # start off at pure of the first component
    rhoL0, rhoV0 = model1.superanc_rhoLV(T)
     # then we shift to the given composition in the first phase
    # to get guess values
    rhovecA0 = rhoL0*zA
    rhovecB0 = rhoV0*zA
    # carry out the iteration
    code, rhovecA, rhovecB = model.mix_VLE_Tx(T, rhovecA0, rhovecB0, zA,
         1e-10, 1e-10, 1e-10, 1e-10, # stopping conditions
         10 # maximum number of iterations
        )
    code, rhovecA, rhovecB
[3]: (<VLE_return_code.xtol_satisfied: 1>,
     array([ 128.66049209, 12737.38871682]),
     array([ 12.91868229, 1133.77242677]))
```

You can (and should) check the value of the return code to make sure the iteration succeeded. Do not rely on the numerical value of the enumerated return codes!

5.2 Tracing (isobars and isotherms)

When it comes to mixture thermodynamics, as soon as you add another component to a pure component to form a binary mixture, the complexity of the thermodynamics entirely changes. For that reason, mixture iterative calculations for mixtures are orders of magnitude more difficult to carry out. Asymmetric mixtures can do all sorts of interesting things that are entirely unlike those of pure fluids, and the algorithms are therefore much, much more complicated. Formulating phase equilibrium problems is not much more complicated than for pure fluids, but the most challenging aspect is to obtain good guess values from which to start an iterative routine, and the difficulty of this problem increases with the complexity of the mixture thermodynamics.


Ulrich Deiters and Ian Bell have developed a number of algorithms for tracing phase equilibrium solutions as the solution of ordinary differential equations rather than carrying out iterative routines for a given state point. The advantage of the tracing calculations is that they can often be initiated at a state point that is entirely known, for instance the pure fluid endpoint for a subcritical isotherm or isobar.

The Python method is here: trace_VLE_isotherm_binary

The C++ implementation returns a string in JSON format, which can be conveniently operated upon, for instance after converting the returned data structure to a pandas. DataFrame. A simple example of plotting a subcritical isotherm for a "boring" mixture is presented here:

```
[4]: model = tegp.canonical_PR([300,310], [4e6,4.5e6], [0.1, 0.2])
    model1 = teqp.canonical_PR([300], [4e6], [0.1])
    T = 273.0 \# [K]
    rhoL0, rhoV0 = model1.superanc_rhoLV(T) # start off at pure of the first component
    j = model.trace_VLE_isotherm_binary(T, np.array([rhoL0, 0]), np.array([rhoV0, 0]))
    display(str(j)[0:100]+'...') # The first few bits of the data
    df = pandas.DataFrame(j) # Now as a data frame
    df.head(3)
    "[{'T / K': 273.0, 'c': -1.0, 'drho/dt': [-0.618312383229212, 0.7690760182230469, -0.
     →1277526773161415..."
       T / K
[4]:
                                                                               dt \
                C
                                                                drho/dt
    0 \quad 273.0 \quad -1.0 \quad [-0.618312383229212, \quad 0.7690760182230469, \quad -0.12... \quad \quad 0.000010
    1 273.0 -1.0 [-0.6183123817120353, 0.7690760162922189, -0.1... 0.000045
       273.0 -1.0 [-0.6183123827116788, 0.7690760173388914, -0.1... 0.000203
                                                                   rhoL / mol/m^3
            pL / Pa
                           pV / Pa
       2.203397e+06 2.203397e+06
                                                       [10697.985891540735, 0.0]
       2.203397e+06 2.203397e+06 [10697.985885357639, 7.690760309421386e-06]
       2.203397e+06 2.203397e+06
                                     [10697.98585753358, 4.229918121248511e-05]
                                      rhoV / mol/m^3
                                                              t xL_0 / mole frac.
    0
                          [1504.6120879290752, 0.0]
                                                      0.000000
                                                                               1.0
       [1504.6120866515366, 9.945415375682985e-07] 0.000010
                                                                               1.0
    1
       [1504.6120809026731, 5.469978386095445e-06] 0.000055
                                                                               1.0
        xV_0 / mole frac.
    0
                      1.0
    1
                      1.0
    2
                      1.0
```

```
[5]: plt.plot(df['xL_0 / mole frac.'], df['pL / Pa']/1e6)
   plt.plot(df['xV_0 / mole frac.'], df['pL / Pa']/1e6)
   plt.gca().set(xlabel='$x_1,y_1$ / mole frac.', ylabel='p / MPa')
   plt.show()
```

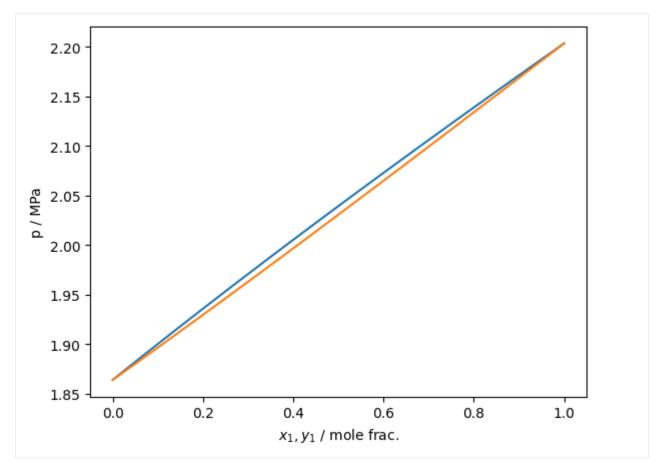


Isn't that exciting!

You can also provide an optional set of flags to the function to control other behaviors of the function, and switch between simple Euler and adaptive RK45 integration (the default)

The options class is here: TVLEOptions


Supercritical isotherms work approximately in the same manner

```
[6]: Tc_K = [190.564, 154.581]
    pc_Pa = [4599200, 5042800]
    acentric = [0.011, 0.022]
    model = teqp.canonical_PR(Tc_K, pc_Pa, acentric)
    model1 = teqp.canonical_PR([Tc_K[0]], [pc_Pa[0]], [acentric[0]])
    T = 170.0 # [K] # Note: above Tc of the second component
    rhoL0, rhoV0 = model1.superanc_rhoLV(T) # start off at pure of the first component
    j = model.trace_VLE_isotherm_binary(T, np.array([rhoL0, 0]), np.array([rhoV0, 0]))
    df = pandas.DataFrame(j) # Now as a data frame
    plt.plot(df['xL_0 / mole frac.'], df['pL / Pa']/1e6)
    plt.plot(df['xV_0 / mole frac.'], df['pL / Pa']/1e6)
    plt.gca().set(xlabel='$x_1,y_1$ / mole frac.', ylabel='p / MPa')
    plt.show()
```

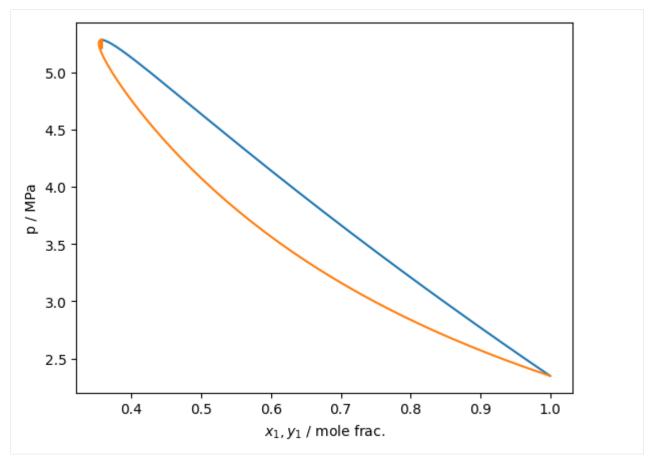

As of version 0.10.0, isobar tracing has been added to teqp. It operates in fundamentally the same fashion as the isotherm tracing and the same recommendations about starting at a pure fluid apply

The tracer function class is here: trace_VLE_isobar_binary

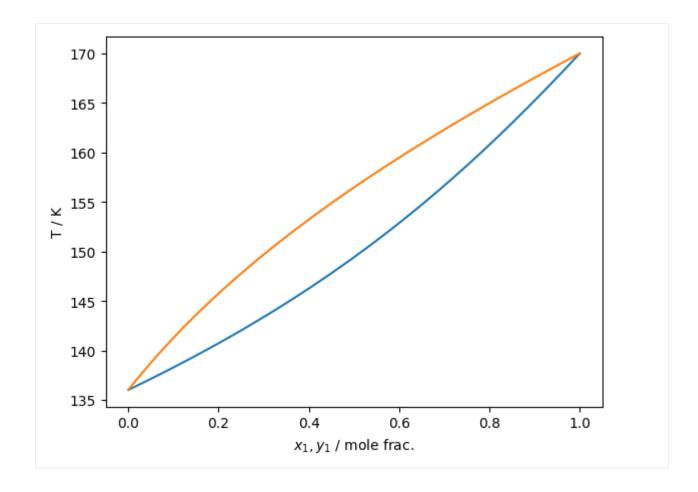

5.3 VLLE


Following the approach described in Bell et al.: https://doi.org/10.1021/acs.iecr.1c04703

for the mixture of nitrogen + ethane, with the default thermodynamic model in teqp, which is the GERG-2008 mixing parameters (no departure function).

Two traces are made, and the intersection is obtained, this gives you the VLLE solution.

```
rhovecL[ipure] = rhoLpure
        rhovecV[ipure] = rhoVpure
        opt = teqp.TVLEOptions()
        opt.p_termination = 1e8
        opt.crit_termination=1e-4
        opt.calc_criticality=True
        j = model.trace_VLE_isotherm_binary(T, rhovecL, rhovecV, opt)
        traces.append(j)
   return model, traces
T = 120.3420
model, traces = get_traces(T=T, ipures=[0,1])
for trace in traces:
   df = pandas.DataFrame(trace)
   plt.plot(df['xL_0 / mole frac.'], df['pL / Pa'])
   plt.plot(df['xV_0 / mole frac.'], df['pV / Pa'])
# Do the VLLE solving
for soln in model.find_VLLE_T_binary(traces):
    print('rhovec / mol/m^3 | p / Pa')
    for rhovec in soln['polished']:
       rhovec = np.array(rhovec)
       rhotot = sum(rhovec)
       x = rhovec/rhotot
       p = rhotot*model.get_R(x)*T*(1+model.get_Ar01(T, rhotot, x))
       plt.plot(x[0], p, 'X')
       print(rhovec, p)
    # And also carry out the LLE trace for the two liquid phases
    j = model.trace_VLE_isotherm_binary(T, np.array(soln['polished'][1]), np.
→array(soln['polished'][2]))
   df = pandas.DataFrame(j)
    plt.plot(df['xL_0 / mole frac.'], df['pL / Pa'], 'k')
   plt.plot(df['xV_0 / mole frac.'], df['pV / Pa'], 'k')
# Plotting niceties
plt.ylim(top=3e6, bottom=0)
plt.gca().set(xlabel='$x_1$ / mole frac.', ylabel='$p$ / Pa', title='nitrogen(1) +_
→ethane(2)')
plt.show()
rhovec / mol/m^3 | p / Pa
[3.66984834e+03 3.25893958e+00] 2321103.087319132
[19890.16767481 1698.86505766] 2321103.087318946
[ 5641.24690517 16140.85769908] 2321103.0873195715
```

5.3. VLLE 51

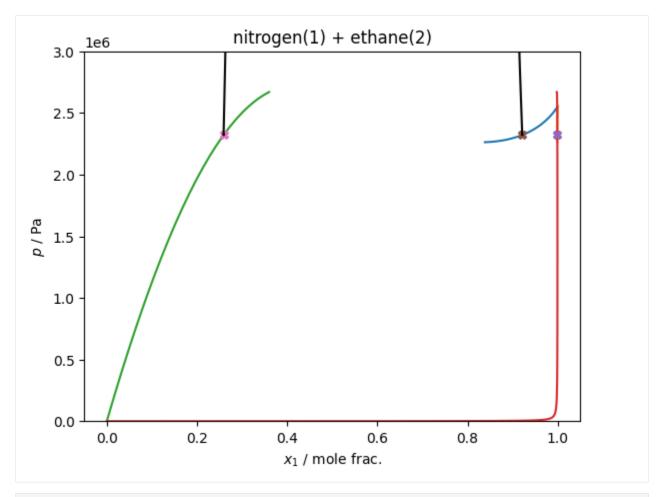

```
[2]: # Trace from both pure fluid endpoints
    T = 113
    model, traces = get_traces(T=T, ipures = [0,1])
    # Find the VLLE solution for the starting temperature
    solns = model.find_VLLE_T_binary(traces)
    rhovecV, rhovecL1, rhovecL2 = solns[0]['polished']
    # Obtain the VLLE trace towards higher temperatures
    opt = teqp.VLLETracerOptions()
    a = lambda x: np.array(x)
    VLLE = model.trace_VLLE_binary(T, a(rhovecV), a(rhovecL1), a(rhovecL2), opt)
    df = pandas.DataFrame(VLLE)
    # Add the pressure to the DataFrame
    def add_ps(row, key):
        T = row['T / K']
        rhovec = np.array(row[key])
        rhotot = sum(rhovec)
        x = rhovec/rhotot
        p = rhotot*model.get_R(x)*T*(1+model.get_Ar01(T, rhotot, x))
    df['p / Pa'] = df.apply(add_ps, axis=1, key='rhoV / mol/m^3')
    # Plot the p-T curve
                                                                               (continues on next page)
```

```
plt.plot(df['T / K'], df['p / Pa'])
    plt.gca().set(xlabel='$T$ / K', ylabel='$p$ / Pa');
    plt.title('Nitrogen + ethane VLLE curve')
[2]: Text(0.5, 1.0, 'Nitrogen + ethane VLLE curve')
                              Nitrogen + ethane VLLE curve
             1e6
         2.1
         2.0
         1.9
         1.8
         1.7
         1.6
                    115
                                  120
                                                125
                                                               130
                                                                             135
                                              T/K
```

5.4 VLLE @ constant pressure

Following the approach described in Bell et al.: https://doi.org/10.1021/acs.iecr.1c04703, but slightly different because the pressure is fixed rather than the temperature, but the same basic principles hold

for the mixture of nitrogen + ethane, with the default thermodynamic model in teqp, which is the GERG-2008 mixing parameters (no departure function).

Two traces are made, and the intersection is obtained, this gives you the VLLE solution.


```
[1]: import teqp, numpy as np, matplotlib.pyplot as plt, pandas
import CoolProp.CoolProp as CP


names = ['Nitrogen', 'Ethane']
model = teqp.build_multifluid_model(names, teqp.get_datapath())
pures = [teqp.build_multifluid_model([name], teqp.get_datapath()) for name in names]
p = 29e5 # Pa

(continues on next page)
```

```
# Trace from both pure fluid endpoints
traces = []
for ipure in [1,0]:
    # Init at the pure fluid endpoint
    anc = pures[ipure].build_ancillaries()
   rhoLpure, rhoVpure = [CP.PropsSI('Dmolar','P',p,'Q',Q,names[ipure]) for Q in [0,
→1]]
   T = CP.PropsSI('T', 'P', p, 'Q', 0, names[ipure])
   rhovecL = np.array([0.0, 0.0])
   rhovecV = np.array([0.0, 0.0])
   rhovecL[ipure] = rhoLpure
   rhovecV[ipure] = rhoVpure
    j = model.trace_VLE_isobar_binary(p, T, rhovecL, rhovecV)
   df = pandas.DataFrame(j)
   plt.plot(df['xL_0 / mole frac.'], df['T / K'])
   plt.plot(df['xV_0 / mole frac.'], df['T / K'])
   traces.append(j)
# Do the VLLE solving
for soln in model.find_VLLE_p_binary(traces):
    T = soln['polished'][-1]
   print('rhovec / mol/m^3 | T / K')
    for rhovec in soln['polished'][0:3]:
       rhovec = np.array(rhovec)
        rhotot = sum(rhovec)
        x = rhovec/rhotot
        p = rhotot*model.get_R(x)*T*(1+model.get_Ar01(T, rhotot, x))
        plt.plot(x[0], T, 'X')
        print(rhovec, T)
    # And also carry out the LLE trace for the two liquid phases
   opt = tegp.PVLEOptions()
    opt.integration_order = 5
   opt.init_dt = 1e-10
    # Or could be 1 depending on the initial integration direction, do not know the.
→direction
    # a priori because not starting at a pure fluid endpoint
    for init_dt in [-1]:
        opt.init c = init dt
        rhovecV, rhovecL1, rhovecL2, T = soln['polished']
        j = model.trace_VLE_isobar_binary(p, T, np.array(rhovecL1), np.
→array(rhovecL2), opt)
        df = pandas.DataFrame(j)
        plt.plot(df['xL_0 / mole frac.'], df['T / K'], 'k')
        plt.plot(df['xV_0 / mole frac.'], df['T / K'], 'k')
# Plotting niceties
plt.ylim(top=280, bottom=100)
plt.gca().set(xlabel='$x_1$ / mole frac.', ylabel='$T$ / K', title='nitrogen(1) +_
\rightarrowethane (2)')
plt.show()
rhovec / mol/m^3 | T / K
                9.6755684 ] 125.14729018874252
[4921.97976373
[ 6008.68040253 15630.22353351] 125.14729018874252
```

(continues on next page)



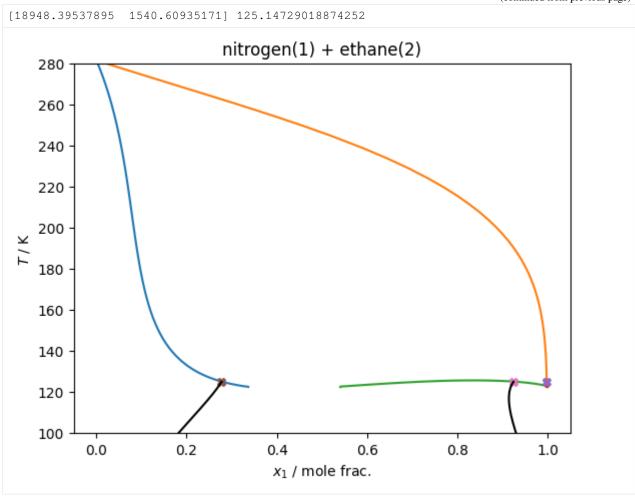

```
[1]: import scipy.interpolate
   import teqp
   teqp.__version__
[1]: '0.17.0'
```

5.5 Critical curves & points

5.5.1 Pure Fluids

Solving for the critical point involves finding the temperature and density that make

$$\left(\frac{\partial p}{\partial \rho}\right)_T = \left(\frac{\partial^2 p}{\partial \rho^2}\right)_T = 0$$

by 2D non-linear rootfinding. Newton steps are taken, and the analytic Jacobian is used (thanks to the ability to do derivatives with automatic differentiation). This is all handily wrapped up in the <code>solve_pure_critical</code> method which requires the user to provide guess values for temperature and density

```
[2]: # Values taken from http://dx.doi.org/10.6028/jres.121.011
modelPR = teqp.canonical_PR([190.564], [4599200], [0.011])

# Solve for the critical point from a point close to the critical point
T0 = 192.0
# Critical compressibility factor of P-R is 0.307401308698.. (see https://doi.org/10.
→1021/acs.iecr.1c00847)
rhoc = (4599200/(8.31446261815324*190.564))/0.3074
rho0 = rhoc*1.2345 # Perturb to make sure we are doing something in the solver
modelPR.solve_pure_critical(T0, rho0)

[2]: (190.564, 9442.816240022832)
```

If you have a mixture, but want to obtain the critical point of a pure fluid of this mixture, you can specify the index of the component in the mixture, as well as the number of components in the mixture with something like:

```
model.solve_pure_critical(T0, rho0, {"alternative_pure_index": 1,
"alternative_length": 2}) so here, for the second fluid, with 0-based index of 1, in a two-component
mixture
```

5.5.2 Mixtures

A pure fluid has a single vapor-liquid critical point, but mixtures are different:

- They may have multiple (or zero!) critical points for a given mixture composition
- The critical curves may not emanate from the pure fluid endpoints

When it comes to critical points, intuition from pure fluids is not helpful, or sometimes even counter-productive.

teqp has methods for working with the critical loci of binary mixtures (only binary mixtures, for now) and especially, methods for tracing the critical curves emanating from the pure fluid endpoints.

The tracing method in teqp is based explicitly on the isochoric thermodynamics formalism introduced by Ulrich Deiters and Sergio Quinones-Cisneros. It uses the Helmholtz energy density as the fundamental potential and all other properties are derived from it. For critical curves it is based upon the integration of sets of ordinary differential equations; the differential equations are in the form of derivatives of the molar concentrations of each component in the mixture with respect to an integration variable. The set of ODE is then integrated.


Here is an example of the construction of the critical curves emanating from the pure fluid endpoints for the mixture nitrogen + ethane.

```
import timeit
import numpy as np
import matplotlib.pyplot as plt
import pandas
import teqp

def get_critical_curve(ipure):
    """ Return curve as pandas DataFrame """
    names = ['Nitrogen', 'Ethane']
    model = teqp.build_multifluid_model(names, teqp.get_datapath())
    T0 = model.get_Tcvec()[ipure]
    rho0 = np.array([1.0/model.get_vcvec()[ipure]]*2)
    rho0[1-ipure] = 0
    o = teqp.TCABOptions()
    o.init_dt = 1.0 # step in the arclength tracing parameter
    o.rel_err = 1e-8
```

(continues on next page)

```
o.abs\_err = 1e-5
   o.integration_order = 5
   o.calc_stability = True
   o.polish = True
    curveJSON = model.trace_critical_arclength_binary(T0, rho0, '', o)
   df = pandas.DataFrame(curveJSON)
    rhotot = df['rho0 / mol/m^3']+df['rho1 / mol/m^3']
   df['z0 / mole frac.'] = df['rho0 / mol/m^3']/rhotot
   return df
fig, ax = plt.subplots(1, 1, figsize=(7, 6))
tic = timeit.default_timer()
for ipure in [1,0]:
   df = get_critical_curve(ipure)
   first_unstable = np.argmax(~df['locally stable'])
   df = df.iloc[0:(first_unstable if first_unstable else len(df))]
   line, = plt.plot(df['T / K'], df['p / Pa']/1e6, '.')
    # And interpolate to smooth out the curve using the arclength
    # parameter (which must be monotonically increasing) as
    # the interpolation variable
   tinterp = np.linspace(df['t'].min(), df['t'].max(), 10000)
   Tinterp = scipy.interpolate.interp1d(df['t'], df['T / K'], kind='cubic')(tinterp)
   pinterp = scipy.interpolate.interp1d(df['t'], df['p / Pa'], kind='cubic')(tinterp)
   plt.plot(Tinterp, pinterp/1e6, color=line.get_color())
   plt.plot(df['T / K'].iloc[0], df['p / Pa'].iloc[0]/1e6, 'd',
       color=line.get_color())
elap = timeit.default_timer()-tic
plt.gca().set(xlabel='$T$ / K', ylabel='$p$ / MPa',
    xlim=(100, 350), ylim=(1, 1e3))
plt.yscale('log')
plt.tight_layout(pad=0.2)
plt.gcf().text(0,0,f'time: {elap:0.1f} s', ha='left', va='bottom', fontsize=7)
plt.gcf().text(1,0,f'teqp: {teqp.__version__}}', ha='right', va='bottom', fontsize=7);
```

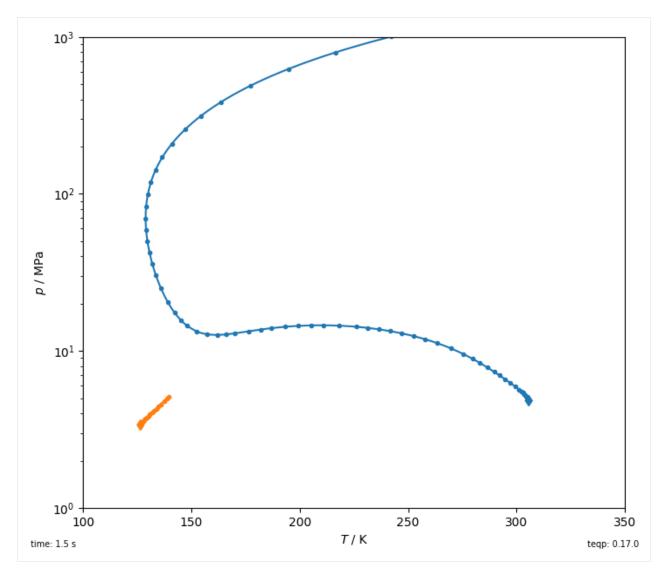


And now for something a bit more interesting: ethane + alkane critical curves

```
[4]: import timeit
    import numpy as np
    import matplotlib.pyplot as plt
    import pandas
    import teqp
    def get_critical_curve(names, ipure):
        """ Return curve as pandas DataFrame """
        model = teqp.build_multifluid_model(names, teqp.get_datapath())
        T0 = model.get_Tcvec()[ipure]
        rho0 = np.array([1.0/model.get_vcvec()[ipure]]*2)
        rho0[1-ipure] = 0
        o = teqp.TCABOptions()
          print(dir(o))
        o.init_dt = 1.0 # step in the parameter
        o.rel_err = 1e-6 # relative error on the step
        o.abs_err = 1e-6 # absolute error on the step
        o.max_dt = 100 # cap the size of the allowed step
```

(continues on next page)

```
o.calc_stability = True
   o.polish = True
   curveJSON = model.trace_critical_arclength_binary(T0, rho0, '', o)
   df = pandas.DataFrame(curveJSON)
    rhotot = df['rho0 / mol/m^3']+df['rho1 / mol/m^3']
    df['z0 / mole frac.'] = df['rho0 / mol/m^3']/rhotot
    return df
fig, ax = plt.subplots(1,1,figsize=(7, 6))
tic = timeit.default_timer()
name0 = 'ETHANE'
for othername in ['METHANE','PROPANE','BUTANE','PENTANE','HEXANE']:
    for ipure in [1]:
        df = get_critical_curve([name0, othername], ipure)
        line, = plt.plot(df['T / K'], df['p / Pa']/1e6, '-')
        plt.plot(df['T / K'].iloc[0], df['p / Pa'].iloc[0]/1e6, 'd',
            color=line.get_color())
elap = timeit.default_timer()-tic
plt.gca().set(xlabel='$T$ / K', ylabel='$p$ / MPa')#,xlim=(100, 350), ylim=(1, 1e3))
plt.tight_layout(pad=0.2)
plt.gcf().text(0,0,f'time: {elap:0.1f} s', ha='left', va='bottom', fontsize=7)
plt.gcf().text(1,0,f'teqp: {teqp.__version__}}', ha='right', va='bottom', fontsize=7);
```

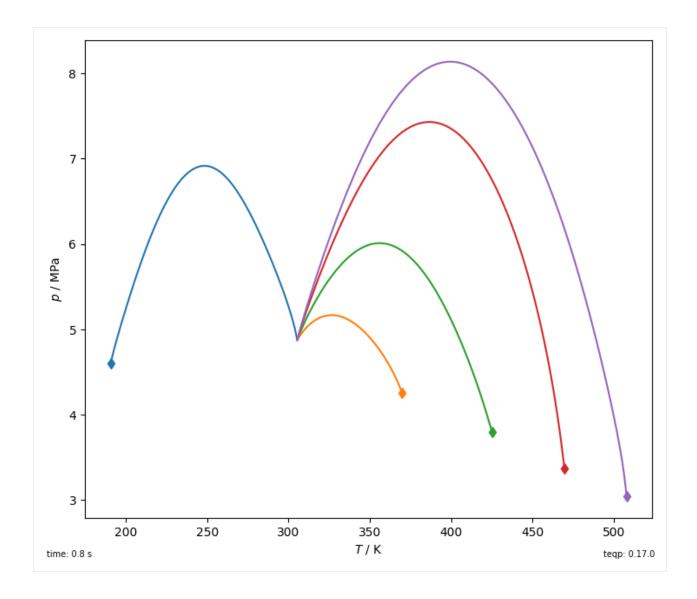

5.6 Information

The algorithms are written in a very generic way; they take an instance of a thermodynamic model, and the necessary derivatives are calculated from this model with automatic differentiation (or similar). In that way, implementing a model is all that is required to enable its use in the calculation of critical curves or to trace the phase equilibria. Determining the starting values, on the other hand, may require model-specific assistance, for instance with superancillary equations.

CHAPTER

SIX

EXAMPLES

6.1 The teqp paper in I&ECR


A few minor changes have been made:

- The get_splus method requires the molar concentrations to be a numpy array (to avoid copies) (as of version 0.14.0
- The top-level methods teqp.xxx have been deprecated, and the methods attached to the instance are preferred

```
[1]: import timeit, numpy as np
    import matplotlib.pyplot as plt
    plt.style.use('classic')
    import teqp
    def build_models():
        Tc_K, pc_Pa, acentric = 647.096, 22064000.0, 0.3442920843
        water = {
            "a0i / Pa m^6/mol^2": 0.12277 , "bi / m^3/mol": 0.000014515, "c1": 0.67359,
            "Tc / K": 647.096, "epsABi / J/mol": 16655.0, "betaABi": 0.0692, "class": "4C"
        j = {"cubic": "SRK", "pures": [water], "R_gas / J/mol/K": 8.3144598}
        datapath = teqp.get_datapath()
        def get_PCSAFT():
            c = teqp.SAFTCoeffs()
            # Values from https://doi.org/10.1016/j.fluid.2017.11.015,
            # but association contribution is ignored
            c.name = 'Water'
            c.m = 2.5472
            c.sigma_Angstrom = 2.1054
            c.epsilon_over_k = 138.63
            return teqp.PCSAFTEOS(coeffs=[c])
        return [
             ('vdW', teqp.vdWEOS([Tc_K], [pc_Pa])),
             ('PR', teqp.canonical_PR([Tc_K], [pc_Pa], [acentric])),
             ('SRK', teqp.canonical_SRK([Tc_K], [pc_Pa], [acentric])),
             ('PCSAFT', get_PCSAFT()),
             ('CPA', teqp.CPAfactory(j)),
             ('IAPWS', teqp.build_multifluid_model(["Water"], datapath))
        ]
```

(continues on next page)


```
fig, ax = plt.subplots(1,1,figsize=(7,6))
T = 700 \# K
rhovec = np.geomspace(0.1, 30e3, 10000) # mol/m^3; critical density is 17873.8... mol/
→m^3
tic = timeit.default_timer()
for abbrv, model in build_models():
    splus = np.array([model.get_splus(T, np.array([rho])) for rho in rhovec])
    plt.plot(rhovec, splus, label=abbrv, lw = 1.5 if abbrv=='IAPWS' else 1)
elap = timeit.default_timer()-tic
plt.axvline(17873.8, dashes=[2,2])
plt.legend(loc='best')
plt.gca().set(xlabel=r'\$\rho\$ / mol/m\$^3\$', ylabel=r'\$s^++equiv (s^{\{rm ig}(T,\rho)-rho))
\hookrightarrows(T,\rho))/R$')
plt.tight_layout(pad=0.2)
plt.gcf().text(0,0,f'time: {elap:0.1f} s', ha='left', va='bottom', fontsize=7)
plt.gcf().text(1,0,f'teqp: {teqp.__version__}', ha='right', va='bottom', fontsize=7)
plt.savefig('splus_water_700K.pdf')
plt.show()
```

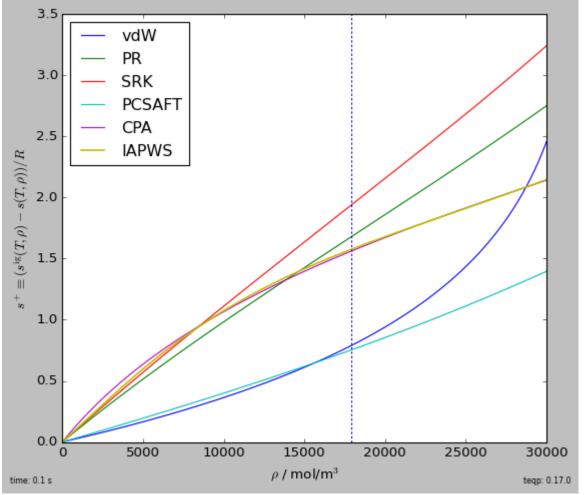

```
[2]: import json, timeit
import pandas, numpy as np, matplotlib.pyplot as plt
plt.style.use('classic')


(continues on next page)
```

```
import teqp
Tc_K = [190.564, 154.581]
pc_Pa = [4599200, 5042800]
acentric = [0.011, 0.022]
model = teqp.canonical_PR(Tc_K, pc_Pa, acentric)
fig, ax = plt.subplots(1,1,figsize=(7, 6), subplot_kw=dict(projection='3d'))
tic = timeit.default_timer()
for ifluid in [0,1]:
   model0 = teqp.canonical_PR([Tc_K[ifluid]], [pc_Pa[ifluid]], [acentric[ifluid]])
    for T in np.linspace(190, 120, 50):
        if T > Tc_K[ifluid]: continue
        [rhoL, rhoV] = model0.superanc_rhoLV(T)
        rhovecL = np.array([0.0, 0.0]); rhovecL[ifluid] = rhoL
        rhovecV = np.array([0.0, 0.0]); rhovecV[ifluid] = rhoV
        opt = teqp.TVLEOptions(); opt.calc_criticality = True
        df = pandas.DataFrame(model.trace_VLE_isotherm_binary(T, rhovecL, rhovecV,__
→opt))
        df['too_critical'] = df.apply(
            lambda row: (abs(row['crit. conditions L'][0]) < 5e-8), axis=1)</pre>
        first_too_critical = np.argmax(df['too_critical'])
        df = df.iloc[0:(first_too_critical if first_too_critical else len(df))]
        line, = ax.plot(xs=df['T / K'], ys=df['xL_0 / mole frac.'], zs=df['pL / Pa']/
→1e6,
            lw=0.2, color='k')
        ax.plot(xs=df['T / K'], ys=df['xV_0 / mole frac.'], zs=df['pL / Pa']/1e6,
            dashes=[2,2], color=line.get_color(), lw=0.2)
elap = timeit.default_timer()-tic
ax.view_init(elev=10., azim=130)
ax.set(xlabel='\$T\$ / K', ylabel='\$x_1\$ / mole frac.', zlabel='\$p\$ / MPa')
fig.text(0,0,f'time: {elap:0.1f} s', ha='left', va='bottom', fontsize=7)
fig.text(1,0,f'teqp: {teqp.__version__}}', ha='right', va='bottom', fontsize=7)
plt.tight_layout(pad=0.2)
plt.savefig('PR_VLE_trace.pdf')
plt.show()
```

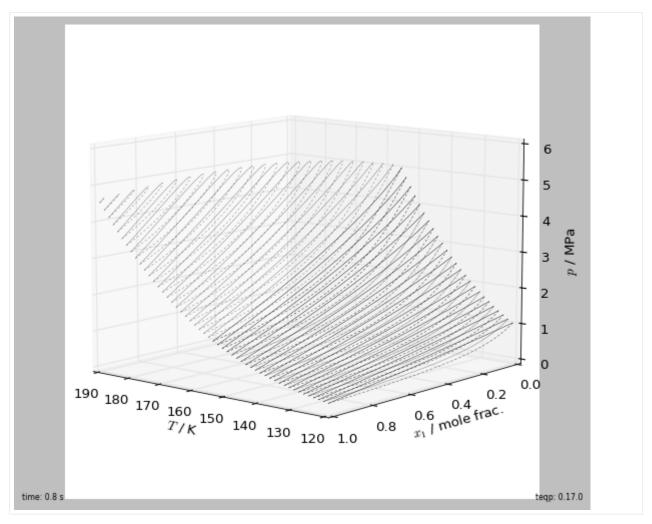

```
[3]: import timeit
    import numpy as np
    import matplotlib.pyplot as plt
    plt.style.use('classic')
    import pandas
    import teqp
    def get_critical_curve(ipure):
        """ Return curve as pandas DataFrame """
        names = ['Nitrogen', 'Ethane']
        model = teqp.build_multifluid_model(names, teqp.get_datapath())
        T0 = model.get_Tcvec()[ipure]
        rho0 = np.array([1.0/model.get_vcvec()[ipure]]*2)
        rho0[1-ipure] = 0
        o = teqp.TCABOptions()
        o.init_dt = 1.0 # step in the parameter
        o.rel\_err = 1e-8
        o.abs\_err = 1e-5
        o.integration_order = 5
        o.calc_stability = True
        o.polish = True
        curveJSON = model.trace_critical_arclength_binary(T0, rho0, '', o)
                                                                               (continues on next page)
```

```
df = pandas.DataFrame(curveJSON)
   rhotot = df['rho0 / mo1/m^3']+df['rho1 / mo1/m^3']
   df['z0 / mole frac.'] = df['rho0 / mol/m^3']/rhotot
    return df
if __name__ == '__main__':
    fig, ax = plt.subplots(1,1,figsize=(7, 6))
    tic = timeit.default_timer()
    for ipure in [1,0]:
        df = get_critical_curve(ipure)
        first_unstable = np.argmax(~df['locally stable'])
        df = df.iloc[0:(first_unstable if first_unstable else len(df))]
        line, = plt.plot(df['T / K'], df['p / Pa']/1e6, '-')
        plt.plot(df['T / K'].iloc[0], df['p / Pa'].iloc[0]/1e6, 'd',
            color=line.get_color())
   elap = timeit.default_timer()-tic
    plt.gca().set(xlabel='$T$ / K', ylabel='$p$ / MPa',
        xlim=(100, 350), ylim=(1, 1e3))
   plt.yscale('log')
   plt.tight_layout(pad=0.2)
    plt.gcf().text(0,0,f'time: {elap:0.1f} s', ha='left', va='bottom', fontsize=7)
   plt.gcf().text(1,0,f'teqp: {teqp.__version__}', ha='right', va='bottom',_
\rightarrowfontsize=7)
    plt.savefig('N2_ethane_critical.pdf')
    plt.show()
```

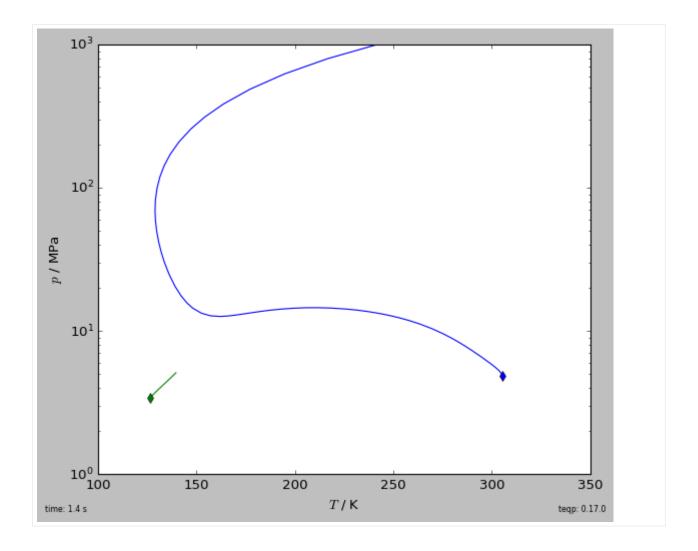

CHAPTER

SEVEN

TEQP

7.1 teqp package

7.1.1 Submodules

7.1.2 teqp.teqp module

```
TEQP: Templated Equation of State Package
class teap.teap.AbstractModel
      Bases: pybind11_object
      build_Psi_Hessian_autodiff(self: teqp.teqp.AbstractModel, T: float, rhovec:
                                             numpy.ndarray[numpy.float64[m, 1]]) \rightarrow
                                             numpy.ndarray[numpy.float64[m, n]]
      build Psir Hessian autodiff (self: teqp.teqp.AbstractModel, T: float, rhovec:
                                              numpy.ndarray[numpy.float64[m, 1]]) \rightarrow
                                              numpy.ndarray[numpy.float64[m, n]]
     build_Psir_gradient_autodiff(self: teqp.teqp.AbstractModel, T: float, rhovec:
                                                numpy.ndarray[numpy.float64[m, 1]]) \rightarrow
                                                numpy.ndarray[numpy.float64[m, 1]]
      build_d2PsirdTdrhoi_autodiff(self: teqp.teqp.AbstractModel, T: float, rhovec:
                                                numpy.ndarray[numpy.float64[m, 1]]) \rightarrow
                                                numpy.ndarray[numpy.float64[m, 1]]
      dpsatdT pure (self: teqp.teqp.AbstractModel, T: float, rhoL: float, rhoV: float) \rightarrow float
      eigen_problem (self: teqp.teqp.AbstractModel, T: float, rhovec: numpy.ndarray[numpy.float64[m, 1]],
                          alignment\_v0: numpy.ndarray[numpy.float64[m, 1]] \mid None = None) \rightarrow teqp::EigenData
      extrapolate from critical (self: teqp.teqp.AbstractModel, Tc: float, rhoc: float, T: float) \rightarrow
                                           numpy.ndarray[numpy.float64[2, 1]]
      find VLLE T binary (self: teqp.teqp.AbstractModel, traces: List[ison], options:
                                 teqp.teqp.VLLEFinderOptions | None = None) \rightarrow List[ison]
      find_VLLE_p_binary (self: teqp.teqp.AbstractModel, traces: List[json], options:
                                 teqp.teqp.VLLEFinderOptions | None = None) \rightarrow List[json]
```

- $\texttt{get_Ar00}$ (self: teqp.teqp.AbstractModel, T: float, rho: float, molefrac: numpy.ndarray[numpy.float64[m, 1]]) \rightarrow float
- **get_Ar00n** (*self*: teqp.teqp.AbstractModel, T: *float*, *rho*: *float*, *molefrac*: *numpy.ndarray*[*numpy*.*float64*[m, 1]]) \rightarrow numpy.ndarray[numpy.float64[m, 1]]
- $\texttt{get_Ar01}$ (self: teqp.teqp.AbstractModel, T: float, rho: float, molefrac: numpy.ndarray[numpy.float64[m, 1]]) \rightarrow float
- get_Ar01n (self: teqp.teqp.AbstractModel, T: float, rho: float, molefrac: numpy.ndarray[numpy.float64[m, 1]]) \rightarrow numpy.ndarray[numpy.float64[m, 1]]
- $\texttt{get_Ar02}$ (self: teqp.teqp.AbstractModel, T: float, rho: float, molefrac: numpy.ndarray[numpy.float64[m, 1]]) \rightarrow float
- get_Ar02n (self: teqp.teqp.AbstractModel, T: float, rho: float, molefrac: numpy.ndarray[numpy.float64[m, 1]]) → numpy.ndarray[numpy.float64[m, 1]]
- get_Ar03 (self: teqp.teqp.AbstractModel, T: float, rho: float, molefrac: numpy.ndarray[numpy.float64[m, 1]]) \rightarrow float
- $\label{eq:get_Ar03n} \textit{(self: teqp.teqp.AbstractModel, T: float, rho: float, molefrac: numpy.ndarray[numpy.float64[m, 1]])} \rightarrow \textit{numpy.ndarray[numpy.float64[m, 1]]}$
- get_Ar04 (self: teqp.teqp.AbstractModel, T: float, rho: float, molefrac: numpy.ndarray[numpy.float64[m, 1]]) \rightarrow float
- get_Ar04n (self: teqp.teqp.AbstractModel, T: float, rho: float, molefrac: numpy.ndarray[numpy.float64[m, 1]]) \rightarrow numpy.ndarray[numpy.float64[m, 1]]
- get_Ar05n (self: teqp.teqp.AbstractModel, T: float, rho: float, molefrac: numpy.ndarray[numpy.float64[m, 1]]) \rightarrow numpy.ndarray[numpy.float64[m, 1]]
- get_Ar06n (self: teqp.teqp.AbstractModel, T: float, rho: float, molefrac: numpy.ndarray[numpy.float64[m, 1]]) \rightarrow numpy.ndarray[numpy.float64[m, 1]]
- $\texttt{get_Ar10}$ (self: teqp.teqp.AbstractModel, T: float, rho: float, molefrac: numpy.ndarray[numpy.float64[m, 1]]) \rightarrow float
- get_Ar11 (self: teqp.teqp.AbstractModel, T: float, rho: float, molefrac: numpy.ndarray[numpy.float64[m, 1]]) \rightarrow float
- $\texttt{get_Ar12}$ (self: teqp.teqp.AbstractModel, T: float, rho: float, molefrac: numpy.ndarray[numpy.float64[m, 1]]) \rightarrow float
- $\texttt{get_Ar13}$ (self: teqp.teqp.AbstractModel, T: float, rho: float, molefrac: numpy.ndarray[numpy.float64[m, 1]]) \rightarrow float
- $\texttt{get_Ar14}$ (self: teqp.teqp.AbstractModel, T: float, rho: float, molefrac: numpy.ndarray[numpy.float64[m, 1]]) \rightarrow float
- $\label{eq:get_Ar20} \ensuremath{\textit{get_Ar20}} (\textit{self:} \ensuremath{\textit{teqp.teqp.AbstractModel}}, \textit{T: float, rho: float, molefrac: numpy.ndarray[numpy.float64[m, 1]])} \rightarrow \ensuremath{\textit{float}}$
- $\label{eq:get_Ar21} \textbf{(self: teqp.teqp.AbstractModel, T: float, r ho: float, molefrac: numpy.ndarray[numpy.float64[m, 1]]) \rightarrow float}$

Chapter 7. teqp

```
get_Ar22 (self: teqp.teqp.AbstractModel, T: float, rho: float, molefrac: numpy.ndarray[numpy.float64[m,
              111) \rightarrow float
get_Ar23 (self: teqp.teqp.AbstractModel, T: float, rho: float, molefrac: numpy.ndarray[numpy.float64[m,
              111) \rightarrow float
get_Ar24 (self: teqp.teqp.AbstractModel, T: float, rho: float, molefrac: numpy.ndarray[numpy.float64[m,
              111) \rightarrow float
get_Arxy (self: teqp.teqp.AbstractModel, NT: int, ND: int, T: float, rho: float, molefrac:
             numpy.ndarray[numpy.float64[m, 1]]) \rightarrow float
\mathtt{get\_B12vir} (self: teqp.teqp.AbstractModel, T: float, molefrac: numpy.ndarray[numpy.float64[m, 1]]) \rightarrow
get_B2vir (self: tegp.tegp.AbstractModel, T: float, molefrac: numpy.ndarray[numpy.float64[m, 1]]) \rightarrow float
get Bnvir (self: tegp.tegp.AbstractModel, Nderiv: int, T: float, molefrac: numpy.ndarray[numpy.float64]m,
               1/1) \rightarrow Dict[int, float]
\mathtt{get}_{\mathtt{R}} (self: teqp.teqp.AbstractModel, molefrac: numpy.ndarray[numpy.float64[m, 1]]) \rightarrow float
get_chempotVLE_autodiff(self: teqp.teqp.AbstractModel, T: float, rhovec:
                                    numpy.ndarray[numpy.float64[m, 1]]) \rightarrow
                                    numpy.ndarray[numpy.float64[m, 1]]
get_criticality_conditions (self: teqp.teqp.AbstractModel, T: float, rhovec:
                                         numpy.ndarray[numpy.float64[m, 1]]) \rightarrow
                                         numpy.ndarray[numpy.float64[2, 1]]
get_dchempotdT_autodiff (self: teqp.teqp.AbstractModel, T: float, rhovec:
                                    numpy.ndarray[numpy.float64[m, 1]]) \rightarrow
                                    numpy.ndarray[numpy.float64[m, 1]]
get_deriv_mat2 (self: teqp.teqp.AbstractModel, T: float, rho: float, molefrac:
                      numpy.ndarray[numpy.float64[m, 1]]) \rightarrow numpy.ndarray[numpy.float64[3, 3]]
get_dmBnvirdTm (self: teqp.teqp.AbstractModel, Nderiv: int, NTderiv: int, T: float, molefrac:
                      numpy.ndarray[numpy.float64[m, 1]]) \rightarrow float
\texttt{get\_dp\_dT\_crit} (self: teqp.teqp.AbstractModel, T: float, rhovec: numpy.ndarray[numpy.float64[m, 1]]) \rightarrow
                       float
get_dpsat_dTsat_isopleth (self: teqp.teqp.AbstractModel, T: float, rhovecL:
                                      numpy.ndarray[numpy.float64[m, 1]], rhovecV:
                                      numpy.ndarray[numpy.float64[m, 1]]) \rightarrow float
get drhovec dT crit (self: tegp.tegp.AbstractModel, T: float, rhovec: numpy.ndarray[numpy.float64[m,
                              1]]) \rightarrow numpy.ndarray[numpy.float64[m, 1]]
get_drhovecdT_psat (self: teqp.teqp.AbstractModel, T: float, rhovecL: numpy.ndarray[numpy.float64[m,
                             1]], rhovecV: numpy.ndarray[numpy.float64[m, 1]]) \rightarrow
                            Tuple[numpy.ndarray[numpy.float64[m, 1]], numpy.ndarray[numpy.float64[m, 1]]]
get_drhovecdp_Tsat (self: teqp.teqp.AbstractModel, T: float, rhovecL: numpy.ndarray[numpy.float64[m,
                             1]], rhovecV: numpy.ndarray[numpy.float64[m, 1]]) \rightarrow
                            Tuple[numpy.ndarray[numpy.float64[m, 1]], numpy.ndarray[numpy.float64[m, 1]]]
```

```
get_fugacity_coefficients (self: teqp.teqp.AbstractModel, T: float, rhovec:
                                      numpy.ndarray[numpy.float64[m, 1]]) \rightarrow
                                      numpy.ndarray[numpy.float64[m, 1]]
get_minimum_eigenvalue_Psi_Hessian (self: teqp.teqp.AbstractModel, T: float, rhovec:
                                                   numpy.ndarray[numpy.float64[m, 1]]) \rightarrow float
get_neff(self: teqp.teqp.AbstractModel, T: float, rho: float, molefrac: numpy.ndarray[numpy.float64[m,
             1]]) \rightarrow float
get_partial_molar_volumes (self: teqp.teqp.AbstractModel, T: float, rhovec:
                                      numpy.ndarray[numpy.float64[m, 1]]) \rightarrow
                                      numpy.ndarray[numpy.float64[m, 1]]
\mathtt{get\_pr} (self: teqp.teqp.AbstractModel, T: float, rhovec: numpy.ndarray[numpy.float64[m, 1]]) \rightarrow float
get_pure_critical_conditions_Jacobian (self: teqp.teqp.AbstractModel, T: float, rho: float,
                                                        alternative_pure_index: int | None = None,
                                                        alternative\_length: int \mid None = None) \rightarrow
                                                        Tuple[numpy.ndarray[numpy.float64[m, 1]],
                                                        numpy.ndarray[numpy.float64[m, n]]]
get splus (self: tegp.tegp.AbstractModel, T: float, rhovec: numpy.ndarray[numpy, float64[m, 1]]) \rightarrow float
mix_VLE_Tp (self: teqp.teqp.AbstractModel, T: float, p_given: float, rhovecL0:
                numpy.ndarray[numpy.float64[m, 1]], rhovecV0: numpy.ndarray[numpy.float64[m, 1]],
                options: teqp.teqp.MixVLETpFlags | None = None) \rightarrow teqp.teqp.MixVLEReturn
mix VLE Tx (self: teqp.teqp.AbstractModel, T: float, rhovecL0: numpy.ndarray[numpy.float64[m, 1]],
                rhovecV0: numpy.ndarray[numpy.float64[m, 1]], xspec: numpy.ndarray[numpy.float64[m, 1]],
                atol: float, reltol: float, axtol: float, relxtol: float, maxiter: int) \rightarrow
                Tuple[teqp.teqp.VLE_return_code, numpy.ndarray[numpy.float64[m, 1]],
                numpy.ndarray[numpy.float64[m, 1]]]
mix VLLE_T (self: teqp.teqp.AbstractModel, T: float, rhovecVinit: numpy.ndarray[numpy.float64[m, 1]],
                rhovecL1init: numpy.ndarray[numpy.float64[m, 1]], rhovecL2init:
                numpy.ndarray[numpy.float64[m, 1]], atol: float, reltol: float, axtol: float, relxtol: float, maxiter:
                int) → Tuple[teqp::VLLE::VLLE return code, numpy.ndarray[numpy.float64[m, 1]],
                numpy.ndarray[numpy.float64[m, 1]], numpy.ndarray[numpy.float64[m, 1]]]
mixture_VLE_px (self: teqp.teqp.AbstractModel, p_spec: float, xmolar_spec:
                      numpy.ndarray[numpy.float64[m, 1]], T0: float, rhovecL0:
                      numpy.ndarray[numpy.float64[m, 1]], rhovecV0: numpy.ndarray[numpy.float64[m, 1]],
                      options: teqp.teqp.MixVLEpxFlags | None = None) \rightarrow Tuple[teqp.teqp.VLE_return_code,
                      float, numpy.ndarray[numpy.float64[m, 1]], numpy.ndarray[numpy.float64[m, 1]]]
pure_VLE_T (self: teqp.teqp.AbstractModel, T: float, rhoL: float, rhoV: float, max_iter: int) →
                numpy.ndarray[numpy.float64[2, 1]]
solve\_pure\_critical (self: teqp.teqp.AbstractModel, T: float, rho: float, flags: json | None = None) \rightarrow
                             Tuple[float, float]
trace_VLE_isobar_binary (self: teqp.teqp.AbstractModel, p: float, T0: float, rhovecL0:
                                   numpy.ndarray[numpy.float64[m, 1]], rhovecV0:
                                   numpy.ndarray[numpy.float64[m, 1]], options: teqp.teqp.PVLEOptions |
                                   None = None \rightarrow json
```

```
trace_VLE_isotherm_binary (self: teqp.teqp.AbstractModel, T: float, rhovecL0:
                                     numpy.ndarray[numpy.float64[m, 1]], rhovecV0:
                                     numpy.ndarray[numpy.float64[m, 1]], options: teqp.teqp.TVLEOptions |
                                     None = None \rightarrow json
     trace_VLLE_binary(self: teqp.teqp.AbstractModel, T: float, rhovecV: numpy.ndarray[numpy.float64[m,
                           1]], rhovecL1: numpy.ndarray[numpy.float64[m, 1]], rhovecL2:
                           numpy.ndarray[numpy.float64[m, 1]], options: teqp.teqp.VLLETracerOptions | None
                           = None) \rightarrow json
     trace_critical_arclength_binary (self: teqp.teqp.AbstractModel, T0: float, rhovec0:
                                             numpy.ndarray[numpy.float64[m, 1]], path: str | None = None,
                                             options: teqp.teqp.TCABOptions | None = None) \rightarrow json
class teqp.teqp.IterationMatrices
     Bases: pybind11_object
     property J
     property v
     property vars
class teqp.teqp.MixVLEReturn
     Bases: pybind11_object
     property T
     property initial_r
     property message
     property num_fev
     property num_iter
     property r
     property return_code
     property rhovecL
     property rhovecV
     property success
class teqp.teqp.MixVLETpFlags
     Bases: pybind11_object
     property atol
     property axtol
     property maxiter
     property reltol
     property relxtol
```

```
class teap.teap.MixVLEpxFlags
     Bases: pybind11_object
     property atol
     property axtol
     property maxiter
     property reltol
     property relxtol
class teap.teap.MultiFluidVLEAncillaries
     Bases: pybind11_object
     property pL
     property pV
     property rhoL
     property rhoV
class teqp.teqp.NRIterator
     Bases: pybind11_object
     get_T (self: teqp.teqp.NRIterator) \rightarrow float
     \texttt{get\_molefrac} (self: teqp.teqp.NRIterator) \rightarrow numpy.ndarray[numpy.float64[m, 1]]
     get_rho (self: teqp.teqp.NRIterator) \rightarrow float
     \texttt{get\_vals} (self: teqp.teqp.NRIterator) \rightarrow numpy.ndarray[numpy.float64[m, 1]]
     get_vars (self: teqp.teqp.NRIterator) → List[str]
     take\_step (self: teqp.teqp.NRIterator) \rightarrow numpy.ndarray[numpy.float64[m, 1]]
     take_steps (self: teqp.teqp.NRIterator, arg0: int) \rightarrow None
class teqp.teqp.PVLEOptions
     Bases: pybind11_object
     property abs_err
     property calc_criticality
     property init_c
     property init_dt
     property integration_order
     property max_dt
     property max_steps
     property polish
```

```
property rel_err
    property terminate_unstable
class teqp.teqp.SAFTCoeffs
    Bases: pybind11_object
    property BibTeXKey
    property Qstar2
    property epsilon_over_k
    property m
    property mustar2
    property nQ
    property name
    property nmu
    property sigma_Angstrom
class teqp.teqp.TCABOptions
    Bases: pybind11_object
    property T_tol
    property abs_err
    property calc_stability
    property init_c
    property init_dt
    property integration_order
    property max_dt
    property max_step_count
    property polish
    property polish_exception_on_fail
    property polish_reltol_T
    property polish_reltol_rho
    property pure_endpoint_polish
    property rel_err
    property skip_dircheck_count
    property small_T_count
    property stability_rel_drho
```

```
property verbosity
class teqp.teqp.TVLEOptions
    Bases: pybind11_object
    property abs_err
    property calc_criticality
    property crit_termination
    property init_c
    property init_dt
    property integration_order
    property max_dt
    property max_steps
    property p_termination
    property polish
    property rel_err
    property terminate_unstable
class teqp.teqp.VLEAncillary
    Bases: pybind11_object
    property T_r
    property Tmax
    property Tmin
class teqp.teqp.VLE_return_code
    Bases: pybind11_object
    Members:
    unset
    xtol_satisfied
    functol_satisfied
    maxiter_met
    maxfev_met
    notfinite_step
    functol_satisfied = <VLE_return_code.functol_satisfied: 2>
    maxfev_met = <VLE_return_code.maxfev_met: 3>
    maxiter_met = <VLE_return_code.maxiter_met: 4>
    property name
```

```
notfinite_step = <VLE_return_code.notfinite_step: 5>
     unset = <VLE_return_code.unset: 0>
     property value
     xtol_satisfied = <VLE_return_code.xtol_satisfied: 1>
class teqp.teqp.VLLEFinderOptions
     Bases: pybind11_object
     property max_steps
     property rho_trivial_threshold
class teqp.teqp.VLLETracerOptions
     Bases: pybind11_object
     property T_limit
    property abs_err
    property init_dT
    property max_dT
     property max_polish_steps
     property max_step_count
     property polish
     property rel_err
     property terminate_composition
     property terminate_composition_tol
    property verbosity
\texttt{teqp.teqp.attach\_model\_specific\_methods} (\textit{arg0: object}) \rightarrow None
teqp.teqp.build_alias_map(root: str) \rightarrow Dict[str, str]
teqp.teqp.collect_component_json(identifiers: List[str], root: str) \rightarrow List[json]
teqp.teqp.convert_CoolProp_idealgas (arg0: str, arg1: int) \rightarrow json
teqp.teqp.get_BIPdep (BIPcollection: json, identifiers: List[str], flags: json = None) \rightarrow Tuple[json, bool]
teqp.teqp.get_departure_json(name: str, root: str) \rightarrow json
```

7.1.3 Module contents

```
teqp.AmmoniaWaterTillnerRoth()
teqp.CPAfactory(spec)
teqp.IdealHelmholtz(model)
teqp.PCSAFTEOS (coeffs, kmat=None)
teqp.build_LJ126_TholJPCRD2016()
teqp.build_Psi_Hessian_autodiff(model, *args, **kwargs)
teqp.build_Psir_Hessian_autodiff(model, *args, **kwargs)
teqp.build_Psir_gradient_autodiff(model, *args, **kwargs)
teqp.build_d2PsirdTdrhoi_autodiff(model, *args, **kwargs)
tegp.build_multifluid_model (components, coolprop_root, BIPcollectionpath=", flags={}, departurepath=")
teqp.build_multifluid_mutant(*args, **kwargs)
teqp.canonical_PR(Tc_K, pc_Pa, acentric, kmat=None)
teqp.canonical_SRK(Tc_K, pc_Pa, acentric, kmat=None)
teqp.deprecated_caller(model, *args, **kwargs)
teap.eigen problem (model, *args, **kwargs)
teqp.extrapolate_from_critical(model, *args, **kwargs)
teqp.find_VLLE_T_binary (model, *args, **kwargs)
teqp.get_B2virget_B12vir (model, *args, **kwargs)
teqp.get_chempotVLE_autodiff(model, *args, **kwargs)
teqp.get_criticality_conditions (model, *args, **kwargs)
teqp.get_datapath()
    Get the absolute path to the folder containing the root of multi-fluid data
teqp.get_dchempotdT_autodiff(model, *args, **kwargs)
teqp.get_dpsat_dTsat_isopleth(model, *args, **kwargs)
teqp.get_drhovec_dT_crit (model, *args, **kwargs)
teqp.get_drhovecdT_psat (model, *args, **kwargs)
teqp.get_drhovecdp_Tsat (model, *args, **kwargs)
teqp.get_fugacity_coefficients (model, *args, **kwargs)
teqp.get_minimum_eigenvalue_Psi_Hessian (model, *args, **kwargs)
teqp.get_partial_molar_volumes (model, *args, **kwargs)
```

```
teqp.get_pr (model, *args, **kwargs)
teqp.get_pure_critical_conditions_Jacobian (model, *args, **kwargs)
teqp.get_splus (model, *args, **kwargs)
teqp.make_model(*args, **kwargs)
     This function is in two parts; first the make_model function (renamed to _make_model in the Python interface) is
     used to make the model and then the model-specific methods are attached to the instance
teqp.make_vdW1 (a, b)
teqp.mix_VLE_Tx (model, *args, **kwargs)
teqp.mix_VLLE_T (model, *args, **kwargs)
teqp.mixture_VLE_px (model, *args, **kwargs)
teqp.pure_VLE_T (model, *args, **kwargs)
teqp.solve_pure_critical(model, *args, **kwargs)
teqp.tolist(a)
teqp.trace_VLE_isobar_binary (model, *args, **kwargs)
teqp.trace_VLE_isotherm_binary(model, *args, **kwargs)
teqp.trace_critical_arclength_binary (model, *args, **kwargs)
teqp.vdWEOS(Tc_K, pc_Pa)
teqp.vdWEOS1(*args)
```

CHAPTER

EIGHT

INDICES AND TABLES

- genindex
- modindex
- search

PYTHON MODULE INDEX

teqp,76 teqp.teqp,67

82 Python Module Index

INDEX

A	calc_criticality (teqp.teqp.TVLEOptions prop-
abs_err (teqp.teqp.PVLEOptions property), 72 abs_err (teqp.teqp.TCABOptions property), 73 abs_err (teqp.teqp.TVLEOptions property), 74 abs_err (teqp.teqp.VLLETracerOptions property), 75 AbstractModel (class in teqp.teqp), 67 AmmoniaWaterTillnerRoth() (in module teqp), 76 atol (teqp.teqp.MixVLEpxFlags property), 72 atol (teqp.teqp.MixVLETpFlags property), 71 attach_model_specific_methods() (in module teqp.teqp), 75 axtol (teqp.teqp.MixVLEpxFlags property), 72 axtol (teqp.teqp.MixVLEpxFlags property), 72	<pre>erty), 74 calc_stability (teqp.teqp.TCABOptions property),</pre>
В	D
BibTeXKey (teqp.teqp.SAFTCoeffs property), 73 build_alias_map() (in module teqp.teqp), 75 build_d2PsirdTdrhoi_autodiff() (in module	<pre>deprecated_caller() (in module teqp), 76 dpsatdT_pure() (teqp.teqp.AbstractModel method), 67</pre>
teqp), 76 build_d2PsirdTdrhoi_autodiff()	eigen_problem() (in module teqp), 76 eigen_problem() (teqp.teqp.AbstractModel method), 67 epsilon_over_k (teqp.teqp.SAFTCoeffs property), 73 extrapolate_from_critical() (in module teqp), 76 extrapolate_from_critical() (teqp.teqp.AbstractModel method), 67
build_Psi_Hessian_autodiff()	F
(teqp.teqp.AbstractModel method), 67 build_Psir_gradient_autodiff() (in module teqp), 76 build_Psir_gradient_autodiff() (teqp.teqp.AbstractModel method), 67 build_Psir_Hessian_autodiff() (in module teqp), 76 build_Psir_Hessian_autodiff() (teqp.teqp.AbstractModel method), 67	find_VLLE_p_binary() (teqp.teqp.AbstractModel method), 67 find_VLLE_T_binary() (in module teqp), 76 find_VLLE_T_binary() (teqp.teqp.AbstractModel method), 67 functol_satisfied (teqp.teqp.VLE_return_code attribute), 74 G get_Ar00() (teqp.teqp.AbstractModel method), 67
calc_criticality(teqp.teqp.PVLEOptions property), 72	get_Ar00n() (teqp.teqp.AbstractModel method), 68 get_Ar01() (teqp.teqp.AbstractModel method), 68 get_Ar01n() (teqp.teqp.AbstractModel method), 68

get_Ar02() (teqp.teqp.AbstractModel method), 68	<pre>get_drhovecdT_psat() (teqp.teqp.AbstractModel</pre>
get_Ar02n() (teqp.teqp.AbstractModel method), 68	method), 69
get_Ar03() (teqp.teqp.AbstractModel method), 68	<pre>get_fugacity_coefficients() (in module teqp),</pre>
get_Ar03n() (teqp.teqp.AbstractModel method), 68	76
get_Ar04() (teqp.teqp.AbstractModel method), 68	<pre>get_fugacity_coefficients()</pre>
get_Ar04n() (teqp.teqp.AbstractModel method), 68	(teqp.teqp.AbstractModel method), 69
get_Ar05n() (teqp.teqp.AbstractModel method), 68	<pre>get_minimum_eigenvalue_Psi_Hessian() (in</pre>
get_Ar06n() (teqp.teqp.AbstractModel method), 68	module teqp), 76
get_Ar10() (teqp.teqp.AbstractModel method), 68	<pre>get_minimum_eigenvalue_Psi_Hessian()</pre>
get_Ar11() (teqp.teqp.AbstractModel method), 68	(teqp.teqp.AbstractModel method), 70
get_Ar12() (teqp.teqp.AbstractModel method), 68	<pre>get_molefrac() (teqp.teqp.NRIterator method), 72</pre>
get_Ar13() (teqp.teqp.AbstractModel method), 68	<pre>get_neff() (teap.teap.AbstractModel method), 70</pre>
get_Ar14() (teqp.teqp.AbstractModel method), 68	<pre>get_partial_molar_volumes() (in module teqp),</pre>
get_Ar20() (teqp.teqp.AbstractModel method), 68	76
get_Ar21() (teqp.teqp.AbstractModel method), 68	<pre>get_partial_molar_volumes()</pre>
get_Ar22() (teqp.teqp.AbstractModel method), 68	(teqp.teqp.AbstractModel method), 70
get_Ar23() (teqp.teqp.AbstractModel method), 69	get_pr() (in module teqp), 76
get_Ar24() (teqp.teqp.AbstractModel method), 69	get_pr() (teqp.teqp.AbstractModel method), 70
get_Arxy() (teqp.teqp.AbstractModel method), 69	<pre>get_pure_critical_conditions_Jacobian()</pre>
get_B2vir() (teqp.teqp.AbstractModel method), 69	(in module teqp), 77
get_B2virget_B12vir() (in module teqp),76	<pre>get_pure_critical_conditions_Jacobian()</pre>
<pre>get_B12vir() (teqp.teqp.AbstractModel method), 69</pre>	(teqp.teqp.AbstractModel method), 70
get_BIPdep() (in module teqp.teqp), 75	<pre>get_R() (teap.teap.AbstractModel method), 69</pre>
<pre>get_Bnvir() (teqp.teqp.AbstractModel method), 69</pre>	get_rho() (teqp.teqp.NRIterator method), 72
<pre>get_chempotVLE_autodiff() (in module teqp), 76</pre>	<pre>get_splus() (in module teqp), 77</pre>
<pre>get_chempotVLE_autodiff()</pre>	get_splus() (teqp.teqp.AbstractModel method), 70
(teqp.teqp.AbstractModel method), 69	get_T() (teap.teap.NRIterator method), 72
<pre>get_criticality_conditions() (in module</pre>	get_vals() (teqp.teqp.NRIterator method), 72
teqp), 76	<pre>get_vars() (teqp.teqp.NRIterator method), 72</pre>
<pre>get_criticality_conditions()</pre>	1
(teqp.teqp.AbstractModel method), 69	
get_datapath() (in module teqp), 76	IdealHelmholtz() (in module teqp), 76
get_dchempotdT_autodiff() (in module teqp), 76	<pre>init_c (teap.teap.PVLEOptions property), 72</pre>
<pre>get_dchempotdT_autodiff()</pre>	init_c (teap.teap.TCABOptions property), 73
(teqp.teqp.AbstractModel method), 69	init_c (teap.teap.TVLEOptions property), 74
get_departure_json() (in module teqp.teqp), 75	init_dt (teqp.teqp.PVLEOptions property), 72
get_deriv_mat2() (teqp.teqp.AbstractModel	init_dt (teqp.teqp.TCABOptions property), 73
method), 69	init_dt (teqp.teqp.TVLEOptions property), 74
get_dmBnvirdTm() (teqp.teqp.AbstractModel	init_dT (teap.teap.VLLETracerOptions property), 75
<pre>method), 69 get_dp_dT_crit() (teqp.teqp.AbstractModel</pre>	initial_r (teqp.teqp.MixVLEReturn property), 71
method), 69	<pre>integration_order (teap.teap.PVLEOptions prop- erty), 72</pre>
<pre>get_dpsat_dTsat_isopleth() (in module teqp), 76</pre>	<pre>integration_order (teap.teap.TCABOptions prop- erty), 73</pre>
<pre>get_dpsat_dTsat_isopleth()</pre>	integration_order (teap.teap.TVLEOptions prop-
(teqp.teqp.AbstractModel method), 69	erty), 74
<pre>get_drhovec_dT_crit() (in module teqp), 76</pre>	IterationMatrices (class in teqp.teqp), 71
<pre>get_drhovec_dT_crit() (teqp.teqp.AbstractModel</pre>	1
method), 69	J
<pre>get_drhovecdp_Tsat() (in module teqp), 76 get_drhovecdp_Tsat() (teqp.teqp.AbstractModel</pre>	J (teap.teap.IterationMatrices property), 71
<pre>get_drhovecdp_Tsat() (teqp.teqp.AbstractModel</pre>	M
<pre>get_drhovecdT_psat() (in module teqp), 76</pre>	
	m (teqp.teqp.SAFTCoeffs property), 73

84 Index

make_vdW1() (in module teqp), 77	polish (teqp.teqp.TVLEOptions property), 74
<pre>max_dt (teqp.teqp.PVLEOptions property), 72</pre>	polish (teqp.teqp.VLLETracerOptions property), 75
<pre>max_dt (teqp.teqp.TCABOptions property), 73</pre>	polish_exception_on_fail
<pre>max_dt (teqp.teqp.TVLEOptions property), 74</pre>	(teqp.teqp.TCABOptions property), 73
max_dT (teqp.teqp.VLLETracerOptions property), 75	polish_reltol_rho (teqp.teqp.TCABOptions prop-
<pre>max_polish_steps (teqp.teqp.VLLETracerOptions</pre>	erty), 73
property), 75	<pre>polish_reltol_T (teap.teap.TCABOptions property),</pre>
<pre>max_step_count (teap.teap.TCABOptions property),</pre>	73
73	<pre>pure_endpoint_polish (teap.teap.TCABOptions</pre>
<pre>max_step_count (teap.teap.VLLETracerOptions prop-</pre>	property), 73
erty), 75	pure_VLE_T () (in module teqp), 77
max_steps (teap.teap.PVLEOptions property), 72	pure_VLE_T() (teqp.teqp.AbstractModel method), 70
max_steps (teap.teap.TVLEOptions property), 74	pV (teap.teap.MultiFluidVLEAncillaries property), 72
max_steps (teap.teap.VLLEFinderOptions property), 75	PVLEOptions (class in teap.teap), 72
maxfev_met (teqp.teqp.VLE_return_code attribute), 74	
maxiter (teqp.teqp.MixVLEpxFlags property), 72	Q
maxiter (teqp.teqp.MixVLETpFlags property), 71	
<pre>maxiter_met (teqp.teqp.VLE_return_code attribute), 74</pre>	Qstar2 (teqp.teqp.SAFTCoeffs property), 73
message (teap.teap.MixVLEReturn property), 71	R
mix_VLE_Tp() (teqp.teqp.AbstractModel method), 70	r (teqp.teqp.MixVLEReturn property), 71
mix_VLE_Tx() (in module teqp), 77	rel_err (teap.teap.PVLEOptions property), 72
mix_VLE_Tx() (teqp.teqp.AbstractModel method), 70	rel_err (teap.teap.TCABOptions property), 73
mix_VLLE_T() (in module teqp), 77	rel_err (teap.teap.TVLEOptions property), 74
mix_VLLE_T() (teqp.teqp.AbstractModel method), 70	rel_err (teap.teap.VLLETracerOptions property), 75
mixture_VLE_px() (in module teqp), 77	reltol (teap.teap.MixVLEpxFlags property), 72
<pre>mixture_VLE_px() (teqp.teqp.AbstractModel</pre>	reltol (teqp.teqp.MixVLETpFlags property), 71
method), 70	relxtol (teqp.teqp.MixVLEpxFlags property), 72
MixVLEpxFlags (class in teqp.teqp), 71	relxtol (teap.teap.MixVLETpFlags property), 71
MixVLEReturn (class in teap.teap), 71	return_code (teap.teap.MixVLEReturn property), 71
MixVLETpFlags (class in teqp.teqp), 71	rho_trivial_threshold
module	
teqp, 76	(teap.teap.VLLEFinderOptions property), 75
teqp.teqp,67	rhoL (teqp.teqp.MultiFluidVLEAncillaries property), 72
MultiFluidVLEAncillaries (class in teap.teap),	rhoV (teap.teap.MultiFluidVLEAncillaries property), 72
72	rhovecL (teap.teap.MixVLEReturn property), 71
mustar2 (teap.teap.SAFTCoeffs property), 73	rhovecV (teqp.teqp.MixVLEReturn property), 71
	S
N	
name (teap.teap.SAFTCoeffs property), 73	SAFTCoeffs (class in teap.teap), 73
name (teqp.teqp.VLE_return_code property), 74	sigma_Angstrom(teqp.teqp.SAFTCoeffs property), 73
nmu (teqp.teqp.SAFTCoeffs property), 73	skip_dircheck_count (teqp.teqp.TCABOptions
notfinite_step (teap.teap.VLE_return_code at-	property), 73
tribute), 74	<pre>small_T_count (teap.teap.TCABOptions property), 73</pre>
nQ (teap.teap.SAFTCoeffs property), 73	solve_pure_critical() (in module teqp),77
NRIterator (class in teap.teap), 72	<pre>solve_pure_critical() (teqp.teqp.AbstractModel</pre>
	method), 70
num_fev (teap.teap.MixVLEReturn property), 71	stability_rel_drho (teqp.teqp.TCABOptions prop-
num_iter(teqp.teqp.MixVLEReturn property), 71	erty), 73
P	success (teap.teap.MixVLEReturn property), 71
p_termination(teqp.teqp.TVLEOptions property), 74	Т
PCSAFTEOS () (in module teqp), 76	•
pL (teap.teap.MultiFluidVLEAncillaries property), 72	T (teqp.teqp.MixVLEReturn property), 71
polish (teap.teap.PVLEOptions property), 72	T_limit (teap.teap.VLLETracerOptions property), 75
polish (teap.teap.TCABOptions property), 73	T_r (teqp.teqp.VLEAncillary property), 74
1	

Index 85

```
T_tol (teap.teap.TCABOptions property), 73
take_step() (teqp.teqp.NRIterator method), 72
take_steps() (teqp.teqp.NRIterator method), 72
TCABOptions (class in teap.teap), 73
teap
    module, 76
teqp.teqp
    module, 67
terminate_composition
        (teap.teap.VLLETracerOptions property), 75
terminate_composition_tol
         (teap.teap.VLLETracerOptions property), 75
terminate_unstable (teap.teap.PVLEOptions prop-
        erty), 73
terminate_unstable (teap.teap.TVLEOptions prop-
        erty), 74
Tmax (teap.teap.VLEAncillary property), 74
Tmin (teap.teap. VLEAncillary property), 74
tolist() (in module teqp), 77
trace critical arclength binary()
                                                (in
        module teqp), 77
trace_critical_arclength_binary()
         (teqp.teqp.AbstractModel method), 71
trace_VLE_isobar_binary() (in module teap), 77
trace_VLE_isobar_binary()
         (teqp.teqp.AbstractModel method), 70
trace_VLE_isotherm_binary() (in module teqp),
         77
trace_VLE_isotherm_binary()
         (teqp.teqp.AbstractModel method), 70
trace_VLLE_binary()
                             (teqp.teqp.AbstractModel
        method), 71
TVLEOptions (class in teqp.teqp), 74
U
unset (teap.teap.VLE_return_code attribute), 75
v (tegp.tegp.IterationMatrices property), 71
value (teqp.teqp.VLE_return_code property), 75
vars (teap.teap.IterationMatrices property), 71
vdWEOS () (in module teqp), 77
vdWEOS1 () (in module teap), 77
verbosity (teap.teap.TCABOptions property), 73
verbosity (teap.teap.VLLETracerOptions property), 75
VLE_return_code (class in teap.teap), 74
VLEAncillary (class in teap.teap), 74
VLLEFinderOptions (class in teap.teap), 75
VLLETracerOptions (class in teap.teap), 75
X
xtol_satisfied
                     (teqp.teqp.VLE_return_code
        tribute), 75
```

86 Index