

Embedded Operating Systems

Che-Wei Chang

chewei@mail.cgu.edu.tw

Department of Computer Science and Information Engineering, Chang Gung University

Flexible Embedded Systems

- ▶ Features of Embedded Systems
 - Customized hardware with high scalability
 - Heterogeneous devices with unified interface
 - Application-aware designs for energy saving







Hardware and System Software Integration













Key Technologies for Systems

- ▶ Fast System Initialization
 - Keep the system and application states for users
 - Reduce the Initialization time of applications
- Energy-Efficient Designs
 - Adjust the frequencies of processors
 - Change the states of peripheral devices
- Performance Tuning Tools
 - Understand the hot spots of applications
 - Exploit the advantages of hardware



Course Roadmap

Basic Concepts

- Embedded System Design Concepts
- Embedded System Developing Tools and Operating Systems
- Embedded Linux and Android Environment



Core Technology

- Real-Time System Design and Scheduling Algorithms
- System Synchronization Protocols

Real Exercises




- System Initialization and Memory Management
- Power Management Techniques and System Routine
- Embedded Linux Labs and Exercises on Linux



Syllabus

- ▶ Lecturer: Che-Wei Chang (張哲維)
- ▶ **Lecture Hours**: Tuesday 9:10 a.m. 12:00 p.m.
- ▶ **Office Hours**: Thursday 4:00 p.m. 5:30 p.m.
- ▶ **Classroom**: Seminar Room 1
- Reference Books and Slides:
 - Jane Liu, "Real-Time Systems," Prentice Hall, 2000.
 - Christopher Hallinan, "Embedded Linux Primer,"
 2nd Edition, Prentice Hall, 2011.
 - Silberschatz, Galvin, and Gagne, "Operating System Concepts," 9th Edition, John Wiley & Sons, 2013.







Grading and Resources

- Midterm: 30%
- ▶ Discussion and Quiz: 20%
- Exercises: 20%
- ▶ Final Project Presentation and Report: 30%
- Course Website:

https://icechewei.github.io/webpage/teaching.html




Embedded Systems — Overview

Definition of Embedded Systems

- It is difficult to define embedded systems
 - An embedded system is a digital system
 - An embedded system has computing processors
 - An embedded system runs dedicated functions
 - An embedded system is frequently used as a controller
- An embedded system is a computer system with some dedicated functions within a larger mechanical or electrical system, often with real-time computing constraints. From Wikipedia




An Embedded System Example — A Digital Camera

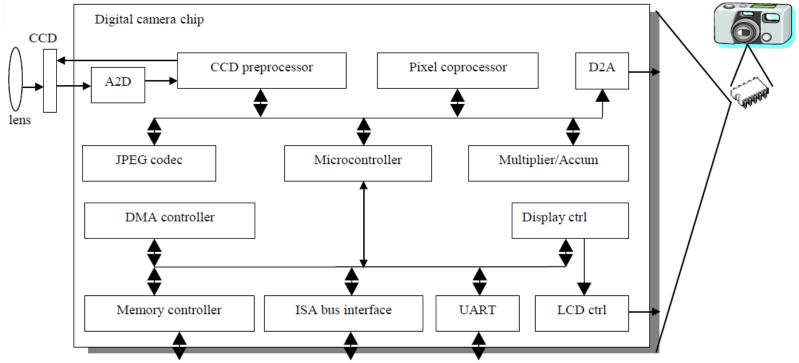

- Single-Functioned: always a digital camera
- ▶ Tightly-Constrained: low cost, low power, small
- ▶ Reactive and Real-Time: short response time



An Embedded System Example — An ADSL Modem – From Wikipedia

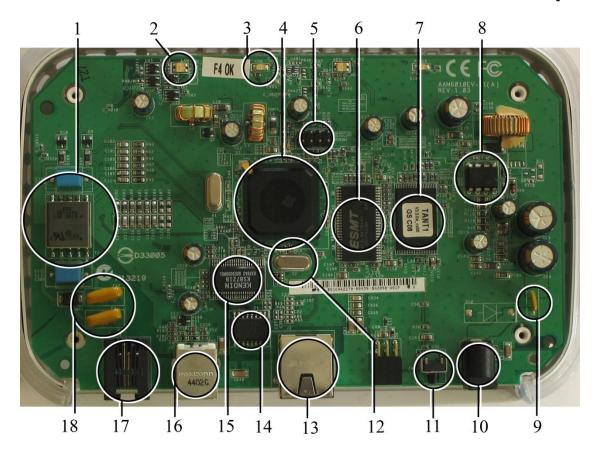

Microprocessor (4), RAM (6), and Flash Memory (7), ...

Design Challenge— Optimizing Performance Metrics

- Obvious Design Goal
 - Construct an implementation with desired functionality
- Performance Metrics
 - Performance metrics are the measurable features of a system's implementation
 - Simultaneously optimizing numerous design metrics is a challenging issue




Common Performance Metrics

- Unit Cost: the monetary cost of manufacturing each copy of the system
- NRE Cost (Non-Recurring Engineering cost): the one-time monetary cost of designing the system
- > Size: the physical space required by the system
- Performance: the execution time or throughput of the system
- **Power:** the amount of power consumed by the system
- ▶ Flexibility: the ability to change the functionality of the system without incurring heavy NRE cost
- ▶ Time-to-Market: the time required to develop a system to the point that it can be released and sold to customers
- Maintainability: the ability to modify the system after its initial release




NRE and Unit Cost

- Compare Technologies by Costs— the best solution depends on quantity of the product
 - Technology A: NRE=\$2,000, unit=\$100
 - Technology B: NRE=\$30,000, unit=\$30
 - Technology C: NRE=\$100,000, unit=\$2

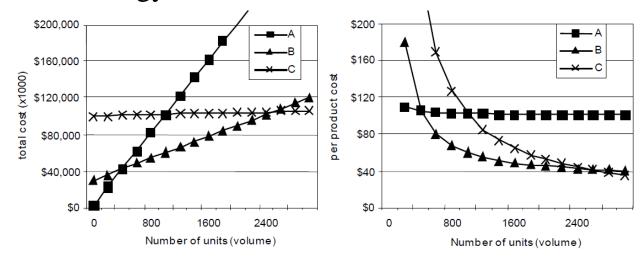

We must also consider time-to-market

Delayed Market Entry

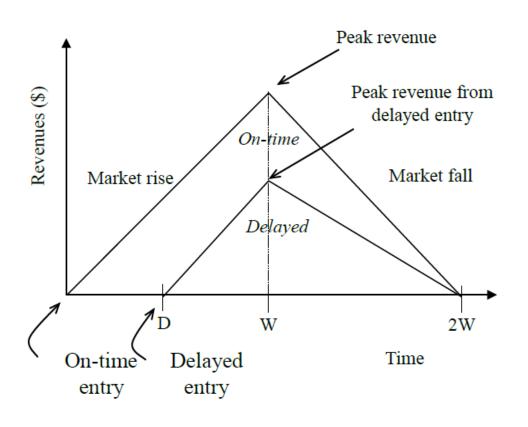

A Simplified Revenue Model

- Product life = 2W, peak at W
- The time of market entry defines a triangle, representing the market penetration
- The triangle area represents the revenue

Loss


 The difference between the on-time and delayed triangle areas

Performance Design Metrics

- Latency (response time)
 - Time between task start and end
 - e.g., Cameras A and B process an image in 0.5 seconds
- Throughput
 - Number of tasks per second
 - e.g. Camera A processes 2 images per second
 - Throughput can be more than latency seems to imply due to concurrency
 - e.g. Camera B may have two cores to process 4 images per second (by pipelining or multithreading on multiple cores)

Performance and Power

- Dynamic Power Consumption
 - Switching power and short-circuit power
 - Dynamic Voltage Frequency Scaling (DVFS)
- Static Power Consumption
 - Leakage power
 - Dynamic Power Management (DPM)

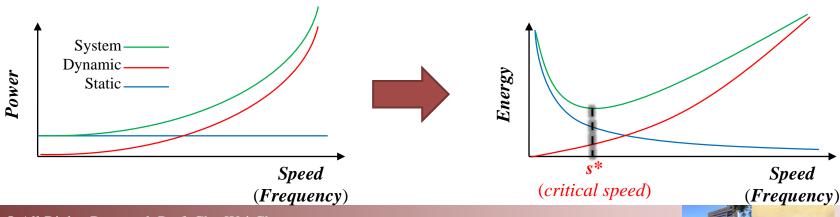


Solutions for a Specific Function

- General Purpose Processor
 - A flexible software solution
- Special Purpose Processor
 - Specialized processors for some application area, e.g., graphics processing units for 2D and 3D rendering
- Field Programmable Gate Array (FPGA)
 - An integrated circuit designed to be configured by customers after manufacturing
- Application-Specific Integrated Circuit (ASIC)
 - An integrated circuit customized for a particular use

Design-Productivity Gap

While designer productivity has grown at an impressive rate over the past decades, the rate of improvement has not kept pace with chip capacity

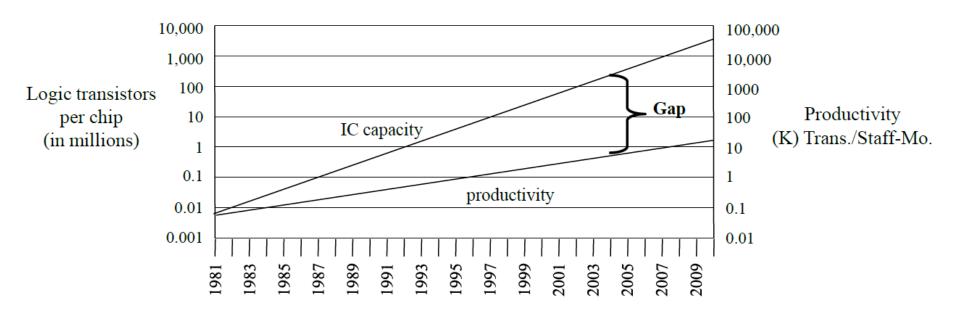

Building an Embedded System

- Understand the embedded system design life cycle
- Be familiar with the real-time requirements of embedded systems
- Use embedded system developing tools to work more efficiently
- Include an embedded operating system with driver support for a complicated environment of applications








The Embedded Design Life Cycle

Workflow of Embedded Designs

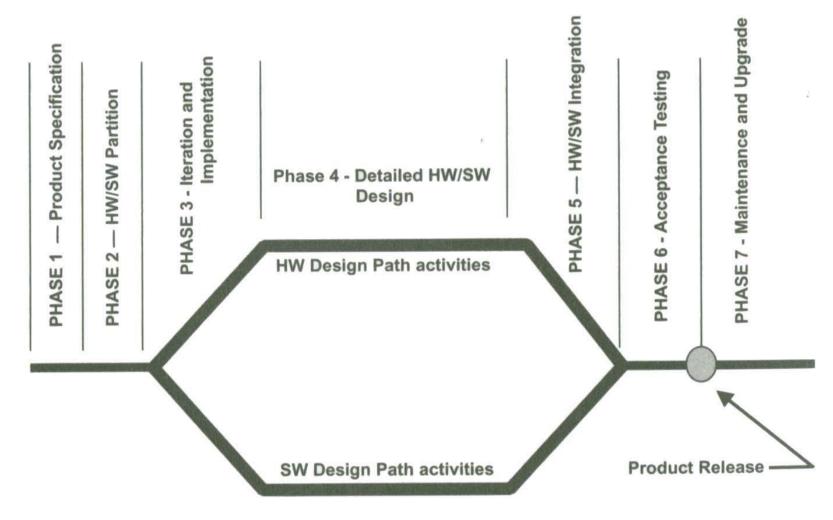


Product Specification

- ▶ R&D Engineer View
- Marketing and Sale Department View
- Customer View
- Questionaries
- Marketing Specialists

Partitioning Decision

- Complex optimization problem
- Many embedded system designs are required to be:
 - Price sensitive
 - Leading-edge technology
 - Non-standard
 - Market competitive
- These conflicting requirements make it difficult to create an optimal design

Detailed Hardware and Software Design

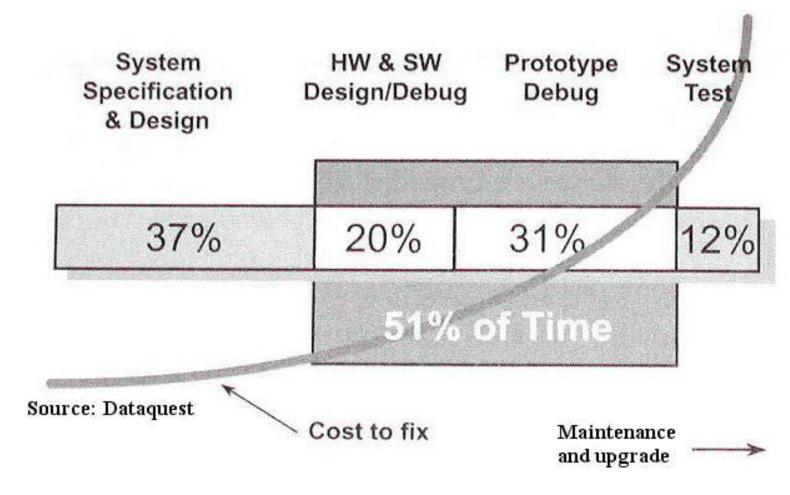

Debugging an Embedded System

- General Requirements
 - Run control
 - Memory substitution
 - Real time analysis
 - On-Chip Hooks
 - OS Supports
- ▶ The Holy Grail of Embedded System Design
 - Real time nature
 - Accurately model or simulate is difficult



The Concept of Real-Time Embedded Systems

Introduction to Real-Time Systems

- ▶ What is a real-time system?
 - Any system where a timely response by the computer to the external environment is vital
- Examples:
 - Multimedia systems, virtual reality, games
 - Avionics, air traffic control, robots, automobiles, nuclear power plant
 - Stock market, trading system, information access, etc.

Real-Time Issues and Research

- Software Engineering
 - System Design Methodologies
 - Toolchain Designs
- Operating Systems
 - Many/Multi-Core Task Management and Scheduling
 - Task Synchronization
 - Energy-Efficient System Designs
 - File Systems and Storage Systems
- Programming Models
 - Heterogeneous/homogeneous Multiprocessor Programming
 - Better control over timing



An Example of Real-Time Designs

- A camera periodically takes a photo
- ▶ The image recognition result will be produced before the next period
- If there is an obstacle, the train automatically brakes

Time of a Period = 150/50 = 3sDistance of a Period = (400 - 100)/2 = 150m

Braking: -12.5m/s²

Max Seed: 50m/s

Distance to Stop 25x(50/12.5)=100m




Period Period 100m

Event Detect Recognize Stop

Camera Range: 400m

Rate Monotonic Scheduling

- ▶ A scheduler is needed if there is more than one real-time task
- Rate monotonic scheduler: A static priority is assigned to each task based on the inverse of its period
 - A task with shorter period
 higher priority
 - A task with longer period \rightarrow lower priority
 - For example:
 - P₁ has its period 50 and execution time 20
 - P₂ has its period 100 and execution time 37
 - \rightarrow P₁ is assigned a higher priority than P₂

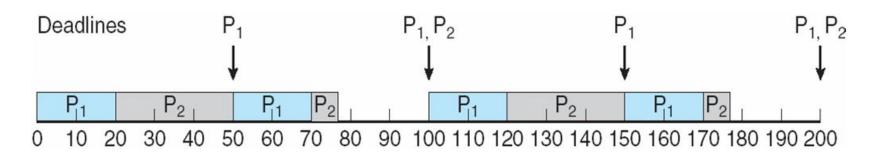

Challenges of Real-Time Systems

- Are there other scheduling algorithms?
 - Yes, analysis should also be provided to choose a proper scheduling algorithm.
- Are there some aperiodic tasks?
 - Yes, we then need to jointly consider periodic and aperiodic tasks.
- Can tasks share some resources or data?
 - Of course, the synchronization protocols should be provided to protect the access to the shared resources and data.



Embedded Operating Systems and Developing Tools


Apple iOS

- ▶ iOS is the operating system that runs iPhones, iPod Touches, iPads, and Apple TVs.
- ▶ The language used to develop the software for iOS is Objective-C (and Swift)
- Features
 - Home Screen
 - Multi-Touch
 - Not Fully Open-Sourced





Google Android

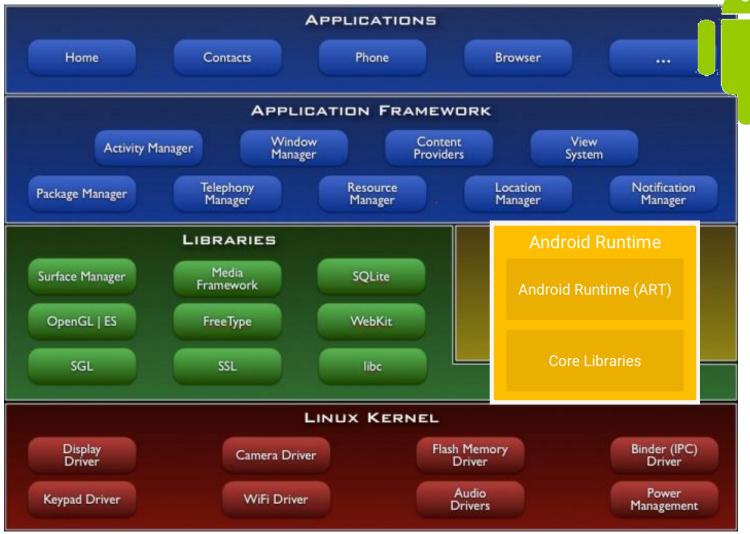

Real-Time Operating Systems

- ▶ A RTOS is an abstraction from hardware and software programming
 - Shorter development time
 - Less porting efforts
 - Better reusability
- Choosing an RTOS is important
 - High efforts when porting to a different OS
 - The chosen OS may have a high impact on the amount of resources needed
- Example: eCos, Nucleus, VxWork, QNX, OSE, RT-Linux, uC/OSII

Embedded System Development Tools

- Compiler Tools
 - Quality of code generator
 - Support particular features of the target hardware
- Hardware and Software Debugging Tools
 - ICE (In-Circuit Emulator), ROM emulator, logic analyzer, performance analyzer
 - GNU debugger, ARM RealView development suite, ...
- Performance Measuring Tools
 - Development suites
 - Power meters
 - Data acquisition devices





What is an embedded system?

Do you have your answer?