## ECE 243S - Computer Organization February 2025 Lab 5

### Hex Displays and Interrupt-Driven Input/Output

**Due date/time:** During your scheduled lab period in the week of February 10, 2025. [Due date is not when Quercus indicates, as usual.]

# **Learning Objectives**

Interrupt-driven I/O is a fundamental way that all processors synchronize with the outside world. The goal of this lab is to understand the use of interrupts for the NIOS V processor, using assembly-language code, and to get some practice with subroutines, modularity, and learning how to use the HEX displays on the DE1-SoC.

To do this exercise, you need to be familiar with the interrupt processing mechanisms for the NIOS V processor. Interrupts are part of a broader class of events called *traps*, and we have described the concepts in class. An exception is one kind of trap, and an interrupt is another kind. You can find a description of all of the registers used for interrupts on chapter 8 of the document NIOS\_V\_Intro which was provided as part of Lab 1 of this course.

There is some complexity to the proper arrangement of code to prepare for and handle interrupts, and so we have provided a fair amount of example code, in the lectures and here in this lab.

### What To Submit

You should hand in the following files prior to the end of your lab period. However, note that the grading takes place in-person, with your TA:

• The assembly code for Parts I,II, III and IV in the files part1.s, part2.s, part3.s and part4.s.

## Part I

You used the Hex 7-segment displays as an output in the ECE 241 course, but so far not in this course. In the files provided with this lab, we have given you a subroutine, called HEX\_DISP, (in file HEXdisp\_subroutine.s) which will display any 4-bit hexadecimal digit on any one of the six Hex 7-segment displays, HEX5 - HEX0.

The subroutine takes in two parameters: the low-order 4 bits of register a0 give the 4-bit value to be displayed (which turns into one of the 16 hex digits, 0->F), and the number in register a1 says which of the six HEX digits to display that digit on. The display can be blanked by turning on bit 4 of a0 (that is the fifth bit, counting from 0) and a1 to the value of the display that will be blanked from 0->5.

It may be useful to know that storing a bit pattern to the memory-mapped address for the hex displays causes that pattern to be put into a memory-mapped register that then drives the display as you likely did in the hardware you designed in ECE 241. Figure 1 shows those registers and how they connect to the display. You don't need to know those details, though, because the provided subroutine deals with them for you.

The goal in this part is to write an assembly program that demonstrates the full functionality of the provided HEX\_DISP subroutine. Your program should *not* use interrupts, and it should be the shortest, simplest demonstration that proves that the subroutine works as described above. Notice that this specification is intentionally open-ended, and you should not ask for a more detailed specification (on Piazza for example), but take it as part of the task to determine those specifics.

Another motivation for this part is to get you used to testing individual parts of software, including code like this that is given to you. For your whole technical career, you are likely to use someone else's software, and you should always be skeptical of that software until you've convinced yourself that it actually works. (Please quote this often: "Software is *broken* until proven otherwise.")

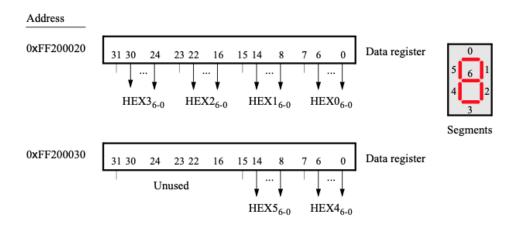


Figure 1: The DE1\_SoC Hex Display

Create a new folder to hold your solution for this part and put your code into a file called part1.s. You will need to make a Monitor Program project for running your code on a DE1-SoC board; but you can also debug your program at home using CPUlator. Show it working to your TA for grading in the lab. Submit part1.s to Quercus before the end of your lab period.

## Part II

In this part, you will write a program that will display specific numbers on the *HEX*0 to *HEX*3 displays, in response to the press and release of the four KEY pushbuttons. You must make use of the HEX\_DISP code given in part 1, and unlike Lab 4, where you used polled-input to handle the KEYs port, in this exercise, you will use interrupt-driven input.

The specific behaviour is as follows: when  $KEY_i$  (i = 0 .. 3) is pressed and released, then display  $HEX_i$  will be set to display the number i. When  $KEY_i$  is again pressed and released, then display  $HEX_i$  will become blank. Every subsequent press and release toggles that number i on and then blank, and so on. For example, pushing  $KEY_3$  would turn on the number 3 and then blank on the next press/release.

Consider the main program which is provided to you in the file part2\_skeleton.s. The code has a subroutine called interrupt\_handler and it is the address where the NIOS V processor transfers execution after an interrupt is caused. In this interrupt\_handler, the code checks if the interrupt is from the KEYs port, and if so, it calls the subroutine KEY\_ISR located on line 56 to handle the interrupt. In the main section of the program, the stack pointer is initialized, interrupts are set up properly from both the NIOS V control registers, and the push button's interrupt-mask registers. You are to fill in the code that is not shown.

After setting up interrupts for the KEYs port, the main program of part2\_skeleton.s simply "idles" in an endless loop. Thus, changing the *HEX3-0* displays should happen in code that your write in *KEY\_ISR*.

#### Do the following:

1. Create a new folder to hold your solution for this part. Make a file called *part2.s*, and type your assembly language code into this file. You may want to begin by copying the file named *part2\_skeleton.s* that is provided with the design files for this exercise.

- 2. Note that the Monitor Program tool supports multiple files in a project, which means that you could organize parts of your code, such as the main program, ISRs, and so on, in different files. However, this approach cannot be used with the CPUlator tool, which supports only one file at a time. For CPUlator you'll need to put all of your source code in *part2.s*.
- 3. When making your Monitor Program project you have to specify that Exceptions will be used as part of the code. This is done by selecting Exceptions in the *Linker Section Presets* screen illustrated in Figure 2. Be sure to make this selection for all of your Monitor Program projects in this Lab Exercise, or else your programs will not be able to be assembled properly.
- 4. The code in part2\_skeleton.s gives the code required for the interrupt\_handler subroutine. You have to write the code for the  $KEY\_ISR$  interrupt service routine, and set up the NIOS V processor, and the push buttons such that an interrupt is caused when any of the push buttons are pressed. Your code should show the digit 0 on the HEX0 display when  $KEY_0$  is pressed, and then if  $KEY_0$  is pressed again the display should be "blank". You should toggle the HEX0 display between 0 and "blank" in this manner each time  $KEY_0$  is pressed. Similarly, toggle between "blank" and 1, 2, or 3 on the HEX1 to HEX3 displays each time  $KEY_1$ ,  $KEY_2$ , or  $KEY_3$  is pressed, respectively. Compile, test and run your program.

Show your code working to your TA for grading in the lab. Submit part2.s to Quercus before the end of your lab period.

## Part III

In this part you'll build an interrupt-based program that controls the LEDR lights, in a manner similar to Lab 4, but using interrupt-driven I/O instead of polling. These lights will display the value of a binary counter, which will be incremented at a certain rate by your program. Your code will use interrupts, in two ways: first, to handle the pushbutton KEY port and second to respond to interrupts from a timer. You will use the timer to increment the value of the binary counter displayed on the LEDR lights.

Consider the main program included in the file part3\_skeleton.s. This time, the main program must enable two types of interrupts: the Timer and the KEY pushbuttons. To do this, the main program calls the subroutines *CONFIG\_TIMER* and *CONFIG\_KEYS*. You are to write each of these subroutines. In *CONFIG\_TIMER*, set up the *Timer*, to generate one interrupt every 0.25 seconds. To see how to enable interrupts from this timer, review the lectures and also look at section 3.2 in the file *DE1\_SoC\_Computer\_NiosV* given in Lab 1.

You are to modify the code given in part3\_skeleton.s to make it work as follows (if it doesn't already):

- 1. The main program executes an endless loop, storing the value of the global variable *COUNT* to the red lights LEDR.
- 2. You have to write an interrupt service routine for the timer, and a new interrupt service routine (different from the one you wrote in Part II) for the KEYs.
- 3. You will also need to modify your *interrupt\_handler* subroutine which is in line 26 so that it calls the appropriate interrupt service routine, depending on whether an interrupt is caused by the timer or the KEYs port.
- 4. In the interrupt service routine for the timer you are to increment the variable *COUNT* by the value of the *RUN* global variable, which should be either 1 or 0.
- 5. You are to switch the value of the RUN global variable in the interrupt service routine for the KEYs, each time a KEY is pressed. When RUN = 0, the main program will display a static count on the red lights, and when RUN = 1, the count shown on the red lights will increment every 0.25 seconds. Your counter should reset to 0 after the count reaches 255 that is, we display 255, we wait for 0.25 seconds and then we reset.

Make a new folder (part3) and file (part3.s) for this part; you may want to begin by copying the file named part3\_skeleton.s that is provided with the design files for this exercise. Write your code for this part, and

then assemble, run, test and debug it. As noted above, although the Monitor Program supports multiple files in a project, if you are going to develop/debug with CPUlator, then you'll need to put all of your source code in *part3.s.* 

Show your code working to your TA for grading in the lab. Submit part3.s to Quercus before the end of your lab period.

## **Part IV**

Modify your program from Part III (in a file called *part4.s*) so that you can vary the speed at which the counter displayed on the red lights is incremented. All of your changes for this part should be made in the interrupt service routine for the KEYs. The main program and the rest of your code should not be changed.

Implement the following behavior: When  $KEY_0$  is pressed, the value of the RUN variable should be toggled, as in Part III. Hence, pressing  $KEY_0$  stops/runs the incrementing of the COUNT variable. When  $KEY_1$  is pressed, the rate at which COUNT is incremented should be doubled, and when  $KEY_2$  is pressed the rate should be halved. You should implement this feature by stopping the timer within the KEYs interrupt service routine, modifying the load value used in the timer, and then restarting the timer. Additionally, pressing the button to halve the speed might reduce it to zero. If you then try to double the speed to increase the timer, it will not work. Therefore, set both a minimum and maximum speed limit.

Show your code working to your TA for grading in the lab. Submit part 4.s to Quercus before the end of your lab period.

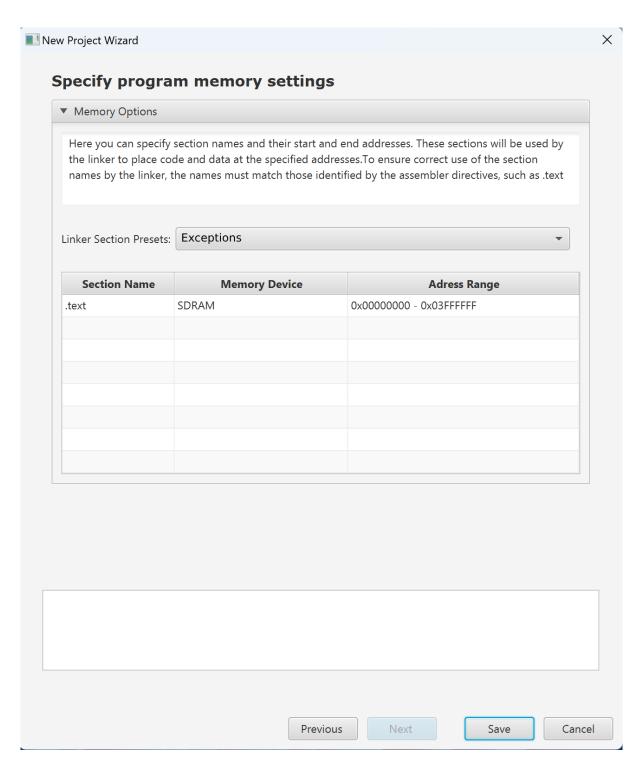


Figure 2: Allowing for exceptions in the Monitor Program