Multicycle operations

E. Sanchez

Politecnico di Torino Dipartimento di Automatica e Informatica

FLOATING-POINT OPERATIONS

Floating point units perform more complex operations than integer ones.

Therefore, in order to force them to perform their job in a single clock cycle, the designer should

- either use a very slow clock, or
- make these units very complex.


As a popular alternative, floating point units generally require more than one clock cycle to complete.

The EX stage is composed of different functional units, and is repeated as many times, as the instruction requires.

Integer Pipeline



Extension for FP

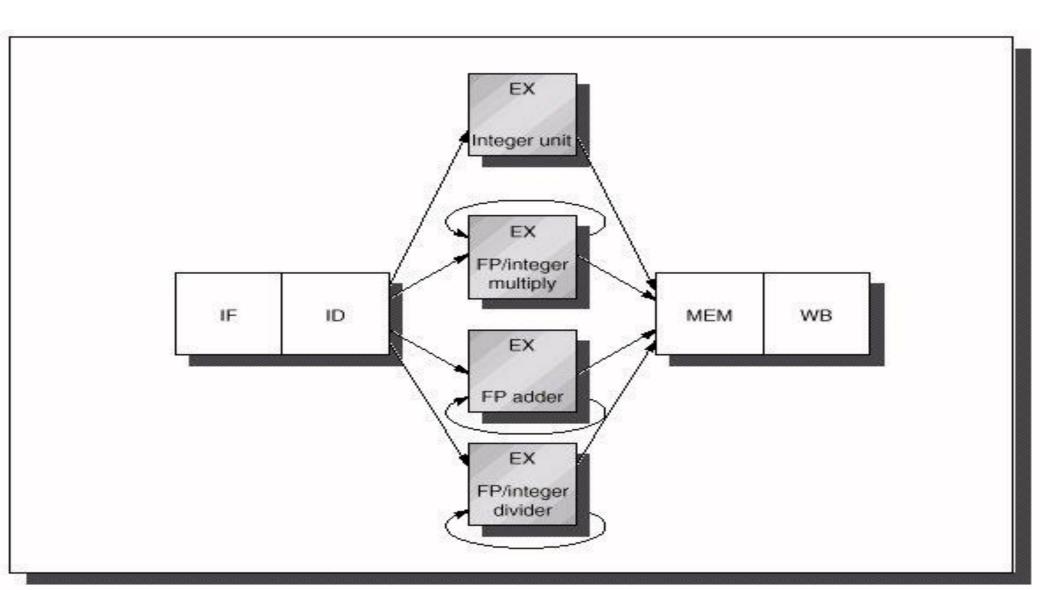

Latency and Initiation Interval

Latency


• It is the number of cycles that should last between an instruction that produces a result and an instruction that uses the same result.

Initiation interval


 It is the number of cycles that must elapse between issuing two operations of the same type to the same unit.

Functional Unit	Latency	Initiation Interval
Integer ALU	0	1
Data Memory	1	1
FP add	3	1
FP/integer multiply	6	1
FP/integer divide	24	25

Pipelined FP units

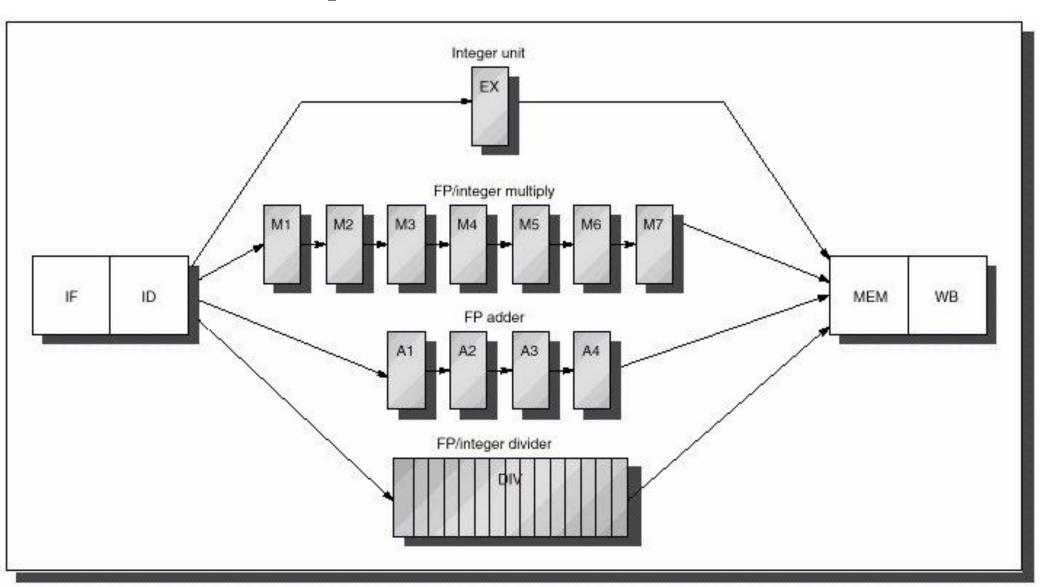


Pipelined FP units

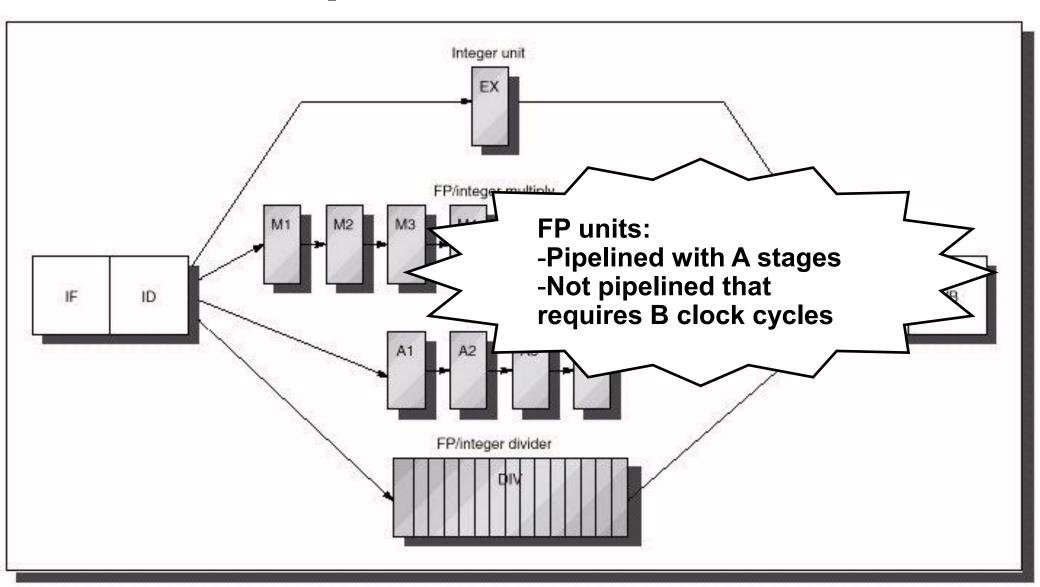

Hazards

Due to the different structure of the EX stage, hazards may become more frequent.

Example

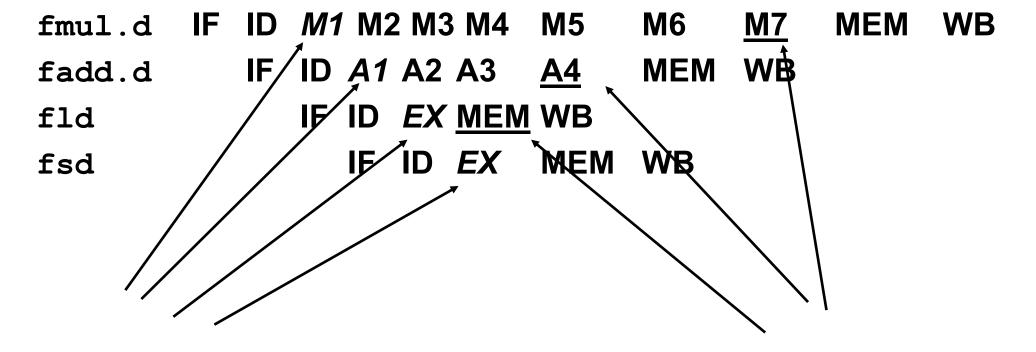

Stages requiring a data available

Stages where a data is made available

Structural hazards

Structural hazards can occur:

- because of the unpipelined divide unit, several instructions could need it at the same time
- because the instructions have varying running times, the number of register writes required in a cycle can be larger than 1.

Contemporary register writes

		Clock cycle number									
Instruction	1	2	3	4	5	6	7	8	9	10	11
fmul.d f0,f4,f6	IF	ID	M1	M2	M3	M4	M5	M6	M7	MEM	WB
• • •		IF	ID	EX	MEM	WB					
			IF	ID	EX	MEM	WB				
fadd.d f2,f4,f6				IF	ID	A1	A2	A3	A4	MEM	WB
					IF	ID	EX	MEM	WB		
						IF	ID	EX	MEM	WB	
fld f2,0(x2)							IF	ID	EX	MEM	WB

Solutions

- Adding other write ports (normally too expensive)
- Forcing a structural hazard:
 - instructions are stalled in the ID stage, or
 - instructions are stalled before entering the MEM or WB stage.


More frequent data hazards

Because of longer latency of operations, stalls for data hazards may stall the pipeline for longer periods.

	<u> </u>	Clock cycle number															
Instruction	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17
fld f4,0(x2)	IF	ID	EX	MEM	WB												
fmul.d f0,f4,f6		IF	ID	Stall	M1	M2	M3	M4	M5	M6	M7	MEM	WB				
fadd.d f2,f0,f8			IF	Stall	ID	Stall	Stall	Stall	Stall	Stall	Stall	A1	A2	A3	A4	MEM	WB
fsd f2,0(x2)					IF	Stall	Stall	Stall	Stall	Stall	Stall	ID	EX	Stall	Stall	Stall	MEM

More frequent data hazards

Because of longer latency of oddata hazards may stall the pipeline ration

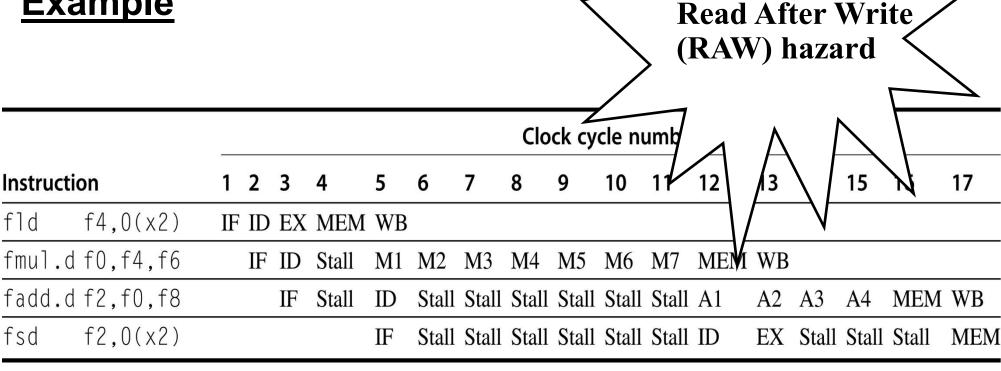

New data hazards

Instructions no longer reach WB in order: therefore, new kinds of data hazards are now possible.

	Ŷ	Clock cycle number									
Instruction	1	2	3	4	5	6	7	8	9	10	11
fmul.d f0,f4,f6	IF	ID	M1	M2	M3	M4	M5	M6	M7	MEM	WB
		IF	ID	EX	MEM	WB					
• • •			IF	ID	EX	MEM	WB				
fadd.d f2,f4,f6				IF	ID	A1	A2	A3	A4	MEM	WB
• • •					IF	ID	EX	MEM	WB		
						IF	ID	EX	MEM	WB	
fld f2,0(x2)							IF	ID	EX	MEM	WB

New data

Instructions no longer reach new kinds of data hazards are

fld could write in F2 before fadd.d

	19				C	lock cycle	numbe	er		7	
Instruction	1	2	3	4	5	6	7	8	9	\ \	11
fmul.d f0,f4,f6	IF	ID	M1	M2	M3	M4	M5	M6	M7		WB
• • •		IF	ID	EX	MEM	WB					
• • •			IF	ID	EX	MEM	WB				
fadd.d f2,f4,f6				IF	ID	A 1	A2	A3	A4	MEM	WB
• • •					IF	ID	EX	MEM	WB		
• • •						IF	ID	EX	MEM	WB	
fld f2,0(x2)							IF	ID	EX	MEM	WB

New data hazards

Instructions no longer reach WB in order: therefore, new kinds of data hazards are now possible.

					C	lock cycl	e num			_	
Instruction	1	2	3	4	5	6			After V		/11
fmul.d f0,f4,f6	IF	ID	M1	M2	M3	M4		(WAW	') hazaı	rd \	WB
		IF	ID	EX	MEM	WB					
•••			IF	ID	EX	MEN	WB	7	A	\wedge	
fadd.d f2,f4,f6				IF	ID	A1	A2	13	A	M	WB
• • •					IF	ID	$_{\mathrm{EX}}$	ME	WA	1	•
						IF	ID	EX	MEM	WB	
fld f2,0(x2)							IF	ID V	EX	MEM	WB

Solution

Before issuing an instruction to the EXE stage, check whether it is going to write on the same register of an instruction still in the EXE stage.

In this case, stall the new instruction.

Summary

If hazard detection is always performed in the ID stage, three checks have to be performed:

- structural hazards (involving the divide unit and the write port)
- RAW data hazards: check whether some source register is listed among the destination registers of pending instructions, and whether this register will not be available at the right moment
- WAW data hazards: check whether the instruction currently in ID has the same destination register of any instruction in A1,...,A4, D, M1, ..., M7.


THE MIPS R4000 PIPELINE


The MIPS R-4000 processor is a 64-bit microprocessor introduced in 1991, whose instruction set is similar to the MIPS64 one.


The R-4000 uses a deeper pipeline (8 stages) to account for slower cache access and higher clock frequency:


 memory accesses are decomposed in several stages.


Long pipelines sometimes take the name of superpipelines.

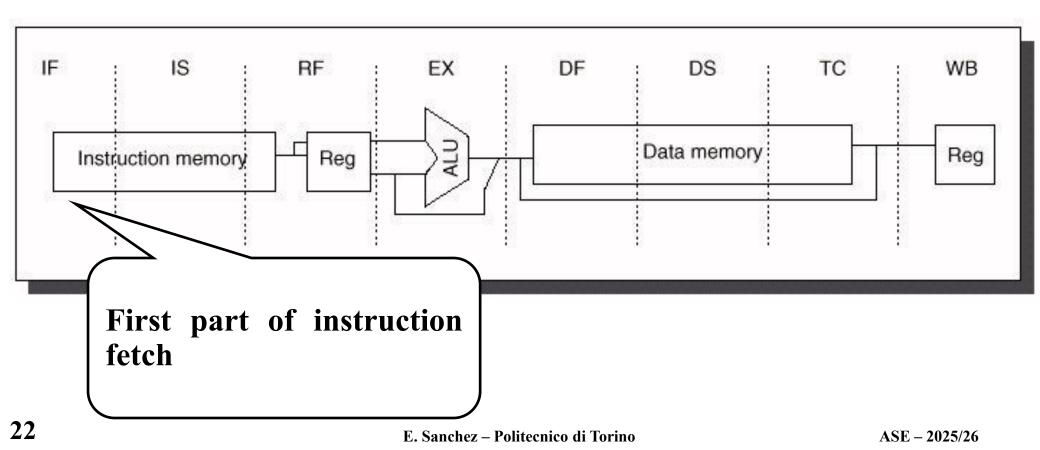


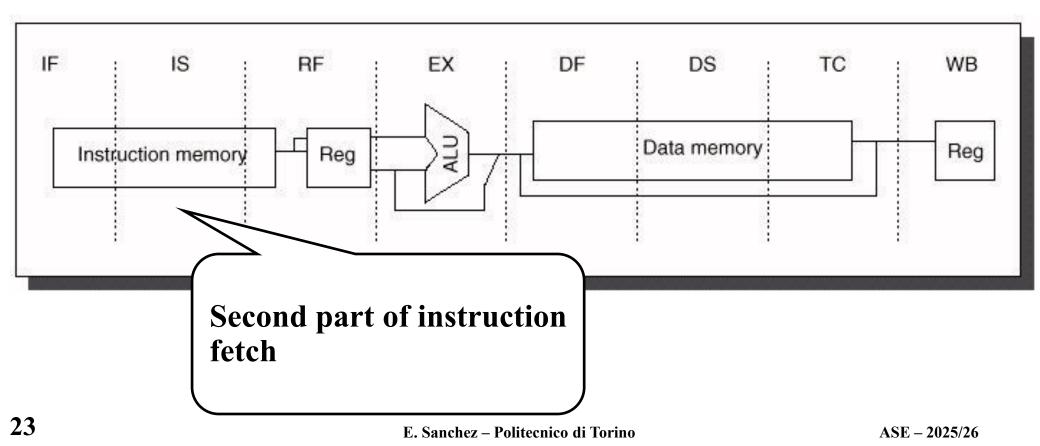


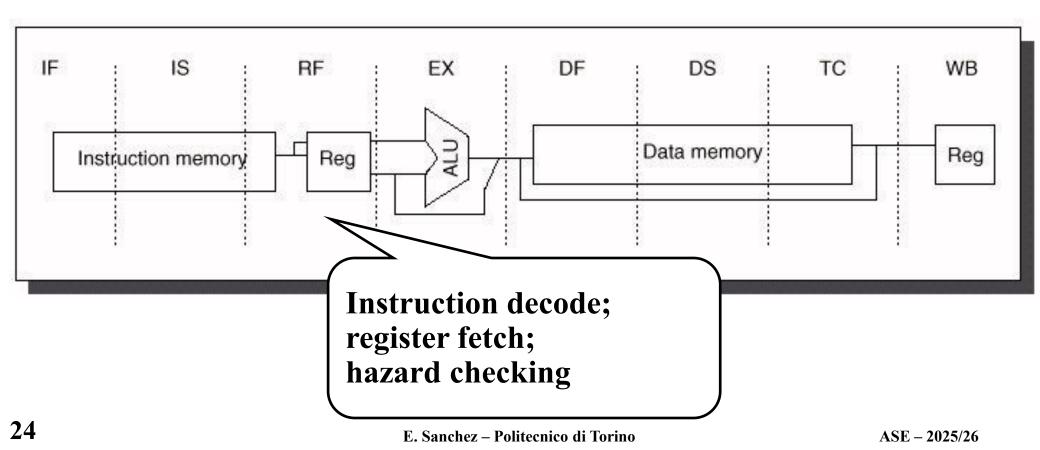


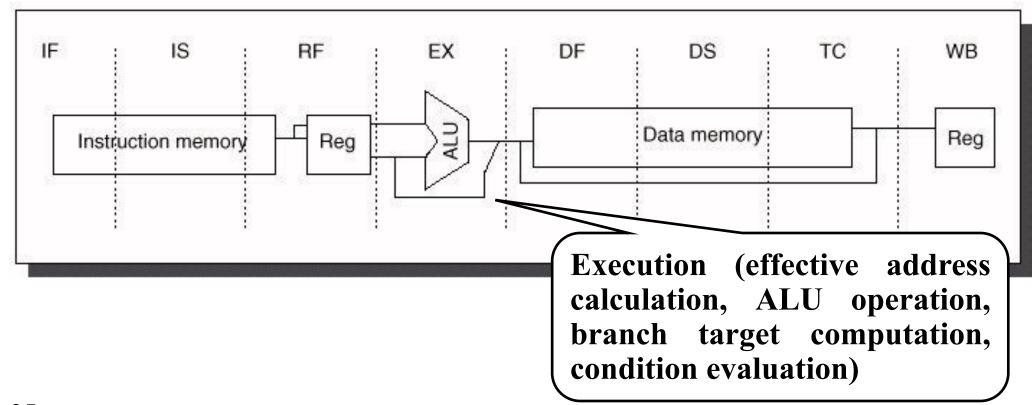


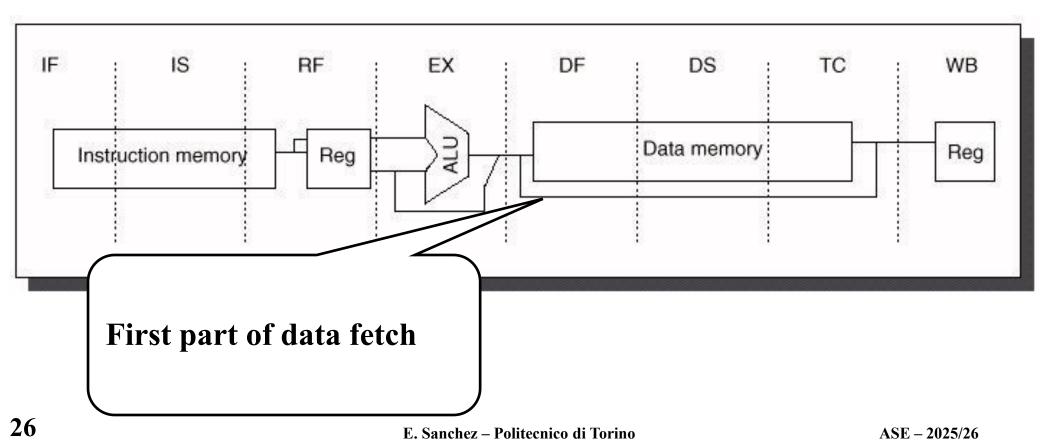

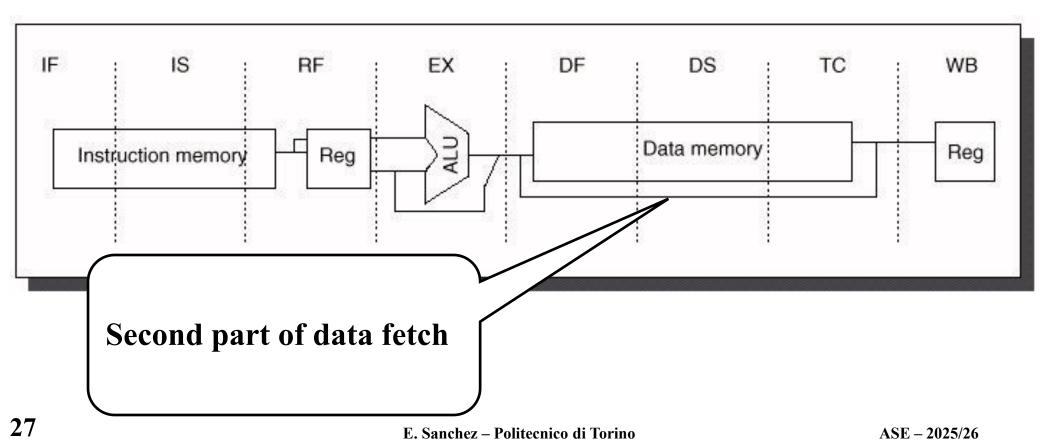

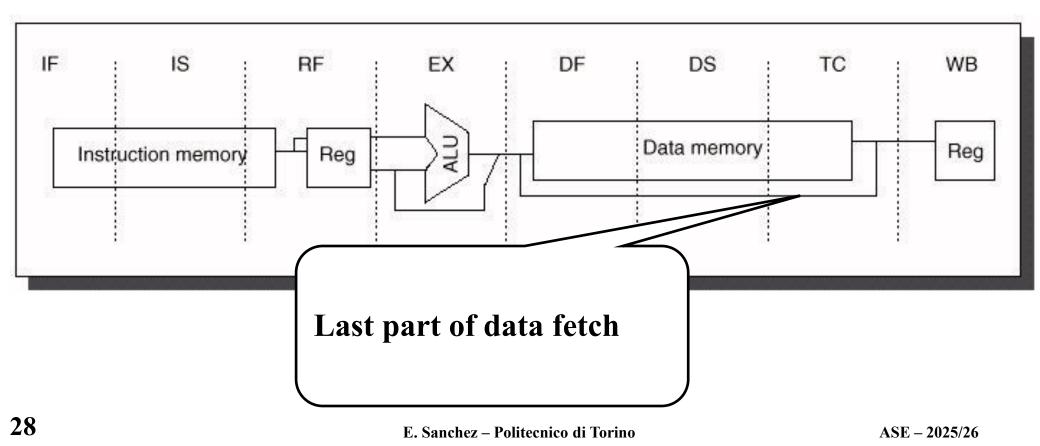

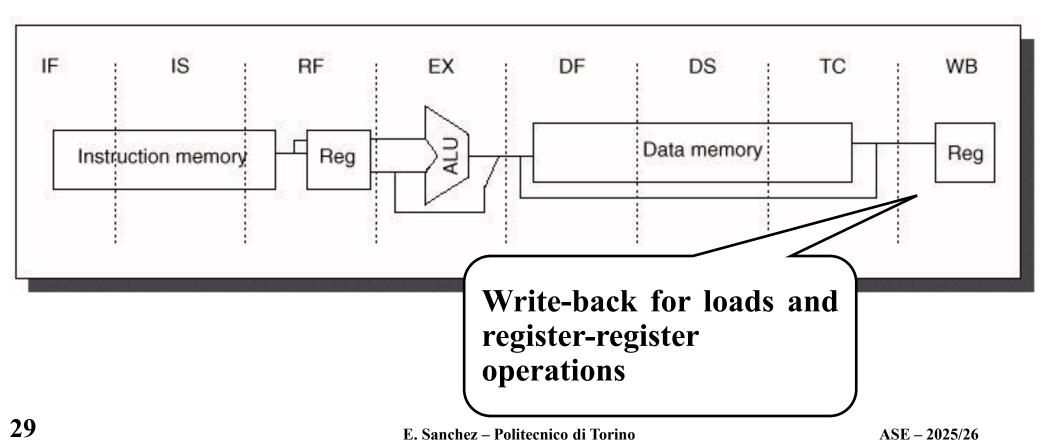


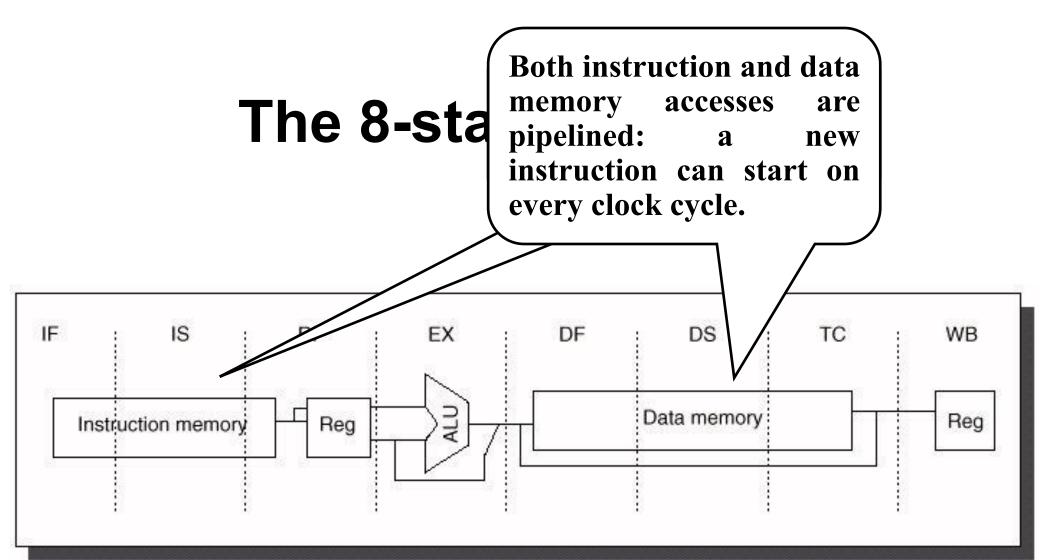


Characteristics


- More forwarding is required
- Increased load delay slot (2 cycles)
- Increased branch delay slot (3 cycles).

Load delay slot

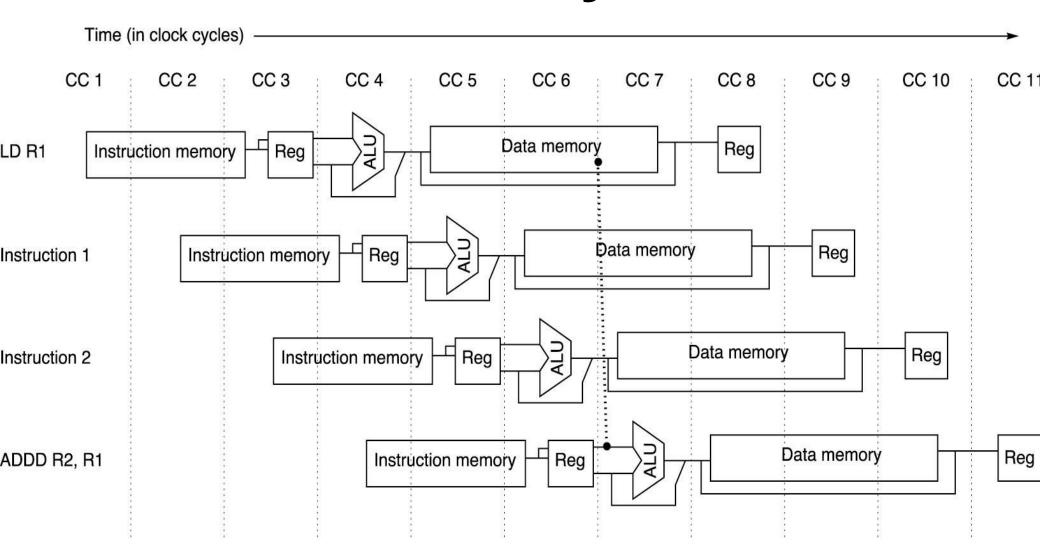

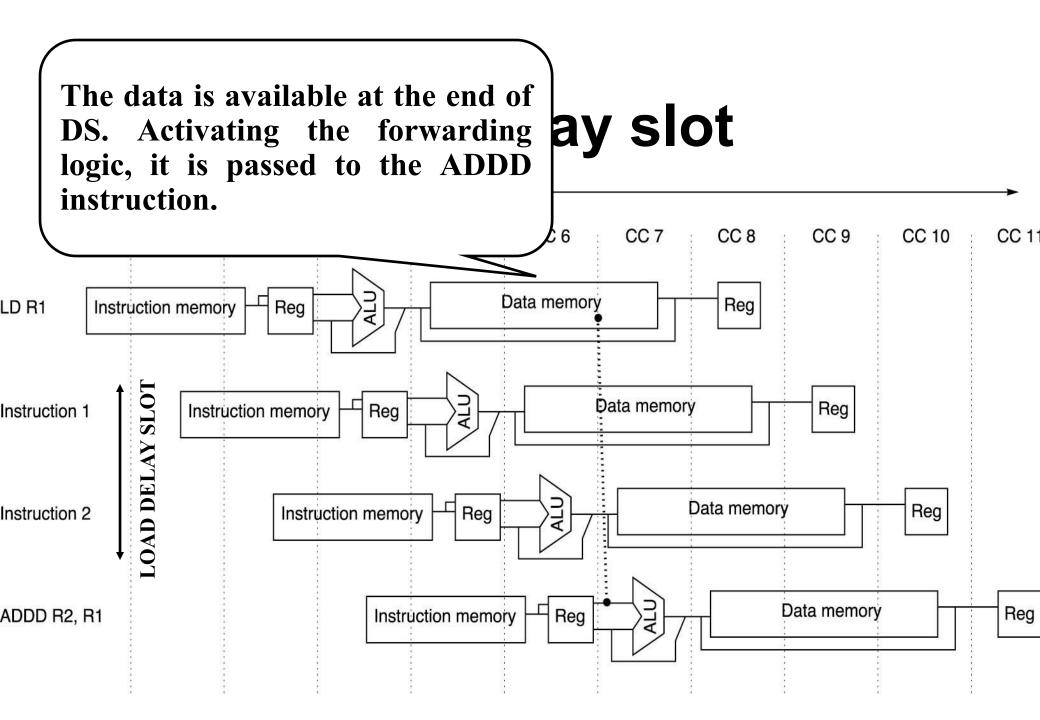

Branch delay slot

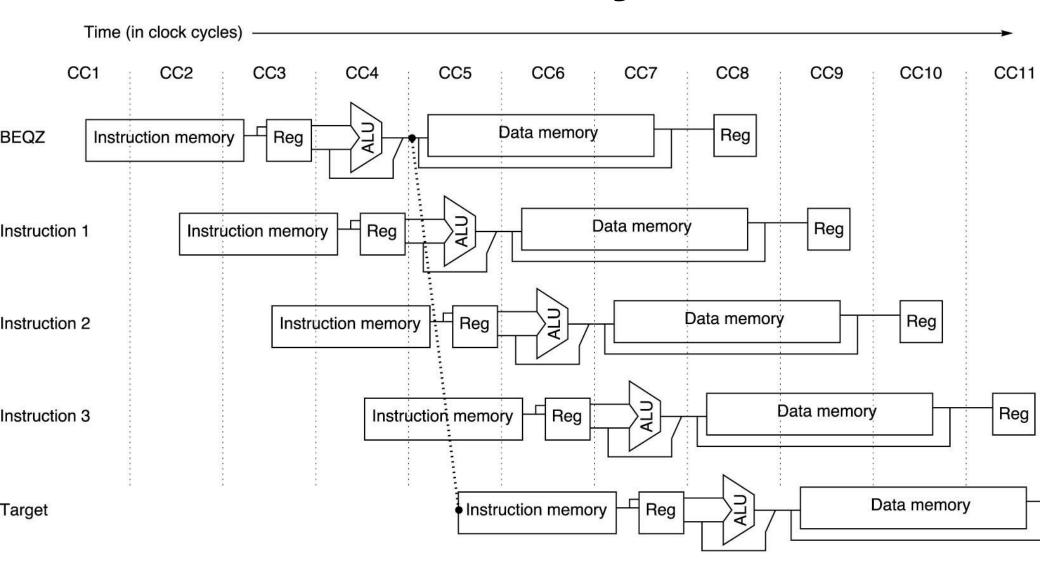

Condition evaluation is nch delay slot performed during EX. Time (in clock cycles) CC₁ CC4 CC₅ CC2 CC3 CC6 CC7 CC8 CC9 CC10 CC11 Data memory Reg BEQZ Instruction memory Reg BRANCH DELAY SLOT Data memory Instruction 1 Instruction memory Reg Reg Data memory Reg Instruction memory Instruction 2 Reg Data memory Reg Instruction memory Reg Instruction 3 Data memory Reg Target Instruction memory

FP pipeline

- The FP unit is composed of three functional units: divider, multiplier, adder
- the FP unit can be thought as composed of 8 different stages:

stage	functional unit	description
A	adder	Mantissa ADD stage
D	divider	divide
E	multiplier	exception test
M	multiplier	multiplier I
N	multiplier	multiplier II
R	adder	rounding
S	adder	operand shift
U		unpack numbers
		-

FP operations


FP instruction	Latency	Initiation interval	Pipe stages
Add, subtract	4	3	U, S + A, A + R, R + S
Multiply	8	4	U, E + M, M, M, M, N, N + A, R
Divide	36	35	$U, A, R, D^{27}, D + A, D + R, D + A, D + R, A, R$
Square root	112	111	$U, E, (A+R)^{108}, A, R$
Negate	2	1	U, S
Absolute value	2	1	U, S
FP compare	3	2	U, A, R

Latency is reduced by 1 if the destination is a store instruction.


operations

FP instruction	Latency	Initiation interval	Pipe stages
Add, subtract	4	3	U, S + A, A + R, R + S
Multiply	8	4	U, E + M, M, M, N, N + A, R
Divide	36	35	$U, A, R, D^{27}, D + A, D + R, D + A, D + R, A, R$
Square root	112	111	$U, E, (A+R)^{108}, A, R$
Negate	2	1	U, S
Absolute value	2	1	U, S
FP compare	3	2	U, A, R


Performance

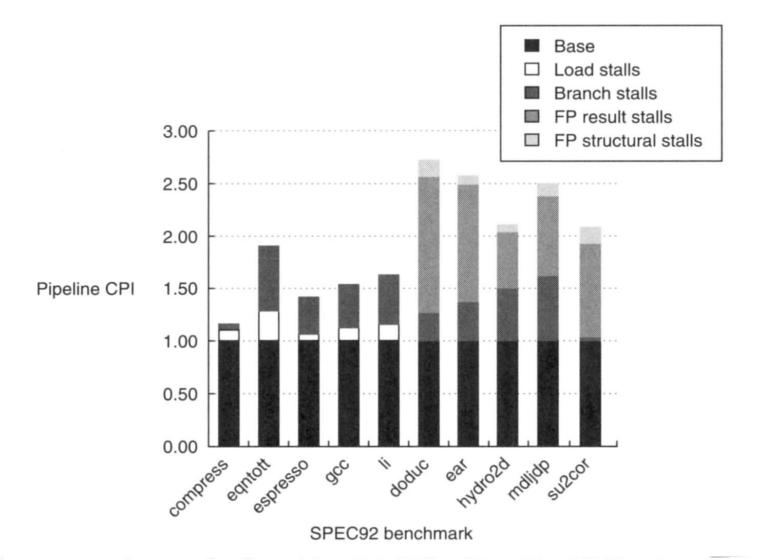

For integer programs branch delays are the most important contributors to formance total CPI.

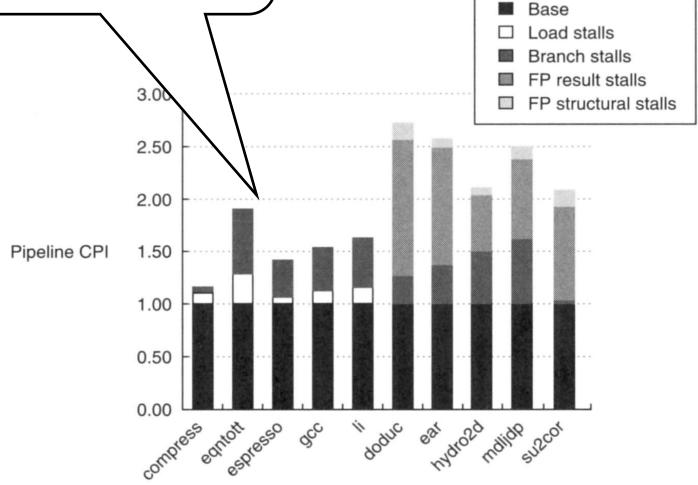

For FP programs FP result stalls are the most important contributors to formance total CPI.

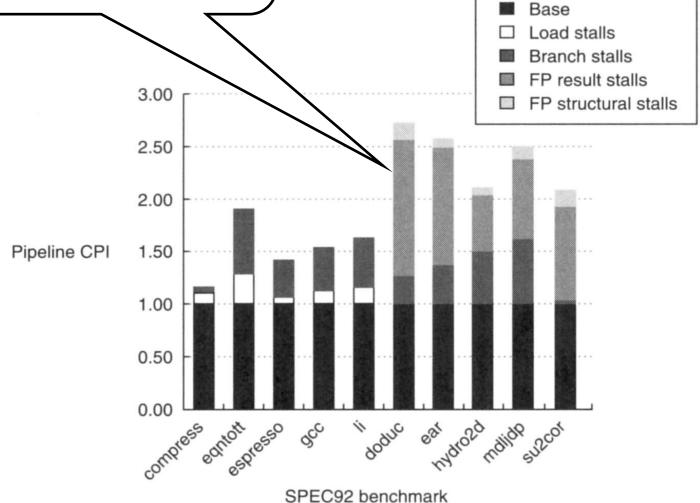

Total CPI varies between 1.2 and 2.8, depending on formance the program.

