$\mathsf{IBM}^{\circledR} \, \mathsf{TotalStorage}^{\circledR} \, \mathsf{LTO} \, \, \mathsf{Ultrium} \, \, \mathsf{Tape} \, \, \mathsf{Drive}$ 

# IBM.

## **SCSI** Reference

Before using this manual and the product it supports, read the information under Appendix B. Notices.

Third Edition (28 September 2015)

This edition applies to the *IBM System Storage LTO Ultrium Tape Drive SCSI Reference* and to all subsequent releases and modifications unless otherwise indicated in new editions.

Copyright International Business Machines Corporation 2015.

US Government Users Restricted Rights -- Use, duplication or disclosure restricted by GSA ADP Schedule Contract with IBM Corp.

## 0. Read This First

This is the Third Edition of the IBM System Storage LTO Tape Drive SCSI Reference.

## 0.1 Summary of Changes

## 0.1.1 First Edition, April 2011

The *IBM System Storage LTO Ultrium Tape Drive SCSI Reference* describes the SCSI interface for the IBM LTO 1 tape drive through the IBM LTO 4 tape drive. The first edition of the *IBM System Storage LTO Tape Drive SCSI Reference* describes the SCSI interface for the IBM LTO 5 tape drive and does not describe the previous generation tape drives that are described in the *IBM System Storage LTO Ultrium Tape Drive SCSI Reference*.

The list of Functional Change Requests (FCR) applied to the previous generation device (i.e., LTO4) that are included follow:

```
FCR 3163r3 - IP Address Information Configuration;
FCR 3164 - LTO Engineering Log (Buffer ID 06h);
FCR 3165 - LTO5 - TapeAlert 10h behavior;
FCR 3167 - Persistent Reserve Out SCOPE field;
FCR 3173 - Device Attributes Mode Pages;
FCR 3174r2 - LTO5 - Sleep Mode (Mode Page 1Ah);
FCR 3175r3 - LTO5 - Partitioning SCSI changes;
FCR 3176r1 - Encryption Selection mode page;
FCR 3177 - LTO5 - SCSI Identifier updates:
FCR 3178r2 - LTO5 - SkipSync;
FCR 3179r2 - LTO5 - Append-only mode (data-safe);
FCR 3180r2 - LTO5 - Transport Log & Mode pages;
FCR 3181 - LTO5 Report Supported OpCode;
FCR 3183r1 - LTO5 Programmable Early Warning;
FCR 3184 - LTO5 Volume Statistics log page (17h);
FCR 3185 - LTO5 Device Statistics log page (14h);
FCR 3186 - LTO5 Data Compression log page (1Bh);
FCR 3187 - SPIN & SPOUT (OOBE-KMIP-SSC-4);
FCR 3188r1 - LTO5 Engineering & Speed log pages;
FCR 3193 - End of partition behavior control;
FCR 3194 - SAS TLR count in log pages;
FCR 3197 - Update standard inquiry version field;
FCR 3202 - CM from EOD dataset Read Buffer;
FCR 3205 - Drive Type in Inquiry C0h;
FCR 3208 - Logical block protection;
FCR 3212 - LOAD ID for LTO HH V2 drives;
```

## 0.1.2 Second Edition, February 2013

The second edition of the *IBM System Storage LTO Tape Drive SCSI Reference* describes the SCSI interface for the IBM LTO 5 and LTO 6 tape drives.

The list of defects and changes applied to the first edition of the *IBM System Storage LTO Tape Drive SCSI Reference* to create this edition follow:

FCR 3178r5 - Update SkipSync for LTO6. See MP 30h[40h]: SkipSync - Device attribute settings (see 6.6.21.5.1 on page 407)

FCR 3182r2 - Dynamic Runtime Information clean-up. See <u>READ DYNAMIC RUNTIME ATTRIBUTE - D1h</u> (see 5.2.18 on page 117), <u>WRITE DYNAMIC RUNTIME ATTRIBUTE - D2h</u> (see 5.2.42 on page 188), and Dynamic runtime attributes (DRA) (see 6.1 on page 192)

FCR 3206 - Describe Units of measure used in this document

FCR 3227 - Make OIR saveable in MP 10h: Device Configuration (see 6.6.11 on page 371)

FCR 3229 - Deferred Check Condition (DCC) (see 4.16.3 on page 62)

FCR 3233, FCR 3233r1, FCR 3233r2 - LTO6 SCSI Identifier updates

FCR 3235 - Add IP B1h: Manufacturer-assigned Serial Number (see 6.3.10 on page 254)

FCR 3237, FCR 3237r1 - Add <u>READ BLOCK LIMITS maximum logical object identifier data (see 5.2.16.2 on page 112)</u>

FCR 3240 - Add Remaining Native Capacity to LP 17h: Volume Statistics (see 6.4.12 on page 299)

FCR 3241 - BOP caching (see 4.3.2 on page 32)

FCR 3242 - Add LTO6 Encryption Algorithm to <u>SPIN (20h[0010h]) - Data Encryption Capabilities page (see 6.8.2.3 on page 434)</u>

FCR 3244 - Add create FMR tape and update drive From FMR tape to <u>Supported Page 80h Diags (see 6.2.2 on page 212)</u>

FCR 3246 - Add OEM Specific Inquiry field

FCR 3248 - Add LTO6 Timeout values to the <u>Command timeouts descriptor (see 5.2.26.3 on page 146)</u> of the REPORT SUPPORTED OPERATION CODES command

FCR 3249 Ignore PS bit on MODE SELECT

FCR 3250 Add LOCATE to EOD

FCR 3251 - Encryption Sense Key changes (see Annex B.)

FCR 3253 Partition mode page partition size table mods

FCR 3256 Add standardized method for reading drive dumps

FCR 3257 Update LP31h for 4 partitions

FCR 3258 Tape Diagnostic Data - correct PARAMETER CODE field

Various corrections of editorial and functional documentation issues.

31999 - LTO SCSI Ref: ASC/ASCQ EE31 description should be "Key Unknown" (see Annex B.)

#### 0.1.3 Third Edition, 28 September 2015

The third edition of the *IBM System Storage LTO Tape Drive SCSI Reference* describes the SCSI interface for the IBM LTO tape drives from generation 5 and later. The primary purpose of this edition is to document the new LTO 7 drive.

The list of significant defects and changes applied to the second edition of the *IBM System Storage LTO Tape Drive SCSI Reference* to create this edition follow:

FCR 3260 - Cache Attributes for READ ATTRIBUTES

FCR 3268 - Add Potential Conflict List and Extended VHF data to LP 11h: DT Device Status (see 6.4.9 on page 270)

FCR 3271 - Download ucode additions

FCR 3273 - Add part number to standard inquiry

FCR 3282 - LTO7 SCSI Identifiers

FCR 3284 - READ LOGGED-IN HOST TABLE - A3h[1Fh][01h] (see 5.2.20 on page 125)

FCR 3285 - Add Encr Policy - Rqst Parms every reposition to Device Hardware Encryption (see 4.12 on page 50)

FCR 3286 - Add Read Buffer mode[1Ch] 11h: Mini dump (see 6.7.2.3.3 on page 424) and Diag - 0163h: Force Mini Dump (see 6.2.11 on page 221) FCR 3287 - Extend OEM field of Standard Inquiry FCR 3289 - Automation Device S/N VPD Page FCR 3292 - Additional params in LP3Eh FCR 3293 - READ END OF WRAP POSITION FCR 3297 - Unique Cartridge Identity (MAM 1001h) FCR 3299 - Add TA 31h Diminshed Native Capacity to Parameter Definitions (2Eh) (see 6.4.16.2 on page 314) FCR 3302 - Correct MP 1Ch: Informational Exceptions Control (see 6.6.17 on page 387) FCR 3308 - READ BUFFER non-volatile host buffer FCR 3309 - Add option to Disable BOP caching (see 4.3.2 on page 32) FCR 3310 - Describe Mode Page Behaviors (see 4.4 on page 33) that are non-standard FCR 3311 - Inquiry Allocation Length FCR 3314 - LTFS MAM parms 0820h & 0821h FCR 3316 - LTO7 increase counter sizes FCR 3317 - LTO7 LBP add support for CRC32C Various corrections of editorial and functional documentation issues. Added SPIN (00h[0002h]) - Security Compliance Information (see 6.8.1.3 on page 430) and SPIN (20h[0031h]) -Device Server Key Wrapping Public Key page (see 6.8.2.9 on page 449) during review

## **Contents**

	Page
0. Read This First	а
0.1 Summary of Changes	
0.1.1 First Edition, April 2011	
0.1.2 Second Edition, February 2013	
0.1.3 Third Edition, 28 September 2015	
1. Preface	1
1.1 Organization	
1.2 Related Publications	1
2. Definitions, symbols, abbreviations, and conventions	3
2.1 Definitions	
2.2 Conventions	
2.2.1 Radix representation	
2.2.2 Bit Numbering	
2.2.3 Units of measure for data storage	
2.2.4 Subpages	
2.2.5 ,Hyperlinks	
2.3 Tape Drive Model Names	17
3. Introduction	
3.1 Drive Overview	
3.2 Supported Servers and Operating Systems	
3.2.1 Primary Interface Attachment	
3.4 Supported Device Drivers	
3.5 Microcode Detection of Errors	
3.5.1 Fencing Behavior	
4. Implementation Considerations	24
4.1 Write modes	
4.1.1 Write mode introduction	
4.1.2 Overwrite-allowed mode	24
4.1.3 Append-only mode (also known as Data-safe mode)	24
4.2 Volume partitioning	
4.2.1 Volume partitioning overview	27
4.2.2 Wrap-wise Partitioning	
4.2.3 Partitioning and capacity scaling	
4.2.4 Partitioning and media types	
4.2.5 Partitioning and reformatting	
4.2.6 Partitioning and encryption	
4.3 Object buffer	
4.3.1 Object buffer introduction	
4.3.2 BOP caching	
4.3.2.1 BOP caching side effects	
4.4.1 Policy — non-standard	
4.4.1.1 Mode parameter header and block descriptor policy	
4.4.1.2 Mode page policy	
4.4.2 Classification of mode parameters	
4.4.2.1 Save behavior — non-standard	
4.4.2.2 Parameter Saveable behavior — non-standard	
4.4.3 Mode parameters and unit attentions	
4.5 Programmable early warning	

4.6 Logical block protection	
4.6.1 Logical block protection overview	
4.6.1.1 Logical block protection	
4.6.2 Protection information on a volume	
4.6.3 Logical blocks and protection information	
4.6.4 Protecting logical blocks transferred during writes	39
4.6.5 Protecting logical blocks processed during reads and verifies	
4.7 Multiple Port Behavior	
4.8 Data Transfer, Block Limits, and Fixed Block Option	
4.9 Request Sense Information, ILI, and Command Interactions	
4.9.1 General Read-Type Handling	
4.9.2 Interactions Summary	
4.10 Drive Cleaning	
4.10.1 Cleaning the Drive in a Library	
4.10.2 Drive Cleaning Indicators	
4.10.2.1 Panel Cleaning Indication	
4.10.2.2 Host Interface - Dynamic Cleaning Indicators	
4.10.2.3 Host Interface - Static Cleaning Indicator (Sense Data Byte 70)	
4.10.3 Cleaning Criteria	
4.11 WORM Behaviors	
4.11.1 Conditions for Writing	
4.11.2 Command Behavior When WORM Medium Has Been Tampered With	
4.12 Device Hardware Encryption	
4.12.1 Encryption Control - IBM Proprietary Protocol (IPP)	
4.12.2 Encryption Control - T10 Standards	
4.12.2.1 External Data Encryption Control	
4.13 Attachment Features	
4.13.1 Types of Interface Attachments	
4.13.2.1 Power-On	
4.13.2.2 Reset Strategy	
4.13.2.3 Abort Handling	
4.13.2.4 Multi-initiator Support	
4.13.2.5 Status Codes	
4.13.3 Features of the Fibre Channel Interface	
4.13.3.1 Topology	
4.13.3.1.1 Two-Node Switched Fabric Topology	
4.13.3.1.2 Two-Node Direct Connection Topology	
4.13.3.2 Speed	
4.13.3.3 Addressing Assignments	
4.13.4 Features of the Serial Attached SCSI (SAS) Interface	
4.14 Device Clocks	
4.15 Dynamic runtime information	
4.15.1 Dynamic runtime information overview	
4.15.2 Dynamic runtime information timestamp	
4.15.3 Setting dynamic runtime information into the drive	
4.15.4 Retrieving dynamic runtime information from the drive	
4.15.5 Management of dynamic runtime information	
4.15.5.1 Dynamic Runtime Information Lifetime	
4.16 Error Information	
4.16.1 Sense Data	
4.16.2 Sense Data Management	
4.16.3 Deferred Check Condition (DCC)	
4.16.4 Unit Attention Conditions	
4.16.5 Persistent Errors	
4.16.5.1 Fencing Behavior	
4 16 5 1 1 ALLOW NO OPERATION	63 63

	4.16.5.1.2 ALLOW_LOCATE	
	4.16.5.1.3 ALLOW_UNLOAD	
	4.16.5.1.4 MID-TAPE RECOVERY	
	4.16.5.1.4.1 Normal operation (i.e., MTR Fence)	64
	4.16.5.1.4.2 Panic Fence operation	64
4	l.17 Medium auxiliary memory	66
4	l.18 Volume Coherency	67
4	l.19 Error history (i.e., drive dump)	68
	4.19.1 Error history overview	
	4.19.2 Retrieving error history with the READ BUFFER command	68
4	1.20 Potential conflict list (LTO6 and later)	
5.	SCSI Commands	72
5	5.1 SCSI Commands Overview	72
	5.1.1 Unsupported SCSI Commands	72
	5.1.2 Supported SCSI Commands	
	5.1.2.1 Supported SCSI Commands on LUN 1	72
	5.1.2.2 Supported SCSI Commands on LUN 0	
	5.1.2.3 Control Byte Definition	
5	5.2 SCSI Commands Listing	
J	5.2.1 ALLOW OVERWRITE - 82h	
	5.2.2 ERASE - 19h	
	5.2.3 FORMAT MEDIUM - 04h	
	5.2.4 INQUIRY - 12h	
	5.2.4.1 Standard Inquiry Data	
	5.2.5 LOAD/UNLOAD - 1Bh	
	5.2.6 LOCATE(10/16) - 2Bh/92h	
	5.2.7 LOG SELECT - 4Ch	
	5.2.8 LOG SENSE - 4Dh	
	5.2.9 MODE SELECT (6/10) - 15h/55h	
	5.2.10 MODE SENSE (6/10) - 1Ah/5Ah	
	5.2.11 PERSISTENT RESERVE IN (PRIN)- 5Eh	
	5.2.11.1 READ KEYS service action	
	5.2.11.2 READ RESERVATION service action	
	5.2.11.3 REPORT CAPABILITIES service action	
	5.2.11.4 READ FULL STATUS service action	
	5.2.11.4.1 Full status descriptors	
	5.2.12 PERSISTENT RESERVE OUT - 5Fh	
	5.2.12.1 Basic PERSISTENT RESERVE OUT parameter list	
	5.2.12.2 PERSISTENT RESERVE OUT with REGISTER AND MOVE service action parameters	
	5.2.13 PREVENT ALLOW MEDIUM REMOVAL - 1Eh	
	5.2.13.1 Medium removal	
	5.2.14 READ - 08h	
	5.2.15 READ ATTRIBUTE - 8Ch	
	5.2.15.1 ATTRIBUTE VALUES service action	
	5.2.15.2 ATTRIBUTE LIST service action	
	5.2.15.3 LOGICAL VOLUME LIST service action	
	5.2.15.4 PARTITION LIST service action	
	5.2.15.5 SUPPORTED ATTRIBUTES service action	
	5.2.16 READ BLOCK LIMITS - 05h	
	5.2.16.1 READ BLOCK LIMITS block length data	
	5.2.16.2 READ BLOCK LIMITS maximum logical object identifier data	
	5.2.17 READ BUFFER - 3Ch	
	5.2.17.1 MODE[00h] – Combined header and data	
	5.2.17.2 MODE[02h] – Data	
	5.2.17.3 MODE[03h] – Descriptor	
	5.2.17.4 MODE[07h] – Descriptor with algorithmic offset boundary	
	[]	

5.2.17.5 MODE[0Ah] – Read data from echo buffer	115
5.2.17.6 MODE[0Bh] – Echo buffer descriptor	115
5.2.17.7 MODE[1Ch] – Error history	116
5.2.17.7.1 Error history overview	116
5.2.18 READ DYNAMIC RUNTIME ATTRIBUTE - D1h	117
5.2.18.1 READ DYNAMIC RUNTIME ATTRIBUTE Service Action	118
5.2.18.2 SUPPORTED ATTRIBUTES service action	118
5.2.18.3 ATTRIBUTE VALUES FOR THIS I_T NEXUS service action	119
5.2.18.4 ATTRIBUTE VALUES FOR ALL I_T NEXUSES service action	
5.2.19 READ END OF WRAP POSITION - A3h[1Fh][45h]	
5.2.19.1 REOWP Short form parameter data	
5.2.19.2 REOWP Long form parameter data	
5.2.19.2.1 Wrap descriptor	
5.2.20 READ LOGGED-IN HOST TABLE - A3h[1Fh][01h]	
5.2.20.1 READ LOGGED-IN HOST TABLE parameter data	
5.2.20.1.1 Logged-In Host Descriptor	
5.2.21 READ POSITION - 34h	
5.2.21.1 READ POSITION command description	
5.2.21.2 READ POSITION data format, short form	
5.2.21.3 READ POSITION data format, long form	
5.2.21.4 READ POSITION data format, extended form	
5.2.22 RECEIVE DIAGNOSTIC RESULTS - 1Ch	
5.2.23 RELEASE UNIT - 17h/57h	
5.2.24 REPORT DENSITY SUPPORT - 44h	
5.2.24.1 Report Density Support data format	
5.2.24.1.1 Density descriptor overview	
5.2.24.1.2 Density information	
5.2.25 REPORT LUNS - A0h	
5.2.25.1 Report LUNs data format	
5.2.26 REPORT SUPPORTED OPERATION CODES - A3h[0Ch]	
5.2.26.1 All_commands parameter data format	143
5.2.26.2 One_command parameter data format	
5.2.26.3 Command timeouts descriptor	
5.2.26.3.1 Overview	
5.2.26.3.2 WRITE BUFFER command timeouts descriptor command specific field usage	_
5.2.27 REPORT SUPPORTED TASK MANAGEMENT FUNCTIONS - A3h[0Dh]	
5.2.27.1 REPORT SUPPORTED TASK MANAGEMENT FUNCTIONS parameter data	
5.2.28 REPORT TIMESTAMP - A3h[0Fh]	
5.2.28.1 REPORT TIMESTAMP parameter data	
5.2.29 REQUEST SENSE - 03h	
5.2.29.1 Sense Data Format	
5.2.30 RESERVE - 16h/56h	
5.2.31 REWIND - 01h	
5.2.32 SECURITY PROTOCOL IN (SPIN) - A2h	168
5.2.33 SECURITY PROTOCOL OUT (SPOUT) - B5h	169
5.2.34 SEND DIAGNOSTIC - 1Dh	
5.2.35 SET CAPACITY - 0Bh	
5.2.36 SET TIMESTAMP - A4h[0Fh]	
5.2.36.1 SET TIMESTAMP Parameter List	
5.2.37 SPACE (6/16) - 11h/91h	
5.2.38 TEST UNIT READY - 00h	
5.2.39 VERIFY(6) - 13h	
5.2.40 WRITE - 0Ah	
5.2.41 WRITE ATTRIBUTE - 8Dh	
5.2.41 WRITE BUFFER - 3Bh	
5.2.41.1 MODE[00h] – Combined header and data	
5.2.41.2 MODE[02h] — Data	186

5.2.41.3 MODE[04h] - Download microcode and activate	186
5.2.41.4 MODE[05h] - Download microcode, save, and activate	
5.2.41.5 MODE[06h] - Download microcode with offsets and activate	
5.2.41.6 MODE[07h] - Download microcode with offsets, save, and activate	187
5.2.41.7 MODE[0Ah] – Write data to echo buffer	187
5.2.41.8 mode[0Dh] – Download microcode with offsets, select activation, save, a	and defer activate mode
5.2.41.9 mode[0Fh] – Activate deferred microcode mode	187
5.2.42 WRITE DYNAMIC RUNTIME ATTRIBUTE - D2h	
5.2.42.1 WRITE DYNAMIC RUNTIME ATTRIBUTE parameter list	188
5.2.43 WRITE FILEMARKS - 10h	190
6. Parameters for SCSI Commands	191
6.1 Dynamic runtime attributes (DRA)	192
6.1.1 Attribute format	192
6.1.2 Attribute identifier values	193
6.1.2.1 Attribute identifier values overview	193
6.1.2.2 Logical unit type attributes	193
6.1.2.2.1 I_T_L nexus identifying information descriptor	193
6.1.2.3 Target type attributes	198
6.1.2.4 Initiator type attributes	199
6.2 Diagnostic Parameters (Diag)	200
6.2.1 Diag Page Formats	200
6.2.1.1 Page 00h	
6.2.1.2 SendDiag Data - Page 00h	
6.2.1.3 RcvDiag Data - Page 00h	
6.2.1.4 Page 80h	
6.2.1.4.1 SendDiag - Page 80h	
6.2.1.5 RcvDiag - Page 80h	
6.2.1.5.1 RcvDiag - Page 80h Typical Results	
6.2.1.5.2 SIM/MIM Message	
6.2.1.5.2.1 SIM/MIM Header Data	
6.2.1.5.2.2 SIM Messages	
6.2.2 Supported Page 80h Diags	
6.2.3 Diag - SelfTest: Self Test	
6.2.3.1 SendDiag Command - Self Test	
6.2.3.2 RcvDiag Data - Self Test	213
6.2.4 Diag - 0090h: Primary port wrap test	
6.2.4.1 SendDiag Parm Data - Primary port wrap test	
6.2.4.2 RcvDiag Data - Primary port wrap test	
6.2.5 Diag - 0100h: POST A	
6.2.5.1 SendDiag Parm Data - POST A	
6.2.5.2 RcvDiag Data - POST A	
6.2.6 Diag - 0101h: POST B Performance	
6.2.6.1 SendDiag Parm Data - POST B Performance	
6.2.6.2 RcvDiag Data - POST B Performance	
6.2.7 Diag - 0102h: POST C Media Test	
6.2.7.1 SendDiag Parm Data - POST C Media Test	
6.2.7.2 RcvDiag Data - POST C Media Test	
6.2.8 Diag - 0103h: POST D Head Test	
6.2.8.1 SendDiag Parm Data - POST D Head Test	
6.2.8.2 RcvDiag Data - POST D Head Test	
6.2.9 Diag - 0160h: Force Dump	
6.2.9.1 SendDiag Parm Data - Force Dump	
6.2.9.2 RcvDiag Data - Force Dump	
6.2.10 Diag -016111. Write Dump to Cartridge	

6.2.10.2 RcvDiag Data - Write Dump to Cartridge	220
6.2.11 Diag - 0163h: Force Mini Dump	221
6.2.11.1 SendDiag Parm Data - Force Mini Dump	221
6.2.11.2 RcvDiag Data - Force Mini Dump	
6.2.12 Diag - 0170h: Create FMR Cartridge (not on LTO5)	
6.2.12.1 SendDiag Parm Data - Create FMR Cartridge	
6.2.12.2 RcvDiag Results Data - Create FMR Cartridge	
6.2.13 Diag - 0171h: Unmake FMR Cartridge (not on LTO5)	
6.2.13.1 SendDiag Parm Data - Unmake FMR Cartridge	
6.2.13.2 RcvDiag Results Data - Unmake FMR Cartridge	
6.2.14 Diag - 0175h: Use FMR Cartridge (not on LTO5)	
6.2.14.1 SendDiag Parm Data - Use FMR Cartridge	
6.2.14.2 RcvDiag Results Data - Use FMR Cartridge	
6.2.15 Diag - 0190h: Set Traps	
6.2.15.1 SendDiag Parm Data - Set Traps	
6.2.15.2 RcvDiag Data - Set Traps	
6.2.16 Diag - 0191h: Remove Traps	
6.2.16.1 SendDiag Parm Data - Remove Traps	
6.2.16.2 RcvDiag Data - Remove Traps	
6.2.17 Diag - 0210h: Terminate Immediate Command	
6.2.17.1 Send Data – Terminate Immed Command	
6.2.17.2 Results Data – Terminate Immed Command	
6.2.18 Diag - 1002h: Read Thermal Sensor	
6.2.18.1 SendDiag Parm Data - Read Thermal Sensor	
6.2.18.2 RcvDiag Data - Read Thermal Sensor	
6.2.19 Diag - 2002h: Reset Drive	232
6.2.19.1 SendDiag Parm Data - Reset Drive	232
6.2.19.2 RcvDiag Command - Reset Drive	232
6.3 Inquiry Vital Product Data Parameters (IP)	233
6.3.1 IP 00h: Supported Vital Product Data Pages	233
6.3.1.1 Returned Data - Inquiry Page 00h: Supported Inquiry Pages	
6.3.2 IP 03h: Firmware Designation	
6.3.2.1 Returned Data - IP 03h: Firmware Designation	
6.3.3 IP 80h: Unit Serial Number	
6.3.3.1 Returned Data - IP 80h: Unit Serial Number	
6.3.4 IP 83h: Device Identification	
6.3.4.1 Returned Data - Inquiry Page 83h: Device Identification	
6.3.4.1.1 T10 vendor ID designation descriptor	
6.3.4.1.2 Logical Unit (NAA) - WWNN designation descriptor	
6.3.4.1.3 Relative target port identifier designation descriptor	
6.3.4.1.4 Port Name (NAA) - WWPN designation descriptor	
6.3.4.1.5 Target Device Name (NAA) designation descriptor (SAS only)	
6.3.5 IP 86h: Extended INQUIRY Data	
6.3.6 IP 87h: Mode Page Policy	
6.3.6.1 Returned Data - IP 87h: Mode Page Policy	
6.3.6.1.1 Mode page policy descriptor	
6.3.7 IP 88h: SCSI ports	
6.3.7.1 Returned Data - IP 88h: SCSI ports	
6.3.8 IP 90h: Protocol-Specific Logical Unit Information	
6.3.8.1 Returned Data - IP 90h: SCSI ports	
6.3.8.2 Logical unit information descriptor	
6.3.9 IP B0h: Sequential-Access device capabilities	
6.3.9.1 Returned Data - IP B0h: Sequential-Access device capabilities	
6.3.10 IP B1h: Manufacturer-assigned Serial Number	
6.3.10.1 Returned Data - IP B1h: Manufacturer-assigned Serial Number	
6.3.11 IP B3h: Automation Device Serial Number	
6.3.11.1 Poturned Data - ID R3h: Automation Davice Serial Number	255

6.3.12 IP B4h: Data Transfer Device Element Address	
6.3.12.1 Returned Data - IP B4h: Data Transfer Device Element Address	
6.3.13 IP C0h: Drive Component Revision Levels	257
6.3.13.1 Returned Data - IP C0h: Drive Component Revision Levels	
6.3.14 IP C1h: Drive Serial Numbers	
6.3.14.1 Returned Data - IP C1h: Drive Serial Numbers	
6.3.15 IP C7h: Device Unique Configuration Data	
6.3.15.1 Returned Data - IP C7h: Device Unique Configuration Data	
6.3.16 IP C8h: Mode Parameter Default Settings	
6.3.16.1 Returned Data - IP C8h: Mode Parameter Default Settings	
6.4 Log Parameters (LP)	
6.4.1 Log Page Format	
6.4.2 Log Parameter Format	
6.4.2.1 Log Parameter Byte 2 — Control Byte	
6.4.3 General Log Parameter Reset Behavior	
6.4.4 LP 00h: Supported Log Pages	
6.4.4.1 Parameter Reset Behavior (00h)	
6.4.4.2 Parameter Definitions (00h)	
6.4.5 LP 02h: Write Error Counters	
6.4.5.1 Parameter Reset Behavior (02h)	
6.4.5.2 Parameter Definitions (02h)	
6.4.6.1 Parameter Reset Behavior (03h)	
6.4.6.2 Parameter Definitions (03h)	
6.4.7 LP 06h: Non-Medium Errors	
6.4.7.1 Parameter Reset Behavior (06h)	
6.4.7.2 Parameter Definitions (06h)	
6.4.8 LP 0Ch: Sequential-Access Device	
6.4.8.1 Parameter Reset Behavior (0Ch)	
6.4.8.2 Parameter Definitions (0Ch)	
6.4.9 LP 11h: DT Device Status	
6.4.9.1 Parameter Reset Behavior (11h)	
6.4.9.2 Parameter Definitions (11h)	
6.4.9.2.1 Very high frequency data log parameter	
6.4.9.2.2 Very high frequency polling delay log parameter	
6.4.9.2.3 Extended very high frequency data log parameter	
6.4.9.2.4 Primary port status log parameter(s)	
6.4.9.2.5 Fibre Channel port status data	278
6.4.9.2.6 Serial Attached SCSI port status data	280
6.4.9.2.7 Potential conflict list entries present log parameter	
6.4.9.2.8 Potential conflict list log parameter(s)	282
6.4.9.2.9 Medium VolSer	283
6.4.9.2.10 Medium Status Data	284
6.4.9.2.11 Drive Status Data	285
6.4.9.2.12 Primary Port Features	286
6.4.9.2.13 Encryption Control Descriptor	287
6.4.10 LP 14h: Device Statistics	
6.4.10.1 Parameter Reset Behavior (14h)	
6.4.10.2 Parameter Definitions (14h)	
6.4.10.3 Log parameter formats	
6.4.10.3.1 Device statistics data counter log parameter format	
6.4.10.3.2 Device statistics medium type log parameter format	
6.4.10.3.2.1 Device statistics medium type descriptor	
6.4.10.3.3 Device statistics string data log parameter format	
6.4.11 LP 16h: Tape diagnostic data	
6.4.11.1 Parameter Reset Behavior (16h)	
6 4 11 2 Parameter Definitions (16h)	295

6.4.12 LP 17h: Volume Statistics	
6.4.12.1 Parameter reset behavior	
6.4.12.2 Parameter Definitions	
6.4.12.3 Parameter formats	
6.4.12.3.1 Data counter log parameter format	304
6.4.12.3.2 Volume statistics string data log parameter format	
6.4.12.3.3 Volume statistics partition record log parameter format	
6.4.13 LP 18h: Protocol-specific port	
6.4.13.1 Parameter Reset Behavior (18h)	
6.4.13.2 Parameter Definitions (18h)	
6.4.14 LP 1A: Power Condition Transitions	
6.4.14.1 Parameter Reset Behavior (1Ah)	
6.4.14.2 Parameter Definitions (1Ah)	
6.4.15 LP 1Bh: Data Compression	
6.4.15.1 Parameter reset behavior	
6.4.15.2 Parameter Definitions	
6.4.15.3 Parameter format	
6.4.16 LP 2Eh: TapeAlerts	
6.4.16.1 Parameter Reset Behavior (2Eh)	
6.4.16.2 Parameter Definitions (2Eh)	
6.4.17 LP 30h: Tape Usage	
6.4.17.1 Parameter Reset Behavior (30h)	
6.4.17.2 Parameter Definitions (30h)	
6.4.18 LP 31h: Tape capacity	
6.4.18.1 Parameter Reset Behavior (31h)	
6.4.18.2 Parameter Definitions(31h)	
6.4.19 LP 32h: Data compression	
6.4.19.1 Parameter Reset Behavior (32h)	
6.4.19.2 Parameter Definitions (32h)	
6.4.20 LP 33h: Write Errors	
6.4.20.1 Parameter Reset Behavior (33h)	
6.4.20.2 Parameter Definitions (33h)	
6.4.21.1 Parameter Reset Behavior (34h)	
6.4.21.2 Parameter Definitions (34h)	
6.4.22 LP 37h: Performance Characteristics	
6.4.22 LP 3711. Performance Characteristics 6.4.22.1 Parameter Reset Behavior (37h)	
6.4.22.2 Parameter Definitions (37h)	
6.4.23 LP 38h: Blocks/Bytes Transferred	
6.4.23.1 Parameter Reset Behavior (38h)	
6.4.23.2 Parameter Definitions (38h)	
6.4.24 LP 39h: Host Port 0 Interface Errors	
6.4.24.1 Parameter Reset Behavior (39h)	
6.4.24.2 Parameter Definitions (39h)	
6.4.25 LP 3Ah: Drive control verification	
6.4.26 LP 3Bh: Host Port 1 Interface Errors	
6.4.26.1 Parameter Reset Behavior (3Bh)	
6.4.26.2 Parameter Definitions (3Bh)	
6.4.27 LP 3Ch: Drive usage information	
6.4.27.1 Parameter Reset Behavior (3Ch)	
6.4.27.2 Parameter Definitions (3Ch)	
6.4.28 LP 3Dh: Subsystem Statistics	
6.4.28.1 Parameter Reset Behavior (3Dh)	
6.4.28.2 Parameter Definitions (3Dh)	
6.4.29 LP 3Eh: Engineering Use	
6.4.30 LP 3Eh[3Ch]: Drive Control Statistics	
S 5 Medium auxiliary memory attributes (MAM)	347

6.5.1 MAM attribute format	
6.5.2 Attribute identifier values	348
6.5.2.1 Attribute identifier values overview	348
6.5.2.2 Device type attributes	348
6.5.2.3 Medium type attributes	351
6.5.2.4 Host type attributes	352
6.5.2.5 Vendor-Specific Medium Type Attributes	
6.6 Mode Parameters (MP)	
6.6.1 Mode Parameter List for Mode Select (6/10)	356
6.6.1.1 Mode Parameter Header for Mode Select (6/10)	356
6.6.1.2 Block Descriptor for Mode Select (6/10)	
6.6.2 Mode Parameter List for Mode Sense (6/10)	
6.6.2.1 Mode Parameter Header for Mode Sense (6/10)	
6.6.2.2 Block Descriptor for Mode Sense (6/10)	
6.6.3 Mode Page Format	
6.6.4 Supported Mode Pages	
6.6.5 MP 01h: Read-Write Error Recovery	
6.6.6 MP 02h: Disconnect-Reconnect	
6.6.7 MP 0Ah: Control	
6.6.8 MP 0Ah[01h]: Control Extension	
6.6.9 MP 0Ah[F0h]: Control Data Protection	
6.6.10 MP 0Fh: Data Compression	
6.6.11 MP 10h: Device Configuration	
6.6.12 MP 10h[01h]: Device Configuration Extension	
6.6.14 MP 18h: Protocol-Specific Logical Unit	
6.6.14.1 MP 18h: Fibre Channel Logical Unit	
6.6.14.2 MP 18h: SAS Logical Unit	
6.6.15 MP 19h: Protocol specific port	
6.6.15.1 MP 19h: FCP port	
6.6.15.2 MP 19h: SAS port	
6.6.16 MP 1Ah: Power Condition	
6.6.17 MP 1Ch: Informational Exceptions Control	
6.6.18 MP 1Dh: Medium Configuration	
6.6.19 MP 24h: Vendor-Specific	
6.6.20 MP 2Fh: Behavior Configuration	
6.6.21 MP 30h: Device Attribute Settings	
6.6.21.1 MP 30h: Directory Listing - Device Attribute Settings	
6.6.21.2 Supported subpage list - Device Attribute Settings	
6.6.21.3 MP 30h[01h-02h]: Ethernet attributes - Device attribute settings	
6.6.21.3.1 Ethernet attributes overview	
6.6.21.3.1.1 Ethernet socket address descriptor	
6.6.21.3.1.1.1 Sockaddr for an IPv4 IP address	
6.6.21.3.1.1.2 Sockaddr for an IPv6 address	
6.6.21.3.2 MP 30h[01h]: Drive MAC address - Device attribute settings	
6.6.21.3.3 MP 30h[02h]: Drive IP address and subnet mask - Device attribute settings	403
6.6.21.4 MP 30h[20h-(20h)]: Encryption Attributes - Device Attribute Settings	
6.6.21.4.1 MP 30h[20h]: Encryption mode - Device Attribute Settings	
6.6.21.5 MP 30h[40h-43h]: Data processing attributes - Device attribute settings	
6.6.21.5.1 MP 30h[40h]: SkipSync - Device attribute settings	
6.6.21.5.2 MP 30h[42h]: End of partition behavior control - Device attribute settings	
6.6.21.5.3 MP 30h[43h]: Feature switches - Device attribute settings	
6.6.22 MP 3Eh: Engineering Support	
6.7 Read/Write Buffers (RB)	
6.7.1 Supported Buffers when the mode field is 00h through 07h, 0Dh, or 0Fh	413
6.7.1.1 RB 06h: Error Log (aka. Engineering Log)	414
6.7.1.2 RB 07h: SCSI Log (aka Error log)	415

6.7.1.3 RB 08h: World Wide Name	415
6.7.1.4 RB 19h: Host non-volatile	416
6.7.1.5 RB 21h: Cartridge Memory from EOD dataset	416
6.7.1.6 RB 50h: Active IP addresses	
6.7.1.6.1 Active IP addresses fixed buffer (LTO5 only)	
6.7.1.6.2 Active IP addresses variable buffer (LTO6 and later)	
6.7.2 Supported Buffers when the mode field is 1Ch	
6.7.2.1 MODE[1Ch] 00h to 03h: Error history directory	
6.7.2.2 Error history directory entry	
6.7.2.3 MODE[1Ch] 10h to FEh: Error history data buffer	
6.7.2.3.1 MODE[1Ch] 10h to FEh: Error history data buffer overview	
6.7.2.3.2 MODE[1Ch] 10h: Current error history snapshot	
6.7.2.3.3 mode[1Ch] 11h: Mini dump	
6.7.2.3.5 MODE[1Ch] 21h to 28h: Prioritized flash dump	
6.7.2.3.6.1 Error history names entry	
6.7.2.4 MODE[1Ch] FEh: Clear error history I_T_L nexus	
6.7.2.5 MODE[1Ch] FFh: Clear error history I_T_L nexus and release snapshot	
6.8 Security Protocol Parameters (SPP)	
6.8.1 SPIN Pages (00h - Security Protocol Information)	
6.8.1.1 SPIN (00h[0000h]) - Supported Security Protocols List	
6.8.1.2 SPIN (00h[0001h]) - Certificate Data	
6.8.1.3 SPIN (00h[0002h]) - Security Compliance Information	
6.8.2 SPIN Pages (20h - Tape Data Encryption)	
6.8.2.1 SPIN (20h[0000h]) - Tape Data Encryption In Support Pages page	
6.8.2.2 SPIN (20h[0001h]) - Tape Data Encryption Out Support Pages page	
6.8.2.3 SPIN (20h[0010h]) - Data Encryption Capabilities page	434
6.8.2.3.1 Data Encryption Algorithm Descriptor - Standard Encryption	435
6.8.2.4 SPIN (20h[0011h]) - Supported Key Formats page	
6.8.2.4.1 Plaintext Key Format (00h)	
6.8.2.5 SPIN (20h[0012h]) - Data Encryption Management Capabilities	
6.8.2.6 SPIN (20h[0020h]) - Data Encryption Status page	
6.8.2.7 SPIN (20h[0021h]) - Next Block Encryption Status page	
6.8.2.7.1 Key-Associated Data (KAD) Descriptors	
6.8.2.8 SPIN (20h[0030h]) - Random Number page	
6.8.2.9 SPIN (20h[0031h]) - Device Server Key Wrapping Public Key page	
6.8.3 SPOUT Pages (20h - Tape Data Encryption security protocol)	
6.8.3.1 SPOUT (20h[0010h]) - Set Data Encryption	
6.8.3.2 Key-Associated Data (KAD) Descriptors	
6.8.3.2.2 KAD 0011 - OKAD (Onathernicated KAD) / DKi (Data Key Identifier)	
6.8.3.2.3 KAD 0111 - ARAD (Additionalizated RAD) / DRI (Data Rey Identifier)	
6.8.3.2.4 KAD 03h - MKAD (Metadata)	
0.0.3.2.4 TVID 0011 WIVID (Wictadata)	
Annex A. Summary of Drive Generation Differences	458
A.1. Differences in Command Timeout Values	
A.2. Command and Parameter Differences Between Generations	
Annex B. Error Sense Information	466
B.1. Sense Key 0 (No Sense)	
B.2. Sense Key 1 (Recovered Error)	
B.3. Sense Key 2 (Not Ready)	
B.4. Sense Key 3 (Medium Error)	
B.5. Sense Key 4 (Hardware Error)	
B.6. Sense Key 5 (Illegal Request)	
R.7. Sensa Kay 6 (Unit Attention)	172

B.8. Sense Key 7 (Data Protect)	475
B.9. Sense Key 8 (Blank Check)	476
B.10. Sense Key B (Aborted Command)	
B.11. Sense Key D (Volume Overflow)	
Annex C. Firmware Download	479
C.1. Identifying Level Hardware of Drive	479
C.2. Identifying the product for which the firmware image is intended	
C.3. Download Process	
Annex D. Protection Information CRC's	484
D.1. Reed-Solomon CRC	
D.1.1. Reed-Solomon CRC Algorithm	
D.1.2. Sample C program to generate Reed-Solomon CRC	
D.1.3. Sample C program to compute and append Reed-Solomon CRC to a data block	
D.1.4. Sample C program to to verify block with Reed-Solomon CRC	
D.2. CRC32C (Castagnoli)	
D.2.1. CRC32C Algorithm	
D.2.2. Sample C program to generate CRC32C (Castagnoli)	
D.2.3. Sample C code to compute and append CRC32C to a data block	
D.2.4. Sample C code to verify block with CRC32C CRC	
D.3. CRC32-IEEE	
D.3.1. CRC32-IEEE Algorithm	
Annex E. Notices	490
E.1. Trademarks	

## **Tables**

	Page
1 Comparison of binary and decimal units and values	
2 Percentage difference between binary and decimal units	
3 Features of the IBM Ultrium Tape Drives and the IBM 3580 Ultrium Tape Drive	
4 Supported Servers and Operating Systems for Primary Interface Attachment	
5 IBM LTO Ultrium Tape Drive Support of LTO Cartridges	
6 allow_overwrite variable definition	25
7 Partition sizes for wrap-wise partitioning (selection fields)	
8 Partition sizes for wrap-wise partitioning (resultant sizes)	
9 Partition values by density and media type	
10 Mode page policy	
11 Mode parameter change behavior	
12 Logical block with no protection information	
13 Logical block with protection information	
14 Information and ILI Behavior Summary	
15 ASC/ASCQ Codes Related to Cleaning	
16 Drive Cleaning Criteria to assert Clean Requested	48
17 Behavior when the loaded medium has suspect integrity	
18 Abort Condition Handling	
19 Status Codes	
20 Topologies through which this device's port(s) can operate	
21 TIMESTAMP ORIGIN	
22 TIMESTAMP Format	
23 Types of DRA attributes	
24 DRA attribute states	
25 Error to Fence State mapping	
26 Types of MAM attributes	
27 MAM attribute states	
28 Supported Common SCSI Commands	
29 Control Byte Definition	
30 ALLOW OVERWRITE CDB	
32 ERASE CDB	
33 FORMAT MEDIUM CDB	
33 FORMAT MEDIUM CDB	
35 INQUIRY CDB	
36 Standard INQUIRY data valid LUN format	
37 eServer attachment Standard Inquiry Data Valid LUN	
38 Standard Inquiry Product Identification Table	
39 Standard Inquiry protocol identifier values	
40 Standard Inquiry SAS maximum speed supported values	
41 Standard Inquiry Fibre Channel maximum speed supported values	
42 Standard Inquiry fips field values	
43 LOAD/UNLOAD CDB	
44 LOAD/UNLOAD actions depending on Load and Hold bit settings and medium position	
45 LOCATE(10) CDB	
46 LOCATE(16) CDB	
47 LOG SELECT CDB	
48 LOG SENSE CDB	
49 MODE SELECT(6) CDB	
50 MODE SELECT(10) CDB	
51 MODE SENSE(6) CDB	
52 MODE SENSE(10) CDB	
53 PERSISTENT RESERVE IN CDB	
54 PERSISTENT RESERVE IN parameter data for READ KEYS	
55 PERSISTENT RESERVE IN parameter data for READ RESERVATION	

56 PERSISTENT RESERVE IN parameter data for REPORT CAPABILITIES	. 99
57 PERSISTENT RESERVE IN parameter data for READ FULL STATUS	100
58 PERSISTENT RESERVE IN full status descriptor format	
59 PERSISTENT RESERVE OUT CDB	
60 PERSISTENT RESERVE OUT parameter list	103
61 PERSISTENT RESERVE OUT with REGISTER AND MOVE service action parameter list	104
62 PREVENT ALLOW MEDIUM REMOVAL CDB	105
63 READ CDB	
64 READ ATTRIBUTE CDB	
65 READ ATTRIBUTE with ATTRIBUTE VALUES service action parameter list format	
66 READ ATTRIBUTE with ATTRIBUTE LIST service action parameter list format	
67 READ ATTRIBUTE with LOGICAL VOLUME LIST service action parameter list format	
68 READ ATTRIBUTE with PARTITION LIST service action parameter list format	
69 READ ATTRIBUTE with SUPPORTED ATTRIBUTES service action parameter list format	
70 READ BLOCK LIMITS CDB	111
72 READ BLOCK LIMITS maximum logical object identifier data	
73 READ BUFFER CDB	
74 READ BUFFER header	
75 READ BUFFER descriptor	
76 Echo buffer descriptor	116
77 READ DYNAMIC RUNTIME ATTRIBUTE CDB	
78 READ DYNAMIC RUNTIME ATTRIBUTE Service Action codes	118
79 READ DYNAMIC RUNTIME ATTRIBUTE with SUPPORTED ATTRIBUTES service action parameter list f	or-
mat	119
80 READ DYNAMIC RUNTIME ATTRIBUTE with ATTRIBUTE VALUES FOR THIS I_T NEXUS service action	ра-
rameter list format	120
81 READ DYNAMIC RUNTIME ATTRIBUTE with ATTRIBUTE VALUES FOR ALL I_T NEXUSES service acti	ion
parameter list format	121
82 READ END OF WRAP POSTITION CDB	
83 REOWP short form parameter data format	
84 REOWP long form parameter data format	
85 REOWP Wrap descriptor format	
86 READ LOGGED-IN HOST TABLE CDB	125
87 READ LOGGED-IN HOST TABLE parameter data format	
88 Logged-In Host Descriptor format	126
89 READ POSITION CDB	
90 READ POSITION CDB	
91 READ POSITION data format, long form	
92 READ POSITION data format, extended form	
93 RECEIVE DIAGNOSTIC RESULTS CDB	
94 RELEASE UNIT (6) CDB	
95 RELEASE UNIT (10) CDB	
96 REPORT DENSITY SUPPORT CDB	
97 REPORT DENSITY SUPPORT data format	
98 Density support data block descriptor format	
99 RDEN Density information	
100 REPORT LUNS CDB	
101 RLUNS Logical Unit Numbers Data	140
102 REPORT SUPPORTED OPERATION CODES CDB	142
103 REPORT SUPPORTED OPERATION CODES reporting options field	143
104 RSOC All_commands parameter data	
105 RSOC Command descriptor format	
106 RSOC One_command parameter data	
107 RSOC One_command support values	
108 RSOC Command timeouts descriptor format	
109 RSOC Command timeouts descriptor command specific field usage	
·	

110 RSOC Command timeout values for Full-Height (at publication)	
111 RSOC Command timeout values for Full-Height (at publication) not returned to command	150
112 RSOC Command timeout values for Half-Height (at publication)	150
113 RSOC Command timeout values for Half-Height (at publication) not returned to command	152
114 REPORT SUPPORTED TASK MANAGEMENT FUNCTIONS CDB	
115 REPORT SUPPORTED TASK MANAGEMENT FUNCTIONS parameter data	
116 REPORT TIMESTAMP CDB	
117 REPORT TIMESTAMP Timestamp Descriptor	
118 REQUEST SENSE CDB	
119 REQUEST SENSE Sense Data Format	
120 RESERVE(6) CDB	
121 RESERVE(10) CDB	
122 REWIND CDB	167
123 SECURITY PROTOCOL IN - A2h CDB	
124 SECURITY PROTOCOL OUT B5h CDB	
125 SEND DIAGNOSTIC CDB	
126 SET CAPACITY CDB	
127 SET CAPACITY MEDIUM FOR USE PROPORTION VALUE and resultant capacity	
128 SET TIMESTAMP CDB	
129 SET TIMESTAMP parameter list format	
130 SPACE (6) CDB	
131 SPACE(16) CDB	
132 TEST UNIT READY CDB	
133 VERIFY(6) CDB	
134 WRITE CDB	
135 WRITE ATTRIBUTE CDB	
136 WRITE ATTRIBUTE parameter list format	
137 WRITE BUFFER CDB	
138 WRITE DYNAMIC RUNTIME ATTRIBUTE CDB	
139 WRITE DYNAMIC RUNTIME ATTRIBUTE parameter list	
140 WRITE FILEMARKS CDB	190
141 DRA ATTRIBUTE format	
142 DRA attribute FORMAT field	
143 DRA attribute identifier range assignments	
144 DRA Logical unit type attributes	
145 DRA I_T_L nexus identifying information format	
146 Reservation Information Dynamic Runtime Attribute value format	
147 DRA RESERVATION TYPE values	
148 Registration Information Dynamic Runtime Attribute value format	
149 Prevent Allow Medium Removal Information Dynamic Runtime Attribute value format	
150 DRA Target type attributes	
151 DRA Last access time format	
152 DRA Initiator type attributes	
153 SendDiag - Page 00h Parm Data	
154 RcvDiag - Page 00h Parm Data	
155 SendDiag - Page 80h Parm Data	
156 RcvDiag Data - Page 80h Results	
157 RcvDiag Data - Page 80h Results	
158 Diag SIM Data Structure	
159 Diag SIM Data Structure	
160 Diag MIM Data Structure	
161 Supported Page 80 Diag Routines	
162 SendDiag CDB - Self Test	
163 Primary Port Wrap Test SendDiag Parm Data	
164 SendDiag Parm Data - POST A	
165 SendDiag Parm Data - POST B	
166 SendDiag Parm Data - POST C Media Test	
·	

167 SendDiag Parm Data - POST D Head Test	218
168 SendDiag Parm Data - Force Dump	219
169 SendDiag Parm Data - Write Dump to Cartridge	220
170 SendDiag Parm Data - Force Mini Dump	221
171 Send Diagnostic Parameter Data - Create FMR Cartridge	222
172 Send Diagnostic Parameter Data - Unmake FMR Cartridge	223
173 Send Diagnostic Parameter Data - Use FMR Cartridge	224
174 SendDiag Parm Data - Set Traps	225
175 SendDiag Parm Data - Remove Traps	226
176 RcvDiag Data - Remove Traps	227
177 Send Data – (Diag 0210h) Terminate Immed Command	228
178 Supported Commands in the Terminate Immediate Command diagnostic	229
179 Diag parameter data - Read Thermal Sensor	230
180 Receive Diag parameter data - Read Thermal Sensor	231
181 SendDiag Parm Data - Reset Drive	232
182 IP 00h Supported Vital Product Data Inquiry Page	233
183 IP 03h Firmware Designation Page	235
184 IP 80h Unit Serial Number Inquiry Page	237
185 IP 83h Device Identification VPD page	238
186 T10 vendor ID based designation descriptor of IP 83h	239
187 Logical Unit (NAA) - WWNN designation descriptor of IP 83h	240
188 Relative target port identifier designation descriptor of IP 83h	241
189 Port Name (NAA) - WWPN designation descriptor of IP 83h	242
190 Target Device Name (NAA) designation descriptor of IP 83h (SAS only)	242
191 IP 86h Extended INQUIRY Data VPD page	244
192 IP 87h Mode Page Policy page	247
193 Mode page policy descriptor of IP 87h	
194 IP 88h SCSI Ports VPD page	249
195 SCSI port designation descriptor of IP 88h	
196 Target port descriptor of IP 88h	250
197 IP 90h Protocol-Specific Logical Unit Information VPD page for SAS SSP	251
198 Logical unit information descriptor for SAS SSP of IP 90h	252
199 IP B0hSequential-Access Device Capabilities Page	253
201 IP B3h Automation Device Serial Number VPD page	255
202 IP 84h Data Transfer Device Element Address VPD page	
203 IP C0h: Drive Component Revision Levels	
204 PLATFORM definition of IP C0h	
205 IP C1h: Drive Serial Numbers	259
206 Log page format	
207 Log Parameter Format	
208 LP 02h: Write Error Log Parameters	
209 LP 03h: Read Error Log Parameters	
210 LP 06h: Non-Medium Errors log parameter codes	
211 LP 0Ch: Sequential-Access Device log parameters	
212 LP 11h: DT Device Status log page	
213 DT Device Status log parameters of LP 11h	
214 Very high frequency data log parameter format of LP 11h	
215 VHF data descriptor	
216 Very high frequency polling delay log parameter format of LP 11h	
218 Primary port status log parameter(s) format of LP 11h	
219 Fibre Channel port status data format of LP 11h	
220 Serial Attached SCSI port status data format of LP 11h	
221 NEGOTIATED PHYSICAL LINK RATE values	
222 Potential conflict list entries present log parameter of LP 11h	
223 Potential conflict list log parameter of LP 11h	
224 Medium Volume Label Serial Number log parameter of LP 11h	
225 Medium Volume Label Serial Number log parameter of LP 11h	284

226	Medium Volume Label Serial Number log parameter of LP 11h	285
227	Primary Port Features log parameter of LP 11h	286
	Encryption Control Descriptor log parameter of LP 11h	
	LP 14h: Device Statistics log parameter codes	
	Device statistics data counter log parameter format of LP 14h	
	Device statistics medium type log parameter format of LP 14h	
	Device statistics medium type descriptor format	
	Device statistics string data log parameter format of LP 14h	
	LP 16h: Tape diagnostic data log page format	
	Tape diagnostic data log parameter format of LP 16h	
	Volume Statistics log subpage codes of LP 17h	
	LP 17h: Volume statistics log parameters	
	Volume statistics data counter log parameter format of LP 17h	
	Volume statistics string data log parameter format of LP 17h	
	Volume statistics partition log parameter format of LP 17h	
	Volume statistics partition record descriptor format of LP 17h	
	LP 18h Protocol-Specific log page for SAS	
	Protocol-Specific Port log parameter for LP 18h for SAS	
243	Parameter control byte in the Protocol-Specific Port log parameter for LP 18h for SAS	308
	attached device type field of LP 18h	
	Parameter codes for the Power Condition Transitions log page LP 1Ah	
	LP 1Bh: Data compression log parameters	
	Data compression counter log parameter format of LP 1Bh	
	LP 2Eh Supported TapeAlerts	
	LP 30h: Tape Usage log parameter codes	
	LP 31h: Tape capacity log parameters	
	LP 32h: Data Compression Log Parameters	
	LP 33h: Write Errors log parameter codes	
	LP 34h: Read Error Counters log parameter codes	
	LP 37h: Performance Characteristics: Quality Summary	
	LP 37h: Performance Characteristics: Device Usage	
	LP 37h: Performance Characteristics: Host Commands	
	LP 37h: Performance Characteristics: Host Recovery (by port)	
	LP 37h: Performance Characteristics: Mode Phase Timing Windows	
	LP 37h: Performance Characteristics: Servo Speed Characteristics	
	LP 37h: Performance Characteristics: Static Capacity	
	LP 37h: Performance Characteristics: Active Capacity	
	LP 37h: Performance Characteristics: Static Capacity per Partition	
	LP 38h: Blocks/Bytes Transferred log parameter codes	
	LP 39h: Host Port Interface Errors log parameter codes	
	LP 3Ch: Drive usage information log parameters	
	LP 3Dh: Subsystem Statistics log parameter codes	
	MAM ATTRIBUTE format	
	MAM attribute format field	
	MAM attribute identifier range assignments	
	MAM Device type attributes	
	DEVICE VENDOR/SERIAL NUMBER MAM attribute format	
	MAM Medium type attributes	
	MEDIUM TYPE and MEDIUM TYPE INFORMATION MAM attributes	
276	MAM Host type attributes	352
	TEXT LOCALIZATION IDENTIFIER MAM attribute values	
	MAM Vendor-Specific Medium Type Attributes	
	Mode Parameter List for Mode Select (6)	
	Mode Parameter List for Mode Select (10)	
	Mode Parameter Header for Mode Select (6)	
283	Mode Parameter Header for Mode Select (10)	357

284 Block Descriptor for Mode Select	358
285 Mode Parameter List for Mode Sense (6)	359
286 Mode Parameter List for Mode Sense (10)	360
287 Mode Parameter Header for Mode Sense (6)	360
288 Mode Parameter Header for Mode Sense (10)	360
289 Block Descriptor for Mode Sense (10) or Mode Sense (6)	361
290 Mode Page Format	
291 Mode Page Subpage Format	
292 MP 01h Read-Write Error Recovery mode page	
293 MP 02h Disconnect-Reconnect mode page	
294 MP 0Ah Control mode page	
295 MP 0Ah[01h] Control Extension mode page	
296 MP 0Ah[F0h] Control Data Protection mode page format	
297 MP 0Fh Data Compression mode page	
298 MP 10h Device Configuration mode page	
299 MP 10h[01h] Device Configuration Extension mode page	
300 vcelbre behavior related to encryption modes of MP 10h[01h]	
301 MP 11h Medium Partition mode page	
302 MP 18h Fibre Channel Logical Unit mode page	
303 MP 18h SAS Logical Unit mode page	
304 MP 19h Fibre Channel Port mode page	
305 MP 19h SAS Port mode page	
306 MP 1Ah: Power Condition mode page format	
307 MP 1Ch Informational Exceptions Control mode page	
308 MP 1Dh Medium Configuration mode page	
309 Vendor-Specific mode page	
310 MP 2Fh Behavior Configuration Mode Page	
311 MP 30h: Directory Listing - Device Attribute Settings mode page format	
312 Ethernet socket address descriptor	
313 Sockaddr format for IPv4	
314 Sockaddr format for IPv6	
315 MP 30h[01h] Drive MAC address	
316 Drive port MAC address descriptor of MP 30h[01h]	
317 MP 30h[02h] Drive IP address and subnet mask subpage	
318 Drive Ethernet port descriptor of MP 30h[02h]	
319 MP 30h[20h] Encryption mode mode page	
320 Expected Encryption settings of MP 30h[20h]	
321 MP 30h[40h] SkipSync - Device attribute settings mode page format	
322 MP 30h[42h] End of partition behavior control - Device attribute settings mode page format	
323 MP 30h[43h] Feature switches - Device attribute settings mode page format	
324 MP 3Eh: Engineering Support mode page	
325 Supported Buffer IDs	
326 Error Log Buffer (06h)	
327 SCSI Log Buffer (07h)	
328 World Wide Name Buffer (08h)	415
329 Active IP addresses fixed buffer format (50h)	417
330 Active IP addresses variable buffer format (50h)	/18
331 Ethernet port variable descriptor format	
332 Error history buffer id field	
333 Summary of error history directory device actions	
334 Error history directory	
335 Error history directory entry	
337 Error history names entry	
339 SPIN (00h[0000h]) Supported Security Protocols List Structure	
340 OF IN TOURIOUS THIS CERTIFICATE DATA STRUCTURE	429

341 SPIN (0	00h[0002h]) - Security Compliance Information Structure	430
342 SPIN (2	20h[0000h]) - Tape Data Encryption In Support Pages Structure	432
343 SPIN (2	20h[0000h]) - Tape Data Encryption In page codes (SECURITY PROTOCOL SPECIFIC VALUES)	432
344 SPIN (2	20h[0001h]) - Tape Data Encryption Out Support Pages Structure	433
345 Tape D	ata Encryption Out page codes	433
346 SPIN (2	20h[0010h]) - Data Encryption Capabilities page	434
347 Data E	ncryption Algorithm descriptor list returned	435
348 Data E	ncryption Algorithm Descriptor - Standard Encryption Structure	435
349 SPIN (2	20h[0011h]) - Supported Key Formats page Structure	439
350 Suppor	ted Key Formats	439
351 KEY FO	DRMAT 00h - Plaintext Key Format Structure	439
352 SPIN (2	20h[0012h]) - Data Encryption Management Capabilities page	440
353 SPIN (2	20h[0020h]) - Data Encryption Status page	441
354 parame	ters control field	442
355 SPIN (2	20h[0021h]) - Next Block Encryption Status page	444
	ssion status field	
357 encrypt	ion status field	445
358 SPIN (2	20h[0021h]) - KAD Parameters by Mode	446
	20h[0030h]) Random Number page	
360 SPIN (2	20h[0031h]) Device Server Key Wrapping Public Key page	449
361 SPOUT	(20h) - Security Protocol Specific Definitions for Security Protocol 20h	450
	(20h[0010h]) - Set Data Encryption page	
363 SPOUT	(20h[0010h]) - KAD Parameters by Mode	453
	h - AKAD (Authenticated KAD) / DKi (Data Key Identifier)	
366 KAD 02	Ph - Nonce	455
367 KAD 03	Sh - MKAD (Metadata)	456
368 Feature	es of the IBM Ultrium Tape Drives and the IBM 3580 Ultrium Tape Drive	459
	and Timeout Values (Ultrium 1, 2, and 3 Full-Height) - Alphabetic Sort	
370 Comma	and Timeout Values (Ultrium 3 Half-Height and Ultrium 4) - Alphabetic Sort	463
A.1 Comma	nd and Parameter differences between generations	465
371 ASC, a	nd ASCQ Summary for Sense Key 0 (No Sense)	466
372 ASC, a	nd ASCQ Summary for Sense Key 1 (Recovered Error)	467
	nd ASCQ Summary for Sense Key 2 (Not Ready)	
374 ASC, a	nd ASCQ Summary for Sense Key 3 (Medium Error)	469
	nd ASCQ Summary for Sense Key 4 (Hardware Error)	
	nd ASCQ Summary for Sense Key 5 (Illegal Request)	
	nd ASCQ Summary for Sense Key 6 (Unit Attention)	
378 ASC, a	nd ASCQ Summary for Sense Key 7 (Data Protect)	475
	nd ASCQ Summary for Sense Key 8 (Blank Check)	
380 ASC, a	nd ASCQ Summary for Sense Key B (Aborted Command)	477
	nd ASCQ Summary for Sense Key D (Volume Overflow)	
382 Load ID	and RU Name Designation for LTO2	479
	and RU Name Designation for LTO3	
384 Load ID	and RU Name Designation for LTO4	480
385 Load ID	and RU Name Designation for LTO5	481
386 Load ID	and RU Name Designation for LTO6	481
387 Load ID	and RU Name Designation for LTO7	482
388 Firmwa	re Image	482

## **Figures**

	Page
Figure 1 — IBM System Storage Ultrium Tape Drive Models	18
Figure 2 — Append-only mode flowchart	26
Figure 3 — Wrap-wise partitioning	27
Figure 4 — Programmable early warning example	
Figure 5 — Protection information shown in relation to logical objects and format specific symb	
Figure 6 — Dynamic runtime attributes focus	60

xix IBM LTO SCSI Reference

#### 1. Preface

This publication contains information about how to use and program LTO5 models of the IBM® LTO Ultrium Tape Drive.

## 1.1 Organization

The information in this book is organized as follows:

Read This First (see clause 0. beginning on page a)

"Contents" (see page i)

"Tables" (see page xii)

"Figures" (see page xix)

Preface (see clause 1. beginning on page 1)

Definitions, symbols, abbreviations, and conventions (see clause 2. beginning on page 3)

Introduction (see clause 3. beginning on page 18)

Implementation Considerations (see clause 4. beginning on page 24)

SCSI Commands (see clause 5. beginning on page 72)

Parameters for SCSI Commands (see clause 6. beginning on page 191)

Summary of Drive Generation Differences (see Annex A. on page 458)

Error Sense Information (see Annex B. on page 466)

Firmware Download (see Annex C. on page 479)

Protection Information CRC's (see Annex D. on page 484)

Notices (see Annex E. on page 490)

"Index Of Counters (log parameters not in counter format are not included)" (see page 491)

#### 1.2 Related Publications

- a) IBM Tape Device Drivers Installation and User's Guide, GA32-0430, provides instructions for attaching IBM-supported hardware to open-systems operating systems. It indicates what devices and levels of operating systems are supported, gives the requirements for adapter cards, and tells how to configure servers to use the device driver with the Ultrium family of devices.
- b) IBM Tape Device Drivers Programming Reference, GC35-0483, supplies information to application owners who want to integrate their open-systems applications with IBM-supported Ultrium hardware. The reference contains information about the application programming interfaces (APIs) for each of the various supported operating-system environments.
- c) Fibre Channel Arbitrated Loop (FC-AL-2), published by the American National Standards Institute (ANSI) as NCITS 332:1999.
- d) Fibre Channel Tape and Tape Medium Changers (FC-TAPE), published by the American National Standards Institute. Final draft available as T11/99-069v4 on the web at <a href="http://www.t11.org">http://www.t11.org</a>; actual document available from ANSI as NCITS TR-24:1999.
- e) Fibre Channel Protocol for SCSI, Second Version (FCP-2), published by the American National Standards Institute and available on the web at http://www.t10.org.
- f) SCSI Parallel Interface-3 (SPI-3), published by InterNational Committee on Information Technology Standards (INCITS) and available on the web at <a href="http://www.t10.org">http://www.t10.org</a>.
- g) SCSI-3 Stream Commands (SSC), published by the American National Standards Institute and available on the web at http://www.t10.org.
- h) SCSI Stream Commands-2 (SSC-2), published by the American National Standards Institute and available on the web at http://www.t10.org.
- i) SCSI Primary Commands-2 (SPC-2), published by the American National Standards Institute and available on the web at http://www.t10.org.
- j) SCSI Primary Commands-3 (SPC-3), published by the American National Standards Institute and available on the web at <a href="http://www.tl0.org">http://www.tl0.org</a>.

k) SCSI Primary Commands-4 (SPC-4), published by the American National Standards Institute and available on the web at <a href="http://www.t10.org">http://www.t10.org</a>.

- I) Automation/Drive Interface Commands (ADC), published by the American National Standards Institute and available on the web at <a href="http://www.t10.org">http://www.t10.org</a>.
- m) Automation/Drive Interface Commands (ADC-2), published by the American National Standards Institute and available on the web at http://www.tlo.org.
- n) IBM System Storage Ultrium 4 Tape Drive Setup, Operator, and Service Guide, GC27-2102, tells how to install and run the IBM System Storage Ultrium 4 Tape Drive. The guide also describes how to administer basic service procedures.

Portions of this manual were adapted from documentation provided by the InterNational Committee on Information Technology Standards (INCITS).

2

## 2. Definitions, symbols, abbreviations, and conventions

## 2.1 Definitions

This clause defines the special terms, abbreviations, and acronyms that are used in this publication. If the term being looked for is not found, refer to <a href="http://www-01.ibm.com/software/globalization/terminology/index.jsp">http://www-01.ibm.com/software/globalization/terminology/index.jsp</a>.

- **2.1.1 2:1 compression** The relationship between the quantity of data that can be stored with compression as compared to the quantity of data that can be stored without compression. For example, with 2:1 compression, twice as much data can be stored with compression as can be stored without compression.
- 2.1.2 abend Abnormal end of task.
- **2.1.3 access method** A technique for moving data between processor storage and input/output devices.
- 2.1.4 adapter adapter card.
- **2.1.5 adapter card** A circuit card that adds function to a computer.
- 2.1.6 ADC Automation/Drive Interace Commands (ADC).
- 2.1.7 ADI Automation/Drive Interface (ADI).
- 2.1.8 ADT Automation/Drive Interface Transport Protocol (ADT).
- **2.1.9 AES** Advanced Encryption Standard.
- 2.1.10 AK Authentication Key
- 2.1.11 AL PA Arbitrated Loop Physical Address (ALPA; AL PA).
- 2.1.12 ALPA Arbitrated Loop Physical Address (ALPA; AL PA).
- 2.1.13 ANSI American National Standards Institute.
- **2.1.14 Arbitrated Loop** A Fibre Channel Loop topology protocol, also known as L-port.
- **2.1.15 Arbitrated Loop Physical Address (ALPA; AL\_PA)** An 8-bit value that identifies a device in an arbitrated loop..
- **2.1.16 archiving** The storage of backup files and associated journals, usually for a given period of time.
- **2.1.17 archiving application** The retention of records, in machine-readable form, for historical purposes.
- **2.1.18 argument** Any value of an independent variable.
- **2.1.19 ASC** Additional Sense Code.
- **2.1.20 ASCII** American Standard Code for Information Interchange. When used to describe a field, indicates that the field contains only ASCII printable characters (i.e., code values 20h to 7Eh) and may be terminated with one or more ASCII null (00h) characters.
- 2.1.21 ASCQ Additional Sense Code Qualifier.
- **2.1.22 ASN.1** Abstract Syntax Notation One OSI's encoding (see X.208 standard)

IBM LTO SCSI Reference

**2.1.23 Automation/Drive Interace Commands (ADC)** A T10 standard that describes the commands that are used for communication between an Automation device (i.e., Library) and a Drive (i.e., tape drive). This command set standard is on the third generation at the time of this publication. See Project T10/1895-D, Information technology - Automation/Drive Interface Commands - 3 (ADC-3).

- **2.1.24 Automation/Drive Interface (ADI)** The umbrella under which the T10 standards address the interface between removable media library controllers and the physical drives resident in those libraries. The standards defined are the <u>Automation/Drive Interface Commands (ADC)</u> and the <u>Automation/Drive Interface Transport Protocol (ADT)</u>.
- **2.1.25** Automation/Drive Interface Transport Protocol (ADT) The standard covering the Automation Drive Interface Transport Protocol. This specific document covers the transport mechanisms between removable media library controllers and the physical drives resident in those libraries, specifically the encapsulation, logical transmission, and end-point delivery and reception of the commands associated with the ADI effort. At the time this document was published this standard was in it's second revision. T10/1742-D, Information technology Automation/Drive Interface Transport Protocol -2 (ADT-2)
- **2.1.26 backups** The short-term retention of records used for restoring essential business and server files when vital data has been lost.
- **2.1.27 beginning of tape (BOT)** The location on a magnetic tape that indicates the beginning of the permissible recording area.
- **2.1.28 BER** Basic Encoding Rules used with ASN.1 (see X.209 standard)
- 2.1.29 bezel The frame that fits over the front of the tape drive. This includes a button and a message display.
- **2.1.30 bit** The smallest unit of data in a computer. A bit (short for binary digit) has a single binary value or either 0b or 1b.
- **2.1.31 BOP** Beginning of Partition logical beginning of a data area (logical object 0)
- **2.1.32 BOT** Beginning of tape.
- **2.1.33 bpi** Bits per inch.
- 2.1.34 BPI Bytes per inch.
- **2.1.35 buffer** A routine or storage used to compensate for a difference in rate of flow of data, or time of occurrence of events, when transferring data from one device to another.
- **2.1.36 buffered mode** The buffered mode allows a number of logical objects to accumulate in the object buffer before the data is transferred to the medium or host device.
- **2.1.37 byte** A byte is a unit of data comprised of 8 bits.
- **2.1.38 CA** Contingent allegiance.
- **2.1.39 capacity** See media capacity.
- 2.1.40 cartridge See tape cartridge.
- **2.1.41 cartridge memory (CM)** A non-contact electronic module embedded in the cartridge that can be used to store and retrieve information.
- 2.1.42 CC Check Condition.

- 2.1.43 CDB Command descriptor block.
- **2.1.44 cleaning cartridge** A tape cartridge that is used to clean the heads of a tape drive. Contrast with <u>data cartridge</u>.
- **2.1.45 command** A control signal that initiates an operation or the beginning of a sequence of operations.
- **2.1.46 command timeout** A host controlled period of time, following the issuance of a command where the host has not received a status response for that command.
- 2.1.47 compaction See data compression.
- 2.1.48 compression See data compression.
- **2.1.49 contingent allegiance** (1) A condition in which a drive owes a response to a specific channel path because of a unit check. (2) A condition generated by a check condition status during which a target preserves sense data.
- **2.1.50 conversion** The process of changing from one method of data processing to another or from one data-processing system to another.
- **2.1.51 data** Any representations such as characters or analog quantities to which meaning is, or might be, assigned.
- **2.1.52 data cartridge** A tape cartridge that is dedicated to storing data. Contrast with cleaning cartridge.
- **2.1.53 data compression** An algorithmic data-reduction technique that encodes data from the host and stores it in less space than unencoded data. The original data is recovered by an inverse process called decompression.
- **2.1.54 data compression ratio** The number of host data bytes divided by the number of encoded bytes. It is variable depending on the characteristics of the data being processed. The more random the data stream, the lower the opportunity to achieve compression.
- **2.1.55 data transfer rate** The amount of data that can be stored on a tape cartridge with respect to time.
- **2.1.56 dataset** The major unit of data storage and retrieval, consisting of a collection of data in one of several prescribed arrangements and described by control information to which the system has access.
- **2.1.57 DCC** Deferred Check Condition, also known as deferred unit check.
- **2.1.58 deferred unit check** A condition in which a drive returns a unit check indication for an event that occurred asynchronously with the channel commands. The deferred unit check normally does not refer to the command that receives the indication.
- 2.1.59 DER Distinguished Encoding Rules a subset of BER
- **2.1.60 device** Any hardware component or peripheral that can receive and transmit data, such as a tape drive or tape library.
- **2.1.61 device driver** An executable file or program installed on a host system used to control or access a device.
- **2.1.62 diagnostic** A test or procedure designed to detect, recognize, locate, isolate or explain faults in equipment or errors in programs.
- **2.1.63 diagnostic cartridge** A tape cartridge used to perform a diagnostic.

- **2.1.64 digest** a cryptographically strong hash (i.e., SHA-x, MD-x)
- **2.1.65 DK** Data Key key used for encryption/decryption
- **2.1.66 DKi** Data Key Identifier a field in the EEDK(s)/SEDK and part of the DKi/IV recorded on media which associates the encryption of the record to EEDK(s) and ultimately a DK
- 2.1.67 DKi/IV Combined DKi and IV prepended to each record in the logical format
- **2.1.68 drive** A device used to store data to media and subsequently restore data from media.
- **2.1.69 drive dump** The recording, at a particular instant, of the contents of debug information into a buffer or onto medium for the purpose of retrieval for debug purposes.
- **2.1.70 drive head** The component of a tape drive which converts and records an electrical signal to a magnetic signal on tape, and subsequently detects and converts such signals.
- **2.1.71 drive loaded** A condition of a tape drive in which a tape cartridge has been inserted in the drive, and the tape has been threaded to the beginning-of-partition 0 position.
- **2.1.72 effective data rate** The average number of a unit of data per unit time transferred from a data source to a data sink and accepted as valid. For example, the rates may be expressed in bits per second (bps), bytes per second (Bps), megabytes per second (MB/s), terabytes per hour (TB/hr), etc..
- **2.1.73 eject** To remove or force from within. Generally refers to the last part of the unload process to allow removal of a tape cartridge from the drive.
- 2.1.74 EKM External Key Manager
- **2.1.75 enable** To provide the means or opportunity. The modification of system, control unit, or device action through the change of a software module or a hardware switch (circuit jumper) position.
- **2.1.76 enclosure** A device, such as a desktop unit, tape cartridge autoloader, or tape library, into which a tape drive may be installed.
- 2.1.77 EOD End Of Data a dataset denoting the end of user data
- **2.1.78 EOP** End of partition. This usually refers to Logical End of Partition (LEOP), but may refer to Physical End of Partition (PEOP).
- **2.1.79 EOT** End of tape. This may refer to the physical end of tape or the logical end of tape.
- **2.1.80 ERA** Error-recovery action.
- **2.1.81 ERP** See error-recovery procedures (ERP)
- **2.1.82 error log** Maintained by the drive, a list that contains recent error codes. The codes identify errors that pertain to the drive.
- **2.1.83 error-recovery procedures (ERP)** (1) Procedures designed to help isolate and, where possible, to recover from errors in equipment. The procedures are often used in conjunction with programs that record the statistics of machine malfunctions. (2) Error-recovery procedures performed by the subsystem.
- **2.1.84 explicitly activated** A process in which the attributes of an identifier are specified. Contrast with <u>implicitly activated</u>.

**2.1.85 extended contingent allegiance** (1) A condition caused by a permanent buffered-write error in which the drive responds only to the channel path group from which the write command was received. The extended contingent allegiance continues until a controlling computer in the channel path group retrieves the unwritten data from the buffer or issues a tape motion command. (2) A condition generated by an initiate recovery message to assist in extended error recovery procedures in multi-initiator systems.

- 2.1.86 F-port Fabric port.
- 2.1.87 FC Fibre Channel.
- **2.1.88 FCP** Fibre Channel Protocol the SCSI mapping to fibre channel
- 2.1.89 fiber A physical communication cable or connection used to attach two or more Fibre Channel devices.
- **2.1.90 Fibre Channel** A standard interconnection interface used to attach host systems and/or peripheral devices.
- 2.1.91 FID Format Identification Dataset.
- **2.1.92 field replaceable unit (FRU)** An assembly that is replaced in its entirety when any one of its components fails.
- **2.1.93 file** A set of related records, treated as a unit; for example, in stock control, a file could consist of a set of invoices.
- **2.1.94 file protected** Pertaining to a tape volume from which data can be read only. Data cannot be written on or erased from the tape.
- **2.1.95 filemark** A logical object which is a demarcation, recorded on media, often used to separate files or provide other organizational structure to recorded data. Usage and convention of filemarks is controlled by the attached host system(s).
- 2.1.96 FIPS Federal Information Processing Standards
- **2.1.97 firmware** Proprietary code that is usually delivered as part of an operating system or device. Firmware is more efficient than software loaded from an alterable medium, and is more adaptable to change than hardwired embedded logic.
- 2.1.98 FL-port Fabric loop port.
- **2.1.99 FMR** Field microcode replacement.
- **2.1.100 format** The arrangement or layout of data on a data medium.
- 2.1.101 FRU See field replaceable unit (FRU).
- 2.1.102 GB See gigabyte (GB).
- **2.1.103 Gb** See gigabit (Gb).
- 2.1.104 GCM Galois Counter Mode
- **2.1.105** gigabit (Gb) 1 000 000 000 bits of storage.
- 2.1.106 gigabyte (GB) 1 000 000 000 bytes of storage.

**2.1.107 hard addressing** A method of specifying a fixed AL\_PA address for a device in a Fibre Channel loop configuration.

- 2.1.108 hardware The physical equipment or components that form a device or system.
- 2.1.109 HBA host bus adapter.
- 2.1.110 head See drive head
- **2.1.111 host bus adapter** A specific type of adapter card which provides the connection to a physical device interconnect such as Fibre Channel.
- **2.1.112 host system** A data-processing system that is used to prepare programs and the operating environments for use on another computer or controller.
- 2.1.113 IBM Proprietary Protocol (IPP) IBM vendor-specific method of configuring and controlling encryption
- **2.1.114 IBM Tape Diagnostic Tool (ITDT)** The ITDT Tool offers multiple functional capabilities that simplify the task of updating tape and library firmware. It is available for most major platforms and requires no special device drivers. See

http://www-933.ibm.com/support/fixcentral/options?productGroup0=ibm/StorageSystems&productGroup1=ibm/Storage Tape&productGroup2=ibm/ST/Tapedevicedriversandsoftware&productGroup3=ibm/Storage Tape/IBM + Tape+Diagnostic+Tool+ITDT

- 2.1.115 ID identifier
- **2.1.116 implicitly activated** A process in which the attributes of an identifier are determined by default. Contrast with <u>explicitly activated</u>.
- **2.1.117 initiator** A SCSI device that requests an I/O process to be performed by another SCSI device (a target). In some cases, an initiator can also be a target.
- **2.1.118 input/output (I/O)** Data that is provided to a computer or data that results from computer processing.
- **2.1.119 install** To set up for use or service. The act of adding a product, feature, or function to a system or device either by a singular change or by the addition of multiple components or devices.
- **2.1.120 interchange application** The preparation of tapes for use on other systems or devices, either local or remote, or the use of tape data prepared by another system.
- **2.1.121 Internet** The worldwide collection of interconnected networks that use the Internet suite of protocols and permit public access.
- **2.1.122 invoke** To petition for help or support. The request for a feature or function to be utilized in future processing activities through the use of software or hardware commands.
- 2.1.123 I/O input/output (I/O).
- 2.1.124 IPP IBM Proprietary Protocol (IPP).
- 2.1.125 ITDT IBM Tape Diagnostic Tool (ITDT).
- 2.1.126 IV Initialization Vector a value also called a nonce, used with a key for AES block ciphers
- **2.1.127 journaling** Recording transactions against a dataset so that the dataset can be reconstructed by applying transactions in the journal against a previous version of the dataset.

- 2.1.128 KB See kilobyte.
- **2.1.129 kibibyte** 1024 bytes of storage.
- 2.1.130 KiB See kibibyte.
- **2.1.131 kilobyte** 1000 bytes of storage.
- 2.1.132 L-port Arbitrated Loop Fibre Channel host connection. May attach to a fabric (switch) FL-port.
- **2.1.133 LDI** Library Drive Interface a specific interface protocol for tape device to automation interface (over RS-422)
- 2.1.134 LEOT logical end of tape
- **2.1.135 Linear Tape-Open (LTO)** A type of tape storage technology developed by the IBM Corporation, Hewlett-Packard, and Quantum (formerly Seagate). LTO technology is an "open format" technology, which means that its users have multiple sources of product and media. The "open" nature of LTO technology enables compatibility between different vendors' offerings by ensuring that vendors comply with verification standards.
- **2.1.136 LN\_Port** Fibre Channel host attachment configuration in which the drive attempts to negotiate first to Arbitrated Loop (NL-port), then Point-to-Point (N-port). May attach to a fabric (switch) F-port or FL-port. This may be thought of as L->N negotiation.
- **2.1.137 load** Following the insertion of a tape cartridge into the device, the act of positioning the tape (performed by the drive) for subsequent reading or writing.
- **2.1.138 load point** The beginning of the recording area on magnetic tape.
- **2.1.139 logical block** A unit of data transfered between an initator and the drive. See <u>record</u>.
- **2.1.140 logical end of tape** A point on the tape where written data normally ends.
- **2.1.141 logical object** A logical block or a filemark.
- 2.1.142 LPOS Longitudinal Position.
- **2.1.143 LSB** Least significant byte.
- **2.1.144 lsb** Least significant bit.
- 2.1.145 LTO Linear Tape-Open (LTO).
- 2.1.146 LTO-DC LTO Data Compression (LTO-DC).
- **2.1.147 LTO Data Compression (LTO-DC)** A method that compresses logical objects before the drive writes them to tape. LTO-DC encodes and detects record boundaries and file markers (which are encoded as control symbols). It also allows switching between compression and no compression within the data stream, which prevents data from expanding when the drive compresses random or encrypted data.
- 2.1.148 LUN Logical unit number.
- **2.1.149 MAC** Message Authentication Code a digest which validates encrypted data. Appended to eachencrypted record in the logical format for cryptographic integrity validation
- **2.1.150 magnetic recording** A technique of storing data by selectively magnetizing portions of a magnetizable material.

**2.1.151 magnetic tape** A tape with a magnetizable surface layer on which data can be stored by magnetic recording.

- 2.1.152 magnetic tape drive A mechanism for moving magnetic tape and controlling its movement.
- 2.1.153 MAM Medium Auxiliary Memory (MAM).
- **2.1.154 Management Information Base (MIB)** A computing information repository used by Simple Network Management Protocol (SNMP)
- **2.1.155 manual mode** A mode of operation that can be selected on a cartridge loader or library. This mode allows a single tape cartridge feed, performed by the operator.
- 2.1.156 MB See megabyte (MB).
- **2.1.157 Mb** See <u>megabit (Mb)</u>.
- **2.1.158 mebibit (Mib)** 1 048 576 bits of storage (i.e., 2<sup>20</sup>)
- **2.1.159 mebibyte (MiB)** 1 048 576 bytes of storage (i.e., 2<sup>20</sup>)
- 2.1.160 media Plural of medium.
- **2.1.161 media capacity** The amount of data that can be contained on storage media and expressed in units of data, usually gigabyte (GB) or terabyte (TB).
- **2.1.162 medium** A physical material in or on which information may be represented, such as magnetic tape.
- **2.1.163 Medium Auxiliary Memory (MAM)** A non-volatile memory. MAM is used to store data that describes the media and its contents. MAM is usually stored on <u>cartridge memory (CM)</u>.
- **2.1.164 megabit (Mb)** 1 000 000 bits of storage (i.e., 10<sup>6</sup>).
- **2.1.165 megabyte (MB)** 1 000 000 bytes of storage (i.e., 10<sup>6</sup>).
- 2.1.166 Mib mebibit (Mib).
- 2.1.167 MiB mebibyte (MiB).
- **2.1.168 microcode** Embedded device programming which controls the behavior and functioning of the device.
- **2.1.169 microprocessor** An integrated circuit that accepts coded instructions for execution; the instructions may be entered, integrated, or stored internally.
- **2.1.170 microsecond (us)** One millionth of a second (0.000 001 s).
- 2.1.171 migration See conversion.
- **2.1.172 millisecond (ms)** One thousandth of a second (0.001 s)
- **2.1.173 MIM** Medium Information Message.
- 2.1.174 msb Most significant bit.
- 2.1.175 MSB Most significant byte.
- 2.1.176 N-port Point-to-Point Fibre Channel host connection. May attach to a fabric (switch) FL-port.

- 2.1.177 N/A Not Applicable.
- **2.1.178 native data transfer rate** The amount of data that can be stored without compression on a tape cartridge with respect to time.
- **2.1.179 native storage capacity** The amount of data that can be stored without compression on a tape cartridge.
- **2.1.180 NL\_Port** Fibre Channel host attachment configuration in which the drive port attempts to negotiate first to Point-to-Point (N-port), then Arbitrated Loop (NL-port). May attach to a fabric (switch) F-port or FL-port. This may be thought of as N->L negotiation.
- **2.1.181 node** Fibre channel term for the logical connection to a device.
- 2.1.182 nonce number used once a value used in conjunction with the key for AES block ciphers (also IV)
- **2.1.183 OEM** Original equipment manufacturer.
- **2.1.184 offline** An operating condition where the host system cannot interact with the drive through the specified interface.
- **2.1.185 online** An operating condition where the host system can interact normally with the drive through the specified interface.
- 2.1.186 OOB Out-Of-Band
- **2.1.187 open system** Computer systems whose operating standards and methods are not proprietary.
- **2.1.188 operating system** The master computer control program that translates the user commands and allows software application programs to interact with the computer hardware and attached devices.
- **2.1.189 OSI** Open Systems Interconnection (see X.200 standard)
- **2.1.190 overwrite** A write operation that records a logical object in a logical position that is not an append point (see 4.1.3).
- **2.1.191 parity** The state of being even-numbered or odd-numbered. A parity bit is a binary number that is added to a group of binary numbers to make the sum of that group always odd (odd parity) or even (even parity) which is commonly used for error detection.
- 2.1.192 PEOT physical end of tape (PEOT)
- **2.1.193 physical end of tape (PEOT)** A point on the tape beyond which the tape is not permitted to move.
- 2.1.194 PKCS Public-Key Cryptography Standards
- 2.1.195 POR Power-on reset.
- **2.1.196 port** Fibre channel or SAS term for the physical connection to a device.
- **2.1.197 power-off** To remove electrical power from a device.
- **2.1.198 power-on** To apply electrical power to a device.
- **2.1.199 powered-on** The state of a device when power has been applied to it.

**2.1.200 primed** Pertaining to a condition of a tape drive when the controlling computer addresses the drive but the drive is not in a ready state.

- 2.1.201 PRNG Pseudo Random Number Generator
- **2.1.202 processing application** The execution of a systematic sequence of operations performed on data to accomplish a specific purpose.
- **2.1.203 protocol** The meanings of, and the sequencing rules for, requests and responses that are used to manage a network, transfer data, and synchronize the states of network components.
- **2.1.204 quiesce** To bring a device or system to a halt by a rejection of new requests for work.
- **2.1.205 read** To acquire or interpret data from a storage device, from a data medium, or from another source.
- **2.1.206 read-type commands** Any commands that cause data to be read from tape or affect buffered read data.
- **2.1.207 reboot** To reinitialize the execution of a program by repeating the initial program load (IPL) operation.
- **2.1.208 record** A logical object that contains user data (e.g., not a filemark).
- **2.1.209 recording density** The number of bits in a single linear track measured per unit of length of the recording medium.
- **2.1.210 reset** To return a device, circuit, or value to a clear state.
- **2.1.211 retension (or refresh)** The process or function of tightening the tape onto the cartridge, if it is sensed that the tape has a loose wrap on the cartridge.
- **2.1.212 RS-422 connector** Located at the rear of the device, the connector to which the internal RS-422 cable of an enclosure connects. The connection enables a library (i.e., medium changer) to communicate with the drive.
- **2.1.213 RS-422 interface** An electrical interface standard that is approved by the Electronic Industries Association (EIA) for connecting serial devices.
- 2.1.214 RSA Method authored by Rivest, Shamir, Adleman
- 2.1.215 s second
- 2.1.216 SAN Storage Area Network.
- 2.1.217 SAS Serial Attached SCSI
- 2.1.218 SCSI Small Computer System Interface.
- **2.1.219 SCSI device** A host adapter or a target controller that can be attached to the SCSI bus.
- **2.1.220 SCSI ID** The identifier used to uniquely identify the address on the bus. When used on Fibre Channel devices this refers to the AL PA.
- **2.1.221 SCSI Sense Data** In response to a command from the server, a packet of SCSI sense bytes that contains information about the error that is sent back to the server by the drive in autosense. SCSI Sense Data may also be returned by the REQUEST SENSE command, but that sense data is usually unsolicited sense data and does not contain error information.

- 2.1.222 sense data SCSI Sense Data.
- **2.1.223 Serial Attached SCSI (SAS)** A transport for exchanging information between SCSI devices using astandardized serial interconnect.
- **2.1.224 server** A functional unit that provides services to one or more clients over a network. Synonymous with host system.
- **2.1.225 SHA** Secure Hash Algorithm (can be SHA-1 (160 bit), or SHA-2 algorithms at differing bit strengths shortened to SHA-256, SHA-384, SHA-512, for bit size)
- **2.1.226 SIM** Service Information Message.
- **2.1.227 Small Computer Systems Interface (SCSI)** A standard used by computer manufacturers for attaching peripheral devices (such as tape drives, hard disks, CD-ROM players, printers, and scanners) to computers (servers). Pronounced "scuzzy."
- **2.1.228 soft addressing** A method of specifying a standard arbitration method for assigning an AL\_PA for a device in a Fibre Channel loop configuration.
- **2.1.229 software** Programs, procedures, rules, and any associated documentation pertaining to the operation of a computer system.
- **2.1.230 special feature** A specific design addition to an IBM product that is quoted in the IBM Sales Manual and ordered separately.
- **2.1.231 standard function** The significant design elements of an IBM product that are included as part of the basic standard product.
- **2.1.232 Storage Area Network (SAN)** A high-speed subnetwork of shared storage devices. A SAN's architecture makes all storage devices available to all servers on a LAN or WAN. As more storage devices are added to a SAN, they too will be accessible from any server in the larger network. Because stored data does not reside directly on any of a network's servers, server power is used for business applications, and network capacity is released to the end user.
- **2.1.233 switch** A network infrastructure component to which multiple nodes attach. Unlike hubs, switches typically have the ability to switch node connections from one to another. A typical switch can facilitate several simultaneous bandwidth transmissions between different pairs of nodes.
- **2.1.234 synchronization** The process of coordinating the activities of the controlling computer and the magnetic tape subsystem to obtain the condition in which the buffer is empty and the tape is in the correct position for the next operation.
- 2.1.235 T10 ANSI group responsible for SCSI model and command sets, see http://www.t10.org
- 2.1.236 T11 ANSI group responsible for FCP/fibre channel protocols, see http://www.t11.org
- **2.1.237 TB** see <u>terabyte (TB)</u>.
- **2.1.238 tape** Commonly refers to magnetic tape or the tape cartridge.
- **2.1.239 tape cartridge** A container holding magnetic tape that can be processed without separating it from the container.
- **2.1.240 tape drive** A device that is used for moving magnetic tape and includes the mechanisms for writing and reading data to and from the tape.

**2.1.241 tape unit** A device that contains tape drives and their associated power supplies and electronics.

- **2.1.242 TapeAlert** A patented technology and ANSI standard that defines conditions and problems that are experienced by tape drives.
- **2.1.243 TapeAlert flags** Status and error messages that are generated by the TapeAlert utility and are reported to a host system.
- **2.1.244 target** A SCSI device that performs an operation requested by the initiator.
- 2.1.245 target routine A target routine is an I/O process directed to a target, and not to a logical unit.
- **2.1.246 terabyte (TB)** 1\_000\_000\_000\_000 bytes of storage.
- **2.1.247 topology** In communications, the physical or logical arrangement of nodes in a network, especially the relationships among nodes and the links between them.
- 2.1.248 transfer rate data transfer rate.
- 2.1.249 TRNG True Random Number Generator
- 2.1.250 TSM Tivoli Storage Manager
- **2.1.251 unload** The act (performed by the drive) of unthreading tape from the drive's internal tape path and returning it (with the leader block) to the tape cartridge.
- **2.1.252 universal time (UT)** The time at longitude zero, colloquially known as Greenwich Mean Time. See <a href="http://www.usno.navy.mil/USNO/time/master-clock/systems-of-time">http://www.usno.navy.mil/USNO/time/master-clock/systems-of-time</a>.
- **2.1.253 vital product data** Non-volatile information including configuration, calibration, etc., used to control the behavior and operation of the device.
- **2.1.254 volume** (1) A certain portion of data, together with its data carrier, that can be handled conveniently as a unit. (2) A data carrier that is mounted and demounted as a unit, for example, a reel of magnetic tape, a disk pack.
- **2.1.255 volume coherency set:** A set of information contained in logical objects including a volume coherency count (see 4.17) for which coherency across an entire volume is desired.
- **2.1.256 VPD** Vital Product Data information stored in drive nonvolatile memory
- 2.1.257 web World Wide Web (www).
- **2.1.258 World Wide Name** A unique, 8-byte identifier that is assigned by IBM Manufacturing to each tape drive and used to identify a drive.
- **2.1.259 World Wide Web (www)** A network of servers that contain programs and files. Many of the files contain hypertext links to other documents that are available through the network.
- **2.1.260 WORM (Write Once, Read Many)** A write or append methodology for allowing data to be written only once, disallowing overwriting.
- **2.1.261 write** To store or encode data to a storage device, to data medium, or to another source.

**2.1.262 Write Once, Read Many (WORM)** A write or append methodology for allowing data to be written only once, disallowing overwriting.

- **2.1.263 write protected** A state disallowing write operations to a device or medium.
- **2.1.264 write-type commands** Any commands that cause data to be written on tape or affect buffered write data.

#### 2.2 Conventions

## 2.2.1 Radix representation

Binary numbers are represented by numbers followed by b. Hexadecimal numbers are represented by 0-9 and A-F followed by h. Numbers with no suffix can be assumed to be decimal.

#### 2.2.2 Bit Numbering

Bit numbering follows ANSI standards as follows:

- Bit 7 is the most significant bit (msb) occupying the leftmost bit position in the diagrams
- · Bits 6 through 1 continue from left to right in descending order
- Bit 0 is the least significant bit (lsb) occupying the rightmost bit position in the diagrams

#### 2.2.3 Units of measure for data storage

Decimal units such as KB, MB, GB, and TB have commonly been used to express data storage values. Some environments, such as programming or memory values often use binary units such as KiB, MiB, GiB, and TiB. At the kilobyte level, the difference between decimal and binary units of measurement is relatively small (2.4%). This difference grows as data storage values increase, and when values reach terabyte levels the difference between decimal and binary units approaches 10% as detailed later in this section. Given this difference it is important to understand and use the expected unit for each particular value to maximize accuracy.

This document represents values using both decimal units and binary units. Values are represented by the following formats:

- a) for decimal units:
  - the value 3.5 terabytes is displayed as 3.5 TB (10<sup>12</sup>);
- b) for binary units:
  - the value 400 mebibytes per second is displayed as 400 MiB/sec (2<sup>20</sup>)
- c) for an indication that all values in a row of a table are in specific units a statement is made in the left-most column:

<u>Table 1</u> compares the names, symbols, and values of the binary and decimal units. <u>Table 2</u> shows the increasing percentage of difference between binary units and decimal units.

Table 1 — Comparison of binary and decimal units and values

Decimal			Binary			
Name	Symbol	Value (base-10)	Name	Symbol	Value (base-2)	
kilo	К	10 <sup>3</sup>	kibi	Ki	2 <sup>10</sup>	
mega	М	10 <sup>6</sup>	mebi	Mi	2 <sup>20</sup>	
giga	G	10 <sup>9</sup>	gibi	Gi	2 <sup>30</sup>	
tera	Т	10 <sup>12</sup>	tebi	Ti	2 <sup>40</sup>	
peta	Р	10 <sup>15</sup>	pebi	Pi	2 <sup>50</sup>	
exa	Е	10 <sup>18</sup>	exbi	Ei	2 <sup>60</sup>	

Table 2 — Percentage difference between binary and decimal units

Decimal Value	Binary Value	Percentage Difference
100 kilobytes (KB)	97.65 kibibytes (KiB)	2.35%
100 megabytes (MB)	95.36 mebibytes (MiB)	4.64%
100 gigabytes (GB)	93.13 gibibytes (GiB)	6.87%
100 terabytes (TB)	90.94 tebibytes (TiB)	9.06%
100 petabytes (PB)	88.81 pebibytes (PiB)	11.19%
100 exabytes (EB)	86.73 exbibytes (EiB)	13.27%

## 2.2.4 Subpages

When pages have subpages (e.g., Mode Pages, Log Pages) the convention used for Page XXh Subpage YYh is Page XXh[YYh].

When describing Security Protocol XXh with Security Protocol Specific YYYYh in the Security Protocol In command or the Security Protocol Out command XXh[YYYYh] is used.

## 2.2.5 , Hyperlinks

This document contains many hyperlinks. Every place the text says "see clause number" should be a hyperlink. Hyperlinks have been given a special font to offset them from the rest of the text. That font is demonstrated in this following link (see 2.2.5)

# 2.3 Tape Drive Model Names

From this section forward, through the remainder of this book, Tape Drive models are referred to collectively as the LTO tape drive, the Ultrium tape drive or the 3580 tape drive. There are both a Full-High version and a Half-High version, they will be referred to as FH for Full-High and HH for Half-High. LTO drives are also available with different host attachment interfaces, referred to as FC for Fibre Channel and SAS for Serially Attached SCSI. LTO drives are also referred to by generation. Various combinations of these may be used where the differences are meaningful and described in this document. Some examples include: LTO6, LTO7 FH, LTO8 HH FC, etc.

## 3. Introduction


# 3.1 Drive Overview

The products that are discussed in this book are high-performance, high-capacity data-storage devices that connect to and provide additional storage for supported servers. They include the LTO5 through LTO7 models of the IBM® LTO Ultrium Tape Drive.

All products use the Small Computer Systems Interface (SCSI) Architecture Model. The transports used are shown in <u>table 3</u>.

<u>Figure 1</u> shows the IBM 3580 Ultrium Tape Drive and the IBM System Storage LTO Ultrium Tape Drive Model T200. The IBM System Storage TS2350 Tape Drive Express is similar to the IBM System Storage LTO Ultrium Tape Drive Model T200 and the IBM System Storage TS2250 Tape Drive Express is half the height.

Figure 1 — IBM System Storage Ultrium Tape Drive Models.

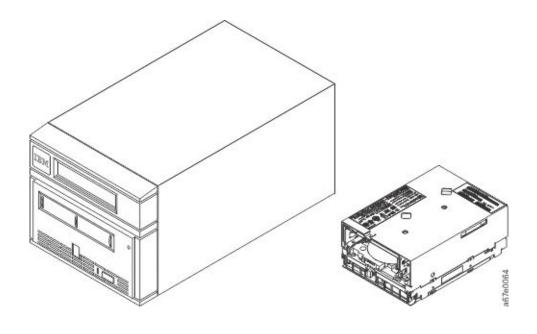

Designed to perform unattended backups as well as to retrieve and archive files, the Ultrium Tape Drives include the features that are described in <u>table 3</u>.

Table 3 — Features of the IBM Ultrium Tape Drives and the IBM 3580 Ultrium Tape Drive (part 1 of 2)

Feature	Ultrium 5	Ultrium 6	Ultrium 7
Native storage capacity	1500 GB	2500 GB	6000 GB
Storage capacity when compression is enabled_a	3.0 TB	6250 GB	15000 GB
Native sustained data transfer rate	140 MB/s	160 MB/s	300 MB/s
Data transfer rate when compression is enabled_a	280 MB/s	400 MB/s	800 MB/s
Burst data transfer rate (2GFC)	200 MB/S	200 MB/S	200 MB/S
Burst data transfer rate (4GFC)	400 MB/s	400 MB/s	400 MB/s

Table 3 — Features of the IBM Ultrium Tape Drives and the IBM 3580 Ultrium Tape Drive (part 2 of 2)

Feature	Ultrium 5	Ultrium 6	Ultrium 7
Burst data transfer rate (8GFC)	800 MB/s	800 MB/s	800 MB/s
Burst data transfer rate (3G SAS)	300 MB/s	300 MB/s	300 MB/s
Burst data transfer rate (6G SAS)	600 MB/s	600 MB/s	600 MB/s
Type of interface	LC-D <sup>b</sup> SAS <sup>c</sup>	LC-D <sup><u>b</u></sup> SAS <sup>_C</sup>	LC-D <sup>b</sup> SAS <sup>c</sup>

Note - All sustained data rates are dependent on the capabilities of the interconnect (for example, a 8GFC link is limited to less than 800MB/sec).

All information assumes same generation media and drive.

<sup>&</sup>lt;sup>a</sup> Generation 5 nominal compression ratio is 2:1. Subsequent generations nominal compression ratio is 2.5:1. Depending on the data, the compression ratio may be higher or lower.

b LC-D: LC-Duplex Fibre Channel, with the use of SCSI protocol

<sup>&</sup>lt;sup>c</sup> SAS: Serial-Attached SCSI

# 3.2 Supported Servers and Operating Systems

The Ultrium Tape Drives are supported by a wide variety of servers and operating systems, as well as adapters. These attachments can change throughout the products' life cycles. To determine the latest supported attachments, visit the web at <a href="http://www.ibm.com/storage/lto">http://www.ibm.com/storage/lto</a> and click on Technical Support or LTO Support.

# 3.2.1 Primary Interface Attachment

The Ultrium Tape Drives attach to servers and operating systems shown in <u>table 4</u>. An attachment includes (but is not limited to) the servers and operating systems in the table.

For specific instructions about attachment, see one or more of the following:

a) IBM System Storage TS2350 Tape Drive Setup, Operator, and Service Guide, GC27-2277-00.

Table 4 — Supported Servers and Operating Systems for Primary Interface Attachment

Supported Servers	Supported Operating Systems		
zSeries® s390x platform	zLinux (RHEL and SLES)		
IBM Power Systems	IBM i®		
IBM Power Systems	AIX®		
IBM Power Systems	Linux® (RHEL and SLES)		
Sun Microsystems	Solaris		
OO hit latel assess the assessment	Windows Server		
32-bit, Intel-compatible servers	Linux® (RHEL and SLES)		
	Windows Server		
64-bit, Intel-compatible servers  Linux® (RHEL and SLES)			
Supported SAN Components for Fibre Channel Attachment Visit the web at: <a href="http://www-03.ibm.com/systems/support/storage/ssic/interoperability.wss">http://www-03.ibm.com/systems/support/storage/ssic/interoperability.wss</a>			

# 3.3 Supported Device Drivers

IBM maintains the latest levels of device drivers and driver documentation for the IBM Ultrium Tape Drives on the Internet. You can access this material from your browser or through the IBM FTP site by performing one of the following procedures. (Note: If you do not have Internet access and you need information about device drivers, contact your Marketing Representative.)

Using a browser, go to one of the following websites:

- a) The IBM storage website at <a href="http://www.ibm.com/storage">http://www.ibm.com/storage</a>; or
- b) The IBM Fix Central website at <a href="http://www.ibm.com/support/fixcentral">http://www.ibm.com/support/fixcentral</a>. This is a portal to enter the download area. There are a few pull down menus to get you to the correct download as follows:
  - 1) in menu labeled "Product Group" select "Storage Systems";
  - 2) in menu labeled "Product Family" select "Tape Systems";
  - 3) in menu labeled "Product Type" select "Tape Device Drivers and Software";
  - 4) in menu labeled "Product" select "Tape Device Drivers";
  - 5) in menu labeled "Platform" select the correct operating system. You can select the generic form of the platform (e.g., Linux) and all device drivers for that platform will come up;
  - 6) click continue; and
  - 7) select the checkbox(es) of the fix pack(s) needed and click continue.

# 3.4 Supported Tape Cartridges

The IBM LTO Ultrium Tape Drives support LTO Cartridges as described in table 5

Table 5 — IBM LTO Ultrium Tape Drive Support of LTO Cartridges

LTO		Data	Data	Supported by			
Generation	Type	Capacity Native	Capacity Compressed_a	Ultrium 5 Drive	Ultrium 6 Drive	Ultrium 7 Drive	
7	Α	6000 GB	15000 GB	No	No No		
6	Α	2500 GB	6250 GB	No	Write and Read	Write and Read	
5	Α	1500 GB	3000 GB	Write and Read	Write and Read	Read Only	
4	Α	800 GB	1600 GB	Write and Read	Read Only	No	
3	Α	400 GB	800 GB	Read Only	No	No	

Ultrium Tape Drives reads tapes that have been written by other licensed Ultrium drives.

Ultrium Tape Drives write tapes that can be read by other licensed Ultrium drives.

Ultrium Tape Drives offer read/write capability for certified LTO Ultrium tape cartridges as specified in this table.

The tape cartridges define the format to which it is written. (for example Ultrium 46 cartridges can only be written to Ultrium 6 format regardless of which generation drive writes it.

The Ultrium 7 Tape Drive (Generation 7) uses the IBM TotalStorage 6000 GB Data Cartridge, and is compatible with the cartridges of its predecessors (called Generation 5 and Generation 6). The Ultrium 7 Tape Drive performs the following functions:

- a) Reads and writes Generation 7 cartridges to Generation 7 format
- b) Reads and writes Generation 6 cartridges to Generation 6 format
- c) Reads Generation 5 cartridges in Generation 5 format
- d) Does not write cartridges to other generations' format
- e) Does not write Generation 5 cartridges
- f) Does not write or read Generation 1, Generation 2, Generation 3, or Generation 4 cartridges in any format

The Ultrium 6 Tape Drive (Generation 6) uses the IBM TotalStorage 2500 GB Data Cartridge, and is compatible with the cartridges of its predecessors (called Generation 4 and Generation 5). The Ultrium 6 Tape Drive performs the following functions:

- a) Reads and writes Generation 6 cartridges to Generation 6 format
- b) Reads and writes Generation 5 cartridges to Generation 5 format
- c) Reads Generation 4 cartridges in Generation 4 format
- d) Does not write cartridges to other generations' format
- e) Does not write Generation 4 cartridges
- f) Does not write or read Generation 1, Generation 2, or Generation 3 cartridges in any format

The Ultrium 5 Tape Drive (Generation 5) uses the IBM TotalStorage 1500 GB Data Cartridge, and is compatible with the cartridges of its predecessors (called Generation 3 and Generation 4). The Ultrium 5 Tape Drive performs the following functions:

- a) Reads and writes Generation 5 cartridges to Generation 5 format
- b) Reads and writes Generation 4 cartridges to Generation 4 format
- c) Reads Generation 3 cartridges in Generation 3 format
- d) Does not write cartridges to other generations' format
- e) Does not write Generation 3 cartridges
- f) Does not write or read Generation 1 cartridges or Generation 2 cartridges in any format

The Data Capacity Compressed depends on the actual compression ratio of the data, which is data dependent and may be higher or lower

# 3.5 Microcode Detection of Errors

The drive microcode is designed to check for logic errors, to handle hardware-detected errors, and to detect and report microcode-related errors.

# 3.5.1 Fencing Behavior

For a description of the Fencing Behavior and Persistent Error handling, see Persistent Errors.

23

# 4. Implementation Considerations

## 4.1 Write modes

#### 4.1.1 Write mode introduction

Write modes of the device entity specify the allowable behaviors for altering logical objects on a mounted volume. When the write mode rules allow altering of logical objects then the operation shall be processed following the write protection rules defined in SSC-4 clause 4.2.14 (i.e., Write Protection).

#### 4.1.2 Overwrite-allowed mode

Overwrite-allowed mode is used to allow alteration of any logical object on the medium. Overwrite-allowed mode is enabled or disabled using the WRITE MODE field of the Device Configuration Extension mode page (see 6.6.12). This mode is set in the device entity to enable device server behaviors. The overwrite-allowed mode does not modify the volume. When the volume is removed from the device no indication of whether overwrite-allowed mode is enabled or disabled is carried with the volume.

When overwrite-allowed mode is enabled in the drive, then any command that would result in a write shall be processed normally. If the mounted volume is a WORM volume, then a write type command shall be processed following the WORM rules.

#### 4.1.3 Append-only mode (also known as Data-safe mode)

Append-only mode is used to protect data from being accidently overwritten. Sometimes, due to errors in the configuration of the environment an application client attempts to rewind a drive that it is not transferring data to. Without append-only mode, if the application client writing to the logical unit has not reserved the logical unit, then a different application client is allowed to rewind the volume causing an accidental overwrite of the medium. With append-only mode enabled, the medium is not allowed to be overwritten.

Append-only mode is enabled or disabled using the WRITE MODE field of the Device Configuration Extension mode page (see 6.6.12). This mode is set in the device server to enable device server behaviors. The append-only mode does not modify the volume. When the volume is removed from the device it behaves as a normal volume.

When append-only mode is enabled in the drive, then any command that would result in a write to a location that is not an append point shall be rejected with a CHECK CONDITION, DATA PROTECT, OPERATOR SELECTED WRITE PROTECT (7h / 5A02h) and TapeAlert 09h shall be set. An append point shall be:

- a) the logical position zero if there are no logical objects beyond BOP;
- b) the current logical position if:
  - A) the current logical position is at BOP; and
  - B) there are only filemarks between the current logical position and EOD;
- c) the current logical position if:
  - A) the current logical position is between BOP and EOD;
  - B) there are only filemarks from the current logical position to EOD; and
  - C) there is at least one filemark immediately before the current logical position;

or

d) the current logical position if the current logical position is at EOD.

The device server maintains an allow\_overwrite variable. The allow\_overwrite variable defines what operation is currently allowed when in append-only mode. The allow\_overwrite variable values are defined in <u>table 6</u>.

 Name
 Description

 Disabled
 A write type operation at a position that is not an append point is not allowed.

 Current Position
 A write type operation is allowed at the position specified by the allow\_overwrite\_position variable.

Table 6 — allow\_overwrite variable definition

The allow\_overwrite\_position variable specifies the position (i.e., partition and logical object identifier) at which a write to a position that is not an append point is allowed.

An operation that modifies the format of the medium is allowed

Append-only mode is a function of the device server and is not a function of the volume. Append-only mode may be used when accessing Data Volumes or WORM volumes. An application client may overwrite data by using a special command called the ALLOW OVERWRITE command (see 5.2.1). The ALLOW OVERWRITE command specifies the logical position where the overwrite is to occur. After succesfully processing an ALLOW OVERWRITE command, a write type command at the specified position is processed normally. If the position of the medium is changed or the volume is unmounted, then the device server shall set the allow\_overwrite variable to Disabled (i.e., 0h) and the allow\_overwrite\_position variable to invalid. The ALLOW OVERWRITE command requires the partition number and the logical position to be passed in the CDB. If the position information passed in the ALLOW OVERWRITE command does not specify the current position of the medium, then the command is terminated with CHECK CONDITION status with the sense key set to ILLEGAL REQUEST and the additional sense code set to SEQUENTIAL POSITIONING ERROR. If there is no volume loaded and the device server processes an ALLOW OVERWRITE command, then the command is terminated with CHECK CONDITION status with sense key set to NOT READY.

An ALLOW OVERWRITE command that returns GOOD status shall:

- a) set the allow\_overwrite variable to the value in the ALLOW OVERWRITE field of the ALLOW OVERWRITE command; and
- b) set the allow overwrite position variable to the current position.

An ALLOW OVERWRITE command that returns a CHECK CONDITION shall:

- a) set the allow\_overwrite variable to Disabled (i.e., 0h); and
- b) set the allow overwrite position to invalid.

**Format** 

If append-only mode is enabled, the mounted volume is a WORM volume, and the allow\_ovewrite variable is not set to Disabled, then a write type command shall be processed following the WORM rules. <u>Figure 2</u> shows a representative flowchart of append-only mode behavior.

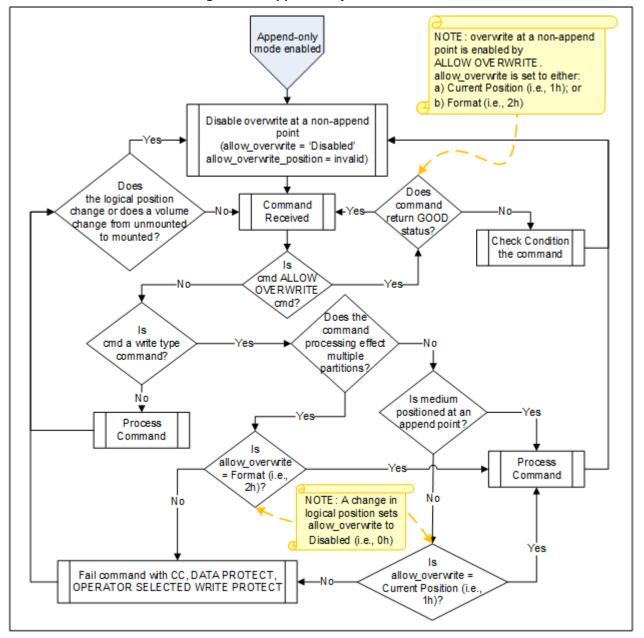


Figure 2 — Append-only mode flowchart

If the ALLOW OVERWRITE command is received by the device server and append-only mode is not enabled, the command will be rejected with CHECK CONDITION, ILLEGAL REQUEST, ILLEGAL COMMAND WHEN NOT IN APPEND-ONLY MODE.

When in append-only mode the allow\_overwrite variable shall be set to Disabled (i.e., 0h) and the allow\_overwrite\_position variable shall be set to invalid if:

- a) the WRITE MODE field of the Device Configuration Extension mode page changes to a value of 01h (i.e., The write-type operation shall only allow appends as specified for the append-only mode in 4.1.3);
- b) a change in logical position occurs;
- c) a volume changes state from unmounted to mounted;
- d) the CDB of a write type command is validated and the write processing begins; or
- e) an ALLOW OVERWRITE command returns a CHECK CONDITION.

# 4.2 Volume partitioning

## 4.2.1 Volume partitioning overview

Starting with LTO 5 volume partitioning is supported by the device on certain media types. A volume is recorded in the same format for the entire volume as indicated by the primary density code (see 5.2.24) but each partition may have differences in how it is encrypted.

The device supports wrap-wise partitioning (see 4.2.2).

This clause and its subclauses describe partitioning and its relationship to:

- a) capacity scaling (see 4.2.3);
- b) media types (see 4.2.4);
- c) reformatting (see 4.2.5); and
- d) encryption (see 4.2.6).

# 4.2.2 Wrap-wise Partitioning

Wrap-wise partitioning uses the length of the medium that is available for user data to create each partition. By default, this is the full length of the medium but the length available for user data may have been shortened through capacity scaling (see 4.2.3). Wrap-wise partitioning is shown logically in figure 3.

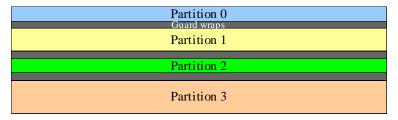


Figure 3 — Wrap-wise partitioning

Wrap-wise partitioning generally uses a minimum of two wraps and generally has a guard wrap of two wraps between each partition. The amount of usable capacity may be reduced depending on various factors including volume generation (e.g., up to 2.5% per partition boundary for Ultrium 5 volumes).

When using wrap-wise partitioning an Ultrium 5 volume supports one or two partitions and an Ultrium 6 or later generation volume supports a maximum of four partitions with any number of partitions between one and four inclusive.

<u>Table 7</u>, and <u>table 8</u> show the partition sizes that result from a MODE SELECT of the Medium partition mode page (see 6.6.13) with the indicated field settings.

Table 7 — Partition sizes for wrap-wise partitioning (selection fields)

_				ADDITIONAL		PARTITI	ON SIZE	
Ref <sup>a</sup>	FDP	SDP	IDP	PARTITIONS DEFINED <sup>b</sup>	(first)	(second)	(third)	(last)
row1	1	0	0	Х				
row2				00h				
row3		4	_	01h	Х	Х	Х	X
row4	0	1	0	02h				
row5				03h				
row6				00h	FFFFh	0		
row7				oon	s <sup>c</sup>	0		
row8					S	FFFFh	0	
row9				01h FFFFh t	FFFFh t	FFh t		
row10					s <sup>c</sup>	t <sup>c</sup>		0
row11					S	t	FFFFh	
row12		0		0.01-	S	FFFFh	u	
row13	0	0	1	02h	FFFFh	t	u	
row14					s <sup>c</sup>	t <sup>c</sup>	u <sup>c</sup>	
row15					S	t	u	FFFFh
row16					S	t	FFFFh	V
row17				03h	S	FFFFh	u	V
row18					FFFFh	t	u	V
row19					s <sup>c</sup>	t <sup>c</sup>	u <sup>c</sup>	v <u>c</u>
others		_			All other comb	inations		

<sup>&</sup>lt;sup>a</sup> The Ref column is the reference that ties the rows in this table to the corresponding rows in table 8.

b When more than one partition is defined there may be overhead that results in a loss of capacity

<sup>&</sup>lt;sup>c</sup> Value must be exact partition size allowed and when summed with other values in the row equal full capacity. This permits a MODE SENSE followed by a MODE SELECT with no change. It is highly recommended that this method only be used in the case where the MODE SELECT data is a return of the MODE SENSE data.

Table 8 — Partition sizes for wrap-wise partitioning (resultant sizes) (part 1 of 2)

Ref <sup>a</sup>	Partition 0 b	Partition 1 b	Partition 2 b	Partition 3 b
row1	$s=K^*n;$ where $n=N_2$	t=K	-	-
row2	$C_{MAX}$		-	
row3	$s=K^*n;$ where n=integer of $\{(N_2+1)/2\}$	t= <i>K</i> *m; where m= <i>N</i> <sub>2</sub> +1-n		-
row4	$s=K^*n;$ where n=integer of $\{(N_3+2)/3\}$	$t=K^*m;$ where m=integer of $\{(N_3+2)/3\}$	s= <i>K</i> *u; where u= <i>N</i> <sub>3</sub> +2-n-m	-
row5	$s=K^*n;$ where n=integer of $\{(N_4+3)/4\}$	$t=K^*m;$ where m=integer of $\{(N_A+3)/4\}$	$s=K^*u;$ where $u=integer$ of $\{(N_A+3)/4\}$	$s=K^*v;$ where $v=N_4+3-n-m-u$
row6	$C_{MAX}$			
row7	$C_{MAX}$		-	
row8	s= <i>K</i> *n; where 1<=n<= <i>N</i> <sub>2</sub>	C <sub>MAX</sub> - overhead- (partition size 0)		
row9	C <sub>MAX</sub> - overhead- (partition size 1)	t= <i>K</i> *m; where 1<=m<= <i>N</i> <sub>2</sub>		-
row10	$s=K^*n;$ where $1 <= n <= N_2$ and $n+m=N_2+1$	$t=K^*m;$ where $1<=m<=N_2$ and $n+m=N_2+1$		
row11	s= <i>K</i> *n;	t= <i>K</i> *m; where 1<=m<= <i>N</i> <sub>3</sub>	C <sub>MAX</sub> - overhead- (partition size 0)- (partition size 1)	
row12	where 1<=n<=N <sub>3</sub>	C <sub>MAX</sub> - overhead- (partition size 0)- (partition size 2)	u= <i>K</i> *p;	
row13	C <sub>MAX</sub> - overhead- (partition size 1)- (partition size 2)	t= <i>K</i> *m; where 1<=m<= <i>N</i> <sub>3</sub>	where 1<=p<=N <sub>3</sub>	-
row14	$S=K^*n;$ where $1 <= n <= N_3$ and $n+m+p=N_3+2$	$t=K^*m;$ where $1<=m<=N_3$ and $n+m+p=N_3+2$	u= $K^*$ p; where 1<=p<= $N_3$ and n+m+p= $N_3$ +2	

<sup>&</sup>lt;sup>a</sup> The values in the Ref column refer back to the associated row in <u>table 7</u>.

<sup>b</sup> The values for  $C_{\text{MAX}}$ , K,  $N_2$ ,  $N_3$ ,  $N_4$ , and the sum of existing partitions are specified in <u>table 9</u>.

Ref <sup>a</sup> Partition 0 b Partition 1 b Partition 2 b Partition 3 b C<sub>MAX</sub> - overhead $u=K^*p$ ; (partition size 0)row15 where  $1 <= p <= N_4$ (partition size 1)-(partition size 2) t=K\*m; where  $1 <= m <= N_4$  $C_{\mathrm{MAX}}$  - overheads=*K*\*n; (partition size 0)row16 where  $1 <= n <= N_{4}$ (partition size 1)-(partition size 3) C<sub>MAX</sub> - overhead-(partition size 0)v=*K*\*q; row17 (partition size 2)where  $1 <= q <= N_4$ (partition size 3)  $u=K^*p$ ; where  $1 <= p <= N_{\Delta}$ C<sub>MAX</sub> - overhead-(partition size 1)t=*K*\*m; row18 (partition size 2)where  $1 <= m <= N_4$ (partition size 3) v=*K*\*q; s=*K*\*n; t=K\*m; u=*K*\*p; row19 where  $1 <= m <= N_4$  and where  $1 <= p <= N_4$  and where  $1 <= q <= N_4$  and where  $1 <= n <= N_4$  and  $n+m+p+q=N_4+3$  $n+m+p+q=N_4+3$  $n+m+p+q=N_4+3$  $n+m+p+q=N_4+3$ Check Condition, Illegal Request, Invalid Field in Parameter Data others

Table 8 — Partition sizes for wrap-wise partitioning (resultant sizes) (part 2 of 2)

<sup>&</sup>lt;sup>b</sup> The values for  $C_{MAX}$ , K,  $N_2$ ,  $N_3$ ,  $N_4$ , and the sum of existing partitions are specified in <u>table 9</u>.

Table 9 — Partition valu	es bv d	density and	media type
--------------------------	---------	-------------	------------

Denometer in table 0	Primary Density Code				
Parameter in table 8	58h	5Ah	5Ch		
C <sub>MAX</sub> _b	1.5 TB	2.5 TB	6.0 TB		
<u>К <sup>a, b</sup></u>	37.500 GB	36.764 GB	107.142 GB		
N <sub>2</sub>	38	66	54		
N <sub>3</sub>	N/A	64	52		
N <sub>4</sub>	N/A	62	50		
Sum of all partitions <u>a, b</u> s+t+[u]+[v]	s+t=1 462.500 GB	s+t=2 463.235 GB s+t+u=2 426.470 GB s+t+u+v=2 389.705 GB	s+t=5 892.857 GB s+t+u=5 785.714 GB s+t+u+v=5 678.571 GB		

<sup>&</sup>lt;sup>a</sup> The precision of capacity values able to be expressed is limited by the 2-byte PARTITION SIZE field and the value of the PARTITION UNITS field of the Medium Partition mode page (see 6.6.13). Actual size on medium is not limited by the precision of the fields in the mode page.

## 4.2.3 Partitioning and capacity scaling

Partitioning of volumes is supported on capacity scaled volumes. If a volume has been capacity scaled through the use of the SET CAPACITY command (see 5.2.35), the medium available for use to record user data is reduced and partitioning functions within those bounds. The act of processing a SET CAPACITY command removes any partitions that may exist and changes the medium available for use to record user data. The resultant volume contains a single partition which may subsequently be partitioned using the Medium partition mode page (see 6.6.13) and the FORMAT MEDIUM command (see 5.2.3).

<sup>&</sup>lt;sup>a</sup> The values in the Ref column refer back to the associated row in table 7.

b The capacity values assume a volume that has not been capacity scaled (see 4.2.3).

#### 4.2.4 Partitioning and media types

Partitioning of volumes is supported on media in Ultrium 5 (i.e., primary density code = 58h) and and later logical formats only.

## 4.2.5 Partitioning and reformatting

Partitions are created and destroyed using the FORMAT MEDIUM command (see 5.2.3). How a volume is formatted depends on the settings in the Medium Partition mode page (see 6.6.13), if the volume is capacity scaled (see 4.2.3), and the settings in the FORMAT MEDIUM command (see 5.2.3). The FORMAT MEDIUM command specifies how to format the volume and the interactions of these conditions using the FORMAT field.

The Medium Partition mode page is used to specify the group of medium partitions. The partitioning of the mounted volume is not changed until a subsequent FORMAT MEDIUM command is issued while the volume is mounted.

The device ensures consistency of the partitioning values set in Medium Partition mode page by causing a CHECK CONDITION status with the sense key set to ILLEGAL REQUEST and the additional sense code set to PARAMETER VALUE INVALID to be returned to a subsequent FORMAT MEDIUM command attempting to use the values set in Medium Partition mode page if values in those values become inconsistent between when they were set and when the FORMAT MEDIUM command is received. The invalidation of the values in this page is accomplished by setting the FDP, SDP, and IDP bits to zero and the other values in this page to:

- a) the values dictated by the format of the currently mounted volume, if a volume is mounted; or
- b) the default values present after power-on, if no volume is mounted.

The invalidation of values in this page occurs if:

- a) the volume is capacity scaled (see 4.2.3); or
- b) other events that are determined to make the values in this page inconsistent.

## 4.2.6 Partitioning and encryption

The relationship between partitioning and encryption is described in <u>Device Hardware Encryption</u> (see 4.12 on page 50).

# 4.3 Object buffer

## 4.3.1 Object buffer introduction

This device contains an object buffer capable of holding logical objects being written to the medium or logical objects being transferred from the medium in read-ahead operations. The object buffer is used during write operations when the device is configured to use buffered mode (i.e., the BUFFER MODE field of the mode parameter header is set to a non-zero value per <a href="Mode Parameter Header for Mode Select (6/10)">Mode Select (6/10)</a> (see 6.6.1.1 on page 356))) and during read operations regardless of the buffer mode.

When the device is reading logical objects from the medium, it uses the object buffer in a read-ahead fashion to improve performance. Logical objects are read from the medium and placed into the object buffer such that they are available to an application that is reading without the application being required to wait for each block to be read from the medium prior to being transferred on the SCSI interface. Read-ahead operations often occur at the conclusion of space, locate, and load operations in order to prime the object buffer with logical objects in case a read operation follows.

## 4.3.2 BOP caching

Devices starting with LTO6 use a small portion of the object buffer as a cache to retain data read at BOP while the remainder of the object buffer is used for read-ahead operations. The data around BOP, once read, is generally retained in the BOP cache until a demount or partition change. If D\_BOPC of the MP 30h[43h]: Feature switches - Device attribute settings (see 6.6.21.5.3 on page 410) mode page is set to 0b and a command is received by the device that requests access to a logical object identifier (aka, logical block address) that is in the BOP cache, that data is read from the BOP cache without requiring actual access to the medium (i.e., it uses the cached data without changing the physical location of the medium). This allows for a volume that is located away from BOP to read the data around BOP very quickly without disturbing the current physical position of the medium. If D\_BOPC of the MP 30h[43h]: Feature switches - Device attribute settings mode page is set to 1b, then a request to perform positioning changes the physical location of the medium and performs a read-ahead operation as appropriate.

#### 4.3.2.1 BOP caching side effects

It is important to understand the side effects that BOP caching may present:

- a) Processing time to position near BOP may be transferred from the positioning command to a subsequent command (e.g., the time for a REWIND could be transferred to a subsequent UNLOAD);
- b) When reading data in the BOP cache and the command requests a read through the cache boundary to data not in the cache, there may be processing time to position the medium to the proper position to read the data, as well as the time to read the data from the medium;
- c) If a sequence of commands like:
  - 1) REWIND;
  - 2) READ one block;
  - 3) LOCATE to position prior to the REWIND;
  - 4) READ one block;
  - 5) Go to step 1,

is performed, the tape will typically move in a sequential fashion like a READ without positioning to BOP in each iteration.

# 4.4 Mode Page Behaviors

## 4.4.1 Policy — non-standard

This device implements a non-standard behavior related to mode page policy. The mode page policies defined are:

Mode page Number of mode page

policy copies

<Shared> One copy of the mode page that is shared by all I\_T nexuses.

<Per target port> A separate copy of the mode page for each target port with each copy shared

by all initiator ports.

<Per I\_T nexus> A separate copy of the mode page for each I\_T nexus

## 4.4.1.1 Mode parameter header and block descriptor policy

This device implements mode page policy in a manner different than specified in T10/SPC-4. The mode page policy for mode parameter header and block descriptor values depends on the specific parameter as shown here for the applicable parameters:

Field Mode page policy

BUFFERED MODE <Shared>
SPEED <Shared>
BLOCK LENGTH <Per I T nexus>

## 4.4.1.2 Mode page policy

The mode page policy implemented by this device is shown in table 10

**Table 10 — Mode page policy** (part 1 of 2)

Mode Page	MLUS_ª	Mode page policy	IP 87h_b	Returned in MP 3Fh_ <sup>c</sup>
Default mode page policy descriptor returned in IP 87h: Mode Page Policy (see 6.3.6 on page 246) as MP 3Fh[FFh]	-	<shared></shared>	Υ	-
MP 01h: Read-Write Error Recovery (see 6.6.5 on page 363)	-	<shared></shared>	ı	Υ
MP 02h: Disconnect-Reconnect (see 6.6.6 on page 364)	Υ	<per i_t="" nexus=""></per>	Υ	Υ
MP 0Ah: Control (see 6.6.7 on page 366)	-	<shared></shared>	•	Υ
MP 0Ah[01h]: Control Extension (see 6.6.8 on page 367)	Υ	<shared></shared>	Υ	Υ
MP 0Ah[F0h]: Control Data Protection (see 6.6.9 on page 368)	-	<per i_t="" nexus=""></per>	Υ	Υ
MP 0Fh: Data Compression (see 6.6.10 on page 370)	-	<shared></shared>	•	Υ
MP 10h: Device Configuration (see 6.6.11 on page 371)	-	<shared></shared>	ı	Υ
MP 10h[01h]: Device Configuration Extension (see 6.6.12 on page 374)	-	<shared></shared>	-	Υ
MP 11h: Medium Partition Page (see 6.6.13 on page 376)	-	<shared></shared>	-	Υ

## Key:

- No
- Y Yes
- <sup>a</sup> The MLUS (multiple logical units share) indicates if this mode page—subpage combination may be shared by other logical units (e.g., The FCP port (19h) page controls port related functions)
- b A mode page policy descriptor other than the default mode page policy descriptor is returned for this page in IP 87h: Mode Page Policy (see 6.3.6 on page 246).
- Whether on not the mode page is returned in mode page 3Fh or mode page 3Fh[FFh] is indicated in this column. Some vendor-specific pages are not returned with an all pages request.

**IBM LTO SCSI Reference** 

**Table 10 — Mode page policy** (part 2 of 2)

Mode Page	MLUS_ª	Mode page policy	IP 87h_b	Returned in MP 3Fh_ <sup>2</sup>
MP 18h: Fibre Channel Logical Unit (see 6.6.14.1 on page 382)	Υ	<per i_t="" nexus=""></per>	Υ	Υ
MP 18h: SAS Logical Unit (see 6.6.14.2 on page 383)	Υ	<per i_t="" nexus=""></per>	Υ	Υ
MP 19h: FCP port (see 6.6.15.1 on page 384)	Υ	<per port="" target=""></per>	Υ	Υ
MP 19h: SAS port (see 6.6.15.2 on page 385)	Υ	<per port="" target=""></per>	Υ	Υ
MP 1Ah: Power Condition (see 6.6.16 on page 386)	-	<shared></shared>	-	Υ
MP 1Ch: Informational Exceptions Control (see 6.6.17 on page 387)	-	<per i_t="" nexus=""></per>	Υ	Υ
MP 1Dh: Medium Configuration (see 6.6.18 on page 389)	-	<shared></shared>	-	Υ
MP 24h: Vendor-Specific (see 6.6.19 on page 390)	-	<shared></shared>	-	-
MP 2Fh: Behavior Configuration (see 6.6.20 on page 393)	-	<shared></shared>	-	Υ
MP 30h: Device Attribute Settings (see 6.6.21 on page 396)	Υ	<shared></shared>	Υ	Υ
MP 30h[01h]: Drive MAC address - Device attribute settings (see 6.6.21.3.2 on page 401)	Υ	<shared></shared>	Υ	Υ
MP 30h[02h]: Drive IP address and subnet mask - Device attribute settings (see 6.6.21.3.3 on page 403)	Υ	<shared></shared>	Υ	Y
MP 30h[20h]: Encryption mode - Device Attribute Settings (see 6.6.21.4.1 on page 405)	Υ	<shared></shared>	Υ	Y
MP 30h[40h]: SkipSync - Device attribute settings (see 6.6.21.5.1 on page 407)	Υ	<shared></shared>	Υ	Y
MP 30h[42h]: End of partition behavior control - Device attribute settings (see 6.6.21.5.2 on page 410)	Υ	<shared></shared>	Υ	Y
MP 30h[43h]: Feature switches - Device attribute settings (see 6.6.21.5.3 on page 410)	Y	<shared></shared>	Υ	Y
MP 3Eh: Engineering Support (see 6.6.22 on page 411)	-	<shared></shared>	-	

## Key:

- No
- Y Yes
- <sup>a</sup> The MLUS (multiple logical units share) indicates if this mode page—subpage combination may be shared by other logical units (e.g., The FCP port (19h) page controls port related functions)
- b A mode page policy descriptor other than the default mode page policy descriptor is returned for this page in IP 87h: Mode Page Policy (see 6.3.6 on page 246).
- <sup>c</sup> Whether on not the mode page is returned in mode page 3Fh or mode page 3Fh[FFh] is indicated in this column. Some vendor-specific pages are not returned with an all pages request.

## 4.4.2 Classification of mode parameters

The page control (PC) field of the MODE SENSE command indicates four classifications of mode pages:

Value	Description
00b	Current values
01b	Changeable values
10b	Default values
11b	Saved values.

This device has the following behaviors for mode parameters:

Table 11 — Mode parameter change behavior

Term	Values reported for Mode Sense with page control of Changeable values (01b)	Action when a value of a field recieved is different than the Current values (00b)_a
(changeable)		The current value is updated.
(changeable-special)	The bits of this field are set to one in the parameter data returned to a	See the description of the parameter to determine the action (e.g., the parameter may be writeable and change the behavior to that indicated by the received value, but not update the Current values).
(changeable-saveable)	MODE SENSE command with the PC field set to 01b (i.e., Changeable values).	The current value is updated.  If the SP bit in the MODE SELECT CDB is set to one, then the value for the Saved values (11b) for this page is updated and saved to non-volatile memory before SCSI status is returned.
(changeable-ignored)		The current value is unchanged. No action is taken.
(non-changeable)	The bits of this field are set to zero in the parameter data returned to a MODE SENSE with a PC field set to 01b (i.e., Changeable values).	The MODE SELECT command is rejected with a 5/2600h (ie, ILLEGAL REQUEST, INVALID FIELD IN PARAMETER LIST).
		a MODE SELECT command is different than the value in

A value in the mode parameter data received with a MODE SELECT command is different than the value in the mode parameter data returned to a MODE SENSE command with the PC field set to 00b (i.e., Current values).

This device implements the following features differently than specified in SPC-4:

- a) Save behavior non-standard (see 4.4.2.1 on page 35); and
- b) Parameter Saveable behavior non-standard (see 4.4.2.2 on page 35).

#### 4.4.2.1 Save behavior — non-standard

This device implements mode parameter saving in a manner different than specified in SPC-4. The SP bit of the MODE SELECT command (see 5.2.9) applies only to the parameters sent in parameter data to that MODE SELECT command. No other mode parameters' Current values are saved. This is contrary to SPC-4 which mandates that the Current values of all saveable mode pages be saved if the SP bit is set to one.

#### 4.4.2.2 Parameter Saveable behavior — non-standard

The parameter saveable (PS) bit in the mode parameters is set to one in the parameter data returned to a MODE SENSE if at least one mode parameter in the page is saveable. Since only some parameters are saveable and others are not, it may be possible that some of the changeable parameters in the page are saveable and other changeable parameters in the page are not. There is no programmatic method for retrieving a list of which specific mode parameters are saveable.

The parameter saveable (PS) bit in the mode parameters is ignored during the processing of a MODE SELECT command.


#### 4.4.3 Mode parameters and unit attentions

Some mode parameters, including mode parameters in the mode parameter header, in the block descriptor, and in some mode pages are affected by mounting a volume. When this occurs, there is no unit attention for MODE PARAMETERS CHANGED (i.e., 6/2A01h) established.

# 4.5 Programmable early warning

When writing, the application client may need an indication prior to early warning to allow for the application client to prepare to be ready for early warning (e.g., flush buffers in the application client).

Application clients that need this indication may request the device server to create a zone called the programmable-early-warning zone (PEWZ) by setting the PEWS field (see 6.6.8) to the requested size of the PEWZ. The EOP side of PEWZ is established at early-warning and extends towards BOP for a distance indicated by the PEWS field. See figure 4.



Maximum logical object identifier

Figure 4 — Programmable early warning example

WARNING

WARNING

WARNING

If PEWZ is used, all applications that may access the drive when a PEWZ exists, should support PEWZ or there is a risk of the application that does not support PEWZ detecting an unknown error or a diminished capacity when the PROGRAMMABLE EARLY WARNING error is reported.

WARNING

The REW bit in the Device Configuration mode page (see 6.6.11) shall have no effect on the device server behavior in the PEWZ.

The device server shall return CHECK CONDITION status, with the sense key set to NO SENSE, the EOM bit set to one and the additional sense code set to PROGRAMMABLE EARLY WARNING DETECTED at the completion of a command that caused the medium to transition into the PEWZ if that command is:

- a) WRITE(6); or
- b) WRITE FILEMARKS(6).

Encountering the PEWZ shall not cause the device server to perform a synchronize operation or terminate the command. If processing this command results in any other exception condition except early-warning, the CHECK CONDITION status associated with that exception condition shall be reported instead. If early-warning is crossed prior to the PROGRAMMABLE EARLY WARNING DETECTED additional sense being reported, the PROGRAMMABLE EARLY WARNING DETECTED additional sense shall be reported before the early-warning CHECK CONDITION.

If the PROGRAMMABLE EARLY WARNING DETECTED additional sense code was not reported, the next write in PEWZ or beyond early-warning that would otherwise complete with GOOD status, shall return the programmable-early-warning CHECK CONDITION instead.

If the PEWZ is entered and exited on the BOP side before the PROGRAMMABLE EARLY WARNING DETECTED additional sense code is returned, the device server shall not report CHECK CONDITION status with the additional sense code set to PROGRAMMABLE EARLY WARNING DETECTED.

# 4.6 Logical block protection

## 4.6.1 Logical block protection overview

The device contains hardware or software that is capable of checking and generating protection information (i.e., 4-byte CRC) that is transferred with logical blocks between the device server and an application client. This protection information transferred with logical blocks is saved to the medium with each logical block and read from the medium with each logical block. This protection information is validated at the destination prior to completing the task thereby ensuring that the logical block has not been corrupted. This level of detection is not achievable by methods where the application client inserts vendor-specific data protection information in its data. Some devices support a standardized method of logical block protection (see 4.6.1.1). The protection method (if any) used to write a given block does not need to be the same as the method (if any) used to read that same block. This includes where a drive (e.g., prior generation) which does not support the protection method used to write a given block may read those blocks using any (or no) protection method supported on the reading drive.

## 4.6.1.1 Logical block protection

Logical block protection support using the CRC32C (Castagnoli) algorithm (see D.2.) was added in LTO7 and may be used by an LTO7 drive when processing any generation of cartridge supported by the LTO7 drive. When used with prior generation cartridge it does not affect interoperability with drive generations that do not support the CRC32C algorithm. In other words, a cartridge written with CRC32C in an LTO7 drive may be read in a previous generation drive using a different algorithm.

A device that supports using protection information in the standardized method configures this capability using MP 0Ah[F0h]: Control Data Protection (see 6.6.9 on page 368). Logical block protection is enabled by setting the LOGICAL BLOCK PROTECTION METHOD field of the Control Data Protection mode page to a non-zero value. Logical block protection is disabled by setting the LOGICAL BLOCK PROTECTION METHOD field of the Control Data Protection mode page to zero.

A device server that supports using this protection information shall:

- a) set the PROTECT bit in standard inquiry (see 5.2.4.1) to one;
- b) set the SPT field of the Extended INQUIRY Data VPD page (see 6.3.5) to 001b; and
- c) set the value returned in the MAXIMUM BLOCK LENGTH LIMIT field of the READ BLOCK LIMITS command to a value which when added to the largest value supported in the LOGICAL BLOCK PROTECTION INFORMATION LENGTH field of the Control Data Protection mode page is less than or equal to the maximum length able to be represented in commands that transfer logical blocks between the application client and the device server.

## 4.6.2 Protection information on a volume

A recorded volume contains logical objects and format specific symbols. Logical objects are application client accessible. Format specific symbols are used by the device server to provide methods for recording logical objects on the medium in a manner that allows them to be successfully read at a later date and may not be application client accessible. Format specific symbols contain information used to protect logical objects. The drive includes the protection information field as one of the format specific symbols. The format specific symbol that is the protection information field is written to the medium with each logical block. The protection information used as a format specific symbol by the drive is a 4-byte Reed-Solomon CRC (see D.1.). A representation of logical objects and format specific symbols is shown in figure 5.

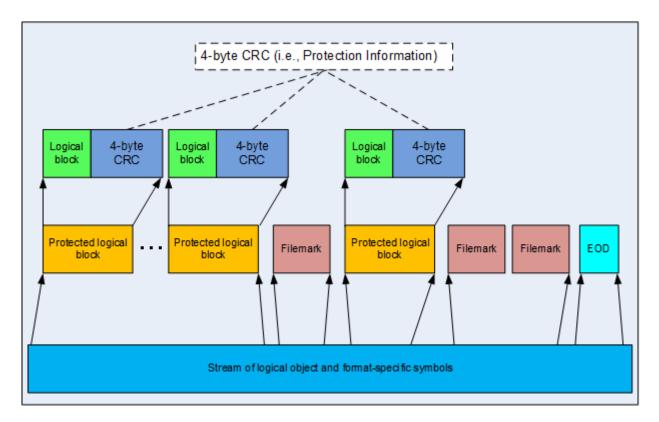


Figure 5 — Protection information shown in relation to logical objects and format specific symbols

The device generates the protection information and adds it to a logical block before recording the logical block to the medium if the command that transferred the logical block being recorded to medium was received on an I\_T\_L nexus for which the LOGICAL BLOCK PROTECTION METHOD field of the Control Data Protection mode page:

- a) is set to zero; or
- b) is set to a non-zero value and the LBP W bit of the Control Data Protection mode page is set to zero.

The drive reads the protection information from the medium, validates it, and removes it from the logical block before transferring the logical block to the application client if the command that is requesting the transfer of a logical block being read was received on an I\_T\_L nexus for which the LOGICAL BLOCK PROTECTION METHOD field of the Control Data Protection mode page:

- a) is set to zero; or
- b) is set to a non-zero value and the LBP\_R bit of the Control Data Protection mode page is set to zero.

Protection information may be:

- a) compressed;
- b) encrypted; or
- c) included in byte counts in log parameters.

NOTE 1 - Device side counters reported in log pages generally include bytes from the protection information at all times. Host side counters reported in log pages when CRC Protection and Logical block protection are disabled generally do not include bytes from the protection information. Host side counters reported in log pages when CRC Protection is enabled or when Logical block protection is enabled generally include bytes from the protection information.

## 4.6.3 Logical blocks and protection information

d) If the LOGICAL BLOCK PROTECTION METHOD field of the Control Data Protection mode page is set to zero for a specific I\_T\_L nexus, then a logical block transferred between the application client and the device

server through that I\_T\_L nexus is defined by <u>Table 12</u>.

Table 12 — Logical block with no protection information

Durke	Bit							
Byte	7	6	5	4	3	2	1	0
0	D /							
n-1		Data						

n = the TRANSFER LENGTH field specified in CDB for variable length transfers; the BLOCK LENGTH field specified in the mode parameter header (see SPC-4) for fixed block transfers.

e) If the LOGICAL BLOCK PROTECTION METHOD field of the Control Data Protection mode page is set to a non-zero value for a specific I\_T\_L nexus, then a logical block transferred between the application client and the device server through that I\_T\_L nexus is defined by Table 13.

Table 13 — Logical block with protection information

Disto	Bit								
Byte	7	6 5 4 3 2 1 0							
0		Data							
n-x-1	———— Data								
n-x		Protection Information							
n-1		•		Protection	information				

n = the TRANSFER LENGTH field specified in the CDB for variable length transfers; the вLOCK LENGTH field specified in the mode parameter header (see SPC-4) for fixed block transfers.

If the protection information to be transferred between the drive and the host is not the Reed-Solomon CRC, then the protection information is transformed between the Reed-Solomon CRC and the CRC algorithm selected (see 6.6.9).

#### 4.6.4 Protecting logical blocks transferred during writes

If the LOGICAL BLOCK PROTECTION METHOD field and LBP\_W bit of the Control Data Protection mode page(see 6.6.9) is set to a non-zero value for a specific I\_T\_L nexus, then each logical block transferred from the application client through that I\_T\_L nexus due to a WRITE(6) command contains protection information.

For the WRITE(6) command, the device server validates the protection information before the logical block is written to medium. If the FIXED bit in the CDB is set to one each logical block is validated before being written to the medium. If the validation of the protection information for a logical block fails, then the processing of the command terminates prior to writing the failed logical block to the medium. If the validation of the protection information fails, the device server reports a CHECK CONDITION status with Sense Code of Current or Deferred, the sense key set to HARDWARE ERROR and the additional sense code set to LOGICAL BLOCK GUARD CHECK FAILED.

An application client shall add the protection information on each logical block before transferring that logical block and shall increase the TRANSFER LENGTH field by the length of the logical block protection information if it has set the LOGICAL BLOCK PROTECTION METHOD field of the Control Data Protection mode page to a non-zero value and the LBP\_W bit of the Control Data Protection mode page to one.

The application client should add the protection information to the logical block at the earliest point possible. If the data has had the protection information added to the logical block at some point in the application client prior to the hardware that transfers the logical block, then the protection information should be validated when it is transferred. If the validation fails, then the application client should abort the command and report a status to the user that validation failed.

NOTE 2 - The device server treats the LOGICAL BLOCK PROTECTION INFORMATION field as the protection information. If the protection information is not added to the logical block, then the validation fails when the bytes

x = the LOGICAL BLOCK PROTECTION INFORMATION LENGTH specified in the Control Data Protection mode page.

used do not validate (e.g., the last 4-bytes of the logical block are treated as the CRC and the last 4-bytes of the logical block do not calculate as the CRC of the previous data)

## 4.6.5 Protecting logical blocks processed during reads and verifies

Protection information is validated by the device server as logical blocks are processed regardless of the the logical block protection settings. If the validation of the protection information fails, then the device server reports a CHECK CONDITION status with Sense Code of Current Sense, the sense key set to HARDWARE ERROR and the additional sense code set to LOGICAL BLOCK GUARD CHECK FAILED.

When a logical block is transferred to the host, if the LOGICAL BLOCK PROTECTION METHOD field and the LBP\_R bit of the Control Data Protection mode page (see 6.6.9) are set to a non-zero value for a specific I\_T\_L nexus, then the protection information is transferred with the logical block to the application client on that I\_T\_L nexus. An application client should validate the protection information on each logical block at the latest point possible before using the data.

# 4.7 Multiple Port Behavior

There are two primary ports in the device and may be either Fibre Channel ports or SAS ports. The two primary ports provide alternate paths through which the logical unit(s) of the device may be reached. The ports are referred to as Port 0 (or alternately, Relative Target Port 1) and Port 1 (or alternately, Relative Target Port 2). Each port maintains its own unique settings and address.

If the device is contained in a library or medium changer, the library may enable (also known as online) or disable (also known as offline) each port independently.

When an offline port is set online, all initiators on that port receive a Unit Attention condition.

Offline ports do not generate or maintain Unit Attention conditions for initiators while the port is in an offline state.

Usage of the device with both ports online is required for dual port failover to function correctly. Generally, all initiators, regardless of port, are treated the same as multiple initiators on the same port. The exception to this is the handling of mode pages and reservations when a hard port reset condition occurs (such as loss of light, etc). The following rules are described with respect to a local interface (the host port on which the hard reset condition occurred) and a remote interface (the other host port to which the device is attached).

- a) If there are no reservations when a hard reset condition occurs, most mode pages are reset. All initiators
  on the local interface receive a Unit Attention condition for Power On, Reset, or Device Reset Occurred.
  All initiators on the remote interface receive a Unit Attention condition for Mode Parameters Changed.
- b) If there are one or more reservations when a hard reset condition occurs and all reservations were granted to initiators on the local interface, all mode pages are reset and all SPC-2 reservations are reset. All persistent reservations remain in effect. All initiators on the local interface receive a Unit Attention condition for Power On, Reset, or Device Reset Occurred. All initiators on the remote interface receive a Unit Attention condition for Mode Parameters Changed.
- c) If there are one or more reservations when a hard reset condition occurs and one or more of the reservations were granted to an initiator on the remote interface, only those mode pages and SPC-2 reservations unique to each initiator on the local interface are reset. Mode pages and reservations unique to each initiator on the remote interface are not reset. Mode pages which are defined as common to all initiators are not reset. All initiators on the local interface receive a Unit Attention condition for Power On, Reset, or Device Reset Occurred. All initiators on the remote interface see no effects of the hard reset condition on the other interface.

# 4.8 Data Transfer, Block Limits, and Fixed Block Option

This device is designed to buffer multiple records. Logical objects may be prefetched to the buffer before they are requested by a READ command or held in the buffer after they are written by a WRITE command. For successive sequential-motion operations, the presence of the buffering in the device does not adversely affect the performance of the subsystem. Non-sequential motion does not result in errors, but may result in delays because of requirements to synchronize buffers or discard read ahead data. Buffer management in the device determines when to read additional data from the medium into the buffer, or when to write data from the buffer to the medium. A logical block is not written to tape until the block is entirely received into the buffer.

When the FIXED bit of the command is set to 1b,each command transfers zero or more logical blocks. The subsystem takes appropriate action to assemble or disassemble the logical blocks being transferred over the interface so that they remain independent blocks on the medium. There is no guarantee that the group of blocks transferred by the Write command is requested as a group by a subsequent Read command, so the device must be prepared to assemble and disassemble on a block boundary. This is managed by treating all blocks and filemarks as independent from one another, both for data compaction and for recording.

When the FIXED bit of the command is set to 0b and the TRANSFER COUNT is non-zero, each command processes a single logical object.

The device supports a minimum logical block length of 1 and a maximum logical block length of 16 777 215 (FF FFFFh) bytes if encryption is not being used and 8 388 608 (80 0000h) bytes if encryption is being used. Any block length between the limits is also supported. Refer also to READ BLOCK LIMITS - 05h (see 5.2.16 on page 111) for further information on block sizes and limitations. The READ BLOCK LIMITS command may report a lower maximum value depending on the support of Encryption and Logical Block Protection. If the logical object identifier of the current position on medium is greater than FFFFFF00h and less than FFFFFF0h, then rules for Logical EOM processing are applied. If the logical object identifier of the current position on medium is greater than or equal to FFFFFF0h, rules for physical end of partition processing are applied.

For read type commands, including READ and VERIFY, transfer lengths larger than the maximum device supported block size are accepted and the underlength condition rules are applied for transfer requests bigger than the actual block size. A transfer Length of 000000h indicates that no bytes/blocks are transferred. This condition is not considered an error and the logical position is not changed.

For write type commands, including WRITE, and WRITE FILEMARKS, a transfer Length of 000000h indicates that no bytes/blocks are transferred. This condition is not considered an error and the logical position is not changed.

# 4.9 Request Sense Information, ILI, and Command Interactions

The behavior and interactions between some of the commands and the INFORMATION and ILI fields in Request Sense are rather complicated. This section details the various commands which may set the information or ILI fields, and summarizes the relationship between such commands, their parameters, the encountered conditions, the reported status, and the expected behavior of these fields and the resulting device position.

## 4.9.1 General Read-Type Handling

Commands which return block data from media or the buffer to the host have the same general behavior. These commands include READ and VERIFY. The major difference between these is whether or not data is returned to the host.

The block at the current position is processed first, and subsequent blocks are processed in the order they were written (proceeding towards logical end of partition). The ending position is after the last block processed. For these commands, "after" will refer to the start of the next block towards the logical end of partition, and "before" will refer to the start of referenced block.

To illustrate this, from location 'N', a Read operation will return block 'N', and be positioned at 'N+1' ("after" N).

A successful command with a FIXED bit of 1b transfers the requested Transfer Length, times the current block length in bytes to the initiator. A successful command with a FIXED bit of 0b transfers the requested Transfer Length in bytes to the initiator. Upon completion, the logical position is "after" the last block transferred.

If SILI bit is 1b and the FIXED bit is 0b, the target performs one of the following actions:

- a) Reports CHECK CONDITION status for an incorrect block length condition only if the overlength condition exists and the BLOCK LENGTH field in the mode parameter block descriptor is non-zero. The associated sense data is 0/0000 (INCORRECT LENGTH, NO SENSE DATA).
- b) Does not report CHECK CONDITION status if the only error is the underlength condition, or if the only error is the overlength condition and BLOCK LENGTH field of the mode parameters block descriptor is 0b. (See <a href="note-4">note-4</a> on <a href="page-44">page-44</a>.)

If the SILI bit is 1b and the FIXED bit is 1b, the target terminates the command with CHECK CONDITION status with associated sense data of 5/2400 (ILLEGAL REQUEST, INVALID FIELD IN CDB).

If the SILI bit is 0b and an incorrect length block is read, CHECK CONDITION status is returned and the ILI and VALID bits are set to 1b in the sense data. Upon termination, the logical position is "after" the incorrect length block. If the FIXED bit is 1b, the INFORMATION field is set to the requested Transfer Length, minus the actual number of blocks read (not including the incorrect length block).

If the FIXED bit is 0b, the INFORMATION field is set to the requested Transfer Length, minus the actual block length in two's complement format.

If the logical unit encounters a filemark during a command, CHECK CONDITION status is returned and the FILEMARK and VALID bits are set to 1b in the sense data. The associated sense data is set to 0/0001 (NO SENSE, FILEMARK DETECTED). Upon termination, the logical position is "after" the filemark. If the FIXED bit is 1b, the INFORMATION field is set to the requested Transfer Length, minus the actual number of blocks read (not including the filemark). If the FIXED bit is 0b the INFORMATION field is set to the requested Transfer Length.

If the logical unit encounters end-of-partition during a command, CHECK CONDITION status is returned and the EOM and VALID bits are set to 1b in the sense data. Associated sense data is set to 3/0002 (MEDIUM ERROR, END OF PARTITION/MEDIUM).

If the logical unit encounters early warning and the REW bit is set to 1 in the Device Configuration mode page, CHECK CONDITION status is returned and the EOM and VALID bits are set to 1b in the sense data. Associated sense data is set to D/0002 (OVERFLOW, END-OF-PARTITION/MEDIUM DETECTED). If the FIXED bit is 1b, the INFORMATION field is set to the requested Transfer Length, minus the actual number of blocks transferred. If the FIXED bit is 0b, the INFORMATION field is set to the requested Transfer Length.

If the drive encounters End-of-Data (EOD) while processing this command, the command is terminated at the EOD position and CHECK CONDITION status is returned with associated sense data of 8/0005 (BLANK CHECK, END-OF-DATA DETECTED).

If the logical unit encounters beginning-of-partition during a command, CHECK CONDITION status is returned and the EOM and VALID bits are set to 1b in the sense data. Associated sense data is set to 0/0004 (NO SENSE, BEGINNING OF PARTITION/MEDIUM).

NOTE 3 - Because the residue information normally provided in the INFORMATION field of the sense data may not be available when the SILI bit is set, use other methods to determine the actual block length. For example: include length information in the data block itself, or in the case of underlength transfers, the host adapter or device driver may return accurate transfer length information.

NOTE 4 - In the case of the FIXED bit of 1b with an overlength condition, only the position of the incorrect-length logical block can be determined from the sense data. The actual length of the incorrect block is not reported, and also cannot be derived from the transfer length (the device truncates the overlength block to match the current block length from the mode header). Other means may be used to determine the actual length (for example, backspace and read it again with FIXED bit set to 0b).

## 4.9.2 Interactions Summary

The following table summarizes various commands with the specified options, the encountered conditions, and the expected results.

Scenario	Fixed	SILI	Block Length	Sense Error <sup>1</sup>	Information <sup>1 2</sup>	Flags IFE <sup>1</sup>	Position <sup>1</sup>
reportable UA	Х	Х	Х	UA	not valid (0)	-	unchanged (no command)
reportable DCC	Х	Х	Х	DCC	not valid (0)	-	unchanged (no command)
Dand (am.)	1	1	0	5/2400	transfer length	-	unchanged (no read)
Read (any)	1	0	0	5/2400	transfer length	-	unchanged (no read)
Read transfer length 0	Х	х	X	good	-	-	unchanged (no read)
Read (correct length(s))	Х	х	Х	good	-	-	after last block
	0	0	Х	0/0000	transfer length - block size (+)	ı	after block
	0	1	Х	good	-	-	after block
Read Underlength	1	0	non-0	0/0000	transfer length - blocks read not including incorrect block (+)	ı	after incorrect block

**Table 14 — Information and ILI Behavior Summary** (part 1 of 3)

Table 14 — Information and ILI Behavior Summary (part 2 of 3)

Scenario	Fixed	SILI	Block Length	Sense Error <sup>1</sup>	Information <sup>1 2</sup>	Flags IFE <sup>1</sup>	Position <sup>1</sup>
	0	0	Х	0/0000	transfer length - block size (-)	ı	after block
	0	1	0	good	-	-	after block
Read	0	1	non-0	0/0000	transfer length - block size (-)	I	after block
Overlength	1	0	non-0	0/0000	transfer length - blocks read not including incorrect block (+)	I	after incorrect block
	0	Χ	Х	0/0001	transfer length	F	after filemark
Read FM	1	0	non-0	0/0001	transfer length - blocks read not including filemark (+)	F	after filemark
	0	Χ	Х	8/0005	transfer length	E <sup>7</sup>	unchanged (at EOD)
Read EOD	1	0	non-0	8/0005	transfer length - blocks read (+)	E <sup>7</sup>	after last block (at EOD)
	0	Χ	Х	perm	transfer length	-	unchanged (at perm)
Read Perm	1	0	non-0	perm	transfer length - blocks read (+)	•	after last block (at perm)
	0	Χ	Х	3/1404	transfer length	-	crossed EOD (position may
Read after EOD/Perm	1	0	non-0	3/1404	transfer length - blocks read (+)	-	change in non-predictable fashion, limited commands available)
D 1 ()	0	Х	Х	0/0004	transfer length	Е	at BOP (0)
Read (reverse)	1	0	non-0	0/0004	transfer length - blocks read (+)	Е	at BOP (0)
Write (any)	1	-	0	5/2400	transfer length	-	unchanged (no write)
Write transfer length 0	Х	1	Х	-	-	-	unchanged (no write)
	0	•	Х	0/0000 0/0002	0	Е	after block
Write in Early Warning	1	1	non-0	0/0000 0/0002	transfer length - blocks written (usually 1)	Е	after blocks written
Write at EOM	Χ	-	Х	D/0002	transfer length	Е	unchanged (no write)
	0	-	X	perm	transfer length or 0 (if data is in buffer)	-	after last block in buffer
Write Perm	1	-	non-0	perm	transfer length - blocks transferred into buffer	-	after last block in buffer
Write after Perm	Х	-	Х	3/3100	transfer length	-	unchanged (no write)
Locate (target after EOD)	enco	ountere	d EOD	8/0005	not valid (0) <sup>5</sup>	E <sup>7</sup>	at EOD <sup>5</sup>

**Table 14 — Information and ILI Behavior Summary** (part 3 of 3)

Scenario	Fixed	SILI	Block Length	Sense Error <sup>1</sup>	Information <sup>1 2</sup>	Flags IFE <sup>1</sup>	Position <sup>1</sup>	
Locate	encountered Perm		encountered Perm		perm	not valid (0) <sup>5</sup>	1	indeterminate (unchanged or at perm) <sup>5</sup>
	enc	ountere	ed FM	0/0001		F	after FM	
Conne	enco	ountere	d EOD	8/0005	Count - blocks	E <sup>6</sup>	at EOD	
Space blocks	enco	ountere	d BOP	0/0004	traversed <sup>3</sup>	Е	at BOP (0)	
	encount		d perm	perm		-	indeterminate (unchanged or at perm) <sup>3</sup>	
	encountered EOD		8/0005		E <sup>6</sup>	at EOD <sup>4</sup>		
Space	enco	encountered BOP		0/0004	Count - FMs	Е	at BOP (0)	
filemarks	encountered perm		perm	traversed <sup>4</sup>	•	indeterminate (unchanged or at perm) <sup>4</sup>		
	enco	ountere	d EOD	8/0005	Count -	E <sup>6</sup>	at EOD <sup>5</sup>	
Space	enco	ountere	d BOP	0/0004	sequential FMs traversed	Е	at BOP (0)	
sequential filemarks end		ountered	d perm	perm	immediately prior to ending position <sup>5</sup>	1	indeterminate (unchanged or at perm) <sup>5</sup>	
Chase	enco	ountere	d EOD	good	_5	-	at EOD <sup>5</sup>	
Space EOD	enco	ountered	d perm	perm	not valid (0) <sup>5</sup>	-	indeterminate (unchanged or at perm) <sup>5</sup>	

## Legend:

Flags:

46

ILI bit #/### CC, sense of Sense Key/ASC ASCQ

E EOM bit perm CC, sense as per perm Filemark bit good No CC (no sense)

- None set
- Not applicable

## Notes:

- 1 These fields are outputs (results) from the scenario operation.
- 2 Partial blocks are not considered read, written or traversed.
- 3 Information field will accurately reflect the ending position.
- Information field will accurately reflect the ending position but it is not in units of logical blocks, so additional means of determining absolute location, such as Read Position, must be used.
- Information field does not accurately reflect the ending position, another means of determining absolute location, such as Read Position, must be used.
- The EOM bit may be set only if the current position is in the early warning region or if the end of partition is encountered.
- The EOM bit will only be set if end of partition is encountered (this condition should never occur), so EOM should not be set in this case. The standard specifies that EOM bit shall be set only if the current position is in the early warning region or if the end of partition is encountered.

# 4.10 Drive Cleaning

## 4.10.1 Cleaning the Drive in a Library

In a library, the drive may be automatically cleaned. If the library configures the drive for automatic cleaning, then the drive behaves as follows:

When the drive determines that either maintenance cleaning is required, or that the SARS thresholds have been reached, a message is sent to the library (via the Library/Drive interface) to request cleaning. This occurs when the Cleaning message is normally sent to the SCD (Single Character Display). The library schedules the mounting of the cleaning cartridge. Thus, the host operating system and application are freed of any responsibility to facilitate the cleaning.

## 4.10.2 Drive Cleaning Indicators

For stand-alone drive models, automatic cleaning of the drive is not possible. For library models, automatic cleaning of the drives by the library may be disabled (although it is not recommended). For either case, cleaning of the drives must be managed by the host application or manually, by the operator.

NOTE 5 - Failure to clean a drive may result in data loss.

This section describes how cleaning indicators are presented from the drive. The cleaning indicators may be presented even with automatic cleaning enabled in a library environment. The cleaning indicators can be presented through the following:

- a) Panel Cleaning Indication (see 4.10.2.1)
- b) Host Interface Dynamic Cleaning Indicators (see 4.10.2.2)
- c) Host Interface Static Cleaning Indicator (Sense Data Byte 70) (see 4.10.2.3)

#### 4.10.2.1 Panel Cleaning Indication

A CLEAN message is displayed on the SCD (Single Character Display) when cleaning with a cleaning cartridge is required. For additional details, see the Operator Guide for this product.

#### 4.10.2.2 Host Interface - Dynamic Cleaning Indicators

Dynamic cleaning indicators that are sent across the host interface include:

a) ASC/ASCQ codes related to cleaning in <u>Error Sense Information (see Annex B. on page 466)</u>. Cleaning Indicators reported with Sense Key 1 may only be reported in certain situations, see <u>MP 01h: Read-Write Error Recovery (see 6.6.5 on page 363)</u>.

Table 15 — ASC/ASCQ Codes Related to Clea
---

Code Description	Sense Key	ASC ASCQ
Drive Requires Cleaning	0	82 82
Cleaning in Progress (cleaner cartridge)	2	30 03

b) TapeAlert codes related to cleaning as described in <u>LP 2Eh: TapeAlerts (see 6.4.16 on page 314)</u>.

NOTE 6 - If the device driver shields the application from dynamic notifications, the information is usually available from the system error log.

## 4.10.2.3 Host Interface - Static Cleaning Indicator (Sense Data Byte 70)

The bit significance of sense data byte 21 follows:

#### Bit Description

Set to 1b "Cleaning Required: Normal Maintenance" when cleaning is required because of the normal preventive maintenance guideline (See "MP 2Fh: Behavior Configuration" on page 393.).

Reset to 0b when the cleaning cartridge is loaded.

## 4.10.3 Cleaning Criteria

There are two main criteria used by the drive to call for cleaning:

a) Clean Required (also known as Clean Now TapeAlert 14h)

Clean Required is triggered when the drive posts specific permanent errors or is running degraded. It is not based on temporary or permanent error rates. The permanent errors are typically read/write perms or servo related perm failures. Not all read/write or servo perms will trigger a clean. The errors are typically sticky, which means that the drive may not allow data operations unless a clean is performed, even if a power cycle occurs;

b) Clean Requested (also know as Clean Periodic TapeAlert 15h)

Clean Requested is based on usage, but not media motion hours. Two criteria are used, Data sets processed or Meters of tape pulled across the head. If another cartridge is inserted after Clean Requested is asserted, the drive continues to operate. However, the 'C' on the Single Character Display (SCD) of the drive persists until the drive is cleaned or power cycled. If the drive is power cycled, the 'C' will reappear on the SCD until the drive is cleaned. Periodic clean events continue to be posted to the engineering log (see 6.7.1.1) after every cartridge.

Table 16 —	Drive Cleaning	Criteria to	assert	Clean R	Requested

Generation	Data Sets	Head Tape	Equivalent Full File Passes_ <sup>a</sup> Based On:		
	Processed	Meters Pulled	Data Sets	Meters of Tape	
LTO 5 HH	5_000_000	2_500_000	8	39	
LTO 5 FH	7_500_000	3_750_000	12	58	
LTO 6 FH & HH	15_000_000	3_750_000	15	34	
LTO 7 FH & HH	18_000_000	3_750_000	15	36	

#### Key:

HH - Half-Height

FH - Full-Height

<sup>&</sup>lt;sup>a</sup> Equivalent Full File Passes is an estimate and are not used as criteria. This information provides a feel for the criteria used. Note that this criteria does not consider whether or not the tape is actually used in a full-file manner or whether the tape is only used repeatedly around a short area of tape.

### 4.11 WORM Behaviors

### 4.11.1 Conditions for Writing

If the following condition is met, writing is allowed:

c) the cartridge is uninitialized

If all the following conditions are met, writing is allowed:

- a) the current logical position is at BOP
- b) there are only filemarks between here and EOD

If all of the following conditions are met, writing is allowed:

- a) if the current logical position is at BOP
- b) there are exactly 1 or 2 data records, followed by 0 to infinite number of filemarks, followed by no data records, followed by EOD

If all of the following conditions are met, writing is allowed:

- a) the current logical position is between BOP and EOD:
- b) there are only filemarks from the current logical position to EOD
- c) there is at least one filemark **immediately** before the current logical position

If the following condition is met, writing is allowed:

a) the current logical position is at EOD

## 4.11.2 Command Behavior When WORM Medium Has Been Tampered With

<u>Table 379</u> specifies the behavior of the device when it has detected the WORM medium that is loaded in the drive has been tampered with (<u>See "MP 10h: Device Configuration" on page 371.</u>).

Table 17 — Behavior when the loaded medium has suspect integrity

Command	WTRE=01b	WTRE=00b or 10b
WRITE	7/300Dh	7/300Dh
WRITE FILEMARK n (n !=0)	7/300Dh	7/300Dh
WRITE FILEMARK 0 (buffered data)	7/300Dh	7/300Dh
WRITE FILEMARK 0 (no buffered data)	GOOD	GOOD
ERASE	7/300Dh	7/300Dh
READ	GOOD	3/300Dh
VERIFY	GOOD	3/300Dh
SPACE	GOOD	3/300Dh
LOCATE to (block !=0)	GOOD	3/300Dh
LOCATE to 0	GOOD	GOOD
REWIND	GOOD	GOOD
UNLOAD	GOOD	GOOD
LOAD	GOOD	GOOD

### 4.12 Device Hardware Encryption

This device contains hardware which performs user data write encryption and read decryption, protecting all user data written to the medium from unauthorized use [provided it is integrated into a secure system design]. Device support for encryption may be determined by reading MP 24h: Vendor-Specific (see 6.6.19 on page 390) with the MODE SENSE command.

This device supports multiple ways of controlling encryption settings. These encryption control methodologies are called:

- a) Encryption Control IBM Proprietary Protocol (IPP) (see 4.12.1 on page 50); and
- b) Encryption Control T10 Standards (see 4.12.2 on page 50).

On volumes with multiple partitions, the drive handles encryption in each partition as determined by the state of the partition, position of the write and the current method / mode / policy:

- a) if the encryption method in the drive is set to the IBM proprietary methods (see 4.12.1) and the position is at BOP (logical object 0), then the block encryption is determined by the BOP write policy (if set to encrypt the write will not be allowed if there is no current key);
- b) if the encryption method in the drive is set to the IBM proprietary methods (see 4.12.1) and the current position is not at BOP (logical object greater than 0), then encryption is required only if there is at least one encrypted block anywhere on that partition; and
- c) if the encryption method in the drive is set to AME-T10 (see 4.12.2), then an intermix of encrypted and unencrypted blocks are allowed.

### 4.12.1 Encryption Control - IBM Proprietary Protocol (IPP)

The following terms are used to describe the methods of control that fall into the IPP:

- a) Library Managed Encryption (LME);
- b) System Managed Encryption (SME); and
- c) Application Managed Encryption IBM (AME-IBM).

When a device is enabled to perform encryption using one of the IBM Proprietary Protocols (i.e., LME, SME, or AME-IBM) encryption parameters are determined at first write from BOP. On volumes with multiple partitions this means that on a write from BOP (i.e. LBA 0) of each partition the encryption parameters are determined. Writes away from BOP use the existing encryption parameters. If any logical block on the partition is encrypted, then all logical blocks subsequently written to the partition must be encrypted. If no logical blocks on the partition are encrypted then subsequent logical blocks are not required to be encrypted. When a partition change occurs the encryption parameters are cleared.

Please see IBM for additional information on IPP.

#### 4.12.2 Encryption Control - T10 Standards

The T10 standards method of controlling encryption are described in SSC-5 as well as in this document. Note that not all methods described in SSC-5 are supported.

This device uses the term Application Managed Encryption - T10 (AME-T10) to signify that it is using this standards based method.

When this device is enabled to perform encryption using AME-T10 the encryption parameters are set by either the application or the library (see 4.12.2.1) depending on how AME-T10 is configured. When the encryption parameters are set to encrypt, logical blocks are encrypted. When encryption parameters are set to not encrypt, logical blocks are not encrypted. Changing partitions when enabled for AME-T10 does not affect the encryption parameters.

This device supports the T10 method of passing the key in clear text. Some generations support RSA key wrapping with KEY FORMAT 02h. For specifics on support refer to <u>SECURITY PROTOCOL IN (SPIN) - A2h</u>

(see 5.2.32 on page 168), SECURITY PROTOCOL OUT (SPOUT) - B5h (see 5.2.33 on page 169), and Security Protocol Parameters (SPP) (see 6.8 on page 427).

# 4.12.2.1 External Data Encryption Control

This device supports control of encryption via the Automation/Drive Interface (ADI) using some of the methods described in ADC-4. Refer to the ADI Implementation Reference for a description of how to enable these methods.

#### 4.13 Attachment Features

#### 4.13.1 Types of Interface Attachments

This device communicates with servers that use Fibre Channel or SAS interfaces. The interfaces share certain tape LUN behaviors, but also possess unique features. This chapter describes the common and unique features of these interfaces.

### 4.13.2 Common Tape LUN Behaviors

Fibre Channel and SAS attached devices share the following tape LUN behaviors:

- a) Power-On (see 4.13.2.1 on page 52);
- b) Reset Strategy (see 4.13.2.2 on page 52);
- c) Abort Handling (see 4.13.2.3 on page 52);
- d) Multi-initiator Support (see 4.13.2.4 on page 54); and
- e) Status Codes (see 4.13.2.5 on page 55).

#### 4.13.2.1 Power-On

The first UAT eligible command (see table 28) from any initiator gets a CHECK CONDITION status with UNIT ATTENTION sense data for the power-on. After this, any medium access command is reported with a Sense Key of NOT READY and an additional sense code of LUN HAS NOT SELF-CONFIGURED YET (3E00).

If a cartridge is mounted in the drive when it powers up, the cartride is unloaded, and once the drive has completed its self test and setup procedures, the drive attempts to load the cartridge. During this unmount, self-test, and remount processing, medium access commands are reported with an additional sense code of DRIVE IN PROCESS OF BECOMING READY (0401).

### 4.13.2.2 Reset Strategy

The drive supports the hard reset option as is required by SCSI-3. On receiving a reset, the following actions are taken:

- a) The current I/O process is aborted, as in Abort Handling.
- b) Any queued I/O processes from other initiators are removed.
- c) All SPC-2 reservations are cleared, but Persistent Reservations remain in effect.
- d) Most mode values are reset to their defaults.
- e) A unit attention condition is set.
- f) A logical position is established that may or may not be the same as the position prior to the reset. Where possible, the logical position prior to reset is maintained.
- g) The next command that is eligible for the UNIT ATTENTION CHECK CONDITION from each initiator gets a CHECK CONDITION STATUS, with UNIT ATTENTION sense data for the reset. However, other commands may not be processed until the internal state of the drive has been reset.

### 4.13.2.3 Abort Handling

Table 18 specifies the abort processing for this device.

**Table 18 — Abort Condition Handling** (part 1 of 2)

Command	Abort Processing
ALLOW OVERWRITE	The Command completes
ERASE	Long erase is aborted as quickly as possible without corrupting tape format. Short erase completes.
FORMAT	If modification to medium has started then the command is completed; otherwise, no action is taken.
INQUIRY	None.
LOAD/UNLOAD	Load completes (e.g., if the HOLD bit is zero, logically positions tape at BOP 0). Unload is aborted, leaving logical position at BOP 0 unless operation is past the 'point of no return', in which case the unload completes (e.g., if the HOLD bit is zero, the tape is ejected).
LOCATE	The logical position is set back to that at the start of the operation unless the operation is past its 'point of no return', in which case the operation completes.
LOG SELECT	If data transfer is completed, command is completed; otherwise, no action is taken.
LOG SENSE	None.
MODE SELECT	If data transfer is completed, command is completed; otherwise, no action is taken.
MODE SENSE	None.
PERSISTENT RESERVE IN	None.
PERSISTENT RESERVE OUT	If data transfer is completed, the command is completed; otherwise, no action is taken.
PREVENT ALLOW MEDIUM REMOVAL	The command completes.
READ	The current position is set after the last logical block to be completely transferred to the host.
READ ATTRIBUTE	None.
READ BLOCK LIMITS	None.
READ BUFFER	None.
READ POSITION	None.
RECEIVE DIAGNOSTIC RESULTS	None.
RELEASE UNIT	The command completes.
REPORT DENSITY SUPPORT	None.
REPORT LUNs	None.
REPORT SUPPORTED OPERATION CODE	None.
REPORT SUPPORTED TASK MANAGEMENT FUNCTIONS	None.
REQUEST SENSE	Sense data is discarded.
RESERVE UNIT	The command completes.
REWIND	The command completes.
SECURITY PROTOCOL IN	None.
SECURITY PROTOCOL OUT	If data transfer is completed, the command is completed; otherwise, no action is taken.

**Table 18 — Abort Condition Handling** (part 2 of 2)

Command	Abort Processing
SEND DIAGNOSTIC	Vendor unique.
SET CAPACITY	If modification to medium has started then the command is completed; otherwise, no action is taken.
SPACE	The logical position is set back to that at the start of the operation unless the operation is past its 'point of no return', in which case the operation completes.
TEST UNIT READY	None.
VERIFY	The logical position is set to the next record boundary after the point where the verify was aborted.
WRITE	Depending on where in the processing of the command the drive is, either no logical blocks, the logical block, or some of the logical blocks, if transfering in fixed block mode, are written to the buffer. The logical position is set to the point where the last block was written.
WRITE ATTRIBUTE	If data transfer is completed, the command is completed; otherwise, no action is taken.
WRITE BUFFER	If data transfer is completed, the command is completed; otherwise, no action is taken.
WRITE FILEMARKS	The command completes.

### 4.13.2.4 Multi-initiator Support

This device supports an infinite number of I\_T nexuses, but the device has a limit on how many I\_T nexuses can be logged in processing commands concurrently. If this limit is exceeded, then the device implicitly logs out the least recently used (LRU) I\_T nexus that:

- a) is not reserved;
- b) is not registered;
- c) is not the I\_T nexus that last processed a medium access command; and
- d) does not have an outstanding command.

The device supports untagged queuing when operating with multiple initiators. If a command from one initiator is being processed when a command other than INQUIRY, REPORT LUNS, REQUEST SENSE, and TEST UNIT READY is received from a second initiator, the new command may be queued. Media access commands (for example, WRITE, WRITE FILEMARKS, READ, VERIFY, REWIND, MODE SELECT that changes block size) are always processed in strict order of receipt.

The INQUIRY, REPORT LUNS, REQUEST SENSE, and TEST UNIT READY commands are always processed immediately, irrespective of whether a command from another initiator is being processed.

The drive maintains sense data for the supported number of initiators. If an additional initiator connects to the drive and causes an initiator to be implicitly logged out, the drive erases all sense data for that initiator before processing the command for the new initiator. See <a href="Sense Data Management">Sense Data Management</a> for more details of sense data management.

#### 4.13.2.5 Status Codes

Table	ـ 19 ـ	<ul><li>Statu</li></ul>	s Code	26

Status Code	Value	Circumstance
GOOD	00h	The command completed without problems.
CHECK CONDITION	02h	A problem occurred during command processing. The sense data should be examined to determine the nature of the problem.
BUSY	08h	The drive is unable to accept the command at this time. This status is returned during the power-on sequence or if there are commands from too many I_T nexuses outstanding. (See <a href="Multi-initiator Support">Multi-initiator Support</a> .)
RESERVATION CONFLICT	18h	This status is returned if the drive is reserved for an I_T nexus other than the one sending the command.
QUEUE FULL	28h	Not normally returned.

#### 4.13.3 Features of the Fibre Channel Interface

This device is compliant with the American National Standard, Project T10/Project 1828-D, Information Technology - Fibre Channel Protocol for SCSI, Fourth Version (FCP-4), Revision 02b, January 3, 2011. The key features of the FC-Tape Technical Report of the Accredited Standard Committee NCITS that were found useful are included in FCP-4. IBM recommends that a server's device driver and host bus adapter (HBA) use:

- a) Precise delivery of commands;
- b) Confirmed completion of FCP I/O operations;
- c) Retransmission of unsuccessfully transmitted IUs; and
- d) Task retry identification as defined in FCP-4.

These features may be listed in HBA settings either individually or as a group and called:

- a) FCP-2 support;
- b) Class-3 Error Recovery;
- c) FC-Tape;
- d) Confirmed Completion; or
- e) Task retry identification.

The World Wide Node Name and Port Name that are used by the device follow the format of the Institute of Electrical and Electronics Engineers (IEEE).

#### 4.13.3.1 Topology

Fibre Channel devices (such as this device and a server) are known as nodes and have at least one port through which to receive and send data. The collection of components that connect two or more nodes is called a topology. Fibre Channel systems consist solely of two components: nodes with ports and topologies.

Each port uses a pair of fibers: one fiber carries data into the port, and the other carries data out of the port. The fibers in the channel are optical strands. The fiber pair is called a *link* and is part of the topology. Data is transmitted over the links in units known as *frames*. A frame contains an address identifier that gives the fabric and node for which the frame is destined.

This device can be attached in a two-node configuration, either directly to a switch as a public device (switched fabric) or directly to a host bus adapter (HBA) as a private device (direct connection). This device may be configured to any supported topology via a library interface, or configured by using vital product data (VPD) settings. The type of connection also depends on whether the drive recognizes the connection as a loop or a fabric connection:

a) An L port supports a Fibre Channel Arbitrated Loop connection to an L port or FL port.

b) An N\_port supports direct connection to an F\_port (for example, a director-class switch) in a fabric topology.

Regardless of the port to which this device is connected, it automatically configures to a public device (through an F\_port or FL\_port to a switch) or to a private device (through an L\_port by using direct attachment to a server). This device supports two topologies:

- a) Two-Node Switched Fabric Topology (see 4.13.3.1.1 on page 56); and
- b) Two-Node Direct Connection Topology (see 4.13.3.1.2 on page 56).

<u>Table 20</u> lists the topologies in which this device is able to operate, the Fibre Channel server connections that are available, and the port (NL, N, FL, or F) through which communication must occur. The sections that follow describe each topology.

	Type of Fibre Channel Port to Which the Drive Port Connects						
Drive Port Configuration	Server Po (Private - Direc	ort (HBA) ct Connection)	Switch Port (Public - Switched Fabric)				
Billo i on comigaration	Point-to-Point	Arbitrated Loop	Topology (FC-AL)	Fabric Topology (F_Port)			
	Topology (N_Port)	L_Port	FL_Port				
Drive port configured to operate as L_Port	Invalid system configuration	L_Port	L_Port	Invalid system configuration			
Drive port configured to operate as N_Port	N_Port (not supported)	Invalid system configuration	N_Port (switched fabric)	N_Port			
Drive port configured to operate as LN_Port	N_Port (not supported; attempts L_Port)	L_Port	L_Port	N_Port			
Drive port configured to operate as NL_Port	N_Port (not supported; attempts L_Port)	L_Port	N_Port	N_Port			

Table 20 — Topologies through which this device's port(s) can operate

#### 4.13.3.1.1 Two-Node Switched Fabric Topology

The two-node switched fabric topology supports two protocols:

- a) Use the two-node switched fabric loop protocol when attaching the device to an FL\_port; and
- b) Use the two-node switched fabric protocol when attaching the device to an F\_port.

#### 4.13.3.1.2 Two-Node Direct Connection Topology

A two-node direct connection occurs when two Fibre Channel end points are connected together. Either Arbitrated Loop or Point-to-Point topology is defined as usable in the standards, but both end points must use the same topology. Most Fibre Channel adapters have settings that allow selection of the topology or they default to the loop topology when they are not directly connected to a fabric. While this device allows you to set the port to any of these topologies (see the instructions of the library in which this device is contained) this device supports only the use of the Arbitrated Loop (L\_port) topology in a two-node direct connection. Use of the Point-to-Point topology in a two-node direct connection to an N\_port is not supported, but not prohibited.

#### 4.13.3.2 Speed

This device is an 8GFC device. This device also allows operation using previous Fibre Channel generations: 1GFC, 2GFC, and 4GFC. Each Fibre Channel generation transfers data at the following rates:

- a) 1GFC transfers data at a max burst rate of 100 MB/s;
- b) 2GFC transfers data at a max burst rate of 200 MB/s;
- c) 4GFC transfers data at a max burst rate of 400 MB/s:

d) 5GFC transfers data at a max burst rate of 800 MB/s;

This device may be configured via a library interface or vital product data (VPD) in one of the following speed configurations:

- a) 1GFC;
- b) 2GFC;
- c) 4GFC;
- d) 8GFC; or
- e) speed negotiate

### 4.13.3.3 Addressing Assignments

Each Fibre Channel interface port for this device can be independently assigned a specific speed and topology, or may be set to auto-negotiate.

When the topology is set to or negotiates to L-port, a hard or soft ALPA ID may be assigned. The hard ALPA ID is in the range of 01h to EFh with only certain valid values (a total of 126 addresses). Validity is enforced by the entry process. This value should be unique to each device on the Fibre Channel loop. Fibre Channel loop protocol will detect an addressing conflict on the loop, and one of the conflicting drives will not be available for use.

### 4.13.4 Features of the Serial Attached SCSI (SAS) Interface

The World Wide Node Name and Port Name that are used by this device follow the format of the Institute of Electrical and Electronics Engineers (IEEE).

This device is compliant with the American National Standard, Project T10/1760-D, Information technology - Serial Attached SCSI - 2 (SAS-2), Revision 16, 18 April 2009.

#### 4.14 Device Clocks

The drive supports a Device Clock that maintains a timestamp for various items. This timestamp gets recorded in drive error logs.

The TIMESTAMP ORIGIN is one of those specified in table 21.

 Value
 Definition

 000b
 Timestamp initialized to zero at power-on

 001b
 Reserved

 010b
 Timestamp initialized by the SET TIMESTAMP command

 011b
 Timestamp initialized by the Library over the Library Drive Interface (i.e. RS-422)

 100b - 111b
 Reserved

Table 21 — TIMESTAMP ORIGIN

Once a timestamp is initialized it begins counting from that time forward. Once the timestamp is initialized it remains in effect until one of the following occurs:

- a) A SET TIMESTAMP command (see 5.2.36) is processed;
- b) An LDI command is processed that modifies the timestamp; or
- c) A Hard Reset event occurs.

The method used is indicated in the Extended Control mode page.

The Timestamp is not affected by an I\_T nexus loss or a Logical Unit reset.

The TIMESTAMP is specified in table 22.

Byte

0

5

| Fig. |

Table 22 — TIMESTAMP Format

The TIMESTAMP field contains the value established at the last action that set the timestamp incremented by one for every millisecond that has elapsed since the timestamp was set.

(LSB)

### 4.15 Dynamic runtime information

#### 4.15.1 Dynamic runtime information overview

Dynamic runtime information allows an initiator to set dynamic runtime attributes (DRA) about itself into a device server. The device server then associates those attributes to the I\_T\_L nexus and uses the information and associations for enhanced data collection and debugging. This information and the associations are added to device error logs (e.g., drive dump) and are provided for retrieval by an application client through the READ DYNAMIC RUNTIME ATTRIBUTE command (see 5.2.18).

The Ultrium 5 and later devices support dynamic runtime attributes with the READ DYNAMIC RUNTIME ATTRIBUTE command (see 5.2.18) and the WRITE DYNAMIC RUNTIME ATTRIBUTE command (see 5.2.42). These commands are used to retrieve and store information in the form of dynamic runtime attributes.

A DRA is represented in the format described in 6.1.1.

There are three types of DRA attributes (see table 23).

Readable Writable with READ with WRITE Attribute **Focus Attribute Source DYNAMIC DYNAMIC** Reference Type **RUNTIME** RUNTIME **ATTRIBUTE ATTRIBUTE** Logical unit Device Set by the device server. Yes Nο 6.1.2.2 Yes Target I T nexus Set by the device server. No <u>6.1.2.3</u> Initiator I T nexus 6.1.2.4 Set by the application client Yes Yes

Table 23 — Types of DRA attributes

DRA attributes have the states shown in table 24.

Attribute State	Description
Read Only	An application client may read the contents of the DRA attribute with the READ DYNAMIC RUNTIME ATTRIBUTE command, but an attempt to clear or change the DRA attribute using the WRITE DYNAMIC RUNTIME ATTRIBUTE command shall result in the command being terminated with CHECK CONDITION status with the sense key set to DATA PROTECT and the additional sense code set to WRITE PROTECTED. When in the read only state the READ ONLY bit (see 6.1.1) is one.
Unsupported	The device server does not support the DRA attribute and shall not return it in response to a READ DYNAMIC RUNTIME ATTRIBUTE command.
Nonexistent	An initiator attribute does not exist in the dynamic runtime attributes until a WRITE DYNAMIC RUNTIME ATTRIBUTE command creates it.
Read/Write	The DRA attribute has been created using the WRITE DYNAMIC RUNTIME ATTRIBUTE command. After the DRA attribute has been created, the contents may be altered using subsequent WRITE DYNAMIC RUNTIME ATTRIBUTE commands. A Read/Write DRA attribute may be returned to the nonexistent state using a WRITE DYNAMIC RUNTIME ATTRIBUTE command with the attribute length set to zero. When in the Read/Write state the READ ONLY bit (see 6.1.1) is zero.

Table 24 — DRA attribute states

#### 4.15.2 Dynamic runtime information timestamp

Some dynamic runtime attributes have a timestamp associated with them. The timestamp used is described in <u>Device Clocks (see 4.14 on page 58)</u>. If no timestamp is set by either a SCSI command (i.e., SET TIMESTAMP or ) or by the library, then the timestamp will be power-on time and may not be able to be correlated to external logs (e.g., device driver logs, application logs).

#### 4.15.3 Setting dynamic runtime information into the drive

An application client may set attributes into the drive using the WRITE DYNAMIC RUNTIME ATTRIBUTE command (see 5.2.42) to set one or more of the initiator type attributes defined in 6.1.2.4. The application client may write these values at any time and may change these values at any time. If an application client attempts to create a new attribute by writing an attribute that was previously in the non-existent state and the device server does not have the resources necessary to create that attribute the device server shall reject the command with a CHECK CONDITION with the sense code set to ILLEGAL REQUEST and the additional sense code set to INSUFFICIENT RESOURCES (i.e., 5h / 5503h).

### 4.15.4 Retrieving dynamic runtime information from the drive

An application client may read attributes by using the READ DYNAMIC RUNTIME ATTRIBUTE command (see 5.2.18). The application client may request a single attribute or multiple attributes in a single command. The application client may read any existent attribute (see 6.1).

### 4.15.5 Management of dynamic runtime information

Dynamic runtime attributes have either a focus of a logical unit (i.e., logical unit type attributes) or a focus of I\_T nexus (i.e., target type attributes and initiator type attributes). This relationship is shown in <u>figure 6</u>.

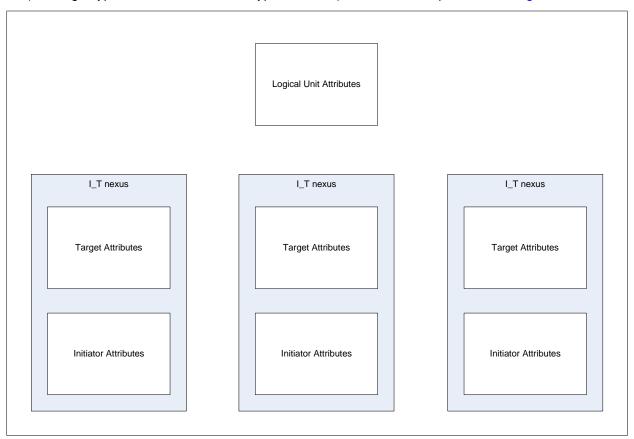


Figure 6 — Dynamic runtime attributes focus

For each dynamic runtime attribute (see 6.1) that the device server supports, if a command is received that should cause an update of one or more of the dynamic runtime attributes (e.g., Reserve, Persistent Reserve Out, Prevent/Allow Medium Removal), then the device server shall update that dynamic runtime attribute. If one or more of the Initiator type attributes that are supposed to be used to update the dynamic runtime attribute is in the nonexistent state, then all information that is known is used. The TransportID of the I\_T\_L nexus and the target port identifier of the I\_T\_L nexus is always known from the transport layer and are presented as target type attributes.

#### 4.15.5.1 Dynamic Runtime Information Lifetime

Dynamic Runtime Attributes are maintained separate from the device server's management of I\_T nexuses. The I\_T\_L nexus identifying information (see 6.1.2.2.1) remains in existence inside dynamic runtime attributes even after the I\_T nexus referenced is no longer known by the SCSI target port.

Logical unit type attributes (see 6.1.2.2) are created if an event occurs as described in the description of each logical unit type attribute and are destroyed if an event occurs as described in the description of each specific logical unit type attribute.

Target type attributes (see 6.1.2.3) are created by the drive if it detects communication from a new I\_T nexus (e.g., Fibre Channel PLOGI/PRLI sequence) and are destroyed by the drive if it detects the disappearance of the I\_T nexus (e.g., Fibre Channel LOGO, I\_T nexus resources are released to allow a new I\_T nexus to communicate with the drive).

Initiator type attributes (see 6.1.2.4) are created if a WRITE DYNAMIC RUNTIME ATTRIBUTE command is received requesting a new attribute and are destroyed if the drive detects the destruction of the target type attribute associated with the I\_T nexus that created the Initiator type attribute or the drive processes a WRITE DYNAMIC RUNTIME ATTRIBUTE command specifying that attribute with a length of zero..

Dynamic Runtime Attributes do not persist across a device power off.

### 4.16 Error Information

#### 4.16.1 Sense Data

For a description of Sense data, see Sense Data Format.

### 4.16.2 Sense Data Management

Sense data returned by the device contains one of two types of errors. These errors are:

Туре	Description
Current	The error condition associated with the command that is currently being processed (i.e.,
	SCSI Status for the currently processing command is the status being returned); and
Deferred	The error condition resulting from a command that has been reported as GOOD, but has generated sense data after being reported. This may be a command with the Immediate bit set or may be a buffered write.

Sense data returned is described by the Sense Key (i.e., bits 3-0 of byte 2 of Sense data). Commands that terminate in an error generate Sense data and set the Sense Key depending on the the specifics of the error. <u>Supported Common SCSI Commands (see Table 28 — on page 73)</u>, indicates which commands are allowed to be processed in the presence of specific error conditions and which return an error.

This device communicates on transports that use the autosense protocol. This means that any Sense data generated for return to a command is returned with the SCSI status. Once a particular set of sense data has been returned, that sense data is cleared and a REQUEST SENSE command is not required to be issued to collect the Sense data. Any other sense data that is still pending may still cause CHECK CONDITION status for subsequent commands. When a REQUEST SENSE command is received, typically the only Sense data available will be the default Sense data. While it is possible that a Deferred error may have generated Sense data or that a Unit Attention (see 4.16.4) has been established since the status to the last command, Sense data is not likely to exist.

#### 4.16.3 Deferred Check Condition (DCC)

Deferred errors are generated by processing that occurs when that process is not attached to the currently processing command (see 4.16.2). Deferred errors are reported as sense data to a deferred check condition (DCC) eligible command (i.e., DCC column of table 28 on page 73 is set to 'Y').

In the case of a deferred write error if buffered mode 1h is selected and a DCC eligible command is received, then the error is reported to the SCSI initiator device (i.e., I T nexus) that has deferred error affinity.

If the drive receives a deferred error affinity command (i.e., DEA column of <u>table 28 on page 73</u> is set to 'Y'), then the drive performs actions in the following order:

- 1) performs initial checking (e.g., Reservation Conflict, all pending Unit Attentions, and all pending errors to be reported to this I\_T nexus) and reports these conditions, if any;
- 2) if none of the above conditions are reported, then all pending deferred errors are migrated to the I\_T nexus through which this command was received;
- 3) the deferred error affinity is set to this I\_T nexus;
- 4) if the command is DCC eligible, then pending deferred errors, if any, are reported; and
- 5) if no deferred errors were reported process the command.

#### 4.16.4 Unit Attention Conditions

The drive generates a Unit Attention condition under the following circumstances:

- a) Reset condition (for example, power-on, SCSI reset, bus device reset);
- b) Tape Loaded condition (for example, media inserted, LOAD command from another initiator);
- c) Mode parameters changed by another initiator; and
- d) Drive firmware has been upgraded.

The drive only maintains one instance of each type of Unit Attention condition at any one time for any one initiator. If a subsequent Unit Attention condition of the same type is generated, it replaces the existing one. Unit Attentions are returned in priority order. The priorities are in the order listed above, with a reset being highest priority and a firmware upgrade being lowest priority.

#### 4.16.5 Persistent Errors

When errors occur that prevent tape operation, they are reported persistently until the problem is cleared. For medium-related errors (usually reported with a Sense Key of 3), the error is reported until the cartridge is successfully unloaded. For hardware-related errors (usually reported with a Sense Key of 4), the error is reported until the drive successfully performs a power-on self test. These persistent errors are only reported on those commands that are eligible for deferred Check Condition reporting (see <u>Table 4</u>). The error may or may not be reported as Deferred.

### 4.16.5.1 Fencing Behavior

The device fences the drive (i.e., prevents certain operations) when errors are detected that could endanger customer data if further usage is allowed. The operations that are prevented depend on the nature of the error encountered and the current drive state. The drive will post an FSC (see bytes 16 and 17 of REQUEST SENSE data in <a href="Sense Data Format">Sense Data Format (see 5.2.29.1 on page 159)</a>) for the original error that caused the fence condition. Then, CHECK CONDITION status, with the fencing FSC in the sense data is reported to an attempted command that is not allowed due to the fence condition.

Table 25 lists which errors trigger which fence state.

Error that triggers Fence State	Fence State
Severe Drive Hardware problem Severe Media Hardware problem Temperature Overrange Load or Unload Hardware problem Severe Firmware Problem	ALLOW NO OPERATION (see 4.16.5.1.1 on page 63)
Hardware Problem detected that could affect Writing Hardware Problem detected that could affect Reading	ALLOW LOCATE (see 4.16.5.1.2 on page 63)
Serious Drive Hardware problem May be recovered on a different mount Serious Media problem Drive may be recovered on different mount Serious Firmware problem May be recovered on different mount	ALLOW UNLOAD (see 4.16.5.1.3 on page 64)
Power on occurs and the device detects a volume is loaded. This may be due to a device panic/exception.	MID-TAPE RECOVERY (see 4.16.5.1.4 on page 64)

Table 25 — Error to Fence State mapping

### 4.16.5.1.1 ALLOW\_NO\_OPERATION

- a) All medium access commands (Read/Write/Motion) are rejected.
- b) (SCSI/Panel/LDI) Unload is accepted.
- c) After the cartridge is ejected:
  - A) When load is attempted, the cartridge stays at mount position and Good status is returned for TUR.
  - B) From the above state, the cartridge can be ejected normally.
  - C) Other medium access commands are rejected.

#### 4.16.5.1.2 ALLOW LOCATE

a) All medium access commands (Read/Write/Motion) are rejected.

- b) (SCSI/Panel/LDI) Unload is accepted.
- c) Once a cartridge is ejected, Fence state is cleared. A new cartridge is allowed to be loaded and all medium access commands are allowed to be performed.
- d) Space command is rejected while in Fence state.

### 4.16.5.1.3 ALLOW\_UNLOAD

- a) All medium access commands (Read/Write/Motion) are rejected.
- b) (SCSI/Panel/LDI) Unload is accepted.
- c) Once a cartridge is ejected, Fence state is cleared. A new cartridge is allowed to be loaded and all medium access commands are allowed to be performed.

#### 4.16.5.1.4 MID-TAPE RECOVERY

The Mid-Tape Recovery (MTR) fence behavior is configured in <u>Mode Page 2Fh: Behavior Configuration Mode Page</u>. There are two different behaviors:

- a) Normal operation (i.e., MTR Fence) (see 4.16.5.1.4.1 on page 64); and
- b) Panic Fence operation (see 4.16.5.1.4.2 on page 64).

### 4.16.5.1.4.1 Normal operation (i.e., MTR Fence)

When the device powers up and no cartridge is detected, no special behavior is required and the device:

- 1) responds to the first UNIT ATTENTION eligible command with 6/2900;
- 2) responds to a CHECK CONDITION eligible command, if any, with 2/3E00 during POST; and
- 3) enters normal operation when POST is completed successfully.

When the device powers up and detects a mounted cartridge, Mid-Tape Recovery (MTR) is required and the device:

- 1) responds to the first UNIT ATTENTION eligible command with 6/2900;
- 2) responds to a CHECK CONDITION eligible command, if any, with 2/3E00 until POST is complete;
- 3) responds to a CHECK CONDITION eligible command, if any, with 2/0401 during MTR/Unload;
- 4) responds to a CHECK CONDITION eligible command, if any, with 2/0401 during MTR/Load; and then
- 5) enters the MTR Fence State when the MTR/Load has completed. In the MTR Fence State, the device:
  - A) responds to the first UNIT ATTENTION eligible command received after entering the MTR Fence State (i.e., after cartridge is loaded) with 6/2800;
  - B) responds to TUR commands, if any, with GOOD status;
  - C) responds to any medium access command not listed in the next step, if any, with 5/2C00; and
  - D) exits the MTR Fence State if an explicit positioning command completes successfully (i.e., LOCATE, REWIND, LOAD).

### 4.16.5.1.4.2 Panic Fence operation

When the device powers up after a Panic or Exception and no cartridge is detected the device:

- 1) responds to the first UNIT ATTENTION eligible command with 6/2900;
- 2) responds to a CHECK CONDITION eligible command, if any, with 2/3E00 during POST; and
- 3) when POST is complete, enters into the Panic Fence state. In the Panic Fence state the device:
  - A) rejects SCSI commands other than RSNS/INQ/RLUNs/Read Buffer with 5/2904 sense, indicating Panic Fence state;
  - B) rejects a TUR command with 5/2904;
  - C) rejects attempts to Load a cartridge through any means;
  - D) accepts, at any time, a SCSI Read Buffer to read dump data;
  - E) exits the Panic Fence state after a dump has been successfully read and transitions to normal mode.

When the device powers up and detects a mounted cartridge, Mid-Tape Recovery (MTR) is required and the device:

- 1) responds to the first UNIT ATTENTION eligible command with 6/2900;
- 2) responds to a CHECK CONDITION eligible command, if any, with 2/3E00 until POST is complete;
- 3) responds to a CHECK CONDITION eligible command, if any, with 2/0401 during MTR/Unload;
- 4) responds to a CHECK CONDITION eligible command, if any, with 2/0401 during MTR/Load; and then
- 5) enters the Panic Fence State when the MTR/Load has completed. In the Panic Fence state the device:
  - A) responds to the first UNIT ATTENTION eligible command received after entering the Panic Fence State (i.e., after cartridge is loaded) with 6/2800;
  - B) rejects SCSI commands other than RSNS/INQ/RLUNs/Read Buffer with 5/2904 sense, indicating Panic Fence state:
  - C) returns GOOD status to a TUR command while cartridge is loaded;
  - D) rejects a TUR command with 5/2904;
  - E) allows processing of Unload command through SCSI/LDI/Button;
  - F) rejects attempts to Load a cartridge through any means;
  - G) accepts, at any time, a SCSI Read Buffer to read dump data;
  - H) exits the Panic Fence state after a dump has been successfully read and:
    - a) if there is no cartridge loaded, then transitions to normal mode; or
    - b) if there is a cartridge loaded, then transitions to the MTR Fence State. In the MTR Fence State, the device:
      - A) responds to TUR commands, if any, with GOOD status;
      - B) responds to any medium access command not listed in the next step, if any, with 5/2C00; and
      - C) exits the MTR Fence State if an explicit positioning command completes successfully (i.e., LOCATE, REWIND, LOAD).

## 4.17 Medium auxiliary memory

Some types of media, especially removable media, include a non-volatile memory referred to as MAM (medium auxiliary memory). Medium auxiliary memory is used to store data describing the media and its contents. This standard supports medium auxiliary memory with the READ ATTRIBUTE command (see 5.2.15) and the WRITE ATTRIBUTE command (see 5.2.41). These commands are used to retrieve and store information in the medium auxiliary memory in the form of MAM attributes.

A MAM attribute is represented in the format described in MAM attribute format (see 6.5.1 on page 347).

There are three types of MAM attributes (see table 26).

Table 26 — Types of MAM attributes

Attribute Type	Attribute Source	Example	Readable with READ ATTRIBUTE	Writable with WRITE ATTRIBUTE
II IVIDAIIIM	Permanently stored in the medium auxiliary memory during manufacture.	Media Serial Number	Yes	No
Device	Maintained by the device server.	Load Count	Yes	No
Host	Maintained by the application client.	Backup Date	Yes	Yes

Depending on that attribute type, MAM attributes have the states shown in table 27.

Table 27 — MAM attribute states

Attribute Type	Attribute State	Description				
Medium or Device	Read Only	An application client may read the contents of the MAM attribute with the READ ATTRIBUTE command, but an attempt to clear or change the MAM attribute using the WRITE ATTRIBUTE command shall result in the command being terminated with CHECK CONDITION status. When the READ ONLY bit (see 6.5.1) is one, the attribute is in the read only state.				
	Unsupported	The device server does not support the MAM attribute and shall not return it in response to a READ ATTRIBUTE command.				
	Monexistent	A host attribute does not exist in the medium auxiliary memory until a WRITE ATTRIBUTE command creates it.				
Host	Read/Write	The MAM attribute has been created using the WRITE ATTRIBUTE command. After the MAM attribute has been created, the contents may be altered using subsequent WRITE ATTRIBUTE commands. A read/write MAM attribute may be returned to the nonexistent state using a WRITE ATTRIBUTE command with the attribute length set to zero. When the READ ONLY bit (see 6.5.1) is zero, the MAM attribute is in the read/write state.				

### 4.18 Volume Coherency

An application client may need to be able to determine if all logical objects on a volume are coherent with the last time an application client wrote to this volume. The VOLUME COHERENCY INFORMATION attribute (see 6.5.2.4.11) of MAM is provided for an application client to collect and save information necessary for this determination.

The VOLUME COHERENCY INFORMATION attribute for each partition is written to MAM by the application client when it has completed a write job (e.g., the volume is demounted). The VOLUME COHERENCY INFORMATION attribute contains references to a volume coherency set that the application client has written to logical objects on a partition. An application client should not create a VOLUME COHERENCY INFORMATION attribute unless it has written a volume coherency set to that partition. The volume coherency set shall include a volume coherency count. The application client shall maintain one volume coherency count for an entire volume and shall monotonically increase the volume coherency count when the state of the volume coherency set changes (e.g., writing identical volume coherency sets on each partition does not force a change of volume coherency count). When the application client writes the VOLUME COHERENCY INFORMATION attribute to MAM for a specific partition the VOLUME CHANGE REFERENCE VALUE field of the VOLUME COHERENCY INFORMATION attribute for a partition shall contain the value returned in the ATTRIBUTE VALUE field of the VOLUME CHANGE REFERENCE attribute after the last volume coherency set was written to the volume. The VOLUME COHERENCY COUNT field of the VOLUME COHERENCY INFORMATION attribute shall contain the volume coherency count that was written to the last volume coherency set written to that partition. The VOLUME COHERENCY SET IDENTIFIER field of the VOLUME COHERENCY INFORMATION attribute for a partition contains the logical object identifier of the first byte of the last volume coherency set written to that partition. The APPLICATION CLIENT SPECIFIC INFORMATION field of the VOLUME COHERENCY INFORMATION attribute for a partition contains information the application client binds with the coherency set referenced by the VOLUME COHERENCY SET IDENTIFIER field.

NOTE 7 - The application client needs to guarantee that no other application client updates the logical objects on the volume between the time it completes writing and the time it updates the MAM parameter (e.g., use reservations)

An application client may verify that the volume coherency set written in a partition has not changed since the VOLUME COHERENCY INFORMATION attribute was written when the application client reads the VOLUME COHERENCY INFORMATION attribute for a partition (e.g., when a volume is mounted) and compares the value in the VOLUME CHANGE REFERENCE VALUE field with the value returned in the ATTRIBUTE VALUE field of the VOLUME CHANGE REFERENCE attribute. If the values match, then the volume coherency set written in that partition is unchanged.

To find the most recently written volume coherency set, the application client searches the VOLUME COHERENCY INFORMATION attributes of the partitions for which the volume coherency set is unchanged and finds the largest value in the VOLUME COHERENCY COUNT field. The application client then verifies the largest value in the VOLUME COHERENCY COUNT field with the volume coherency count stored in the volume coherency set beginning at the logical object specified by the VOLUME COHERENCY SET IDENTIFIER field. If this matches, then this is the volume coherency set that was most recently written.

The APPLICATION CLIENT SPECIFIC INFORMATION field may also be used by the application client as part of this coherency check. If the information verifies for a partition, then the volume is coherent with the last access by this application. If the information does not verify for a partition, then the volume is not coherent with the last access by this application.

### 4.19 Error history (i.e., drive dump)

### 4.19.1 Error history overview

Error history is data collected by a device to aid in troubleshooting errors.

The READ BUFFER command (see 5.2.17) provides a method for retrieving error history from the device (see 4.19.2).

All Ultrium devices support retrieving a drive dump using data mode (i.e., 02h) with buffer ID 01h. This drive dump contains a snapshot of the current debug information (i.e., the contents of the operation tracing at a specific point in time) as well as additional snapshots using development specific algorithms designed to provide the best chance of capturing data to debug problems.

Error history may be retrieved using the method defined in SPC-4 and described in the rest of this clause. Note that there are some areas which differ from the behavior specified in SPC-4.

### 4.19.2 Retrieving error history with the READ BUFFER command

The error history is retrieved using a sequence of READ BUFFER commands on one I\_T\_L nexus.

Tracing of drive operation is returned using error history snapshots. An error history snapshot is the contents of the operation tracing at a specific point in time, created by the device at vendor specific times or requested by the application client using the READ BUFFER command with certain buffer IDs.

The I\_T\_L nexus being used to retrieve an error history snapshot is called the error history I\_T\_L nexus. Only one I\_T\_L nexus is allowed to retrieve an error history snapshot at a time.

To retrieve the complete error history, an application client uses one I T L nexus to:

- 1) create an error history snapshot if one does not already exist, establish the I\_T\_L nexus as the error history I\_T\_L nexus, and retrieve the drive tracing directory by sending a READ BUFFER command (see 5.2.17) with:
  - A) the MODE field set to 1Ch (i.e., error history);
  - B) the BUFFER ID field set to one of the following:
    - a) If the error history I\_T\_L nexus is expected to be valid:
      - A) 00h (i.e., return error history directory);
      - B) 01h (i.e., return error history directory and create new snapshot);
    - b) if the application client has knowledge that the error history I\_T\_L nexus is no longer valid:
      - A) 02h (i.e., return error history directory and establish new error history I\_T\_L nexus); or
      - B) 03h (i.e., return error history directory, establish new error history I\_T\_L nexus, and create new snapshot);
  - C) the BUFFER OFFSET field set to 000000h; and
  - D) the ALLOCATION LENGTH field set to at least 2 088 (i.e., large enough to transfer the complete error history directory (see 6.7.2.1));
- 2) retrieve the error history. The application client uses a Data-In Buffer size that is a multiple of the offset boundary indicated in the READ BUFFER descriptor (see 5.2.17.3). Each buffer ID indicated in the error history directory is a different type of trace or error history. Buffer ID EFh contains a description of each trace (i.e., error history) that is available (see 6.7.2.3.6). For each buffer ID indicated in the error history directory in the range of 10h to EFh, the application client may retrieve the trace by sending one or more READ BUFFER commands (see 5.2.17) as follows:
  - 1) send the first READ BUFFER command with:
    - a) the MODE field set to 1Ch (i.e., error history);
    - b) the BUFFER ID field set to the buffer ID (i.e., an error history data buffer);
    - c) the BUFFER OFFSET field set to 000000h; and
    - d) the ALLOCATION LENGTH field set to the size of the Data-In Buffer;
  - 2) until the number of bytes returned by the previous READ BUFFER command does not equal the specified allocation length and/or the total number of bytes returned from the buffer ID equals the maximum available length indicated in the error history directory, send zero or more additional READ BUFFER commands with:

- a) the MODE field set to 1Ch (i.e., error history);
- b) the BUFFER ID field set to the buffer ID (i.e., an error history data buffer);
- c) the BUFFER OFFSET field set to the previous buffer offset plus the previous allocation length; and
- d) the ALLOCATION LENGTH field set to the size of the Data-In Buffer;

and

- 3) clear the error history I\_T\_L nexus and, depending on the buffer ID, release the error history snapshot by sending a READ BUFFER command with:
  - A) the MODE field set to 1Ch (i.e., error history);
  - B) the BUFFER ID field set to:
    - a) FEh (i.e., clear error history I\_T\_L nexus) (see 6.7.2.4); or
    - b) FFh (i.e., clear error history I\_T\_L nexus and release snapshot) (see 6.7.2.5);
  - C) the BUFFER OFFSET field set to any value allowed by table 332 (e.g., 000000h); and
  - D) the ALLOCATION LENGTH field set to any value allowed for the chosen BUFFER ID field value (see 6.7.2.4 or 6.7.2.5) (e.g., 000000h).

While an error history snapshot exists, the device does not modify the error history snapshot to reflect any changes to the error history. This does not include the emergency dump (see 6.7.2.3.4) or prioritized flash dumps (see 6.7.2.3.5). These dumps are generated internally and may be generated or modified at any time, even while an error history snapshot exists.

The device clears the established error history I\_T\_L nexus and does not release the error history snapshot:

- a) upon processing of a READ BUFFER command on the error history I\_T\_L nexus with:
  - A) the MODE field set to 1Ch (i.e., error history); and
  - B) the BUFFER ID field set to FEh (i.e., clear error history I\_T\_L nexus) (see 6.7.2.4);
- b) if an I\_T nexus loss occurs on the error history I\_T\_L nexus.

The device clears the established error history I\_T\_L nexus and releases the error history snapshot:

- a) upon processing of a READ BUFFER command using the same I\_T\_L nexus that was used to establish the snapshot with:
  - A) the MODE field set to 1Ch (i.e., error history); and
  - B) the BUFFER ID field set to FFh (i.e., clear error history I\_T\_L nexus and release snapshot) (see 6.7.2.5);
- b) if a power on occurs;
- c) if a hard reset occurs; or
- d) if a device reset occurs.

If a new error history snapshot is created by one of the supported methods or by internal algorithms while an error history snapshot exists, the new snapshot overwrites the existing error history snapshot (i.e., <a href="mode[1Ch]">mode[1Ch]</a>
<a href="mode">10h: Current error history snapshot (see 6.7.2.3.2 on page 424)</a>) or drive dump (i.e., Buffer ID 01h with MODE set to 2h), then an attempt to read an error history at a non-zero offset will be rejected with a CHECK CONDITION with the sense key set to ILLEGAL REQUEST and the additional sense code set to ERROR HISTORY SNAPSHOT RELEASED. This notifies the application that the snapshot (i.e., buffer ID) being retrieved has been overwritten.

### 4.20 Potential conflict list (LTO6 and later)

This device may maintain a potential conflict list. A potential conflict list is a list of entries describing I\_T nexuses and commands that have been received, where the operations requested by one I\_T nexus may conflict with the operations requested by a different I\_T nexus (e.g. a rewind requested by one I\_T nexus while a different I\_T nexus is requesting data transfers). The potential conflict list is reported in potential conflict list log parameters (see 6.4.9.2.8).

A potential conflict list command is a command that:

- a) has an entry of Conflict under the Excl Access column of the commands that are allowed in the presence of various reservations table of the command standard in which that command is defined; and
- b) is not one of:
  - A) LOG SELECT:
  - B) PERSISTENT RESERVE IN;
  - C) PERSISTENT RESERVE OUT;
  - D) READ ATTRIBUTE;
  - E) RESERVE UNIT (see SPC-2);
  - F) SECURITY PROTOCOL IN;
  - G) SECURITY PROTOCOL OUT;
  - H) TEST UNIT READY; and
  - I) commands chosen for vendor-specific reasons.

This device maintains an owner\_ITN variable that is the I\_T nexus through which a PCL command was most recently received by the RMC logical unit or the ADC logical unit.

The owner\_ITN is set to NULL, the PCL\_P bit of the extended very high frequency log parameter (see 6.4.9.2.3) is set to zero, the potential conflict list log parameter(s) are destroyed (i.e., no longer exist; the response to a LOG SENSE command does not return the parameter), and the value in the NUMBER OF POTENTIAL CONFLICT LIST ENTRIES field of the potential conflict list entries present log parameter (see 6.4.9.2.7) is set to zero, if:

- a) a Hard Reset occurs; or
- b) a volume is inserted (i.e., the MPRSNT (medium present) bit of the VHF parameter data transitions from 0b to 1b).

The owner\_ITN is set to NULL on a reservation loss or a reservation preempt.

If a PCL command is received through an I\_T nexus that is not the owner\_ITN, the command is not terminated with RESERVATION CONFLICT and:

- a) the owner ITN is non-NULL; or
- b) the owner\_ITN is NULL, there is no reservation holder, and the addressed LUN is not an ADC LUN,

then the DT device shall:

- 1) if that I\_T nexus is not listed in one of the potential conflict list log parameter(s), then:
  - A) if all the potential conflict list log parameters supported by the DT device have been created, then
    manage the potential conflict list in a vendor specific manner (e.g., stop adding entries to the list or
    replace an existing entry); or
  - B) create a new potential conflict list entry for this I\_T nexus in the potential conflict list and add the new entry to the list of potential conflict list log parameters in a vendor-specific order (e.g., entries in the potential conflict list log parameters may be reordered) with:
    - a) the TRANSPORTID field set to the TransportID (see SPC-4) of that I T nexus;
    - b) the RELATIVE TARGET PORT IDENTIFIER field set to the relative target port (see SPC-4) of that I\_T nexus;
    - c) all other fields set to zero; and
    - d) increment the value in the NUMBER OF POTENTIAL CONFLICT LIST ENTRIES field of the potential conflict list entries present log parameter (see 6.4.9.2.7);
- 2) select the potential conflict list log parameter with the TRANSPORTID field value and RELATIVE TARGET PORT IDENTIFIER field value that match the I\_T nexus through which the PCL command was received and update the fields in that log parameter as follows:

- A) increment the OWNER ITN COUNT field, if not saturated at its maximum value;
- B) set the COMMAND OPERATION CODE field to the operation code of the command;
- C) set the COMMAND SERVICE ACTION field to the service action, if any, of the command; and
- D) set the owner ITN TIME field to the parameter data for a REPORT TIMESTAMP command addressed to the ADC device server;
- 3) set the owner\_ITN to identify the I\_T nexus through which the command was received; and
- 4) set the PCL\_P bit of the extended very high frequency log parameter to one.

#### 5. SCSI Commands

### 5.1 SCSI Commands Overview

This chapter describes the SCSI commands supported (LUN 0).

The following SCSI command descriptions have a table describing the fields in the Command Descriptor Block (CDB), similar to the style used in the *American National Standard of the National Committee for Information Technology Standards (NCITS)* documents.

Any data required by each command follow these descriptions and are described in a "term-definition" format. In this format, the bits or bytes to be described are highlighted and listed on the left. The definition for the bits or bytes is to the right (not highlighted).

Parameters are described in Parameters for SCSI Commands (see 6. on page 191).

### 5.1.1 Unsupported SCSI Commands

Certain commands or features of some commands defined in SPC-4 or SSC are not currently supported but may be in the future.

The LUN field in the CDB has been obsoleted in SCSI-3 and has been repurposed for some commands. These bits are ignored in some commands, but examined in others which have repurposed these bits.

The Read Buffer and Write Buffer commands are supported but not all buffers are described in this document because many buffers are intended only to be read or written by the Service Representative or by Manufacturing. OEM customers who intend to support host microcode download on a new platform should contact IBM for a complete description of the Write Buffer command for this purpose. Note that new microcode may also be loaded without requiring the use of the SCSI Write Buffer command, by using other methods described in the maintenance information manual for this product.

#### 5.1.2 Supported SCSI Commands

This device accepts commands on LUN 0 for drive related commands (i.e., Peripheral Device Type returned in Standard Inquiry is Sequential Access Device). When in a library this device may also accept commands on LUN 1 for library related commands (i.e., Peripheral Device Type returned in Standard Inquiry is Medium Changer Device).

### 5.1.2.1 Supported SCSI Commands on LUN 1

The list of commands supported on LUN 1 is dependant on the library in which the drive is contained. To determine the model of the library in which the drive is contained, use the INQUIRY command. Bytes 8-15 contain the T10 VENDOR IDENTIFICATION. Bytes 16 - 31 contain the PRODUCT IDENTIFICATION.

This document contains no additional information about commands supported on LUN 1. For a list of all commands supported please see the appropriate Library SCSI Reference.

#### 5.1.2.2 Supported SCSI Commands on LUN 0

<u>Table 28</u> provides a list of all commands supported by this product for the sequential access device (i.e., LUN 0). For each command, the operation code, reference page for this specification, and applicability of certain conditions to the command are shown in <u>Table 28</u>.

It is strongly recommended that device drivers or host software implement device reservations using the RESERVE/RELEASE commands or the PERSISTENT RESERVE OUT/PERSISTENT RESERVE IN commands. It is also strongly recommended that host software use the <a href="Append-only mode (also known as Data-safe mode">Append-only mode (also known as Data-safe mode)</a> (see 4.1.3 on page 24) as it helps cover the cases where reservations are lost or the drive reboots unexpectedly.

Table 28 — Supported Common SCSI Commands (part 1 of 2)

	Operation	ion		Applicable Conditions-b						
Command Name	Code	Page	RVC	RVC UAT NRD WRP MFC DCC DEA						
ALLOW OVERWRITE	82h	<u>76</u>	Υ	Υ	Υ	-	-	-	-	
ERASE	19h	77	Υ	Υ	Υ	Υ	Υ	Υ	Υ	
FORMAT MEDIUM	04h	<u>78</u>	Υ	Υ	Υ	Υ	Υ	Υ	Υ	
INQUIRY	12h	<u>80</u>	-	-	-	-	-	-	-	
LOAD/UNLOAD	1Bh	<u>86</u>	Υ	Υ	-	-	Υ	Υ	Υ	
LOCATE(10/16)	2Bh/92h	<u>88</u>	Υ	Υ	Υ	-	Υ	Υ	Υ	
LOG SELECT	4Ch	<u>90</u>	Υ	Υ	-	-	-	-	-	
LOG SENSE	4Dh	<u>91</u>	-	-	-	-	-	-	-	
MODE SELECT (6/10)	15h/55h	<u>92</u>	Υ	Υ	-	-	-	-	-	
MODE SENSE (6/10)	1Ah/5Ah	<u>94</u>	-	Υ	-	-	-	-	-	
PERSISTENT RESERVE IN	5Eh	<u>96</u>	Υ	Υ	-	-	-	-	-	
PERSISTENT RESERVE OUT	5Fh	<u>102</u>	Y <u>.c</u>	Υ	-	-	-	-	-	
PREVENT ALLOW MEDIUM REMOVAL	1Eh	<u>105</u>	-	Υ	-	-	-	-	-	
READ	08h	<u>106</u>	Υ	Υ	Υ	ı	Υ	Υ	Υ	
READ ATTRIBUTE	8Ch	<u>107</u>	Υ	Υ	-	-	-	Υ	-	
READ BLOCK LIMITS	05h	<u>111</u>	-	Υ	-	-	-	ı	-	
READ BUFFER	3Ch	<u>113</u>	Υ	•	-	ı	-	•	-	
READ DYNAMIC RUNTIME ATTRIBUTE	D1h	<u>117</u>	-	1	-	ı	-	ı	-	
READ END OF WRAP POSITION	A3h[1Fh][45h]	<u>122</u>	-	-	Υ	ı	-	ı	-	
READ LOGGED-IN HOST TABLE	A3h[1Fh][01h]	<u>125</u>	-	-	-	-	-	1	-	
READ POSITION	34h	<u>128</u>	Υ	Υ	Υ	ı	-	ı	-	
RECEIVE DIAGNOSTIC RESULTS	1Ch	<u>135</u>	Υ	Υ	-	ı	-	ı	-	
RELEASE UNIT (6/10)_a	17h/57h	<u>136</u>	<u>_d</u>	Υ	-	-	-	1	-	
REPORT DENSITY SUPPORT	44h	<u>137</u>	-	Υ	-	ı	-	ı	-	
REPORT LUNs	A0h	<u>140</u>	-	-	-	-	-	ı	-	
REPORT SUPPORTED OPERATION CODE	A3h[0Ch]	<u>142</u>	-	Υ	-	-	-	-	-	
REPORT SUPPORTED TASK MANAGEMENT FUNCTIONS	A3h[0Dh]	<u>154</u>	-	Υ	-	-	-	-	-	
REPORT TIMESTAMP	A3h[0Fh]	<u>156</u>	-	Υ	-	ı	-	ı	-	
REQUEST SENSE	03h	<u>158</u>	-	-	-	-	-	-	-	
RESERVE UNIT (6/10)_ <sup>2</sup>	16h/56h	<u>166</u>	Y <u>_d</u>	Υ	-	-	-	-	-	
REWIND	01h	<u>167</u>	Υ	Υ	Υ	-	Υ	Υ	Υ	
SECURITY PROTOCOL IN (SPIN)	A2h	<u>168</u>	Υ	Υ	-	-	-	-	-	
SECURITY PROTOCOL OUT (SPOUT)	B5h	<u>169</u>	Υ	Υ	-	•	Υ	-	-	
SEND DIAGNOSTIC	1Dh	<u>170</u>	Υ	Υ	-	•	Υ	ı	-	
SET CAPACITY	0Bh	<u>172</u>	Υ	Υ	Υ	Υ	Υ	Υ	Υ	
SET TIMESTAMP	A4h[0Fh]	<u>174</u>	Υ	Υ	-	-	-	Υ	-	
SPACE (6/16)	11h/91h	<u>176</u>	Υ	Υ	Υ	-	Υ	Υ	Υ	

Table 28 — Supported Common SCSI Commands (part 2 of 2)

Command Nama	Operation	Dama	Applicable Conditions b							
Command Name	Code	Page	RVC	UAT	NRD	WRP	MFC	DCC	DEA	
TEST UNIT READY	00h	<u>178</u>	Υ	Υ	Υ	ı	ı	Υ	-	
VERIFY	13h	<u>179</u>	Υ	Υ	Υ	-	Υ	Υ	Υ	
WRITE	0Ah	<u>181</u>	Υ	Υ	Υ	Υ	Υ	Υ	Υ	
WRITE DYNAMIC RUNTIME ATTRIBUTE	D2h	<u>188</u>	-	-	-	-	-	-	-	
WRITE ATTRIBUTE	8Dh	<u>182</u>	Υ	Υ	-	Υ	-	Υ	-	
WRITE BUFFER	3Bh	<u>185</u>	Υ	Υ	-	-	-	-	-	
WRITE FILEMARKS (6)	10h	<u>190</u>	Υ	Υ	Υ	Υ	Υ	Υ	Υ	

Note 1 - The behavior for all commands is as defined in the following SCSI-3 specifications unless otherwise indicated:

SSC-4 (SCSI Stream Commands - 4)

SPC-4 (SCSI Primary Commands-4)

- <sup>a</sup> The RESERVE/RELEASE commands are defined in SPC-2 (SCSI Primary Commands-2)
- <sup>b</sup> Applicable Conditions are as follows:
  - Y = condition applies to the command
  - = condition does not apply to the command

RVC = reservation conflict

UAT = unit attention

NRD = not ready

WRP = write protect. These are also referred to as "write-type" commands.

MFC = medium format corrupted. These commands are also considered Medium Access Commands

DCC = deferred check condition

DEA = deferred error (DCC) affinity (see 4.16.3)

- <sup>c</sup> Reported as appropriate for the type of Service Action and Reservation Type requested and the current reservation state of the drive.
- The drive sets the CRH bit to one in the parameter data returned by the REPORT CAPABILITIES service action of the PERSISTENT RESERVE IN command. This indicates that in the presence of a Persistent Reservation, a RELEASE(6) or RELEASE(10) command will complete with GOOD status, but the persistent reservation will not be released, if the command is received from:
  - a) An I\_T nexus that is a persistent reservation holder; or
  - b) An I\_T nexus that is registered if a registrants only type persistent reservation is present. In all other cases, the RELEASE(6)/RELEASE(10) command will be rejected with a RESERVATION CONFLICT.

The drive sets the CRH bit to one in the parameter data returned by the REPORT CAPABILITIES service action of the PERSISTENT RESERVE IN command. This indicates that in the presence of a Persistent Reservation, A RESERVE(6) or RESERVE(10) command will complete with GOOD status, but no reservation will be established and the persistent reservation will not be changed, if the command is received from:

- a) An I\_T nexus that is a persistent reservation holder; or
- b) An I\_T nexus that is registered if a registrants only type persistent reservation is present. In all other cases, the RESERVE(6)/RESERVE(10) command will be rejected with a RESERVATION CONFLICT.

### 5.1.2.3 Control Byte Definition

This description of the control byte fields is to be used for all of the supported commands. The control byte occurs in the last byte of a command, that is, byte 5 (6-byte commands), byte 9 (10-byte commands), byte 11 (12-byte commands), or byte 15 (16-byte commands). Table 29 shows the bit significance of the control byte.

Table 29 — Control Byte Definition

Byte		Bit											
Буге	7	6	5	4	3	2	1	0					
5, 9, or 11	Vendor	specific	Reserved			NACA	Obsolete	Obsolete					

Bit Description

1-6 Vendor specific: 00b

5-3 Reserved: 000b

2 NACA (Normal ACA): 0b

1 Obsolete: 0b 0 Obsolere: 0b

### 5.2 SCSI Commands Listing

#### 5.2.1 ALLOW OVERWRITE - 82h

When append-only mode is enabled an application client may issue the ALLOW OVERWRITE command to enable the overwrite of the medium at a non-append point. The processing of the ALLOW OVERWRITE command sets the allow\_overwrite and allow\_overwrite\_position variables as specified in <a href="Append-only mode">Append-only mode</a> (also known as Data-safe mode) (see 4.1.3 on page 24).

Bit **Byte** 7 msb 6 5 4 0 Isb 0 OPERATION CODE (82h) 1 Reserved 2 Reserved ALLOW OVERWRITE 3 **PARTITION** 4 (MSB) LOGICAL OBJECT IDENTIFIER 11 (LSB) 12 Reserved 14 15 Control Byte (see 5.1.2.3)

Table 30 — ALLOW OVERWRITE CDB

The ALLOW OVERWRITE field specifies what type of overwrite is allowed. <u>Table 31</u> defines the actions for the value specified in the ALLOW OVERWRITE field.

Value	Definition
0h	The allow_overwrite variable shall be set to Disabled
1h	The allow_overwrite variable shall be set to Current Position
2h	The allow_overwrite variable shall be set to Format
3h-Fh	The command shall be rejected with CHECK CONDITION status with the sense key set to ILLEGAL REQUEST and the additional sense code set to INVALID FIELD IN CDB.

Table 31 — ALLOW OVERWRITE field definition

If the ALLOW OVERWRITE field is set to Current Position (i.e., 1h), then:

- a) the PARTITION field shall be set to the active partition; and
- b) the LOGICAL OBJECT IDENTIFIER field shall be set to the current position.

If the ALLOW OVERWRITE field is set to Current Position (i.e., 1h), then the allow\_overwrite\_position variable shall be set to the current position.

If the ALLOW OVERWRITE field is not set to Current Position (i.e., 1h), then the PARTITION field and LOGICAL OBJECT IDENTIFIER field shall be ignored.

The device server shall terminate the command with CHECK CONDITION status with the sense key set to ILLEGAL REQUEST and the additional sense code set to SEQUENTIAL POSITIONING ERROR if:

- a) the ALLOW OVERWRITE field is set to Current Position (i.e., 1h); and
- b) the logical position of the medium is not at the location specified by the PARTITION field and LOGICAL OBJECT IDENTIFIER field.

If the device server terminates that command with any status other than GOOD, then the allow\_overwrite variable shall be set to Disabled and the allow\_overwrite\_position variable shall be set to invalid.

#### 5.2.2 ERASE - 19h

Table 32 — ERASE CDB

Pyto				В	it						
Byte	7	6	5	4	3	2	1	0			
0	OPERATION CODE (19h)										
1	Reserved IMMED LON										
2				Rese	rved						
3				Rese	rved						
4		Reserved									
5				Control Byte	(see 5.1.2.3)						

EOD is written at the current position, which marks it as end of data. After the command is successfully completed, the drive is positioned immediately before End Of Data (not End Of Tape).

The following parameters apply:

LONG:

Value	Description
0b	No further writing occurs after EOD is written.
1b	The Data Set Separator (DSS) pattern is written from the new EOD to the end of the current
	partition to overwrite any data that is currently on the tape after the current logical position.

= WARNING =

= WARNING:

A long erase of a partitioned volume from BOP does not erase all data on the volume. It erases all data on the current partition but does not affect any other partitions. To erase all logical objects on the volume, issue a FORMAT MEDIUM command with the FORMAT field set to 0h then issue a long erase when positioned at BOP.

= WARNING =

IMMED (Immediate):

# Value Description

= WARNING

0b Status is not returned until after the command has completed.

The device validates the command and waits for any previous command from any server to complete, including any immediate commands that are currently being processed. It also waits for any buffered data to be flushed to tape. It then reports a DEFERRED ERROR for any preceding command or buffered data, if any. If there is no deferred error, the drive reports GOOD status and initiates processing the command.

#### 5.2.3 FORMAT MEDIUM - 04h

The FORMAT MEDIUM command (see <u>table 33</u>) is used to prepare the medium for use by the logical unit. If there are unwritten logical objects in the buffer when processing of a FORMAT MEDIUM command begins, or if the medium is not at beginning-of-partition 0 (BOP 0), then the command is rejected with CHECK CONDITION status with the sense key set to ILLEGAL REQUEST and the additional sense code set to POSITION PAST BEGINNING OF MEDIUM.

The FORMAT MEDIUM command shall function in the constraints dictated by any capacity changes resulting from a previous SET CAPACITY command that was performed on the mounted volume (i.e., The Set Capacity command controls the maximum capacity allowed for the volume and the Format Medium command works inside those constraints).

The FORMAT MEDIUM command is not allowed against a WORM cartridge. If a WORM cartridge is loaded when the FORMAT MEDIUM command is received, then the command will be rejected with CHECK CONDITION status. The sense key shall be set to DATA PROTECT and the additional sense code shall be set to WORM MEDIUM - OVERWRITE ATTEMPTED.

Byte	Bit												
Буге	7	6	5	4	3	2	1	0					
0		OPERATION CODE (04h)											
1		Reserved VERIFY IMMED											
2		Rese	erved			FOR	MAT						
3	(MSB)			TDANICEE	LENOTH								
4		TRANSFER LENGTH (LSB)											
5	Control Byte (see 5.1.2.3)												

Table 33 — FORMAT MEDIUM CDB

At the successful completion of a FORMAT MEDIUM command, the medium shall be positioned at BOP 0.

During the format operation, the device server shall respond to commands as follows:

- a) in response to all commands except REQUEST SENSE, REPORT LUNS, and INQUIRY, the device server shall return CHECK CONDITION unless a reservation conflict exists. In that case RESERVATION CONFLICT status shall be returned; or
- b) in response to the REQUEST SENSE command, assuming no error has occurred, the device server shall return a sense key of NOT READY and the additional sense code shall be set to LOGICAL UNIT NOT READY, FORMAT IN PROGRESS, with the sense key specific bytes set for process indication (see SPC-4).

An immediate (IMMED) bit of zero specifies the device server shall not return status until the FORMAT MEDIUM command has completed. An IMMED bit of one specifies the device server shall return status as soon as the valid medium location has been verified and the command descriptor block of the FORMAT MEDIUM command has been validated. If CHECK CONDITION status is returned for a FORMAT MEDIUM command with an IMMED bit of one, the format operation shall not be performed.

The VERIFY bit shall be set to zero. The drive does not perform any verification of the format.

The FORMAT field is specified in table 34.

Table 34 — FORMAT MEDIUM FORMAT field

Code	Description	Cartridge Support
0h	Use default format	Ultrium 4 and later Data cartridge
1h	Partition medium	Ultrium 5 and later Data cartridge
2h	Default format then partition	Ultrium 5 and later Data cartridge

If the FORMAT field is 0h, the logical unit shall format the volume to a single partition. A valid FORMAT MEDIUM command with 0h in the FORMAT field shall cause all data on the entire physical volume to be lost.

If the FORMAT field is 1h, the logical unit shall partition the medium using the current mode data from the Medium Partition mode page (see 6.6.13). If none of the mode bits SDP, FDP, or IDP are set to one, the device server shall return CHECK CONDITION. The sense key shall be set to ILLEGAL REQUEST with the addition sense code set to PARAMETER VALUE INVALID. If insufficient space exists on the medium for the requested partition sizes, the device server shall return CHECK CONDITION status. The sense key shall be set to MEDIUM ERROR and the additional sense code shall be set to VOLUME OVERFLOW. A valid FORMAT MEDIUM command with 1h in the FORMAT field causes all data on the entire physical volume to be lost.

If the FORMAT field is 2h, the logical unit shall perform the operations equivalent to a FORMAT field of 0h followed by a FORMAT field of 1h. A valid FORMAT MEDIUM command with 2h in the FORMAT field causes all data on the entire physical volume to be lost.

When the FORMAT field contains 1h or 2h, some errors related to mode page field contents may not be detected until the FORMAT MEDIUM command is processed. Therefore, some error conditions described in MP 11h:

Medium Partition Page (see 6.6.13 on page 376) may be returned in response to a FORMAT MEDIUM command with 1h or 2h in the FORMAT field.

The TRANSFER LENGTH shall be zero.

#### 5.2.4 INQUIRY - 12h

The INQUIRY command instructs the drive to return data about itself to the initiator.

Table 35 — INQUIRY CDB

Duto		Bit											
Byte	7 msb	6	5	4	3	2	1	0 lsb					
0		OPERATION CODE (12h)											
1	Ob	solete (LUN	1)		EVPD								
2				PAGE	CODE								
3	(MSB)			ALLOCATIO	NUENCTU								
4				ALLOCATIO	IN LEING I H			(LSB)					
5				Control Byte	(see 5.1.2.3)								

The following parameters apply:

• EVPD (Enable Vital Product Data)

_ v. b (ab.o	Thai i roddot Bata
Value	Description

0b Standard Inquiry Data is returned (see 5.2.4.1)

1b Vital Product Data is returned according to the value in the PAGE CODE field.

PAGE CODE: Valid if the EVPD bit is set to one. If the EVPD bit is not set to one and this field has a non-zero
value, the command is rejected.

00h The Supported Vital Product Data Pages page is returned (see 6.3.1). This page lists the

VPD pages that are supported by the drive in this configuration.

non-zero The VPD page with the specified PAGE CODE is requested. The VPD pages are described in

6.3 Inquiry Vital Product Data Parameters (IP).

ALLOCATION LENGTH: LTO5 supports sizes up 00FFh. LTO6 and later support larger sizes.

### 5.2.4.1 Standard Inquiry Data

In drives that are not configured with the eServer<sup>™</sup> attachment feature, Standard Inquiry Data for a valid LUN is described in table 36.

**Table 36 — Standard INQUIRY data valid LUN format** (part 1 of 2)

Bit Byte	7	6	5	4	3	2	1	0				
0	PERIPHERAL QUALIFIER PERIPHERAL DEVICE TYPE											
1	RMB		Reserved									
2		version (06h)										
3	Obsolete	Obsolete	NACA (0b)	HISUP (1b)		RESPONSE DAT	A FORMAT (2h)					
4	ADDITIONAL LENGTH (n-4)											
5	sccs (0)	ACC (0)	TPGS	(00b)	3PC (0)	Rese	erved	PROTECT				
6	Obsolete	ENCSRV (0)	VS(0)	MULTIP	Obsolete	Obsolete	Obsolete	ADDR16(0)				
7	Obsolete	Obsolete	wBUS16(0)	SYNC(0)	Obsolete	Obsolete	CmdQue	VS(0)				
8	(MSB)	_	<del>-</del> 10	VENDOD IDENTI	FIGATION ("IDM	"\						
15			110	VENDOR IDENTI	FICATION ( IDIVI	")		(LSB)				
16	(MSB)			DDODUOT ID	-NITIFIO A TION							
31				PRODUCT IDE	ENTIFICATION			(LSB)				

80 IBM LTO SCSI Reference

Table 36 — Standard INQUIRY data valid LUN format (part 2 of 2)

Bit Byte	7	6	5	4	3	2	1	0			
32	(MSB)		Di	DODUCT DEVICE	NULEVEL (VMD	\/\					
35		PRODUCT REVISION LEVEL (YMDV) (LSB)									
36	Reserved										
37	Obsolete										
38		PROTOCOL	IDENTIFIER			MAXIMUM SPE	ED SUPPORTED				
39	Restricted			Reserved			FI	PS			
40				Rese	erved						
41				OEM S	Specific						
42				OEM Spec	ific Subfield						
43				Pos	erved						
47				1/62	ei veu						
48		IBM DRIVE PAI		ASCII characte			eld match the				
55			7-character	r drive P/N prin	ted on the real	drive label]	1				
56		Rese	erved		CLOCK	(ING(0)	QAS(0)	IUS(0)			
57				Res	erved						
58	(MSB)		SAM-	5 T10/2104-E	revision 4 ((	)()(A2h)					
59			O/ tivi	0 110/2104 2	710101011 + (0			(LSB)			
60	(MSB)			AS drive, then							
61		if Fibre	Channel drive	, then FCP-4	T10/1828-D r	evision 02b (	0A45h)	(LSB)			
62	(MSB)		SP	C-4, no revisio	n claimed (046	(0h)					
63					Trolaimou (0+c			(LSB)			
64	(MSB)		SSC	-4 (no versio	n claimed) (0!	520h)					
65				. (110 10101	· ciaiiiica) (ot			(LSB)			
66	(MSB)		ADT-2	2 T10/1742-D	revision 09 (	0A28h)					
67			7,012	. 1 10/11 <del>1</del> 2 D	101101011 00 (			(LSB)			
68	(MSB)		ADC-3	3 T10/1895-D	revision 04 (	0502h)					
69			ADC-3 T10/1895-D revision 04 (0502h) (LSB)								

In drives configured with the eServer attachment feature, the Standard Inquiry Data for a valid LUN is defined in table 37.

Table 37 — eServer attachment Standard Inquiry Data Valid LUN

	Bit							
Byte	7	6	5	4	3	2	1	0
0	PERIPHERAL QUALIFIER PERIPHERAL DEVICE TYPE							
1	RMB Reserved							
2	ISO VERS	ISO VERSION (00b) ECMA VERSION (000b) VERSION (3h)						
3	AERC(0b) Obsolete NACA(0b) HISUP(1b) RESPONSE DATA FORMAT (2h)					n)		
4		ADDITIONAL LENGTH						
5	sccs (0)	ACC (0)	TPGS (00b) 3PC (0) Reserved			PROTECT		
6	Obsolete	ENCSRV(0)	vs(0)	MULTIP		Obsolete		ADR16
7	Obs	olete	wBS16	SYNC	Obs	olete	CMDQ	vs(0)
8		_	VENDOR I	DENTIFICATION	ง (in left-align	ed ASCII)		
15				"IE	BM"			
16		_	DDODUCT	IDENTIFICATIO	N (in loft align	and ASCII)		
31			PRODUCT	IDENTIFICATIO	N (III leit-aligi	led ASCII)		
32	DDODUGT DEVICION LEVEL (in left aliened A COII), VAADV							
35	PRODUCT REVISION LEVEL (in left-aligned ASCII): YMDV							
36	UNIT SERIAL NUMBER (8 ASCII characters)							
43	["20ssssss" = last 6 characters of the 11S identifier]							
44	LOADID							
47	LOAD ID							
48	IBM DRIVE PART NUMBER (8 ASCII characters) [The first 7 bytes of this field							
55	match the 7-character drive P/N printed on the rear drive label]				T			
56	Reserved CLOCKING (00b) QAS (0b) IUS (0			ıus (0b)				
57	Reserved							
95	Reserved							
96	Reserved							
97	Neserveu							
98	PLANT ID (4 ASCII characters) ("N1øø")							
101		PLANT ID (4 ASCII CHARACTERS) ( N100 )						
102		Reserved						
112		Keservea						
113				Reserved				LIBR(0)
114		-	DRIVE FRI	PART NUMBE	R (12 ASCII d	characters)		
125			2	THE TOTAL				
126	IBM EC LEVEL (10 ASCII characters)) [The first 6 bytes of this field match the							
135	EC level printed on the rear drive label]							

### For Valid LUN:

- a) PERIPHERAL QUALIFIER is set to 000b.
- b) PERIPHERAL DEVICE TYPE is set to 01h.

c) RMB is set to 1b to indicate that the medium is removable.

#### For Invalid LUN:

- a) PERIPHERAL QUALIFIER is set to 011b.
- b) PERIPHERAL DEVICE TYPE is set to 1Fh.
- c) RMB is set to 0b to indicate that the medium is not removable.

#### For all devices:

- a) The Additional Length field specifies how many bytes follow. This value is subject to change. It is strongly recommended that the user parse the data returned by using the ADDITIONAL LENGTH field.
- b) PROTECT: (see Logical block protection (see 4.6 on page 37))
- c) ADR16 field is set to 0.
- d) WBS16 field is set to 0.
- e) SYNC field is set to 0.
- f) CMDQ field is set to 1, which indicates that the drive supports tagged (simple) command queuing.
- g) CLOCKING field is set to 0.
- h) QAS field is set to 0, which indicates that the drive does not support quick arbitration and selection.
- i) IUS field is set to 0, which indicates that the drive does not support information unit transfers.
- j) VENDOR IDENTIFICATION returns IBM in ASCII with trailing blanks.
- k) PRODUCT VENDOR IDENTIFICATION returns ULTXXXX-zzy in ASCII with trailing blanks. If the drive is an IBM drive, XXXX equals 3580; if it is an OEM drive, XXXX equals RIUM. If the drive is a full-height drive, zz equals TD; if it is a half-height drive zz equals HH. The character y indicates the generation of the drive. See the table below for the value returned.

	Table 38 — Standard I	Inauirv	Product	Identification	Table
--	-----------------------	---------	---------	----------------	-------

Generation_c	IBM Drive <sup>a</sup>	OEM Drive <sup>a</sup>	eServer Attachment enabled <sup>b</sup>
1	ULT3580-TD1	ULTRIUM-TD1	N/A
2	ULT3580-TD2	ULTRIUM-TD2	N/A
2 Half-height	ULT3580-HH2	ULTRIUM-HH2	N/A
3	ULT3580-TD3	ULTRIUM-TD3	N/A
3 Half-height	ULT3580-HH3	ULTRIUM-HH3	HH LTO Gen 3
4	ULT3580-TD4	ULTRIUM-TD4	N/A
4 Half-height	ULT3580-HH4	ULTRIUM-HH4	HH LTO Gen 4
5	ULT3580-TD5	ULTRIUM-TD5	N/A
5 Half-height	ULT3580-HH5	ULTRIUM-HH5	HH LTO Gen 5
6	ULT3580-TD6	ULTRIUM-TD6	-
6 Half-Height	ULT3580-HH6	ULTRIUM-HH6	HH LTO Gen 6
7	ULT3580-TD7	ULTRIUM-TD7	-
7 Half-Height	ULT3580-HH7	ULTRIUM-HH7	HH LTO Gen 7

<sup>&</sup>lt;sup>a</sup> IBM Tape Device Drivers will only configure Product IDs that are found in the columns entitled "IBM Drive" and "OEM Drive".

b IBM SCDD will only configure Product IDs that are found in the column entitled "eServer Attachment Enabled".

For description of behaviors of devices prior to generation 5, see the *IBM System Storage LTO Ultrium Tape Drive: SCSI Reference (GA32-0450-10)* which is found at the following URL <a href="http://publibfi.dhe.ibm.com/epubs/pdf/32045010.pdf">http://publibfi.dhe.ibm.com/epubs/pdf/32045010.pdf</a>

= WARNING =

WARNING —

Drives targeted to be installed in eServer hosts have the eServer Attachment enabled during manufacturing. Drives that have eServer Attachment enabled have several behaviors that are different from the drives without eServer Attachment enabled. Please see the following sections and look for eServer attachment differences: <a href="Mode Page 2Fh: Behavior Configuration Mode Page">Mode Page 2Fh: Behavior Configuration Mode Page</a>, REWIND, WRITE FILE MARKS>.

— WARNING —

— WARNING ———

- I) PRODUCT REVISION LEVEL has four parts:
  - A) Y is the last character of the year (for example, A indicates the year 2010)
  - B) M is the month, in the alphanumeric set 1 through 9, A, B, or C
  - C) D is the day, in the alphanumeric set 1 through 9, A through V
  - D) v is the version, in the alphanumeric set 0 through 9, a through z, and A through Z, with 0 being the earliest and Z the latest (to avoid interpretation errors, the characters i, I, and 0 are not used)
- m) Automation Disabled (AutDis) field set indicates that the drive is not capable of full automation function. When this field is 0, it indicates that the drive is capable of full automation function.
- n) The OEM Specific field and OEM Specific Subfield are for OEM specific reasons.
- o) The PROTOCOL IDENTIFIER field is defined by the PROTOCOL IDENTIFIER field defined in SPC-4 and copied in table 39.

PROTOCOL IDENTIFIER	Description	Protocol Standard
0h	Fibre Channel	FCP-4
6h	SAS Serial SCSI Protocol	SAS-2
7h	Automation/Drive Interface - Transport Protocol	ADT-2

Table 39 — Standard Inquiry PROTOCOL IDENTIFER values

p) The MAXIMUM SPEED SUPPORTED field reports the maximum speed supported on the primary interface. The values for SAS attached devices are defined in <u>table 40</u>. The values for Fibre Channel attached devices are defined in <u>table 41</u>.

Table 40 — Standard Inquiry	SAS MAXIMUM SPEED SUPPORTED values
-----------------------------	------------------------------------

Value	Physical Link Rate
0h	Unknown
8h	1.5 Gbps
9h	3.0 Gbps
Ah	6.0 Gbps

Table 41 — Standard Inquiry Fibre Channel MAXIMUM SPEED SUPPORTED values

Value	Physical Link Rate
0h	1 Gb/s
1h	2 Gb/s
2h	4 Gb/s
3h	8 Gb/s
4h	10 Gb/s
others	Reserved

q) The FIPS field indicates information about the code level as it relates to the Federal Information Processing Standards. The FIPS field values are defined in <u>table 42</u>.

Table 42 — Standard Inquiry FIPS field values

Value	Description
00b	Code level and base have never been certified by FIPS
	Code level is built on top of a FIPS 140-2 certified code level but has not been certified since the change.
10b	Reserved
11b	Code level is a FIPS 140-2 certified code level

#### 5.2.5 LOAD/UNLOAD - 1Bh

Bit **Byte** 7 6 5 4 2 1 3 0 0 OPERATION CODE (1Bh) 1 Obsolete (LUN) (ignored) Reserved IMMED 2 Reserved 3 Reserved 4 Reserved HOLD EOT (0) RETEN LOAD Control Byte (see 5.1.2.3) 5

Table 43 — LOAD/UNLOAD CDB

If the Immediate (IMMED) field is set to 1b, then the drive validates the command and waits for any previous command from any server to complete, including any immediate commands that are currently being processed. It also waits for any buffered data to be flushed to tape. It then reports a DEFERRED ERROR for any preceding command or buffered data, if appropriate. If there is no deferred error, the drive reports GOOD status and initiates the command. If the IMMED field is set to 0b, then status is not returned until after the command has completed.

The Retension (RETEN) field is not supported and will be ignored.

The End Of Tape (EOT) field is not supported and should be set to 0b. If the EOT field is set to 1b, then CHECK CONDITION status is returned with the Sense Key is set to ILLEGAL REQUEST and the additional sense code set to INVALID FIELD IN CDB (5/2400h).

Table 44 describes the behaviors for the command.

Table 44 — LOAD/UNLOAD actions depending on Load and Hold bit settings and medium position

Medium Position on command receipt	Load	Hold	Status	Behavior and Medium Position at command completion
No tape present	0	x	Check Condition Status is returned with Not Ready, Medium Not Present (2/3A00)	No action is taken No tape present
No tape present	1	x	Check Condition Status is returned with Not Ready, Medium Not Present (2/3A00)	No action is taken No tape present
Ejected Position	0	x	Check Condition Status is returned with Not Ready, Initializing Command Required (2/0402)	No action is taken Ejected Position
Ejected Position	1	0	Good Status returned	Seated and tape is threaded and ready for access at LBA 0 of partition 0
Ejected Position	1	1	Good Status returned	Seated with Cartridge Memory (CM) accessible but tape is not threaded
Seated but tape not threaded	0	0	Good Status returned	Ejected Position
Seated but tape not threaded	0	1	Good Status returned	No action taken Position it was at prior to command
Seated but tape not threaded	1	0	Good Status returned	Seated and tape is threaded and ready for access at LBA 0 of partition 0

Table 44 — LOAD/UNLOAD actions depending on Load and Hold bit settings and medium position

Medium Position on command receipt	Load	Hold	Status	Behavior and Medium Position at command completion
Seated but tape not threaded	1	1	Good Status returned	No action taken Position it was at prior to command
Seated with tape threaded	0	0	Good Status returned	Ejected Position
Seated with tape threaded	0	1	Good Status returned	Seated with Cartridge Memory (CM) accessible but tape is not threaded
Seated with tape threaded	1	0	Good Status returned	Seated and tape is rewound and ready for access at LBA 0 of partition 0 (i.e. this is equal to issuing a rewind command)
Seated with tape threaded	1	1	Check Condition Status is returned with Illegal Request, Invalid Field in CDB (5/2400)	No action is taken Position it was at prior to command

## 5.2.6 LOCATE(10/16) - 2Bh/92h

The LOCATE command causes the logical position on tape to be set to the value indicated by the LOGICAL OBJECT IDENTIFIER field. The value indicates the total number of records and marks between BOP and the desired logical position. A value of zero causes the tape to be positioned at BOP.

Table 45 — LOCATE(10) CDB

Puto	Bit								
Byte	7	6	5	4	3	2	1	0	
0		OPERATION CODE (2Bh)							
1		Reserved BT CP IMMED							
2		Reserved							
3	(MSB)		LOCIONI OR IFOT IDENTIFIED						
6			LOGICAL OBJECT IDENTIFIER (LSB)						
7			Reserved						
8		PARTITION							
9				Control Byte	(see 5.1.2.3)				

Table 46 — LOCATE(16) CDB

Puto	Bit									
Byte	7	6	5	4	3	2	1	0		
0				OPERATION	CODE (92h)					
1		Reserved DEST_TYPE Rsvd CP						IMMED		
2	Reserved					BAM				
3	PARTITION									
4	(MSB)	LOGICAL IDENTIFIER								
11							(LSB)			
12										
14		<del>-</del>		1/696	iveu					
15				Control Byte	(see 5.1.2.3)					

The following parameters apply:

- BT (block type): 0b
- cp (change partition):

Value	Description	

Ob No partition change occurs and the partition field is ignored.

The logical position of the medium is changed to the partition specified in the PARTITION field as part of the locate operation.

• IMMED (Immediate):

# Value Description

0b Status is not returned until after the command has completed.

The device validates the command and waits for any previous command from any server to complete, including any immediate commands that are currently being processed. It also waits for any buffered data to be flushed to tape. It then reports a DEFERRED ERROR for

any preceding command or buffered data, if any. If there is no deferred error, the drive reports GOOD status and initiates processing the command.

- PARTITION: The partition to locate to if the CP bit is 1b.
- DEST\_TYPE (destination type): Used in conjunction with the LOGICAL IDENTIFIER field to locate to the appropriate position of the medium.

Value	Description
00b	The LOGICAL IDENTIFIER field is interpreted as a logical object identifier. The Logical Position upon successful completion is on the BOP side of the logical object.
01b	The LOGICAL IDENTIFIER field is interpreted as a logical file identifier. The Logical Position upon successful completion is on the BOP side of the logical file.
011b	The LOGICAL IDENTIFIER field is ignored and the logical position upon completion is EOD (end-of-data) of the partition specified in the PARTITION field if the CP bit is set to 1b or EOD of the current partition if the CP bit is set to 0b.
others	Reserved

- LOGICAL OBJECT IDENTIFIER: The logical object identifier to which the medium is to be positioned.
- LOGICAL IDENTIFIER: The logical object identifier (if the DEST\_TYPE is set to 00b) or the logical file identifier (if the DEST\_TYPE is sest to 01b) to which the medium is to be positioned.

## 5.2.7 LOG SELECT - 4Ch

The LOG SELECT command causes log data on the drive to be reset to its default value or to be set to an initiator-specific value.

Table 47 — LOG SELECT CDB

Duto			Bit					
Byte	7	6	5	4	3	2	1	0
0	OPERATION CODE (4Ch)							
1			Res	erved			PCR	SP
2	PC PAGE CODE							
3	SUBPAGE CODE							
4		Reserved ———						
6		-	Reserved					
7	(MSB)			DADAMETED	LIST LENGTH			
8		-		FARAIVIETER	LIST LENGTH			(LSB)
9				Control Byte	(see 5.1.2.3)	)		

## • Parameter Code Reset (PCR):

If the Parameter Code Reset (PCR) bit is set to one, then the PARAMETER LIST LENGTH shall be zero. The action taken by the drive is specified for the values of the Page Control (PC) field as follows:

Value	Description
00b	no action is taken and GOOD status is returned.
01b	all resettable logs on the drive are reset to default values.
10b	no action is taken and GOOD status is returned.
11b	all resettable logs on the drive are reset to default values.

If the Parameter Code Reset (PCR) field is set to 0, the Parameter List Length is not 0. The action taken by the drive is specified for the values of the PC field as follows:

Value	Description
00b	CHECK CONDITION status is returned with the Sense Key set to ILLEGAL REQUEST and the
	additional sense code set to INVALID FIELD IN CDB (5/2400h).
01b	data from the server is written to the indicated logs, provided that the logs are writable.
10b	CHECK CONDITION status is returned with the Sense Key set to ILLEGAL REQUEST and the
	additional sense code set to INVALID FIELD IN CDB (5/2400h).
11b	data from the server is written to the indicated logs, provided that the logs are writable.

• Save Page (SP): (0b)

For a list of supported page codes see LP 00h: Supported Log Pages (see 6.4.4 on page 264).

## 5.2.8 LOG SENSE - 4Dh

The LOG SENSE command causes log data to be sent to the initiator.

Table 48 — LOG SENSE CDB


Duto		Bit						
Byte	7	6	5	5 4 3 2 1				0
0				OPERATION	CODE (4Dh)			
1			Rese	erved			PPC	SP
2	PC PAGE CODE							
3	SUBPAGE CODE							
4		Reserved						
5	(MSB)		PARAMETER POINTER —————					
6		-		PARAMETE	RPOINTER			(LSB)
7	(MSB)	_		ALLOCATIO	IN I ENCTU			
8		<del>-</del>		ALLOCATIC	IN LEINGTH			(LSB)
9				Control Byte	(see 5.1.2.3)			

The log values returned are controlled by the Page Control (PC) field value as follows:

Value	Description
00b	the maximum value for each log entry is returned.
01b	the current values are returned.
10b	the maximum value for each log entry is returned.
11b	the power-on values are returned.

NOTE 8 - For page 2Eh (TapeAlert) only, the PC field is ignored. Current values are always returned.

The Parameter Pointer Control (PPC) must be set to 0. Returning changed parameters is not supported. The Save Page (SP) field must be set to 0. Saved pages are not supported. The Parameter Pointer will be 0.



For a list of supported page codes see LP 00h: Supported Log Pages (see 6.4.4 on page 264).

### 5.2.9 MODE SELECT (6/10) - 15h/55h

The MODE SELECT commands are defined in SPC (see the latest version at <a href="http://www.t10.org/drafts.htm#SCSI3">http://www.t10.org/drafts.htm#SCSI3</a> CMNDSETS). This clause describes the specific implementation.

NOTE 9 - In the future, the length of the mode parameter list for Mode Sense Page Code 3Fh (All Pages) may exceed 255 bytes. At that time, use of the Mode Select (10) and Mode Sense (10) commands will be required in order to transfer all mode pages with one command. Some mode pages today exceed 255 bytes. For this reason, use of the Mode Select (6) and Mode Sense (6) commands is not recommended.

Bit **Byte** 7 msb 6 5 4 2 0 Isb 1 0 OPERATION CODE (15h) Obsolete (LUN) 1 PF Reserved SP 2 Reserved 3 4 PARAMETER LIST LENGTH 5 Control Byte (see 5.1.2.3)

Table 49 — MODE SELECT(6) CDB

Table 50 — MODE SELECT(10) CDB

Byte	Bit									
Буш	7 msb 6 5 4 3 2 1						1	0 Isb		
0				OPERATION	CODE (55h)					
1	C	Obsolete (LUN) PF Reserved SP								
2		Reserved								
6		•		Kese	iveu					
7	(MSB)	NSB)								
8		PARAMETER LIST LENGTH (LSB)						(LSB)		
9		Control Byte (see 5.1.2.3)								

The following parameters apply:

PF (Page Format): 1b

The PF bit is explicitly not checked.

- SP (Save Pages): Only allowed to be set to one when explicitly mentioned in the description of the specific mode page
- PARAMETER LIST LENGTH:

This field specifies the length in bytes of the mode parameter list that is transferred from the initiator to the target. A parameter list length of zero indicates that no data is transferred. This condition is not considered as an error.

The target terminates the command with CHECK CONDITION status with associated sense data of 5/1A00 (ILLEGAL REQUEST, PARAMETER LIST LENGTH ERROR) if the parameter list length results in the truncation of the mode parameter header, the mode parameter block descriptor, or any mode page.

NOTE 10 - Issuing a MODE SENSE for current values before a MODE SELECT is generally recommended to avoid accidentally attempting to set fields that are not allowed to be changed by the initiator.

If any of the fields in the mode parameters are invalid, no parameters are altered, CHECK CONDITION status is returned, the Sense Key is set to ILLEGAL REQUEST, and the ASC/ASCQ is set to INVALID FIELD IN PARAMETER LIST (2600).

NOTE 11 - For Reserved and Vendor-Reserved fields, appropriate values to issue on a MODE SELECT may be non-zero. A MODE SELECT to pages with these fields should use a value obtained by issuing a MODE SENSE just prior to the MODE SELECT.

NOTE 12 - The PS bit in bit 7 byte 0 of each mode page is explicitly ignored on a MODE SELECT command.

Mode Parameters (MP) (see 6.6 on page 356) has a listing of all mode parameters.

See Supported Mode Pages (see 6.6.4 on page 362) for a listing of supported mode pages.

### 5.2.10 MODE SENSE (6/10) - 1Ah/5Ah

The MODE SENSE commands are defined in SPC (see the latest version at http://www.t10.org/drafts.htm#SCSI3 CMNDSETS). This clause decribes the specific implementation.

NOTE 13 - In the future, the length of the mode parameter list for Mode Sense Page Code 3Fh (All Pages) may exceed 255 bytes. At that time, use of the MODE SELECT (10) and MODE SENSE (10) commands will be required in order to transfer all mode pages with one command. For this reason, use of the MODE SELECT (6) and MODE SENSE (6) commands is not recommended.

Bit **Byte** 7 msb 5 4 0 Isb 0 OPERATION CODE (1A) Obsolete (LUN) 1 Reserved Reserved РС PAGE CODE 2 3 SUBPAGE CODE 4 ALLOCATION LENGTH

Table 51 — MODE SENSE(6) CDB

# Table 52 — MODE SENSE(10) CDB

Control Byte (see 5.1.2.3)

Puto	Bit									
Byte	7 msb	6	5	4	3	2	1	0 lsb		
0		OPERATION CODE (5A)								
1	Obsolete (LUN) Reserved DBD Reserved						Reserved			
2	PC PAGE CODE									
3		SUBPAGE CODE								
4				Rese	rvod					
6		•		1/626	iveu					
7	(MSB)	(MSB) ALLOCATION LENGTH (LSB)								
8								(LSB)		
9		Control Byte (see 5.1.2.3)								

The following parameters apply:

- DBD (Disable Block Descriptors): 0b or 1b. (see 6.6.2.1)
- PC (Page Control): Description

Value

5

00b	current values
01b	changeable bitmap (changeable = 1; unchangeable = 0)
10b	default (power-on) values
11b	saved values. When values that are not saveable are returned the default values are used

- PAGE CODE: This field along with the SUBPAGE CODE field indicate which mode page is requested.
- SUBPAGE CODE: This field along with the PAGE CODE field indicate which mode page is requested.
- ALLOCATION LENGTH: The maximum number of bytes to be transferred.

If the allocation length specified is less than the amount available, then the allocated amount is transferred and no error is reported.

Mode Parameters (MP) (see 6.6 on page 356) has a listing of all mode parameters.

See <u>Supported Mode Pages (see 6.6.4 on page 362)</u> for a listing of supported mode pages.

95

# 5.2.11 PERSISTENT RESERVE IN (PRIN)- 5Eh

The PERSISTENT RESERVE IN command is defined in SPC (see the latest version at <a href="http://www.t10.org/drafts.htm#SCSI3">http://www.t10.org/drafts.htm#SCSI3</a> CMNDSETS). This clause decribes the specific implementation.

Table 53 — PERSISTENT RESERVE IN CDB

Puto	Bit									
Byte	7 msb	6	5	4	3	2	1	0 lsb		
0		OPCODE (5Eh)								
1		Reserved SERVICE ACTION								
2			Reserved							
5				Nese	iveu					
6	(MSB)									
8		ALLOCATION LENGTH (LSB)								
9				Control Byte	(see 5.1.2.3)	1				

The following parameters apply:

SERVICE ACTION:

Value	Description
00h	READ KEYS - Reads all registered Reservation Keys (see 5.2.11.1)
01h	READ RESERVATION - Reads all current persistent reservations (see 5.2.11.2)
02h	REPORT CAPABILITIES - Returns capability information (see 5.2.11.3)
03h	READ FULL STATUS - Reads complete information about all registrations and the
	persistent reservations, if any (see 5.2.11.4)

• ALLOCATION LENGTH: The maximum number of bytes to be transferred.

# 5.2.11.1 READ KEYS service action

The READ KEYS service action requests that the device server return a parameter list containing a header and a list of each currently registered I\_T nexus' reservation key.

The format for the parameter data provided in response to a PERSISTENT RESERVE IN command with the READ KEYS service action is shown in <u>table 54</u>.

Table 54 — PERSISTENT RESERVE IN parameter data for READ KEYS

Duta			Bit							
Byte	7 msb	6	5	5 4 3 2 1						
0	(MSB)		PRGENERATION							
3				PRGEN	ERATION			(LSB)		
4	(MSB)		7							
7			ADDITIONAL LENGTH (n-7) (LSB)							
			Reservation key list							
8	(MSB)			Poson otio	n kov [firot]					
15			Reservation key [first] (LSB)					(LSB)		
		:								
n-7	(MSB)		Reservation key [last]							
n				Reservanc	ni key [last]			(LSB)		

# Byte Description

- 0-3 PRGENERATION: Counter for Persistent Reserve Out Command requests
- 4-7 ADDITIONAL LENGTH: A count of the number of bytes in the Reservation key list
- 8-15 First Reservation Key
- 16-n Additional Reservation keys: additional reservation keys are not supported.

#### 5.2.11.2 READ RESERVATION service action

The READ RESERVATION service action requests that the device server return a parameter list containing a header and the persistent reservation, if any, that is present in the device server.

The format for the parameter data provided in response to a PERSISTENT RESERVE IN command with the READ RESERVATION service action is shown in table 55.

Table 55 — PERSISTENT RESERVE IN parameter data for READ RESERVATION

D. d.				В	it			
Byte	7 msb	6	6 5 4 3 2 1					0 lsb
0	(MSB)			DDocu	-DATION			
3				PRGENI	ERATION			(LSB)
4	(MSB)			ADDITION	LIENOTII			
7				ADDITIONA	AL LENGTH			(LSB)
	If reservation exists (i.e., ADDITIONAL LENGTH > 0000 0000h)							
8	(MSB)							
15			RESERVATION KEY (LSB)				(LSB)	
16				Oha	-1-4-			
19				Obs	olete			
20	Reserved							
21		SCOPE TYPE						
22			21.1.1					
23	-	•		Obs	Diete			

#### **Description** Byte

0-3 PRGENERATION: Counter for Persistent Reserve Out Command requests

4-7 ADDITIONAL LENGTH: A count of the number of bytes in the Reservation key list.

**Description** Value 00000000h No reservation exists 00000010h Reservation exists and this much data follows Reservation descriptor, if any: (defined below) Reservation Key

16-19 Obsolete 20 Reserved

21

8-n 8-15

> Bit Description

> > Value

7-4 SCOPE: persistent reservation applies to the entire logical unit: 0h

4-0 TYPE:

> **Description** 3h **Exclusive Access** 6h Exclusive Access — Registrants only Exclusive Access — All Registrants 8h others Not supported

22-23 Obsolete

#### 5.2.11.3 REPORT CAPABILITIES service action

The REPORT CAPABILITIES service action requests that the device server return information on persistent reservation features.

The format for the parameter data provided in response to a PERSISTENT RESERVE IN command with the REPORT CAPABILITIES service action is shown in table 56.

Table 56 — PERSISTENT RESERVE IN parameter data for REPORT CAPABILITIES

D. d.				В	it			
Byte	7 msb 6 5 4 3 2					1	0 lsb	
0	(MSB)	(MSB)						
1		LENGTH (0008h) (LSB)						(LSB)
2		Reserved			SIP_C	ATP_C	Reserved	PTPL_C
3	TMV	ALLO	N COMMANDS (	000b) Reserved				PTPL_A
			Pe	ersistent Reserv	vation Type Ma	ısk		
4	WR_EX_AR	EX_AC_RO	WR_EX_RO	Rsvd	EX_AC	Rsvd	WR_EX	Rsvd
5	Reserved							EX_AC_AR
6								
7		Reserved						

#### **Byte Description**

0-1 LENGTH: 0008h

2

#### Description Bit 7-5 Reserved

- CRH (Compatible Reservation Handling): 1b
- 3 SIP\_C (Specify Initiator Ports Capable): 0b
- 2 ATP\_C (All Target Ports Capable): 0b
- 1
- 0 PTPL C (Persist Through Power Loss Capable): 0b

3

#### Bit Description

- 7 TMV (Type Mask Valid): 1b
- 6-4 ALLOW COMMANDS: 000b

#### Value **Description**

000b No information is provided about whether certain commands are allowed through

certain types of persistent reservations.

001b-100b Not Supported. TUR is allowed through Exclusive Access reservations [and info

about certain other commands and Write Exclusive reservations].

101b-111b Reserved

3-1 Reserved

0 PTPL\_A (Persist Through Power Loss Activated): 0b

- 4 Persistent Reservation Type Mask (byte 4)
  - Bit Description
  - 7 WR\_EX\_AR (Write Exclusive All Registrants): 0b
  - 6 EX\_AC\_RO (Exclusive Access Registrants Only): 1b
  - 5 WR\_EX\_RO (Write Exclusive Registrants Only): 0b
  - 4 Reserved
  - 3 EX\_AC (Exclusive Access): 1b
  - 2 Reserved
  - 1 WR EX (Write Exclusive): 0b
  - 0 Reserved
- 5 Persistent Reservation Type Mask (byte 5)
  - Bit Description
  - 7-1 Reserved
  - 0 EX\_AC\_AR (Exclusive Access All Registrants): 0b
- 6-7 Reserved

#### 5.2.11.4 READ FULL STATUS service action

The READ FULL STATUS service action requests that the device server return a parameter list describing the registration and persistent reservation status of each currently registered I\_T nexus for the logical unit.

The format for the parameter data provided in response to a PERSISTENT RESERVE IN command with the READ FULL STATUS service action is shown in <u>table 57</u>.

Bit **Byte** 7 msb 5 3 2 6 4 1 0 Isb 0 (MSB) **PRGENERATION** 3 (LSB) 4 (MSB) ADDITIONAL LENGTH (n-7) (LSB) Full status descriptors 8 Full status descriptor [first] (see table 58) Full status descriptor [last] (see table 58) n

Table 57 — PERSISTENT RESERVE IN parameter data for READ FULL STATUS

### Byte Description

- 0-3 PRGENERATION:
- 4-7 ADDITIONAL LENGTH (n-7)
- 8-n Full status descriptors (see 5.2.11.4.1).

## 5.2.11.4.1 Full status descriptors

The format of the full status descriptors is shown in <u>table 58</u>. Each full status descriptor describes one or more registered I\_T nexuses. The device returns persistent reservations status information for every registered I\_T nexus.

Table 58 — PERSISTENT RESERVE IN full status descriptor format

Durte				В	it			
Byte	7 msb	6	6 5 4 3 2 1		0 lsb			
0	(MSB)			DE0ED\/A	TION KEY			
7				RESERVA	TION KEY			(LSB)
8								
11				Rese	erved			
12			Reserved ALL_TG_PT					R_HOLDER
13		SCOPE TYPE						
14								
17				Rese	erved			
18	(MSB)		D.E.	. ATIVE TABOET	DODE IDENTIF	150		
19			KE	LATIVE TARGET	PORT IDENTIF	IEK		(LSB)
20	(MSB)		4001	5101111 B500B1		(n. 00)		
23			ADDITIONAL DESCRIPTOR LENGTH (n-23)				(LSB)	
24				TDANO	DODTID			
n			TRANSPORTID					

# Byte Description

- 0-7 RESERVATION KEY:
- 8-11 Reserved

12

## Bit Description

- 7-2 Reserved
- 1 ALL\_TG\_PT (All Target Ports)
- 0 R\_HOLDER (Reservation Holder)

13

# Bit Description

- 7-4 SCOPE
- 3-0 TYPE
- 14-17 Reserved
- 18-19 RELATIVE TARGET PORT IDENTIFIER:
- 20-23 ADDITIONAL DESCRIPTOR LENGTH (n-23)
- 24-n TRANSPORTID: TransportID identifying the initiator port that is part of the I\_T nexus or I\_T nexuses described by this full status descriptor.

## 5.2.12 PERSISTENT RESERVE OUT - 5Fh

The Persistent Reserve Out command is defined in SPC-4 (see the latest version at <a href="http://www.t10.org/drafts.htm#SCSI3">http://www.t10.org/drafts.htm#SCSI3</a> CMNDSETS). This clause decribes the specific implementation.

Table 59 — PERSISTENT RESERVE OUT CDB

Duto	Bit									
Byte	7 msb	6	5	4	3	2	1	0 lsb		
0		OPCODE (5Fh)								
1		Reserved SERVICE ACTION								
2	SCOPE TYPE									
3				Rese	rvod					
6				I/G26	iveu			·		
7	(MSB)									
8		PARAMETER LIST LENGTH (LSB)						(LSB)		
9		Control Byte (see 5.1.2.3)								

The following parameters apply:

SERVICE ACTION:

Value	Description
00h	REGISTER: Register a reservation key with the device server
01h	RESERVE: Create a persistent reservation using a reservation key
02h	RELEASE: Release a persistent reservation
03h	CLEAR: Clear all reservation keys and all persistent reservations
04h	PREEMPT: Preempt persistent reservations and/or removes registrations
05h	PREEMPT AND ABORT: Preempt persistent reservations and/or removes registrations
	and clear the task set for the preempted initiator
07h	REGISTER AND MOVE: Register And Move the registration to another I_T nexus.
08h-1Fh	Reserved

• SCOPE: 0h

If the Service Action field is set to RESERVE, RELEASE, PREEMPT, PREEMPT AND ABORT, or REGISTER AND MOVE then SCOPE shall be zero. This field is ignored for other Service Actions.

TYPE:

Value	Description
3h	Exclusive Access
6h	Exclusive Access — Registrants only
others	Not supported

• PARAMETER LIST LENGTH:

Value	Description
0018h	All values of SERVICE ACTION except REGISTER AND MOVE (i.e., 07h)
variable	SERVICE ACTION set to REGISTER AND MOVE (i.e., 07h)

# 5.2.12.1 Basic PERSISTENT RESERVE OUT parameter list

The PERSISTENT RESERVE OUT command with any service action except the REGISTER AND MOVE service action uses the parameter list format shown in <u>table 60</u>.

Table 60 — PERSISTENT RESERVE OUT parameter list

Durto	Bit											
Byte	7 msb	7 msb 6 5 4 3 2 1										
0	(MSB)		DECEDIATION VEV									
7			RESERVATION KEY (LSB)									
8	(MSB)											
15			SERVICE ACTION RESERVATION KEY									
16				Oha								
19				Obs	olete							
20		Rese	erved		SPEC_I_PT	ALL_TG_PT	Reserved	APTPL				
21				Rese	erved							
22	·			Oho	oloto							
23	_			ODS	olete							

# Byte Description

0-7 RESERVATION KEY

8-15 SERVICE ACTION RESERVATION KEY

16-19 Obsolete

20

# Bit Description

7-4 Reserved

3 SPEC\_I\_PT(Specify Initiator Ports): 0b

2 ALL\_TG\_PT(All Target Ports): 0b

1 Reserved

0 APTPL (Activate Persist Through Power Loss): 0b

21 Reserved

22-23 Obsolete

# 5.2.12.2 PERSISTENT RESERVE OUT with REGISTER AND MOVE service action parameters

The parameter list format shown in <u>table 61</u> shall be used by the PERSISTENT RESERVE OUT command with REGISTER AND MOVE service action.

Table 61 — PERSISTENT RESERVE OUT with REGISTER AND MOVE service action parameter list

Deste				В	it							
Byte	7 msb	7 msb 6 5 4 3 2 1										
0	(MSB)											
7			RESERVATION KEY									
8	(MSB)											
15		SERVICE ACTION RESERVATION KEY										
16	Reserved											
17			Rese	erved			UNREG	APTPL				
18	(MSB)		D.F.	1 ATIVE TABOET	DODE IDENTIF	::ED						
19			KE	LATIVE TARGET	PORT IDENTIF	IEK		(LSB)				
20	(MSB)		TDANODO	DELD DADAMET		Tu (n. 22)						
23	·	TRANSPORTID PARAMETER DATA LENGTH (n-23)										
24	<u> </u>			TDANIO	200710							
n				TRANS	POKTID							

### Byte Description

0-7 RESERVATION KEY

8-15 SERVICE ACTION RESERVATION KEY

16 Reserved

17

# Bit Description

7-2 Reserved

1 UNREG (Unregister):

0 APTPL (Activate Persist Through Power Loss): 0b

18-19 RELATIVE TARGET PORT IDENTIFIER

20-23 ADDITIONAL DESCRIPTOR LENGTH (n-23)

24-n TRANSPORTID

### 5.2.13 PREVENT ALLOW MEDIUM REMOVAL - 1Eh

The PREVENT ALLOW MEDIUM REMOVAL command is defined in SSC (see the latest version at <a href="http://www.t10.org/drafts.htm#SCSI3">http://www.t10.org/drafts.htm#SCSI3</a> CMNDSETS). This clause decribes the specific implementation.

The Prevent Allow Medium Removal command is supported only for the Prevent Cartridge Removal option. <u>Table 62</u> shows the command format.

Bit **Byte** 7 msb 6 5 4 2 0 Isb 3 0 OPERATION CODE (1Eh) 1 Obsolete (LUN) Reserved 2 Reserved 3 4 Reserved PREVENT 5 Control Byte (see 5.1.2.3)

Table 62 — PREVENT ALLOW MEDIUM REMOVAL CDB

The following parameters apply:

•	PREVENT	٠

Value	Description
00b	Allow Cartridge Removal: Medium removal is allowed through this I_T nexus
01b	Prevent Cartridge Removal: Medium removal is prevented through this I_T nexus
10b	Obsolete
11b	Obsolete

### 5.2.13.1 Medium removal

When medium removal is prevented and an I\_T nexus requests to eject or unmount the volume via a SCSI LOAD UNLOAD command that that command is rejected with a CHECK CONDITION status with the Sense Key set to ILLEGAL REQUEST and the additional sense code set to MEDIUM REMOVAL PREVENTED (5/5302).

When medium removal is prevented by any I\_T nexus, requests to eject the volume via the panel are ignored.

Volume removal is enabled again when each I\_T nexus that has prevented medium removal has issued the PREVENT ALLOW MEDIUM REMOVAL command with the PREVENT field set to 00b (Allow Cartridge Removal) or has experienced an I\_T nexus loss event. A reset (bus device reset, reset message, or power on reset) also restores the drive to the allow removal state. In the case of the bus device reset or the reset message, the reset restores the allow state only if the reset occurs on the same port that originally set Prevent.

If a persistent reservation or registration is being preempted by a PERSISTENT RESERVE OUT command with PREEMPT AND ABORT service action, then the equivalent of a PREVENT ALLOW MEDIUM REMOVAL command with the PREVENT field set to 00b is processed for each I\_T nexus associated with the persistent reservation or registrations being preempted.

NOTE 14 - The PREVENT ALLOW MEDIUM REMOVAL command also prohibits medium removal by any library commands that may be received.

## 5.2.14 READ - 08h

The READ command is defined in SSC (see the latest version at <a href="http://www.t10.org/drafts.htm#SCSI3">http://www.t10.org/drafts.htm#SCSI3</a> CMNDSETS). This clause decribes the specific implementation.

Table 63 — READ CDB

Duto		Bit											
Byte	7 msb 6 5 4 3 2 1												
0		OPERATION CODE (08h)											
1	C	Obsolete (LUN) Reserved SILI FIXED											
2	MSB			TDANCEE	D L ENOTH								
4		TRANSFER LENGTH LSB											
5		Control Byte (see 5.1.2.3)											

The following parameters apply:

- SILI (Suppress Incorrect Length Indicator): (see 4.9)
- FIXED (see 4.8)
- TRANSFER LENGTH (see 4.8)

General Read-Type Handling (see 4.9.1 on page 43) provides additional information.

106 IBM LTO SCSI Reference

#### 5.2.15 READ ATTRIBUTE - 8Ch

The READ ATTRIBUTE command is defined in SPC-4 (see the latest version at <a href="http://www.t10.org/drafts.htm#SCSI3">http://www.t10.org/drafts.htm#SCSI3</a> CMNDSETS). This clause decribes the specific implementation. The READ ATTRIBUTE command (see table 64) allows an application client to read attribute values from medium auxiliary memory.

Pyto				В	Bit								
Byte	7 msb 6 5 4 3 2 1												
0	OPERATION CODE (8Ch)												
1		Reserved SERVICE ACTION											
2		Obsolete											
4		Obsolete ———											
5	LOGICAL VOLUME NUMBER												
6	Reserved												
7				PARTITION	N NUMBER								
8	(MSB)			EIDCT ATTDIDI	JTE IDENTIFIER			_					
9				FINOT ATTRIBU	TE IDENTIFIER			(LSB)					
10	(MSB)			ALLOCATIO	ON LENGTH								
13		•		ALLOCATIO	JN LENGIA			(LSB)					
14				Reserved				CACHE					
15				Control Byte	(see 5.1.2.3)								

Table 64 — READ ATTRIBUTE CDB

If cached attribute information is not reported (e.g., the CACHE bit is set to zero or the CACHE bit is set to one and there is no cached attributes available) and there is no medium present, then the command is terminated with CHECK CONDITION status, with NOT READY, MEDIUM NOT PRESENT (2/3A00).

If cached attribute information is not available (e.g., the CACHE bit is set to zero) and the medium is present but the medium auxiliary memory is not accessible, then the READ ATTRIBUTE command is terminated with CHECK CONDITION status, with MEDIUM ERROR, LOGICAL UNIT NOT READY, AUXILIARY MEMORY NOT ACCESSIBLE (3/0410).

If the medium auxiliary memory is not operational, the READ ATTRIBUTE command is terminated with CHECK CONDITION status, with MEDIUM ERROR, AUXILIARY MEMORY READ ERROR (3/1112) and the Memory Chip in Cartridge Failure TapeAlert (i.e., 0Fh) is asserted.

The following parameters apply:

#### • SERVICE ACTION:

Value	Description
00h	ATTRIBUTE VALUES: Return attribute values as specified in ATTRIBUTE VALUES
	service action (see 5.2.15.1 on page 108)
01h	ATTRIBUTE LIST: Return a list of available attribute identifiers – identifiers that are in the
	read only state or in the read/write state (see 4.17) as specified in ATTRIBUTE LIST
	service action (see 5.2.15.2 on page 109)
02h	LOGICAL VOLUME LIST: Return a list of known logical volume numbers as defined in
	LOGICAL VOLUME LIST service action (see 5.2.15.3 on page 109)
03h	PARTITION LIST: Return a list of known partition numbers as defined in PARTITION LIST
	service action (see 5.2.15.4 on page 110)
05h	SUPPORTED ATTRIBUTES: Return a list of supported attribute identifiers – identifiers that
	are in the read only state, in the read/write state, or in the nonexistent state (see 4.17) as

**IBM LTO SCSI Reference** 

defined in SUPPORTED ATTRIBUTES service action (see 5.2.15.5 on page 110)

- LOGICAL VOLUME NUMBER: 00h
- PARTITION NUMBER: The partition of the attribute to be accessed.
- FIRST ATTRIBUTE IDENTIFIER: The attribute identifier of the first attribute to be returned.
- ALLOCATION LENGTH: The number of bytes allowed to be returned
- CACHE: Specifies whether or not to report attribute information cached from the most recently mounted volume. This bit is ignored if there is a volume mounted. Attribute information from cache is the complete set of attribute information from the most recently mounted volume. Cached attribute information is cleared at the start of a volume load.

Drives prior to LTO7 always behave as if the CACHE bit is set to 1b.

Value	Description
0b	Do not report cached attribute information.
1b	Report cached attribute information.

#### 5.2.15.1 ATTRIBUTE VALUES service action

The READ ATTRIBUTE command with ATTRIBUTE VALUES service action returns parameter data containing the attributes that are in the read state or read/write state (see 4.17) specified by the PARTITION NUMBER, LOGICAL VOLUME NUMBER, and FIRST ATTRIBUTE IDENTIFIER fields in the CDB. The returned parameter data shall contain the requested attributes in ascending numerical order by attribute identifier value and in the format shown in table 65.

Table 65 — READ ATTRIBUTE with ATTRIBUTE VALUES service action parameter list format

Desta	Bit												
Byte	7 msb	6	5	5 4 3 2 1									
0	(MSB)	(MSB)											
3	AVAILABLE DATA (n-3) (LSB)												
	Attribute(s)												
4				Attributa O	(000 6 F 1)								
				Attribute 0	(See 6.5.1)								
		:											
				Attribute v	(200 G F 1)								
n				Attribute x	(See 6.5.1)								

The AVAILABLE DATA field shall contain the number of bytes of attribute information in the parameter list.

MAM attribute format (see 6.5.1 on page 347) describes the format of the attributes.

### 5.2.15.2 ATTRIBUTE LIST service action

The READ ATTRIBUTE command with ATTRIBUTE LIST service action returns parameter data containing the attribute identifiers for the attributes that are in the read only state or in the read/write state (see 4.17) in the specified partition and volume number. The contents of FIRST ATTRIBUTE IDENTIFIER field in the CDB shall be ignored. The returned parameter data shall contain the requested attribute identifiers in ascending numerical order by attribute identifier value and in the format shown in table 66.

Table 66 — READ ATTRIBUTE with ATTRIBUTE LIST service action parameter list format

D. d.				В	it									
Byte	7 msb	6	5	5 4 3 2 1 0										
0	(MSB)		AVAILABLE DATA (n. 2)											
3		AVAILABLE DATA (n-3) (LSB)												
	Attribute identifiers													
4				ATTRIBUTE	DENITIEIED O									
5				ATTRIBUTE I	DENTIFIER U									
				:										
n-1				ATTOIDUTE	DENTIFIED									
n				ATTRIBUTE I	DENTIFIER X									

The AVAILABLE DATA field shall contain the number of bytes of attribute identifiers in the parameter list.

An ATTRIBUTE IDENTIFIER field is returned for each attribute that is in the read only state or in the read/write state (see 4.17) in the specified partition and volume number. Attribute identifier values (see 6.5.2 on page 348) provides a description of the attribute identifier values.

### 5.2.15.3 LOGICAL VOLUME LIST service action

The READ ATTRIBUTE command with LOGICAL VOLUME LIST service action returns parameter data (see table 67) identifying the supported number of logical volumes. The contents of LOGICAL VOLUME NUMBER, PARTITION NUMBER, and FIRST ATTRIBUTE IDENTIFIER fields in the CDB shall be ignored.

Table 67 — READ ATTRIBUTE with LOGICAL VOLUME LIST service action parameter list format

D. et a	Bit													
Byte	7 msb	6	5	4	3	2	1	0 lsb						
0	(MSB)													
1			AVAILABLE DATA (0002h) (LSB)											
2		FIRST LOGICAL VOLUME NUMBER												
3			NUMBI	ER OF LOGICAL	VOLUMES AVA	ILABLE								

The AVAILABLE DATA field shall contain two.

The FIRST LOGICAL VOLUME NUMBER field indicates the first volume available. Logical volume numbering should start at zero.

The NUMBER OF LOGICAL VOLUMES AVAILABLE field indicates the number of volumes available.

#### 5.2.15.4 PARTITION LIST service action

The READ ATTRIBUTE command with PARTITION LIST service action returns parameter data (see table 68) identifying the number of partitions supported in the specified logical volume number. The contents of PARTITION NUMBER and FIRST ATTRIBUTE IDENTIFIER fields in the CDB shall be ignored.

Table 68 — READ ATTRIBUTE with PARTITION LIST service action parameter list format

Buto	Bit											
Byte	7 msb	6	5	4	3	2	1	0 lsb				
0	(MSB)		(00001)									
1			AVAILABLE DATA (0002h) (LSI									
2				FIRST PARTIT	TION NUMBER							
3			NU	IMBER OF PART	TITIONS AVAILAE	BLE						

The AVAILABLE DATA field shall contain two.

The FIRST PARTITION NUMBER field indicates the first partition available on the specified logical volume number. Partition numbering should start at zero.

The NUMBER OF PARTITIONS AVAILABLE field indicates the number of partitions available on the specified logical volume number.

### 5.2.15.5 SUPPORTED ATTRIBUTES service action

The READ ATTRIBUTE command with SUPPORTED ATTRIBUTES service action returns parameter data containing the attribute identifiers for the attributes that are in the read only state, in the read/write state, or in the nonexistent state (see 4.17) in the specified partition and volume number. The contents of FIRST ATTRIBUTE IDENTIFIER field in the CDB shall be ignored. The returned parameter data shall contain the requested attribute identifiers in ascending numerical order by attribute identifier value and in the format shown in table 69.

Table 69 — READ ATTRIBUTE with SUPPORTED ATTRIBUTES service action parameter list format

Duta	Bit											
Byte	7 msb	6	5	4	3	2	1	0 lsb				
0	(MSB)		AVAII ADI E DATA (n. 3)									
3		AVAILABLE DATA (n-3) (LSB)										
	Attribute identifiers											
4												
5				ATTRIBUTE I	DENTIFIER U							
				:								
n-1												
n		· 		ATTRIBUTE I	DENTIFIER X							

The AVAILABLE DATA field shall contain the number of bytes of attribute identifiers in the parameter list.

An ATTRIBUTE IDENTIFIER field is returned for each attribute that is in the read only state, in the read/write state, or in the nonexistent state (see 4.17) in the specified partition and volume number. Attribute identifier values (see 6.5.2 on page 348) describes the attribute identifier values.

#### 5.2.16 READ BLOCK LIMITS - 05h

The READ BLOCK LIMITS command is defined in SSC (see the latest version at <a href="http://www.t10.org/drafts.htm#SCSI3">http://www.t10.org/drafts.htm#SCSI3</a> CMNDSETS). This clause decribes the specific implementation.

Table 70 — READ BLOCK LIMITS CDB

Puto	Bit											
Byte	7 msb	6	5	4	3	2	1	0 Isb				
0		OPERATION CODE (05h)										
1	C	Obsolete (LUN) Reserved MLOI										
2				Pose	rvod							
4		Reserved ————										
5				Control Byte	(see 5.1.2.3)							

The following parameters apply:

maximum logical object identifier (MLOI):

#### Value Description

- 0b Return the READ BLOCK LIMITS block length data (see 5.2.16.1).
- 1b Return the READ BLOCK LIMITS maximum logical object identifier data (see 5.2.16.2).

### 5.2.16.1 READ BLOCK LIMITS block length data

The returned parameter data is in the format shown in table 71.

Table 71 — RBL parameter data

Desta	Bit										
Byte	7 msb	6	5	4	3	2	1	0 lsb			
0		Reserved	eserved GRANULARITY								
1	(MSB)										
3				Maximum bloc	K LENGTH LIMI	<b> </b>		(LSB)			
4	(MSB)										
5		•		MINIMUM BLOC	K LENGTH LIMI	I		(LSB)			

The following parameters apply to the Read Block Limits data:

## Byte Description

O

- Bit Description
- 7-5 Reserved
- GRANULARITY: The supported block size granularity. The device supports all block sizes n such that n minus the MINIMUM BLOCK LENGTH LIMIT is a multiple of  $2^{GRANULARITY}$  and n is greater than or equal to the MINIMUM BLOCK LENGTH LIMIT and less than or equal to the MAXIMUM BLOCK LENGTH LIMIT.
- 1-3 MAXIMUM BLOCK LENGTH LIMIT: 80 0000h (8,388,608 bytes) block length limit length limits
- 4-5 MINIMUM BLOCK LENGTH LIMIT: 0001h (1 byte) minimum block length limit

Any block length in the range of MINIMUM BLOCK LENGTH LIMIT to MAXIMUM BLOCK LENGTH LIMIT is supported.

NOTE 15 - The value reported in the MAXIMUM BLOCK LENGTH LIMIT field is the maximum block length when there is at least one encrypted logical block on the volume. When there are no encrypted logical blocks on the volume

a larger block length is allowed but not reported. This difference in maximum block length allowed has the potential to create confusion. Because of that, it is recommended that users limit their maximum block length to the values reported.

Data Transfer, Block Limits, and Fixed Block Option (see 4.8 on page 42) provides further explanation.

### 5.2.16.2 READ BLOCK LIMITS maximum logical object identifier data

The READ BLOCK LIMITS maximum logical object identifier data (see <u>table 72</u>) specifies the maximum value of the logical object identifier the logical unit supports.

Table 72 — READ BLOCK LIMITS maximum logical object identifier data

Durte	Bit											
Byte	7 msb	6	5	4	3	2	1	0 lsb				
0												
	Reserved											
11												
12	(MSB)											
		MAXIMUM LOGICAL OBJECT IDENTIFIER										
19								(LSB)				

The following parameters apply to the Read Block Limits maximum logical object identifier data:

### Byte Description

### 0-11 Reserved

12-19 MAXIMUM LOGICAL OBJECT IDENTIFIER: The maximum value the device server supports in a logical object identifier field. This field is set to 0000\_0000\_FFFF\_FFFFh.

NOTE 16 - The drive establishes early warning at a constant number of blocks prior to the MAXIMUM LOGICAL OBJECT IDENTIFIER. At the time this document was published, the drive assumes a block size of 32 KiB for these calculations, but this may change at any time. Additionally, programmable early warning, if configured, is returned prior to the early warning value using an assumed block size of 32 KiB.

#### 5.2.17 READ BUFFER - 3Ch

The Read Buffer command is defined in SPC (see the latest version at <a href="http://www.t10.org/drafts.htm#SCSI3">http://www.t10.org/drafts.htm#SCSI3</a> CMNDSETS). This clause describes the specific implementation.

Table 73 — READ BUFFER CDB

Puto		Bit										
Byte	7 msb	6	5	4	3	2	1	0 lsb				
0				OPERATION	CODE (3Ch)							
1	C	bsolete (LUN	۷)			MODE						
2		BUFFER ID										
3	(MSB)			BUFFER	OFFOFT							
5				DUFFER	OFFSEI			(LSB)				
6	(MSB)			ALLOCATIO	N I ENCTU							
8			ALLOCATION LENGTH (LSB)									
9				Control Byte	(see 5.1.2.3)							

The following parameters apply:

MODE:

### Value - Description

MODE[00h] - Combined header and data (see 5.2.17.1 on page 114)

MODE[02h] - Data (see 5.2.17.2 on page 114)

MODE[03h] - Descriptor (see 5.2.17.3 on page 114)

MODE[07h] - Descriptor with algorithmic offset boundary (see 5.2.17.4 on page 115)

MODE[0Ah] - Read data from echo buffer (see 5.2.17.5 on page 115)

MODE[0Bh] - Echo buffer descriptor (see 5.2.17.6 on page 115)

MODE[1Ch] - Error history (see 5.2.17.7 on page 116)

- BUFFER ID: The supported buffers are described in <u>Supported Buffers when the mode field is 00h through 07h, 0Dh, or 0Fh (see 6.7.1 on page 413)</u>.
- BUFFER OFFSET: See the description of each mode for the details of this field.

NOTE 17 - If the BUFFER OFFSET is not on the boundary specified in <u>5.2.17.3 on page 114</u> or <u>5.2.17.4 on page 115</u>, then the device returns CHECK CONDITION status with associated sense data of 5/2400 (Illegal Request, Invalid Field in CDB).

 ALLOCATION LENGTH: The maximum number of bytes to be transferred starting at the offset specified in BUFFER OFFSET.

The device transfers the number of bytes specified in the ALLOCATION LENGTH field or the number of bytes in the header or buffer being read, whichever is less. This is not an error. The host may use MODE 03h to query the amount of data in the specified buffer prior to reading such data with MODE 02h.

Each buffer image has its own unique format, describing where certain key data may be found. Certain buffers contain embedded data in the buffer image describing the length of the total buffer image, and a CRC field that checks the total buffer image. Uploading the microcode buffer is one such example.

## 5.2.17.1 MODE[00h] - Combined header and data

In this mode, a four-byte header followed by data bytes is returned to the application client in the Data-In Buffer. The allocation length should be set to four or greater.

The four-byte READ BUFFER header (see table 74) is followed by data bytes from the buffer.

Bit **Byte** 6 5 4 7 msb 3 2 1 0 Isb Reserved 0 1 (MSB) BUFFER CAPACITY 3 (LSB) 4 Data n

Table 74 — READ BUFFER header

The following parameters apply:

# Byte Description

- 0 Reserved
- 1-3 BUFFER CAPACITY: The total number of data bytes available in the buffer.
- 4-n Data: Data from the buffer specified by the BUFFER ID field.

## 5.2.17.2 MODE[02h] - Data

In this mode, the Data-In Buffer is filled only with logical unit buffer data. The BUFFER ID field of the command CDB specifies a buffer within the logical unit from which data shall be transferred.

The BUFFER OFFSET field of the command CDB contains the byte offset within the specified buffer from which data shall be transferred. The application client should conform to the offset boundary requirements returned in the READ BUFFER descriptors (MODE[03h] — Descriptor (see 5.2.17.3 on page 114) or MODE[07h] — Descriptor with algorithmic offset boundary (see 5.2.17.4 on page 115)). If the device server is unable to accept the specified buffer offset, the command shall be terminated with CHECK CONDITION status, with the sense key set to ILLEGAL REQUEST, and the additional sense code set to INVALID FIELD IN CDB.

# 5.2.17.3 MODE[03h] - Descriptor

In this mode, a maximum of four bytes of READ BUFFER descriptor information is returned. The BUFFER OFFSET field is reserved in this mode. The allocation length should be set to four or greater. The READ BUFFER descriptor is defined as shown in table 75.

 Bit

 7 msb
 6
 5
 4
 3
 2
 1
 0 lsb

 0
 OFFSET BOUNDARY

 1
 (MSB)
 BUFFER CAPACITY
 (LSB)

Table 75 — READ BUFFER descriptor

The following parameters apply:

## Byte Description

0 OFFSET BOUNDARY:

For READ BUFFER commands, the OFFSET BOUNDARY field MODE[03h] – Descriptor (see 5.2.17.3 on page 114) applies to the following modes:

- a) data (i.e., 02h) (see 5.2.17.2); and
- b) error history (i.e., 1Ch).

For WRITE BUFFER commands, the OFFSET BOUNDARY field MODE[03h] — Descriptor (see 5.2.17.3 on page 114) applies to the following modes:

- a) MODE[02h] Data (see 5.2.41.2 on page 186);
- b) MODE[06h] Download microcode with offsets and activate (see 5.2.41.5 on page 187); and
- c) MODE[07h] Download microcode with offsets, save, and activate (see 5.2.41.6 on page 187).

For data mode (i.e., 02h), the boundary alignment indicated by the OFFSET BOUNDARY field applies only to the buffer specified by the BUFFER ID field.

## Value Description

others Multiples of 2<sup>code</sup> (e.g., 00h means multiples of 1 byte or no offset restrictions, 01h means multiples of 2 bytes or even offsets, 02h means multiples of 4 bytes)

FFh 000000h is the only supported buffer offset

- 1-3 BUFFER CAPACITY: The size in bytes of the data available in the buffer specified by the BUFFER ID field for the:
  - a) READ BUFFER command with data mode (i.e., 02h); and
  - b) WRITE BUFFER command with data mode (i.e., 02h).

### 5.2.17.4 MODE[07h] - Descriptor with algorithmic offset boundary

For buffers where the size does not fit into the BUFFER OFFSET field and the BUFFER CAPACITY fields (see table 75) the BUFFER OFFSET field and the BUFFER CAPACITY fields are interpreted for buffer modes 00h, 01h, 02h, 03h, and 07h as follows:

Value	Description
00h to 7Fh	Multiples of 64 bytes (i.e., the value is left shifted by 6 bits)
80h to FEh	Left shifted by n where n is the value returned in the Offset Boundary field using the
	equation 80h   n (e.g., 86h indicates shift value left by 6 bits)
FFh	000000h is the only supported buffer offset

# 5.2.17.5 MODE[0Ah] - Read data from echo buffer

In this mode the device server transfers data to the application client from the echo buffer that was written by the most recent WRITE BUFFER command with the MODE field set to write data to echo buffer (see 5.2.41.7) received on the same I\_T\_L nexus.

The BUFFER ID and BUFFER OFFSET fields are ignored in this mode.

If no WRITE BUFFER command with the mode set to write data to echo buffer received on this I\_T\_L nexus has completed without an error, then the READ BUFFER command terminates with CHECK CONDITION status, with the sense key set to ILLEGAL REQUEST, and the additional sense code set to COMMAND SEQUENCE ERROR. If the data in the echo buffer has been overwritten by another I\_T\_L nexus, then the READ BUFFER command is terminated with CHECK CONDITION status, with the sense key set to ABORTED COMMAND, and the additional sense code set to ECHO BUFFER OVERWRITTEN.

# 5.2.17.6 MODE[0Bh] - Echo buffer descriptor

In this mode, a maximum of four bytes of READ BUFFER descriptor information is returned. The device server returns the descriptor information for the echo buffer. The BUFFER ID field and BUFFER OFFSET field are reserved in this mode. The allocation length should be set to four or greater. The READ BUFFER descriptor is defined as

shown in table 76.

Table 76 — Echo buffer descriptor

D. d.		Bit									
Byte	7 msb	6	5	4	3	2	1	0 lsb			
0		Reserved									
1				Rese	erved						
2		Reserved (MSB)									
3		BUFFER CAPACITY (LSB)									

The following parameters apply:

## Byte Description

0

## Bit Description

- 7-1 Reserved
- 0 EBOS (echo buffer overwritten supported): 1b
- 1 Reserved
- 2-3 BUFFER CAPACITY: The size of the echo buffer in bytes aligned to a four-byte boundary. The maximum echo buffer size is 4 096 bytes.

# 5.2.17.7 MODE[1Ch] - Error history

### 5.2.17.7.1 Error history overview

This mode is used to manage and retrieve error history (see 4.19).

If the device is unable to process a READ BUFFER command with the MODE field set to 1Ch, then the device terminates the READ BUFFER command with CHECK CONDITION status, with the sense key set to ILLEGAL REQUEST, and the additional sense code set to COMMAND SEQUENCE ERROR.

See <u>Supported Buffers when the mode field is 1Ch (see 6.7.2 on page 420)</u> for a description of the BUFFER ID and the actions the device performs, and parameter data, if any, that the device returns.

### 5.2.18 READ DYNAMIC RUNTIME ATTRIBUTE - D1h

The READ DYNAMIC RUNTIME ATTRIBUTE command has the format in table 77.

Table 77 — READ DYNAMIC RUNTIME ATTRIBUTE CDB

Bit Byte	7	6	5	4	3	2	1	0				
0		OPERATION CODE (D1h)										
1		Reserved SERVICE ACTION										
2		FIRST DYNAMIC RUNTIME ATTRIBUTE IDENTIFIER										
3			TIKST DIT	VAIVIIC RONTIIVI	LATINIBUTE II	JENTII IEK						
4		_	LAST DV	NAMIC RUNTIM	= ATTDIDLITE II	DENITICIED						
5			LAST DIT	NAMIC RUNTIM	E ATTRIBUTE II	DENTIFIER						
6	(MSB)	_										
				ALLOCATIO	N LENGTH							
9		(LSB)										
10		Reserved										
11				Cor	ntrol							

The format of parameter data returned by the READ DYNAMIC RUNTIME ATTRIBUTE command depends on the service action specified (see 5.2.18.1).

The FIRST DYNAMIC RUNTIME ATTRIBUTE IDENTIFIER field specifies the dynamic runtime attribute identifier of the first attribute to be returned. Only attributes with a dynamic runtime attribute identifier greater than or equal to the value specified in the FIRST DYNAMIC RUNTIME ATTRIBUTE IDENTIFIER field and that are not in the nonexistent or unsupported state shall be reported. It shall not be considered an error if the specified dynamic runtime attribute is in the unsupported or nonexistent state.

The LAST DYNAMIC RUNTIME ATTRIBUTE IDENTIFIER field specifies the dynamic runtime attribute identifier of the last attribute to be returned. Only attributes with a dynamic runtime attribute identifier less than or equal to the value specified in the LAST DYNAMIC RUNTIME ATTRIBUTE IDENTIFIER field and that are not in the nonexistent or unsupported state shall be reported. It shall not be considered an error if the specified dynamic runtime attribute is in the unsupported or nonexistent state. If the attribute identifier specified in the LAST DYNAMIC RUNTIME ATTRIBUTE IDENTIFIER field is less than the attribute identifier specified in the FIRST DYNAMIC RUNTIME ATTRIBUTE IDENTIFIER field, then the command shall be terminated with CHECK CONDITION status, with the sense key set to ILLEGAL REQUEST, and the additional sense code set to INVALID FIELD IN CDB.

If the ALLOCATION LENGTH specified causes an attribute to be truncated this shall not be considered an error. All data up to the allocation length shall be returned.

## 5.2.18.1 READ DYNAMIC RUNTIME ATTRIBUTE Service Action

The service actions defined for the READ DYNAMIC RUNTIME ATTRIBUTE command are shown in Table 78.

Table 78 — READ DYNAMIC RUNTIME ATTRIBUTE Service Action codes

Code	Name	Description	Reference
00h	SUPPORTED ATTRIBUTES	Return a list of dynamic runtime attribute identifiers that the device server supports. No indication of attribute state is implied.	5.2.18.2
01h-0Fh	Reserved		
10h	ATTRIBUTE VALUES FOR THIS I_T NEXUS	Return values for:  a) all logical unit type attributes; b) all target type attributes associated with the I_T nexus through which the command was received; and c) all initiator type attributes associated with the I_T nexus through which the command was recevied.	<u>5.2.18.3</u>
11h	ATTRIBUTE VALUES FOR ALL I_T NEXUSES	Return values for:  a) all logical unit type attributes; b) all target type attributes associated with all I_T nexuses; and c) all initiator type attributes associated with all I_T nexuses.	<u>5.2.18.4</u>
12h-1Fh	Reserved		

## 5.2.18.2 SUPPORTED ATTRIBUTES service action

The READ DYNAMIC RUNTIME ATTRIBUTE command with SUPPORTED ATTRIBUTES service action (SERVICE ACTION field set to 00h) returns parameter data containing the attribute identifiers that the device server supports. The returned parameter data shall contain the requested attribute identifiers in ascending numerical

118 IBM LTO SCSI Reference

order by attribute identifier and in the format shown in Table 79.

Table 79 — READ DYNAMIC RUNTIME ATTRIBUTE with SUPPORTED ATTRIBUTES service action parameter list format

Bit Byte	7	6	5	4	3	2	1	0			
0		Reserved			8	SERVICE ACTIO	N				
1		_									
		-	Reserved								
3											
4											
		-		AVAILABLE	DATA (n-7)						
7											
				Attribute	Identifiers						
8				۸ <u>۸ ۲۲ سا</u> نه ۱	d = = 4:6: = = 0			_			
9		-		Attribute	dentifier 0						
n-1		-		Attribute	dentifier x						
n											

The SERVICE ACTION field shall contain the service action specified in the READ DYNAMIC RUNTIME ATTRIBUTE CDB.

The AVAILABLE DATA field shall contain the number of bytes of attribute identifiers in the parameter list. The AVAILABLE DATA field shall not be adjusted by the CDB ALLOCATION LENGTH field.

An attribute identifier is returned for each attribute that the device server supports. No indication of the current state of the reported attributes is made. See <u>6.1.2</u> for a description of the attribute identifier.

## 5.2.18.3 ATTRIBUTE VALUES FOR THIS I\_T NEXUS service action

The READ DYNAMIC RUNTIME ATTRIBUTE command with ATTRIBUTE VALUES FOR THIS I\_T NEXUS service action (i.e., the SERVICE ACTION field is set to 10h) returns parameter data containing the attributes for the I\_T\_L Nexus through which this command is received starting with the FIRST ATTRIBUTE IDENTIFIER field in the CDB and ending with the LAST ATTRIBUTE IDENTIFIER field in the CDB.

The returned parameter data shall contain the requested attributes in in the format shown in <u>table 80</u> and in ascending numerical order by I\_T nexus index then attribute identifier

Table 80 — READ DYNAMIC RUNTIME ATTRIBUTE with ATTRIBUTE VALUES FOR THIS I\_T NEXUS service action parameter list format

Bit Byte	7	6	5	4	3	2	1	0			
0		Reserved			5	SERVICE ACTIO	N				
1		_									
				Rese	erved						
3											
4		_									
				AVAILABLE	DATA (n-7)						
7											
				Attrib	ute(s)						
8		-									
				Attribute 0	(see 6.1.1)						
		=									
			Attribute x (see 6.1.1)								
n											

The SERVICE ACTION field shall contain the service action specified in the READ DYNAMIC RUNTIME ATTRIBUTE CDB.

The AVAILABLE DATA field shall contain the number of bytes of attribute information in the parameter list. The value in the AVAILABLE DATA field shall not be adjusted by the CDB ALLOCATION LENGTH field.

The format of the attributes is described in 6.1.1.

# 5.2.18.4 ATTRIBUTE VALUES FOR ALL I\_T NEXUSES service action

The READ DYNAMIC RUNTIME ATTRIBUTE command with ATTRIBUTE VALUES FOR ALL I\_T NEXUSES service action (i.e., the SERVICE ACTION field set to 11h) returns parameter data containing the attributes for all known I\_T nexuses and starting with the FIRST ATTRIBUTE IDENTIFIER field in the CDB and ending with the LAST ATTRIBUTE IDENTIFIER field in the CDB.

The returned parameter data shall contain the requested attribute values for all I\_T nexus in ascending numerical order by I\_T nexus index then attribute identifier and in the format shown in table 81.

Table 81 — READ DYNAMIC RUNTIME ATTRIBUTE with ATTRIBUTE VALUES FOR ALL I\_T NEXUSES service action parameter list format

Bit Byte	7	6	5	4	3	2	1	0
0		Reserved			S	ERVICE ACTIO	N	
1		_						
				Rese	erved			
3								
4		=						
		AVAILABLE DATA (n-7)						
7								
				Attrib	ute(s)			
8		-						
	Attribute 0 (see 6.1.1)							
		-						
				Attribute x	(see 6.1.1)			
n								

The SERVICE ACTION field shall contain the service action specified in the READ DYNAMIC RUNTIME ATTRIBUTE CDB.

The AVAILABLE DATA field shall contain the number of bytes to follow. The value in the AVAILABLE DATA field shall not be adjusted by the CDB ALLOCATION LENGTH field.

The format of the attributes is described in 6.1.1.

## 5.2.19 READ END OF WRAP POSITION - A3h[1Fh][45h]

The READ END OF WRAP POSITION command reports the logical position(s) at the end of wrap(s).

Table 82 — READ END OF WRAP POSTITION CDB

Byt				В	it			
е	7 msb	6	5	4	3	2	1	0 lsb
0	OPERATION CODE (A3h)							
1	Reserved SERVICE ACTION (1Fh)							
2	SERVICE ACTION QUALIFIER (45h)							
3	Reserved RA WA					WNV		
4	Reserved							
5				WRAP N	IUMBER			
6	(MSB)							
9		ALLOCATION LENGTH (LSB)					(LSB)	
10	Reserved							
11	Control Byte (see 5.1.2.3)							

The following parameters apply:

RA (Report All):

Value	Descpription
0b	Requests the parameter data be returned using the REOWP short form parameter data
	(see 5.2.19.1). The parameter data is populated per the settings of the WNV bit and the WRAP NUMBER field.
1b	Requests the parameter data be returned using the REOWP long form parameter data (see
	5.2.19.2). The logical position at the end of each wrap containing user data is reported. If
	the WNV bit is set to one, then the command is terminated with CHECK CONDITION status
	with the sense key set to ILLEGAL REQUEST and the additional sense code set to
	INVALID FIELD IN CDB.

• WNV (Wrap Number Valid): Specifies if the request is for the first wrap or is for a non-zero wrap number.

Value	Descpription
0b	Requests the logical position at the end of the first wrap on the tape for the current partition
	be reported. If the WRAP NUMBER field is not set to 00h, then the command shall be
	terminated with CHECK CONDITION status with the sense key set to ILLEGAL REQUEST
	and the additional sense code set to INVALID FIELD IN CDB.
1b	Requests the logical position at the end of the wrap specified in the WRAP NUMBER field be
	reported.

WRAP NUMBER: The wrap for which the end of wrap position is requested. If the WNV bit is set to one and
the WRAP NUMBER field is set to 00h or the WRAP NUMBER field is set to a wrap that does not contain user
data, then the command is terminated with CHECK CONDITION status with the sense key set to ILLEGAL
REQUEST and the additional sense code set to INVALID FIELD IN CDB.

### 5.2.19.1 REOWP Short form parameter data

The REOWP short form parameter data format is shown in table 83.

Table 83 — REOWP short form parameter data format

Durte		Bit							
Byte	7 msb	6	5 4 3 2 1 0						
0	(MSB)		RESPONSE DATA LENGTH (0008h) (LSB)						
1									
2			Reserved						
3									
4	(MSB)								
9				LOGICAL OBJE	CI IDENTIFIER	<u> </u>		(LSB)	

#### Byte Description

- 0-1 RESPONSE DATA LENGTH: The number of bytes to follow.
- 2-3 Reserved
- 4-9 LOGICAL OBJECT IDENTIFIER: The logical object identifier of the object at the end of the wrap requested by the WNV bit and the WRAP NUMBER field.

### 5.2.19.2 REOWP Long form parameter data

The REOWP long form parameter data format is shown in table 84.

Table 84 — REOWP long form parameter data format

Desta		Bit									
Byte	7 msb	6	5	4	3	2	1	0 lsb			
0	(MSB)										
1			RESPONSE DATA LENGTH (n-1) (LSB)					(LSB)			
2			Decembed								
3		Reserved									
	Wrap descriptor list										
4			Wrap descriptor [first]								
15				wrap uesc	inptor [iiist]						
n-11				Wran doc	rintor [lact]						
n			Wrap descriptor [last]								

## Byte Description

- 0-1 RESPONSE DATA LENGTH: The number of bytes to follow.
- 2-3 Reserved
- 4-n Wrap descriptor list: A list of Wrap descriptors for each wrap on the active partition that contains user data. The Wrap descriptor is defined in Wrap descriptor (see 5.2.19.2.1 on page 124).

## 5.2.19.2.1 Wrap descriptor

A wrap descriptor describes the logical location at the end of a wrap. The wrap descriptor format is shown in table 85.

Table 85 — REOWP Wrap descriptor format

Duta			Bit							
Byte	7 msb	6	5 4 3 2 1 0 ls				0 Isb			
0	(MSB)		WDAD AH IMPED							
1		1	WRAP NUMBER (LSB)							
2	(MSB)		DISTITION							
3		•	PARTITION (LSB)					(LSB)		
4										
5			Reserved							
6	(MSB)									
11				LOGICAL OBJECT IDENTIFIER (LSI						

## Byte Description

- 0-1 WRAP NUMBER: The wrap number associated with this information.
- 2-3 PARTITION: The partition number of the wrap specified in the WRAP NUMBER field.
- 4-5 Reserved
- 6-11 LOGICAL OBJECT IDENTIFIER: The logical object identifier of the logical object at the end of the wrap specified in the WRAP NUMBER field.

## 5.2.20 READ LOGGED-IN HOST TABLE - A3h[1Fh][01h]

The READ LOGGED-IN HOST TABLE command (see table 86) requests information about hosts that are logged-in to the tape drive's primary interfaces.

Table 86 — READ LOGGED-IN HOST TABLE CDB

Byte	Bit									
Буш	7	6	5 4 3 2				1	0		
0		OPERATION CODE (A3h)								
1		Reserved SERVICE ACTION (1Fh)								
2		SERVICE ACTION QUALIFIER (01h)								
3	Reserved REPORT TYPE									
4		- Reserved -								
5				11030	iveu					
6	(MSB)			ALLOCATIO	IN I ENOTH					
9		ALLOCATION LENGTH (LSB)					(LSB)			
10		Reserved								
11		CONTROL								

The following parameters apply:

• REPORT TYPE: Indicates which type of report is requested

Code	Description
000b	Return all entries
001b	Return only those entries that have changed since last retrieval of the Logged-In Host Table by this I T nexus.
010b	Return descriptor only for Active Host. The Active Host is defined as the host which most recently performed a medium access command. No Logged-In Host Descriptor is returned if there is not an Active Host.
others	Reserved

• ALLOCATION LENGTH: The maxinum number of bytes to be returned.

#### 5.2.20.1 READ LOGGED-IN HOST TABLE parameter data

The parameter data returned to a READ LOGGED-IN HOST command has the format shown in table 87.

Table 87 — READ LOGGED-IN HOST TABLE parameter data format

Duta			Bit						
Byte	7	6	5 4 3 2 1 0						
0	(MSB)		DATA LENGTH (n-3) (LSB)						
3									
4			Loggod In Heat Deparinter (first)						
31			Logged-In Host Descriptor [first]						
			Logged-In Host Descriptor [last]						
	_								
n	•		L(	oggea-in Host	Descriptor [la	เรเ			

### Byte Description

- 0-3 DATA LENGTH: The number of bytes to follow
- 4-n Logged-In Host Descriptors: Zero to n Logged-In Host Descriptors.

## 5.2.20.1.1 Logged-In Host Descriptor

A logged-in host descriptor describes information about an I\_T nexus through which a host is logged in. The format of a logged-in host descriptor is shown in <u>table 88</u>.

Table 88 — Logged-In Host Descriptor format

Durto				E	it				
Byte	7	6	5	5 4 3 2 1					
0									
7				VVV	VNN				
8		_	WWPN						
15									
16									
19			SOURCE ID						
20		_							
25				LOGIF	N TIME				
27		_		1100	) T. I.D.				
28		HOST ID -							
29				PRIMARY F	ORT INDEX		·		
30		_		Door	- mucd				
31				Kese	erved				

## Byte Description

- 0-7 WWNN (World Wide Node Name): The WWNN of the initiator port associated with the logged-in I\_T nexus.
- 8-15 wwpn (World Wide Port Name): The WWPN of the initiator port associated with the logged-in I\_T nexus.

16-19 SOURCE ID:

For Fibre Channel connected devices, the source identifier of the logged-in I\_T nexus.

For SAS connected devices, the hashed SAS address of the initiator.

20-25 LOGIN TIME: Timestamp in milliseconds as initialized by the SET TIMESTAMP command most recently received before this command.

For Fibre Channel connected devices, the timestamp when this I\_T nexus completed its PLOGI process. For SAS connected devices, the timestamp when the first command was received through this I\_T nexus.

26

Bit	Description
<b>-</b> ^	

7-6 Reserved

1-0 PHY PORT: Physical target port associated with this I\_T nexus

Code	Description
00b	Port A (port 0)
01b	Port B (port 1)
others	Reserved

27-28 HOST ID: Logged-in host's index in the Logged-In Host Table.

29 PRIMARY PORT INDEX: The relative target port value of the target port associated with the I\_T nexus.

# Code Description Oh Reserved 1h Relative Tgt Port 1 (Port 0) 2h Relative Tgt Port 2 (Port 1) others Reserved

30-31 Reserved

#### 5.2.21 READ POSITION - 34h

### 5.2.21.1 READ POSITION command description

The Read Position command is defined in SSC (see the latest version at <a href="http://www.t10.org/drafts.htm#SCSI3">http://www.t10.org/drafts.htm#SCSI3</a> CMNDSETS). This clause decribes the specific implementation.

The READ POSITION command (see <u>table 89</u>) reports the current position and provides information about logical objects contained in the object buffer. No medium movement shall occur as a result of responding to the command.

Bit **Byte** 7 msb 6 5 4 3 2 1 0 Isb OPERATION CODE (34h) 0 1 Reserved SERVICE ACTION 2 Reserved 6 7 (MSB) ALLOCATION LENGTH 8 (LSB) 9 Control Byte (see 5.1.2.3)

Table 89 — READ POSITION CDB

The following parameters apply:

• SERVICE ACTION:

Value	Description
00h	SHORT FORM BLOCK ID: Device server shall return 20 bytes of data with the FIRST
	LOGICAL OBJECT LOCATION and LAST LOGICAL OBJECT LOCATION fields as logical object
	identifier values, relative to a partition (see 5.2.21.2). The ALLOCATION LENGTH field shall be
	zero.
06h	LONG FORM: Device server shall return 32 bytes of data (see 5.2.21.3). The ALLOCATION
	LENGTH field shall be zero.
08h	EXTENDED FORM: Device server shall return 32 bytes of data up to the maximum length
	specified by the ALLOCATION LENGTH field (see 5.2.21.4).
others	The command is terminated with CHECK CONDITION status with the sense key set to
	ILLEGAL REQUEST, and the additional sense code set to INVALID FIELD IN CDB.

• ALLOCATION LENGTH: Length of the data to return. Shall be set to 0000h if the SERVICE ACTION field is set to 00h or 06h.

#### 5.2.21.2 READ POSITION data format, short form

Table 90 specifies the READ POSITION data that shall be returned if the SERVICE ACTION field is 00h.

The short form is included for legacy applications. It is highly recommended that the LONG FORM (06h) (see 5.2.21.3) or the EXTENDED FORM (08h) (see 5.2.21.4) be used instead.

= Warning — Warning — Warning — Warning —

The short form breaks when there are greater than  $2^{32}$  logical objects on medium and may become obsolete in the future.

— WARNING =

VARNING =

## Table 90 — READ POSITION data format, short form

D. d.				В	it						
Byte	7 msb	6	6 5 4 3 2 1								
0	Position information/validity										
0	ВОР	EOP	LOCU	BYCU (1)	Rsvd	LOLU (0)	PERR	BPEW			
1				PARTITION	NUMBER						
2				Rese	erved						
3				Rese	erved						
4	(MSB)										
7			F	IRST LOGICAL C	BJECT LOCATIO	N		(LSB)			
8	(MSB)										
11			L	AST LOGICAL O	BJECT LOCATION	N		(LSB)			
12				Rese	erved						
13	(MSB)										
15		-	NUMBER OF LOGICAL OBJECTS IN OBJECT BUFFER (LSB)								
16	(MSB)		NII II	ADED OF DVTEO	IN OR IFOT BUE						
19			NUI	MBER OF BYTES	IN OBJECT BUF	FEK		(LSB)			

#### Byte Description

0 Position Information/Validity:

<b>-</b> :-	_	
Bit	11000	cription
וטונ	DESI	-

7 BOP (beginning of partition):

Value Description

0b the current logical position is not at the beginning of partition.

1b the device is at the beginning of the current partition.

6 EOP (end of partition)

Value Description

0b the device is not between early warning and end of partition.

1b the device is positioned between early warning and end of the current partition.

5 LOCU (logical object count unknown)

Value Description
0b block count i

0b block count is exact
1b block count is an estimate

4 BYCU (byte count unknown)

Value Description
0b byte count is exact
1b byte count is an estimate

3 Reserved

2 LOLU (logical object location unknown)

Value Description

0b block position is exact1b block position is an estimate

1 PERR (position error):

Value Description

Ob An overflow has not occurred in any of the returned position data fields.

An overflow has occurred in at least one of the returned position data fields. The application should use the LONG FORM (06h) (see 5.2.21.3) to obtain the current position or the application should use the EXTENDED FORM (08h) (see 5.2.21.4)

to obtain the current position and number of bytes in the object buffer.

0 BPEW (beyond programmable early warning)

Value Description

Ob The LOLU bit is set to one, the PEWS field of the MP 10h[01h]: Device Configura-

tion Extension (see 6.6.12 on page 374) is set to zero, or the logical object loca-

tion is not in a PEWZ or on the EOP side of EW.

1b The logical object location is in a PEWZ or on the EOP side of EW.

#### 1 PARTITION NUMBER:

Reports the partition number for the current logical position. When the volume has only one partition, this field is set to 00h.

#### 2-3 Reserved

#### 4-7 FIRST LOGICAL OBJECT LOCATION:

Specifies the logical object address associated with the current logical position, in the range 0000 0000h to FFFF FFFFh. The value indicates the logical object address of the next data block or filemark to be transferred between the initiator and the target if a READ or WRITE command is issued.

#### 8-11 LAST LOGICAL OBJECT LOCATION:

After a write command, this field specifies the logical object address associated with the next logical object to be transferred from the buffer to the medium, in the range 0000 0000h to FFFF FFFFh. After a read command, this field specifies the logical object address associated with the last (most recent) data block or filemark to be transferred from the medium to the buffer. For any case where the buffer no longer contains a whole block of data or is empty, the value reported for the LAST LOGICAL OBJECT LOCATION is equal to the value reported for the FIRST LOGICAL OBJECT LOCATION.

#### 12 Reserved

#### 13-15 NUMBER OF LOGICAL OBJECTS IN THE OBJECT BUFFER:

The number of data blocks and filemarks in the buffer that have not been written to the medium. (This value is zero if the device is reading rather than writing.)

16-19 NUMBER OF BYTES IN THE OBJECT BUFFER: The total number of write data bytes (before compaction) in the buffer that have not been written to the medium.

## 5.2.21.3 READ POSITION data format, long form

Table 91 specifies the format of the READ POSITION data that shall be returned if the SERVICE ACTION field is 06h.

Table 91 — READ POSITION data format, long form

				E	Bit						
Byte	7 msb	6	5	4	3	2	1	0 Isb			
0			Position information/validity								
0	ВОР	EOP	Res	erved	MPU	LONU	Rsvd	BPEW			
1				D	- m . a al						
3		•		Res	erved						
4	(MSB)										
7		•		PARTITIO	N NUMBER			(LSB)			
8	(MSB)										
15				LOGICAL OB	JECT NUMBER			(LSB)			
16	(MSB)			1001041	E IDENTIFIES						
23		•	LOGICAL FILE IDENTIFIER (LSB)								
24	(MSB)			Ol	-1-4-						
31		•		Obs	olete			(LSB)			

#### **Description** Byte

0

Positio	on Information	/Validity:
Bit	Description	•
7	•	ing of partition):
•	Value	Description
	0b	the current logical position is not at the beginning of partition.
	1b	the device is at the beginning of the current partition.
6	EOP (end of	
	Value	Description
	0b	the device is not between early warning and end of partition.
	1b	the device is positioned between early warning and end of the current partition.
5-4	Reserved	
3	мри (mark p	position unknown)
	Value	Description
	0b	the LOGICAL FILE IDENTIFIER field contains valid position information.
	1b	the logical file identifier is not known or accurate reporting is not currently avail-
		able.
2	, -	al object number unknown)
	Value	Description
	0b	the logical object number and partition number fields contain exact informa-
		tion.
	1b	The logical object number is an estimate.
1	Rsvd (Rese	,
0	, ,	nd programmable early warning)
	Value	Description
	0b	The LOLU bit is set to one, the PEWS field in the MP 10h[01h]: Device Configura-
		tion Extension (see 6.6.12 on page 374) is set to zero, or the logical object loca-
		tion is not in a PEWZ or on the EOP side of EW.

The logical object location is in a PEWZ or on the EOP side of EW.

1b

- 1-3 Reserved
- 4-7 PARTITION NUMBER: The partition number for the current logical position.
- 8-15 LOGICAL OBJECT NUMBER: The number of logical objects between beginning-of-partition and the current logical position. A filemark counts as one logical object.
- 16-23 LOGICAL FILE NUMBER: The number of filemarks between beginning-of-partition and the current logical position. This value is the current logical file identifier.
- 24-31 Obsolete.

## 5.2.21.4 READ POSITION data format, extended form

<u>Table 92</u> specifies the format of the READ POSITION data that shall be returned if the SERVICE ACTION field is 08h.

Table 92 — READ POSITION data format, extended form

D. d.				В	it							
Byte	7 msb	6	6 5 4 3 2 1									
0		Position information/validity										
U	ВОР	EOP	LOCU	BYCU (1)	Rsvd	LOLU (0)	PERR	BPEW				
1				PARTITION	N NUMBER							
2	(MSB)			ADDITIONAL	ENOTE (4Ch)							
3				ADDITIONAL L	ENGTH (1Ch)			(LSB)				
4			Reserved									
5	(MSB)		\!! !! 4DED	051001041.05	15070 IN 00 150	T DUESED						
7			NUMBER	OF LOGICAL OB	JECTS IN OBJEC	I BUFFER		(LSB)				
8	(MSB)		_		D 1507 1 00 1710							
15			F	IRST LOGICAL C	BJECT LOCATIO	N		(LSB)				
16	(MSB)											
23		-	LAST LOGICAL OBJECT LOCATION (LSB)									
24	(MSB)				IN 00 1507 DUE							
31		· 	NUI	MBER OF BYTES	IN OBJECT BUF	FEK		(LSB)				

The fields are defined the same as for the corresponding fields in the READ POSITION data format, short form (see <u>table 90</u>).

The ADDITIONAL LENGTH field shall contain 1Ch. If the information transferred to the Data-In Buffer is truncated because of an insufficient ALLOCATION LENGTH value, the ADDITIONAL LENGTH field shall not be altered to reflect the truncation.

#### Byte Description

0 Position Information/Validity:

#### Bit Description

7 BOP (beginning of partition):

Value Description

0b the current logical position is not at the beginning of partition.

1b the device is at the beginning of the current partition.

6 EOP (end of partition)

Value Description

0b the device is not between early warning and end of partition.

1b the device is positioned between early warning and end of the current partition.

5 LOCU (logical object count unknown)

Value Description
0b block count is exact
1b block count is an estimate

4 BYCU (byte count unknown)

ValueDescription0bbyte count is exact1bbyte count is an estimate

3 Reserved

2 LOLU (logical object location unknown)

Value Description

0b block position is exact1b block position is an estimate

1 PERR (position error):

Value Description

Ob An overflow has not occurred in any of the returned position data fields.

An overflow has occurred in at least one of the returned position data fields.

0 BPEW (beyond programmable early warning)

Value Description

0b The LOLU bit is set to one, the PEWS field in MP 10h[01h]: Device Configuration

Extension (see 6.6.12 on page 374) is set to zero, or the logical object location is

not in a PEWZ or on the EOP side of EW.

The logical object location is in a PEWZ or on the EOP side of EW.

#### 1 PARTITION NUMBER:

Reports the partition number for the current logical position. When the volume has only one partition, this field is set to 00h.

- 2-3 ADDITIONAL LENGTH: 1Ch
- 4 Reserved
- 5-7 NUMBER OF LOGICAL OBJECTS IN THE OBJECT BUFFER:

The number of data blocks and filemarks in the buffer that have not been written to the medium. (This value is zero if the device is reading rather than writing.)

8-15 FIRST LOGICAL OBJECT LOCATION:

Specifies the logical object address associated with the current logical position, in the range 0000 0000h to FFFF FFFFh. The value indicates the logical object address of the next data block or filemark to be transferred between the initiator and the target if a READ or WRITE command is issued.

16-23 LAST LOGICAL OBJECT LOCATION:

After a write command, this field specifies the logical object address associated with the next logical object to be transferred from the buffer to the medium, in the range 0000 0000h to FFFF FFFFh. After a read command, this field specifies the logical object address associated with the last (most recent) data

block or filemark to be transferred from the medium to the buffer. For any case where the buffer no longer contains a whole block of data or is empty, the value reported for the LAST LOGICAL OBJECT LOCATION is equal to the value reported for the FIRST LOGICAL OBJECT LOCATION.

24-31 NUMBER OF BYTES IN THE OBJECT BUFFER: The total number of write data bytes (before compaction) in the buffer that have not been written to the medium.

#### 5.2.22 RECEIVE DIAGNOSTIC RESULTS - 1Ch

The Receive Diagnostic Results command is defined in SPC (see the latest version at <a href="http://www.t10.org/drafts.htm#SCSI3">http://www.t10.org/drafts.htm#SCSI3</a> CMNDSETS). This clause decribes the specific implementation.

After a Send Diagnostic command completes, use the Receive Diagnostic Results command to receive the results.

As allowed by the SCSI standards, devices may implement Send Diagnostic and handle status and return information for diagnostics in somewhat different manners. To work correctly with all common variations, the following sequence should be used by the host.

The SEND DIAGNOSTIC command is issued. If a CHECK CONDITION status occurs, and a non-deferred permanent error results, then the test failed (or was not started if sense key=ILLEGAL REQUEST). If GOOD status is returned, then a RECEIVE DIAGNOSTICS RESULTS command should be issued, and:

- a) the "blocked" and "error" bit should be checked (byte 8, bits 2 and 0 respectively), and if either is set, the diagnostic was either not run or failed; and
- d) if byte 8 bit 1 is set, the SIM/MIM data in the results is valid and contains additional information relating to the failure

NOTE 18 - This process is required by this device to determine diagnostics results for those diagnostics which indicate diagnostics results data is returned. GOOD status returned from the Send Diagnostic only indicates that the diagnostic was accepted but does not indicate the ultimate result of its execution.

NOTE 19 - For diagnostics that produce diagnostic results, the device should be reserved using the Reserve or Persistent Reserve Out command to protect the results from actions of other initiators.

Table 93 shows the command format.

Bit **Byte** 2 1 7 msb 6 5 4 3 0 Isb 0 OPERATION CODE (1Ch) 1 Obsolete Reserved 2 Reserved 3 **MSB** ALLOCATION LENGTH LSB 4 5 Control Byte (see 5.1.2.3)

Table 93 — RECEIVE DIAGNOSTIC RESULTS CDB

The following parameters apply:

ALLOCATION LENGTH: The maximum number of bytes to be returned in the page of data following the command (if any).

Diagnostic Parameters (Diag) (see 6.2 on page 200) has a listing of all diagnostic parameters.

### 5.2.23 RELEASE UNIT - 17h/57h

The Release Unit command is defined in SPC-2 (see <a href="http://www.t10.org/cgi-bin/ac.pl?t=f&f=spc2r20.pdf">http://www.t10.org/cgi-bin/ac.pl?t=f&f=spc2r20.pdf</a>). This clause decribes the specific implementation.

Table 94 — RELEASE UNIT (6) CDB

Byte				В	it						
Буш	7 msb 6 5 4 3 2 1										
0				OPERATION	CODE (17h)						
1		Obsolete Obsolete (00h)									
2				Obs	olete						
3				Poor	ruod						
4		Reserved ————									
5				Control Byte	(see 5.1.2.3)						

The following parameters apply:

• Obsolete: All obsolete fields shall be set to zero.

Table 95 — RELEASE UNIT (10) CDB

Puto				В	it							
Byte	7 msb 6 5 4 3 2						1	0 lsb				
0		OPERATION CODE (57h)										
1		Reserved		3RDPTY	Rese	erved	LONGID	Obsolete				
2				Obso	olete							
3				THIRD PART	Y DEVICE ID							
4				Rese	rved							
5				Rese	rved							
6				Rese	rved							
7				PARAMETER	LICT LENGTH	•						
8		•		PARAMETER	LIST LENGTH							
9			Contro	ol Byte (see 5	.1.2.3)							

The following parameters apply:

• Obsolete: All obsolete fields shall be set to zero.

LONGID: 0b3RDPTY: 0b

THIRD PARTY DEVICE ID: 00h

• PARAMETER LIST LENGTH: 0000h

#### 5.2.24 REPORT DENSITY SUPPORT - 44h

The Report Density Support command is defined in SSC (see the latest version at <a href="http://www.t10.org/drafts.htm#SCSI3">http://www.t10.org/drafts.htm#SCSI3</a> CMNDSETS). This clause decribes the specific implementation.

Table 96 — REPORT DENSITY SUPPORT CDB

Byte		Bit											
Буш	7 msb	6	5	4	3	2	1	0 lsb					
0		OPERATION CODE (44h)											
1				Reserved				MEDIA					
2				Rese	nuod								
6		•		Kese	rveu								
7	MSB			ALLOCATIO	NUENCTU								
8		•	ALLOCATION LENGTH LSB										
9				Control Byte	(see 5.1.2.3)								

The following parameters apply:

MEDIA:

Value	Description
0b	report all supported densities for all supported medium types
1b	report all supported densities for the current medium in the drive. If the device is not ready,
	the drive will return 2/0400h (NOT READY, NOT READY CAUSE NOT REPORTABLE).

• ALLOCATION LENGTH: The maximum number of bytes to be transferred.

### 5.2.24.1 Report Density Support data format

#### 5.2.24.1.1 Density descriptor overview

Density descriptors contain information that may be returned by the drive. While the information is reported in a manner useful to applications, SSC specifies fields that have been found to not be useful by applications in selecting which density to use. Instead applications have been found to ignore the BITS PER MM field and the TRACKS field. This device does not change the values returned in these fields by the format type — media type combinations and instead returns the largest value for the set of supported format type media type combinations. The CAPACITY field is used by applications and does report values based on the format type — media type combinations. The DENSITY CODE fields, the ASSIGNING ORGANIZATION field, the DENSITY NAME field, and the DESCRIPTION field are constant per density and are correctly reported.

This device may return different combinations of the descriptors in the REPORT DENSITY SUPPORT data depending on drive generation, medium loaded, setting of the MEDIA bit, and settings of various mode parameters related to densities.

The Report Density Support data format is shown in table 97.

Table 97 — REPORT DENSITY SUPPORT data format

D. d.				E	Bit							
Byte	7 6 5 4 3 2 1											
0	(MSB)	(MSB)  AVAILABLE DENSITY SUPPORT LENGTH										
1			AVAI	LABLE DENSIT	Y SUPPORT LE	NGTH		(LSB)				
2		Reserved										
3		Reserved										
			Densi	ty support da	ta block desc	riptors						
4			Donoity	aupport data	block descrip	tor [firet]						
			Density	Support data	block descrip	itoi [iiiSt]						
				:								
		_	Density	support data	block descrip	otor [last]						
n												

The Density support data block descriptor format is shown in table 98.

Table 98 — Density support data block descriptor format

				В	it					
Byte	7	6	5	4	3	2	1	0		
0		PRIMARY DENSITY CODE								
1				SECONDARY D	ENSITY CODE					
2	WRTOK	DUP	DUP DEFLT Reserved							
3	(MSB)									
4			DESCRIPTOR LENGTH							
5	(MSB)		BITS PER MM							
7										
8	(MSB)		MEDIA WIDTH							
9										
10	(MSB)									
11				TRA	CKS			(LSB)		
12	(MSB)			CADA	OITV					
15				CAPA	CITY			(LSB)		
16				ASSIGNING O						
23				ASSIGNING U	NGANIZA HON					
24				DENSIT	/ NIA NA E					
31				DENSIT	r NAIVIE					
32				DECOR	IDTION					
51				DESCR	IPTION					

# 5.2.24.1.2 Density information

The density information is shown in <u>table 99</u>.

Table 99 — RDEN Density information

		P	RIMARY DENSITY COD	E							
Field	44h	46h	58h	5Ah	5Ch						
PRIMARY DENSITY CODE	44h	46h	58h	5Ah	5Ch						
SECONDARY DENSITY CODE	44h	46h	58h	5Ah	5Ch						
WRTOK											
DUP	0	0 0 0 0									
DEFLT	Ob This density is not currently selected for use on a write from BOP  This density is currently selected for use on a write from BOP										
DLV	0	0	0	0	0						
DESCRIPTOR LENGTH	0000h	0000h	0000h	0000h	0000h						
BITS PER MM	9,638	12,725	15,142	15,142	19,107						
MEDIA WIDTH (tenth of mms)	127	127	127	127	127						
TRACKS	704	896	1280	2176	3584						
CAPACITY	381,469 (in 2 <sup>20</sup> bytes)	800,000 (in 10 <sup>6</sup> bytes)	1,500,000 (in 10 <sup>6</sup> bytes)	2,500,000 (in 10 <sup>6</sup> bytes)	6,000,000 (in 10 <sup>6</sup> bytes)						
ASSIGNING ORGANIZATION (ASCII)	"LTO-CVE "	"LTO-CVE "	"LTO-CVE "	"LTO-CVE "	"LTO-CVE "						
DENSITY NAME (ASCII)	"U-316 "	"U-416 "	"U-516 "	"U-616 "	"U-732 "						
DESCRIPTION (ASCII)	"Ultrium 3/16T "	"Ultrium 4/16T "	"Ultrium 5/16T "	"Ultrium 6/16T "	"Ultrium 7/32T						

### 5.2.25 REPORT LUNS - A0h

The Report LUNs command is defined in SPC (see the latest version at <a href="http://www.t10.org/drafts.htm#SCSI3">http://www.t10.org/drafts.htm#SCSI3</a> CMNDSETS). This clause decribes the specific implementation.

Table 100 — REPORT LUNS CDB

Byte	Bit										
Буге	7 msb	6	5	4	3	2	1	0 lsb			
0		OPERATION CODE (A0h)									
1		Reserved ———									
5		•	reserveu ————————————————————————————————————								
6	MSB			ALLOCATIO	NI I ENOTH						
9		•		ALLOCATIC	IN LENGTH			LSB			
10		Reserved									
11		Control Byte (see 5.1.2.3)									

The following parameters apply:

• ALLOCATION LENGTH: The maximum number of bytes to be transferred.

## 5.2.25.1 Report LUNs data format

<u>Table 101</u> shows the data that is returned:

Table 101 — RLUNS Logical Unit Numbers Data

Deste	Bit										
Byte	7	6	5	4	3	2	1	0			
0	(MSB)										
3			LUN LIST LENGTH (LSB)								
4		_	Reserved								
7											
			LUN list								
8	(MSB)	_		EIDO:	FILINI						
15				FIRS	ΓLUN			(LSB)			
				<u>:</u>							
n-7	(MSB)	_	LAST LUN								
n				LAST	LUN			(LSB)			

### Byte Description

- 0-3 LUN LIST LENGTH (n-7): This field will be set to 8 times the number of LUNs configured in the device. There will always be a LUN 0. There may be a library LUN (i.e., LUN 1) and/or there may be an ADC LUN (i.e., LUN 2).
- 4-7 Reserved
- 8-15 FIRST LUN: 0000 0000 0000 0000h (i.e., LUN 0)

### 16-23 Second LUN, if any

LUN Description

LUN 1 0001 0000 0000 0000h (returned only if LUN 1 exists)

LUN 2 0002 0000 0000 0000h (returned only if LUN 1 does not exist and the device is configured

for ADI and the ENABLE bit of LOGICAL UNIT INDEX 02h in Mode Page 0Eh subpage 03h of the

ADC LUN (i.e., LUN 2) is set to one.

### 24-31 LAST LUN, if any

LUN Description

LUN 2 0002 0000 0000 0000h (returned only if LUN 1 exists and configured for ADI and the

ENABLE bit of LOGICAL UNIT INDEX 02h in Mode Page 0Eh subpage 03h of the ADC LUN (i.e.,

LUN 2) is set to one.

NOTE 20 - If this command is received over the ADT port , then a LUN descriptor is returned with a value of 0002 0000 0000 0000h, even if the ENABLE bit of LOGICAL UNIT INDEX 02h in Mode Page 0Eh subpage 03h is set to zero.

141

### 5.2.26 REPORT SUPPORTED OPERATION CODES - A3h[0Ch]

The Report LUNs command is defined in SPC (see the latest version at <a href="http://www.t10.org/drafts.htm#SCSI3">http://www.t10.org/drafts.htm#SCSI3</a> CMNDSETS). This clause decribes the specific implementation. Ultrium 5 and later devices support the REPORT SUPPORTED OPERATION CODES command. The REPORT SUPPORTED OPERATION CODES command (see table 102) requests information on commands the addressed logical unit supports. An application client may request a list of all operation codes and service actions supported by the logical unit or the command support data for a specific command.

The REPORT SUPPORTED OPERATION CODES command is a service action of the MAINTENANCE IN command.

Byte	Bit										
Буце	7	6	5	4	3	2	1	0			
0		OPERATION CODE (A3h)									
1		Reserved	Reserved SERVICE ACTION (0Ch)								
2	RCTD		Reserved REPORTING OPTIONS								
3		REQUESTED OPERATION CODE									
4	(MSB)		REQUESTED SERVICE ACTION —								
5				KEQUESTED SI	ERVICE ACTIO	V		(LSB)			
6	(MSB)		ALLOCATION LENGTH (LSB)								
9		_									
10				Rese	erved						
11	Control Byte (see 5.1.2.3)										

Table 102 — REPORT SUPPORTED OPERATION CODES CDB

A return command timeouts descriptor (RCTD) bit set to one specifies that the command timeouts descriptor (see 5.2.26.3) shall be included in each command descriptor (see 5.2.26.1) that is returned or in the one\_command parameter data (see 5.2.26.2) that is returned. A RCTD bit set to zero specifies that the command timeouts descriptor shall not be included in any parameter data returned.

The REPORTING OPTIONS field (see table 103) specifies the information to be returned in the parameter data.

Table 103 — REPORT SUPPORTED OPERATION CODES REPORTING OPTIONS field

Code	Description	Parameter Data Reference
000b	A list of all operation codes and service actions supported by the logical unit shall be returned in the all_commands parameter data format. The REQUESTED OPERATION CODE CDB field and REQUESTED SERVICE ACTION CDB field shall be ignored.	<u>5.2.26.1</u>
001b	The command support data for the operation code specified in the REQUESTED OPERATION CODE field shall be returned in the one_command parameter data format. The REQUESTED SERVICE ACTION CDB field shall be ignored. If the REQUESTED OPERATION CODE field specifies an operation code that has service actions, then the command shall be terminated with CHECK CONDITION status, with the sense key set to ILLEGAL REQUEST, and the additional sense code set to INVALID FIELD IN CDB.	<u>5.2.26.2</u>
010b	The command support data for the operation code and service action specified in the REQUESTED OPERATION CODE CDB field and REQUESTED SERVICE ACTION CDB field shall be returned in the one_command parameter data format. If the REQUESTED OPERATION CODE CDB field specifies an operation code that does not have service actions, then the command shall be terminated with CHECK CONDITION status, with the sense key set to ILLEGAL REQUEST, and the additional sense code set to INVALID FIELD IN CDB.	5.2.26.2
011b to 111b	Reserved	

The REQUESTED OPERATION CODE field specifies the operation code of the command to be returned in the one command parameter data format (see 5.2.26.2).

The REQUESTED SERVICE ACTION field specifies the service action of the command to be returned in the one\_command parameter data format.

The ALLOCATION LENGTH field specifies the maximum number of bytes or blocks that an application client has allocated in the Data-In Buffer.

#### 5.2.26.1 All\_commands parameter data format

The REPORT SUPPORTED OPERATION CODES all\_commands parameter data format (see table 104) begins with a four-byte header that contains the length in bytes of the parameter data followed by a list of supported commands. Each command descriptor contains information about a single supported command CDB (i.e., one operation code and service action combination, or one non-service-action operation code). The list of command descriptors shall contain all commands supported by the logical unit.

Table 104 — RSOC All\_commands parameter data

6.1		·		В	it	·				
Byte	7	6	5	4	3	2	1	0		
0	(MSB)	(MSB)								
3	COMMAND DATA LENGTH (n-3)  (LSB)									
	Command descriptors									
4	Command descriptor 0 (see table 105)									
			Com	nanu uescripti	o <u>(see table</u>	<u> </u>				
	:									
	Command descriptor x (see table 105)									
n			Com	nanu uescripi	n x <u>(see lable</u>	<u> </u>				

The COMMAND DATA LENGTH field indicates the length in bytes of the command descriptor list.

Each command descriptor (see table 105) contains information about a single supported command CDB.

Table 105 — RSOC Command descriptor format

Duta				В	it					
Byte	7	6	5	4	3	2	1	0		
0		OPERATION CODE								
1	Reserved									
2	(MSB)		SERVICE ACTION							
3										
4	Reserved									
5			Rese	erved			CTDP	SERVACTV		
6	(MSB)			CDB LI	-NOTH					
7				(LSB)						
8			Command timeouts descriptor, if any (see 5.2.26.3)							
19		•	Command t	imeouts descr	ipioi, ii ariy <u>(s</u>	<u>ee 5.2.20.3)</u>				

The OPERATION CODE field contains the operation code of a command supported by the logical unit.

The SERVICE ACTION field contains a supported service action of the supported operation code indicated by the OPERATION CODE field. If the operation code indicated in the OPERATION CODE field does not have a service actions, the SERVICE ACTION field shall be set to 00h.

A command timeouts descriptor present (CTDP) bit set to one indicates that the command timeouts descriptor (see 5.2.26.3) is included in this command descriptor. A CTDP bit set to zero indicates that the command timeouts descriptor is not included in this command descriptor.

A service action valid (SERVACTV) bit set to zero indicates the operation code indicated by the OPERATION CODE field does not have service actions and the SERVICE ACTION field contents are reserved. A SERVACTV bit set to one indicates the operation code indicated by the OPERATION CODE field has service actions and the contents of the SERVICE ACTION field are valid.

The CDB LENGTH field contains the length of the command CDB in bytes for the operation code indicated in the OPERATION CODE field, and if the SERVACTV bit is set to the service action indicated by the SERVICE ACTION field.

If the RCTD bit is set to one in the REPORT SUPPORTED OPERATION CODES CDB (see 5.2.26), the command timeouts descriptor (see table 108 in 5.2.26.3) shall be included. If the RCTD bit is set to zero, the command timeouts descriptor shall not be included.

#### 5.2.26.2 One command parameter data format

The REPORT SUPPORTED OPERATION CODES one\_command parameter data format (see table 106) contains information about the CDB and a usage map for bits in the CDB for the command specified by the REPORTING OPTIONS, REQUESTED OPERATION CODE, and REQUESTED SERVICE ACTION fields in the REPORT SUPPORTED OPERATION CODES CDB.

Bit **Byte** 5 7 6 4 3 2 1 0 Reserved 0 1 CTDP Reserved SUPPORT 2 (MSB) CDB SIZE (n-3) 3 (LSB) 4 CDB USAGE DATA n n+1 Command timeouts descriptor, if any (see 5.2.26.3) n+12

Table 106 — RSOC One\_command parameter data

A command timeouts descriptor present (CTDP) bit set to one indicates that the command timeouts descriptor (see 5.2.26.3) is included in the parameter data. A CTDP bit set to zero indicates that the command timeouts descriptor is not included in the parameter data.

The SUPPORT field is defined in table 107.

Support Description Data about the requested SCSI command is not currently available. All data after byte 1 is not 000b valid. A subsequent request for command support data may be successful. 001b The device server does not support the requested command. All data after byte 1 is undefined. 010b Reserved The device server supports the requested command in conformance with a SCSI standard. The 011b parameter data format conforms to the definition in table 106. 100b Reserved The device server supports the requested command in a vendor specific manner. The 101b parameter data format conforms to the definition in table 106. 110b to 111b Reserved

Table 107 — RSOC One command SUPPORT values

The CDB SIZE field contains the size of the CDB USAGE DATA field in the parameter data, and the number of bytes in the CDB for command being queried (i.e., the command specified by the REPORTING OPTIONS, REQUESTED OPERATION CODE, and REQUESTED SERVICE ACTION fields in the REPORT SUPPORTED OPERATION CODES CDB).

The CDB USAGE DATA field contains information about the CDB for the command being queried. The first byte of the CDB USAGE DATA field shall contain the operation code for the command being queried. If the command being queried contains a service action, then that service action code shall be placed in the CDB USAGE DATA field in the same location as the SERVICE ACTION field of the command CDB. All other bytes of the CDB USAGE DATA field shall contain a usage map for bits in the CDB for the command being queried.

The bits in the usage map shall have a one-for-one correspondence to the CDB for the command being queried. If the device server evaluates a bit in the CDB for the command being queried, the usage map shall contain a one in the corresponding bit position. If any bit representing part of a field is returned as one, all bits for the field

shall be returned as one. If the device server ignores or treats as reserved a bit in the CDB for the command being queried, the usage map shall contain a zero in the corresponding bit position. The usage map bits for a given CDB field all shall have the same value.

For example, the CDB usage bit map for the REPORT SUPPORTED OPERATION CODES command is: A3h, 0Ch, 87h, FFh, FFh, FFh, FFh, FFh, FFh, FFh, O0h, 07h. This example assumes that the logical unit only supports the low-order three bits of the CDB CONTROL byte. The first byte contains the operation code, and the second byte contains three reserved bits and the service action. The remaining bytes contain the usage map.

If the RCTD bit is set to one in the REPORT SUPPORTED OPERATION CODES CDB (see 5.2.26), the command timeouts descriptor (see table 108 in 5.2.26.3) shall be included. If the RCTD bit is set to zero, the command timeouts descriptor shall not be included.

#### 5.2.26.3 Command timeouts descriptor

#### 5.2.26.3.1 Overview

The command timeouts descriptor (see table 108) returns timeout information for commands supported by the logical unit based on the time from the start of processing for the command to its reported completion.

Values returned in the command timeouts descriptor do not include times that are outside the control of the device server (e.g., prior commands with the IMMED bit set to one in the CDB, concurrent commands from the same or different I\_T nexuses, manual unloads, power-on self tests, prior aborted commands, commands that force cache synchronization, delays in the service delivery subsystem).

For commands that cause a change in power condition, values returned in the command timeouts descriptor do not include the power condition transition time (e.g., the time to thread the media).

Values returned in the command timeouts descriptor should not be used to compare products.

Desta	Bit									
Byte	7	6	6 5 4 3 2 1							
0	(MSB)	(041)								
1	DESCRIPTOR LENGTH (0Ah)  (LSB)									
2	Reserved									
3	COMMAND SPECIFIC									
4	(MSB)		NOM	NAL COMMAND F	DOOFOOINO TI	AEOUT				
7			NOMINAL COMMAND PROCESSING TIMEOUT (LSB)							
8	(MSB)									
11			RECOMMENDED COMMAND TIMEOUT (LSB)							

Table 108 — RSOC Command timeouts descriptor format

The DESCRIPTOR LENGTH field indicates the number of bytes that follow in the command timeouts descriptor.

The COMMAND SPECIFIC field contains timeout information that is specific to the commands listed in table 109.

Table 109 — RSOC Command timeouts descriptor COMMAND SPECIFIC field usage

Command	Reference			
WRITE BUFFER	<u>5.2.26.3.2</u>			

A non-zero value in the NOMINAL COMMAND PROCESSING TIMEOUT field indicates the minimum amount of time in seconds the application client should wait prior to querying for the progress of the command identified by the parameter data that contains this command timeouts descriptor. A value of zero in the NOMINAL COMMAND PROCESSING TIMEOUT field indicates that no timeout is indicated.

NOTE 21 - The value contained in the NOMINAL COMMAND PROCESSING TIMEOUT field may include time required for typical device error recovery procedures expected to occur on a regular basis.

A non-zero value in the RECOMMENDED COMMAND TIMEOUT field specifies the recommended time in seconds the application client should wait prior to timing out the command identified by the parameter data that contains this command timeouts descriptor. A value of zero in the RECOMMENDED COMMAND TIMEOUT field indicates that no time is indicated.

The device server should set the recommended command timeout to a value greater than or equal to the nominal command processing timeout.

Application clients should use the Report Supported Operation Codes command to discover command timeout values. The following tables list the command timeout values at the time this document was published for the commands supported at the time the document was published. These values may have changed since publication.

Table	Contents
<u>Table 110</u>	RSOC Command timeout values for Full-Height (at publication)
<u>Table 111</u>	RSOC Command timeout values for Full-Height (at publication) not returned to command
<u>Table 112</u>	RSOC Command timeout values for Half-Height (at publication)
Table 113	RSOC Command timeout values for Half-Height (at publication) not returned to command

Due to the sequential nature of tape devices, many host commands are serialized, and command timeouts consequently have an additive effect. Using reservations prevents this from causing application disruptions in a multi-initiator or SAN environment. Similar additive timeout effects may occur if the host is using command queuing (simple queuing).

NOTE 22 - The time-outs in the following table are based on the time from the start of processing of the command, to its reported completion. Since applications are generally concerned with the time from the command being issued, to its reported completion, it should be noted that this overall time may be affected by currently processing operations. Some of these conditions include:

- a) A prior command was issued with the Immediate bit set in the CDB
- b) Multiple concurrent commands with Simple queuing are processed
- c) Multi-initiator configurations without reservations
- d) Non-host operations, such as manual unloads, power-on self tests, etc.
- e) Commands issued shortly after certain aborted commands
- f) Commands which force flushes when unwritten write data is in the buffer
- g) commands which require interactions with an out-of-band key manager

Table 110 — RSOC Command timeout values for Full-Height (at publication) (part 1 of 3)

Command	Op	Service	Ultri	um 5	Ultrium 6		Ultrium 7	
Command	Codes	Action	Nom	Rec	Nom	Rec	Nom	Rec
ALLOW DATA OVERWRITE (see 5.2.1)	82h		60	60	60	60	60	60
ERASE (see 5.2.2)	19h		13 800	16 380	20 400	24 600	24 600	28 080
FORMAT MEDIUM (see 5.2.3)	04h		300	1 560	480	3 000	480	3 000
INQUIRY (see 5.2.4)	12h		60	60	60	60	60	60
LOAD/UNLOAD (see 5.2.5)	1Bh		300	780	300	780	300	780
LOCATE (10) (see 5.2.6)	2Bh		300	2 040	300	2 040	300	2 040
LOCATE (16) (see 5.2.6)	92h		300	2 040	300	2 040	300	2 040
LOG SELECT (see 5.2.7)	4Ch		60	60	60	60	60	60
LOG SENSE (see 5.2.8)	4Dh		60	60	60	60	60	60
MODE SELECT (10) (see 5.2.9)	55h		60	60	60	60	60	60
MODE SELECT (6) (see 5.2.9)	15h		60	60	60	60	60	60

Table 110 — RSOC Command timeout values for Full-Height (at publication) (part 2 of 3)

	Ор	Op Service		um 5	Ultrium 6		Ultrium 7	
Command	Codes		Nom Rec		Nom Rec		Nom	Rec
MODE SENSE (10) (see 5.2.10)	5Ah		60	60	60	60	60	60
MODE SENSE (6) (see 5.2.10)	1Ah		60	60	60	60	60	60
PERSISTENT RESERVE IN <u>(see 5.2.11)</u> — [READ FULL STATUS]	5Eh	0003h	60	60	60	60	60	60
PERSISTENT RESERVE IN <u>(see 5.2.11)</u> — [READ KEYS]	5Eh		60	60	60	60	60	60
PERSISTENT RESERVE IN <u>(see 5.2.11)</u> — [READ RESERVATION]	5Eh	0001h	60	60	60	60	60	60
PERSISTENT RESERVE IN <u>(see 5.2.11)</u> — [REPORT CAPABILITIES]	5Eh	0002h	60	60	60	60	60	60
PERSISTENT RESERVE OUT <u>(see 5.2.12)</u> — [CLEAR]	5Fh	0003h	60	60	60	60	60	60
PERSISTENT RESERVE OUT (see 5.2.12) — [PREEMPT]	5Fh	0004h	60	60	60	60	60	60
PERSISTENT RESERVE OUT (see 5.2.12) — [PREEMPT AND ABORT]	5Fh	0005h	60	60	60	60	60	60
PERSISTENT RESERVE OUT <u>(see 5.2.12)</u> — [REGISTER AND IGNORE EXISTING KEY]	5Fh	0006h	60	60	60	60	60	60
PERSISTENT RESERVE OUT <u>(see 5.2.12)</u> — [REGISTER AND MOVE]	5Fh	0007h	60	60	60	60	60	60
PERSISTENT RESERVE OUT <u>(see 5.2.12)</u> — [REGISTER]	5Fh		60	60	60	60	60	60
PERSISTENT RESERVE OUT <u>(see 5.2.12)</u> — [RELEASE]	5Fh	0002h	60	60	60	60	60	60
PERSISTENT RESERVE OUT <u>(see 5.2.12)</u> — [RESERVE]	5Fh	0001h	60	60	60	60	60	60
PREVENT/ALLOW MEDIUM REMOVAL (see 5.2.13)	1Eh		60	60	60	60	60	60
READ (see 5.2.14)	08h		300	1 500	300	1 500	300	1 500
READ ATTRIBUTE <u>(see 5.2.15)</u> — [ATTRIBUTE LIST]	8Ch	0001h	60	60	60	60	60	60
READ ATTRIBUTE <u>(see 5.2.15)</u> — [ATTRIBUTE VALUES]	8Ch		60	60	60	60	60	60
READ ATTRIBUTE <u>(see 5.2.15)</u> — [LOGICAL VOLUME LIST]	8Ch	0002h	60	60	60	60	60	60
READ ATTRIBUTE <u>(see 5.2.15)</u> — [PARTITION LIST]	8Ch	0003h	60	60	60	60	60	60
READ ATTRIBUTE <u>(see 5.2.15)</u> — [SUPPORTED ATTRIBUTES]	8Ch	0005h	60	60	60	60	60	60
READ BLOCK LIMITS (see 5.2.16)			60	60	60	60	60	60
READ BUFFER (see 5.2.17)			300	480	300	480	300	480
READ DYNAMIC RUNTIME ATTRIBUTE — [ATTRIBUTE VALUES FOR ALL I_T NEXUSES] (see 5.2.18)		0011h	60	60	60	60	60	60
READ DYNAMIC RUNTIME ATTRIBUTE — [ATTRIBUTE VALUES FOR THIS I_T NEXUS] (see 5.2.18)	D1h	0010h	60	60	60	60	60	60

Table 110 — RSOC Command timeout values for Full-Height (at publication) (part 3 of 3)

	Ор	Service	Ultri	um 5	Ultrium 6		Ultrium 7	
Command	Codes		Nom	Rec	Nom	Rec	Nom	Rec
READ DYNAMIC RUNTIME ATTRIBUTE — [SUPPORTED ATTRIBUTES] (see 5.2.18)	D1h	0000h	60	60	60	60	60	60
READ POSITION (see 5.2.21) — [EXTENDED FORM]	34h	0008h	60	60	60	60	60	60
READ POSITION <u>(see 5.2.21)</u> — [LONG FORM]	34h	0006h	60	60	60	60	60	60
READ POSITION <u>(see 5.2.21)</u> — [SHORT FORM BLOCK ID]	34h		60	60	60	60	60	60
RECEIVE DIAGNOSTIC RESULTS (see 5.2.22)	1Ch		60	60	60	60	60	60
RELEASE UNIT (10) (see 5.2.23)	57h		60	60	60	60	60	60
RELEASE UNIT (6) (see 5.2.23)	17h		60	60	60	60	60	60
REPORT DENSITY SUPPORT (see 5.2.24)	44h		60	60	60	60	60	60
REPORT LUNS (see 5.2.25)	A0h		60	60	60	60	60	60
REPORT SUPPORTED TASK MANAGEMENT FUNCTIONS (see 5.2.27)	A3h	000Dh	60	60	60	60	60	60
REPORT SUPPORTED OPERATION CODE (see 5.2.26)		000Ch	60	60	60	60	60	60
REPORT TIMESTAMP (see 5.2.28)	A3h	000Fh	60	60	60	60	60	60
REQUEST SENSE (see 5.2.29)	03h		60	60	60	60	60	60
RESERVE UNIT (10) (see 5.2.30)	56h		60	60	60	60	60	60
RESERVE UNIT (6) (see 5.2.30)	16h		60	60	60	60	60	60
REWIND (see 5.2.31)	01h		300	600	300	600	300	600
SECURITY PROTOCOL IN (see 5.2.32)	A2h		60	60	60	60	60	60
SECURITY PROTOCOL OUT (see 5.2.33)	B5h		60	60	60	60	60	60
SEND DIAGNOSTIC (see 5.2.34)	1Dh		900	2 100	900	2 100	900	2 100
SET CAPACITY (see 5.2.35)	0Bh		300	780	300	780	300	780
SET TIMESTAMP (see 5.2.36)	A4h	000Fh	60	60	60	60	60	60
SPACE (16) (see 5.2.37)	91h		300	2 040	300	2 040	300	2 040
SPACE (6) (see 5.2.37)	11h		300	2 040	300	2 040	300	2 040
TEST UNIT READY (see 5.2.38)			60	60	60	60	60	60
VERIFY (VTE=1b or VBF=1b) (see 5.2.39)			13 800	16 920	20 400	25 200	24 600	28 080
WRITE (see 5.2.40)			300	1 500	300	1 500	300	1 500
WRITE ATTRIBUTE (see 5.2.41)			60	60	60	60	60	60
WRITE BUFFER (see 5.2.41)	3Bh		300	540	300	540	300	540
WRITE DYNAMIC RUNTIME ATTRIBUTE (see 5.2.42)	D2h		60	60	60	60	60	60
WRITE FILEMARK (see 5.2.43)	10h		300	1 620	300	1 620	300	1 620

<u>Table 111</u> lists the command timeout values for abnormal conditions or for options that are too long to make them useful with the values returned in <u>Table 110</u>. This contains the commands supported at the time the document was published. These values may have changed since publication.

Table 111 — RSOC Command timeout values for Full-Height (at publication) not returned to command

Command		Service	Ultrium 5		Ultrium 6		Ultrium 7	
		Action	Nom	Rec	Nom	Rec	Nom	Rec
LOCATE (10) (see 5.2.6) (slow—e.g., lost directory)	2Bh		13 800	16 920	20 400	25 200	24 600	28 080
LOCATE (16) (see 5.2.6) (slow—e.g., lost directory)	92h		13 800	16 920	20 400	25 200	24 600	28 080
SPACE (16) (see 5.2.37) (slow—e.g., lost directory)	91h		13 800	16 920	20 400	25 200	24 600	28 080
SPACE (6) (see 5.2.37) (slow—e.g., lost directory)	11h		13 800	16 920	20 400	25 200	24 600	28 080
VERIFY(see 5.2.39) (VTE=0b and VBF=0b) (e.g., single block verify)	13h		300	1 500	300	1 500	300	1 500

Table 112 — RSOC Command timeout values for Half-Height (at publication) (part 1 of 3)

C	Ор	Service	Ultri	um 5	Ultri	um 6	Ultri	um 7
Command	Codes	Action	Nom	Rec	Nom	Rec	Nom	Rec
ALLOW DATA OVERWRITE (see 5.2.1)	82h		60	60	60	60	60	60
ERASE <u>(see 5.2.2)</u>	19h		13 800	19 200	20 400	29 400	24 660	32 100
FORMAT MEDIUM <u>(see 5.2.3)</u>	04h		300	1 980	480	3 840	480	3 840
INQUIRY (see 5.2.4)	12h		60	60	60	60	60	60
LOAD/UNLOAD <u>(see 5.2.5)</u>	1Bh		360	1 020	360	1 020	360	1 020
LOCATE (10) <u>(see 5.2.6)</u>	2Bh		360	2 700	360	2 700	360	2 700
LOCATE (16) <u>(see 5.2.6)</u>	92h		360	2 700	360	2 700	360	2 700
LOG SELECT (see 5.2.7)	4Ch		60	60	60	60	60	60
LOG SENSE (see 5.2.8)	4Dh		60	60	60	60	60	60
MODE SELECT (10) <u>(see 5.2.9)</u>	55h		60	60	60	60	60	60
MODE SELECT (6) (see 5.2.9)	15h		60	60	60	60	60	60
MODE SENSE (10) <u>(see 5.2.10)</u>	5Ah		60	60	60	60	60	60
MODE SENSE (6) <u>(see 5.2.10)</u>	1Ah		60	60	60	60	60	60
PERSISTENT RESERVE IN <u>(see 5.2.11)</u> — [READ FULL STATUS]	5Eh	0003h	60	60	60	60	60	60
PERSISTENT RESERVE IN <u>(see 5.2.11)</u> — [READ KEYS]	5Eh		60	60	60	60	60	60
PERSISTENT RESERVE IN <u>(see 5.2.11)</u> — [READ RESERVATION]	5Eh	0001h	60	60	60	60	60	60
PERSISTENT RESERVE IN <u>(see 5.2.11)</u> — [REPORT CAPABILITIES]	5Eh	0002h	60	60	60	60	60	60
PERSISTENT RESERVE OUT (see 5.2.12) — [CLEAR]		0003h	60	60	60	60	60	60
PERSISTENT RESERVE OUT <u>(see 5.2.12)</u> — [PREEMPT]	5Fh	0004h	60	60	60	60	60	60
PERSISTENT RESERVE OUT <u>(see 5.2.12)</u> — [PREEMPT AND ABORT]	5Fh	0005h	60	60	60	60	60	60

Table 112 — RSOC Command timeout values for Half-Height (at publication) (part 2 of 3)

		Campias		um 5		 um 6	Ultri	um 7
Command		Service Action	Nom	Rec	Nom	Rec	Nom	Rec
PERSISTENT RESERVE OUT (see 5.2.12) — [REGISTER AND IGNORE EXISTING KEY]	5Fh	0006h	60	60	60	60	60	60
PERSISTENT RESERVE OUT (see 5.2.12) —  [REGISTER AND MOVE]	5Fh	0007h	60	60	60	60	60	60
PERSISTENT RESERVE OUT (see 5.2.12) — [REGISTER]	5Fh		60	60	60	60	60	60
PERSISTENT RESERVE OUT (see 5.2.12) — [RELEASE]	5Fh	0002h	60	60	60	60	60	60
PERSISTENT RESERVE OUT (see 5.2.12) — [RESERVE]	5Fh	0001h	60	60	60	60	60	60
PREVENT/ALLOW MEDIUM REMOVAL (see 5.2.13)	1Eh		60	60	60	60	60	60
READ (see 5.2.14)	08h		300	1 920	300	1 920	300	1 920
READ ATTRIBUTE <u>(see 5.2.15)</u> — [ATTRIBUTE LIST]	8Ch	0001h	60	60	60	60	60	60
READ ATTRIBUTE <u>(see 5.2.15)</u> — [ATTRIBUTE VALUES]	8Ch		60	60	60	60	60	60
READ ATTRIBUTE <u>(see 5.2.15)</u> — [LOGICAL VOLUME LIST]	8Ch	0002h	60	60	60	60	60	60
READ ATTRIBUTE <u>(see 5.2.15)</u> — [PARTITION LIST]	8Ch	0003h	60	60	60	60	60	60
READ ATTRIBUTE <u>(see 5.2.15)</u> — [SUPPORTED ATTRIBUTES]	8Ch	0005h	60	60	60	60	60	60
READ BLOCK LIMITS (see 5.2.16)	05h		60	60	60	60	60	60
READ BUFFER (see 5.2.17)	3Ch		300	660	300	660	300	660
READ DYNAMIC RUNTIME ATTRIBUTE —  [ATTRIBUTE VALUES FOR ALL I_T NEXUSES] (see 5.2.18)	D1h	0011h	60	60	60	60	60	60
READ DYNAMIC RUNTIME ATTRIBUTE —  [ATTRIBUTE VALUES FOR THIS I_T NEXUS] (see 5.2.18)	D1h	0010h	60	60	60	60	60	60
READ DYNAMIC RUNTIME ATTRIBUTE — [SUPPORTED ATTRIBUTES] (see 5.2.18)	D1h		60	60	60	60	60	60
READ POSITION (see 5.2.21) — [EXTENDED FORM]	34h	0008h	60	60	60	60	60	60
READ POSITION ( <u>see 5.2.21)</u> — [LONG FORM]	34h	0006h	60	60	60	60	60	60
READ POSITION <u>(see 5.2.21)</u> — [SHORT FORM BLOCK ID]	34h		60	60	60	60	60	60
RECEIVE DIAGNOSTIC RESULTS (see 5.2.22)	1Ch		60	60	60	60	60	60
RELEASE UNIT (10) <u>(see 5.2.23)</u>			60	60	60	60	60	60
RELEASE UNIT (6) (see 5.2.23)			60	60	60	60	60	60
REPORT DENSITY SUPPORT (see 5.2.24)	44h		60	60	60	60	60	60
REPORT LUNS (see 5.2.25)	A0h		60	60	60	60	60	60
REPORT SUPPORTED TASK MANAGEMENT FUNCTIONS (see 5.2.27)	A3h	000Dh	60	60	60	60	60	60

Table 112 — RSOC Command timeout values for Half-Height (at publication) (part 3 of 3)

Command	Ор	Service	Ultri	um 5	Ultri	um 6	Ultri	um 7
Command	Codes	Action	Nom	Rec	Nom	Rec	Nom	Rec
REPORT SUPPORTED OPERATION CODE (see 5.2.26)	A3h	000Ch	60	60	60	60	60	60
REPORT TIMESTAMP (see 5.2.28)	A3h	000Fh	60	60	60	60	60	60
REQUEST SENSE (see 5.2.29)	03h		60	60	60	60	60	60
RESERVE UNIT (10) <u>(see 5.2.30)</u>	56h		60	60	60	60	60	60
RESERVE UNIT (6) <u>(see 5.2.30)</u>	16h		60	60	60	60	60	60
REWIND (see 5.2.31)	01h		300	780	300	780	300	780
SECURITY PROTOCOL IN (see 5.2.32)	A2h		60	60	60	60	60	60
SECURITY PROTOCOL OUT (see 5.2.33)			60	60	60	60	60	60
SEND DIAGNOSTIC (see 5.2.34)	1Dh		960	3 120	960	3 120	960	2 520
SET CAPACITY (see 5.2.35)	0Bh		300	960	300	960	300	960
SET TIMESTAMP (see 5.2.36)	A4h	000Fh	60	60	60	60	60	60
SPACE (16) (see 5.2.37)	91h		360	2 700	360	2 700	360	2 700
SPACE (6) (see 5.2.37)	11h		360	2 700	360	2 700	300	2 700
TEST UNIT READY (see 5.2.38)	00h	-	60	60	60	60	60	60
VERIFY (VTE=1b or VBF=1b) (see 5.2.39)	13h		13 800	19 980	20 400	30 000	24 660	32 100
WRITE (see 5.2.40)	0Ah		300	1 920	300	1 920	300	1 920
WRITE ATTRIBUTE (see 5.2.41)	8Dh		60	60	60	60	60	60
WRITE BUFFER (see 5.2.41)	3Bh		300	720	300	720	300	720
WRITE DYNAMIC RUNTIME ATTRIBUTE (see 5.2.42)			60	60	60	60	60	60
WRITE FILEMARK (see 5.2.43)	10h		300	1 740	300	1 740	300	1 740

<u>Table 113</u> lists the command timeout values for abnormal conditions or for options that are too long to make them useful with the values returned in <u>Table 112</u>. This contains the commands supported at the time the document was published. These values may have changed since publication.

Table 113 — RSOC Command timeout values for Half-Height (at publication) not returned to command

Command		Op Service		Ultrium 5		Ultrium 6		um 7
		Action	Nom	Rec	Nom	Rec	Nom	Rec
LOCATE (10) (see 5.2.6) (slow—e.g., lost directory)	2Bh		13 800	19 980	20 400	30 000	24 660	32 100
LOCATE (16) (see 5.2.6) (slow—e.g., lost directory)	92h		13 800	19 980	20 400	30 000	24 660	32 100
SPACE (16) (see 5.2.37) (slow—e.g., lost directory)	91h		13 800	19 980	20 400	30 000	24 660	32 100
SPACE (6) (see 5.2.37) (slow—e.g., lost directory)	11h		13 800	19 980	20 400	30 000	24 660	32 100
VERIFY(see 5.2.39) (VTE=0b and VBF=0b) (e.g., single block verify)	13h		300	1 920	300	1 920	300	1 920

### 5.2.26.3.2 WRITE BUFFER command timeouts descriptor COMMAND SPECIFIC field usage

For the WRITE BUFFER command, the COMMAND SPECIFIC field usage is reserved for all modes except the following:

- a) Download microcode mode (04h);
- b) Download microcode and save mode (05h);
- c) Download microcode with offsets mode (06h);

- d) Download microcode with offsets and save mode (07h);
- e) Download microcode with offsets and defer activation mode (0Eh) only if the microcode is activated by an event other than an activate deferred microcode mode; and
- f) Activate deferred microcode mode (0Fh).

If the command timeouts descriptor describes one of the WRITE BUFFER modes listed in this subclause, then the COMMAND SPECIFIC field indicates the maximum time, in one second increments, that access to the SCSI device is limited or not possible through any SCSI ports associated with a logical unit that processes a WRITE BUFFER command that specifies one of the named modes. A value of zero in the COMMAND SPECIFIC field indicates that the no maximum time is indicated.

### 5.2.27 REPORT SUPPORTED TASK MANAGEMENT FUNCTIONS - A3h[0Dh]

The REPORT SUPPORTED TASK MANAGEMENT FUNCTIONS command is defined in SPC (see the latest version at <a href="http://www.t10.org/drafts.htm#SCSI3">http://www.t10.org/drafts.htm#SCSI3</a> CMNDSETS). The REPORT SUPPORTED TASK MANAGEMENT FUNCTIONS command (see table 114) requests information on task management functions supported by the drive.

Table 114 — REPORT SUPPORTED TASK MANAGEMENT FUNCTIONS CDB

Puto				В	it					
Byte	7	6	5	4	3	2	1	0		
0		OPERATION CODE (A3h)								
1		Reserved SERVICE ACTION (0Dh)								
2	REPD	REPD Reserved								
3			Reserved							
5				Nest	aveu					
6	(MSB)		A1.1	OCATED LENC	Tu (4h or lara	ior)				
9		ALLOCATED LENGTH (4h or larger)								
10	Reserved									
11				Control Byte	(see 5.1.2.3)					

The following parameters apply:

- SERVICE ACTION: 0Dh
- REPD (report extended parameter data): 0b
- ALLOCATION LENGTH: The number of bytes allowed to be returned. Shall be 4h or larger.

#### 5.2.27.1 REPORT SUPPORTED TASK MANAGEMENT FUNCTIONS parameter data

The format of the parameter data returned by the REPORT TASK MANAGEMENT FUNCTIONS command is shown in <u>table 115</u>.

Table 115 — REPORT SUPPORTED TASK MANAGEMENT FUNCTIONS parameter data

Disto		Bit								
Byte	7	7 6 5 4 3		2	1	0				
0	ATS	ATSS	CACAS	CTSS	LURS	QTS	TRS	WAKE		
1			QAES	QTSS	ITNRS					
2	Reserved									
3		REPORT SUPPORTED TASK MANAGEMENT FUNCTIONS ADDITIONAL DATA LENGTH								

The parameters are defined as follows:

# Byte Description

0

1

2

3

<b>Bit</b> 7 6 5 4	ATS (abort ATSS (abor CACAS (cle	Description ATS (abort task): 1b ATSS (abort task set): 1b CACAS (clear aca): 0b CTSS (clear task set): 1b							
3	LURS (logic	cal unit reset): 1b							
2	QTS (query	v task):							
	Value	Description							
	0b	Set on FC attached devices to indicate not supported.							
	1b	Set on SAS attached devices to indicate supported.							
1	TRS (target	,							
	Value	Description							
	0b	Set on SAS attached devices to indicate not supported.							
	1b	Set on FC attached devices to indicate supported.							
0	WAKE (wak	(eup): 0b							
Bit	Description	on							
7-3	Reserved								
2	QAES (que	ry asynchronous event): 0b							
1	QTSS (quei	ry task set): 0b							
0	ITNRS (I_T	ITNRS (I_T nexus reset): 0b							
Rese	erved								

REPORT SUPPORTED TASK MANAGEMENT FUNCTIONS ADDITIONAL DATA LENGTH: 00h

### 5.2.28 REPORT TIMESTAMP - A3h[0Fh]

The REPORT TIMESTAMP command (see table 116) is defined in SPC (see the latest version at <a href="http://www.t10.org/drafts.htm#SCSI3">http://www.t10.org/drafts.htm#SCSI3</a> CMNDSETS). This clause decribes the specific implementation.

Rit **Byte** 7 6 5 3 2 1 0 0 OPERATION CODE (A3h) 1 Reserved SERVICE ACTION (0Fh) 2 Reserved 5 6 (MSB) ALLOCATION LENGTH 9 (LSB) 10 Reserved 11 Control Byte (see 5.1.2.3)

Table 116 — REPORT TIMESTAMP CDB

The following parameters apply:

- SERVICE ACTION: 0Fh
- ALLOCATION LENGTH: The number of bytes that have been allocated for the returned parameter data.

## 5.2.28.1 REPORT TIMESTAMP parameter data

The format of the parameter data returned by the REPORT TIMESTAMP command is shown in table 117.

Bit **Byte** 7 6 5 4 3 1 0 (MSB) 0 TIMESTAMP PARAMETER DATA LENGTH (0Ah) (LSB) 1 2 Reserved TIMESTAMP ORIGIN 3 Reserved 4 (MSB) **TIMESTAMP** 9 (LSB) 10 Reserved 11

Table 117 — REPORT TIMESTAMP Timestamp Descriptor

The parameters are defined as follows:

## Byte Description

0-1 TIMESTAMP PARAMETER DATA LENGTH: 0Ah

2

- Bit Description
- 7-3 Reserved
- 2-0 TIMESTAMP ORIGIN: <u>Device Clocks (see 4.14 on page 58)</u> defines the TIMESTAMP ORIGIN

- 3 Reserved
- 4-9 TIMESTAMP: <u>Device Clocks (see 4.14 on page 58)</u> defines the timestamp.
- 10-11 Reserved

#### 5.2.29 REQUEST SENSE - 03h

The REQUEST SENSE command is defined in SPC (see the latest version at <a href="http://www.t10.org/drafts.htm#SCSI3">http://www.t10.org/drafts.htm#SCSI3</a> CMNDSETS). This clause decribes the specific implementation.

Table 118 — REQUEST SENSE CDB

Puto	Bit										
Byte	7 msb	6	5	4	3	2	1	0 Isb			
0		OPERATION CODE (03h)									
1	Obsolete Reserved										
2		- Reserved -									
3				1/626	iveu						
4				ALLOCATIO	N LENGTH						
5				Control Byte	(see 5.1.2.3)						

The following parameters apply:

ALLOCATION LENGTH: The maximum number of bytes to be transferred.

This device generates up to 96 bytes of sense data. If the ALLOCATION LENGTH specified is less than the generated sense data length, then the allocated amount is transferred, the remaining sense data is lost, and no error is reported. If the ALLOCATED LENGTH specified is greater, then the entire sense data is transferred and no error is reported.

In read ILI conditions only 18 bytes of sense data may be generated. While processing sense data, the host should use the ADDITIONAL SENSE LENGTH field (i.e., byte 7) to determine the amount of sense data generated to insure that only valid transferred fields are examined.

158 IBM LTO SCSI Reference

# 5.2.29.1 Sense Data Format

Table 119 — REQUEST SENSE Sense Data Format

Deste				В	it								
Byte	7 msb	6	5	4	3	2	1	0 lsb					
0	VALID	VALID RESPONSE CODE											
1		Obsolete (00h)											
2	FILEMARK	FILEMARK EOM ILI Reserved SENSE KEY											
3		INFORMATION											
6		IINF ORIVIA HON											
7		ADDITIONAL SENSE LENGTH											
8		COMMAND SPECIFIC INFORMATION											
11			CO	MMAND SPECI	FIC INFORMAT	ION							
12				ADDITIONAL	SENSE CODE								
13			ADD	ITIONAL SENSI	E CODE QUALI	FIER							
14			FI	ELD REPLACE	ABLE UNIT COI	DE							
15	SKSV	C/D	Rese	erved	BPV		BIT POINTER						
16				SKSV (1: FIE	LD POINTER)								
17			SKSV (0: RE	PORTING ERRO	OR FAULT SYM	IPTOM CODE)							
18			5	EDODTING EDI	200 El 40 D43	F.A.							
19			K	EPORTING ERI	ROR FLAG DAT	IA							
20				Rese	erved								
21		Reserved		DRVSRVC	CLN	Reserved	DUMP	VOLVALID					
22		_		\/OLLIM	LADEL								
28				VOLUM	ELADEL								
29				PHYSICA	AL WRAP								
30	(MSB)	_		DEL ATIVE I	DOC VALUE								
33				RELATIVE L	POS VALUE			(LSB)					
34				SCSI AE	DDRESS								
35				RS422 INF	ORMATION								
36			Reserved			AC	CTIVE PARTITI	ON					
37	(MSB)		PORT IDE	ENTIFIER OF PO	ORT REPORTIN	NG SENSE							
39		(This i	s the address	s of the port th	nrough which	sense is rep	orted.)	(LSB)					
40	TAPE DIRECTORY VALID	TAPE PARTITIONS EXIST	Reserved	Reserved	Reserved	RELATIVE TGT PORT REPORTING SENSE: 0: Reserved 1: Relative Tgt Port 1 (Port 0) 2: Relative Tgt Port 2 (Port 1) 3: Relative Tgt Port 3 (RS422 Port) 4: Relative Tgt Port 4 (Ethernet Port)							
41			НС	ST COMMAND	(SCSI Opco	de)							

Table 119 — REQUEST SENSE Sense Data Format

5.4		Bit 7 msb 6 5 4 3 2 1 0 lsb											
Byte	7 msb	6	6 5 4 3 2 1										
42	CARTRIDGE GE 0: No media p 1: Gen2 2: Gen3 3: Gen 4 4: Gen 5 5: Gen 6 6. Gen 7	NERATION TYPE resent / Gen1  MEDIA TYPE (Vendor Reserve											
43		VOLUME LABEL CARTRIDGE TYPE											
44			v	OLUME LABEL (	DAKTRIDGE T	IFE							
45				LOGICAL BLO	OCK NUMBER								
48		(Curre	ent LBA that	would be repo	rted in Read	Position com	ımand)						
49	(MSB)			DATACET	NUMBER								
52				DATASET	NUMBER			(LSB)					
53				10T ED	200 500								
54				ISI EKI	ROR FSC								
55				40====									
56		1ST ERROR FLAG DATA											
57				0ND 50	202 500								
58				ZND ER	ROR FSC								
59				OND EDDOE	- FL AO DATA								
60				ZND ERROF	R FLAG DATA								
61				NEVT TO LAC	T								
62				NEXT-TO-LAS	T ERROR FSC								
63				5\/T TO   AOT 5	DDOD 51 40 D								
64			N	EXT-TO-LAST E	KKUK FLAG D	A I A							
65				LAOT 55	DOD 500								
66				LAST ER	ROR FSC								
67				1.407.5555									
68				LAST ERROF	R FLAG DATA								
69				LPOS I	REGION								
70				EDD 01	/ IN ISOS :								
85				ERP SUMMARY	INFORMATIO	N							
86	(MSB)			CARTRIDGE S	ERIAL NUMBEI	₹							
95		(Thi	s is the value	e from the CM			code)	(LSB)					

160 IBM LTO SCSI Reference

#### Byte Description

0

Bit Description 7 VALID Value Description 0b information bytes 3-6 are not valid 1b information bytes 3-6 are valid 6-0 RESPONSE CODE Value Description 70h current (non-deferred)

71h deferred

1 Obsolete: 00h

2

#### Bit Description

7 FILEMARK (see Request Sense Information, ILI, and Command Interactions (see 4.9 on

<u>page 43)</u>)

Value Description

0b the current command has not encountered a filemark1b the current command has encountered a filemark.

This device does not report Setmarks, per Mode Page 10h, byte 8, bit 5.

6 EOM (End-Of-Medium):

Value Description

0b indicates that the device is not at the end of medium.1b indicates that the device is at the end of medium.

- 5 ILI (Incorrect Length Indicator): see <u>Request Sense Information</u>, <u>ILI</u>, <u>and Command Interactions</u> (see 4.9 on page 43). ILI residual counts are in the Information field.
- 4 Reserved
- 3-0 SENSE KEY (see Annex B.)
- 3-6 INFORMATION: The content of this field varies depending on the failing command and error. This field is only valid when the Valid bit (byte 0, bit 7) is set to 1. This field is generally only valid for non-deferred errors. See Request Sense Information, ILI, and Command Interactions (see 4.9 on page 43)
- 7 ADDITIONAL SENSE LENGTH (n-7): 0Ah or 58h

This device returns 96 bytes of sense data (a value of 58h in the Additional Sense Length field). The first 18 bytes are standard.

Only the first 18 bytes of sense data may be returned (a value of 0Ah in the Additional Sense Length field) in association with ILI conditions for read-type commands.

8-11 COMMAND-SPECIFIC INFORMATION: 0000 0000h

This device does not support the commands associated with this field.

- 12 ADDITIONAL SENSE CODE (ASC) (see Annex B.)
- 13 ADDITIONAL SENSE CODE QUALIFIER (ASCQ) (see Annex B.)
- 14 FIELD REPLACEABLE UNIT CODE (FRU)

This field indicates a possible component or area which is related to the error or failure. Since this device is a single FRU product, this does not necessarily mean a replaceable component has been identified. Instead, this is used for extended fault isolation information.

#### 15-17 SENSE KEY SPECIFIC

When the SKSV bit is 1b (often set when SENSE KEY is ILLEGAL REQUEST), bytes 15-17 are interpreted as follows:

Byte 15	Description SENSE KEY SF Bit 7	Descri SKSV (S C/D (Cd	Sense Key Specific Valid): 1b ontrol/Data):
		Value	Description
		0b	specifies that the error is in a data field of the parameter list.
		1b	specifies that the error is in a CDB field.
	5-4	Reserv	red
	3	BPV (B	t Pointer Valid):
		Value	Description
		0b	specifies that the Bit Pointer Field is not valid.
		1b	specifies that the Bit Pointer Field is valid.
	2-0	BIT POI	NTER
		When	BPV is set to 1b, this field points to the bit in error of the field specified by

#### 16-17 FIELD POINTER

Points to the CDB byte or parameter byte in error.

the FIELD POINTER.

When the SKSV bit is 0b, bytes 15-17 are interpreted as follows:

Byte	Descripti	on					
15	Vendor-Unique Indicators						
	Bit	Description					
	7	SKSV (Sense Key Specific Valid): 0b					
	0.0	Danaman					

Reserved 6-0

16-17 REPORTING ERROR FAULT SYMPTOM CODE (FSC)

- 18-19 REPORTING ERROR FLAG DATA
- 20 Reserved

21

#### Bit Description

7-5 Reserved

- 4 DRVSRVC: This bit is set to one by code whenever the drive determines that it has a hardware fault causing the drive to be inoperative. This bit is mapped to the ""DEAD DRIVE" Flag {3Ch:000Dh}" (see page 342) of LP 3Ch: Drive usage information (see 6.4.27 on page 341). This bit:
  - a) is maintained across all reset conditions, firmware downloads, and power cycles;
  - b) is tested and reported by the SEND DIAGNOSTIC Command and any diagnostics run on the drive except the Power-On-Test if this drive is configured for attachment to eServer;
  - c) does not affect drive operations; and
  - d) is not affected by the Power-On-Test.
- 3 CLN:

Value	Description
0b	this device is not requesting a clean.
1b	this device is requesting a clean.
Reserved	

- 2
- DUMP: This bit indicates if there is a drive dump (i.e., drive debug log) present in the drive. If this bit is set, the dump should be read prior to forcing a dump by using the Force Dump diagnostic of the SEND DIAGNOSTIC command.

WARNING

WARNING =

This bit should be examined before reading a drive dump and if it is set to zero, then no attempt should be made to read a dump prior to forcing the dump with the Force Dump diagnostic. If a dump is read when there is not one present, then interface information in a subsequent dump forced by the Force Dump diagnostic is washed out by the reading of the non-dump.

— WARNING =

0

Value

1b

WARNING -

	0b	no dump is present.
	1b	a dump is present.
)	VOLVALID: valid infor	indicates if the VOLUME LABEL field and the VOLUME LABEL CARTRIDGE TYPE field contain mation.
	Value	Description
	0b	the volume label field and the volume label cartridge type field do not contain

valid information.

the VOLUME LABEL field and the VOLUME LABEL CARTRIDGE TYPE field contain valid information.

- 22-28 VOLUME LABEL: If a cartridge is loaded in the drive and the VOLVALID bit is set to 1b, then the VOLUME LABEL field reports a value in the following priority:
  - the seven characters from the left of the volume label from the CM Mechanism Related Data page (if one exists);
  - the seven characters from the left of the volume label from the host bar code field in the CM (if it exists); or
  - 3) all spaces (ASCII 20h).
- 29 PHYSICAL WRAP: The physical wrap of the current location. If the value in this field is FFh, then the logical wrap number exceeds 254. Physical direction is not reflected in this case.

The least significant bit reflects the current physical direction.

Description

#### Value Description

- 0b the current direction is away from physical beginning of tape.
- 1b the current direction is towards physical beginning of tape.
- 30-33 RELATIVE LPOS VALUE: The current physical position on tape.
- 34 SCSI ADDRESS: Obsolete See PORT IDENTIFIER OF PORT REPORTING SENSE (bytes 36-39) instead.
- RS422 INFORMATION: This field may contain a value passed across the RS-422 serial interface by, for example, a tape library, if the library vendor chooses to send such a value. The value passed from across the RS-422 interface is reported persistently until a different value is sent, at which time the new value is reported persistently.

36

# Bit Description

- 7-3 Reserved
- 2-0 ACTIVE PARTITION: The partition number of the current logical position of the volume.
- 37-39 PORT IDENTIFIER OF PORT REPORTING SENSE: The address of the port through which sense is reported.

# Byte Description

- 36 Reserved
- 37-39 FIBRE CHANNEL FABRIC PORT ADDRESS (e.g., 011E13h or 000026h), if FC device; or HASHED SAS ADDRESS OF THE DRIVE PORT (e.g., F32A94h), if SAS device.

40

Bit Description

7 TAPE DIRECTORY VALID:

6 TAPE PARTITIONS EXIST:

This field is set to 0b when no volume is mounted

Value **Description** 

0b The mounted volume contains only one partition (i.e., not partitioned) 1b The mounted volume contains more than one partitions (i.e., is partitioned)

5-3 Reserved

2-0 RELATIVE TGT PORT REPORTING SENSE: The relative target port through which sense data is being reported.

Value **Description** 000b Reserved 001b Relative target port 1 (Port 0) 010b Relative target port 2 (Port 1) Relative target port 3 (RS-422 Port) 011b 100b Relative target port 4 (Ethernet Port)

41 HOST COMMAND: SCSI Opcode of the command to which sense data is being returned.

42

#### Bit Description

CARTRIDGE GENERATION TYPE: 7-4

Value	Description
000b	No media present or Gen1
001b	Gen2
010b	Gen3
011b	Gen 4
100b	Gen 5
101b	Gen 6
110b	Gen 7
	- /\ /   D  \

3-0 MEDIA TYPE (Vendor Reserved)

43-44 VOLUME LABEL CARTRIDGE TYPE: This field is only valid if the VOLVALID bit is set to 1b.

Value	Description
'L3'	Ultrium 3 - Native capacity is 400 GB (10 <sup>6</sup> )
'LT'	Ultrium 3 WORM - Native capacity is 400 GB (10 <sup>6</sup> )
'L4'	Ultrium 4 - Native capacity is 800 GB (10 <sup>6</sup> )
'LU'	Ultrium 4 WORM - Native capacity is 800 GB (10 <sup>6</sup> )
'L5'	Ultrium 5 - Native capacity is 1500 GB (10 <sup>6</sup> )
'LV'	Ulrium 5 WORM- Native capacity is 1500 GB (10 <sup>6</sup> )
'L6'	Ultrium 6 - Native capacity is 2500 GB (10 <sup>6</sup> )
'LW'	Ulrium 6 WORM- Native capacity is 2500 GB (10 <sup>6</sup> )
'L7'	Ultrium 7 - Native capacity is 6000 GB (10 <sup>6</sup> )
'LX'	Ulrium 7 WORM- Native capacity is 6000 GB (10 <sup>6</sup> )
LOGICAL BLO	CK NUMBER: Current LBA that would be reported in Re

45-48 ead Position command

49-52 DATASET NUMBER:

53-54 1ST ERROR FSC:

55-56 1ST ERROR FLAG DATA:

57-58 2ND ERROR FSC:

59-60 2ND ERROR FLAG DATA:

61-62 NEXT-TO-LAST ERROR FSC:

63-64 NEXT-TO-LAST ERROR FLAG DATA:

65-66 LAST ERROR FSC:

67-68 LAST ERROR FLAG DATA:

164

69 LPOS REGION:

70-85 ERP SUMMARY INFORMATION:

86-95 CARTRIDGE SERIAL NUMBER: This is the value from the CM right justified, not the Barcode

IBM LTO SCSI Reference 165

#### 5.2.30 RESERVE - 16h/56h

The RESERVE command is defined in SPC-2 (see <a href="http://www.t10.org/cgi-bin/ac.pl?t=f&f=spc2r20.pdf">http://www.t10.org/cgi-bin/ac.pl?t=f&f=spc2r20.pdf</a>). This clause decribes the specific implementation.

Table 120 — RESERVE(6) CDB

Byte	Bit										
Буге	7 msb	6	5	4	3	2	1	0 lsb			
0		Operation code (16h)									
1		Obsolete Obsolete									
2				Obso	aloto						
4				Obsc	лете						
5				Control Byte	(see 5.1.2.3)						

Table 121 — RESERVE(10) CDB

Durán	Bit											
Byte	7 msb	6	5	4	3	3 2		0 lsb				
0		OPERATION CODE (56h)										
1		Reserved		3RDPTY	Rese	erved	LONGID	Obsolete				
2	Obsolete											
3	THIRD-PARTY DEVICE ID											
4				Rese	ruod							
6				V626	iveu							
7	(MSB)			DADAMETED	LICT L ENGTH							
8		•	PARAMETER LIST LENGTH (LSB)									
9				Control Byte	(see 5.1.2.3)							

The following parameters apply:

• 3RDPTY (Third Party): 0b

• LONGID: 0b

· Obsolete: All obsolete fields shall be set to zero.

• THIRD - PARTY DEVICE ID: 00h

PARAMETER LIST LENGTH: 0000h

NOTE 23 - Reserves are honored across initiator as well as port boundaries. For additional information, see "Multiple Port Behavior" on page 263.

#### 5.2.31 REWIND - 01h

The Rewind command is defined in SSC (see the latest version at <a href="http://www.t10.org/drafts.htm#SCSI3">http://www.t10.org/drafts.htm#SCSI3</a> CMNDSETS). This clause decribes the specific implementation.

Table 122 — REWIND CDB

Puto	Bit										
Byte	7 msb	6	5	4	3	2	1	0 Isb			
0		OPERATION CODE (01h)									
1		Obsolete			IMMED						
2				Rese	nuod						
4				Nese	iveu						
5				Control Byte	(see 5.1.2.3)						

The following parameters apply:

• Immed (Immediate):

Value	Description
0b	present status when command is completed.
1b	present status when all buffered data is successfully written to the media.

NOTE 24 - On eServer enabled drives (i.e., The PRODUCT ID returned in Standard Inquiry is "HH LTO Gen x" where "x" is a number), a CHECK CONDITION status with SENSE KEY set to 1h and the additional sense code set to DEGRADED MEDIA (i.e., ASC/ASCQ 8252h) may be returned after completion of the REWIND command if certain conditions are met.

#### 5.2.32 SECURITY PROTOCOL IN (SPIN) - A2h

The Security Protocol In command is defined in SPC-4 (see the latest version at <a href="http://www.t10.org/drafts.htm#SCSI3">http://www.t10.org/drafts.htm#SCSI3</a> CMNDSETS). This clause decribes the specific implementation.

The SECURITY PROTOCOL IN command (see table 123) is:

- a) supported in encryption capable drives that are configured for AME-T10 mode (see 4.12); and
- b) is used to retrieve security protocol information (see 6.8.1) or the results of one or more SECURITY PROTOCOL OUT commands (see 5.2.33).

Puto				В	it							
Byte	7 msb	6	5	4	3	2	1	0 lsb				
0	OPERATION CODE (A2h)											
1		SECURITY PROTOCOL										
2				COUDITY DDOI	.0001 SDECIEN	2						
3		SECURITY PROTOCOL SPECIFIC ——————————————————————————————————										
4	inc_512				Reserved							
5				Rese	erved							
6	(MSB)		Allocation I amouth									
9		•	Allocation Length (LSB)									
10		Reserved										
11				Control Byte	(see 5.1.2.3)							

The following parameters apply:

- SECURITY PROTOCOL: <u>SPIN (00h[0000h]) Supported Security Protocols List (see 6.8.1.1 on page 428)</u> lists the supported security protocols.
- SECURITY PROTOCOL SPECIFIC The contents depend on the protocol specified by the SECURITY PROTOCOL field. The following SPIN pages provide a list of supported SECURITY PROTOCOL SPECIFIC values:
   SPIN (00h[0000h]) Supported Security Protocols List (see 6.8.1.1 on page 428)
   SPIN (20h[0000h]) Tape Data Encryption In Support Pages page (see 6.8.2.1 on page 432)
   SPIN (20h[0001h]) Tape Data Encryption Out Support Pages page (see 6.8.2.2 on page 433)
- INC 512: 0b
- ALLOCATION LENGTH:

Security Protocol Parameters (SPP) (see 6.8 on page 427) has a listing of all security protocol parameters.

#### 5.2.33 SECURITY PROTOCOL OUT (SPOUT) - B5h

The Security Protocol Out command is defined in SPC-4 (see the latest version at <a href="http://www.t10.org/drafts.htm#SCSI3">http://www.t10.org/drafts.htm#SCSI3</a> CMNDSETS). This clause decribes the specific implementation.

The SECURITY PROTOCOL OUT command (see Table 124) is:

- a) supported in encryption capable drives that are configured for AME-T10 mode <u>Encryption Control T10</u> Standards (see 4.12.2 on page 50); and
- b) used to send data to the logical unit. The data sent specifies one or more operations to be performed by the logical unit. The format and function of the operations depends on the contents of the SECURITY PROTOCOL field (see table 124). Depending on the protocol specified by the SECURITY PROTOCOL field, the application client may use the SECURITY PROTOCOL IN command (see 5.2.32) to retrieve data derived from these operations.

NOTE 25 - The operation code, B5h has been recovered from a seldom used media changer (i.e. LUN 1) command (REQUEST VOLUME ELEMENT ADDRESS). If the device driver being used still uses the LUN field of the CDB from SCSI-2 days, this command will be routed to the incorrect LUN. Since the SPOUT command is a DATA OUT type command, whereas the REQUEST VOLUME ELEMENT ADDRESS command is a DATA IN type command this has the potential to cause strange system behaviors.

Bit **Byte** 7 msb 6 5 4 3 2 1 0 Isb 0 OPERATION CODE (B5h) 1 SECURITY PROTOCOL 2 SECURITY PROTOCOL SPECIFIC 3 4 inc\_512 Reserved 5 Reserved 6 (MSB) ALLOCATION LENGTH 9 (LSB) 10 Reserved 11 Control Byte (see 5.1.2.3)

Table 124 — SECURITY PROTOCOL OUT B5h CDB

The following parameters apply:

SECURITY PROTOCOL

Value Description
20h Tape Data Encryption security protocol (see 6.8.3).

- SECURITY PROTOCOL SPECIFIC: The contents depend on the protocol specified by the SECURITY PROTOCOL field.
- INC 512: 0b
- ALLOCATION LENGTH:

Security Protocol Parameters (SPP) (see 6.8 on page 427) has a listing of all security protocol parameters.

#### 5.2.34 SEND DIAGNOSTIC - 1Dh

The SEND DIAGNOSTIC command is defined in SPC (see the latest version at <a href="http://www.t10.org/drafts.htm#SCSI3">http://www.t10.org/drafts.htm#SCSI3</a> CMNDSETS). This clause decribes the specific implementation.

After a Send Diagnostic command completes, use the Receive Diagnostic Results command to receive the results.

For diagnostics that produce diagnostic results, the LUN should be reserved to allow the I\_T nexus that issued the Send Diagnostic command to issue the Receive Diagnostic Results command before a different I\_T nexus clears the results by reading them.

Bit **Byte** 7 msb 6 5 4 2 0 Isb 0 OPERATION CODE (1Dh) 1 Obsolete Reserved **SELFTEST DEVOFL** UNITOFL 2 Reserved 3 **MSB** PARAMETER LIST LENGTH 4 LSB 5 Control Byte (see 5.1.2.3)

Table 125 — SEND DIAGNOSTIC CDB

The following parameters apply:

PF (Page Format): 1b

• SELFTEST:

Value	Description
0b	Perform the diagnostic operation specified in the parameter list.
1b	Perform self test. See 6.2.3 on page 213 for details of this diagnostic.

NOTE 26 - When Self Test is requested, no other diagnostic may be simultaneously requested.

• DEVOFL (Device Off Line):

Value	Description
0b	is supported and prohibits any diagnostic operations that may be detected by subsequent
	I/O processes.
1b	is supported and grants permission to the target to perform diagnostic operations that may affect all the logical units on a target; that is, alteration of reservations, log parameters, or sense data.
X	in the diagnostic description indicates that either 0b or 1b may be used with identical effects.

NOTE 27 - DEVOFL and UNITOFL are set by the system. These bits grant permission to the target to perform vendor-specific diagnostic operations on the target that may be visible to attached initiators. Thus, by preventing operations that are not enabled by these bits, the target assists the operating system in protecting its resources.

UNITOFL (Unit Off Line):

Value	Description
0b	is supported and prohibits any diagnostic operations that may be detected by subsequent
	I/O processes.
1b	is supported and grants permission to the target to perform diagnostic operations that may
	affect the user medium on the logical unit; for example, write operations to the

user-accessible medium, or operations that reposition the medium on sequential access devices.

- x in the diagnostic description indicates that either 0b or 1b may be used with identical effects.
- PARAMETER LIST LENGTH: This field specifies the length in bytes of the parameter list that is transferred from
  the initiator to the target. A parameter list length value of zero specifies that no data is transferred. This
  condition is not considered an error. If the specified parameter list length results in truncation of one or
  more pages (PF bit set to 1b), the target returns CHECK CONDITION status with associated sense data of
  5/2400 (ILLEGAL REQUEST, INVALID FIELD IN CDB).

<u>Diagnostic Parameters (Diag) (see 6.2 on page 200)</u> has a listing of all diagnostic parameters.

#### 5.2.35 SET CAPACITY - 0Bh

The SET CAPACITY command is defined in SSC (see the latest version at <a href="http://www.t10.org/drafts.htm#SCSI3">http://www.t10.org/drafts.htm#SCSI3</a> CMNDSETS). This clause decribes the specific implementation.

The SET CAPACITY command sets the available medium for the currently mounted volume to a proportion of the total medium for use. Any excess space shall be unavailable on the medium after successful completion of this command until changed by a new SET CAPACITY command. This change shall persist through power cycles, logical unit resets, I\_T nexus losses, and unloading or reloading of the volume.

Byte	Bit											
Буге	7	6	5	4	3	2	1	0				
0	OPERATION CODE (0Bh)											
1	Reserved											
2		Reserved										
3	(MSB)	(MSB)										
4		MEDIUM FOR USE PROPORTION VALUE (LSB)										
5		Control Byte (see 5.1.2.3)										

Table 126 — SET CAPACITY CDB

If no volume is loaded, then the command is terminated with CHECK CONDITION status. The sense key is set to NOT READY, and the additional sense code is set to MEDIUM NOT PRESENT.

The SET CAPACITY command is accepted only when the medium is at beginning-of-partition 0 (BOP 0). If the medium is logically at any other position, the command is rejected with CHECK CONDITION status. The sense key is set to ILLEGAL REQUEST and the additional sense code is set to POSITION PAST BEGINNING OF MEDIUM.

A valid SET CAPACITY command causes all data and partitioning information on the entire physical volume to be lost. If the partitioning information changes, a unit attention condition is established for all initiators with the additional sense code set to MODE PARAMETERS CHANGED.

The following paramters apply:

• IMMED (immediate):

Value	Description
0b	present status when command is completed.
1b	present status when the command descriptor block has been validated all buffered data, if
	any, is successfully written to the medium.

MEDIUM FOR USE PROPORTION VALUE (MFUPV): The portion of the total medium to be made available for use.
 This field is the numerator to a fraction that has a denominator of 65\_535 (FFFFh). The resulting available capacity on the tape is equal to the total unscaled tape capacity multiplied by this fraction.

$$\frac{\text{MFUPV}}{65535} \times TotalUnscaledTapeCapacity = ResultingAvailableCapacity$$

This device may round up the capacity to the next highest supported value. This rounding is not considered an error and is not reported. If the MEDIUM FOR USE PROPORTION VALUE does not meet the ranges specified in <u>table 127</u> then CHECK CONDITION status is returned with ILLEGAL FIELD IN CDB (5/2400h).

WARNING = = WARNING =

If the Capacity Proportion is increased it is possible that a debris dump may exist at the previous logical end of medium. This may cause a defect when attempting to write through that area.

Table 127 — SET CAPACITY MEDIUM FOR USE PROPORTION VALUE and resu	ultant capacity
---	-----------------

Cartridge	Minimum MEDIUM FOR USE PROPORTION VALUE	Resultant Approximate  MEDIUM FOR USE  PROPORTION VALUE	Maximum Capacity
Ultrium 4	123Dh	52 GB	800 GB
Ultrium 5	0FD8h	92 GB	1500 GB
Ultrium 6	0FD8h	154 GB	2500 GB
Ultrium 7	0DEAh	326 GB	6000 GB

Note - Available and total tape capacities are approximate values that may be affected by defects which reduce the actual available capacity of the tape. Other factors, such as compression and block packing, may also affect available capacity.

NOTE 28 - The MEDIUM FOR USE PROPORTION VALUE relates to the physical proportion of the medium that is available for use to record logical objects and is not limited by the maximum number of logical objects that the device server is capable of supporting. This maintains the orthogonality between the volume and the logical unit that exists due to volumes being transferred to logical units that may support a different number of logical objects.

## 5.2.36 SET TIMESTAMP - A4h[0Fh]

The SET TIMESTAMP command is defined in SPC-4 (see the latest version at <a href="http://www.t10.org/drafts.htm#SCSI3">http://www.t10.org/drafts.htm#SCSI3</a> CMNDSETS). This clause decribes the specific implementation.

The SET TIMESTAMP command (see table 128) requests the drive to initialize the timestamp (see 4.14), if the SCSIP bit is set to one or the TCMOS bit is set to one in MP 0Ah[01h]: Control Extension (see 6.6.8 on page 367). If the SCSIP bit is set to zero, the SET TIMESTAMP command is terminated with CHECK CONDITION status, with the sense key set to ILLEGAL REQUEST, and the additional sense code set to INVALID FIELD IN CDB.

Duto	Bit											
Byte	7	6	5	4	3	2	1	0				
0	OPERATION CODE (A4h)											
1		Reserved SERVICE ACTION (0Fh)										
2			Reserved									
5		•		Kest	riveu							
6	(MSB)											
9		•	PARAMETER LIST LENGTH (LSB)									
10		Reserved										
11				Control Byte	(see 5.1.2.3)							

Table 128 — SET TIMESTAMP CDB

The following paramters apply:

 PARAMETER LIST LENGTH: The length in bytes of the SET TIMESTAMP parameters that is transferred from the application client to the device server. A PARAMETER LIST LENGTH of zero indicates that no data is transferred, and that no change is made to the timestamp. Allowed values are 000Ch and 0000h.

#### 5.2.36.1 SET TIMESTAMP Parameter List

The format for the parameter data for the SET TIMESTAMP command is shown in table 129.

Bit **Byte** 7 6 5 4 3 2 1 0 0 Reserved 3 4 (MSB) TIMESTAMP 9 (LSB) 10 Reserved 11

Table 129 — SET TIMESTAMP parameter list format

The definition of the parameters follows:

# Byte Description

0-3 Reserved

4-9 TIMESTAMP: The initial value of the timestamp in the format defined in <u>Device Clocks (see 4.14 on page 58)</u>. The timestamp should be the number of milliseconds that have elapsed since midnight, 1

January 1970 UT. If the high order byte in the TIMESTAMP field is greater than F0h, the command is terminated with CHECK CONDITION status, with the sense key set to ILLEGAL REQUEST, and the additional sense code set to INVALID FIELD IN PARAMETER LIST.

#### 10-11 Reserved

On successful completion of a SET TIMESTAMP command the drive generates a UNIT ATTENTION condition for the initiator port associated with every I\_T nexus except the I\_T nexus on which the SET TIMESTAMP command was received, with the additional sense code set to TIMESTAMP CHANGED.

#### 5.2.37 SPACE (6/16) - 11h/91h

The Space commands are defined in SSC (see the latest version at <a href="http://www.t10.org/drafts.htm#SCSI3">http://www.t10.org/drafts.htm#SCSI3</a> CMNDSETS). This clause decribes the specific implementation.

The Space command is implemented similar to the Locate command, causing the tape to move at maximum speed when appropriate.

Bit **Byte** 7 msb 5 4 0 Isb 6 0 Operation code (11h) 1 Obsolete (LUN) Reserved CODE 2 **MSB** COUNT 4 LSB 5 Control Byte (see 5.1.2.3)

Table 130 — SPACE (6) CDB

The Space(16) command (see table 131), operates identically to the Space(6) command, but allows specifying a Count field up to eight bytes in length.

This command is newly added to the standards. The only exceptions to SSC for this command are that the explicit command set is not supported and the list of values supported in the Code field.

Purto	Bit												
Byte	7 msb	6	5	4	3	2	1	0 lsb					
0	Operation Code (91h)												
1		Reserved CODE											
2				D	eserved								
3				IN.	.eserveu								
4	(MSB)				COUNT								
11					COUNT			(LSB)					
12	(MSB)			DADAMETE	D I ENOTH (000	0h)							
13			PARAMETER LENGTH (0000h)										
14		Reserved											
15				Control B	yte <u>(see 5.1.2.</u>	<u>3)</u>							

Table 131 — SPACE(16) CDB

The following parameters apply:

CODE: Specifies the type of logical objects to be spaced over or the termination point of the operation.

**Value Description** Oh Blocks:

If a filemark is encountered while spacing over logical blocks, the command is terminated. CHECK CONDITION status is returned, and the FILEMARK and VALID bits are set to one in the sense data. The sense key is set to NO SENSE and the additional sense code is set to FILEMARK DETECTED. The INFORMATION field is set to the number of logical objects to be spaced over minus the actual number of logical objects spaced over not including the filemark. The logical position is on the end-of-partition side of the filemark if movement was

in the forward direction and on the beginning-of-partition side of the filemark if movement was in the reverse direction.

1h Filemarks3h End of Dataothers Reserved

 COUNT: A value in two's complement notation specifying the number of logical objects to be spaced over and the direction of movement. If the CODE field is set to 3h (i.e., End-of-data), then the COUNT field is ignored.

When spacing over logical objects, the magnitude of the value in the COUNT field specifies the number of logical objects to be spaced over in the current partition and the sign of the value in the COUNT field specifies the direction of movement.

If the COUNT field contains a positive value N and the CODE field does not contain 3h (i.e., end-of-data) then the device server positions in the forward direction (i.e., toward end-of-partition) over N logical objects ending on the end-of-partition side of the last logical object.

If the COUNT field contains a negative value -N, in two's complement notation, and the CODE field does not contain 3h (i.e., end-of-data) then the device server positions in the reverse direction (i.e., toward beginning-of-partition) over N logical objects ending on the beginning-of-partition side of the last logical object.

If the drive encounters End-of-Data (EOD) while processing this command, the command is terminated at the EOD position and CHECK CONDITION status is returned with associated sense data of 8/0005 (BLANK CHECK, END-OF-DATA DETECTED).

• PARAMETER LENGTH: 0000h

#### **5.2.38 TEST UNIT READY - 00h**

The TEST UNIT READY command is defined in SPC (see the latest version at <a href="http://www.t10.org/drafts.htm#SCSI3">http://www.t10.org/drafts.htm#SCSI3</a> CMNDSETS). This clause decribes the specific implementation.

The TEST UNIT READY command reports when there is a medium in the drive that is ready to accept medium access commands. If a medium is loaded and a problem is detected that does not force the automatic ejection of the medium, GOOD status will still be returned to the TEST UNIT READY command. Whatever error is detected will be returned in response to the next medium access command.

Table 132 — TEST UNIT READY CDB

Byte								
Буге	7 6 5 4 3 2 1							0
0		Operation Code (00h)						
1	Obsolete Reserved							
2		Reserved						
3		Reserved						
4	Reserved							
5		Control Byte (see 5.1.2.3)						

178 IBM LTO SCSI Reference

#### 5.2.39 VERIFY(6) - 13h

The VERIFY command is defined in SSC (see the latest version at <a href="http://www.t10.org/drafts.htm#SCSI3">http://www.t10.org/drafts.htm#SCSI3</a> CMNDSETS). This clause decribes the specific implementation. The VERIFY(6) command (see table 133) requests that the device server verify one or more logical block(s) or one or more logical file(s) beginning at the current logical position. Prior to performing the verify operation, the device server performs a synchronize operation (see 4.2.11).

Puto	Bit								
Byte	7 msb	msb 6 5 4 3 2 1							
0		OPERATION CODE (13h)							
1	Rese	erved	VTE	VLBPM	VBF	IMMED	BYTCMP	FIXED	
2	(MSB)								
4	VERIFICATION LENGTH (LSB)					(LSB)			
5				Control Byte	(see 5.1.2.3)				

Table 133 — VERIFY(6) CDB

The following parameters apply:

- VTE (verify to end-of-data): If the VTE bit is set to zero, then a verify to EOD is not requested.
  - If the VTE bit is set to one, then the expected verification sequence termination condition is met when EOD is encountered. If a filemark is encountered during the sequence, processing continues. If the verify command fails, then the VALID bit and the INFORMATION field of sense data are set to zero. The VBF bit shall be set to zero. The VERIFICATION LENGTH field is ignored.
- VLBPM (verify logical block protection method): This bit has no effect. The result is the same for either setting.
- VBF (verify by filemarks): If the VBF bit is set to zero, then a verify of n filemarks is not requested.

If the VBF bit is set to one, then the expected verification sequence termination condition is met if the number of filemarks specified by the VERIFICATION LENGTH field have been traversed. If a filemark is encountered during the sequence, processing continues. If EOD is encountered, the sense key is set to BLANK CHECK, the EOM bit is set to one if the logical position is at or after early warning, and the additional sense code is set to END-OF-DATA DETECTED. If a verify operation fails, then the verification sequence terminates and the VALID bit is set to one and the INFORMATION FIELD is set to the requested verification length minus the actual number of filemarks successfully traversed. The VTE bit shall be set to zero.

NOTE 29 - Following the completion of a verify with the VBF bit set to one, the application client should issue a READ POSITION command to determine the logical object identifier associated with the current logical position.

 IMMED (immediate): An IMMED bit set to zero specifies the command shall not return status until the verify sequence has completed.

An IMMED bit set to one specifies status shall be returned as soon as the command descriptor block has been validated. Verification sequences that complete unsuccessfully generate deferred sense data indicating the reason for termination (e.g., .an incorrect length logical block is encountered and the sense data is set to indicate an incorrect length block was encountered).

NOTE 30 - In order to ensure that no errors are lost, the application client should set the IMMED bit to zero on the last VERIFY(6) command of a series of VERIFY(6) commands.

- BYTCMP (byte compare): Byte compare is not supported by this device. The BYTCMP bit shall be set to zero
  to specify the verification shall be a verification of logical blocks on the medium (e.g., CRC, ECC). No data
  shall be transferred from the application client to the device server.
- FIXED: If the VTE bit and the VBF bit are set to zero and the FIXED bit is set to one, then the expected verification sequence termination condition is met when the number of logical blocks specified in the VERIFICA-

IBM LTO SCSI Reference

TION LENGTH field have been traversed. If the VERIFICATION LENGTH field is set to zero, then no logical objects are verified and the current logical position is not changed. This condition is not an error. If a file-mark is encountered during the sequence, processing terminates with filemark encountered as specified in the READ(6) command (see 5.2.14). If EOD is encountered, the sense key is set to BLANK CHECK, the EOM bit is set to one if the logical position is at or after early warning, and the additional sense code is set to END-OF-DATA DETECTED. If a verify operation fails, then the verification sequence terminates and the VALID bit is set to one and the INFORMATION FIELD is set to the requested verification length minus the actual number of logical blocks successfully traversed.

If the VTE bit and the VBF bit are set to zero and the FIXED bit is set to zero, then the expected verification sequence termination condition is met when one logical block has been traversed. The length of the verified logical block is equal to the value specified in the VERIFICATION LENGTH field. If the VERIFICATION LENGTH field is set to zero, then no logical objects are verified and the current logical position is not changed. This condition is not considered an error. If a filemark is encountered during the sequence, processing terminates with filemark encountered as specified in the READ(6) command (see 5.2.14). If EOD is encountered, the sense key is set to BLANK CHECK, the EOM bit is set to one if the logical position is at or after early warning, and the additional sense code is set to END-OF-DATA DETECTED. If a verify operation fails, then the verification sequence terminates and the VALID bit is set to one and the INFORMATION FIELD is set to the requested verification length minus the actual number of bytes successfully traversed.

A FIXED bit set to zero and either the VTE bit set to one or the VBF bit set to one specifies that the block length shall not be checked.

A FIXED bit set to one specifies that the length of verified logical blocks shall be equal to the the current block length reported in the mode parameters block descriptor. Refer to the READ(6) command (see 5.2.14) for a description of the FIXED bit and any error conditions that may result from incorrect usage.

 VERIFICATION LENGTH: The VERIFICATION LENGTH field specifies the number of bytes, logical blocks, or filemarks to traverse during verification, as specified by the VBF bit and the FIXED bit. If the VTE bit is set to one, then the VERIFICATION LENGTH field is ignored. If the VERIFICATION LENGTH field is set to zero and the VTE bit is set to zero, then no logical objects are verified and the current logical position is not changed. This condition is not considered an error.

General Read-Type Handling (see 4.9.1 on page 43) provides additional information.

#### 5.2.40 WRITE - 0Ah

The WRITE command is defined in SSC (see the latest version at <a href="http://www.t10.org/drafts.htm#SCSI3">http://www.t10.org/drafts.htm#SCSI3</a> CMNDSETS). This clause decribes the specific implementation.

Table 134 — WRITE CDB

Puto		Bit							
Byte	7 msb	7 msb 6 5 4 3 2 1							
0		OPERATION CODE (0Ah)							
1	Obsolete (LUN) Reserved					erved		FIXED	
2	MSB								
4		TRANSFER LENGTH LSB					LSB		
5				Control Byte	(see 5.1.2.3)	)			

The following parameters apply:

- FIXED (see 4.8)
- TRANSFER LENGTH (see 4.8)

See Data Transfer, Block Limits, and Fixed Block Option (see 4.8 on page 42) for rules on EOM processing.

#### 5.2.41 WRITE ATTRIBUTE - 8Dh

The WRITE ATTRIBUTE command is defined in SPC-4 (see the latest version at <a href="http://www.t10.org/drafts.htm#SCSI3">http://www.t10.org/drafts.htm#SCSI3</a> CMNDSETS). This clause decribes the specific implementation.

The WRITE ATTRIBUTE command (see table 135) allows an application client to write attributes to medium auxiliary memory. The READ ATTRIBUTE command (see 5.2.13) is used to read these attribute. Application clients should issue READ ATTRIBUTE commands prior to using this command to discover device server support for medium auxiliary memory.

Table 135 — WRITE ATTRIBUTE CDB

Bit Byte	7	6	5	4	3	2	1	0
0		OPERATION CODE (8Dh)						
1		Reserved						
2								
4		Reserved ————						
5	VOLUME NUMBER (00h)							
6	Reserved							
7		PARTITION NUMBER						
8				Rese	nryod			
9				Kese	riveu			
10	(MSB)			DADAMETED	LIST LENGTH			
13			PARAMETER LIST LENGTH (I				(LSB)	
14				Rese	erved			
15	Control Byte (see 5.1.2.3)							

The following parameters apply:

#### Byte Description

0 OPERATION CODE (8Dh)

1

#### Bit Description

7-1 Reserved

1b

0 WTC - Write-through cache

#### Value Description

Ob The attributes in the parameter list may be cached.

The attributes in the parameter list shall be synchronized with the medium auxiliary memory during the processing of the WRITE ATTRIBUTE command and GOOD status shall not be returned until the attributes have been synchronized

with the medium auxiliary memory.

- 2-4 Reserved
- 5 VOLUME NUMBER (00h)
- 6 Reserved
- 7 PARTITION NUMBER The number of the partition to which these attributes belong. This shall be zero if there is only one partition on the volume.
- 8-9 Reserved
- 10-13 PARAMETER LIST LENGTH The length in bytes of the parameter list contained in the Data-Out Buffer. A parameter list length of zero specifies that no parameter data is present; this shall not be considered an error. If the parameter list length results in the truncation of an attribute, the WRITE ATTRIBUTE

command is terminated with CHECK CONDITION status, with the sense key set to ILLEGAL REQUEST, and the additional sense code set to PARAMETER LIST LENGTH ERROR.

- 14 Reserved
- 15 CONTROL (see 5.1.2.3)

The parameter list shall have the format shown in <u>table 136</u>. Attributes shall be sent in ascending numerical order. If the attributes are not in order, then no attributes are changed and the WRITE ATTRIBUTE command is terminated with CHECK CONDITION status, with the sense key set to ILLEGAL REQUEST, and the additional sense code set to INVALID FIELD IN PARAMETER LIST.

Bit 7 5 3 2 1 6 4 0 Byte 0 (MSB) PARAMETER DATA LENGTH (n-3) 3 (LSB) Attribute(s) 4 Attribute 0 (see 6.5) : Attribute x (see 6.5)

Table 136 — WRITE ATTRIBUTE parameter list format

The PARAMETER DATA LENGTH field should contain the number of bytes of attribute data and shall be ignored by the device server.

The format of the attributes is described in READ ATTRIBUTE - 8Ch (see 5.2.15 on page 107).

If there is not enough space to write the attributes to the medium auxiliary memory, then no attributes shall be changed and the WRITE ATTRIBUTE command shall be terminated with CHECK CONDITION status, with the sense key set to ILLEGAL REQUEST, and the additional sense code set to AUXILIARY MEMORY OUT OF SPACE.

If the medium auxiliary memory is not accessible because there is no medium present, then no attributes shall be changed and the WRITE ATTRIBUTE command shall be terminated with CHECK CONDITION status, with the sense key set to NOT READY, and the additional sense code set to MEDIUM NOT PRESENT.

If the medium is present but the medium auxiliary memory is not accessible, then no attributes shall be changed and the WRITE ATTRIBUTE command shall be terminated with CHECK CONDITION status, with the sense key set to MEDIUM ERROR, and the additional sense code set to LOGICAL UNIT NOT READY, AUXILIARY MEMORY NOT ACCESSIBLE.

If the medium auxiliary memory is not operational (e.g., bad checksum), the WRITE ATTRIBUTE command shall be terminated with CHECK CONDITION status, with the sense key set to MEDIUM ERROR, and the additional sense code set to AUXILIARY MEMORY WRITE ERROR.

If the WRITE ATTRIBUTE command parameter data contains an attribute with an ATTRIBUTE LENGTH field set to zero, then one of the following actions shall occur:

- a) if the attribute state is unsupported or read only (see 4.17), then no attributes shall be changed and the WRITE ATTRIBUTE command shall be terminated with CHECK CONDITION status, with the sense key set to ILLEGAL REQUEST, and the additional sense code set to INVALID FIELD IN PARAMETER LIST;
- if the attribute state is read/write, the attribute shall be changed to the nonexistent state. This attribute shall not be returned in response to a READ ATTRIBUTE command and not be reported by the READ ATTRIBUTE command with ATTRIBUTE LIST service action; or
- c) if the attribute state is nonexistent, the attribute in the WRITE ATTRIBUTE command parameter list shall be ignored; this shall not be considered an error.

No attributes shall be changed, the WRITE ATTRIBUTE command shall be terminated with CHECK CONDITION status, with the sense key set to ILLEGAL REQUEST, and the additional sense code set to INVALID FIELD IN PARAMETER LIST if the parameter data contains any of the following:

- a) an attempt to change an attribute in the read only state;
- b) an attribute with incorrect ATTRIBUTE LENGTH field contents; or
- c) an attribute with unsupported ATTRIBUTE VALUE field contents.

#### 5.2.41 WRITE BUFFER - 3Bh

The Write Buffer command is defined in SPC (see the latest version at <a href="http://www.t10.org/drafts.htm#SCSI3">http://www.t10.org/drafts.htm#SCSI3</a> CMNDSETS). This clause describes the specific implementation.

The Write Buffer command is supported, but not all buffers are described in this document because most buffers are intended only to be written by the service representative or by manufacturing. OEM customers who intend to support host microcode download on a new platform should contact IBM for a complete description of the Write Buffer command for this purpose. Note that new microcode may also be loaded without requiring the use of the SCSI Write Buffer command, by using the Field Microcode Replacement (FMR) tape process described in the maintenance information manual for this product. See <u>Supported Buffers when the mode field is 00h through 07h, 0Dh, or 0Fh (see 6.7.1 on page 413)</u> for a list of the buffers supported by the drive. <u>Table 137</u> shows the command format.

Dirto		Bit								
Byte	7 msb	6	6 5 4 3 2 1							
0		OPERATION CODE (3Bh)								
1	ı	MODE SPECIFIC MODE								
2		BUFFER ID								
3	(MSB)			BUFFER	OFFOFT					
5		-		DUFFER	OFFSET			(LSB)		
6	(MSB)			DADAMETED	LICT LENGTH					
8		PARAMETER LIST LENGTH (LSB)					(LSB)			
9				Control Byte	(see 5.1.2.3)					

Table 137 — WRITE BUFFER CDB

The following parameters apply:

5

 MODE SPECIFIC: This field is valid for mode[0Dh] – Download microcode with offsets, select activation, save, and defer activate mode (see 5.2.41.8 on page 187) only. It is Reserved for other modes.

# Bit Description Po\_ACT (1b): Activate on Power On reset is required to be set to 1b, since deferred microcode always activates on power on reset. HR\_ACT (0b): Activate on Hard Reset is required to be set to 0b, since deferred microcode does not activate on a hard reset.

Value	Description
0b	Do not set deferred microcode to be activated on medium removal (i.e., MPRSNT bit of VHF data transitions from 1b to 0b)
1b	Set deferred microcode to be activated on medium removal (i.e., MPRSNT bit of VHF data transitions from 1b to 0b). On control path drives (i.e., LUN 1 is enabled) this setting is allowed and ignored (i.e., an explicit activate with the mode field set 0Fh or a power on reset is required to activate the deferred microcode).

MODE:

Value	Description
00h	MODE[00h] - Combined header and data (see 5.2.41.1 on page 186): the header is required to
	be all zeroes.
02h	MODE[02h] - Data (see 5.2.41.2 on page 186).
04h	MODE[04h] - Download microcode and activate (see 5.2.41.3 on page 186).
05h	MODE[05h] - Download microcode, save, and activate (see 5.2.41.4 on page 187).
06h	MODE[06h] - Download microcode with offsets and activate (see 5.2.41.5 on page 187): use of
	strictly increasing offsets is required.
07h	MODE[07h] - Download microcode with offsets, save, and activate (see 5.2.41.6 on page 187):
	use of strictly increasing offsets is required.
0Ah	MODE[0Ah] – Write data to echo buffer (see 5.2.41.7 on page 187).
0Dh	mode[0Dh] – Download microcode with offsets, select activation, save, and defer activate mode
	(see 5.2.41.8 on page 187): use of strictly increasing offsets is required.
0Eh	Not Supported.
0Fh	mode[0Fh] – Activate deferred microcode mode (see 5.2.41.9 on page 187).

- BUFFER ID: This field is ignored if MODE field is set to 04h, 05h, 06h, 07h, 0Dh, or 0Fh. The supported buffers are described in <u>Supported Buffers when the mode field is 00h through 07h, 0Dh, or 0Fh (see 6.7.1 on page 413)</u>. If an unsupported buffer ID code is selected, the command is terminated with CHECK CONDITION status, with the sense key set to ILLEGAL REQUEST, and the additional sense code set to INVALID FIELD IN CDB (5/2400h).
- BUFFER OFFSET: The relative byte location within the buffer to write the data transferred by this command.
- PARAMETER LIST LENGTH: If the BUFFER OFFSET and PARAMETER LIST LENGTH fields specify a transfer in
  excess of the buffer capacity, then the command is terminated with CHECK CONDITION status, with the
  sense key set to ILLEGAL REQUEST, and the additional sense code set to INVALID FIELD IN CDB
  (5/2400h).

<u>Supported Buffers when the mode field is 00h through 07h, 0Dh, or 0Fh (see 6.7.1 on page 413)</u> describes the supported Buffer ID's.

#### 5.2.41.1 MODE[00h] - Combined header and data

In this mode, data to be transferred is preceded by a four-byte header. The four-byte header consists of all reserved bytes.

The MODE SPECIFIC field is reserved.

The PARAMETER LIST LENGTH field is as specified in the *The following parameters apply* description above.

#### 5.2.41.2 MODE[02h] - Data

In this mode, the Data-Out Buffer contains buffer data destined for the device. The BUFFER ID field identifies a specific buffer within the device. If an unsupported buffer ID code is selected, the command is terminated with CHECK CONDITION status, with the sense key set to ILLEGAL REQUEST, and the additional sense code set to INVALID FIELD IN CDB (5/2400h).

The MODE SPECIFIC field is reserved.

The BUFFER OFFSET field and PARAMETER LIST LENGTH field are as specified in the *The following parameters apply* description above.

#### 5.2.41.3 MODE[04h] - Download microcode and activate

This mode is the same as MODE[07h] – Download microcode with offsets, save, and activate (see 5.2.41.6 on page 187).

#### 5.2.41.4 MODE[05h] - Download microcode, save, and activate

This mode is the same as MODE[07h] – Download microcode with offsets, save, and activate (see 5.2.41.6 on page 187).

#### 5.2.41.5 MODE[06h] - Download microcode with offsets and activate

This mode is the same as MODE[07h] – Download microcode with offsets, save, and activate (see 5.2.41.6 on page 187).

#### 5.2.41.6 MODE[07h] - Download microcode with offsets, save, and activate

In this mode, microcode is transferred to the device, saved to nonvolatile storage, and activated.

The MODE SPECIFIC field is reserved.

The BUFFER ID field is ignored.

The BUFFER OFFSET field and PARAMETER LIST LENGTH field are as specified in the *The following parameters apply* description above.

# 5.2.41.7 MODE[0Ah] - Write data to echo buffer

In this mode the device transfers data from the application client and stores it in an echo buffer. An echo buffer is assigned in the same manner by the device as it would for a write operation.

The BUFFER ID and BUFFER OFFSET fields are ignored in this mode.

Upon successful completion of a WRITE BUFFER command the data is preserved in the echo buffer unless there is an intervening command in which case the data may be changed.

The PARAMETER LIST LENGTH field is as specified in the *The following parameters apply* description above.

#### 5.2.41.8 MODE[0Dh] - Download microcode with offsets, select activation, save, and defer activate mode

In this mode, microcode is transferred to the device server using one or more WRITE BUFFER commands, saved to nonvolatile storage, and considered deferred. The deferred microcode is activated if a WRITE BUFFER command with the activate deferred microcode mode (0Fh) is processed (see 6.49.11).

The MODE SPECIFIC field (see page <u>185</u>) specifies additional events that may be selected to activate the deferred microcode.

The BUFFER ID field, BUFFER OFFSET field, and PARAMETER LIST LENGTH field are defined in MODE[07h] – Download microcode with offsets, save, and activate (see 5.2.41.6 on page 187).

## 5.2.41.9 MODE[0Fh] - Activate deferred microcode mode

In this mode, deferred microcode is activated.

The MODE SPECIFIC field is reserved.

The the BUFFER ID field, the BUFFER OFFSET field, and the PARAMETER LIST LENGTH field are ignored.

If there is no deferred microcode the WRITE BUFFER command is terminated with CHECK CONDITION status, with the sense key set to ILLEGAL REQUEST, and the additional sense code set to COMMAND SEQUENCE ERROR (5/2C00h).

IBM LTO SCSI Reference 187

#### 5.2.42 WRITE DYNAMIC RUNTIME ATTRIBUTE - D2h

The WRITE DYNAMIC RUNTIME ATTRIBUTE command has the format in table 138.

Table 138 — WRITE DYNAMIC RUNTIME ATTRIBUTE CDB

Bit Byte	7	6	5	4	3	2	1	0
0		OPERATION CODE (D2h)						
1								
		•		Rese	erved			
5								
6	(MSB)							
		•		PARAMETER	LIST LENGTH			
9								(LSB)
10				Rese	erved			
11				Cor	ntrol			

## 5.2.42.1 WRITE DYNAMIC RUNTIME ATTRIBUTE parameter list

The parameter list shall have the format shown in <u>table 139</u>. Attributes that may be changed in a WRITE DYNAMIC RUNTIME ATTRIBUTE command are the initiator type attributes listed in <u>6.1.2.4</u>.

Table 139 — WRITE DYNAMIC RUNTIME ATTRIBUTE parameter list

Bit Byte	7	6	5	4	3	2	1	0
0		_						
•••				Rese	RVED			
7								
		Attribute(s) (see 6.1)						
8								
				Attribute 0	(see 6.1.1)			
•••		-		Attribute x	(see 6.1.1)			
n								

If an attribute that is not an initiator type is sent in the list of attributes, then this shall not be considered an error, the attribute shall be ignored, and the remaining attributes shall be processed normally.

The device server shall process attributes in the order received. Attributes shall be sent in ascending order by attribute identifier. If the attributes are not in order, then no attributes shall be changed and the WRITE DYNAMIC RUNTIME ATTRIBUTE command shall be terminated with CHECK CONDITION status, with the sense key set to ILLEGAL REQUEST, and the additional sense code set to INVALID FIELD IN PARAMETER LIST.

If an attribute that requires creation of that attribute is sent in the list of attributes and there are no available resources to create that attribute, then all attributes for which there are resources shall be changed and the WRITE DYNAMIC RUNTIME ATTRIBUTE command shall be terminated with a CHECK CONDITION with the sense code set to RECOVERED ERROR and the additional sense code set to INSUFFICIENT RESOURCES (i.e., 1h / 5503h).

188 IBM LTO SCSI Reference

If the WRITE DYNAMIC RUNTIME ATTRIBUTE command parameter data contains an attribute with an ATTRIBUTE LENGTH field (see 6.1.1) set to zero, then one of the following actions shall occur:

- a) if the attribute state is unsupported or read only (see 6.1.1), then the attribute shall not be changed and the WRITE DYNAMIC RUNTIME ATTRIBUTE command shall continue processing normally; this shall not be considered an error:
- b) if the attribute state is read/write, the attribute shall be changed to the nonexistent state. This attribute shall not be returned in response to a READ DYNAMIC RUNTIME ATTRIBUTE command; or
- c) if the attribute state is nonexistent, the attribute in the WRITE ATTRIBUTE command parameter list shall be ignored; this shall not be considered an error.

If the WRITE DYNAMIC RUNTIME ATTRIBUTE command parameter data contains an attribute with an ATTRIBUTE LENGTH set to a non-zero value other than that specified in <u>6.1.2.4</u>, then one of the following actions shall occur:

- a) if the FORMAT is not ASCII, then the attribute shall be ignored; or
- b) if the FORMAT is ASCII, then the attribute shall be:
  - A) truncated to the length specified in <u>6.1.2.4</u>; or
  - B) ignored.

If the parameter list length results in the truncation of an attribute, the command shall be processed normally but the truncated attribute shall be ignored.

#### 5.2.43 WRITE FILEMARKS - 10h

The Write Filemarks command is defined in SSC (see the latest version at <a href="http://www.t10.org/drafts.htm#SCSI3">http://www.t10.org/drafts.htm#SCSI3</a> CMNDSETS). This clause decribes the specific implementation.

Table 140 — WRITE FILEMARKS CDB

Duto		Bit								
Byte	7 msb 6 5 4 3 2 1 0 I									
0		OPERATION CODE (10h)								
1	Obsolete Reserved Obsolete IMM						IMMED			
2	(MSB)			EII EMADI	/ COUNT					
4		FILEMARK COUNT (LSB)						(LSB)		
5				Control Byte	(see 5.1.2.3)					

The following parameters apply:

• IMMED (Immediate):

Value	Description
0b	present status when command is completed.
1b	present status when command is verified.

• FILEMARK COUNT: The number of filemarks to be written.

The initiator may issue a WRITE FILEMARKS command with the IMMED bit set to 0b and the FILEMARK COUNT set to zero to ensure that all buffered data and filemarks are successfully written to the medium (synchronized).

See <u>Data Transfer</u>, <u>Block Limits</u>, <u>and Fixed Block Option</u> (see 4.8 on page 42) for rules on EOM processing.

A WRITE FILEMARK with FILEMARK COUNT set to zero when there is no data in the buffer to be synchronized always returns GOOD Status even if the volume is a WORM volume and:

- a) the media is not at a writable location; or
- b) the WORM volume has been tampered with.

On eServer enabled drives, the msb of the vendor specific field in the control byte (i.e., bit 7) is ignored.

# 6. Parameters for SCSI Commands

This clause describes the parameters used in SCSI commands that are supported on LUN 0.

Parameters are described in a "term-definition" format. In this format, the bits or bytes to be described are highlighted and listed on the left. The definition for the bits or bytes is to the right (not highlighted).

The following is a list of abbreviations used to describe the various parameters referenced in this document as well as a reference to the parameter clause in which those specific parameters are defined:

Description
Diagnostic Parameters (Diag) (see 6.2 on page 200)
Inquiry Vital Product Data Parameters (IP) (see 6.3 on page 233)
Log Parameters (LP) (see 6.4 on page 262)
Medium auxiliary memory attributes (MAM) (see 6.5 on page 347)
Mode Parameters (MP) (see 6.6 on page 356)
Read/Write Buffers (RB) (see 6.7 on page 413)
Security Protocol Parameters (SPP) (see 6.8 on page 427)

# 6.1 Dynamic runtime attributes (DRA)

#### 6.1.1 Attribute format

Each dynamic runtime attribute shall be communicated between the application client and device server in the format shown in <u>table 141</u>. This format shall be used in the parameter data for the WRITE DYNAMIC RUNTIME ATTRIBUTE command (see 5.2.42) and the READ DYNAMIC RUNTIME ATTRIBUTE command (see 5.2.18). The attribute format in this standard implies nothing about the physical representation of an attribute in memory.

Bit Byte	7	6	5	4	3	2	1	0
0	(MSB)	L T NEW LO INDEX						
1		I_T NEXUS INDEX						(LSB)
2	(MSB)		ATTRIBUTE IDENTIFIER					
3								(LSB)
4	READ ONLY	Reserved				FORMAT		
5	(MSB)							
•••		ATTRIBUTE LENGTH (n-8)						
8								(LSB)
9								
•••				ATTRIBUTE VA	ALUE			
n								

Table 141 — DRA ATTRIBUTE format

The I\_T NEXUS INDEX field contains an index associated to the I\_T\_L nexus by the device server. How the I\_T nexus index is maintained is not specified by this standard. The I\_T nexus index association may change from one command to another. On a read the value of 0000h in the I\_T NEXUS INDEX field indicates that there is no I\_T\_L nexus associated with the attribute specified by the ATTRIBUTE IDENTIFIER field. The device server shall set the I\_T NEXUS INDEX field to 0000h in the logical unit type attributes. On a write the I\_T NEXUS INDEX field should be set to 0000h by the application client and the device server shall ignore the value and fill in the I\_T NEXUS INDEX field of the stored attribute with the value of the associated I\_T\_L nexus through which the command arrived. A value of FFFFh is reserved.

The ATTRIBUTE IDENTIFIER field contains a code value identifying the attribute (see 6.1.2).

The READ ONLY bit indicates whether the attribute is in the read only state (see 6.1.1). If an attribute is not in the non-existent state or the unsupported state and the READ ONLY bit is set to one, the attribute is in the Read Only state. If an attribute is not in the non-existent state or the unsupported state and the READ ONLY bit is set to zero, then the attribute is in the Read/Write state.

The FORMAT field (see table 142) specifies the format of the data in the ATTRIBUTE VALUE field.

Format	Name	Description
00b	BINARY	The ATTRIBUTE VALUE field contains binary data.
01b	ASCII	The ATTRIBUTE VALUE field contains left-aligned ASCII data (see 4.4.1).
10b-11b		Reserved

Table 142 — DRA attribute FORMAT field

The ATTRIBUTE LENGTH field specifies the length in bytes of the ATTRIBUTE VALUE field. If the ATTRIBUTE LENGTH field is set to zero, then there is no ATTRIBUTE VALUE field.

The ATTRIBUTE VALUE field contains the current value, for the READ DYNAMIC RUNTIME ATTRIBUTE command (see 5.2.18), or intended value, for the WRITE DYNAMIC RUNTIME ATTRIBUTE command (see 5.2.42), of the attribute (see 6.1.2).

#### 6.1.2 Attribute identifier values

#### 6.1.2.1 Attribute identifier values overview

The values in the ATTRIBUTE IDENTIFIER field (see 6.1.1) are assigned according to the attribute type (see 6.1) (see table 143).

Attribute Identifiers	Attribute Type	Subclause	
0000h to 07FFh	Logical unit	6.1.2.2	
1000h to 13FFh	Target	<u>6.1.2.3</u>	
1800h to 1BFFh	Initiator	<u>6.1.2.4</u>	
others	Reserved		

Table 143 — DRA attribute identifier range assignments

Devices that support this feature accept and process a WRITE DYNAMIC RUNTIME ATTRIBUTE command containing Initiator type attribute identifier values (i.e., 1800h to 1BFFh)and may be checked as described in 6.1.2.4.

#### 6.1.2.2 Logical unit type attributes

Logical unit type attributes (see table 144) shall be maintained and updated by the device server. All supported logical unit type attributes shall have a status of read only (see 6.1).

Attribute Identifier	Name	Attribute Length (in bytes)	Format	Subclause
0000h	Number of I_T nexuses supported by the Dynamic Runtime Attributes	2	BINARY	6.1.2.2.2
0001h	Timestamp when processed	12	BINARY	<u>6.1.2.2.3</u>
0010h	Reservation Information	V	BINARY	6.1.2.2.4
0011h	Registration Information	٧	BINARY	<u>6.1.2.2.5</u>
0012h	Prevent Allow Medium Removal Information	V	BINARY	<u>6.1.2.2.6</u>
0013h	Last failed reservation	V	BINARY	<u>6.1.2.2.7</u>
others	Reserved			

Table 144 — DRA Logical unit type attributes

## 6.1.2.2.1 I\_T\_L nexus identifying information descriptor

Attributes may contain one or more I\_T\_L nexus identifying information descriptors. The format of the I\_T\_L nexus identifying information descriptor is defined in <u>table 145</u>.

Table 145 — DRA I\_T\_L nexus identifying information format

Bit Byte	7	6	5	4	3	2	1	0				
0												
		I_	_T_L NEXUS	IDENTIFYING	INFORMATION	N LENGTH (n-	3)					
3												
4	(MSB)											
			TIMESTAN	MP PARAMET	ER DATA LEN	GTH (0Ah)						
5								(LSB)				
6			Reserved			TIM	MESTAMP OR	IGIN				
7		Reserved										
8	(MSB)											
			,	ATTRIBUTE C	REATION TIM	E						
13								(LSB)				
14				Res	erved							
15				Res	erved							
16		_										
			TARGET T	YPE ATTRIBU	TES LIST LEN	IGTH (x-19)						
19												
			Targe	et type attribu	tes(s) <u>(see 6.</u>	1.2.3)						
20												
				Target type a	ttributes [first	]						
		-		Target type a	ittributes [last	1						
x				951.1765.5		1						
x+1												
			INITIATOR TY	/PE ATTRIBU	TES LIST LEN	GTH (n-(x+4))	)					
x+4												
_			Initiat	or type attribi	utes(s) <u>(see 6</u>	.1.2.4)						
x+5		<u>-</u>			-	_						
				Initiator type	attributes [firs	t]						
		-	I	nititator type	attributes [las	t]						
n												

The I\_T\_L NEXUS IDENTIFYING INFORMATION LENGTH field specifies the amount of data to follow.

The TIMESTAMP PARAMETER DATA LENGTH field specifies the number of following bytes used for the timestamp.

The TIMESTAMP ORIGIN field is defined in <u>Device Clocks (see 4.14 on page 58)</u>.

The ATTRIBUTE CREATION TIME field contains the timestamp value (see 5.14) expressed in milliseconds when the attribute was created.

The TARGET TYPE ATTRIBUTES LIST LENGTH field specifies the length of the following target type attributes.

The target type attributes shall be listed in order by I\_T NEXUS INDEX and ATTRIBUTE IDENTIFIER. The I\_T NEXUS INDEX in this list is from the time the attribute was created and may be a different value than the I\_T NEXUS INDEX associated with this I\_T nexus at the time the READ DYNAMIC RUNTIME ATTRIBUTE is processed.

The INITIATOR TYPE ATTRIBUTES LIST LENGTH field specifies the length of the following initiator type attributes.

The initiator type attributes shall be listed in order by I\_T NEXUS INDEX and ATTRIBUTE IDENTIFIER. The I\_T NEXUS INDEX in this list is from the time the attribute was created and may be a different value than the I\_T NEXUS INDEX associated with this I\_T nexus at the time the READ DYNAMIC RUNTIME ATTRIBUTE is processed.

- **6.1.2.2.2 Number of I\_T nexuses supported by dynamic runtime attributes:** Indicates the maximum number of instances of target type attributes and initiator type attributes.
- **6.1.2.2.3 Timestamp when processed:** Timestamp when the READ DYNAMIC RUNTIME ATTRIBUTE command that returns this attribute is processed. The DYNAMIC RUNTIME ATTRIBUTE VALUE field of the timestamp when processed attribute format is the value that would be returned by the REPORT TIMESTAMP parameter data format (see 6.28).
- **6.1.2.2.4 Reservation Information attribute:** The DYNAMIC RUNTIME ATTRIBUTE VALUE field of the Reservation Information attribute is the list of I\_T\_L nexus identifying information for each I\_T\_L nexus that is a reservation holder. The DYNAMIC RUNTIME ATTRIBUTE VALUE field of the Reservation Information attribute is shown in table 146.

Bit 5 7 6 4 3 2 1 0 Byte **RESERVATION TYPE** 1 Reserved I\_T\_L nexus identifying information descriptor(s) (see 6.1.2.2.1) 2 I\_T\_L nexus identifying information (see 6.1.2.2.1) (first) m Х I\_T\_L nexus identifying information (see 6.1.2.2.1) (last)

Table 146 — Reservation Information Dynamic Runtime Attribute value format

The RESERVATION TYPE field shall contain the reservation type as defined in <u>table 147</u>.

Code **Reservation Type** Persistent Reservations are in the range 00h - 0Fh 00h Persistent Reserve - Obsolete 01h Persistent Reserve - Write Exclusive 02h Persistent Reserve - Obsolete Persistent Reserve - Exclusive Access 03h 04h Persistent Reserve - Obsolete 05h Persistent Reserve - Write Exclusive - Registrants Only 06h Persistent Reserve - Exclusive Access - Registrants Only 07h Persistent Reserve - Write Exclusive - All Registrants 08h Persistent Reserve - Exclusive Access - All Registrants 09h - 0Fh Persistent Reserve - Reserved SPC-2 Reserve 10h 11h - FFh Reserved

Table 147 — DRA RESERVATION TYPE values

Each I\_T\_L nexus identifying information descriptor is a snapshot of the I\_T\_L nexus identifying information for an I\_T\_L nexus when a reservation is created by that I\_T\_L nexus or when that I\_T\_L nexus joins the reservation as a reservation holder. The Reservation Information attribute is created and an I\_T\_L nexus identifying information descriptor is created and added to the list when an I\_T\_L nexus reserves the logical unit with a PERSISTENT RESERVE OUT command or an SPC-2 RESERVE. Other I\_T\_L nexus identifying information descriptors are created for each I\_T\_L nexus that is a reservation holder, if any. This may be due to receipt of a PERSISTENT RESERVE OUT command or due to already registered I\_T\_L nexuses when an ALL REGISTRANTS type reseration is created. When an I\_T\_L nexus is no longer a reservation holder either due to the receipt of a PERSISTENT RESERVE OUT command to unregister the I\_T\_L nexus or the removal of the reservation holder as a side effect to some event that occurs (e.g., PREEMPT) the I\_T\_L nexus identifying information descriptor related to that I\_T\_L nexus shall be removed from the list. When the last I\_T\_L nexus identifying information descriptor has been removed and the reservation is removed the Reservation Information attribute shall be destroyed.

**6.1.2.2.5 Registration Information attribute:** The DYNAMIC RUNTIME ATTRIBUTE VALUE field of the Registration Information dynamic runtime attribute contains the list of I\_T\_L nexus identifying information descriptors for each I\_T\_L nexus that is registered for a persistent reservation. The DYNAMIC RUNTIME ATTRIBUTE VALUE field of the Registration Information dynamic runtime attribute is shown in <u>table 148</u>.

Bit 7 6 5 4 3 2 1 0 **Byte** 0 I\_T\_L nexus identifying information (see 6.1.2.2.1) (first) ... m Х I\_T\_L nexus identifying information (see 6.1.2.2.1) (last)

Table 148 — Registration Information Dynamic Runtime Attribute value format

Each I\_T\_L nexus identifying information descriptor is created and added to the list when an I\_T\_L nexus registers with a PERSISTENT RESERVE OUT command. When an I\_T\_L nexus is no longer registered either

due to a PERSISTENT RESERVE OUT command is recieved to unregister or the registration is removed as a side effect to some event that occurs the I\_T\_L nexus identifying information descriptor related to that I\_T\_L nexus shall be removed from the list. When the last I\_T\_L nexus identifying information descriptor has been removed the Registration Information attribute shall be destroyed.

**6.1.2.2.6 Prevent Allow Medium Removal Information attribute:** The DYNAMIC RUNTIME ATTRIBUTE VALUE field of the Prevent Allow Medium Removal Information attribute is the list of I\_T\_L nexus identifying information for each I\_T\_L nexus that has prevented media removal. The DYNAMIC RUNTIME ATTRIBUTE VALUE field of the Prevent Allow Medium Removal Information attribute is shown in table 149.

Table 149 — Prevent Allow Medium Removal Information Dynamic Runtime Attribute value format

Bit Byte	7	6	5	4	3	2	1	0				
0												
		I_T_L nexus identifying information (see 6.1.2.2.1) (first)										
m												
	:											
Х												
		I_T_L nexus identifying information (see 6.1.2.2.1) (last)										
у												

Each I\_T\_L nexus identifying information descriptor is created and added to the list when a volume's removal is prevented due to a PREVENT ALLOW MEDIUM REMOVAL command received from that I\_T\_L nexus identifying information (i.e., the ATTRIBUTE CREATION TIME field is set to the time the PREVENT ALLOW REMOVAL command with the PREVENT bit set to one is received through that I\_T\_L nexus.) When an I\_T\_L nexus no longer prevents medium removal (e.g., a PREVENT ALLOW MEDIUM REMOVAL command with the PREVENT bit set to zero is received through that I\_T\_L nexus) the I\_T\_L nexus identifying information descriptor related to that I\_T\_L nexus shall be removed from the list. When the last I\_T\_L nexus identifying information descriptor has been removed from the list the Prevent Allow Medium Removal Information attribute shall be destroyed.

**6.1.2.2.7 Last failed reservation attribute:** Indicates the I\_T\_L nexus that last failed to get a reservation due to a reservation conflict. The DYNAMIC RUNTIME ATTRIBUTE VALUE field of the Last failed reservation attribute contains the I\_T\_L nexus identifying information (see 6.1.2.2.1) for the I\_T\_L nexus that last received a RESERVATION CONFLICT to one of the following commands:

- a) PERSISTENT RESERVE OUT;
- b) PERSISTENT RESERVE IN;
- c) RESERVE (see SPC-2); and
- d) RELEASE (see SPC-2).

#### 6.1.2.3 Target type attributes

Target type attributes <u>(see table 150)</u> shall be maintained and updated by the device server. All supported target type attributes shall have a status of read only <u>(see 6.1)</u>..

Table 150 — DRA Target type attributes

Attribute Identifier	Name	Attribute Length (in bytes)	Format	Subclause
1000h	TransportID	24	BINARY	<u>6.1.2.3.1</u>
1001h	Target port ID (relative port identifier)	2	BINARY	6.1.2.3.2
1002h	Last access time	12	BINARY	6.1.2.3.3
1003h to 13FFh	Reserved			
V - Variable				

- **6.1.2.3.1 TransportID:** Indicates the TransportID of the initiator port associated with this I\_T\_L nexus.
- **6.1.2.3.2 Target port ID:** Indicates the relative target port identifier of the target port associated with this I\_T\_L nexus.
- **6.1.2.3.3 Last access time:** Time of most recent command that effects the volume received through this I\_T\_L nexus.

Table 151 — DRA Last access time format

Bit Byte	7	6	5	4	3	2	1	0			
0	(MSB)	_	TIMESTAMP PARAMETER DATA LENGTH (0Ah) (LSB)								
1											
2		Reserved TIMESTAMP ORIGIN									
3		Reserved									
4	(MSB)										
				ACCES	S TIME						
9		(LSB)									
10		Reserved									
11				Res	erved						

The TIMESTAMP ORIGIN FIELD contains the origin of the timestamp used in the ACCESS TIME field.

The ACCESS TIME field contains the timestamp value when the most recent command was received through this I\_T\_L nexus that is not in the following list:

- a) INQUIRY;
- b) LOG SENSE;
- c) MODE SENSE;
- d) READ DYNAMIC RUNTIME ATTRIBUTE;
- e) PERSISTENT RESERVE IN;
- f) REPORT LUNS;
- g) REQUEST SENSE; or
- h) TEST UNIT READY.

#### 6.1.2.4 Initiator type attributes

Application clients may use the WRITE DYNAMIC RUNTIME ATTRIBUTE and READ DYNAMIC RUNTIME ATTRIBUTE commands to maintain initiator type attributes. All existent initiator type attributes shall follow the definition specified in <a href="table-152">table-152</a>. All attributes, once created, shall exist until deleted by a WRITE DYNAMIC RUNTIME ATTRIBUTE command or until a power on event.

Attribute Identifier	Name	Attribute Length (in bytes)	Format	Subclause
1800h	Device special file name (DSFN)	132	ASCII	<u>6.1.2.4.1</u>
1801h	Data path failover enabled path	14	ASCII	<u>6.1.2.4.2</u>
1802h	Host name (HN)	132	ASCII	<u>6.1.2.4.3</u>
1803h	Operating system (OS)	116	ASCII	6.1.2.4.4
1804h	Operating system version (OS_V)	132	ASCII	<u>6.1.2.4.5</u>
1805h	Device driver name (DD_N)	116	ASCII	<u>6.1.2.4.6</u>
1806h	Device driver version (DD_V)	116	ASCII	<u>6.1.2.4.7</u>
1807h	Process ID	18	ASCII	<u>6.1.2.4.8</u>
1808h to 1BFFh	Reserved		-	

Table 152 — DRA Initiator type attributes

- **6.1.2.4.1 Device special file name:** Indicates the device special file name used by the application client to identify the I T L nexus (e.g., "\\\tape0", "/dev/rmt0", "/dev/st0").
- **6.1.2.4.2 Data path failover enabled path:** The path that is enabled for use in the device driver when data path failover (DPF) is enabled and is being used by the thread that issued this command.
- **6.1.2.4.3 Host name:** Indicates the host name of the server that contains the initiator port of the I\_T\_L nexus (e.g., "myserver3").
- 6.1.2.4.4 Operating system: Indicates the operating system being used by the application client.
- **6.1.2.4.5 Operating system version:** Indicates the version of the operating system specified in <u>6.1.2.4.4</u>.
- 6.1.2.4.6 Device driver name: Indicates the name of the operating system device driver.
- **6.1.2.4.7 Device driver version**: i)Indicates the version of the operating system device driver specified in <u>6.1.2.4.6</u>.
- **6.1.2.4.8 Process ID:** The process ID of the thread that is sending commands through this I T nexus.

## 6.2 Diagnostic Parameters (Diag)

Diagnostic parameters are used with the SEND DIAGNOSTIC command(see <u>SEND DIAGNOSTIC - 1Dh (see 5.2.34 on page 170)</u> and <u>RECEIVE DIAGNOSTIC RESULTS - 1Ch (see 5.2.22 on page 135)</u> for additional information on the commands).

Terms used in this clause are:

Term	Description
CD	Cryptographic Diagnostic
Diag	Diagnostic
Page	Page Code
Parm	Parameter
RcvDiag	Receive Diagnostic Results
SendDaig	Send Diagnostic

#### 6.2.1 Diag Page Formats

The drive supports two diagnostic pages for normal use: Page Code 00h and 80h. Page Code 81h is for engineering use only.

#### 6.2.1.1 Page 00h

#### 6.2.1.2 SendDiag Data - Page 00h

The format for the Send Diagnostic command for page 00h is shown in table 153.

Table 153 — SendDiag - Page 00h Parm Data

Byte	7	6	5	4	3	2	1	0		
0			PAGE CODE (00h)							
1		Reserved								
2	(MSB)									
3				PAGE LEN	IGTH (n-3)			(LSB)		

### Byte Description

0 Page Code: 00h1 Reserved (00h)2-3 Page Length: 0000h

# 6.2.1.3 RcvDiag Data - Page 00h

The format for the Receive Diagnostic Results data for Page 00h is shown in table 154

Table 154 — RcvDiag - Page 00h Parm Data

Byte	7	6	5	4	3	2	1	0			
0				PAGE CC	DE (00h)						
1		Reserved									
2	(MSB)										
3		-	PAGE LENGTH (0002h)								
4			PAGE CODE SUPPORTED (00h)								
5			F	PAGE CODE SU	PPORTED (80h	n)					

## Byte Description

0 PAGE CODE: 00h

1 Reserved

2-3 PAGE LENGTH: 0002h

4 PAGE CODE SUPPORTED: 00h
5 PAGE CODE SUPPORTED: 80h

#### 6.2.1.4 Page 80h

Page Code 80h is a general purpose page for sending flags and diagnostic parameters to the target.

#### 6.2.1.4.1 SendDiag - Page 80h

The format for the Send Diagnostic command is shown in table 155

Table 155 — SendDiag - Page 80h Parm Data

Byte	7	6	5	4	3	2	1	0			
0				PAGE CC	DE (80h)						
1				Res	erved						
2	(MSB)		PAGE LENGTH (n-3)								
3			PAGE LENGTH (n-3)								
4											
5				DIAGNO	OSTIC ID						
6				FLAGS				CR			
7				Res	erved						
8			Diagnostic Parameters								
n		-		Diagnostic	Parameters						

#### Byte Description

0 PAGE CODE: 80h

1 Reserved

2-3 PAGE LENGTH (n-3)

4-5 DIAGNOSTIC ID

This field specifies the diagnostic that is to be run

6

## Bits Description

7-1 FLAGS

O CR (cartridge required)

Set to 1b when a cartridge is required for a diagnostic. When 1b, a cartridge must be loaded and ready for the SEND DIAGNOSTIC command to be accepted. See specific diagnostic descriptions for cartridge use: some diagnostics require this bit to be set to 1b, some require it to be set to 0b, and some do not require a specific bit setting.

0b: No cartridge required 1b: Cartridge required

7 Reserved

8-n Diagnostic Parameters

The Diagnostic Parameters field contains the parameters required to run the diagnostic.

See <u>6.2.2</u> for a list of supported diagnostic page 80h routines.

#### 6.2.1.5 RcvDiag - Page 80h

The format for the Receive Diagnostic Results is shown in table 156

Table 156 — RcvDiag Data - Page 80h Results

Deste				E	Bit							
Byte	7 msb	6	5	4	3	2	1	0 lsb				
0			PAGE CODE (80h)									
1		Reserved										
2	(MSB)											
3			PAGE LENGTH (004Dh) (L									
4	(MSB)											
5				DIAGNO	OSTIC ID			(LSB)				
6				FLAG	s (00h)							
7				Res	erved							
8												
n				Diagnos	tic Results							

#### Byte Description

- 0 PAGE CODE: 80h
- 1 Reserved
- 2-3 PAGE LENGTH (n-3)
- 4-5 DIAGNOSTIC ID

This field contains the same value as that sent with the Send Diagnostic command for which this response is associated.

- 6 FLAGS
  - Set to 00h for Receive Diagnostic Results
- 7 Reserved
- 8-n Diagnostic Results

The Diagnostic Results field contains the results from the diagnostic. See <u>RcvDiag - Page 80h Typical</u> <u>Results (see 6.2.1.5.1 on page 204)</u> for what the majority of diagnostics with results generate.

See the individual Send Diagnostic parameter descriptions for the field contents. Refer to <u>Supported Page 80h Diags (see 6.2.2)</u> for a list of diagnostic parameters supported by the drive.

#### 6.2.1.5.1 RcvDiag - Page 80h Typical Results

The typical results for diagnostics that generate results data is shown in RcvDiag Data - Page 80h Results (see Table 157 — on page 204)

Table 157 — RcvDiag Data - Page 80h Results

Dista					Bit				
Byte	7 msb	6	5	4	3	2	1	0 lsb	
0				PAGE CO	DDE (80h)				
1				Res	erved				
2	(MSB)				(00 4DL)				
3		PAGE LENGTH (004Dh) (LSB)					(LSB)		
4	(MSB)	DIAGNOSTIC ID (LSB)							
5							(LSB)		
6				FLAG	s (00h)				
7				Res	erved				
				Diagnos	tic Results				
8			Reserved			DIAGNOSTIC BLOCKED	SIM/MIM PRESENT	ERROR	
9									
80			5	SIM/MIM mes	sage or all ze	eros			

- Note 1 The ERROR bit in byte 8 is set when the diagnostic detects an error.
- Note 2 The SIM/MIM Present bit in byte 8 is set when a SIM or MIM message is contained in the diagnostic results.
- Note 3 SIM/MIM messages are defined exactly as described in <u>SIM/MIM Message (see 6.2.1.5.2 on page 206)</u>; the SIM/MIM is not valid if the SIM/MIM Present bit is 0b.
- Note 4 The Diagnostic Blocked bit is set when the diagnostic cannot run all its tests. This occurs on some diagnostics if a cartridge is in the drive.

#### Byte Description

- 0 PAGE CODE: 80h
- 1 Reserved
- 2-3 PAGE LENGTH (n-3)
- 4-5 DIAGNOSTIC ID

This field contains the same value as that sent with the Send Diagnostic command for which this response is associated.

- 6 FLAGS
  - Set to 00h for Receive Diagnostic Results
- 7 Reserved

8

# Bit Description

7-3 Reserved

2 DIAGNOSTIC BLOCKED: Indicates if the diagnostic was could not run all its tests, which may occur on some diagnostics if a cartridge is loaded in the drive.

Value Description

0b the diagnostic was not blocked from running1b the diagnostic was blocked from running

1 SIM/MIM PRESENT:

Value Description

0b a SIM or MIM message is not contained in the diagnostic results and the SIM/MIM field is set

to all zeros.

1b a SIM or MIM message is contained in the diagnostic results

0 ERROR

Value Description

9-80 SIM/MIM: This field contains a <u>SIM/MIM Message (see 6.2.1.5.2 on page 206)</u> or all zeros as indicated by the SIM/MIM PRESENT bit.

#### 6.2.1.5.2 SIM/MIM Message

SIMs (Service Information Messages), and MIMs (Medium Information Messages) provide the initiator and operator details on service problems encountered by the device. The first 9 bytes are common to both the SIMs and the MIMs.

#### 6.2.1.5.2.1 SIM/MIM Header Data

Table 158 — Diag SIM Data Structure

				E	Bit			
Byte	7	6	6 5 4 3 2 1					0
0				Page C	ode (31h)			
1				Res	erved			
2	(MSB)			DAGE LENG	Tu (0044b)			
3			PAGE LENGTH (0044h) (LS					(LSB)
4	(MSB)		PARAMETER CODE (0000h) (LSB)					
5								(LSB)
6			PARAMETER CONTROL (61h)					
7				PARAMETER	LENGTH (40h)			
8				SIM/MIM	INDICATOR			
9				CIM or	MIM dete			
71		_		SIM or	MIM data			

### Byte Description

0 Page Code

**Bit Description** 7-6 Reserved

5-0 Page Code: 31h

1 Reserved

6

2-3 Page Length: 0044h

4-5 Parameter Code: 0000h

Parameter control byte

Bit Description

7 DU (Disable Update): 0b6 DS (Disable Save): 1b

5 TSD (Target Save Disable): 1b

4 ETC (Enable Threshold Comparison): 0b 3-2 TMC (Threshold Met Comparison): 00b

1 Reserved

0 LP (List Parameter): 1b

7 Parameter length: 40h

8 SIM/MIM Indicator

Value	Description
00h	Bytes 9 through 71 are invalid.
01h	Bytes 9 through 71 are a SIM message. See "SIM Messages" on page 207.
02h	Bytes 9 through 71 are a MIM message. See "MIM Messages" on page 210.

03-FF Bytes 9 through 71 are invalid.

# 6.2.1.5.2.2 SIM Messages

The following data are the parameters for the hardware SIM message

Table 159 — Diag SIM Data Structure

Disto					Bit			
Byte	7	6	5	4	3	2	1	0
9		_	Reserved					
15				1763	erveu			
16		_		DDODLICT DI	EVISION LEVEL			
19				PRODUCT RI	EVISION LEVEL			
20	(MSB)	_		CIM MECO	NOT CODE			
21				SIIVI IVIESS	SAGE CODE			(LSB)
22		_		Pos	erved			
23				1762	erveu			
24				EXCEPTION N	IESSAGE CODE	<u> </u>		
25				SERVICE ME	SSAGE CODE			
26			SE	RVICE MESSAC	SE SEVERITY C	ODE		
27				Res	erved			
28	(MSB)	_	EXCEPTION DATA —					
29								(LSB)
30	(MSB)	_	SCD ERROR CODE					
33								(LSB)
34	(MSB)	_	FIRST FSC					
37								(LSB)
38	(MSB)	_	LAST FSC					
41								(LSB)
42	(MSB)	_		DDODUCT	ID (9000h)			
45			PRODUCT ID (8000h)					(LSB)
46				Product	Identifier			
40	(MSB)	_		\/E\IDO!	R ID "IBM"			
48				VENDO	אוסו חו א			(LSB)
49	(MSB)	_		DI ANT OF S	IANII IEA CTURE			
50				PLANT OF M	ANUFACTURE			(LSB)
51					, <u>,</u> ,			
52	(MSB)			050111	NUMBER .			
63				SERIAL	NUMBER			(LSB)
64	(MSB)							
71		<u> </u>		DEVIC	E TYPE			(LSB)

## Byte Description

9-15 Reserved

16-19 PRODUCT REVISION LEVEL (microcode level): Same as bytes 32 - 35 in Standard Inquiry data

#### 20-21 SIM MESSAGE CODE

vaiue	Description
(ASCII)	
'00'	No Message
<b>'41'</b>	Device Degraded. Call for Service
<b>'42</b> ;	Device Hardware Failure. Call for Service
<b>'43'</b>	Service Circuits Failed, Operations Not Affected. Call for Service
<b>'55'</b>	Drive Needs Cleaning. Load Cleaning Cartridge
<b>'57'</b>	Drive Has Been Cleaned
All Others	Device Message message
Reserved	

#### 22-23

#### 24 **EXCEPTION MESSAGE CODE**

<b>Value</b> (ASCII)	Description
<b>'O'</b>	Vendor-Reserved
<b>'1'</b>	Effect of Failure Is Unknown
<b>'2'</b>	Device Exception. No Performance Impact
<b>'3</b> ;	Exception on Host Interface xx See bytes 28-29 (Exception Data xx) in this SIM record for
	the xx value.
<b>'4'</b>	Device Exception on ACF
<b>'</b> 5'	Device Exception on Operator Panel
<b>'6'</b>	Device Exception on Tape Path
<b>'7'</b>	Device Exception in Drive
<b>'8'</b>	Cleaning Required
<b>'9'</b>	Cleaning Done
'A'-'F'	Vendor-Reserved

#### 25 SERVICE MESSAGE CODE

Value	Description
(ASCII)	
<b>'</b> 0'	Vendor-Reserved
<b>'1'</b>	Repair Impact is Unknown
'2'-'6'	Vendor-Reserved
<b>'7'</b>	Repair Will Disable Access to Device serno (serno refers to serial number in bytes 52-63 of
	this SIM record)
<b>'9'</b>	Clean Device
'A'	Device Cleaned
'B'	Device Cleaning For Performance Reasons is Required
'C'-'F'	Vendor-Reserved

#### 26 SERVICE MESSAGE SEVERITY CODE

Value	Description
(ASCII)	
<b>'O'</b>	SIM severity code "Service"
<b>'1'</b>	SIM severity code "Moderate"
'2'	SIM severity code "Serious"
<b>'3'</b>	SIM severity code "Acute"
'4'-'9', 'A'-'F'	Vendor-Reserved

#### 27 Reserved

#### 28-29 EXCEPTION DATA

Interface Data is returned when byte 24 (Exception Message Code) in this SIM record contains the ASCII value '3'.

	Value (ASCII)	Description
	'00'	interface 0 is indicated
	'01'	interface 1 is indicated
30-33	SCD ERROR	CODE: Error code indicated on SCD (ASCII code). For example 0x00000035 for SCD '5'.

34-37 FIRST FSC
38-41 LAST FSC
42-45 PRODUCT ID: '8000' (these 4 bytes define "TAPE")
46-63 PRODUCT IDENTIFIER
Broken out into constituent bytes:

Byte Description

Byte	Description
46-48	MANUFACTURER: "IBM"
49-50	PLANT OF MANUFACTURE
51	'-' (Dash symbol)
52-63	SERIAL NUMBER

64-71 DEVICE TYPE (device type portion of PRODUCT IDENTIFICATION; Inquiry Standard Data bytes 16-23)

## **6.2.1.5.3 MIM Messages**

Media Information Messages (MIMs) are supported by this device. The following data are the parameters for the MIM

Table 160 — Diag MIM Data Structure

	Bit							
Byte	7	6	5	4	3	2	1	0
9		_	Reserved					
15				Kes	erveu			
16		_		DDODUCT D	-\/(C ON   F\/F			
19				PRODUCT RE	EVISION LEVEL			
20	(MSB)	_			NACE CODE			
21				MIIM MESS	SAGE CODE			(LSB)
22		_		Poo	erved			
23				IV62	erveu			
24				EXCEPTION M	IESSAGE CODE			
25				MEDIA MES	SAGE CODE			
26			М	EDIA MESSAGI	E SEVERITY CO	DE		
27				Daa	a.m. ra.al			
29			Reserved -					
30	(MSB)	_						
33			FAULT SYMPTOM CODE (FSC)					
34		_	VOLID (Volume Serial Number)					
39								
38			VOLID VALID					
41				Res	erved			
42	(MSB)	_	PRODUCT ID (8000h)					
45								(LSB)
46				Product	Identifier			
46	(MSB)	_						
48			VENDOR ID "IBM"					(LSB)
49	(MSB)			DI ANT CE S	ANUIS ACTUS			
50				PLANT OF M	ANUFACTURE			(LSB)
51					,_,			
52	(MSB)							
63		=	SERIAL NUMBER (LSB)					
64	(MSB)							
71		<del>-</del>		DEVIC	E TYPE			(LSB)

## Byte Description

9-15 Vendor-Reserved

16-19 PRODUCT REVISION LEVEL (microcode level): Same as bytes 32 - 35 in Standard Inquiry data

#### 20-21 MIM MESSAGE CODE

	Value (ASCII)	Description
	(710011) '00'	No Message
	'60'	Bad Media, Read Only permitted
	'61'	Rewrite Media if possible
	'62'	Tape Directory Invalid. Re-read media if possible
	<b>'64'</b>	Bad Media-Cannot Read or Write
	<b>'72'</b>	Replace Cleaner Cartridge
	Others	Vendor-Reserved
22-23	Reserved	
24	EXCEPTION N	MESSAGE CODE
	Value	Description
	(ASCII)	·
	<b>'2'</b>	Data Degraded
	<b>'4'</b>	Medium Degraded
	<b>'6'</b>	CM Error
	' <b>7</b> '	Medium Exception
	Others	Vendor-Reserved
25	MEDIA MESS	AGE CODE
26	MEDIA MESS	AGE SEVERITY CODE
	Value	Description
	(ASCII)	
	'O'	Service
	'1'	Moderate-High Temp Read/Write Errors Detected
	'2' '3'	Serious-Permanent Read/Write Errors Detected
	o Others	CM Error Vendor-Reserved
27.20		Veriuoi-Reserveu
27-29	Reserved	TOM CODE (FCC)
30-33		TOM CODE (FSC)
34-39		me Serial Number) (in ASCII). Only valid if indicated by VOLID Valid Flag (byte 40)
40	VOLID VALID	
	Value	Description
	(ASCII)	VOLID (L. 122 04 00) 221 211
	'0' '1'	VOLID (bytes 34-39) not valid
	'3'	VOLID valid, obtained from bost (MAM Attribute ID 0806 in CM)
	S (5)	VOLID valid, obtained from host (MAM Attribute ID 0806 in CM)

VOLID valid, obtained from library (volser in mechanism related page in CM) '5' Vendor-Reserved for future use (odd number will always indicate VOLID valid) Others

41 Reserved

42-45 PRODUCT ID: '8000' (these 4 bytes define "TAPE")

46-63 PRODUCT IDENTIFIER

Broken out into constituent bytes:

Byte	Description
46-48	MANUFACTURER: "IBM"
49-50	PLANT OF MANUFACTURE
51	'-' (Dash symbol)
52-63	SERIAL NUMBER

64-71 DEVICE TYPE (device type portion of PRODUCT IDENTIFICATION; Inquiry Standard Data bytes 16-23)

211

#### 6.2.2 Supported Page 80h Diags

<u>Table 161</u> shows the supported diagnostic page 80h routines and indicates values required in the Send Diagnostic CDB. These diagnostics reside in the device (see <u>SEND DIAGNOSTIC - 1Dh (see 5.2.34 on page 170)</u> and <u>RECEIVE DIAGNOSTIC RESULTS - 1Ch (see 5.2.22 on page 135)</u> for additional information on the commands). Individual diagnostic descriptions follow <u>table 161</u>.

Table 161 — Supported Page 80 Diag Routines

ID	Name/Description	See Page	Parm Length	Result Length <sup>b</sup> b	Self Test	Dev Ofl	Unit Ofl	Cart Req'd
None	Self Test	<u>213</u>	0000h	-	1	Х	Х	-
0090h	Primary Port Wrap Test	<u>214</u>	0008h	0051h	0	Χ	Х	Х
0100h	POST A Self Test Diagnostic	<u>215</u>	0008h	0051h	0	Χ	Х	Х
0101h	POST B Performance Diagnostic <sup>a</sup>	<u>216</u>	0008h	0051h	0	Χ	1	1
0102h	POST C Media Test Diagnostic	<u>217</u>	0008h	0051h	0	Χ	1	1
0103h	POST D Head Test Diagnostic	<u>218</u>	0008h	0051h	0	Χ	1	1
0160h	Force Dump	<u>219</u>	0008h	-	0	Χ	Х	Х
0161h	Write Dump to Cartridge a	<u>220</u>	0008h	0051h	0	Χ	1	1
0162h	Write Dump to FLASH (EEPROM)	-	0008h	-	0	Х	Х	Х
0163h	Force Mini Dump	<u>221</u>	0008h	-	0	Χ	Х	Х
016Fh	Clear FLASH Dump (EEPROM)	-	0008h	-	0	Χ	Х	X
0170h	Create FMR Cartridge <sup>a</sup>	<u>222</u>	0008h	0051h	0	Х	1	1
0171h	Unmake FMR Cartridge <sup>a</sup>	<u>223</u>	0008h	0051h	0	Χ	1	0
0175h	Use FMR Cartridge	<u>224</u>	0008h	0051h	0	Χ	1	0
0190h	Set Traps	<u>225</u>	000Ah	-	0	Χ	Х	Х
0191h	Remove Traps	<u>226</u>	000Ah	-	0	Х	Χ	Х
0210h	Terminate Immediate Command	<u>228</u>	000Ah	-	0	Х	Х	1
1002h	Read Thermal Sensor	-	0008h	0051h	0	Х	Х	Χ
2002h	Reset Drive (Soft)	<u>232</u>	0008h	-	0	1	Х	0

#### Legend

#### ???? Variable

<sup>-</sup> Not Applicable

<sup>&</sup>lt;sup>a</sup> These diagnostics will destroy all data on the currently mounted cartridge.

b GOOD status is returned for diagnostics which expect result data based solely on validation of the diagnostic. The Receive Diagnostics Results command must be used to determine the success or failure of the actual execution of such diagnostics. Diagnostic procedures are recommended above.

#### 6.2.3 Diag - SelfTest: Self Test

When the SelfTest bit is 1b in the Send Diagnostic command (see <u>SEND DIAGNOSTIC - 1Dh (see 5.2.34 on page 170)</u> and <u>RECEIVE DIAGNOSTIC RESULTS - 1Ch (see 5.2.22 on page 135)</u> for additional information on the commands), the target runs the normal power-on self test (POST A) diagnostics that occur at bring-up. No diagnostic results are returned.

#### 6.2.3.1 SendDiag Command - Self Test

<u>Table 162</u> shows the Send Diagnostic command format to specify Self Test (the SelfTest bit is set to 1b).

Table 162 — SendDiag CDB - Self Test

Durto				Е	Bit					
Byte	7 msb	6	5	4	3	2	1	0 lsb		
0				Operation	code (1Dh)					
1	(	Obsolete (LUN)  PF (1b)  Reserved   SELFTEST   DEVOFL   (0b)   (1b)   (0b)								
2		Reserved (00h)								
3	(MSB)	_	DA	DAMETED LIGH	1 ENOTH (000	0h)				
4		PARAMETER LIST LENGTH (0000h) (LSB)								
5				Control Byte	(see 5.1.2.3)					

When the SelfTest bit is 1b in the Send Diagnostic command, the target will process its default power-on self test. If the self test successfully passes, the command is terminated with Good status. If the self test detects a failure, the command is terminated with CHECK CONDITION status and the sense key is set to Hardware Error.

#### 6.2.3.2 RcvDiag Data - Self Test

There are no diagnostic results for the self test.

#### 6.2.4 Diag - 0090h: Primary port wrap test

This test will perform a wrap test on the specified primary port. A wrap tool must be attached prior to running this command. See <u>SEND DIAGNOSTIC - 1Dh (see 5.2.34 on page 170)</u> and <u>RECEIVE DIAGNOSTIC RESULTS - 1Ch (see 5.2.22 on page 135)</u> for additional information on the commands.

### 6.2.4.1 SendDiag Parm Data - Primary port wrap test

Table 163 shows the parameter data for the Send Diagnostic command.

Table 163 — Primary Port Wrap Test SendDiag Parm Data

Byte	7	6	5	4	3	2	1	0				
0				PAGE CC	DE (80h)							
1				Res	erved							
2	(MSB)				(000.41.)							
3		•	PAGE LENGTH (0004h) (LSB)									
4					· · - (0000L)							
5				DIAGNOSTIC	D (0090h)							
6			FLAGS (0000000b) CR (0b)									
7				PORT ID	ENTIFIER							

The following parameters apply:

- CR (cartridge required): 0b
- PORT IDENTIFIER: This field is identical to the PORT IDENTIFIER field described in IP 83h: Device Identification (see 6.3.4 on page 238). If the value of the PORT IDENTIFIER is zero, then the wrap test will be performed on all primary ports. If the value is a valid port identifier, the wrap test is performed on the port indicated by the PORT IDENTIFIER field. If an invalid port identifier value is used, the drive will respond with a CHECK CONDITION for INVALID FIELD IN PARAMETER LIST.

#### 6.2.4.2 RcvDiag Data - Primary port wrap test

RcvDiag - Page 80h Typical Results (see 6.2.1.5.1 on page 204) shows the diagnostic results data for this diagnostic.

#### 6.2.5 Diag - 0100h: POST A

This diagnostic runs the POST A (power-on self test) diagnostics, as does running the Self Test diagnostic by setting the SelfTest bit to 1b in a Send Diagnostic command. However, unlike Self Test, the POST A diagnostic returns data through the Receive Diagnostic Results command. (see <u>SEND DIAGNOSTIC - 1Dh (see 5.2.34 on page 170)</u> and <u>RECEIVE DIAGNOSTIC RESULTS - 1Ch (see 5.2.22 on page 135)</u> for additional information on the commands)

#### 6.2.5.1 SendDiag Parm Data - POST A

<u>Table 164</u> shows the parameter data for the Send Diagnostic command.

Table 164 — SendDiag Parm Data - POST A

Deste		PAGE CODE (80h)  Reserved (00h)  )  PAGE LENGTH (0004h)  (LSB)									
Byte	7 msb	6	5	4	3	2	1	0 lsb			
0				PAGE CC	DE (80h)						
1			Reserved (00h)								
2	(MSB)		PAGE LENGTH (0004b)								
3			PAGE LENGTH (0004h) (LSB)								
4	(MSB)				·- (0400b)						
5				DIAGNOSTIC	: ID (0100n)			(LSB)			
6			FLAGS (0000000b) CR(x)								
7				Rese	erved						

Note 1 - The CR (Cartridge Required) flag may be set to 0b or 1b. If a cartridge is in the drive when this diagnostic is received, some diagnostics will not run. If the diagnostic is blocked because a cartridge is loaded in the drive or for any other reason, the BLOCKED bit is set in the Receive Diagnostics Results data.

## 6.2.5.2 RcvDiag Data - POST A

RcvDiag - Page 80h Typical Results (see 6.2.1.5.1 on page 204) shows the diagnostic results data for this diagnostic.

#### 6.2.6 Diag - 0101h: POST B Performance

The Performance Diagnostic performs a test to determine how well the tape drive writes data. If the percentage degradation exceeds the threshold, the SEND DIAGNOSTIC command will return a CHECK CONDITION. The SENSE KEY will be set to 1h and the ASC/ASCQ set to 0000h. The FSC field of sense data will be set to 52E5h, if the degradation is in the forward direction, or 52E6h, if the degradation was in the backward direction. The FSC FLAG field of the sense data will be set to the percentage. TapeAlert2 (Write Warning) will be set and the SCD will display the character 'A.' The RECEIVE DIAGNOSTIC command will return SIM data related to the failure.

See <u>SEND DIAGNOSTIC - 1Dh (see 5.2.34 on page 170)</u> and <u>RECEIVE DIAGNOSTIC RESULTS - 1Ch (see 5.2.22 on page 135)</u> for additional information on the commands.

#### 6.2.6.1 SendDiag Parm Data - POST B Performance

<u>Table 165</u> shows the parameter data for the Send Diagnostic command.

Bit **Byte** 7 msb 6 5 4 3 2 1 0 lsb 0 PAGE CODE (80h) 1 Reserved (00h) 2 (MSB) PAGE LENGTH (0004h) 3 (LSB) 4 (MSB) DIAGNOSTIC ID (0101h) 5 (LSB) 6 FLAGS (0000000b) CR (1b) Reserved (00h) Note 1 - CR: Cartridge Required=1b, a cartridge must be loaded and ready.

Table 165 — SendDiag Parm Data - POST B

#### 6.2.6.2 RcvDiag Data - POST B Performance

RcvDiag - Page 80h Typical Results (see 6.2.1.5.1 on page 204) shows the diagnostic results data for this diagnostic.

## 6.2.7 Diag - 0102h: POST C Media Test

## 6.2.7.1 SendDiag Parm Data - POST C Media Test

Table 166 — SendDiag Parm Data - POST C Media Test

Deste				E	Bit						
Byte	7	6	5	4	3	2	1	0			
0			P.	AGE CODE (80	h)						
1			Reserved								
2	(MSB)		DAGE LENGTH (0004b)								
3			PAGE LENGTH (0004h)								
4	(MSB)			DIA ONIOCTIA	) ID (0400h)						
5		DIAGNOSTIC ID (0102h)									
6			FLAGS (0000000b)								
7				Reserved							

## 6.2.7.2 RcvDiag Data - POST C Media Test

RcvDiag - Page 80h Typical Results (see 6.2.1.5.1 on page 204) shows the diagnostic results data for this diagnostic.

## 6.2.8 Diag - 0103h: POST D Head Test

## 6.2.8.1 SendDiag Parm Data - POST D Head Test

Table 167 — SendDiag Parm Data - POST D Head Test

Deste				Е	Bit							
Byte	7	6	5	4	3	2	1	0				
0			PAGE CODE (80h)									
1			Reserved									
2	(MSB)		DACE LENGTH (0004b)									
3			PAGE LENGTH (0004h) (LSB)									
4	(MSB)			DIA CNICCTIO	) ID (0400h)							
5				DIAGNOSTIC	D (0103h)			(LSB)				
6			FLAGS (000000b)									
7		·		Res	erved		·					

## 6.2.8.2 RcvDiag Data - POST D Head Test

RcvDiag - Page 80h Typical Results (see 6.2.1.5.1 on page 204) shows the diagnostic results data for this diagnostic.

#### 6.2.9 Diag - 0160h: Force Dump

This diagnostic forces a dump. The dump data is stored in device control storage and can be read by the READ BUFFER command (Buffer ID of 00h) (see 5.2.17).

When a higher priority dump has been generated automatically by the drive but has not yet been read, the drive will ignore this Send Diagnostic command and return GOOD status.

Because forcing a drive dump will overwrite any previously stored dump, before forcing the dump the DUMP field of the sense data should be examined to determine if a drive dump exists.

See <u>SEND DIAGNOSTIC - 1Dh (see 5.2.34 on page 170)</u> and <u>RECEIVE DIAGNOSTIC RESULTS - 1Ch (see 5.2.22 on page 135)</u> for additional information on the commands.

#### 6.2.9.1 SendDiag Parm Data - Force Dump

Table 168 shows the parameter data for the Send Diagnostic command.

Table 168 — SendDiag Parm Data - Force Dump

Deste				E	Bit							
Byte	7 msb	6	5	4	3	2	1	0 lsb				
0				PAGE CO	DE (80h)							
1		Reserved (00h)										
2	(MSB)	MSB)										
3		PAGE LENGTH (0004h) (LSB)										
4	(MSB)				(04001)							
5		•		DIAGNOSTI	C ID (0160h)			(LSB)				
6			FL	AGS (000000	0b)			CR (X)				
7		Reserved (00h)										
Note 1 - T	Note 1 - The CR (Cartridge Required) flag may be set to 0b or 1b.											

#### 6.2.9.2 RcvDiag Data - Force Dump

There are no diagnostic results for this function.

#### 6.2.10 Diag -0161h: Write Dump to Cartridge

This diagnostic causes dump information residing in the device control storage to be written to a cartridge without the need to retrieve the dump data across the host interface. A cartridge is required to be loaded to run the diagnostic (see <u>SEND DIAGNOSTIC - 1Dh (see 5.2.34 on page 170)</u> and <u>RECEIVE DIAGNOSTIC RESULTS - 1Ch (see 5.2.22 on page 135)</u> for additional information on the commands).

#### 6.2.10.1 SendDiag Parm Data - Write Dump to Cartridge

<u>Table 169</u> shows the parameter data for the Send Diagnostic command.

Table 169 — SendDiag Parm Data - Write Dump to Cartridge

Deste				i	Bit							
Byte	7 msb	6	5	4	3	2	1	0 lsb				
0				PAGE CO	DDE (80h)							
1		Reserved (00h)										
2	(MSB)	ASB)										
3		PAGE LENGTH (0004h) (LSB)										
4	(MSB)				o := (0404ls)							
5				DIAGNOSTI	C ID (0161h)			(LSB)				
6			FL	AGS (000000	0b)			CR (1b)				
7		Reserved (00h)										
Note 1 - c	Note 1 - CR (Cartridge Required)=1b, a cartridge must be loaded and ready.											

#### 6.2.10.2 RcvDiag Data - Write Dump to Cartridge

RcvDiag - Page 80h Typical Results (see 6.2.1.5.1 on page 204) shows the diagnostic results data for this diagnostic.

#### 6.2.11 Diag - 0163h: Force Mini Dump

This diagnostic forces a mini dump. The dump data is stored in device control storage and can be read by the READ BUFFER command (Error History buffer 11h) (see 6.7.2.3.3).

See <u>SEND DIAGNOSTIC - 1Dh (see 5.2.34 on page 170)</u> and <u>RECEIVE DIAGNOSTIC RESULTS - 1Ch (see 5.2.22 on page 135)</u> for additional information on the commands.

#### 6.2.11.1 SendDiag Parm Data - Force Mini Dump

Table 168 shows the parameter data for the Send Diagnostic command.

Table 170 — SendDiag Parm Data - Force Mini Dump

D. d.					Bit							
Byte	7 msb	6	5	4	3	2	1	0 lsb				
0				PAGE C	ODE (80h)							
1		Reserved (00h)										
2	(MSB)	SB)										
3		PAGE LENGTH (0004h) (LSB)										
4	(MSB)				(04001)							
5		•		DIAGNOSTI	C ID (0163h)			(LSB)				
6			FL	AGS (000000	00b)			CR (x)				
7		Reserved (00h)										
Note 1 - T	The CR (Cartridge Required) flag may be set to 0b or 1b.											

## 6.2.11.2 RcvDiag Data - Force Mini Dump

There are no diagnostic results for this function.

#### 6.2.12 Diag - 0170h: Create FMR Cartridge (not on LTO5)

See <u>"SEND DIAGNOSTIC - 1Dh" on page 198</u> and <u>"RECEIVE DIAGNOSTIC RESULTS - 1Ch" on page 164</u> for additional information on the commands. This diagnostic causes the device microcode to be written to a cartridge, creating a field microcode replacement (FMR) cartridge. A cartridge is required to be mounted and ready in preparation for this diagnostic. All data on the cartridge prior to running this diagnostic is lost.

After a successful completion of this diagnostic, the cartridge is an FMR cartridge that may be used to update the functional microcode load of a drive into which it is mounted.

NOTE 31 - This function is also available from maintenance mode and the library interface (i.e. LDI and ADI).

NOTE 32 - Drive microcode updates may be performed using various methods including using the WRITE BUFFER command (see Annex C), using ftp over the Ethernet port, using the library drive interface, or using an FMR cartridge. Use of an FMR cartridge to perform drive microcode updates is useful in situations where there is no access to the drive via a SCSI interface, an Ethernet port, or a library utility.

#### 6.2.12.1 SendDiag Parm Data - Create FMR Cartridge

<u>Table 171</u> shows the parameter data for the Send Diagnostic command.

Bit Byte 6 5 2 7 msb 4 1 3 0 Isb 0 PAGE CODE (80h) 1 Reserved (00h) 2 **MSB** PAGE LENGTH (0004h) LSB 3 4 **MSB** DIAGNOSTIC ID (0170h) 5 LSB 6 FLAGS (000000b) CR (1b) Reserved (00h) Note 1 - CR (Cartridge Required)=1b, a cartridge must be loaded and ready.

Table 171 — Send Diagnostic Parameter Data - Create FMR Cartridge

#### 6.2.12.2 RcvDiag Results Data - Create FMR Cartridge

RcvDiag - Page 80h Typical Results (see 6.2.1.5.1 on page 204) shows the diagnostic results data for this diagnostic.

#### 6.2.13 Diag - 0171h: Unmake FMR Cartridge (not on LTO5)

See <u>"SEND DIAGNOSTIC - 1Dh" on page 198</u> and <u>"RECEIVE DIAGNOSTIC RESULTS - 1Ch" on page 164</u> for additional information on the commands. This diagnostic prepares the drive to receive a field microcode replacement (FMR) cartridge for the purpose of changing it from an FMR cartridge to a data cartridge.

This enables the drive to accept the mounting of an FMR cartridge and to perform the processing that changes the cartridge from a field microcode replacement (FMR) cartridge to a data cartridge. All data on the cartridge is lost. This enablement is cleared:

- a) after 60 seconds;
- b) on completion of processing the FMR cartridge if that processing results in success;
- c) on completion of processing the FMR cartridge if that processing results in failure; or
- d) on the mounting of a non-FMR cartridge.

If there is a Data cartridge in the drive, mounted and ready when this diagnostic is run, then the data on partition 0 of the cartridge is lost.

If an attempt is made to load a Data cartridge when the drive is prepared to receive an FMR cartridge (i.e., after successful completion of this diagnostic and before the enablement is cleared), then the cartridge is rejected for an unsupported format.

NOTE 33 - This function is also available from maintenance mode and the library interface (i.e. LDI and ADI).

#### 6.2.13.1 SendDiag Parm Data - Unmake FMR Cartridge

<u>Table 171</u> shows the parameter data for the Send Diagnostic command.

Bit **Byte** 7 msb 5 2 6 3 0 Isb 0 PAGE CODE (80h) 1 Reserved (00h) 2 **MSB** PAGE LENGTH (0004h) 3 LSB 4 **MSB** DIAGNOSTIC ID (0171h) 5 LSB 6 FLAGS (000000b) CR (0b) 7 Reserved (00h)

Table 172 — Send Diagnostic Parameter Data - Unmake FMR Cartridge

### 6.2.13.2 RcvDiag Results Data - Unmake FMR Cartridge

RcvDiag - Page 80h Typical Results (see 6.2.1.5.1 on page 204) shows the diagnostic results data for this diagnostic.

#### 6.2.14 Diag - 0175h: Use FMR Cartridge (not on LTO5)

See <u>"SEND DIAGNOSTIC - 1Dh" on page 198</u> and <u>"RECEIVE DIAGNOSTIC RESULTS - 1Ch" on page 164</u> for additional information on the commands. This diagnostic prepares the drive to receive a field microcode replacement (FMR) cartridge for the purpose of updating the functional microcode load of the drive.

This enables the drive to accept the mounting of an FMR cartridge and to automatically perform the processing that updates functional microcode with code read from that cartridge. This enablement is cleared:

- a) after 60 seconds;
- b) on completion of processing the FMR cartridge if that processing results in success;
- c) on completion of processing the FMR cartridge if that processing results in failure; or
- d) on the mounting of a non-FMR cartridge.

If there is a Data cartridge in the drive, mounted and ready when this diagnostic is run, then this diagnostic fails for an invalid image.

If an attempt is made to load a Data cartridge when the drive is prepared to receive an FMR cartridge (i.e., after successful completion of this diagnostic and before the enablement is cleared), then the cartridge is rejected for an unsupported format.

NOTE 34 - This function is also available from maintenance mode and the library interface (i.e. LDI and ADI). The MUE bit of the Logical Unit subpage (see the ADI Implemenation Reference) performs this same diagnostic.

#### 6.2.14.1 SendDiag Parm Data - Use FMR Cartridge

<u>Table 171</u> shows the parameter data for the Send Diagnostic command.

Bit Byte 7 msb 6 5 0 Isb 0 PAGE CODE (80h) 1 Reserved (00h) 2 **MSB** PAGE LENGTH (0004h) 3 LSB 4 **MSB** DIAGNOSTIC ID (0175h) 5 LSB 6 FLAGS (000000b) CR (0b) 7 Reserved (00h)

Table 173 — Send Diagnostic Parameter Data - Use FMR Cartridge

#### 6.2.14.2 RcvDiag Results Data - Use FMR Cartridge

RcvDiag - Page 80h Typical Results (see 6.2.1.5.1 on page 204) shows the diagnostic results data for this diagnostic.

#### 6.2.15 Diag - 0190h: Set Traps

This diagnostic permits a SCSI interface user to set a microcode trap that causes a dump to occur when the specified Fault Symptom Code occurs. The drive continues to operate after the dump completes (see <u>SEND DIAGNOSTIC - 1Dh (see 5.2.34 on page 170)</u> and <u>RECEIVE DIAGNOSTIC RESULTS - 1Ch (see 5.2.22 on page 135)</u> for additional information on the commands).

#### 6.2.15.1 SendDiag Parm Data - Set Traps

Table 174 shows the parameter data for the Send Diagnostic command.

Table 174 — SendDiag Parm Data - Set Traps

<b>5</b> (				E	Bit			
Byte	7 msb	6	5	4	3	2	1	0 lsb
0				PAGE CC	DE (80h)			
1				Reserv	ed (00h)			
2	(MSB)			DAGE LENG	Tu (0006h)		_	
3				PAGE LENG	тн (0006h)			(LSB)
4	(MSB)			DIA CNICCTIO	) ID (0400h)		_	
5				DIAGNOSTIC	D (0190h)			(LSB)
6			FL	AGS (000000	Ob)			CR (x)
7				Reserv	ed (00h)			
8	(MSB)			541 U T 0) 44	DT014 00DF			
9		-		FAULI SYM	PTOM CODE		-	(LSB)
Note 1 - c	R (Cartridge F	Required)=1,	a cartridge m	ust be loaded	and ready be	fore the dia	gnostic is run.	

#### 6.2.15.2 RcvDiag Data - Set Traps

There are no diagnostic results for this function.

#### 6.2.16 Diag - 0191h: Remove Traps

See <u>SEND DIAGNOSTIC - 1Dh (see 5.2.34 on page 170)</u> and <u>RECEIVE DIAGNOSTIC RESULTS - 1Ch (see 5.2.22 on page 135)</u> for additional information on the commands.

This diagnostic removes a microcode trap that was set via the SCSI Set Traps Diagnostic.

Sending down the Remove Traps diagnostic with the FAULT SYMPTOM CODE set to 0000h will set up diagnostic results that show which traps are currently set without changing the state of any traps.

## 6.2.16.1 SendDiag Parm Data - Remove Traps

Table 175 shows the parameter data for the Send Diagnostic command.

Table 175 — SendDiag Parm Data - Remove Traps

Dista				Е	Bit						
Byte	7 msb	6	5	4	3	2	1	0 lsb			
0			PAGE CODE (80h)								
1				Reserv	ed (00h)						
2	(MSB)										
3			PAGE LENGTH (0006h) (LSB								
4	(MSB)	_		DIA ONIO OTIO	\ ID (0404b)			_			
5				DIAGNOSTIC	D (0191h)			(LSB)			
6			FL	AGS (000000	Ob)			CR (x)			
7		·	·	Reserv	ed (00h)	·	·				
8	(MSB)		FAULT SYMPTOM CODE								
9				FAULI SYM	PTOWI CODE			(LSB)			

# 6.2.16.2 RcvDiag Data - Remove Traps

<u>Table 176</u> shows the diagnostic results data received from the Remove Traps diagnostic.

Table 176 — RcvDiag Data - Remove Traps

Deste	Bit									
Byte	7 msb	6	5	4	3	2	1	0 lsb		
0			PAGE CODE (80h)							
1			Reserved (00h)							
2	(MSB)									
3			PAGE LENGTH (n-4) (LSB)							
4	(MSB)	DIAGNOSTIC ID (0191h) (LSB)								
5								(LSB)		
6		flags (00h)								
7		Reserved (00h)								
8		Reserved (00000b) diagnostic blocked Reserved		Reserved	ERROR					
			List of Fault Symptom Code's with Trap still set							
9	(MSB)		FAULT SYMPTOM CODE [first]							
10							(LSB)			
				:						
n-1	(MSB)									
n			FAULT SYMPTOM CODE [last]				(LSB)			

#### 6.2.17 Diag - 0210h: Terminate Immediate Command

This diagnostic will terminate all processing associated with the specified command that had been previously issued with the Immediate bit set to one. The command to be terminated is specified by the OPERATION CODE / SERVICE ACTION pair. If the command specified to terminate exists, the drive returns Good status after the termination is complete. If the command specified to terminate does not exist, the drive will behave as specified by the setting of the CC bit. If an error occurs during the processing of this Send Diagnostic command, Good status will be returned and the error will be reported as a deferred error to the next eligible command.

#### 6.2.17.1 Send Data - Terminate Immed Command

Table 3 shows the Send Diagnostic parameter data for the Terminate Immed Command diagnostic.

Table 177 — Send Data – (Diag 0210h) Terminate Immed Command

Durka	Bit									
Byte	7 msb	6	5	4	3	2	1	0 Isb		
0		PAGE CODE (80h)								
1		Reserved (00h)								
2	(MSB)	PAGE LENGTH (0006h) (LSB								
3										
4	(MSB)									
5			DIAGNOSTIC ID (0210h) (LSI							
6			FLAGS (0000000b) CR(1)							
7		Reserved (00h)								
8		OPERATION CODE								
9	СС	Reserved (00b) SERVICE ACTION								

The following parameters apply:

#### Byte Description

- 0 PAGE CODE Selects the diagnostic page as 80h which is the IBM general purpose page.
- 1 Reserved
- 2-3 PAGE LENGTH The length in bytes of the diagnostic parameters that follow this field.
- 4-5 DIAGNOSTIC ID The ID of the specific general purpose diagnostic.
- 6 FLAGS Flags specific to this diagnostic.

## Bit Description

- 7-1 Reserved
- 0 CR Cartridge Required (1b)

-		- 3 -	- 1	(
Valu	ıe		Descr	iption

Ob A cartridge is not required to be loaded and ready.

1b A cartridge must be loaded and ready.

- 7 Reserved
- 8 OPERATION CODE The operation code of the command to terminate.

9

Bit	Description	n
7	cc - Check	Condition bit
	Value	Description
	0b	Return Good status if the command specified by the OPERATION CODE / SERVICE ACTION pair is not currently active.
	1b	Return Check Condition – Invalid Field in Parameter Data (5/2600) with Field pointer set to the OPERATION CODE field if the command specified by the OPERATION CODE / SERVICE ACTION pair is not currently active.
6-4	Reserved	•
4-0		TION - The service action of the command to terminate. If there is no service action, rvice action field shall be set to zero

<u>Table 178</u> lists the commands supported by the Terminate Immediate Command diagnostic.

Table 178 — Supported Commands in the Terminate Immediate Command diagnostic

Command	Op Code	Service Action	State of Drive after Command is Terminated
Erase	19h	oon	The drive stops processing and leaves the drive positioned at the stopping point. After completion, the drive will reject any subsequent tape motion commands (with sk/asc/ascq = 3/3100) except for Rewind or Unload.
Send Diagnostic	1Dh	00h	The drive stops processing, clears the buffer, and rewinds to BOP 0.

# 6.2.17.2 Results Data – Terminate Immed Command

There is no Receive Diagnostic Results data for this function.

## 6.2.18 Diag - 1002h: Read Thermal Sensor

The Read Thermal Sensor diagnostic is used to read the digital thermal sensor on the drive (see <u>SEND DIAGNOSTIC - 1Dh (see 5.2.34 on page 170)</u> and <u>RECEIVE DIAGNOSTIC RESULTS - 1Ch (see 5.2.22 on page 135)</u> for additional information on the commands).

# 6.2.18.1 SendDiag Parm Data - Read Thermal Sensor

<u>Table 179</u> shows the parameter data for the Read Thermal Sensor diagnostic.

Table 179 — Diag parameter data - Read Thermal Sensor

Deste	Bit											
Byte	7	6	5	4	3	2	1	0				
0				PAGE CC	DE (80h)							
1		Reserved										
2	(MSB)	SB) PAGE LENGTH (0004h) —										
3				PAGE LENG	1H (0004h)			(LSB)				
4	(MSB)	_		DIA CNICCTIO	) ID (4000h)			_				
5			DIAGNOSTIC ID (1002h) (LSB)									
6		FLAGS (0000000b)										
7				Res	erved							

# 6.2.18.2 RcvDiag Data - Read Thermal Sensor

<u>Table 180</u> shows the diagnostic results data received from the Read Thermal Sensor diagnostic.

Table 180 — Receive Diag parameter data - Read Thermal Sensor

Desta				E	Bit				
Byte	7	6	5	4	3	2	1	0	
0				PAGE CC	DE (80h)				
1				Res	erved				
2	(MSB)	_		DAGE LENG	Tu (000Eb)				
3				PAGE LENG	тн (000Еһ)			(LSB)	
4	(MSB)	_		DIA CNICOTIO	\ ID (4000h)				
5				DIAGNOSTIC	D (1002h)			(LSB)	
6		FLAGS (0000000b)							
7		Reserved							
8		FLAGS (00000b)  DIAG. BLOCKED  Reserved							
9				Rese	erved				
10		7	THERMAL REAL	DING (units of	C) <sup>a</sup> (Value r	ead by senso	r)		
11				Res	erved				
12		Full-Height I	Drives_ <u>b</u> : war	NING THRESHO	OLD (units of <sup>0</sup>	C) <sup>a</sup> - drive ra	aises on alert		
12		Half-Height	Drives_ <u>b</u> : FAN	START TEMPE	RATURE (units	s of <sup>o</sup> C) <sup>a</sup>			
13				Res	erved				
14			FENCING THRE	ESHOLD (units	of <sup>o</sup> C) <sup>a</sup> - ope	rations fence	d		
15				Res	erved				
16		FENCING	REMOVAL TH	RESHOLD (unit	s of <sup>o</sup> C) <sup>a</sup> - re	move operat	ion fence		
17				Res	erved				

<sup>&</sup>lt;sup>a</sup> A value of 00h indicates the value is not applicable

b How to determine if a drive is a Full-Height drive or Half-Height drive is shown in <u>Table 38</u>, "<u>Standard Inquiry Product Identification Table</u>," on page 83.

## 6.2.19 Diag - 2002h: Reset Drive

This diagnostic aborts all current drive operations and restarts the functional microcode. This reset is equivalent to a power on reset (see <u>SEND DIAGNOSTIC - 1Dh (see 5.2.34 on page 170)</u> and <u>RECEIVE DIAGNOSTIC RESULTS - 1Ch (see 5.2.22 on page 135)</u> for additional information on the commands).

## 6.2.19.1 SendDiag Parm Data - Reset Drive

<u>Table 181</u> shows the parameter data for the Send Diagnostic command.

Table 181 — SendDiag Parm Data - Reset Drive

5.4	Bit										
Byte	7 msb	6	5	4	3	2	1	0 lsb			
0		PAGE CODE (80h)									
1		Reserved (00h)									
2	(MSB)	SB) PAGE LENGTH (0004h)									
3		•		PAGE LENG	31H (UUU4N)			(LSB)			
4	(MSB)				(00001)						
5		•	DIAGNOSTIC ID (2002h) (LSB)								
6		FLAGS (0000000b) CR (0b)									
7				Reserv	red (00h)						

# 6.2.19.2 RcvDiag Command - Reset Drive

There are no diagnostic results for this function.

# 6.3 Inquiry Vital Product Data Parameters (IP)

Inquiry vital product data parameters are returned to the Inquiry command. <u>INQUIRY - 12h (see 5.2.4 on page 80)</u> describes how to request these pages.

# 6.3.1 IP 00h: Supported Vital Product Data Pages

• INQUIRY - 12h (see 5.2.4 on page 80) describes how to request this page.

## 6.3.1.1 Returned Data - Inquiry Page 00h: Supported Inquiry Pages

The Supported Vital Product Data Page contains pages that the device will return.

Table 182 — IP 00h Supported Vital Product Data Inquiry Page

Dista	Bit											
Byte	7	6	5	4	3	2	1	0				
0	Peripheral Qualifier (000b)			Peripheral Device Type (01h)								
1		Page Code (00h)										
2		Reserved										
3		Page Length (n-3)										
				Supported \	/PD page list							
4		VPD Page Code [first]										
		:										
n				VPD Page	Code [last]							

## Byte Description

0 Peripheral Data

Bit Description

7-5 Peripheral Qualifier: 000b4-0 Peripheral Device Type: 01h

1 Page Code: 00h

2 Reserved

3 Page Length (n-3)

4-n Supported VPD pages: This field is a list of 1-byte long page codes and may include some or all of the following:

Code	Inquiry Page
00h	IP 00h: Supported Vital Product Data Pages (see 6.3.1 on page 233)
03h	IP 03h: Firmware Designation (see 6.3.2 on page 235)
80h	IP 80h: Unit Serial Number (see 6.3.3 on page 237)
83h	IP 83h: Device Identification (see 6.3.4 on page 238)
86h	IP 86h: Extended INQUIRY Data (see 6.3.5 on page 244)
87h	IP 87h: Mode Page Policy (see 6.3.6 on page 246)
88h	IP 88h: SCSI ports (see 6.3.7 on page 249)
90h	IP 90h: Protocol-Specific Logical Unit Information (see 6.3.8 on page 251)
B0h	IP B0h: Sequential-Access device capabilities (see 6.3.9 on page 253)
B1h	IP B1h: Manufacturer-assigned Serial Number (see 6.3.10 on page 254)
B3h	IP B3h: Automation Device Serial Number (see 6.3.11 on page 255)
B4h	IP B4h: Data Transfer Device Element Address (see 6.3.12 on page 256)
C0h	IP C0h: Drive Component Revision Levels (see 6.3.13 on page 257)
C1h	IP C1h: Drive Serial Numbers (see 6.3.14 on page 259)
C7h	IP C7h: Device Unique Configuration Data (see 6.3.15 on page 260)
C8h	IP C8h: Mode Parameter Default Settings (see 6.3.16 on page 261)
E0-EF	Vendor-Reserved (Attachment Specification Information)

NOTE 35 - Only those drives that have the AS/400® (iSeries®) attachment enabled will have valid data in pages E0h/E1h. The contents of pages E0h/E1h are not specified in this document.

NOTE 36 - The drive may report other pages in the supported VPD page list or the drive may support and return pages not specified in this document.

## 6.3.2 IP 03h: Firmware Designation

• INQUIRY - 12h (see 5.2.4 on page 80) describes how to request this page.

## 6.3.2.1 Returned Data - IP 03h: Firmware Designation

The Firmware Designation Page is used to identify which code image may be downloaded to which drive. See Firmware Download for Firmware Download procedures.

Table 183 — IP 03h Firmware Designation Page

Durke				E	Bit						
Byte	7	6	5	4	3	2	1	0			
0	PERIPH	ERAL QUALIFIE	R (000b)		PERIPHE	RAL DEVICE T	YPE (01h)				
1				PAGE CO	DE (03h)						
2				Res	erved						
3		PAGE LENGTH (21h)									
4				ASCII LEN	GTH (00h)						
5		Reserved									
7		-		Res	ervea						
8		LOAD ID									
11		(Iden	tifies downloa	adable firmwa	re with the dr	ive level har	dware)				
12		_		FIRMWARE R	EVISION LEVEL			_			
15		-	(Defined in	n Standard In	quiry Data, by	/tes 32-35)					
16				DTE NUMBER	(00000000)						
19		-		PIF NUMBER	(00000000h)						
20					- (0000000						
23				PATCH NUMBE	R (00000000h	') 					
24				RU I	NAME						
31		<del>-</del>	(8-byte EB	CDIC represe	entation of the	RU name.)					
32					IEN OE NII IN CE-	_					
36		<del>-</del>		LIBRARY SEQU	JENCE NUMBER	≺					

The Load ID and RU Name and which drive level hardware they designate are defined in <u>Table 397</u>.

#### Byte **Description**

0 Peripheral Data

> Bit Description

7-5 PERIPHERAL QUALIFIER: 000b 4-0 PERIPHERAL DEVICE TYPE: 01h

1 PAGE CODE: 03h 2 Reserved

3 PAGE LENGTH: 21h

4 ASCII LENGTH: 00h

5-7 Reserved

8-11 LOAD ID

> The Load ID of ROM microcode, represented by eight hex characters, is used to determine if the microcode to be downloaded is compatible with the device electronics. This value can be used to

compare with bytes 8-11 in the firmware image file to insure that the microcode level is intended for this device type and model.

- 12-15 FIRMWARE REVISION LEVEL
  - The FIRMWARE REVISION LEVEL of the device microcode, represented with four ASCII characters, is used to determine if the latest level of microcode is downloaded.
- 16-19 PTF NUMBER: (unsupported)
- 21-23 PATCH NUMBER: (unsupported)
- 24-31 RU NAME
  - Used by the attaching system. This is an 8-byte EBCDIC field that is incremented each time the LOAD ID is incremented. This value can be compared with bytes 24-31 in the microcode image file to insure that the microcode level is intended for this device type and model.
- 32-36 LIBRARY SEQUENCE NUMBER (in ASCII): If this field is emptry it is filled in with ASCII NULL.

## 6.3.3 IP 80h: Unit Serial Number

• INQUIRY - 12h (see 5.2.4 on page 80) describes how to request this page.

## 6.3.3.1 Returned Data - IP 80h: Unit Serial Number

For a LUN that is associated with an installed device (see 5.1) the following data is returned:

Table 184 — IP 80h Unit Serial Number Inquiry Page

Disto	Bit										
Byte	7	6	5	4	3	2	1				
0	PERIPH	PERIPHERAL QUALIFIER (000b) PERIPHERAL DEVICE TYPE (01h)									
1		PAGE CODE (80h)									
2		Reserved									
3			P	AGE LENGTH (0A	Ah)						
4											
13			Ur	NIT SERIAL NUME	BER						

## Byte Description

0 Peripheral Data

Bit Description

7-5 PERIPHERAL QUALIFIER: 000b 4-0 PERIPHERAL DEVICE TYPE: 01h

1 PAGE CODE: 80h

2 Reserved

3 PAGE LENGTH: 0Ah

4-13 UNIT SERIAL NUMBER: Serial number of device, right-justified with leading zeroes, in ASCII.

On eServer enabled drives this is the last 10 characters of the 11S identifier

#### 6.3.4 IP 83h: Device Identification

• INQUIRY - 12h (see 5.2.4 on page 80) describes how to request this page.

## 6.3.4.1 Returned Data - Inquiry Page 83h: Device Identification

The Device Identification VPD page (see table 185) provides the means to retrieve designation descriptors applying to the logical unit. For a LUN that is associated with an installed device (see 5.1) the following data is returned:

Table 185 — IP 83h Device Identification VPD page

Durte				E	Bit					
Byte	7	6	5	4	3	2	1	0		
0	PER	IPHERAL QUALI	FIER		PERIF	PHERAL DEVICE	TYPE			
1	PAGE CODE (83h)									
2	(MSB)	(MSB)								
3			PAGE LENGTH (n-3) (LSB)							
		Designation descriptor list								
4	T10 yandar ID based designation descriptor									
41			T10 vendor ID based designation descriptor							
42			l a mia al I lusi	+ /NIA A \ \ \A/\A/	NINI de ei eve eti e					
53			Logicai Uni	t (NAA) - WW	nin designatio	n descriptor				
54			Dolotivo tor	ant nort identi	fior docimatio	n descriptor				
61			Relative tar	get port identi	ner designatio	n descriptor				
62			Dort Name	(NIAA) \\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\	ON decignation	n deceriater				
73			Port Name (NAA) - WWPN designation descriptor							
74	<u> </u>	т	ant Davins No	2m2 (NAA) da	oignotion des	orintor (CAC -	\.\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\			
85		ıar	get Device Na	ame (NAA) de	signation desc	criptor (SAS 0	riiy <i>)</i>			

Each designation descriptor contains information identifying the logical unit, SCSI target device containing the logical unit, or access path (i.e., target port) used by the command and returned parameter data

### Byte Description

- 0 Peripheral Data
  - Bit Description
  - 7-5 Peripheral Qualifier: 000b
  - 4-0 Peripheral Device Type: 01h
- 1 Page Code: 83h
- 2 Reserved
- 3 Page Length:

# Value Interface type

- 46h Fibre Channel attached drives
- 50h SAS attached drives
- 4-41 T10 vendor ID based designation descriptor (see 6.3.4.1.1)
- 42-53 Logical Unit (NAA) WWNN designation descriptor (see 6.3.4.1.2)
- 54-61 Relative target port identifier designation descriptor (see 6.3.4.1.3)
- 62-73 Port Name (NAA) WWPN designation descriptor (see 6.3.4.1.4)
- 74-85 Target Device Name (NAA) designation descriptor (SAS only) (see 6.3.4.1.5)

# 6.3.4.1.1 T10 vendor ID designation descriptor

Table 186 — T10 vendor ID based designation descriptor of IP 83h

Byte				E	Bit						
	7	6	5	4	3	2	1	0			
0	PROTOCOL IDENTIFIER CODE SET										
1	PIV	PIV Reserved ASSOCIATION DESIGNATOR TYPE									
2		Reserved									
3		DESIGNATOR LENGTH (22h)									
4				\/ENDOD	-						
11				VENDOR IDI	ENTIFICATION						
12		_		DD OD LIOT ID	ENTIFICATION						
27				PRODUCTID	ENTIFICATION						
28											
37				SERIAL	NUMBER						

# Byte Description

0 Device ID (T10 vendor ID)

Bit Description

7-4 PROTOCOL IDENTIFIER: 0h

3-0 CODE SET: 2h

Descriptor contains ASCII printable characters (i.e., code values 20h to 7Eh).

1

## Bit Description

7 PIV - Protocol Identifier Valid: 0h

6 Reserved

5-4 ASSOCIATION: 00b
3-0 DESIGNATOR TYPE: 1h

2 Reserved

3 DESIGNATOR LENGTH: 22h

4-11 VENDOR IDENTIFICATION (same as Inquiry Standard Data bytes 8-15)

12-27 PRODUCT IDENTIFICATION (same as Inquiry Standard Data bytes 16-31)

28-37 SERIAL NUMBER (same as the serial number reported in the Unit serial number page bytes 4-13)

# 6.3.4.1.2 Logical Unit (NAA) - WWNN designation descriptor

Table 187 — Logical Unit (NAA) - WWNN designation descriptor of IP 83h

Byte	Bit Bit											
_	7	6	5	4	3	2	1	0				
0		PROTOCOL	IDENTIFIER		CODE SET							
1	PIV	Reserved	ASSO	CIATION	DESIGNATOR TYPE							
2	Reserved											
3				DESIGNATOR	LENGTH (n-3)							
4		, .										
11		_	W	ORLD WIDE NO	DE NAME (WWN	NN)						

# Byte Description

0

Bit Description

7-4 PROTOCOL IDENTIFIER: 0h

3-0 CODE SET: 1h

Descriptor contains binary values.

1

Bit Description

7 PIV - Protocol Identifier Valid: 0h

6 Reserved

5-4 ASSOCIATION: 00b 3-0 DESIGNATOR TYPE: 3h

2 Reserved

3 Identifier Length: 8h4-11 World Wide Node Name

# 6.3.4.1.3 Relative target port identifier designation descriptor

Table 188 — Relative target port identifier designation descriptor of IP 83h

Byte				E	Bit					
	7	6	2	1	0					
0	PROTOCOL IDENTIFIER CODE SET									
1	PIV Reserved ASSOCIATION DESIGNATOR TYPE									
2	Reserved									
3		DESIGNATOR LENGTH (n-3)								
4				D	d					
5				Rese	erved					
6										
7				KELATIVE I	ARGET PORT					

# Byte Description

0

Bit Description

7-4 PROTOCOL IDENTIFIER

3-0 CODE SET: 1h

Descriptor contains binary values.

1

Bit Description

7 PIV - Protocol Identifier Valid: 1h

6 Reserved

5-4 ASSOCIATION: 01b

3-0 DESIGNATOR TYPE: 4h

2 Reserved

3 Identifier Length: 4h

4-5 Reserved

6-71 Port Identifier

Value Description
0001h Fibre/SAS port 0
0002h Fibre/SAS port 1
0003h RS-422 (ADI)

NOTE 37 - This relates to the port on which the Inquiry command was received.

# 6.3.4.1.4 Port Name (NAA) - WWPN designation descriptor

Table 189 — Port Name (NAA) - WWPN designation descriptor of IP 83h

Byte		Bit												
_	7	6	5	4	3	2	1	0						
0		PROTOCOL	IDENTIFIER		CODE SET									
1	PIV	Reserved	ASSOC	CIATION		DESIGNATOR TYPE								
2	Reserved													
3				DESIGNATOR	LENGTH (n-3)									
4						>								
11		<del></del>	W	ORLD WIDE PC	ORT NAME (WWF	PN)								

# Byte Description

0

# Bit Description

- 7-4 PROTOCOL IDENTIFIER
- 3-0 CODE SET: 1h

Descriptor contains binary values.

1

## Bit Description

- 7 PIV Protocol Identifier Valid: 1h
- 6 Reserved
- 5-4 ASSOCIATION: 01b
- 3-0 DESIGNATOR TYPE: 3h
- 2 Reserved
- 3 DESIGNATOR LENGTH: 8h
- 4-11 WORLD WIDE PORT NAME

# 6.3.4.1.5 Target Device Name (NAA) designation descriptor (SAS only)

Table 190 — Target Device Name (NAA) designation descriptor of IP 83h (SAS only)

Byte				В	Bit					
	7	6	5	4	3	2	1	0		
0		E SET								
1	PIV	Reserved	ASSOC	CIATION	DESIGNATOR TYPE					
2	Reserved									
3				DESIGNATOR	LENGTH (n-3)					
4										
11				SAS ADDRE	SS OF DRIVE					

# Byte Description

0

#### Bit Description

- 7-4 PROTOCOL IDENTIFIER
- 3-0 CODE SET: 1h

Descriptor contains binary values.

1

Bit	Description
-----	-------------

7 PIV - Protocol Identifier Valid: 1h

6 Reserved

5-4 ASSOCIATION: 10b 3-0 DESIGNATOR TYPE: 3h

- 2 Reserved
- 3 DESIGNATOR LENGTH: 8h
- 4-11 SAS ADDRESS OF DRIVE This is in NAA IEEE Registered format and is the same as the World Wide Node Name (WWNN) of LUN 0

#### 6.3.5 IP 86h: Extended INQUIRY Data

The Extended INQUIRY Data VPD page (see table 191) provides the application client with a means to obtain information about the logical unit.

**Bit Byte** 7 3 2 6 5 4 1 0 0 PERIPHERAL QUALIFIER (000b) PERIPHERAL DEVICE TYPE (01h) 1 PAGE CODE (86h) 2 Reserved 3 PAGE LENGTH (3Ch) GRD CHK APP CHK REF CHK 4 SPT ACTIVATE MICROCODE (0b) (0b)(0b)UASK\_SUP GROUP\_SUP PRIOR\_SUP **HEADSUP** Reserved 5 ORDSUP (0b) SIMPSUP (1b) (0b) (0b) (0b)(0b) CRD\_SUP Reserved WU\_SUP (0b) NV\_SUP (0b) 6 V\_SUP (0b) (0b) P\_I\_I\_SUP 7 Reserved Reserved LUICLR (0b) (0b) 8 Reserved R\_SUP (0b) Reserved CBCS (0b) 9 Reserved MULTI I\_T NEXUS MICROCODE DOWNLOAD 10 (MSB) EXTENDED SELE-TEST COMPLETION MINUTES 11 (LSB)

MAXIMUM SUPPORTED SENSE DATA LENGTH

Reserved

Table 191 — IP 86h Extended INQUIRY Data VPD page

The following data is returned.

POA\_SUP

#### Byte Description

12

13

14

63

0

#### Bit Description

7-5 PERIPHERAL QUALIFIER: 000b

HOA\_SUP

4-0 PERIPHERAL DEVICE TYPE: 01h (Sequential Access Device)

VSA\_SUP

- 1 PAGE CODE (86h)
- 2 Reserved
- 3 PAGE LENGTH (3Ch)

4

#### Bit Description

7-6 ACTIVATE MICROCODE (00b)

The ACTIVATE MICROCODE field indicates how the device server activates microcode and establishes a unit attention condition when a WRITE BUFFER command (see 5.2.41) with the download microcode mode set to MODE[05h] — Download microcode, save, and activate (see 5.2.41.4 on page 187) or MODE[07h] — Download microcode with offsets, save, and activate (see

Reserved

244

5.2.41.6 on page 187) is processed.

Value Description 00b The actions of the device server may or may not be as defined for values 01b or 01b-10b Not supported 11b Reserved 5-3 SPT A supported protection type (SPT) field indicates the type of protection the logical unit supports. The SPT field is reserved if the PROTECT bit in Standard Inquiry Data (see 5.2.4.1 on page 80) is set to zero. Protection type supported Value 001b Logical block protection: Logical block protection (see 4.6 on page 37) describes this feature. others Reserved 2 GRD CHK (0b) 1 APP\_CHK (0b) 0 REF\_CHK (0b) 5 Bit Description 7-6 Reserved 5 UASK\_SUP (0b) 4 GROUP\_SUP (0b) 3 PRIOR\_SUP (0b) 2 HEADSUP (0b) 1 ORDSUP (0b) 0 SIMPSUP (1b) - The device server supports simple queing. 6 Bit Description 7-4 Reserved 3 WU\_SUP (0b) 2 CRD SUP (0b) 1 NV\_SUP (0b) 0 V\_SUP (0b) 7 Bit Description Reserved 7-4 3 P\_I\_I\_SUP (0b) 2-1 Reserved 0 LUICLR (0b) 8 Bit Description 7-4 Reserved 3 R\_SUP (0b) 2-1 Reserved 0 CBCS (0b)

9

## Bit Description

7-4 Reserved

3-0 MULTI I T NEXUS MICROCODE DOWNLOAD (0b)

The MULTI I\_T NEXUS MICROCODE DOWNLOAD field indicates how the device server handles concurrent attempts to download microcode using the WRITE BUFFER command (see 5.2.38) from multiple I T nexuses.

Value	Description
0h	The handling of concurrent WRITE BUFFER download microcode operations
	from multiple I_T nexus is vendor specific.
1h-3h	Not Supported
4h-Fh	Reserved.

10-11 EXTENDED SELF-TEST COMPLETION MINUTES (0000h): Not supported.

12

## Bit Description

- POA\_SUP (Power On Activate Supported)(1b): A WRITE BUFFER command with the MODE field set to 0Dh (see 5.2.41.8) and the PO ACT bit set to one is supported.
- 6 HRA\_SUP (Hard Reset Activate Supported)(0b): A WRITE BUFFER command with the MODE field set to 0Dh (see 5.2.41.8) and the HR\_ACT bit set to one is not supported.
- 5 VSA\_SUP (Vendor Specific Event Activate Supported)(1b): A WRITE BUFFER command with the MODE field set to 0Dh (see 5.2.41.8) and the VSE\_ACT bit set to one is supported. The vendor specific event is the detection of medium removal.
- 4-0 Reserved.
- 13 MAXIMUM SUPPORTED SENSE DATA LENGTH (0000h): Not supported.
- 14-63 Reserved

## 6.3.6 IP 87h: Mode Page Policy

The Mode Page Policy Page (see table 192) indicates which mode page policy is in effect for each mode page supported by the logical unit.

• INQUIRY - 12h (see 5.2.4 on page 80) describes how to request this page.

## 6.3.6.1 Returned Data - IP 87h: Mode Page Policy

The data returned is shown in table 192.

Table 192 — IP 87h Mode Page Policy page

Deste	Bit											
Byte	7	6	5	4	3	2	1	0				
0	Periph	Peripheral Qualifier (000b) Peripheral Device Type (01h)										
1		Page Code (87h)										
2	(MSB)	(MSB)										
3		Page Length (n-3) (LSB)										
		Mode page policy descriptor list										
4			Ma	do nogo nolio	, descriptor /	'firot\						
7			IVIO	de page polic	y descriptor (	ilisi)						
		·	•	:	·	·	·	·				
n-3			Ma	ماده معمد ماده	, descriptor /	(loot)						
n			IVIO	de page polic	y descriptor (	ุเลรเ)						

## Byte Description

0 Peripheral Data

Bit Description

7-5 Peripheral Qualifier: 000b

4-0 Peripheral Device Type: 01h

1 Page Code: 87h

2-3 Page Length (n-3)

4-n Mode page policy descriptor list. Each mode page policy descriptor (see 6.3.6.1.1) contains information describing the mode page policy for one or more mode pages or subpages. The information in the mode page policy descriptors in this page describe the mode page policy for every mode page and subpage supported by the logical unit.

The first mode page policy descriptor in the list contains a POLICY PAGE CODE field set to 3Fh and a POLICY SUBPAGE CODE field set to FFh, indicating that the descriptor applies to all mode pages and subpages not described by other mode page policy descriptors. The POLICY PAGE CODE field is set to 3Fh and the POLICY SUBPAGE CODE field is set to FFh only in the first mode page policy descriptor in the list. If the POLICY PAGE CODE field contains a value other than 3Fh or a POLICY SUBPAGE CODE field contains a value other than FFh, then the POLICY PAGE CODE field and the POLICY SUBPAGE CODE field indicate a single mode page and a subpage to which the descriptor applies.

## 6.3.6.1.1 Mode page policy descriptor

Table 193 — Mode page policy descriptor of IP 87h

Durto	Bit											
Byte	7	6	5	4	3	2	1	0				
0	Rese	leserved POLICY PAGE CODE										
1	POLICY SUBPAGE CODE											
2	MLUS	Reserved MODE PAGE POLICY										
3		Reserved										

Byte 0	Descr	Description									
	Bit	Description	1								
	7-6	Reserved									
	5-0	POLICY PAGE	E CODE: The mode page to which the descriptor applies.								
1 2	POLIC'	POLICY SUBPAGE CODE: Indicates the subpage to which the descriptor applies.									
	Bit	Description	1								
	7	•	ole logical units share): Indicates if the mode page is shared by multiple logical units.								
		Value	Description								
		0b	Indicates that the mode page and subpage identified by the POLICY PAGE CODE field and POLICY SUBPAGE CODE field is not shared by more than one logical unit.								
		1b	Indicates that the mode page and subpage identified by the POLICY PAGE CODE field and POLICY SUBPAGE CODE field may be shared by more than one logical unit.								
	6-2	Reserved									
	1-0		POLICY: Indicates the mode page policy (see 4.4.1) for the mode page and subpage the POLICY PAGE CODE field and POLICY SUBPAGE CODE field.  Description <shared></shared>								
		01b	<per port="" target=""></per>								
		10b	Obsolete								
		11b	<per i_t="" nexus=""></per>								

The mode page policies including the multiple logical unit shares are described in <u>Mode page policy (see 4.4.1.2 on page 33)</u>.

# 6.3.7 IP 88h: SCSI ports

The SCSI Ports Inquiry page (see table 194) provides a means to retrieve identification descriptors for all the SCSI ports in the drive.

• INQUIRY - 12h (see 5.2.4 on page 80) describes how to request this page.

# 6.3.7.1 Returned Data - IP 88h: SCSI ports

The SCSI ports page is shown in <u>table 194</u>.

Table 194 — IP 88h SCSI Ports VPD page

<b>D</b> (				E	it							
Byte	7	6	5	4	3	2	1	0				
0	periph	peripheral qualifier (000b) peripheral device type (01h)										
1				PAGE CC	DE (88h)							
2	(MSB)	(MSB)										
3	PAGE LENGTH (n-3) (LSB)											
	Designation descriptor list											
4	SCSI port designation descriptor [first]											
				(see ta	ole 195)							
					-							
					•							
			SCSI	port designation		or [last]						
n				(see ta	ole 195)							

Each SCSI Port designation descriptor (see table 195) identifies a SCSI port. The SCSI port designation descriptors may be returned in any order. There will be one SCSI port designation descriptor for each primary port in the drive.

Table 195 — SCSI port designation descriptor of IP 88h

Dista				E	Bit						
Byte	7	6	5	4	3	2	1	0			
0				Doo	a m va d						
1				Kes	erved						
2	(MSB)			DELATIVE DO	RT IDENTIFIER						
3				RELATIVE PO	KI IDENTIFIEK			(LSB)			
4				Pos	erved						
5			Neserved								
6	(MSB)		INITIATOR PORT TRANSPORTID LENGTH (0) (LS								
7											
8			Reserved								
9				Nes							
10	(MSB)		TARCET	Γ PORT DESCR	IDTODS I ENOT	⊔ (n-11)					
11			TARGET	T FORT DESCR	IF TORS LENGT	11 (11-11)		(LSB)			
				Target port	descriptor list						
12			Target r	oort descripto	r [first] (see ta	hle 196)					
			- Idiget p	Jort accompto	i [iii3t] <u>tacc te</u>	<u>IDIC 100)</u>					
			· ·								
n		·	Target p	oort descripto	r [last] <u>(see ta</u>	<u>ible 196)</u>					

Table 196 — Target port descriptor of IP 88h

Butto	Bit												
Byte	7	6	5	4	3	2	1	0					
0		PROTOCOL	IDENTIFIER		CODE SET (1h)								
1	PIV (1b)	Reserved	ASSOCIAT	гюм (01b)	DESIGNATOR TYPE (3h)								
2		Reserved											
3				DESIGNATOR	R LENGTH (8)								
4		WORLD WIDE PORT NAME (WWPN)											
11			VVC	JKLD WIDE PO	KI NAME (WW	PNJ							

The PROTOCOL IDENTIFIER value is 0h on Fibre Channel devices and 6h on SAS devices.

## 6.3.8 IP 90h: Protocol-Specific Logical Unit Information

The Protocol-Specific Logical Unit Information VPD page is returned on LUN 0 of SAS attached devices that support changing the TLR control field in the frame header and contains parameters for logical unit 0 that are protocol-specific based on the I T nexus being used to access the logical unit.

• INQUIRY - 12h (see 5.2.4 on page 80) describes how to request this page.

# 6.3.8.1 Returned Data - IP 90h: SCSI ports

Table 197 defines the Protocol-Specific Logical Unit Information VPD page for logical units with SAS target ports.

Table 197 — IP 90h Protocol-Specific Logical Unit Information VPD page for SAS SSP

Byte	Bit											
Бусе	7	6	5	4	3	2	1	0				
0	PERIPHE	RAL QUALIFIE	L QUALIFIER (000b) PERIPHERAL DEVICE TYPE (01h)									
1		PAGE CODE (90h)										
2	(MSB)		DAGE LENGTH (OCh)									
3		PAGE LENGTH (0Ch) (LSB)										
			Logical uni	t information	descriptor list							
4			Logical unit in	oformation de	ecriptor (firet)(s	cae table 108	2)					
15		•	Logical unit information descriptor (first)(see table 198)									
16		ı	Logical unit information descriptor (second)(see table 198)									
27			ogical driit iiiic	Jimation desc	inploi (Second	<u> </u>	<u>30)</u>					

The fields are defined as follows:

## Byte Description

0 Peripheral Data

Bit Description

7-5 PERIPHERAL QUALIFIER: 000b 4-0 PERIPHERAL DEVICE TYPE: 01h

1 PAGE CODE: 90h 2-3 Page Length: 0Ch

4-27 Logical unit information descriptor list: The logical unit information descriptor list contains a logical unit information descriptor for each SAS target port known to the device server <u>Logical unit information</u> descriptor (see 6.3.8.2 on page 252).

## 6.3.8.2 Logical unit information descriptor

Table 198 defines the logical unit information descriptor for logical units with SAS target ports.

Table 198 — Logical unit information descriptor for SAS SSP of IP 90h

Byte				E	Bit				
Бусе	7	6	6 5 4 3 2 1						
0	(MSB)		RELATIVE PORT IDENTIFIER -						
1		•							
2		Rese	Reserved PROTOCOL IDENTIFIER (6h)						
3			Reserved						
5		•							
6	(MSB)		DESCRIPTOR LENGTH (0004h)						
7		•		DESCRIPTOR E	LNGTT (000 <del>4</del> 11)			(LSB)	
			Per logical	unit SCSI trar	sport specific o	data			
8			Reserved					TLR CTL SUP	
9				Rese	erved				
11				11031	J. 7 O G				

The fields are defined as follows:

#### Byte **Description**

0-1 RELATIVE PORT IDENTIFIER: The Relative Target Port from the IP 83h: Device Identification (see 6.3.4 on page 238).

2

#### Bit Description 7-4

Reserved

3-0 PROTOCOL IDENTIFIER: 06h (i.e. SAS SSP specific descriptor)

3-5 Reserved

6-7 DESCRIPTOR LENGTH: 0004h

8

#### Bit Description

7-1 Reserved

TLR CTL SUP (TLR Control Supported):

Value	Decembelle
Value	Description

The combination of the SCSI target port and logical unit do not support the TLR 0b

CONTROL field in the SSP frame header.

The combination of the SCSI target port and logical unit support the TLR CONTROL 1b

field in the SSP frame header.

9-11 Reserved

## 6.3.9 IP B0h: Sequential-Access device capabilities

<u>INQUIRY - 12h (see 5.2.4 on page 80)</u> describes how to request this pages. The following parameters apply to this request:

• EVPD (Enable Vital Product Data): 1b

· Page Code: B0h

• Allocation Length: 06h bytes available

## 6.3.9.1 Returned Data - IP B0h: Sequential-Access device capabilities

For LUN 0, the following data is returned: This page provides the application client with the means to determine if the features specified in this page are supported by the drive.

Table 199 — IP B0hSequential-Access Device Capabilities Page

Dista	Bit									
Byte	7	6	5	4	3	2	1	0		
0	Periph	Peripheral Qualifier (000b) Peripheral Device Type (01h)								
1		Page Code (B0h)								
2										
3		Page Length (2)								
4	Reserved WORM									
5		Reserved								

If the write once read many (WORM) bit is set to one, the device server supports WORM mode operation (see 4.2.24.3). If the WORM bit is set to zero, the device server does not support WORM mode operation.

## 6.3.10 IP B1h: Manufacturer-assigned Serial Number

<u>INQUIRY - 12h (see 5.2.4 on page 80)</u> describes how to request this pages. The following parameters apply to this request:

• EVPD (Enable Vital Product Data): 1b

· Page Code: B1h

• Allocation Length: 0Eh (14) bytes available

#### 6.3.10.1 Returned Data - IP B1h: Manufacturer-assigned Serial Number

<u>Table 200</u> specifies the Manufacturer-assigned Serial Number VPD page.

Table 200 — IP B1h Manufacturer-assigned Serial Number VPD page

Bit Byte	7	6	5	4	3	2	1	0
0	PERIPH	PERIPHERAL QUALIFIER (000b) PERIPHERAL DEVICE TYPE (01h)						
1		PAGE CODE (B1h)						
2	(MSB)							
3		•		PAGE LENG	TH (000An)			(LSB)
4	(MSB)		MANUFACTURER-ASSIGNED SERIAL NUMBER (LSB					
13		•						

## Byte Description

0 Peripheral Data

Bit Description

7-5 PERIPHERAL QUALIFIER: 000b4-0 PERIPHERAL DEVICE TYPE: 01h

1 PAGE CODE: B1h 2-3 PAGE LENGTH: 0Ah

4-13 MANUFACTURER-ASSIGNED SERIAL NUMBER: Right-aligned ASCII data that is the manufacturer-assigned serial number. If the manufacturer-assigned serial number is not available, the device returns ASCII spaces (20h) in this field. If the manufacturer-assigned serial number differs from the value in the UNIT SERIAL NUMBER field of IP 80h: Unit Serial Number (see 6.2.3), then the value in the UNIT SERIAL NUMBER field is used in building the T10 vendor ID descriptor.

#### 6.3.11 IP B3h: Automation Device Serial Number

INQUIRY - 12h (see 5.2.4 on page 80) describes how to request this page.

## 6.3.11.1 Returned Data - IP B3h: Automation Device Serial Number

<u>Table 200</u> specifies the Automation Device Serial Number VPD page.

Table 201 — IP B3h Automation Device Serial Number VPD page

Bit Byte	7	6	5	4	3	2	1	0		
0	PERIPH	ERAL QUALIFIER	(000b)	PERIPHERAL DEVICE TYPE (01h)						
1	PAGE CODE (B3h)									
2	Reserved									
3		PAGE LENGTH (n-3)								
4	(MSB)									
n		•	AUTO	JMATION DEVI	CE SERIAL NUN	NREK		(LSB)		

# Byte Description

0 Peripheral Data

Bit Description

7-5 PERIPHERAL QUALIFIER: 000b4-0 PERIPHERAL DEVICE TYPE: 01h

1 PAGE CODE: B3h

2-3 PAGE LENGTH: n-3. The maximum value of this field is 20h.

4-n AUTOMATION DEVICE SERIAL NUMBER: The automation device serial number set during the processesing of the most recently processed SET AUTOMATION DEVICE ATTRIBUTES command on the ADC device server (i.e., LUN 2). If no automation device serial number has been set, then the device server returns 32 bytes of ASCII spaces (20h) in this field.

#### 6.3.12 IP B4h: Data Transfer Device Element Address

INQUIRY - 12h (see 5.2.4 on page 80) describes how to request this page.

## 6.3.12.1 Returned Data - IP B4h: Data Transfer Device Element Address

<u>Table 202</u> specifies the Data Transfer Device Element Address VPD page.

Table 202 — IP 84h Data Transfer Device Element Address VPD page

Bit Byte	7	6	5	4	3	2	1	0		
0	PERIPH	ERAL QUALIFIER	(000b)	PERIPHERAL DEVICE TYPE (01h)						
1		PAGE CODE (B4h)								
2		Reserved								
3		PAGE LENGTH (n-3)								
4	(MSB)  DATA TRANSFER DEVICE ELEMENT ADDRESS									
n		· 	DATA IF	RANSFER DEVI	JE ELEMENT A	DDRESS		(LSB)		

# Byte Description

0 Peripheral Data

Bit Description

7-5 PERIPHERAL QUALIFIER: 000b 4-0 PERIPHERAL DEVICE TYPE: 01h

1 PAGE CODE: B4h

2-3 PAGE LENGTH: n-3. The maximum value of this field is 04h.

4-n DATA TRANSFER DEVICE ELEMENT ADDRESS: The Data Transfer Device Element Address set during the processesing of the most recently processed SET AUTOMATION DEVICE ATTRIBUTES command on the ADC device server (i.e., LUN 2). If no data transfer device Element Address has been set, then the device server returns FEFF FEFFh. in this field.

# 6.3.13 IP C0h: Drive Component Revision Levels

• INQUIRY - 12h (see 5.2.4 on page 80) describes how to request this page.

# 6.3.13.1 Returned Data - IP C0h: Drive Component Revision Levels

For LUN 0, the following data is returned:

Table 203 — IP C0h: Drive Component Revision Levels

Dista				В	it			
Byte	7 msb	6	5	4	3	2	1	0 Isb
0	PERIPHERAL QUALIFIER (000b) PERIPHERAL DEVICE TYPE (01h)							
1	PAGE CODE (C0h)							
2		Reserved						
3	PAGE LENGTH (27h)							
4	CODE NAME							
15		CODE NAME						
16				TIME(HHMMS	29)			
22								
23				DATE (VVVVI	MDD)			
30		DATE (YYYYMMDD)						
31				PLATFORM				
42				I LATI ORW				

## Byte Description

- 0 Peripheral Data
  - Bit Description
  - 7-5 Peripheral Qualifier: 000b
  - 4-0 Peripheral Device Type: 01h
- 1 Page Code: C0h
- 2 Reserved
- 3 Page Length: 27h
- 4-15 CODE NAME The code name definition is not published.
- 16-22 TIME Time the code was built in HHMMSS format with a trailing NULL (i.e., 00h). Prior to May 2010, this field was set to ASCII zeros (i.e., 30h)
- 23-30 DATE The date the code was built.

31-42 PLATFORM - ASCII characters containing the cpackage>[\_<variant>] for the drive. This is left-aligned with ASCII spaces padded at the end. This is set to ASCII zeros on Ultrium drive platforms released prior to May 2010.

Table 204 — PLATFORM definition of IP C0h

Symbol		Description
	Value	Transport Protocol
<pre><pre><pre>o</pre></pre></pre>	sas	Serial Attached SCSI (SAS)
	fcp	Fibre Channel (FC)
	Value	Туре
.n.a.l.a.a.a.	fh	Full height
<package></package>	hh	Half height
	hl	Half height V2
. ,	Value	Туре
<variant></variant>	f	FIPS

## 6.3.14 IP C1h: Drive Serial Numbers

• INQUIRY - 12h (see 5.2.4 on page 80) describes how to request this page.

## 6.3.14.1 Returned Data - IP C1h: Drive Serial Numbers

For LUN 0, the following data is returned:

Table 205 — IP C1h: Drive Serial Numbers

Disto	Bit									
Byte	7	6	5	4	3	2	1	0		
0	Periph	Peripheral Qualifier (000b) Peripheral Device Type (01h)								
1		Page Code (C1h)								
2		Reserved								
3		Page Length (18h)								
4										
15		Manufacturing Serial Number								
16		Reported Serial Number								
27				керопеа 5	enai Number					

# Byte Description

0 Peripheral Data

Bit Description

7-5 Peripheral Qualifier: 000b4-0 Peripheral Device Type: 01h

1 Page Code: C1h

2 Reserved

3 Page Length: 18h

4-15 Manufacturing Serial Number (set at time of manufacture), right-justified with leading zeroes, in ASCII

16-27 Reported Serial Number over the primary interface (e.g. Inquiry pages 80h and 83h), right-justified with leading zeroes, in ASCII

# 6.3.15 IP C7h: Device Unique Configuration Data

This page provides data required by IBM eServers for connection to the drive.

• INQUIRY - 12h (see 5.2.4 on page 80) describes how to request this page.

# 6.3.15.1 Returned Data - IP C7h: Device Unique Configuration Data

The Device Unique Configuration Data Page is supported on IBM eServer capable drives only. On drives that are not eServer capable this page will be returned with all zero data.

# 6.3.16 IP C8h: Mode Parameter Default Settings

This page provides data required by IBM eServers for connection to the drive.

• INQUIRY - 12h (see 5.2.4 on page 80) describes how to request this page.

# 6.3.16.1 Returned Data - IP C8h: Mode Parameter Default Settings

The Mode Parameter Default Settings page is supported on IBM eServer capable drives only. On drives that are not eServer capable this page will be returned with all zero data. For LUN 0, the following data is returned on eServer capable drives only.

# 6.4 Log Parameters (LP)

Log parameters are used in relation to <u>LOG SELECT - 4Ch (see 5.2.7 on page 90)</u> commands and <u>LOG SENSE - 4Dh (see 5.2.8 on page 91)</u> commands.

<u>Index Of Counters (log parameters not in counter format are not included) (see page 491)</u> provides an alphabetized list of all counter type log parameters and may be useful in finding parameters that provide the information desired.

## 6.4.1 Log Page Format

Each log page begins with a four-byte page header followed by zero or more variable-length log parameters defined for that log page. The log page format is defined in <u>table 206</u>.

Bit **Byte** 7 msb 5 4 0 Isb 0 DS SPF PAGE CODE 1 SUBPAGE CODE 2 (MSB) PAGE LENGTH (n-3) 3 (LSB) Log parameter(s) (see 6.4.2) 4 Log parameter (First) Log parameter (Last)

Table 206 — Log page format

If the SPF bit is set to 0 then the Subpage Code field is reserved and is set to zero. If the SPF bit is set to one, then the subpage format is being used and the Subpage Code field is used to determine which log parameters are to be returned.

WARNING

The parameters in log pages should be dynamically parsed as some parameters may not be present and new parameters may be inserted. The relative location of parameters have changed and are anticipated to continue to change.

WARNING

WARNING

#### **6.4.2 Log Parameter Format**

Each log parameter begins with a 4-byte parameter header, followed by 1 or more bytes of parameter data. Table 207 shows the log parameter format. The fields of byte 2 are described under clause 6.4.2.1.

Table 207 — Log Parameter Format

Durte	Bit									
Byte	7 msb	6	5	4	3	2	1	0 lsb		
0	MSB	_		DADAME						
1			PARAMETER CODE LSB							
2	DU	DS	TSD	ETC	TN	ИС	Rsvd	LP		
3				PARAMETER	LENGTH (n-3)					
4	MSB	_	Parameter Value LSB							
n		-								

## 6.4.2.1 Log Parameter Byte 2 — Control Byte

A Log Parameter Control Byte is returned for each parameter code described in the log pages. The Log Parameter Control Byte is described here one time only. Any parameters using a different Log Parameter Control Byte have that byte described within that parameter.

The contents of this byte are constant; the user cannot set these values. This byte is part of the returned data described in the SCSI standard; it is described in the following list:

Bit	Description
7	DU (Disable Update): 0b
6	DS (Disable Save): 1b
5	TSD (Target Save Disable): 1b
4	ETC (Enable Threshold Comparison): 0b
3-2	TMC (Threshold Met Comparison): 00b
1	Rsvd (Reserved)
0	LP (List Parameter): 0b (indicates this is a log counter)

## 6.4.3 General Log Parameter Reset Behavior

Unless otherwise specified, each log counter is reset when read by the Log Sense command. Specific exceptions include Pages 30h, 37h, and 3Dh. Several pages have values which are reset at load time, as specified.

## 6.4.4 LP 00h: Supported Log Pages

See <u>LOG SELECT - 4Ch (see 5.2.7 on page 90)</u> and <u>LOG SENSE - 4Dh (see 5.2.8 on page 91)</u> for directions on how to use this page. This log page returns the list of log pages supported. There may be log pages which can be read or reset which are not included in this list. Such pages are for engineering or manufacturing use and are not intended for general use. This page does not contain any log parameters.

## 6.4.4.1 Parameter Reset Behavior (00h)

This data can be neither reset nor written.

## 6.4.4.2 Parameter Definitions (00h)

## Byte Description

0

Bit Description
7-6 Reserved
5-0 Page Code (000000b)

- 1 Reserved
- 2-3 Page Length (n-3)
- 4-n Supported Log Pages: This field is a list of 1-byte log page codes and may include some or all of the following:

Code	Log Page
00h	LP 00h: Supported Log Pages (see 6.4.4 on page 264)
02h	LP 02h: Write Error Counters (see 6.4.5 on page 265)
03h	LP 03h: Read Error Counters (see 6.4.6 on page 266)
06h	LP 06h: Non-Medium Errors (see 6.4.7 on page 267)
0Ch	LP 0Ch: Sequential-Access Device (see 6.4.8 on page 268)
11h	LP 11h: DT Device Status (see 6.4.9 on page 270)
14h	LP 14h: Device Statistics (see 6.4.10 on page 288)
16h	LP 16h: Tape diagnostic data (see 6.4.11 on page 295)
17h	LP 17h: Volume Statistics (see 6.4.12 on page 299)
18h	LP 18h: Protocol-specific port (see 6.4.13 on page 306)
1Ah	LP 1A: Power Condition Transitions (see 6.4.14 on page 310)
1Bh	LP 1Bh: Data Compression (see 6.4.15 on page 311)
2Eh	LP 2Eh: TapeAlerts (see 6.4.16 on page 314)
30h	<u>LP 30h: Tape Usage (see 6.4.17 on page 317)</u>
31h	LP 31h: Tape capacity (see 6.4.18 on page 318)
32h	LP 32h: Data compression (see 6.4.19 on page 319)
33h	LP 33h: Write Errors (see 6.4.20 on page 320)
34h	LP 34h: Read Forward Errors (see 6.4.21 on page 322)
37h	LP 37h: Performance Characteristics (see 6.4.22 on page 324)
38h	LP 38h: Blocks/Bytes Transferred (see 6.4.23 on page 336)
39h	LP 39h: Host Port 0 Interface Errors (see 6.4.24 on page 338)
3Bh	LP 3Bh: Host Port 1 Interface Errors (see 6.4.26 on page 340)
3Ch	LP 3Ch: Drive usage information (see 6.4.27 on page 341)
3Dh	LP 3Dh: Subsystem Statistics (see 6.4.28 on page 343)

The following log pages are for engineering use only and are not reported as a supported log page, but can be used with Log Sense and Log Select commands:

Code	Log Page
3Ah	LP 3Ah: Drive control verification (see 6.4.25 on page 339)
3Eh	LP 3Eh: Engineering Use (see 6.4.29 on page 345)
3E[3Ch]	LP 3Eh[3Ch]: Drive Control Statistics (see 6.4.30 on page 346)

#### 6.4.5 LP 02h: Write Error Counters

See <u>LOG SELECT - 4Ch (see 5.2.7 on page 90)</u> and <u>LOG SENSE - 4Dh (see 5.2.8 on page 91)</u> for directions on how to use this page. This page is for Write Errors.

# 6.4.5.1 Parameter Reset Behavior (02h)

Parameters in this page are reset when a cartridge is loaded.

This data can be reset to zero, but cannot be written.

#### 6.4.5.2 Parameter Definitions (02h)

Parameters 0000h through 0002h are not supported and are returned as 0000\_0000h.

WARNING — WARNIN

Table 208 — LP 02h: Write Error Log Parameters

Parameter Code (in Hex)	Counter: Description	Size			
0000h	Not supported	4			
0001h	Not supported	4			
0002h	Not supported	4			
0003h	Total Corrected Write Errors {02h:0003h}: Error Recovery Procedures (ERP) were required to successfully write the data set (i.e., temp)_a	4			
0004h	Total Write Retries {02h:0004h}: This is the sum of parameter 0003h and 0006h	4			
0005h	<b>Total Write Kibibytes Processed {02h:0005h}:</b> Each count represents a kibibyte (1024 bytes) of data processed across the host interface during write-type commands. The count does not include ERP retries. This field is identical to the Host Write Kibibytes Processed field of Page Code 38h, parameter code 0001h.	6			
0006h	Total Uncorrected Write Errors {02h:0006h}: Write errors where ERPs were unsuccessful in writing the data set (i.e., perm)_a	4			
8000h	Unspecified	8			
8001h	Unspecified	4			
These counters are updated at the end of the recovery. If the recovery is successful, then Parm 3 is incremented. If recovery is unsuccessful (i.e., perm), then Parm 6 is incremented.					

#### 6.4.6 LP 03h: Read Error Counters

See LOG SELECT - 4Ch (see 5.2.7 on page 90) and LOG SENSE - 4Dh (see 5.2.8 on page 91) for directions on how to use this page. This page is for Read Errors.

#### 6.4.6.1 Parameter Reset Behavior (03h)

Parameters in this page are reset when a cartridge is loaded.

This data can be reset to zero, but cannot be written.

#### 6.4.6.2 Parameter Definitions (03h)

Parameters 0000h through 0002h are not supported and are returned as 0000\_0000h.

= WARNING = The parameters in log pages should be dynamically parsed as some parameters may not be present and new parameters may be inserted. The relative location of parameters have changed and are anticipated to continue = WARNING : WARNING =

Table 209 — LP 03h: Read Error Log Parameters

Parameter Code	Counter: Description	Size
0000h	Not supported	4
0001h	Not supported	4
0002h	Not supported	4
0003h	Total Corrected Read Errors {03h:0003h}: Error Recovery Procedures (ERP) were required to successfully read the data set (i.e., temp)_a	4
0004h	Total Read Retries {03h:0004h}: This is the sum of parameter 0003h and 0006h	4
0005h	<b>Total Read Kibibtyes Processed {03h:0005h}:</b> Each count represents a kibibtye (1024 bytes) processed across the host interface during read-type commands. The count does not include ERP retries. This field is identical to the Host Read Kibibtyes Processed field of Page Code 38h, parameter code 0003h.	6
0006h	Total Uncorrected Read Errors {03h:0006h}: Read errors where ERPs were unsuccessful in reading the data set (i.e., perm)_a	4
8000h	Unspecified	8
<sup>a</sup> These	Unspecified  counters are updated at the end of the recovery. If the recovery is successful, then ented. If recovery is unsuccessful (i.e., perm), then Parm 6 is incremented.	

incremented. If recovery is unsuccessful (i.e., perm), then Parm 6 is incremented.

#### 6.4.7 LP 06h: Non-Medium Errors

See <u>LOG SELECT - 4Ch (see 5.2.7 on page 90)</u> and <u>LOG SENSE - 4Dh (see 5.2.8 on page 91)</u> for directions on how to use this page. This page sums the occurrences of error events other than write or read failures. Parameter codes do not discriminate among the various types of events.

#### 6.4.7.1 Parameter Reset Behavior (06h)

Parameters in this page are never reset.

#### 6.4.7.2 Parameter Definitions (06h)

WARNING
 The parameters in log pages should be dynamically parsed as some parameters may not be present and new parameters may be inserted. The relative location of parameters have changed and are anticipated to continue to change..
 WARNING

Table 210 — LP 06h: Non-Medium Errors log parameter codes

Code	Counter: Description	Size
0000h	Total Non-Medium Error Count {06h:0000h}:	4

#### 6.4.8 LP 0Ch: Sequential-Access Device

See <u>LOG SELECT - 4Ch (see 5.2.7 on page 90)</u> and <u>LOG SENSE - 4Dh (see 5.2.8 on page 91)</u> for directions on how to use this page. This page is for counters specific to tape drives.

# 6.4.8.1 Parameter Reset Behavior (0Ch)

Parameters in this page are reset on load.

#### 6.4.8.2 Parameter Definitions (0Ch)

to change.

WARNING WARNING

The parameters in log pages should be dynamically parsed as some parameters may not be present and new parameters may be inserted. The relative location of parameters have changed and are anticipated to continue

= WARNING ----- WARNING ----- WARNING

Table 211 — LP 0Ch: Sequential-Access Device log parameters (part 1 of 2)

Code	Counter: Description	Length
0000h	<b>Total Channel Write Bytes {0Ch:0000h}:</b> The total number of bytes of data written from the host on this mount.	8
0001h	<b>Total Device Write Bytes {0Ch:0001h}:</b> The total number of bytes of data written to tape on this mount, not counting ECC and formatting overhead. This is the number of data bytes after compression.	8
0002h	<b>Total Device Read Bytes {0Ch:0002h}:</b> The total number of bytes of data read from tape on this mount, not counting ECC and formatting overhead. This is the number of compressed data bytes read from media before decompression.	8
0003h	<b>Total Channel Read Bytes {0Ch:0003h}:</b> The total number of bytes of data read to the host on this mount.	8
0004h	<b>Approximate native capacity from BOP to EOD {0Ch:0004h}:</b> This is in megabytes (i.e., 10 <sup>6</sup> ). This is not sensitive to the current position of the medium. The approximate native capacity between EOD and EW is the difference of parameter 0005h and this parameter. Conditions may occur that reduce the amount of data that is written before reaching EW. EOD may be beyond LEOP. A value of all bits set to one indicates that this information is invalid (e.g., no volume is mounted, EOD information needs to be rebuilt).	4
0005h	Approximate native capacity between BOP and EW of the current partition {0Ch:0005h}: This is in megabytes (i.e., 10 <sup>6</sup> ). If no volume is mounted or this value is unknown the device server shall set all bits in this parameter to one.	4
0006h	Minimum native capacity between EW and LEOP of the current partition {0Ch:0006h}: This is in megabytes (i.e., 10 <sup>6</sup> ). If no volume is mounted the device server shall set all bits in this parameter to one.	4
0007h	Approximate native capacity from BOP to the current position of the medium {0Ch:0007h}: This is in megabytes (i.e., 10 <sup>6</sup> ). If no volume is mounted the device server shall set all bits in this parameter to one.	4
0008h	Maximum native capacity that is currently allowed to be in the device object buffer {0Ch:0008h}: This is in megabytes (i.e., 10 <sup>6</sup> ). This value may change depending on the current position of the medium (e.g., available native capacity may decrease as the current position of the medium approaches LEOP).	4
0100h	Cleaning Requested {0Ch:0100h}: A non-zero value indicates a cleaning action is requested by the drive.	8

Table 211 — LP 0Ch: Sequential-Access Device log parameters (part 2 of 2)

Code	Counter: Description	Length
8000h	<b>Total Megabytes Processed Since Cleaning {0Ch:8000h}:</b> Number of megabytes (10 <sup>6</sup> ) processed to tape since last cleaning (written after compression/read before decompression)	4
8001h	<b>Lifetime load cycles {0Ch:8001h}:</b> This is the number of times the drive has been loaded in its lifetime.	4
8002h	<b>Lifetime cleaning cycles {0Ch:8002h}:</b> This is the number of times over its lifetime the drive has been cleaned using a cleaner cartridge.	4
8003h	<b>Lifetime Power-on time {0Ch:8003h}:</b> This is the number of seconds the drive has been powered on over its lifetime.	4

#### 6.4.9 LP 11h: DT Device Status

See <u>LOG SELECT - 4Ch (see 5.2.7 on page 90)</u> and <u>LOG SENSE - 4Dh (see 5.2.8 on page 91)</u> for directions on how to use this page.

The DT Device Status log page (see table 212) defines log information pertaining to the DT device (i.e. tape drive) and DT device primary ports.

Table 212 — LP 11h: DT Device Status log page

<b>D</b> (				E	Bit			
Byte	7 msb	6	5	4	3	2	1	0 lsb
0	Reserved PAGE CODE (11h)							
1	Reserved							
2	(MSB)	(MSB) PAGE LENGTH (n-3) (LSB)						
3								
4								
n		DT Device Status log parameters						

#### Byte Description

0

Bit Description

7-6 Reserved

5-0 Page Code (11h)

1 Reserved

2-3 Page Length (n-3)

4-n DT Device Status log parameters (see 6.4.9.2).

# 6.4.9.1 Parameter Reset Behavior (11h)

## 6.4.9.2 Parameter Definitions (11h)

— WARNING — WARNING = WARNING =

The parameters in log pages should be dynamically parsed as some parameters may not be present and new parameters may be inserted. The relative location of parameters have changed and are anticipated to continue to change.

— WARNING — WARNING —

DT Device Status log parameters are shown in table 213.

Table 213 — DT Device Status log parameters of LP 11h (part 1 of 2)

Parameter Code	Description
0000h	Very high frequency data {11h:0000h}: (see 6.4.9.2.1)
0001h	Very high frequency polling delay {11h:0001h}: (see 6.4.9.2.2)
0004h	Extended very high frequency data {11h:0004h}: (see 6.4.9.2.3)
0101h - 01FFh	DT device primary port status {11h:0101h+}: (see 6.4.9.2.4)
0200h	Potential conflict list entries present {11h:0200h}: (see 6.4.9.2.7)
0201h to 02FFh	Potential conflict list {11h:0201h+): (see 6.4.9.2.8)  Note - At the time of publication, this device only supports a list of five entries (i.e., 0201h to 0205h).
8000h	Medium VolSer {11h:8000h}: (see 6.4.9.2.9)

**Table 213 — DT Device Status log parameters of LP 11h** (part 2 of 2)

Parameter Code	Description
8001h	Medium Status Data {11h:8001h}: (see 6.4.9.2.10)
8100h	Drive Status Data {11h:8100h): (see 6.4.9.2.11)
9101h to 9102h	Primary Port Features {11h:9101h+}: (see 6.4.9.2.12)
E000h	Encryption Control Descriptor {11h:E00h}: (see 6.4.9.2.13)

# 6.4.9.2.1 Very high frequency data log parameter

The very high frequency data log parameter format is shown in Table 214.

Table 214 — Very high frequency data log parameter format of LP 11h

				В	it				
Byte	7 msb	6	5	4	3	2	1	0 Isb	
0	(MSB)				· (0000L)				
1			PARAMETER CODE (0000h) (LSB)						
2	DU (0)	Obsolete	TSD (0)	ETC (0)	TMC	TMC (0) LBIN (1)			
3		PARAMETER LENGTH (04h)							
4		VHF data descriptor							
7		_		vhr data	aescriptor		•		

# Byte Description

- 0-1 PARAMETER CODE: (0000h)
- 2 Parameter list control byte binary format list log parameter

# Bit Description 7 DU: 0b 6 Obsolete 5 TSD: 0b 4 ETC: 0b 3-2 TMC: 00b 1 LBIN: 1b 0 LP: 1b

- 3 PARAMETER LENGTH: (04h)
  - Transfer of the complete parameter is required.
- 4-7 VHF data descriptor

The VHF data descriptor is defined in <u>table 215</u>. Returned data shall reflect the last known values since the DT device initialized.

Table 215 — VHF data descriptor

Byte				В	it			
	7 msb	6	5	4	3	2	1	0 lsb
4	PAMR	HIU	MACC	CMPR	WRTP	CRQST	CRQRD	DINIT
5	INXTN	Rsvd	RAA	MPRSNT	Rsvd	MSTD	MTHRD	MOUNTED
6	DT DEVICE ACTIVITY							
7	VS	Rsvd	TDDEC	EPP	ESR	RRQST	INTFC	TAFC

NOTE 38 - In addition to reliance on indication of initialization completion, reliance on returned values should also take into consideration conditions indicated by changes in Tape Alert flag status, and process those first as needed.

# Byte Description

4

Bit	Description	on								
7	PAMR (prev	vent/allow medium removal):								
	Value	Description								
	0b	Medium removal is not prevented as the result of a PREVENT/ALLOW MEDIUM								
		REMOVAL command on LUN 0.								
	1b	Medium removal is prevented as the result of a PREVENT/ALLOW MEDIUM REMOVAL command on LUN 0.								
6	HIII (host ir	HIU (host initiated unload):								
Ū	Value	Description								
	0b	Volume is not in an unload state due to a LOAD UNLOAD command.								
	1b	Volume is unloaded due to a LOAD UNLOAD command on LUN 0.								
5	MACC (med	dium auxiliary memory accessible):								
	Value <sup>`</sup>	Description								
	0b	Medium Auxiliary Memory (MAM) is not accessible.								
	1b	Medium Auxiliary Memory (MAM) is accessible.								
4	CMPR (compress):									
	Value	Description								
	0b	Data compression is not enabled.								
	1b	Data compression is enabled.								
3	WRTP (write protect): only valid if the MPRSNT bit is set to one.									
	Value	Description								
	0b	Volume is not physically write protected.								
	1b	Volume is physically write protected.								
2	•	eaning requested):								
	Value	Description								
	0b	Cleaning not requested.								
	1b	Cleaning requested.								
1		eaning required):								
	Value	Description								
	0b	Cleaning not required; normal operation possible without cleaning.								
	1b	Cleaning required; normal operation may not be possible until drive is cleaned.								
0		device initialized):								
	Value	Description								
	0b	DT device initialization is required or incomplete. VHF data not valid.								
	1b	VHF data valid								

5

#### Bit Description

7 INXTN (in transition): Indicates the stability of the other bits in this byte (i.e., byte 5) and whether state transitions are taking place.

Value Description

Ob Device is in the state reflected by the remaining bits in this byte and is making no

attempt to leave this state.

1b Device is transitioning to another state; other bits in this byte are in transition.

6 Rsvd (Reserved)

5 RAA (robotic access allowed):

Value Description

0b Library or Medium Changer should not move a volume to or from the device.

1b Library or Medium Changer may move a volume to or from the device.

4 MPRSNT (medium present):

Value Description

Ob The device does not detect a volume present.

1b The device detects a volume present.

3 Rsvd (Reserved)

2 MSTD (medium seated):

Value Description

Ob Cartridge is not seated; further mechanical motion remains in order to complete

the loading process, exclusive of tape threading.

1b Cartridge is mechanically seated within the loading mechanism (i.e., the physical

loading process has completed).

1 MTHRD (medium threaded):

The value of the MTHRD bit may or may not correspond to the device responding with a status of GOOD to a TEST UNIT READY command, as additional processing may be required by the device after threading before the logical unit becomes ready.

#### Value Description

0b Medium is not threaded.

1b Medium has been threaded; tape motion operations are possible.

The value of the MTHRD bit may or may not correspond to the DT device responding with a status of GOOD to a TEST UNIT READY command, as additional processing may be required by the DT device after threading before

the logical unit becomes ready.

0 MOUNTED:

Value Description

0b Volume is not mounted.

1b Volume is mounted. The drive may be able to respond to a TEST UNIT READY

command with GOOD status, however when a cleaning cartridge or microcode update cartridge is loaded the drive may respond to a TEST UNIT READY command with a CHECK CONDITON with the sense key set to NOT READY.

DT DEVICE ACTIVITY: This field is used to describe the current activity of the device

,		IOL MOTIVITIE	The hold is doed to decembe the current detivity of the device
	Value	Descrip	otion
	00h	No DT	device activity
	01h		g operation in progress
	02h	Medium	n is being loaded
	03h	Medium	n is being unloaded
	04h	Other m	nedium activity
	05h	Reading	g from medium
	06h	Writing	to medium
	07h	Locating	g medium
	08h	Rewind	ing medium
	09h	Erasing	medium
	0Ah	Formatt	ting medium
	0Bh	Calibrat	ting medium
	0Ch	Other D	OT device activity
	0Dh	Microco	ode update in progress
	0Eh		g encrypted from medium
	0Fh	Writing	encrypted to medium
7			
	Bit	Description	
	7	vs: (0b)	
	6-3	Reserved	
	5	TDDEC (tape	diagnostic data entry created):
		Value	Description
		0b	The device has not created a new Tape Diagnostic Data log page entry since the
			last retrieval of any of the parameters from the Tape Diagnostic Data log page by
			this I_T nexus.
		1b	The device has created a new Tape Diagnostic Data log page entry since the last
			retrieval of any of the parameters from the Tape Diagnostic Data log page by this
			I_T nexus.
	4	` .	ion parameters present):
		Value	Description
		0b	The device does not have a set of saved data encryption parameters with either
			the ENCRYPTION MODE field set to a value other than DISABLE or the
			DECRYPTION MODE field set to a value other than DISABLE

DECRYPTION MODE field set to a value other than DISABLE 3 ESR (encryption service request):

1b

6

Value

Description

At least one bit in the SERVICE REQUEST INDICATORS field in the DT device ADC data encryption control status log parameter has been set to one since the last retrieval of the DT device ADC data encryption control status log parameter by this I\_T nexus and at least one bit in the SERVICE REQUEST INDICATORS field in the DT device ADC data encryption control status log parameter is set to one.

No bits in the SERVICE REQUEST INDICATORS field in the DT device ADC data encryption control status log parameters have been set to one since the last retrieval of the DT device ADC data encryption control status log parameter by

ENCRYPTION MODE field set to a value other than DISABLE or the

The device has a set of saved data encryption parameters with either the

this I\_T nexus or all of the bits in the SERVICE REQUEST INDICATORS field in the DT device ADC data encryption control status log parameter are set to zero.

2 RRQST (recovery requested):

Value Description

0b No recovery procedure is requested.

1b Device has detected an error and one or more requested recovery procedures

are available via the ADC Requested Recovery log page.

1 INTFC (interface changed):

Value Description

0b No fields in the DT device primary port status log parameters have changed since

the last retrieval of any of the DT device primary port status log parameters from

the DT Device Status log page over this I\_T nexus.

1b One or more fields in the DT device primary port status log parameters have

changed since the last retrieval of any of the DT device primary port status log

parameters from the DT Device Status log page over this I\_T nexus.

0 TAFC (TapeAlert state flag changed):

Value Description

0b No TapeAlert state flag has changed since the last retrieval of the TapeAlert

Response log page over this I\_T nexus.

1b At least one TapeAlert state flag has changed since the last retrieval of the

TapeAlert Response log page over this I\_T nexus.

#### 6.4.9.2.2 Very high frequency polling delay log parameter

The very high frequency polling delay log parameter format is shown in <u>Table 216</u>.

Table 216 — Very high frequency polling delay log parameter format of LP 11h

Deste	Bit									
Byte	7 msb	6	5	4	3	2	1	0 lsb		
0	(MSB)	_	PARAMETER CODE (0001h) (LSB)							
1		_								
2	DU (0)	Obsolete	TSD (0)	ETC (0)	TMC	(00)	LBIN (1)	LP (1)		
3				PARAMETER I	ENGTH (02h)					
4	(MSB)		· ,							
5		_		VHF POLL	NG DELAY		•	(LSB)		

## Byte Description

0-1 PARAMETER CODE: (0001h)

2 Parameter list control byte - binary format list log parameter

Bit Description

7 DU: 0b

6 Obsolete

5 TSD: 0b

4 ETC: 0b

3-2 TMC: 00b

1 LBIN: 1b

0 LP: 1b

3 PARAMETER LENGTH: (02h)

Transfer of the complete parameter is required.

4-7 VHF POLLING DELAY: The minimum delay in milliseconds before another DT Device Status log page should be requested.

#### 6.4.9.2.3 Extended very high frequency data log parameter

The extended very high frequency data log parameter format is shown in <u>table 217</u>. This should be used instead of the very high frequency data log parameter.

Table 217 — Extended very high frequency data log parameter format of LP 11h

Durte				В	it				
Byte	7 msb	6	5	4	3	2	1	0 lsb	
0	(MSB)			DADAMETER	0005 (000	16\			
1				PARAMETER	R CODE (0004	+11)		(LSB)	
	Parameter list control byte - binary format list log parameter								
2	DU	Obsolete	TSD	ETC	TN	ИC	FORMAT AI	ND LINKING	
3	PARAMETER LENGTH (08h)								
4									
7				VHF data	descriptor				
8	Reserved OVER- PCL WRITE						PCL_P		
9	Vendor-Reserved HOSTLOGIN SM						SM		
10			Decembed						
11				Reserved					

## Byte Description

0 to 1 PARAMETER CODE: (0004h)

2 Parameter list control byte - binary format list log parameter

Bit	Description
7	DU: 0b
6	Obsolete
5	TSD: 0b
4	ETC: 0b
3-2	тмс: 00b
1	LBIN: 1b
0	LP: 1b

- 3 PARAMETER LENGTH: (08h)
- 4 to 7 The VHF data descriptor is defined in <u>Very high frequency data log parameter (see 6.4.9.2.1 on page 271)</u>.

8

Bit	Description	
7 to 2	Reserved	
1	OVERWRITE:	
	Value	Description
	0b	The OVERWRITE bit is set to zero if:
		a)a Hard Reset occurs; or
		b)a volume is inserted (i.e., MPRSNT (medium present) of the VHF parameter
		data transitions from 0b to 1b).
	1b	An overwrite occurs and the write mode is not set to append-only mode.
0	PCL_P (poten	tial conflict list present) bit is set as specified in 4.20 and indicates the presence of

276 IBM LTO SCSI Reference

the Potential conflict list log parameter(s) (see 6.4.9.2.8 on page 282).

9			
	Bit	Description	
	7 to 2	Reserved	
	1	HOSTLOGIN:	
		Value	Description
		0b	No host login has occured since this I_T nexus last retrieved the Host Login Table.
		1b	At least one host login has occured since this I_T nexus last retrieved the Host Login Table.
	0	SM (sleep mo	de): Indicates the power condition in which the drive is operating (see 6.6.16 MP
		1Ah: Power C	Condition)
		Value	Description
		0b	The device is operating in the active power condition
		1b	The device is operating in one of the low power states (e.g., IDLE_C)
10-11	Reserv	ed ·	

# 6.4.9.2.4 Primary port status log parameter(s)

There is a primary port status log parameter for each primary port of the device. The format is shown in table 218.

Table 218 — Primary port status log parameter(s) format of LP 11h

Byte	Bit										
	7 msb	6	5	4	3	2	1	0 lsb			
0	(MSB)		PARAMETER CODE (LSB)								
1											
2	DU (0)	Obsolete	TSD (0)	ETC (0)	TMC	(00)	LBIN (1)	LP (1)			
3				PARAMETER I	ENGTH (n-3)						
4	(MSB)										
n		=		Primary por	status data		•	(LSB)			

# Byte Description

2

#### 0-1 PARAMETER CODE:

0100h plus the value of the Relative Target Port field associated with that port. The Relative Target Port is the same as the relative target port value defined in the VPD pages of inquiry

Value	Description
0101h	Primary port 1; traditionally known as port 0.
0102h	Primary port 2; traditionally known as port 1.
Parame	eter list control byte - binary format list log parameter
Bit	Description
7	DU: 0b
^	OL solute

7 DU: 0b
6 Obsolete
5 TSD: 0b
4 ETC: 0b
3-2 TMC: 00b
1 LBIN: 1b
0 LP: 1b

3 PARAMETER LENGTH:

4-7 Primary port status data: This is determined by the protocol of the port with which the parameter is associated. The protocol of the port is reported in the PROTOCOL IDENTIFIER field of the Relative target port identifier designation descriptor of the Device identification VPD page for the associated port.

Value Description

Oh Fibre Channel port status data (see 6.4.9.2.5 on page 278)
6h Serial Attached SCSI port status data (see 6.4.9.2.6 on page 280)

# 6.4.9.2.5 Fibre Channel port status data

The format of the primary port status data for a Fibre Channel port is shown in <u>table 219</u>. This descriptor reports the current operating points of the specified port.

Table 219 — Fibre Channel port status data format of LP 11h

5.4	Bit										
Byte	7 msb	6	5	4	3	2	1	0 lsb			
0	CURRTOP	C	CURRENT SPEE	D	LC	CONFLICT	SIGNAL	PIC			
1											
3			CURRENT N_PORT_ID								
4	ECSV	Reserved									
5		Reserved			EXTENDED CURRENT SPEED						
6				Res	erved						
7	Rsvd			CURI	RENT FC-AL LO	OP ID					
8											
15			CURRENT PORT NAME								
16											
23		•		CURRENT	NODE NAME						

#### Byte Description

0

#### Bit Description

7 CURRTOP (current topology):

This field is undefined when the PIC field is set to zero

Value Description

Ob Port is currently operating in arbitrated loop mode.

1b Port is currently operating in point to point mode.

6-4 CURRENT SPEED: This field is undefined when the PIC field is set to zero

 Value
 Description

 000b
 1 Gb/sec.

 001b
 2 Gb/sec.

 010b
 4 Gb/sec.

 011b
 8 Gb/sec.

3 LC (login complete):

Value Description

Ob No host is currently logged in to the drive through this port.

1b At least one host is currently logged in to the drive through this port (i.e., has suc-

cessfully completed PRLI and still has an active session).

2 CONFLICT:

Value Description

0b No AL\_PA conflict exists on this port.

1b The required Hard AL\_PA is in use by another device or no AL\_PA is available for

this port.

1 SIGNAL:

Value Description

Ob Signal (i.e., light) is not detected on this port.

1b Signal (i.e., light) is detected on this port.

0 PIC (port initialization complete):

Value Description

Ob The FC\_Port state machine is not in the ACTIVE state (if port is operating in

point-to-point topology), or has not successfully completed the most recent LIP.

279

The FC\_Port state machine is in the ACTIVE state (if port is operating in point-to-point topology), or the most recent LIP has completed successfully.

1-3 CURRENT N\_PORT\_ID: The 24-bit N\_Port\_ID that is currently assigned to this port. This field is undefined when the PIC field is set to zero.

4

#### Bit Description

7 ECSV (extended current speed valid): 0b

6-0 Reserved

5

# Bit Description

- 7-4 Reserved
- 3-0 EXTENDED CURRENT SPEED: 0h
- 6 Reserved

7

#### Bit Description

- 7 Reserved
- 6-0 CURRENT FC-AL LOOP ID: The loop identifier assigned to this port. This field is ignored ignored when the PIC bit is set to zero or when the CURRTOP bit is set to one.
- 8-15 CURRENT PORT NAME: The port's name identifier (i.e., WWPN).
- 16-23 CURRENT NODE NAME: The device's node name identifier (i.e., WWNN).

#### 6.4.9.2.6 Serial Attached SCSI port status data

The format of the primary port status data for a SAS port is shown in table 220.

Table 220 — Serial Attached SCSI port status data format of LP 11h

Durto	Bit										
Byte	7 msb	6	5	4	3	2	1	0 lsb			
0	NE	NEGOTIATED PHYSICAL LINK RATE Reserved SIGNAL						PIC			
1	(MSB)										
3			HASHED SAS ADDRESS (LSB								
4	(MSB)										
11				SAS AL	DRESS			(LSB)			

#### Byte Description

0

## Bit Description

7-4 NEGOTIATED PHYSICAL LINK RATE: The negotiated physical link rate of the port.

Table 221 — NEGOTIATED PHYSICAL LINK RATE values

SP state machine ResetStatus state machine variable	Code	Description
UNKNOWN	0h	Phy is enabled; unknown physical link rate.
DISABLED	1h	Phy is disabled.
PHY_RESET_PROBLEM	2h	Phy is enabled; a phy reset problem occurred.
SPINUP_HOLD	3h	Not Supported
PORT_SELECTOR	4h	Not Supported
RESET_IN_PROGRESS	5h	Not Supported
UNSUPPORTED_ PHY_ATTACHED	6h	Phy is enabled; a phy is attached without any commonly supported settings.
Reserved	7h	Reserved
G1	8h	Phy is enabled; 1.5 Gbps physical link rate.
G2	9h	Phy is enabled; 3 Gbps physical link rate.
G3	Ah	Phy is enabled; 6 Gbps physical link rate.
Reserved	Bh to Fh	Phy is enabled; reserved for future logical or physical link rates.

# 3-2 Reserved

1 SIGNAL:

Value Description

Ob Signal is not detected by the port.

1b Signal is detected by the port.

0 PIC (port initialization complete):

Value Description

0b The port has not successfully completed the link reset sequence.

1b The port has successfully completed the link reset sequence and is ready to

accept connection requests.

1-3 HASHED SAS ADDRESS: The 24 bit hashed address that is assigned to the port. The Hashed SAS Address is based on the WWPN.

4-11 SAS ADDRESS: The SAS address of the port (i.e., WWPN).

#### 6.4.9.2.7 Potential conflict list entries present log parameter

The potential conflict list entries present log parameter format is shown in table 222.

Table 222 — Potential conflict list entries present log parameter of LP 11h

Bit Byte	7	6	5	4	3	2	1	0
0	(MSB)							
1		PARAMETER CODE (0200h) (LSB)						
2		Parameter list control byte - binary format list log parameter						
2	DU	Obsolete	TSD	ETC	TN	ИC	FORMAT A	ND LINKING
3	PARAMETER LENGTH (01h)							
4	NUMBER OF POTENTIAL CONFLICT LIST ENTRIES							

#### Byte Description

0 to 1 PARAMETER CODE: 0200h

2 Parameter list control byte - binary format list log parameter

Bit	Description
7	DU: 0b
6	Obsolete
5	TSD: 0b
4	ETC: 0b
3-2	TMC: 00b
1	LBIN: 1b
0	LP: 1b

- 3 PARAMETER LENGTH: 01h
- 4 NUMBER OF POTENTIAL CONFLICT LIST ENTRIES: The number of entries in the potential conflict list. This is updated as specified in <u>4.20</u>.

#### 6.4.9.2.8 Potential conflict list log parameter(s)

The potential conflict list log parameters shall contain potential conflict list entries as specified in <u>4.20</u>. The potential conflict list log parameter format is shown in <u>table 223</u>.

Bit 7 6 5 4 3 2 1 0 Byte (MSB) 0 PARAMETER CODE (LSB) 1 Parameter list control byte - binary format list log parameter 2 Obsolete DU TSD ETC TMC FORMAT AND LINKING 3 PARAMETER LENGTH (n-3) 4 COMMAND OPERATION CODE 5 (MSB) COMMAND SERVICE ACTION 6 (LSB) 7 (MSB) OWNER ITN COUNT 8 (LSB) 9 OWNER ITN TIME 20 21 (MSB) RELATIVE TARGET PORT IDENTIFIER 22 (LSB) 23 **TRANSPORTID** 

Table 223 — Potential conflict list log parameter of LP 11h

#### Byte Description

- 0 to 1 PARAMETER CODE: The potential conflict list entry number plus 0200h. The potential conflict list parameter code values are contiguous (i.e., the first entry in the list shall be 0201h, the second entry in the list shall be 0202h, etc.).
- 2 Parameter list control byte binary format list log parameter

Bit	Description
7	DU: 0b
6	Obsolete
5	TSD: 0b
4	ETC: 0b
3-2	TMC: 00b
1	LBIN: 1b
0	LP: 1b

- 3 PARAMETER LENGTH:
- 4 COMMAND OPERATION CODE: Set as specified in <u>4.20</u> and indicates the operation code of the command that caused this entry to be updated.
- 5 to 6 COMMAND SERVICE ACTION: Set as specified in <u>4.20</u> and indicates the service action, if any, of the command that caused this entry to be updated. If no service action exists, this field is set to zero.
- 7 to 8 OWNER ITN COUNT: Set as specified in <u>4.20</u> and indicates the number of times a command that may change the state of the medium (see <u>4.20</u>) is received through an I\_T nexus which was different from the I\_T nexus through which the previous command that may change the state of the medium was received. This field saturates at FFFFh and stops incrementing.
- 9 to 20 OWNER ITN TIME: Set as specified in 4.20 and indicates the most recent time this I\_T nexus became the owner\_ITN. The format of this field is the format of the REPORT TIMESTAMP parameter data (see

<u>5.2.28.1</u>). The timestamp is updated to reflect the Timestamp origin value at the time this log parameter is read.

- 21 to 22RELATIVE TARGET PORT IDENTIFIER: The relative target port identifier of the I\_T nexus through which the command that caused this entry to be updated arrived.
- 23 to n TRANSPORTID: Set as specified in <u>4.20</u> and specifies the initiator port of the I\_T nexus through which the command that caused this entry to be updated arrived. The value in this field is a TransportID.

#### 6.4.9.2.9 Medium VolSer

This parameter indicates the Volume Label Serial Number (VolSer) recorded in the CM of the currently loaded cartridge. (This is not to be confused with the manufacturer's cartridge serial number also maintained in the CM.)

The drive reports the VolSer transmitted by the library and recorded in the CM via the Write Buffer command. If there is no library initiated VolSer, the drive reports the VolSer transmitted by the host application via the Write Attribute command and recorded into an LTO standard field in CM. If neither field has been recorded, the drive returns all ASCII blanks. The first seven characters of the VolSer are reported in the SCSI Request Sense data.

Table 224 — Medium Volume Label Serial Number log parameter of LP 11h

Bit Byte	7	6	5	4	3	2	1	0
0	(MSB)			D. D. 1.15				
1		PARAMETER CODE (LSB)						
2		Parameter list control byte - binary format list log parameter						
2	DU	Obsolete TSD ETC TMC FORMAT AND LINKING					ND LINKING	
3		PARAMETER LENGTH (08h)						
4	(MSB)	VOLUME SERIAL NUMBER						
11				VOLUME SER	RIAL NUMBER			(LSB)

#### Byte Description

- 0 to 1 PARAMETER CODE: 8000h
- 2 Parameter list control byte binary format list log parameter

Bit	Descriptio
7	DU: 0b
6	Obsolete
5	TSD: 0b
4	ETC: 0b
3-2	тмс: 00b
1	LBIN: 1b
0	LP: 1b

- 3 PARAMETER LENGTH: 08h
- 4 VOLUME SERIAL NUMBER: Volume serial number in ASCII.

#### 6.4.9.2.10 Medium Status Data

This parameter provides information related to the currently loaded medium.

Table 225 — Medium Volume Label Serial Number log parameter of LP 11h

Bit Byte	7	6	5	4	3	2	1	0
0	(MSB)			D. D. M. E.				
1				PARAME	TER CODE			(LSB)
2	Parameter list control byte - binary format list log parameter							
2	DU	Obsolete TSD ETC TMC FORMAT AND LINK				ND LINKING		
3		PARAMETER LENGTH (n-3)						
4		Reserved	Reserved TAPE CARTRIDGE TYPE					
5	Reserved	MEC Reserved VAE MES			ES			
6		Decembed						
n		Reserved						

# Byte Description

0 to 1 PARAMETER CODE: 8001h

2 Parameter list control byte - binary format list log parameter

Bit	Description
7	DU: 0b
6	Obsolete
5	TSD: 0b
4	ETC: 0b
3-2	TMC: 00b
1	LBIN: 1b
0	LP: 1b

3 PARAMETER LENGTH:

4

# Bit Description

7-5 Reserved

4-0 TAPE CARTRIDGE TYPE:

vaiue	Description
00000	Ultrium 1 cartridge
00010	Cleaner cartridge
00111	Invalid or unknown cartridge type
01000	Ultrium 2 cartridge
	01010Ultrium 3 cartridge
	01100Ultrium 4 cartridge
01101	Ultrium 5 cartridge
	01111Ultrium 6 cartridge

10001Ultrium 7 cartridge

5

Bit	Description	
7	Reserved	
6	MEC (medium	is encryption capable):
	Value	Description
	0b	The currently mounted volume may not be used for encryption purposes
	1b	The currently mounted volume may be used for encryption purposes
5-3	Reserved	
2	VAE (valid afte	er eject):
	Value	Description
	0b	The data in this log parameter is cleared when the cartridge is removed from the
		drive
	1b	The data in this log parameter is not cleared when the cartridge is removed from
		the drive
1-0	MES (medium	encryption status): Encryption status of the currently mounted volume
	Value	Description
	00b	Unable to determine if the volume contains encrypted data
	01b	Volume does not contain encrypted data
	10b	Volume contains encrypted data
	11b	Reserved

# 6.4.9.2.11 Drive Status Data

This parameter provides information related to the drive.

Table 226 — Medium Volume Label Serial Number log parameter of LP 11h

Bit Byte	7	6	5	4	3	2	1	0
0	(MSB)			D. D. 1.1.5				
1				PARAME	TER CODE			(LSB)
2	Parameter list control byte - binary format list log parameter							
2	DU	Obsolete TSD ETC TMC FORMAT AND LINKING				ND LINKING		
3	PARAMETER LENGTH (n-3)							
4	Reserved POST					POST		
5	Reserved EE EC					EC		
6	Decembed							
n			Reserved					

# Byte Description

0 to 1 PARAMETER CODE: 8100h

2 Parameter list control byte - binary format list log parameter

Bit	Description
7	DU: 0b
6	Obsolete
5	TSD: 0b
4	ETC: 0b
3-2	тмс: 00b
1	LBIN: 1b
0	LP: 1b
PARAME	TER LENGTH:

4			
I	Bit	Description	
-	7-1	Reserved	
(	0	POST: Indicate	es if the drive has completed its initialization or self test diagnostics.
		Value	Description
		0b	The drive has completed its initialization or self test diagnostics
		1b	The drive has not completed its initialization or self test diagnostics
5			
i	Bit	Description	
-	7-2	Reserved	
	1	EE (encryption	n enabled): Indicates if the drive is enabled to peform encryption operations.
		Value	Description
		0b	The drive is not enabled to perform encryption operations
		1b	The drive is enabled to perform encryption operations
(	)	EC (encryptio	n capable): Indicates if the drive contains hardware capable of peforming encrypi-
		ton operation	s, but does not indicate if it is enabled to peform encryption.
		Value	Description
		0b	The drive does not contain hardware capable of performing encryption operations
		1b	The drive contains hardware capable of performing encryption operations
6-n F	Reserv	/ed	

# 6.4.9.2.12 Primary Port Features

The Primary Port Features parameter is used to report features of the primary port.

Table 227 — Primary Port Features log parameter of LP 11h

Bit Byte	7	6	5	4	3	2	1	0
0	(MSB)							
1		PARAMETER CODE (LSB)				(LSB)		
2	Parameter list control byte - binary format list log parameter							
	DU	Obsolete TSD ETC TMC FORMAT AND LINKING						
3		PARAMETER LENGTH (n-3)						
4	Reserved							
n		·		Rese	erveu			

# Byte Description

0 to 1 PARAMETER CODE: 910xh; where x is the relative target port value of the primary port (e.g., 9101h, 9102h)

2 Parameter list control byte - binary format list log parameter

Bit	Description
7	DU: 0b
6	Obsolete
5	TSD: 0b
4	ETC: 0b
3-2	TMC: 00b
1	LBIN: 1b
0	LP: 1b
PARAME	TER LENGTH:

4-n Reserved

3

# 6.4.9.2.13 Encryption Control Descriptor

The Encryption Control Descriptor is used to convey encryption control information during certain phases of the encryption process. Details of such events are outside the scope of this document.

Table 228 — Encryption Control Descriptor log parameter of LP 11h

Bit Byte	7	6	5	4	3	2	1	0		
0	(MSB)									
1			PARAMETER CODE (LS							
2	Parameter list control byte - binary format list log parameter									
2	DU	Obsolete	Obsolete TSD ETC TMC FORMAT AND LINKING							
3				PARAMETER	LENGTH (n-3)					
4			EN	ODVDTION OF O	LIENCE IDENTIC	TED.				
7		ENCRYPTION SEQUENCE IDENTIFIER								
8		Formation Control Descriptor Descriptor Details								
n			Encryption Control Descriptor Parameter Data							

#### Byte Description

0 to 1 PARAMETER CODE: E000h

2 Parameter list control byte - binary format list log parameter

# Bit Description 7 DU: 0b 6 Obsolete 5 TSD: 0b 4 ETC: 0b 3-2 TMC: 00b 1 LBIN: 1b 0 LP: 1b

- 3 PARAMETER LENGTH:
- 4-7 ENCRYPTION SEQUENCE IDENTIFIER: This parameter identifies the remaining encryption parameter data contained within this DTD Device Status Log Page back to the drive under certain asynchronously driven encryption events. The Encryption Sequence Identifier shall be returned back to the drive without modification in certain Encryption commands (documented outside the scope of this document).
- 8-n Encryption Control Descriptor Parameter Data: Described in *IBM Automation Drive Interface Specification with Encryption Support*

#### 6.4.10 LP 14h: Device Statistics

See <u>LOG SELECT - 4Ch (see 5.2.7 on page 90)</u> and <u>LOG SENSE - 4Dh (see 5.2.8 on page 91)</u> for directions on how to use this page. This page contains non-volatile information relating to volume usage.

The Device Statistics log page defines parameters associated with utilization of the tape device.

#### 6.4.10.1 Parameter Reset Behavior (14h)

The reset behavior varies by parameter and is specified in the Persist and Clear columns of (see table 229).

## 6.4.10.2 Parameter Definitions (14h)

WARNING WARNING

The parameters in log pages should be dynamically parsed as some parameters may not be present and new parameters may be inserted. The relative location of parameters have changed and are anticipated to continue to change.

WARNING

Table 229 specifies the Device Statistics log page parameter codes.

Table 229 — LP 14h: Device Statistics log parameter codes (part 1 of 4)

Parameter Code	Description	Туре	Persist	Clear	Size
0000h	Lifetime volume loads {14h:0000h}: Total number of successful load operations.	С	Р	N	4
0001h	<b>Lifetime cleaning operations {14h:0001h}:</b> Total number of successful and failed cleaning operations.	С	Р	N	4
0002h	<b>Lifetime power on hours {14h:0002h}:</b> Total number of hours the device has been powered on. The value reported shall be rounded up to the next full hour.	С	Р	N	4
0003h	Lifetime medium motion (i.e., head) hours {14h:0003h}: Total number of hours that the device has spent processing commands that require medium motion. The value reported shall be rounded up to the next full hour.	С	Р	Ν	4
0004h	<b>Lifetime meters of tape processed {14h:0004h}:</b> Total number of meters of tape that have been processed by the drive mechanism in either direction.	С	Р	N	4
Type Description C Device statistics data counter log parameter (see 6.4.10.3.1) M Device statistics medium type log parameter (see 6.4.10.3.2) S Device statistics string data log parameter (see 6.4.10.3.3) Persist Description P Parameter shall be Persistent across I_T nexus loss, logical unit reset, and power-on V The persistence of this parameter varies and is inherited from the value being reported D The parameter is a duty cycle parameter and is cleared when parameter 0010h (i.e., Duty cycle sample time {14h:0010h}:) is cleared Clear Description N Parameter shall not be cleared by use of a LOG SELECT command Parameter may be cleared by use of a LOG SELECT command					
a n = Num	nber of Medium Types supported				

Table 229 — LP 14h: Device Statistics log parameter codes (part 2 of 4)

Parameter Code	Description	Туре	Persist	Clear	Size		
0005h	Lifetime medium motion (head) hours when incompatible medium was last loaded {14h:0005h}: The value that would have been reported in a lifetime medium motion (head) hours parameter at the time when an incompatible volume was last loaded.	С	Р	N	4		
0006h	Lifetime power on hours when the last temperature condition occurred (i.e., TapeAlert code 24h) {14h:0006h}: The value that would have been reported in a lifetime power on hours parameter at the time when the TapeAlert code 24h flag was last set.	С	Р	N	4		
0007h	Lifetime power on hours when the last power consumption condition occurred (i.e., TapeAlert code 1Ch) {14h:0007h}: The value that would have been reported in a lifetime power on hours parameter at the time when the TapeAlert code 1Ch flag was last set.	С	Р	N	4		
0008h	Medium motion (i.e., head) hours since last successful cleaning operation {14h:0008h}: Count of hours that medium has been in motion in either direction since the last successful cleaning operation. The value reported shall be rounded up to the next full hour.	O	Р	Z	4		
0009h	Medium motion (i.e., head) hours since second to last successful cleaning operation {14h:0009h}: Count of hours that medium has been in motion in either direction since the second to last successful cleaning operation. The value reported shall be rounded up to the next full hour.						
000Ah	Medium motion (i.e., head) hours since third to last successful cleaning operation {14h:000Ah}: Count of hours that medium has been in motion in either direction since the third to last successful cleaning operation. The value reported shall be rounded up to the next full hour.	С	Р	N	4		
000Bh	Lifetime power on hours when the last operator initiated forced reset and/or emergency eject occurred {14h:000Bh}: The value that would have been reported in a lifetime power on hours parameter at the time of the last forced reset and/or emergency eject.	С	Р	N	4		
000Ch	<b>Lifetime power cycles {14h:000Ch}:</b> Total number of times the drive has detected a power-on event.	С	Р	N	4		
C De M De S De Persist De V Th D Th Clear De	vice statistics data counter log parameter (see 6.4.10.3.1) vice statistics medium type log parameter (see 6.4.10.3.2) vice statistics string data log parameter (see 6.4.10.3.3) vice statistics medium type log parameter (see 6.4.10.3.2) vice statistics string data log parameter (see 6.4.10.3.3) vice statistics medium type log parameter (see 6.4.10.3.2) vice statistics string data log parameter (see 6.4.10.3.3) vice statistics string data log paramet	being re	ported	cycle san	nple		
	Parameter shall not be cleared by use of a LOG SELECT command  Parameter may be cleared by use of a LOG SELECT command						

Table 229 — LP 14h: Device Statistics log parameter codes (part 3 of 4)

Parameter Code	Description	Туре	Persist	Clear	Size
000Dh	Volume loads since last parameter reset {14h:000Dh}: Count of successful volume loads since the last time this parameter was reset to zero by use of a LOG SELECT command. This parameter should be retained across a power cycle.	С	Р	Y	4
000Eh	Hard write errors {14h:000Eh}: Number of times that a write type command has terminated with a CHECK CONDITION status having the sense key set to MEDIUM ERROR or HARDWARE ERROR since the last time this parameter was reset to zero by the use of a LOG SELECT command.	O	Р	Y	4
000Fh	Hard read errors {14h:000Fh}: Number of times that a read type command has terminated with a CHECK CONDITION status having the sense key set to MEDIUM ERROR or HARDWARE ERROR since the last time this parameter was reset to zero by the use of a LOG SELECT command.	С	Р	Y	4
0010h	Duty cycle sample time {14h:0010h}: The time in milliseconds since the last time this parameter was reset to zero by:  a) the use of a LOG SELECT command; b) a hard reset condition; or c) a vendor specific method	С	V	Y	6
0011h	Read duty cycle {14h:0011h}: Percentage (i.e., an integer between 0 and 100 representing a percentage) of duty cycle sample time (i.e., the value reported in parameter code 0010h) that the device was ready and was processing read type commands. This parameter shall be set to zero when the duty cycle sample time parameter is set to zero.		D	Υ	1
0012h	Write duty cycle {14h:0012h}: Percentage of duty cycle sample time that the device was ready and was processing write type commands. This parameter shall be set to zero when the duty cycle sample time parameter is set to zero.	O	D	Υ	1
0013h	Activity duty cycle {14h:0013h}: Percentage of duty cycle sample time that the device was ready and was processing write type commands, ready type commands, and other commands that cause the medium to be moved. This parameter shall be set to zero when the duty cycle sample time parameter is set to zero.	С	D	Y	1
0014h	Volume not present duty cycle {14h:0014h}: Percentage of the duty cycle sample time that the device server did not detect a volume present (e.g., the physical device attribute medium present was not set to true).	С	D	Υ	1
C De M De S De Persist De P Pal V The D The tim Clear De N Pal	vice statistics data counter log parameter (see 6.4.10.3.1) vice statistics medium type log parameter (see 6.4.10.3.2) vice statistics string data log parameter (see 6.4.10.3.3) scription rameter shall be Persistent across I_T nexus loss, logical unit reset, as persistence of this parameter varies and is inherited from the value exparameter is a duty cycle parameter and is cleared when parametee (14h:0010h):) is cleared scription rameter shall not be cleared by use of a LOG SELECT command rameter may be cleared by use of a LOG SELECT command	being re	eported	cycle san	nple_

Table 229 — LP 14h: Device Statistics log parameter codes (part 4 of 4)

Parameter Code	Description	Туре	Persist	Clear	Size
0015h	Ready duty cycle {14h:0015h}: Percentage of duty cycle sample time that the device was in the ready state.	С	D	Y	1
0016h-003Fh	Reserved				
0040h	<b>Drive manufacturer's serial number {14h:0040h}:</b> Value that is reported in the MANUFACTURER-ASSIGNED SERIAL NUMBER field of the Manufacturer-assigned serial number VPD page (B1h)	S	Р	N	12
0041h	<b>Drive serial number {14h:0041h}:</b> Value that is reported in the PRODUCT SERIAL NUMBER field of the Unit Serial Number VPD page (80h).	S	Р	N	12
0042h-007Fh	Reserved				
0080h	Medium removal prevented {14h:0080h}: A value of 01h indicates that medium removal has been prevented by:  a) a prevention of medium removal condition in the device server,  b) a configuration setting, or c) a vendor specific means.  A value of 00h indicates that medium removal has not been prevented by one of the listed means.  An error condition preventing removal of the medium does not cause this parameter to be set to a non-zero value.	С	V	N	1
0081h	Maximum recommended mechanism temperature exceeded {14h:0081h}: Indicates whether the device has detected at any point in the past that the maximum recommended mechanism temperature has been exceeded.  a) a value of 00h indicates the temperature has not been exceeded; b) a value of 01h indicates the temperature has been exceeded; and c) a value of FFh indicates that it is unknown if the temperature has been exceeded.	O	Р	Z	1
0082h-0FFFh	Reserved				
1000h	Medium motion (i.e., head) hours for each medium type {14h:1000h}:	М	Р	N	8*n <sup>a</sup>
1001h-EFFFh	Reserved				
F000h-FFFFh	Vendor-specifc				
C Dev M Dev S Dev Persist Des P Par V The D The time Clear Des N Par	scription vice statistics data counter log parameter (see 6.4.10.3.1) vice statistics medium type log parameter (see 6.4.10.3.2) vice statistics string data log parameter (see 6.4.10.3.3) scription ameter shall be Persistent across I_T nexus loss, logical unit reset, a persistence of this parameter varies and is inherited from the value a parameter is a duty cycle parameter and is cleared when	being re	ported	cycle sar	nple_

#### 6.4.10.3 Log parameter formats

#### 6.4.10.3.1 Device statistics data counter log parameter format

The device statistics data counter log parameter is used for reporting parameters specified as device statistics data counter log parameters in (see table 229). The device statistics data counter log parameter format is specified in table 230.

Table 230 — Device statistics data counter log parameter format of LP 14h

Deste		Bit									
Byte	7 msb	6	5	4	3	2	1	0 lsb			
0	(MSB)	_		B. B. M. ET							
1		-	PARAMETER CODE (LSB)								
2	DU	Obsolete	TSD (0b)	ETC(0b)	TMC(	(00b)	FORMAT AND	LINKING (11b)			
3				PARAMETER	LENGTH (n-3)						
4	(MSB)										
n		<del>-</del>	DI	EVICE STATISTIC	S DATA COUNTE	=R		(LSB)			

#### Byte Description

- 0-1 PARAMETER CODE: defined in (see table 229).
- 2 Parameter control byte

#### Bit Description

- 7 DU (Disable Update):
- 6 Obsolete:
- 5 TSD (Target Save Disable): 0b
- 4 ETC (Enable Threshold Comparison): 0b
- 3-2 TMC (Threshold Met Comparison): 00b
- 1-0 FORMAT AND LINKING: 11b
- 3 PARAMETER LENGTH: the number of bytes in the device statistics data counter field that follows.
- 4-n DEVICE STATISTICS DATA COUNTER: the value of the data counter associated with the parameter code.

# 6.4.10.3.2 Device statistics medium type log parameter format

The device statistics medium type log parameter is used for reporting parameters specified as device statistics medium type log parameters in (see table 229). The device statistics medium type log parameter format is

specified in table 231.

Table 231 — Device statistics medium type log parameter format of LP 14h

Duta				E	Bit					
Byte	7 msb	6	5	4	3	2	1	0 lsb		
0	(MSB)			DADAMETED (	2005 (1000h)					
1			PARAMETER CODE (1000h) (LSB)							
2	DU (0b)	Obsolete TSD (0b) ETC (0b) TMC (00b) FORMAT AND LINKING (11b)								
3	PARAMETER LENGTH (n-3)									
			Device	e statistics med	ium type desci	riptor(s)				
4	Device statistics medium type descriptor [first] (see table 232)									
	· · · · · · · · · · · · · · · · · · ·									
n		Device statistics medium type descriptor [last] (see table 232)								

#### Byte Description

0-1 PARAMETER CODE: 1000h.

2 Parameter control byte

## Bit Description

- 7 DU (Disable Update): 0b
- 6 Obsolete:
- 5 TSD (Target Save Disable): 0b
- 4 ETC (Enable Threshold Comparison): 0b
- 3-2 TMC (Threshold Met Comparison): 00b
- 1-0 FORMAT AND LINKING: 11b
- 3 PARAMETER LENGTH: the number of bytes in the medium type descriptors that follow.
- 4-n Device statistics medium type descriptor(s): the value of the data counter associated with the parameter code. The device statistics medium type descriptor is defined in <u>6.4.10.3.2.1</u>.

#### 6.4.10.3.2.1 Device statistics medium type descriptor

The device statistics medium type descriptor format is specified in table 232.

Table 232 — Device statistics medium type descriptor format

Durto		Bit								
Byte	7 msb	6	5	4	3	2	1	0 lsb		
0		Reserved								
1		Reserved								
2		DENSITY CODE								
3		MEDIUM TYPE								
4	(MSB)	(MSB)								
7				MEDIUM MO	IION HOURS			(LSB)		

#### Byte Description

- 0-1 Reserved
- 2 DENSITY CODE: the value returned in the general mode parameter block descriptor.
- 3 MEDIUM TYPE: the value returned in the mode parameter header.

4-7 MEDIUM MOTION HOURS: the number of medium motion (i.e., head) hours for the type of medium specified by the combination of the MEDIUM TYPE field and DENSITY CODE field.

#### 6.4.10.3.3 Device statistics string data log parameter format

The device statistics string data log parameter is used for reporting parameters specified as device statistics string data log parameters in (see table 229). The device statistics string data log parameter format is specified in table 233. The device statistics string data log parameter shall be a multiple of 4 bytes.

Table 233 — Device statistics string data log parameter format of LP 14h

Deste	Bit										
Byte	7 msb	6	5	4	3	2	1	0 lsb			
0	(MSB)										
1			PARAMETER CODE (LSB)								
2	DU (0b)	Obsolete	TSD (0b)	ETC(0b)	TMC(	(00b)	FORMAT AND	LINKING (01b)			
3				PARAMETER	LENGTH (n-3)						
4	(MSB)										
n		<del>-</del>		STRING DATA (LSB)							

## Byte Description

- 0-1 PARAMETER CODE: defined in (see table 229).
- 2 Parameter control byte

#### Bit Description

- 7 DU (Disable Update): 0b
- 6 Obsolete:
- 5 TSD (Target Save Disable): 0b
- 4 ETC (Enable Threshold Comparison): 0b
- 3-2 TMC (Threshold Met Comparison): 00b
- 1-0 FORMAT AND LINKING: 01b
- 3 PARAMETER LENGTH: the number of bytes in the data that follows.
- 4-n STRING DATA: an ASCII string describing the device statistics parameter specified by the PARAMETER CODE value. The string data field is an ASCII data field.

#### 6.4.11 LP 16h: Tape diagnostic data

See <u>LOG SELECT - 4Ch (see 5.2.7 on page 90)</u> and <u>LOG SENSE - 4Dh (see 5.2.8 on page 91)</u> for directions on how to use this page. This page is used to track significant errors or conditions.

The Tape Diagnostic Data log page (see table 234) provides for a number of error-event records using the list parameter format. Each error-event record contains diagnostic information for a single error type encountered by the device including data counters associated with the error event, sense data, operation code/service action and medium type with associated media motion hours, etc. The Tape Diagnostic Data log page may be used to aid in field analysis and repair.

The Tape Diagnostic Data log page only includes parameter entries for commands that terminated with a CHECK CONDITION status having the sense key set to MEDIUM ERROR, HARDWARE ERROR or ABORTED COMMAND.

The parameter code value associated with an error-event indicates the relative time at which a command terminated with a CHECK CONDITION status. A lower parameter code indicates that the command terminated with a CHECK CONDITION status at a more recent time. The parameter code values returned shall be numbered consecutively from 0000h (i.e., the most recent) up to n, where n is the number of current parameter entries.

D. d.	Bit										
Byte	7 msb	6	5	4	3	2	1	0 lsb			
0	DS	SPF(0)			PAGE CC	DE (16h)					
1		SUBPAGE CODE (00h)									
2	(MSB)		PACE LENGTH (n. 2)								
3			PAGE LENGTH (n-3) (LSB)								
			Tape Diagno	stic Data log	parameter(s)						
4			Tape Di	agnostic Data	a log parame	ter (first)					
		·									
n		Tape Diagnostic Data log parameter (last)									

Table 234 — LP 16h: Tape diagnostic data log page format

#### 6.4.11.1 Parameter Reset Behavior (16h)

All parameter codes are persistent across I\_T nexus losses, logical unit resets, and power-on. The parameter entries are not set to zero or changed with the use of a LOG SELECT command.

#### 6.4.11.2 Parameter Definitions (16h)

In each parameter (see table 235) if the REPEAT bit is set to zero, then the parameter represents only one event. If the REPEAT bit is set to one, then the parameter represents more than one consecutive events that had identical values for the MEDIUM ID NUMBER field, SENSE KEY field, ADDITIONAL SENSE CODE field and ADDITIONAL SENSE CODE QUALIFIER field in the parameter. If the REPEAT bit is set to one in the parameter, then other fields in the parameter shall be set to the values when the first of the consecutive events that had the identical values for the MEDIUM ID NUMBER field, SENSE KEY field, ADDITIONAL SENSE CODE field and ADDITIONAL SENSE CODE QUALIFIER field occurred.

The Tape Diagnostic Data log parameter format is specified in (see table 235)

= WARNING =----- WARNING = WARNING =

The parameters in log pages should be dynamically parsed as some parameters may not be present and new parameters may be inserted. The relative location of parameters have changed and are anticipated to continue to change.

— WARNING =

= WARNING ==

Table 235 — Tape diagnostic data log parameter format of LP 16h

De et e				Е	Bit						
Byte	7 msb	6	5	4	3	2	1	0 lsb			
0	(MSB)			Da на на а	tor Codo						
1				Parame	ter Code			(LSB)			
2	du(0)	Obsolete	tsd(0)	etc(0)	tmc	(00b)		and linking 11b)			
3				Parameter	Length (n-3)						
4				Res	erved						
5				Res	erved						
6				Densit	y Code						
7				Mediu	m Type						
8	(MSB)		Lifetime Media Motion Hours								
11			Lifetime Media Motion Flours								
12			Reserved								
13	Repeat		Reserved Sense Key								
14		Additional Sense Code									
15		Additional Sense Code Qualifier									
16	(MSB)	_	\/	endor-Specific	s Codo Oual	ifior					
19			V	endor-opecini	Code Quai			(LSB)			
20	(MSB)	_		Draduat Da	vision Level						
23				Product Re	VISION Level			(LSB)			
24	(MSB)	_		Hours Sing	e Last Clean						
27				Tiouis Silice	Lasi Clean			(LSB)			
28				Operati	on Code						
29		Reserved				Service Action	n				
30				Rese	erved						
31				Rese	erved						
32	(MSB)			Madium I	d Number						
63		Medium Id Number (LSB)									
64		Reserved Timestamp Origin									
65				Rese	erved						
66	(MSB)	_		Timo	stamp						
71					<u></u>			(LSB)			

#### Byte Description

0-1 PARAMETER CODE: An indication of the relative time at which the command terminated with this CHECK CONDITION status. A lower parameter code indicates that the command terminated with a CHECK CONDITION status at a more recent time. The parameter code values returned are numbered consecutively from 0000h (i.e., the most recent) up to n, where n is the number of current parameter entries

2 Parameter control byte

# Bit Description

- 7 DU (Disable Update): 0b
- 6 Obsolete:
- 5 TSD (Target Save Disable): 0b
- 4 ETC (Enable Threshold Comparison): 0b
- 3-2 TMC (Threshold Met Comparison): 00b
- 1-0 FORMAT AND LINKING: 01b
- 3 PARAMETER LENGTH: the number of bytes in the data that follows.
- 4-5 Reserved
- DENSITY CODE: The density code of the medium loaded at the time the command terminated with the CHECK CONDITION status. The DENSITY CODE field is the same value as returned in the general mode parameter block descriptor. If no medium was loaded at the time the command terminated with the CHECK CONDITION status, then the DENSITY CODE field is 00h.
- MEDIUM TYPE: The type of medium loaded at the time the command terminated with the CHECK CONDITION status. The MEDIUM TYPE field is the same value as returned in the mode parameter header. If no medium was loaded at the time the command terminated with the CHECK CONDITION status, then the MEDIUM TYPE is 00h.
- 8-11 LIFETIME MEDIA MOTION HOURS: The number of media motion (head) hours at the time the command terminated with the CHECK CONDITION status. The LIFETIME MEDIA MOTION HOURS field is equivalent to the value contained in <u>LP 14h: Device Statistics (see 6.4.10 on page 288)</u> with a parameter code value of 0003h at the time the command terminated with the CHECK CONDITION status.
- 12 Reserved

13

## Bit Description

7 REPEAT: Indicates if this parameter refers to more than one error event

Value	Description
0b	This parameter represents a single event.
1b	This parameter represents more than one consecutive events that had identical
	values for the MEDIUM ID NUMBER field, SENSE KEY field, ADDITIONAL SENSE CODE
	field, and ADDITIONAL SENSE CODE QUALIFIER field.

- 6-4 Reserved
- 3-0 SENSE KEY: The sense key value returned for the command that terminated with the CHECK CONDITION status.
- 14-15 ADDITIONAL SENSE CODE/ADDITIONAL SENSE CODE QUALIFIER: The additional sense code value returned for the command that terminated with the CHECK CONDITION status.
- 16-19 VENDOR-SPECIFIC CODE QUALIFIER: The Last Error FSC and Last Error Flag Data (i.e. bytes 65-68 of Sense Data) generated for the command that terminated with the CHECK CONDITION status.
- 20-23 PRODUCT REVISION LEVEL: The product revision level (i.e., bytes 16-31 of Standard Inquiry) at the time the command terminated with the CHECK CONDITION status.
- 24-27 HOURS SINCE LAST CLEAN: The time in media motion (i.e., head) hours since the last successful cleaning at the time the command terminated with the CHECK CONDITION status. The HOURS SINCE LAST CLEAN field is equivalent to the value contained in the Device Statistics log page with a parameter code of 0008h at the time the command terminated with the CHECK CONDITION status.
- OPERATION CODE: The operation code of the command that terminated with the CHECK CONDITION status.

29

#### Bit Description

- 7-5 Reserved
- 4-0 SERVICE ACTION: if applicable, the service action of the command that terminated with the CHECK CONDITION status.
- 30-31 Reserved
- 32-63 MEDIUM ID NUMBER: If medium was present at the time the command terminated with the CHECK CONDITION status, then this field contains (in prioritized order):
  - 1) the BARCODE field value contained in the medium auxiliary memory;
  - 2) the MEDIUM SERIAL NUMBER field value contained in the medium auxiliary memory; or
  - 3) the VOLUME IDENTIFIER field value contained in the medium auxiliary memory.

If no medium was present at the time the command terminated with the CHECK CONDITION status, the this field is filled with 20h (i.e., ASCII space).

64

# Bit Description

- 7-3 Reserved
- 2-0 TIMESTAMP ORIGIN: The timestamp origin maintained by the tape drive at the time the command terminated with the CHECK CONDITION status.
- 65 Reserved
- 66-71 TIMESTAMP: The timestamp maintained by the tape drive at the time the command terminated with the CHECK CONDITION status.

#### 6.4.12 LP 17h: Volume Statistics

See <u>LOG SELECT - 4Ch (see 5.2.7 on page 90)</u> and <u>LOG SENSE - 4Dh (see 5.2.8 on page 91)</u> for directions on how to use this page. This page contains non-volatile information relating to volume usage.

The Volume Statistics log page is included in Ultrium 5 and later drives. It is not included in earlier generation drives.

The Volume Statistics log page defines data parameters associated with utilization of the tape volume and the medium within the volume. Volume statistics for the most recent mounted volume are reported in the volume Statistics log page parameters. Volume statistics for previously mounted volumes may be reported in Volume Statistics log subpages (see table 236).

If a supported log subpage is requested for a mount which has not occurred, then all bytes in the parameter data fields are set to 00h.

The device server resets all volume statistics log parameter data fields to 00h after a hard reset.

NOTE 39 - An application client may detect if parameter values in the page are valid by testing for parameter value 0000h, (i.e., page valid) set to zero.

See table 236 for the definition of the SUBPAGE CODE field.

Table 236 — Volume Statistics log subpage codes of LP 17h

Code	Description
00h	Reserved
01h-0Fh	Volume statistics for previously mounted volumes 1 through 15. Use subpage FFh (i.e., Supported subpages log page) to determine which log subpages are supported. This will also indicate how many previous mounts are supported by the drive.
10h-FEh	Reserved
FFh	Supported subpages log page (see SPC-4)

#### 6.4.12.1 Parameter reset behavior

Parameters in this page are read-only.

# 6.4.12.2 Parameter Definitions

= WARNING = WARNING = WARNING =

The parameters in log pages should be dynamically parsed as some parameters may not be present and new parameters may be inserted. The relative location of parameters have changed and are anticipated to continue to change.

— WARNING =

— WARNING —

Table 237 — LP 17h: Volume statistics log parameters

Parameter Code	Description	Type	Size
0000h	Page valid {17h:000h}: A value of 01h indicates that the values reported in the parameters to follow are valid. A value of 00h indicates the values reported in the parameters that follow are invalid	С	1
0001h	Volume Mounts {17h:0001h}: Number of mounts for the current volume (i.e., Thread Count)	С	4
0002h	<b>Volume Datasets Written {17h:0002h}:</b> The total number of data sets written to the medium in the volume over the lifetime of the volume. (i.e., Total Datasets Written)	С	8
0003h	Volume Recovered Write Data Errors {17h:0003h}: The total number of recovered write data correction errors (e.g., write temps) for the lifetime of the volume. (i.e., Total Write Retries)	С	4
0004h	Volume Unrecovered Write Data Errors (i.e., Write Perms) {17h:0004h}: The total number of times that a write type command was terminated with CHECK CONDITION status and a sense key of MEDIUM ERROR or HARDWARE ERROR over the lifetime of the volume. (i.e., Total Unrecovered Write Errors)	С	2
0005h	Volume Write Servo Errors (updated on both temp and perm) {17h:0005h}: The total number of times that the device suspended a write due to detection of a servo condition which could result in an incorrectly written track and attempted to write the data at a different location. If a logical block is interrupted more than once this parameter shall only be incremented once. (i.e., Total Number of Suspended Writes)	С	2
0006h	Volume Unrecovered Write Servo Errors {17h:0006h}: The total number of times that the device suspended a write due to detection of a servo condition which could result in an incorrectly written track and was unable to write the data at a different location. (i.e., Total Number of Fatal Suspended Writes)	С	2
0007h	Volume Datasets Read {17h:0007h}: The total number of data sets read from the medium in the volume over the lifetime of the volume. (i.e., Total Data Sets Read)	С	8
0008h	Volume Recovered Read Errors {17h:0008h}: The total number of recovered read errors (e.g., read temps) for the lifetime of the volume. (i.e., Total Read Retries)	С	4
0009h	Volume Unrecovered Read Errors (i.e., Read Perms) {17h:0009h}: The total number of times that a read type command was terminated with CHECK CONDITION status and a sense key of MEDIUM ERROR or HARDWARE ERROR over the lifetime of the volume. (i.e., Total Unrecovered Read Errors)	С	2
000Ah-000Bh	Not Supported		
000Ch	Last mount unrecovered write errors {17h:000Ch}: Count of the number times a write type command was terminated with status of CHECK CONDITION and a sense key of HARDWARE ERROR, or MEDIA ERROR during the last mount	С	2

#### Type Key:

- C Volume statistics counter log parameter (see 6.4.15.3)
- S Volume statistics string data log parameter (see 6.4.12.3.2)
- P Volume statistics partition record log parameter (see 6.4.12.3.3).

#### Footnote:

<sup>&</sup>lt;sup>a</sup> The size field is the size of the PARTITION RECORD DATA COUNTER field of each Volume statistics partition record descriptor. The overall size depends on the number of partitions as well as other fields that are part of the partition record log parameter as defined in (see 6.4.12.3.3)

Table 237 — LP 17h: Volume statistics log parameters

Parameter Code	Description	Туре	Size
000Dh	Last mount unrecovered read errors {17h:000Dh}: Count of the number times a read type command was terminated with status of CHECK CONDITION and a sense key of HARDWARE ERROR, or MEDIA ERROR during the last mount	С	2
000Eh	<b>Last mount megabytes written {17h:000Eh}:</b> Count of the number of megabytes (i.e., 10 <sup>6</sup> bytes) of logical objects that were written to the medium after compression during the last mount. The value reported shall be rounded up to the next megabyte. The value reported contains bytes written as part of the process of writing a filemark	С	4
000Fh	Last mount megabytes read {17h:000Fh}: Count of the number of megabytes (i.e., 10 <sup>6</sup> bytes) of logical objects that were read from the medium before decompression during the last mount. The value reported shall be rounded up to the next megabyte. The value reported contains bytes read as part of a filemark	C	4
0010h	<b>Lifetime megabytes written {17h:0010h}:</b> Count of the number of megabytes (i.e., $10^6$ bytes) of logical objects that have been written to the medium after compression during the lifetime of the volume. The value reported shall be rounded up to the next megabyte. The value reported contains bytes written as part of the process of writing a filemark.	C	8
0011h	<b>Lifetime megabytes read {17h:0011h}:</b> Count of the number of megabytes (i.e., 10 <sup>6</sup> bytes) that have been read from the medium before decompression during the lifetime of the volume. The value reported shall be rounded up to the next megabyte. The value reported contains bytes read as part of a filemark.	C	8
0012h	<b>Last load write compression ratio {17h:0012h}:</b> (number of bytes transferred out of the logical object buffer to an application client ÷ the number of bytes in logical objects read from the medium) x 100	С	2
0013h	<b>Last load read compression ratio {17h:0013h}:</b> (number of bytes transferred from an application client into the logical object buffer ÷ the number of bytes in logical objects written to the medium) x 100	С	2
0014h	<b>Medium mount time {17h:0014h}:</b> Time in milliseconds from the time when the device server would first report GOOD status to a TEST UNIT READY command upon successful completion of a load operation until the device server did not detect a volume present.	С	6
0015h	<b>Medium ready time {17h:0015h}:</b> Time in milliseconds from the time the device server was able to process medium access commands until the device server started the processing of an unload operation.	O	6
0016h	<b>Total native capacity {17h:0016h}:</b> The sum of the total native capacity of all partitions in megabytes (i.e., 10 <sup>6</sup> bytes) from BOP to EOP. A data counter value with all bytes set to FFh in the partition record data counter field (see 6.4.12.3.3) indicates that the total native capacity is unknown.	С	4
0017h	<b>Total used native capacity {17h:0017h}:</b> The sum of the used native capacity of all partitions in megabytes (i.e., 10 <sup>6</sup> bytes) from BOP to EOD. A data counter value with all bytes set to FFh in the partition record data counter field (see 6.4.12.3.3) indicates that the total used native capacity is unknown	С	4
0018h-003Fh	Reserved		

- Type Key:

  C Volume statistics counter log parameter (see 6.4.15.3)

  S Volume statistics string data log parameter (see 6.4.12.3.2)

  P Volume statistics partition record log parameter (see 6.4.12.3.3).

# Footnote:

<sup>a</sup> The size field is the size of the PARTITION RECORD DATA COUNTER field of each Volume statistics partition record descriptor. The overall size depends on the number of partitions as well as other fields that are part of the partition record log parameter as defined in (see 6.4.12.3.3)

Table 237 — LP 17h: Volume statistics log parameters

Parameter Code	Description	Type	Size
0040h	<b>Volume serial number {17h:0040h}:</b> The volume serial number parameter contains the value from the serial number field of the cartridge manufacturer's information page in the LTO CM.	S	32
0041h	Tape lot identifier {17h:0041h}: The tape lot identifier field may contain the tape pancake identifier value extracted from the servorwriter manufacturer field in the media manufacturer's page of the LTO CM or may be extracted from the manufacturer's word in the servo pattern.	S	8
0042h	Volume barcode {17h:0042h}: The value from MAM attribute 0806h (i.e., BARCODE, see SPC-4)	S	32
0043h	<b>Volume manufacturer {17h:0043h}:</b> The volume manufacturer parameter contains the value from the cartridge manufacturer field of the cartridge manufacturer's information page of the LTO CM.	S	8
0044h	<b>Volume license code {17h:0044h}:</b> ASCII code to represent the license under which this volume was manufactured. The volume license code parameter contains the value from the cartridge license code parameter of the cartridge manufacturer's information page of the LTO CM.	S	4
0045h	<b>Volume personality {17h:0045h}:</b> The volume personality parameter contains an ASCII string to identify the combination of physical volume type and density formatted on the medium. The intent is to provide a designator sufficient for successful volume interchange. The value is in the format "Ultrium-"+" <generation number="">" (e.g., "Ultrium-5")</generation>	S	9
0046h-007Fh	Reserved		
0080h	Write protect {17h:0080h}: A value of 01h indicates that a write protection state that is persistent with this volume is set; A value of 00h indicates that no write protection state that is persistent with this volume is set; and A value of FFh indicates that it is unknown if there is a persistent write protection condition set.	С	1
0081h	WORM {17h:0081h}: A value of 01h indicates that the volume is a WORM volume; A value of 00h indicates that the volume is not a WORM volume; and A value of FFh indicates that it is unknown if the volume is a WORM volume.	С	1
0082h	Maximum recommended tape path temperature exceeded {17h:0082h}:  A value of 01h indicates a drive has detected at some point in the past that the maximum recommended tape path temperature has been exceeded;  A value of 00h indicates no drive has detected at any point in the past that the maximum recommended tape path temperature has been exceeded; and A value of FFh indicates that it is not known if at any point in the past that the maximum recommended tape path temperature has been exceeded (e.g., Ultrium 4 volume).	С	1
0083h-00FFh	Reserved		
0100h	Not Supported		

- C Volume statistics counter log parameter (see 6.4.15.3)
  S Volume statistics string data log parameter (see 6.4.12.3.2)
- P Volume statistics partition record log parameter (see 6.4.12.3.3).

# Footnote:

<sup>a</sup> The size field is the size of the PARTITION RECORD DATA COUNTER field of each Volume statistics partition record descriptor. The overall size depends on the number of partitions as well as other fields that are part of the partition record log parameter as defined in (see 6.4.12.3.3)

Table 237 — LP 17h: Volume statistics log parameters

Parameter Code	Description	Type	Size
0101h	<b>Beginning of medium passes {17h:0101h}:</b> Count of the total number of times the beginning of medium position has passed over the head. The value from the LP3 passes field of the usage information page of the LTO CM.	С	4
0102h	<b>Middle of tape passes {17h:0102h}:</b> count of the total number of times that the physical middle of the user data region on the tape has passed over the head (e.g., $(EOM - BOM) \div 2$ ). The value from the $(LP5 - LP3) \div 2$ passes field of the usage information page of the LTO CM.	С	4
0103h-01FFh	Reserved		
0200h	First encrypted logical object identifier(s) {17h:0200h}: The logical object identifier(s) for the first logical object on the medium which has been encrypted for each partition on the medium. Each byte in the partition record data counter field(s) shall be set to FFh if there are no encrypted logical objects or if the partition does not exist. The least significant byte in the partition record data counter field (see 6.4.12.3.3) shall be set to FEh and all other bytes shall be set to FFh if it is not known if there are encrypted logical objects on the medium.	Р	6 <u>.ª</u>
0201h	First unencrypted logical object on the EOP side of the first encrypted logical object identifier(s) {17h:0201h}: The logical object identifiers for the first logical object on the medium which is not encrypted and is on the EOP side of the first encrypted logical object for each partition on the medium. Each byte in the partition record data counter field (see 6.4.12.3.3) shall be set to FFh if there are no unencrypted logical objects on the EOP side of the first encrypted logical object identifier or if the partition does not exist. The least significant byte in the partition record data counter field shall be set to FEh and all other bytes shall be set to FFh if: it is not known if there are unencrypted logical objects on the EOP side of the first encrypted logical object; all bytes in the first encrypted logical object identifier are set to FFh; or the least significant byte in the first encrypted logical object identifier is set to FEh and all other bytes are set to FFh.	Р	6 <u>.ª</u>
0202h	<b>Approximate native capacity of partition(s) {17h:0202h}:</b> The native capacity of the partition(s) in megabytes (i.e., 10 <sup>6</sup> bytes) from BOP to EOP. A data counter value with all bytes set to FFh in the partition record data counter field (see 6.4.12.3.3) indicates that the native capacity of the partition is unknown.	Р	4 <u>.</u> ª
0203h	Approximate used native capacity of partition(s) {17h:0203h}: The used native capacity of the partition in megabytes (i.e., 10 <sup>6</sup> bytes) from BOP to EOD. A data counter value with all bytes set to FFh in the partition record data counter field (see 6.4.12.3.3) indicates that the used native capacity of the partition is unknown.	Р	4 <u>.</u> ª
0204h	Approximate remaining native capacity to early warning of partition(s) {17h:0204h}: The approximate remaining native capacity of the partition(s) in megabytes (i.e., 10 <sup>6</sup> bytes) that is less than or equal to the native capacity from EOD to EW. The value reported in this parameter shall be zero once EOD is at or beyond EW. A data counter value with all bytes set to FFh in the PARTITION RECORD DATA COUNTER field (see 6.4.12.3.3) indicates that the remaining native capacity of the partition is unknown.	Р	4 <u>.ª</u>
0205h-EFFFh	Reserved		
F000h-FFFFh	Vendor specific		

# Type Key:

- C Volume statistics counter log parameter (see 6.4.15.3)
- S Volume statistics string data log parameter (see 6.4.12.3.2)
- P Volume statistics partition record log parameter (see 6.4.12.3.3).

# Footnote:

<sup>a</sup> The size field is the size of the PARTITION RECORD DATA COUNTER field of each Volume statistics partition record descriptor. The overall size depends on the number of partitions as well as other fields that are part of the partition record log parameter as defined in (see 6.4.12.3.3)

#### 6.4.12.3 Parameter formats

### 6.4.12.3.1 Data counter log parameter format

The volume statistics data counter log parameter is used for reporting parameters specified as volume statistics data counter log parameters in <u>Table 247, LP 1Bh: Data compression log parameters</u>. The volume statistics data counter log parameter format is specified in <u>Table 248, Data compression counter log parameter format of LP 1Bh.</u>

Bit Byte 6 5 2 1 7 msb 4 3 0 Isb (MSB) PARAMETER CODE 1 (LSB) 2 DU Obsolete TSD (0b) ETC(0b) TMC FORMAT AND LINKING (11b) 3 PARAMETER LENGTH (n-3) 4 (MSB) VOLUME STATISTICS DATA COUNTER n (LSB)

Table 238 — Volume statistics data counter log parameter format of LP 17h

The PARAMETER CODE field is defined in Table 247, LP 1Bh: Data compression log parameters.

See SPC-4 for descriptions of the DU bit, TSD bit, ETC bit, TMC field and FORMAT AND LINKING field. The TSD bit and FORMAT AND LINKING field shall be set to the values specified in <a href="Table 248">Table 248</a>, <a href="Data compression counter log parameter format of LP 1Bh">Data compression counter log parameter format of LP 1Bh</a>.

The PARAMETER LENGTH field indicates the number of bytes in the VOLUME STATISTICS DATA COUNTER field that follows.

The VOLUME STATISTICS DATA COUNTER field is the value of the data counter associated with the parameter code.

#### 6.4.12.3.2 Volume statistics string data log parameter format

The volume statistics string data log parameter is used for reporting parameters specified as volume statistics string data log parameters in <u>Table 247, LP 1Bh: Data compression log parameters</u>. The volume statistics string data log parameter format is specified in <u>Table 239</u>, <u>Volume statistics string data log parameter format of LP 17h</u>. The volume statistics string data log parameter shall be a multiple of 4 bytes.

Disto	Bit									
Byte	7 msb	6	5	4	3	2	1	0 lsb		
0	(MSB)	SB)								
1		PARAMETER CODE (LSB)								
2	DU(0b)	Obsolete	TSD (0b)	ETC(0b)	TMC(00b) FORMAT A			LINKING (01b)		
3				PARAMETER	LENGTH (n-3)					
4										
n		· 		STRING	G DATA					

Table 239 — Volume statistics string data log parameter format of LP 17h

The PARAMETER CODE field is defined in Table 247, LP 1Bh: Data compression log parameters.

See SPC-4 for descriptions of the DU bit, TSD bit, ETC bit, TMC field and FORMAT AND LINKING field. These fields shall be set to the values specified in <u>Table 239</u>, <u>Volume statistics string data log parameter format of LP 17h</u>.

The PARAMETER LENGTH field indicates the number of bytes of data that follows.

The STRING DATA field contains an ASCII string describing the volume statistics parameter specified by the PARAMETER CODE value. The STRING DATA field is an ASCII data field (see SPC-4).

# 6.4.12.3.3 Volume statistics partition record log parameter format

The volume statistics partition record log parameter is used for reporting parameters specified as volume statistics partition record log parameters in <u>Table 247, LP 1Bh</u>: <u>Data compression log parameters</u>. The volume statistics partition record log parameter format is specified in <u>Table 240, Volume statistics partition log parameter</u> format of LP 17h.

Bit **Byte** 7 msb 6 5 4 2 3 0 Isb (MSB) 0 PARAMETER CODE 1 (LSB) 2 Obsolete TSD (0b) TMC(00b) FORMAT AND LINKING (11b) DU ETC(0b) 3 PARAMETER LENGTH (n-3) Volume statistics partition record descriptor(s) Volume statistics partition record descriptor [first] 4 Volume statistics partition record descriptor [last]

Table 240 — Volume statistics partition log parameter format of LP 17h

The PARAMETER CODE field is defined in Table 247, LP 1Bh: Data compression log parameters.

See SPC-4 for descriptions of the DU bit, TSD bit, ETC bit, TMC field and FORMAT AND LINKING field. The TSD bit and FORMAT AND LINKING field shall be set to the values specified in <u>Table 240</u>, <u>Volume statistics partition log</u> parameter format of LP 17h.

The PARAMETER LENGTH field indicates the number of bytes in the volume statistics partition record log descriptors.

The volume statistics partition record descriptor format is specified in <u>Table 241, Volume statistics partition record</u> descriptor format of LP 17h.

Durto	Bit									
Byte	7 msb	6	5	4	3	2	1	0 lsb		
0		PARTITION RECORD DESCRIPTOR LENGTH (n-1)								
1		Reserved								
2	(MSB)									
3		•	PARTITION NUMBER							
4	(MSB)									
n		<u> </u>	PAF	RITTION RECO	RD DATA COUN	IEK		(LSB)		

Table 241 — Volume statistics partition record descriptor format of LP 17h

The PARTITION RECORD DESCRIPTOR LENGTH field specifies the number of bytes that follow.

The PARTITION NUMBER field indicates the number of the partition that the following counter is associated with.

The PARTITION RECORD DATA COUNTER field is the value of the data counter associated with the parameter code and associated with the specified partition.

#### 6.4.13 LP 18h: Protocol-specific port

See <u>LOG SELECT - 4Ch (see 5.2.7 on page 90)</u> and <u>LOG SENSE - 4Dh (see 5.2.8 on page 91)</u> for directions on how to use this page. The Protocol-specific log page for SAS is used to report errors that have occurred on the phys of SAS drives.

There is one copy of this page for each initiator. This page is defined for SAS-attached devices only.

The Protocol-specific log page for SAS is defined in table 242.

Table 242 — LP 18h Protocol-Specific log page for SAS

Deste		Bit							
Byte	7 msb	6	5	4	3	2	1	0 lsb	
0	DS	SPF			PAGE CC	DE (18h)			
1				Rese	erved				
2	(MSB)	(701)							
3		PAGE LENGTH (78h) (LSB)							
			Protocol-s	specific log par	ameter list				
4			Drotocal on	naifia lag parar	matar (first) (a	no toble 242\			
63		•	Protocol-spe	ecific log parar	neter (illst) <u>(s</u>	<u>ee labie 243)</u>			
64			Drotocol on	noifia lag narar	motor (loot) (o	no toblo 242)			
123			Protocor-spe	ecific log parar	neter (last) (si	<u>ee labie 243)</u>			

# 6.4.13.1 Parameter Reset Behavior (18h)

All log parameters are cleared when this log page is read. Specific flags may be cleared when corrective actions have removed the condition that caused the flag to be set. All flags are cleared on POR/Reset.

# 6.4.13.2 Parameter Definitions (18h)

<u>Table 243</u> defines the format for the Protocol-Specific log parameter for SAS.




Table 243 — Protocol-Specific Port log parameter for LP 18h for SAS (part 1 of 2)

Byto	Bit									
Byte	7 msb	6	5	4	3	2	1	0 lsb		
0	(MSB)		DADAMETE	ER CODE (relati	ive target port	identifier)				
1		PARAMETER CODE (relative target port identifier) (LSB)								
2		Parameter control byte								
	DU	Obsolete	TSD	ETC	TN	TMC FORMAT A		ND LINKING		
3				PARAMETER I	ENGTH (38h)					
4		Reserved PROTOCOL IDENTIFIER (6h)								
5				Rese	erved					

Table 243 — Protocol-Specific Port log parameter for LP 18h for SAS (part 2 of 2)

5.4		Bit							
Byte	7 msb	6	5	4	3	2	1	0 lsb	
6				GENERATION	CODE (00h)				
7		NUMBER OF PHYS (01h)							
			SAS	S phy log desc	criptor				
8				Rese	erved				
9				PHY IDE	NTIFIER				
10				Rese	erved				
11			SAS PH	Y LOG DESCRI	PTOR LENGTH	(m - 3)			
12	Reserved	ATT	ACHED DEVICE	TYPE		ATTACHE	D REASON		
13		RE	ASON		N	EGOTIATED LO	GICAL LINK RA	TE	
14	Reserved				ATTACHED SSP INITIATOR PORT	ATTACHED STP INITIATOR PORT	ATTACHED SMP INITIATOR PORT	Reserved	
15	Reserved				ATTACHED SSP TARGET PORT	ATTACHED STP TARGET PORT	ATTACHED SMP TARGET PORT	Reserved	
16				040.45	DD500	<u>I</u>		<u> </u>	
23				SAS AL	DDRESS				
24				ATTACHED	SAS ADDRESS				
31				ATTACHED	ADDITESS				
32				ATTACHED PH	HY IDENTIFIER				
33				Rese	erved				
39									
40	(MSB)			INVALID DW	ORD COUNT				
43								(LSB)	
44	(MSB)		RU	NNING DISPARI	ITY ERROR COL	JNT			
47	(1.15=)							(LSB)	
48	(MSB)		LOS	SS OF DWORD	SYNCHRONIZAT	ΓΙΟΝ			
51	(1407)							(LSB)	
52	(MSB)			PHY RESE	T PROBLEM			(1.05)	
55								(LSB)	
56 				Rese	erved				
57 58			ח	JV EVENT DEC	CDIDTOD I ENO	TU			
					CRIPTOR LENG				
59			NUM	BEK OF PHY E	VENT DESCRIP	IUKS			

The PARAMETER CODE field contains the relative target port identifier of the SSP target port that the log parameter describes.

<u>Table 244</u> defines the values of the fields in the parameter control byte for the log parameter.

Table 244 — Parameter control byte in the Protocol-Specific Port log parameter for LP 18h for SAS

Field	Value for LOG SENSE	Value for LOG SELECT	Description
DU	0	0 or 1	The DU bit is not defined for list parameters, so shall be set to zero when read with the LOG SENSE command and shall be ignored when written with the LOG SELECT command.
TSD	0	0 or 1	The device server shall support implicitly saving the log parameter at vendor specific intervals.
ETC	0	0 or 1	The ETC bit is not defined for list parameters, so shall be set to zero when read with the LOG SENSE command and shall be ignored when written with the LOG SELECT command.
TMC	00b	any	The TMC field is not defined for list parameters, so shall be set to 00b when read with the LOG SENSE command and shall be ignored when written with the LOG SELECT command.
FORMAT AND LINKING	11b	11b	The log parameter is a binary format list parameter.

The PARAMETER LENGTH field shall be set to the value defined in table 243.

The PROTOCOL IDENTIFIER field shall be set to the value defined in table 243.

The GENERATION CODE field is related to the Phy Control and Discover mode page which is not supported.

The NUMBER OF PHYS field contains the number of phys in the SAS target port (not in the entire SAS target device) and indicates the number of SAS phy log descriptors in the SAS phy log descriptor list.

The PHY IDENTIFIER field indicates the phy identifier of the phy for which information is being returned.

The SAS PHY LOG DESCRIPTOR LENGTH field indicates the number of bytes that follow in the SAS phy log descriptor. A SAS PHY LOG DESCRIPTOR LENGTH field set to 00h indicates that there are 44 additional bytes.

The ATTACHED DEVICE TYPE field indicates the device type attached to this phy and is defined in table 245.

Table 245 — ATTACHED DEVICE TYPE field of LP 18h

Code	Description
000b	No device attached
001b	SAS device
010b	Edge Expander device
011b	Fan-out expander device
All others	Reserved

The ATTACHED DEVICE TYPE field shall only be set to a value other than 000b if a SAS device or expander device is attached, after the identification sequence is complete.

If a SAS phy or expander phy is attached, then the ATTACHED REASON field indicates the value of the REASON field received in the IDENTIFY address frame during the identification sequence.

The NEGOTIATED LOGICAL LINK RATE field is defined in <u>table 221</u> and indicates the logical link rate being used by the phy. This is negotiated during the link reset sequence. This field may be different from the negotiated physical link rate when multiplexing is enabled.

The INVALID DWORD COUNT field indicates the number of invalid dwords that have been received outside of phy reset sequences (i.e., between when the SP state machine sends a Phy Layer Ready (SAS) confirmation or Phy Layer Ready (SATA) confirmation and when it sends a Phy Layer Not Ready confirmation to the link layer). The count shall stop at the maximum value. The INVALID DWORD COUNT field is set to a vendor-specific value after power on.

The RUNNING DISPARITY ERROR COUNT field indicates the number of dwords containing running disparity errors that have been received outside of phy reset sequences. The count shall stop at the maximum value. The RUNNING DISPARITY ERROR COUNT field is set to a vendor-specific value after power on.

The LOSS OF DWORD SYNCHRONIZATION COUNT field indicates the number of times the phy has restarted the link reset sequence because it lost dword synchronization (i.e., the SP state machine transitioned from SP15:SAS\_PHY\_Ready or SP22:SATA\_PHY\_Ready to SP0:OOB\_COMINIT). The count shall stop at the maximum value. The LOSS OF DWORD SYNCHRONIZATION COUNT field is set to a vendor-specific value after power on.

The PHY RESET PROBLEM COUNT field indicates the number of times a phy reset problem occurred. The count shall stop at the maximum value. The PHY RESET PROBLEM COUNT field is set to a vendor-specific value after power on.

The PHY EVENT DESCRIPTOR LENGTH field indicates the number of bytes in the phy event descriptor.

The NUMBER OF PHY EVENT DESCRIPTORS field indicates the number of phy event descriptors in the phy event descriptor list.


#### 6.4.14 LP 1A: Power Condition Transitions

See <u>LOG SELECT - 4Ch (see 5.2.7 on page 90)</u> and <u>LOG SENSE - 4Dh (see 5.2.8 on page 91)</u> for directions on how to use this page. The Power Condition Transitions log page provides a count of the occurrences of power condition transition events.

#### 6.4.14.1 Parameter Reset Behavior (1Ah)

Parameters in this page are lifetime counters and are never reset.

# 6.4.14.2 Parameter Definitions (1Ah)



The FORMAT AND LINKING field for log parameters in the Power Condition Transitions log page shall be set to 11b, indicating that the parameter is a binary format list parameter.

All Power Condition Transitions log page counters are saturating counters. A count is incremented by one for each transition (see table 246).

Table 246 — Parameter codes for the Power Condition Transitions log page LP 1Ah

Parameter code	Description	Size
II ()()()1h	Accumulated transitions to active: The number of times the device server has transitioned to the active power condition since the device was manufactured.	4
0004h	<b>Accumulated transitions to idle_c:</b> The number of times the device server has transitioned to the idle_c power condition since the device was manufactured. This includes all transitions (e.g., idle_c_condition_timer expiration)	4

#### 6.4.15 LP 1Bh: Data Compression

See <u>LOG SELECT - 4Ch (see 5.2.7 on page 90)</u> and <u>LOG SENSE - 4Dh (see 5.2.8 on page 91)</u> for directions on how to use this page. This page contains non-volatile information relating to volume usage.

The Data Compression log page is included in Ultrium 5 and later drives. It is not included in earlier generation drives.

The Data Compression log page defines data counters associated with the data compression operation for the most recent volume mount.

#### 6.4.15.1 Parameter reset behavior

Parameters may be reset to zero but shall not be changed with the use of a log select command. Parameters shall be set to zero at the start of a medium load and after a hard reset. Parameters shall not be set to zero during the processing of an unload operation.

#### 6.4.15.2 Parameter Definitions

Parameters 0002h through 0009h are pairs that represent a large number of bytes transferred. The first parameter of the pair represents the number of whole megabytes (i.e., 10<sup>6</sup> bytes) transferred, rounded to the nearest megabyte. The second parameter of the pair represents the difference between this number of megabytes and the actual number of bytes. This is a signed number and may be negative.

Parameters associated with data transferred from an application client indicate values prior to compression processing. Parameters associated with data transferred to the medium indicate values after compression processing. Compression processing may or may not compress logical blocks.

= WARNING =----- WARNING -----

The parameters in log pages should be dynamically parsed as some parameters may not be present and new parameters may be inserted. The relative location of parameters have changed and are anticipated to continue to change.

— WARNING =

= WARNING =

Table 247 — LP 1Bh: Data compression log parameters

Parameter Code	Description	Size
0000h	Read Compression ratio {1Bh:000h}: The average data compression ratio multiplied by 100 for all user data read from the medium since the last time this parameter was reset to zero. This parameter may include user data that was read from the medium but not returned to the application client (e.g., data that was read as part of a read ahead operation). The calculation is (number of bytes transferred out of the logical object buffer to an application client ÷ the number of bytes in logical objects read from the medium) x 100	2
0001h	<b>Write Compression Ratio x 100 {1Bh:0001h}:</b> The average data compression ratio multiplied by 100 for all user data written by the device since the last time this parameter was reset to zero. The calculation is (number of bytes transferred from an application client into the logical object buffer ÷ the number of bytes in logical objects written to the medium) x 100	2
0002h	<b>Megabytes transferred to application client {1Bh:0002h}:</b> The count of the number of megabytes (i.e., 10 <sup>6</sup> bytes) of logical blocks that have been transferred to an application client after compression processing at the time this parameter is requested. The value reported shall be rounded to the nearest megabyte.	4
0003h	Bytes transferred to application client {1Bh:0003j}: The difference in bytes between the actual number of bytes of logical blocks transferred to the application client and the value reported in parameter 0002h (i.e., megabytes (10 <sup>6</sup> ) transferred to application client). The value reported in this parameter is a signed number and may be negative.	4
0004h	<b>Megabytes read from medium {1Bh:0004h}:</b> The count of the number of megabytes (i.e., 10 <sup>6</sup> bytes) of logical blocks that have been read from the medium before compression processing at the time this parameter is requested. The value reported shall be rounded to the nearest megabyte.	4
0005h	<b>Bytes read from medium {1Bh:0005h}:</b> The difference in bytes between the actual number of bytes of logical blocks read from the medium before decompression at the time this parameter is requested and the value reported in parameter 0004h (i.e., megabytes (10 <sup>6</sup> ) read from medium). The value reported in this parameter is a signed number and may be negative.	4
0006h	<b>Megabytes transferred from application client {1Bh:0006h}:</b> The count of the number of megabytes (i.e., 10 <sup>6</sup> bytes) of logical blocks that have been transferred from an application client before compression processing at the time this parameter is requested. The value reported shall be rounded to the nearest megabyte.	4
0007h	Bytes transferred from application client {1Bh:0007h}: The difference in bytes between the actual number of bytes of logical blocks transferred from an application client before compression processing at the time this parameter is requested and the value reported in parameter 0006h (i.e., megabytes (10 <sup>6</sup> ) transferred from application client). The value reported in this parameter is a signed number and may be negative.	4
0008h	<b>Megabytes written to medium {1Bh:0008h}:</b> The count of the number of megabytes (i.e., 10 <sup>6</sup> bytes) of logical blocks that have written to the medium after compression processing at the time this parameter is requested. The value reported shall be rounded to the nearest megabyte.	4

Table 247 — LP 1Bh: Data compression log parameters

Parameter Code	Description	Size
	<b>Bytes written to medium {1Bh:0009h}:</b> The difference in bytes between the actual number of bytes of logical blocks written to the medium in logical blocks at the time this parameter is requested and the value reported in parameter 0008h (i.e., megabytes (10 <sup>6</sup> ) written to medium). The value reported in this parameter is a signed number and may be negative.	4
000Ah-00FFh	Reserved	
0100h	Data compression enabled {1Bh:0100h}: Indication of whether logical blocks will be compressed before they are written to the medium. The value reported indicates the current state of the device and does not indicate that logical blocks previously written to the medium were compressed. A data counter value set to 01h indicates that logical blocks will be compressed before being written to the medium during write type commands. A zero value indicates that logical blocks will not be compressed before being written to the medium during write type commands.	1
0101h-EFFFh	Reserved	
F000h-FFFFh	Vendor-specific	

### 6.4.15.3 Parameter format

The data compression counter log parameter format is specified in table 248

Table 248 — Data compression counter log parameter format of LP 1Bh

Durto				В	it			
Byte	7 msb	6	5	4	3	2	1	0 lsb
0	(msb)				·			
1		_	parameter code (Isb			(lsb)		
2	du	Obsolete	tsd (0b)	etc(0b)	b) tmc(00b) format and linking		linking (11b)	
3			parameter length (n-3)					
4	(msb)							
n		_		data compre	ssion countei	r		(Isb)

The PARAMETER CODE field is defined in table 247.

See SPC-4 for descriptions of the DU bit, TSD bit, ETC bit, TMC field and fORMAT AND LINKING field. The TSD bit and FORMAT AND LINKING field shall be set to the values specified in <u>table 248</u>.

The PARAMETER LENGTH field indicates the number of bytes in the data compression counter field that follows.

The DATA COMPRESSION COUNTER field is the value of the data counter associated with the parameter code.

#### 6.4.16 LP 2Eh: TapeAlerts

See <u>LOG SELECT - 4Ch (see 5.2.7 on page 90)</u> and <u>LOG SENSE - 4Dh (see 5.2.8 on page 91)</u> for directions on how to use this page. This page is used to track significant errors or conditions.

# Byte Description

0

Bit Description
7-6 Reserved
5-0 Page Code: 2Eh

1 Reserved

2-3 Page length: 0140h

Page Code 2Eh is used to report conditions in the tape drive. The TapeAlert log page is unique in that the parameter value is required to be 0000h or 0001h in the Log Sense command. A result of this requirement is that all parameters are requested, so the page length field is always returned 0140h.

For a description of service actions associated with the supported parameters, refer to the *IBM System Storage TS2350 Tape Drive Setup, Operator, and Service Guide, GC27-2277-00.* 

# 6.4.16.1 Parameter Reset Behavior (2Eh)

All log parameters are cleared when this log page is read. Specific flags may be cleared when corrective actions have removed the condition that caused the flag to be set (see table 249). All flags are cleared on POR/Reset.

# 6.4.16.2 Parameter Definitions (2Eh)

There are 64 parameters numbered from 0001h to 0040h. However, for this product only parameters listed in table 249 have meaning. The remaining parameters always return a value of 00h.

All parameters are one byte long. Each parameter is either 00h to indicate the corresponding condition has not occurred or 01h to indicate that the condition has occurred. See <u>6.4.16.1 Parameter Reset Behavior (2Eh)</u> for parameter clearing behavior.

The following parameters are supported for each TapeAlert. <u>Table 249</u> lists the supported TapeAlerts and additional fields as specified in SSC may be supported in the future.

Parameter description:

#### Byte Description

- 0-1 Parameter Code
- 2 Parameter control byte

Bit Description

7 DU (Disable Update): 0b6 DS (Disable Save): 1b

5 TSD (Target Save Disable): 0b

4 ETC (Enable Threshold Comparison): 0b

3-2 TMC (Threshold Met Comparison): 00b

1 Reserved

0 LO (List Parameter): 0b

3 Parameter length: 01h

# 4 TapeAlert Flag

ValueDescription01hcondition occurred00hcondition did not occur

Table 249 — LP 2Eh Supported TapeAlerts (part 1 of 2)

Code	Description	Set	Clear-a	Туре	
0001h	Read Warning		R	Warning	
0002h	Write Warning		R	Warning	
0003h	Hard Error		R	Warning	
0004h	Media		R	Critical	
0005h	Read Failure		R	Critical	
0006h	Write Failure		R	Critical	
0007h	Media Life		L	Warning	
0008h	Not Data Grade		R	Warning	
0009h	Write Protect		R	Critical	
000Ah	No Removal		R	Informational	
000Bh	Cleaning Media		R	Informational	
000Ch	Unsupported Format		R	Informational	
000Eh	Unrecoverable Snapped Tape		R	Critical	
000Fh	Memory Chip in Cartridge Failure		R	Warning	
0010h	Forced Eject		L	Critical	
0011h	Read Only Format		R	Warning	
0012h	Tape Directory Corrupted		R	Warning	
0013h	Nearing Media Life		R	Informational	
0014h	Clean Now		С	Critical	
0015h	Clean Periodic		С	Warning	
0016h	Expired Cleaning Media	С	С	Critical	
0017h	Invalid cleaning tape	С	R	Critical	
0019h	Host Channel Failure			Warning	
001Ah	Cooling Fan Failure	S		Warning	
001Bh	Power Supply Failure	S		Warning	
001Eh	Hardware A			Critical	
001Fh	Hardware B			Critical	
0020h	Interface			Warning	
0021h	Eject Media		U,R	Critical	
0022h	Download Fault			Warning	
0024h	Drive Temperature	S		Warning	
0025h	Drive Voltage	S		Warning	
0026h	Predictive Failure			Critical	
0027h	Diagnostics Required			Warning	
0029h	Loader Stray Tape			Critical	
002Ah	Loader Hardware			Warning	
002Dh	Loader Magazine			Critical	

Table 249 — LP 2Eh Supported TapeAlerts (part 2 of 2)

Code	Description	Set	Clear-a	Туре
0031h	Diminished Native Capacity	В	L, R	Informational
0032h	Lost Statistics		R	Warning
0033h	Tape Directory Invalid at Unload		L,R	Warning
0034h	Tape System Area Write Failure		L,R	Critical
0035h	Tape System Area Read Failure		R	Critical
0036h	No Start of Data		R	Critical
0037h	Loading Failure		R	Critical
0038h	Unrecoverable Unload Failure		R	Critical
0039h	Automation Interface Failure			Critical
003Ah	Firmware Failure			Warning
003Bh	WORM Medium - Integrity Check Failed		R	Warning
003Ch	WORM Medium - Overwrite Attempted		R	Warning

#### Legend

- Not set/supported
- L Load medium is loaded
- C Clean cleaner tape is loaded
- U Unload medium is ejected
- E Error error code is posted
- R Removal medium is FULLY removed
- S Sensor sensor check
- B Write from BOP 0 and condition exists
- <sup>a</sup> A TapeAlert flag may be cleared when the condition no longer exists

# 6.4.17 LP 30h: Tape Usage

See <u>LOG SELECT - 4Ch (see 5.2.7 on page 90)</u> and <u>LOG SENSE - 4Dh (see 5.2.8 on page 91)</u> for directions on how to use this page. This page contains non-volatile information relating to volume usage.

— WARNING — WARN

This page has been replaced by the standard log page Volume Statistics log page (17h) (see 6.4.15). This page is included for legacy applications and may become obsolete in future generation drives.

— WARNING — WARNING — WARNING —

# 6.4.17.1 Parameter Reset Behavior (30h)

Parameters in this page are read-only.

# 6.4.17.2 Parameter Definitions (30h)

WARNING

The parameters in log pages should be dynamically parsed as some parameters may not be present and new parameters may be inserted. The relative location of parameters have changed and are anticipated to continue to change..

WARNING

WARNING

Table 250 — LP 30h: Tape Usage log parameter codes

Code	Counter: Description	Size
0001h	Volume Mounts {30h:0001h}: Number of mounts for the current volume:	4
0002h	Volume Datasets Written {30h:0002h}: Total number of datasets written	8
0003h	Volume Write Retries {30h:0003h}: Total number of write temps	4
0004h	Volume Write Perms {30h:0004h}: Total write perms	2
0005h	Volume Suspended Writes {30h:0005h}:	2
0006h	Volume Fatal Suspended Writes {30h:0006h}:	2
0007h	Volume Datasets Read {30h:0007h}: Total number of datasets read	8
0008h	Volume Read Retries {30h:0008h}: Total number of read temps	4
0009h	Volume Read Perms {30h:0009h}: Total read perms	2
000Ah	Volume Suspended Reads {30h:000Ah}: Always set to 0000h	2
000Bh	Volume Fatal Suspended Reads {30h:000Bh}: Always set to 0000h	2

### 6.4.18 LP 31h: Tape capacity

See <u>LOG SELECT - 4Ch (see 5.2.7 on page 90)</u> and <u>LOG SENSE - 4Dh (see 5.2.8 on page 91)</u> for directions on how to use this page.

— Warning — Warning — Warning —

This vendor specific log page is obsolete and is being deprecated in favor of LP 17h: Volume Statistics (see 6.4.12 on page 299) which is defined in SSC-4. It is still returned with correct values but its not being enhanced to show additional partitions that are supported from LTO6 forward. This log page may be removed in the future. It is highly recommended that use of this log page be removed and replaced with using the Volume Statistics log page.

# 6.4.18.1 Parameter Reset Behavior (31h)

This page is reflects the currently loaded volume and as such changes when a volume is loaded. Values change after a successful format of the volume. This data cannot be reset or written.

# 6.4.18.2 Parameter Definitions(31h)

The Tape capacity log parameters are listed in table 251.

WARNING — WARNING — WARNING — WARNING — The parameters in log pages should be dynamically parsed as some parameters may not be present and new parameters may be inserted. The relative location of parameters have changed and are anticipated to continue to change.

— WARNING — WARNING — WARNING —

Table 251 — LP 31h: Tape capacity log parameters

Parameter Code (in Hex)	Counter: Description	Size
0001h	<b>Partition 0 Remaining Capacity {31h:0001h}:</b> A representation of the location on medium of EOD expressed in Mebibytes (2 <sup>20</sup> ) Native Capacity between EOD and EOP 0. This is intended to be used as a gauge to display the ratio of partition 0 used. There is no guarantee that the amount of data expressed in this parameter will be available for writing.	4
0002h	<b>Partition 1 Remaining Capacity {31h:0002h}:</b> A representation of the location on medium of EOD expressed in Mebibytes (2 <sup>20</sup> ) Native Capacity between EOD and EOP 1. This is intended to be used as a gauge to display the ratio of partition 1 used. There is no guarantee that the amount of data expressed in this parameter will be available for writing.	4
0003h	Partition 0 Maximum Capacity {31h:0003h}: Value representing the Native Capacity of partition 0 in Mebibytes (2 <sup>20</sup> )  Note that the value changes depending on how the volume is partitioned.  See Volume partitioning (see 4.2 on page 27) for size limitations.	4
0004h	Partition 1 Maximum Capacity {31h:0004h}: Value representing the Native Capacity of partition 1 in Mebibytes (2 <sup>20</sup> )  Note that the value changes depending on how the volume is partitioned. The maximum size of partition 1 is determined by the minimum size of partition 0 and the size of formatting overhead (i.e., guard band).  See Volume partitioning (see 4.2 on page 27) for size limitations.	4

#### 6.4.19 LP 32h: Data compression

See <u>LOG SELECT - 4Ch (see 5.2.7 on page 90)</u> and <u>LOG SENSE - 4Dh (see 5.2.8 on page 91)</u> for directions on how to use this page. This page contains counters related to compression.

WARNING
 This page has been replaced by the standard log page, <u>LP 1Bh: Data Compression (see 6.4.15 on page 311)</u>.
 This page is included for legacy applications and may become obsolete in future generation drives.
 WARNING

#### 6.4.19.1 Parameter Reset Behavior (32h)

Parameters in this page may be reset, but may not be written.

# 6.4.19.2 Parameter Definitions (32h)

Parameters 0002h through 0009h occur as pairs that represent a large number of bytes transferred. The first parameter represents the number of whole megabytes (10<sup>6</sup>) transferred, rounded to the nearest megabyte. The second parameter represents the signed difference between this number of megabytes and the actual number of bytes using signed values.

WARNING
The parameters in log pages should be dynamically parsed as some parameters may not be present and new parameters may be inserted. The relative location of parameters have changed and are anticipated to continue to change.
WARNING

Table 252 — LP 32h: Data Compression Log Parameters

Parameter Code	Counter: Description	Size
0000h	Read Compression ratio x 100 {32h:0000h}:	2
0001h	Write Compression Ratio x 100 {32h:0001h}:	2
0002h	Megabytes transferred to server {32h:0002h}: (10 <sup>6</sup> )	4
0003h	Bytes transferred to server {32h:0003h}:	4
0004h	Megabytes read from tape {32h:0004h}: (10 <sup>6</sup> )	4
0005h	Bytes read from tape {32h:0005h}:	4
0006h	Megabytes transferred from server {32h:0006h}: (10 <sup>6</sup> )	4
0007h	Bytes transferred from server {32h:0007h}:	4
0008h	Megabytes written to tape {32h:0008h}: (10 <sup>6</sup> )	4
0009h	Bytes written to tape {32h:0009h}:	4

# 6.4.20 LP 33h: Write Errors

See <u>LOG SELECT - 4Ch (see 5.2.7 on page 90)</u> and <u>LOG SENSE - 4Dh (see 5.2.8 on page 91)</u> for directions on how to use this page. This page contains detailed counters related to write operations.

# 6.4.20.1 Parameter Reset Behavior (33h)

Parameters in this page are reset when a cartridge is loaded.

# 6.4.20.2 Parameter Definitions (33h)

WARNING =

When multiple errors occur on a dataset, the counter that is updated is generally based on the first error detected.

— WARNING —

Table 253 — LP 33h: Write Errors log parameter codes (part 1 of 2)

Code	Counter: Description	Size
0000h	<b>Datasets Corrected {33h:0000h}:</b> ECC is done by hardware. This is driven by an excessive CQs rewritten condition. Each count represents one dataset in error that was successfully corrected and written.	2
0001h	<b>Servo Transients {33h:0001h}:</b> ERP action was required because of a servo detected error and the first retry was successfully in place (stop write without backhitch, i.e, servo write skip). Each count represents one dataset in error that was successfully recovered and written.	2
0002h	<b>Data Transients {33h:0002h}:</b> ERP action was required because of a readback check or ECC detected error and the first retry was successfully in place (no backhitch). Each count represents one dataset in error that was successfully recovered and written.	2
0003h	<b>Velocity Events {33h:0003h}:</b> A velocity control problem occurred. Each count represents one occurrence, not just the count of affected datasets. Counts may include occurrences from both temporary and permanent errors.	2
0004h	Servo Acquisition Temps {33h:0004h}: A servo error (servo dropout or off-track shutdown) was detected while trying to acquire a DSS or dataset at the beginning of a write append sequence (motion); ERP action was required, and servo transient condition criteria were not met. Each count represents one dataset in error that was successfully recovered and written.	2
0005h	Data Acquisition Temps {33h:0005h}: During read-back check, the read channel failed to acquire a DSS or dataset at the beginning of a write append sequence and no servo error was reported, ERP action was required, and read/ECC transient condition criteria were not met. Each count represents one dataset in error that was successfully recovered and written.	2
0006h	<b>Servo Temps {33h:0006h}:</b> A servo error (servo dropout or off-track shutdown) was detected while writing data, ERP action was required, and servo transient condition criteria were not met. Each count represents one dataset in error that was successfully recovered and written.	2
0007h	Data Temps {33h:0007h}: An uncorrectable error, CRC error, instantaneous speed variation (ISV) error, or no ending burst error occurred during readback check of a dataset, and no servo error was reported; ERP action was required, and readback/ECC transient condition criteria were not met. Each count represents one dataset in error that was successfully recovered and written.	2

**Table 253** — LP 33h: Write Errors log parameter codes (part 2 of 2)

Code	Counter: Description	Size
0008h	<b>Total Retries {33h:0008h}:</b> The count of the total number of ERP actions. Each count represents one occurrence, not just one time per dataset. Counts may include occurrences from both temporary and permanent errors.	2
0009h	Vendor-Reserved {33h:0009h}:	2
000Ah	Match Filter ERP {33h:000Ah}: (write mode use)	2
000Bh	Servo Skip Events {33h:000Bh}: The count of long servo write skips, extended DSS or long spaces between datasets written. This is generally servo write skips, but may also include other write scenarios. Each count represents one occurrence, not one count per block. Counts may include occurrences from both temporary and permanent errors.	2
000Ch	Housekeeping Events {33h:000Ch}: The count of write problems in the Housekeeping Dataset Region. Each count represents one occurrence, not just one time per dataset. Counts may include occurrences from both temporary and permanent errors.	2
000Dh	<b>FID Events {33h:000Dh}:</b> The count of write problems while processing the FID. Each count represents one occurrence, not just one time per dataset. Counts may include occurrences from both temporary and permanent errors.	2
000Eh	Vendor-Reserved (Blocks Lifted) {33h:000Eh}:	2
000Fh	Dataset Underrun {33h:000Fh}: The number of times that the drive overran the buffer processing capability and had to stop and restart during a write. Each count represents one occurrence, not just one time per write.	2
0010h	Vendor-Reserved {33h:0011h}:	2
0011h	Servo Position Events {33h:0011h}: The number of servo detected positional compare discrepancies.	2

#### 6.4.21 LP 34h: Read Forward Errors

See <u>LOG SELECT - 4Ch (see 5.2.7 on page 90)</u> and <u>LOG SENSE - 4Dh (see 5.2.8 on page 91)</u> for directions on how to use this page. This page contains detailed counters related to read operations.

# 6.4.21.1 Parameter Reset Behavior (34h)

Parameters in this page are reset when a cartridge is loaded.

# 6.4.21.2 Parameter Definitions (34h)

When multiple errors occur on a dataset, the counter that is updated is generally based on the first error detected. ERP counters indicate which specific ERP methods were successfully employed.




Table 254 — LP 34h: Read Error Counters log parameter codes (part 1 of 2)

Code	Counter: Description	Size
0000h	Datasets Corrected {34h:0000h}: ECC is done by hardware. Each count represents one dataset in error that was successfully corrected and read.	2
0001h	<b>Servo Transients {34h:0001h}:</b> ERP action was required because of a servo detected error and the first retry was successfully in place. Each count represents one dataset in error that was successfully recovered and read.	2
0002h	Data Transients {34h:0002h}: ERP action was required because of a read channel or ECC detected error and the first retry was successfully in place. Each count represents one dataset in error that was successfully recovered and read.	2
0003h	<b>Velocity Events {34h:0003h}:</b> A velocity control problem occurred. Each count represents one occurrence, not just the count of affected datasets. Counts may include occurrences from both temporary and permanent errors.	2
0004h	Servo Acquisition Temps {34h:0004h}: A servo error (servo dropout or off track shutdown) was detected while trying to acquire an initial DSS or dataset, ERP action was required, and servo transient condition criteria were not met. Each count represents one dataset in error that was successfully recovered and read.	2
0005h	Data Acquisition Temps {34h:0005h}: The read channel failed to acquire an initial DSS or dataset, and no servo error was reported; ERP action was required, and read/ECC transient condition criteria were not met. Each count represents one dataset in error that was successfully recovered and read.	2
0006h	Servo Temps {34h:0006h}: A servo error (servo drop out) was detected while reading a dataset; ERP action was required, and servo transient condition criteria were not met. Each count represents one dataset in error that was successfully recovered and read.	2
0007h	Data Temps {34h:0007h}: An uncorrectable error, CRC error, or no ending burst error occurred while reading a dataset, and no servo error was reported; ERP action was required, and read/ECC transient condition criteria were not met. Each count represents one dataset in error that was successfully recovered and read.	2
0008h	Sequence Errors {34h:0008h}: A dataset number out of sequence was encountered, and no Servo or read/ECC error reported; ERP action was required, and no transient condition criteria were not met. Each count represents one dataset in error that was successfully recovered and read.	2
0009h	Vendor-Reserved {34h:0009h}:	2
000Ah	Vendor-Reserved {34h:000Ah}:	2

Table 254 — LP 34h: Read Error Counters log parameter codes (part 2 of 2)

Code	Counter: Description	Size
000Bh	Vendor-Reserved {34h:000Bh}:	2
000Ch	<b>ERP Servo Adjust Hi {34h:000Ch}:</b> The dataset was recovered by reading with servo off-track variations. Each count represents one dataset in error that was successfully recovered and read.	2
000Dh	<b>ERP Servo Adjust Lo {34h:000Dh}:</b> The dataset was recovered by reading with servo off-track variations. Each count represents one dataset in error that was successfully recovered and read.	2
000Eh	Vendor-Reserved {34h:000Eh}:	2
000Fh	Vendor-Reserved {34h:000Fh}:	2
0010h	Servo AGA Gain ERP {34h:0010h}: (read only mode)	2
0011h	Vendor-Reserved: {34h:0011h}	2
0012h	Servo Opposite Gap ERP {34h:0012h}: (read only mode)	2
0013h	Vendor-Reserved {34h:0013h}:	2
0014h	Vendor-Reserved {34h:0014h}:	2
0015h	<b>Total Retries {34h:0015h}:</b> The count of the total number of ERP actions. Each count represents one occurrence, not just one time per dataset. Counts may include occurrences from both temporary and permanent errors.	2
0016h	Match Filter ERP {34h:0016h}: (read mode use)	2
0017h	Housekeeping Events {34h:0017h}: The count of read problems in the Housekeeping Dataset Region. Each count represents one occurrence, not just one time per dataset. Counts may include occurrences from both temporary and permanent errors.	2
0018h	Vendor-Reserved {34h:0018h}:	2
0019h	Dataset Overrun {34h:0019h}: The number of times that the drive overran the buffer processing capability and had to stop and restart during a read. Each count represents one occurrence, not just one time per read.	2
001Ah	Vendor-Reserved	2
001Bh	Servo Skip Events {34h:001Bh}: The count of extended DSS or long spaces between datasets read. This may include servo write skips, but may also include other write scenarios. Each count represents one occurrence, not one count per block. Counts may include occurrences from both temporary and permanent errors.	2
001Ch	Vendor-Reserved {34h:001Ch}:	2
001Dh	<b>FID Events {34h:001Dh}:</b> The count of read problems while processing the FID. Each count represents one occurrence, not just one time per dataset. Counts may include occurrences from both temporary and permanent errors.	2
001Eh	Servo Position Events {34h:001Eh}: The number of servo detected positional compare discrepancies.	2

#### 6.4.22 LP 37h: Performance Characteristics

See <u>LOG SELECT - 4Ch (see 5.2.7 on page 90)</u> and <u>LOG SENSE - 4Dh (see 5.2.8 on page 91)</u> for directions on how to use this page. This page includes various performance and capacity measurements across the operation of the drive. Some fields are normalized qualitative measures while others are quantitative.

#### 6.4.22.1 Parameter Reset Behavior (37h)

Each parameter has different reset characteristics which are described under the Subpage Code field description for bits <u>7-6 Scope</u>.

#### 6.4.22.2 Parameter Definitions (37h)

This page uses the Subpage Code mechanism (see 6.4.1) to select which groups of counters to return. This page has three scopes controlled by the Subpage Code field.

The subpage field in LOG SENSE - 4Dh (see 5.2.8 on page 91) and Log Parameter Format is used as follows:

DIL	Description
<b>7</b> 0	O

Description

Dit

7-6	Scope Value 00b 01b 10b 11b	Description Transient values: reset on Log Select [all Subpages are reset] Mount values: reset on load Lifetime values: reset on device power on or device reset (not target reset) Vendor-Reserved
5-4	Level	
	Value	Description
	00b	Return summary counters
	01b	Return basic counters
	10b	Return advanced counters
3-0	Group	
	Value	Description
	0h	All groups
	1h	Host Interface
	2h	Buffer
	3h	Medium
	4h	Capacity
	5h	Load/Unload
	6h	Servo

The Subpage field in <u>LOG SENSE - 4Dh (see 5.2.8 on page 91)</u> may be set to 00h when the page code field is 37h. This operation will reset all group and local counters in the transient scope. Other scope cannot be explicitly reset.

The individual log subpage and parameter codes are described in the following table. Note that the counters which are returned depends on the Level and Group fields in the subpage. A group value of 0h will return all counters of a level less than or equal to that specified.

In the following tables, multiple counter codes may be represented by a single row. There will be an aspect symbol in the counter code such as 'p', 'q', 's', or '?'. The Aspect(s) column indicates which of the following values applies to the given code(s).

Aspect	Definition
p=0	primary interface (fibre) all ports (totals)
p=1	primary interface (fibre) port 0
p=2	primary interface (fibre) port 1
p=A	automation interface (RS-422)
q=1	Non-Ready: NOTE: These commands include ALL commands which are processed when
	the drive is in a Not Ready state.
q=2	Head-of-Queue: NOTE: These commands are commands which may be processed in any
	order. Such commands include: Inquiry, Report LUNs, Test Unit Ready and Request
	Sense. These counts are updated only when the drive is in a Ready state.
q=3	Read: NOTE: This aspect has more features detailed below.
q=4	Write: NOTE: This aspect has more features detailed below.
q=5	Sync: NOTE: This aspect has more features detailed below.
q=6	Seek: NOTE: This aspect has more features detailed below.
q=7	Non-Medium: NOTE: These commands are command issued to LUN 0 which are not in any
	other applicable category. These include many commands such as Log Sense, Log Select,

	Read Buffer, Reserve, etc. These counts are updated only when the drive is in a Ready state.
q=8	Non-LUN0, Non-Ready: NOTE: These commands include ALL commands which are processed by a LUN other than LUN 0 when the drive is in a Not Ready state.
q=9	Non-LUN0, Head-of-Queue: NOTE: These commands are commands which may be processed in any order. Such commands include: Inquiry, Report LUNs, Test Unit Ready and Request Sense. These counts are updated only when the drive is in a Ready state.
q=A	Non-LUN0: NOTE: These commands include any commands processed by a LUN other than LUN 0. These counts are updated only when the drive is in a Ready state.
s=1	Speed 1: Highest read/write speed
s=2	Speed 2: Second highest read/write speed
s=3	Speed 3: Third highest read/write speed
s=4	Speed 4: Fourth highest read/write speed
s=5	Speed 5: Fifth highest read/write speed
s=6	Speed 6: Sixth highest read/write speed
s=7	Speed 7: Seventh highest read/write speed
s=8	Speed 8: Eighth highest read/write speed
s=9	Speed 9: Ninth highest read/write speed
s=A	Speed 10: Tenth highest read/write speed
s=B	Speed 11: Eleventh highest read/write speed
s=C	Speed 12: Twelfth highest read/write speed
s=D	Speed 13: Thirteenth highest read/write speed
s=E	Speed 14: Fourteenth highest read/write speed
s=F	High speed locate (not read/write capable)
t=0	Partition 0
t=1	Partition 1
t=2	Partition 2
t=3	Partition 3
?=1	write - write phase without host holdoff. NOTE: if no (paused) data is supported for a particular counter, this aspect will include all write information
?=2	write (paused) - write phase while the host is being held off (buffer full)
?=3	read - read phase without host holdoff. NOTE: if no (paused) data is supported for a particular counter, this aspect will include all read information
?=4	read (paused) - read phase while the host is being held off (buffer empty)
?=5	position - during the processing of a seek operation
?=6	load - during the processing of an load operation
?=7	unload - during the processing of an unload operation
?=F	other - not in an above phase

= WARNING =------ WARNING =

The parameters in log pages should be dynamically parsed as some parameters may not be present and new parameters may be inserted. The relative location of parameters have changed and are anticipated to continue to change..

— WARNING ———

= WARNING —

Table 255 — LP 37h: Performance Characteristics: Quality Summary

Code	Aspect(s)	Name: Description	Unit	Size	Level	Group
0000h		<b>Drive Efficiency {37h:0000h}:</b> Overall measure of the drive's condition. 00h is unknown, from 01h (best) to FFh (worst)	rating	1	0	0
0001h		Media Efficiency {37h:0001h}: Overall measure of the currently mounted media's condition. 00h is unknown, from 01h (best) to FFh (worst)	rating	1	0	0
0010h		Primary Interface Efficiency {37h:0010h}: Overall measure of the interface (to the host) condition. 00h is unknown, from 01h (best) to FFh (worst)	rating	1	0	0
0011h		Primary Interface Port 0 Efficiency {37h:0011h}: Overall measure of the per port interface (to the host) condition. 00h is unknown, from 01h (best) to FFh (worst)	rating	1	0	0
0012h		Primary Interface Port 1 Efficiency {37h:0012j}: Overall measure of the per port interface (to the host) condition. 00h is unknown, from 01h (best) to FFh (worst)	rating	1	0	0
001Ah		Library Interface Efficiency {37h:001Ah}: Overall measure of the interface (to the library) condition. 00h is unknown, from 01h (best) to FFh (worst)	rating	1	0	0

**Table 256 — LP 37h: Performance Characteristics: Device Usage** (part 1 of 2)

Code	Aspect(s)	Name: Description	Unit	Size	Level	Group
0040h		Time {37h:0040h}: Amount of entire sample duration	msec	6	2	5
0041h		<b>Medium Empty Time {37h:0041h}:</b> Duration without a tape present	msec	6	2	5
0042h		Medium Insert Time {37h:0042h}: Duration from cartridge insert to load	msec	6	2	5
0043h		Medium Mount Time {37h:0043h}: Total time from start of cartridge load until cartridge ejected	msec	6	2	5
0044h		Medium Load Time {37h:0044h}: Total time from start of cartridge load to load complete (ready)	msec	6	2	5
0045h		Medium Ready Time {37h:0045h}: Total time from load complete (ready) to start of unload	msec	6	2	5
0046h		Medium Eject Time {37h:0046h}: Time from start of unload to unload complete	msec	6	2	5
0047h		Medium Extract Time {37h:0047h}: Time from cartridge unloaded to removed	msec	6	2	5

Table 256 — LP 37h: Performance Characteristics: Device Usage (part 2 of 2)

Code	Aspect(s)	Name: Description	Unit	Size	Level	Group
0048h		Medium Dwell Time {37h:0048h}: Time from cartridge unloaded to (re)loaded.  Note - This may include time which cannot be determined as dwell or extract (when time is queried with a cartridge remaining in the unloaded position)	msec	6	2	5
0049h		<b>Medium Clean Time {37h:0049h}:</b> Time from cleaner recognized to eject complete	msec	6	2	5
0051h		<b>Medium Empty Count {37h:0051h}:</b> Number of times tape was fully removed	count	4	2	5
0052h		<b>Medium Insert Count {37h:0052h}:</b> Number of cartridge insertions to load position detected	count	4	2	5
0053h		<b>Medium Mount Count {37h:0053h}:</b> Number of mount operations	count	4	2	5
0054h		Medium Load Count {37h:0054h}: Number of load operations	count	4	2	5
0055h		<b>Medium Ready Count {37h:0055h}:</b> Number of ready transitions	count	4	2	5
0056h		Medium Eject Count {37h:0056h}: Number of unloads	count	4	2	5
0057h		Medium Extract Count {37h:0057h}: Number of times tape was extracted	count	4	2	5
0058h		<b>Medium Dwell Count {37h:0058h}:</b> Number of times tape was reloaded (from unload)	count	4	2	5
0059h		Medium Clean Count {37h:0059h}: Number of recognized cleaner loads (does not indicate successful cleans, tape may be expired)	count	4	2	5

Table 257 — LP 37h: Performance Characteristics: Host Commands (part 1 of 4)

Code	Aspect(s)	Name: Description	Unit	Size	Level	Group
0q00h	12(3456)789A	Count {37h:0q00h}:	count	4	2	1
0q01h	12(3456)789A	Timing {37h:0q01h}:	msec	6	2	1
0q02h	12(3456)789A	Relative Time {37h:0q01h}:	% * 65536	4	1	1
0q04h	12(3456)789A	Transfer Count to Host (in) {37h:0q04h}:	count	4	2	1
0q05h	12(3456)789A	Transfer Byte Count to Host (in) {37h:0q05h}:	bytes	8	2	1
0q06h	12(3456)789A	Transfer Timing to Host (in) {37h:0q06h}:	msec	6	2	1
0q08h	12(4)789A	Transfer Count from Host (out) {37h:0q08h}:	count	4	2	1
0q09h	12(4)789A	Transfer Byte Count from Host (out) {37h:0q09h}:	bytes	8	2	1
0q0Ah	12(4)789A	Transfer Timing from Host (out) {37h:0q0Ah}:	msec	6	2	1
	<b>7</b> 1	nmands include Read, Verify and Read Reverse (not all o only when the drive is in a Ready state	f these may b	e suppo	orted). Th	nese
0300h		Read Count {37h:0300h}: Number of blocks processed to the host by read type commands	blocks	6	2	1

Table 257 — LP 37h: Performance Characteristics: Host Commands (part 2 of 4)

Code	Aspect(s)	Name: Description	Unit	Size	Level	Group
0301h		Read Timing {37h:0301h}: Amount of time processing read type commands.  Note - Due to device specific performance path resources, this may not reflect the actual time spent processing commands, but may reflect the amount of time where read commands could be processed.	msec	6	2	1
0302h		Read Relative Time {37h:0302h}: Ratio of time spent reading with respect to Medium Ready Time	% * 65536	4	1	1
0304h		Transfer Count to Host (in) {37h:0304h}:	count	6	2	1
0305h		Transfer Byte Count to Host (in) {37h:0305h}:	bytes	8	2	1
0306h		Transfer Timing to Host (in) {37h:0306h}:	msec	6	2	1
03D0h		Read Performance Efficiency {37h:03D0h}: Ratio of performance read type commands with respect to all read type commands	% * 65536	4	1	1
03D4h		Read Filemark (perf) Relative Time {37h:03D4h}: Amount of time spent sending filemark encountered status to the host with respect to time Read Timing.	% * 65536	4	2	1
		nmands include Write and Write Filemarks [not including and only when the drive is in a Ready state.	any synchroniz	zation p	ortion]. T	hese
0400h		Write Count {37h:0400h}: Number of blocks processed from the host by write type commands	blocks	6	2	1
0401h		Write Timing {37h:0401h}: Amount of time processing write type commands.  Note - Due to device specific performance path resources, this may not reflect the actual time spent processing commands, but may reflect the amount of time where write commands could be processed.	msec	6	2	1
0402h		Write Relative Time {37h:0402h}: Ratio of time spent writing with respect to Medium Ready Time	% * 65536	4	1	1
0404h		Transfer Count to Host (in) {37h:0404h}:	count	6	2	1
0405h		Transfer Byte Count to Host (in) {37h:0405h}:	bytes	8	2	1
0406h		Transfer Timing to Host (in) {37h:0406h}:	msec	6	2	1
0408h		Transfer Count from Host (out) {37h:0408h}:	count	6	2	1
0409h		Transfer Byte Count from Host (out) {37h:0409h}:	bytes	8	2	1
040Ah		Transfer Timing from Host (out) {37h:040Ah}:	msec	6	2	1
04D0h		Write Performance Efficiency {37h:04D0h}: Ratio of performance write commands with respect to all write type commands	% * 65536	4	1	1
04D4h		Write Filemark Relative Time {37h:04D4j}: Amount of time spent writing filemarks.	% * 65536	4	2	1
ch		nmands include Write Filemarks [non-immediate]. Impliciting, non-buffered mode and idle time based syncs. These state.				
0500h		Sync Count [Host] {37h:0500h}: Number of host sync operations (non-immediate Write Filemarks, non-buffered writes)	count	4	2	1

**Table 257 — LP 37h: Performance Characteristics: Host Commands** (part 3 of 4)

Code	Aspect(s)	Name: Description	Unit	Size	Level	Group
0501h		Sync Timing [Host] {37h:0501h}: Amount of time processing host sync commands	msec	6	2	1
0502h		Sync Relative Time [Host] {37h:0502h}: Ratio of time spent processing host sync commands with respect to Medium Ready Time	% * 65536	4	1	1
0504h		Transfer Count to Host (in) {37h:0504h}:	count	4	2	1
0505h		Transfer Byte Count to Host (in) {37h:0505h}:	bytes	8	2	1
0506h		Transfer Timing to Host (in) {37h:0506h}:	msec	6	2	1
05D1h		Sync Count [Implicit] {37h:05D1h}: Number of implicit sync commands (time based flushes, mode change flushes)	count	4	2	1
05D2h		Sync Timing [Implicit] {37h:05D2h}: Amount of time processing implicit sync commands	msec	6	2	1
05D4h		Sync Relative Time [Implicit] {37h:05D4h}: Ratio of time spent processing implicit sync commands with respect to Medium Ready Time	% * 65536	4	1	1
	eek type host com Ready state.	mands include Space, Locate, and Rewind. These count	s are updated	only wh	nen the d	lrive is in
0600h		Seek Count {37h:0600h}: Number of positioning host commands	count	4	2	1
0601h		Seek Timing {37h:0601h}: Amount of time spent processing host positioning commands	msec	6	2	1
0602h		Seek Relative Time {37h:0602h}: Ratio of time spend processing host seek commands with respect to Medium Ready Time	% * 65536	4	1	1
0604h		Transfer Count to Host (in) {37h:0604h}:	count	4	2	1
0605h		Transfer Byte Count to Host (in) {37h:0605h}:	bytes	8	2	1
0606h		Transfer Timing to Host (in) {37h:0606h}:	msec	6	2	1
06D1h		Seek Block Count {37h:06D1h}: Number of blocks processed in host positioning commands	blocks	4	2	1
0Cp0h	012A	Command Count {37h:0Cp0h}:	count	6	2	1
0Cp1h	012A	Command Timing {37h:0Cp1h}:	msec	6	2	1
0Cp2h	012A	Command Relative Time {37h:0Cp2h}:	% * 65536	4	2	1
0Cp4h	012A	Command Transfer Count to Host (in) {37h:0Cp4h}:	count	6	2	1
0Cp5h	012A	Command Transfer Byte Count to Host (in) {37h:0Cp5h}:	bytes	8	2	1
0Cp6h	012A	Command Transfer Timing to Host (in) {37h:0Cp6h}:	msec	6	2	1
0Cp8h	012A	Command Transfer Count from Host (out) {37h:0Cp8h}:	count	6	2	1
0Cp9h	012A	Command Transfer Byte Count from Host (out) {37h:0Cp9h}:	bytes	8	2	1
0CpAh	012A	Command Transfer Timing from Host (out) {37h:0CpAh}:	msec	6	2	1
0CpCh	012A	Command Queue Count {37h:0CpCh}:	count	6	2	1

Table 257 — LP 37h: Performance Characteristics: Host Commands (part 4 of 4)

Code	Aspect(s)	Name: Description	Unit	Size	Level	Group
0CpDh	012A	Command Queue Latency {37h:0CpDh}:	msec	6	2	1
0CpEh	012A	Command Queue Relative Time {37h:0CpEh}:	% * 65536	4	2	1
0Dp1h	12A	Port Throughput Rate Maximum Bursting {37h:0Dp1h}:	bytes/sec	6	2	1
0Dp2h	12A	Port Throughput Rate Maximum Sustained {37h:0Dp2h}:	bytes/sec	6	2	1
0Dp3h	12A	Port Throughput Rate {37h:0Dp3h}:	bytes/sec	6	2	1
0Dp4h	12A	Port Throughput Efficiency {37h:0Dp4h}:	% * 65536	4	1	1
0Dp7h	12A	Port Rate Changes {37h:0Dp7h}:	count	4	2	1
0DF0h		Average Command Latency {37h:0DF0h}: Average amount of time commands were queued waiting for execution with respect to all commands (including unqueued commands which processed immediately).	usec	4	1	1
0DF1h		Average Dequeue Latency {37h:0DF1h}: Average amount of time commands were queued waiting for execution with respect to commands which where queued (not processed immediately).	usec	4	1	1
0DF8h		Long Queue Latency Count [>1 sec] {37h:0DF8h}:	count	4	2	1
0DF9h		Long Queue Latency Count [>10 sec] {37h:0DF9h}:	count	4	2	1
0DFAh		Long Queue Latency Count [>100 sec] {37h:0DFAh}:	count	4	2	1
0DFBh		Long Queue Latency Count [>1000 sec] {37h:0DFBh}:	count	4	2	1

Table 258 — LP 37h: Performance Characteristics: Host Initiators

Code	Aspect(s)	Name: Description	Unit	Size	Level	Group		
Note - In dual port configurations it is possible for the same host to be identified as a different initiator when using a different logical or physical path. This can occur in failover or load balancing applications.								
0E00h		Active Initiator Count {37h:0E00h}: Number of initiators which processed one or more commands.	count	4	2	1		
0E01h		<b>Primary Initiator {37h:0E01h}:</b> Ratio of commands issued by the initiator which is issuing the most commands with respect to all initiators.	% * 65536	4	2	1		
0E02h		<b>Secondary Initiator {37h:0E02h}:</b> Ratio of commands issued by the initiator which is issuing the second most commands with respect to all initiators.	% * 65536	4	2	1		
0E03h		<b>Current Initiator {37h:0E03h}:</b> Ratio of commands issued by this (the querying) initiator with respect to all initiators.	% * 65536	4	2	1		

Table 259 — LP 37h: Performance Characteristics: Host Recovery (by port)

Code	Aspect(s)	Name: Description	Unit	Size	Level	Group
0Fp0h	12A	Transfer Recoveries [by port] {37h:0Fp0h}:	count	4	2	1
0Fp1h	12A	Transfer Recover Time [by port] {37h:0Fp1h}:	msec	6	2	1
0Fp2h	12A	Resource Recoveries [by port] {37h:0Fp2h}:	count	4	2	1
0Fp3h	12A	Reset Count [by port] {37h:0Fp3h}:	count	4	2	1
0Fp8h	12A	Abort Count [by port] {37h:0Fp8h}:	count	4	2	1
0Fp9h	12A	Abort Time [by port] {37h:0Fp9h}:	msec	6	2	1

Table 260 — LP 37h: Performance Characteristics: Mode Phase Timing Windows (part 1 of 3)

Code	Aspect(s)	Name: Description	Unit	Size	Level	Group
1000h		Write Cycles {37h:1000h}:	count	4	2	2
1001h		Write Pauses {37h:1001h}:	count	4	2	2
1010h		Write Cycle Time {37h:1010h}:	msec	6	2	2
1020h		Write Cycle Relative Time {37h:1020h}: Ratio of time in write mode with respect to Medium Ready Time.	% * 65536	4	1	2
1021h		Write Setup Relative Time {37h:1021h}:	% * 65536	4	2	2
1022h		Write Ready Relative Time {37h:1022h}:	% * 65536	4	1	2
1023h		Write Pause Relative Time {37h:1023h}:	% * 65536	4	1	2
1024h		Write Exit Relative Time {37h:1024h}:	% * 65536	4	2	2
1200h		Read Cycles {37h:1200h}:	count	4	2	2
1201h		Read Pauses {37h:1201h}:	count	4	2	2
1210h		Read Cycle Time {37h:1210h}:	msec	6	2	2
1220h		Read Cycle Relative Time {37h:1220h}: Ratio of time in write mode with respect to Medium Ready Time.	% * 65536	4	1	2
1221h		Read Setup Relative Time {37h:1221h}:	% * 65536	4	2	2
1222h		Read Ready Relative Time {37h:1222h}:	% * 65536	4	1	2
1223h		Read Pause Relative Time {37h:1223h}:	% * 65536	4	1	2
1224h		Read Exit Relative Time {37h:1224h}:	% * 65536	4	2	2
1225h		Read Traverse EM Relative Time {37h:1225h}:	% * 65536	4	2	2
1400h		Position Count {37h:1400h}:	count	4	2	2
1410h		Position Time {37h:1410h}:	msec	6	2	2
1420h		<b>Position Relative Time {37h:1420h}:</b> Ratio of time spent physically and logically positioning with respect to Medium Ready Time.	% * 65536	4	1	2
1430h		Position Relative Rate {37h:1430h}:	bytes/sec	4	1	2
1480h		Position Count (Media) {37h:1480h}:	count	4	2	2
1490h		Position Time (Media) {37h:1490h}:	msec	6	2	2
14A0h		Position Relative Time (Media) {37h:14A0h}: Ratio of time spent physically positioning media with respect to Medium Ready Time.	% * 65536	4	1	2
14B0h		Position Relative Rate (Media) {37h:14B0h}:	bytes/sec	4	1	2

Table 260 — LP 37h: Performance Characteristics: Mode Phase Timing Windows (part 2 of 3)

Code	Aspect(s)	Name: Description	Unit	Size	Level	Group
14F0h		Position Buffer Hits {37h:14F0h}: Ratio of positioning operations where targets were already present in the buffer.	% * 65536	4	1	2
1500h		Flush Count {37h:1500h}: Number of low level buffer write flush operations. These may include operations which only affect the buffer and do not involve media motion.	count	4	1	2
1510h		Flush Time {37h:1510h}: Time spend executing operations counted by Flush Count.	msec	6	2	2
1520h		Flush Relative Time {37h:1520h}: Ratio of time spent flushing with respect to Medium Ready Time.	% * 65536	4	1	2
1580h		Flush Count (Media) {37h:1580h}: Number of low level buffer write flush operations which involve [or continue] media motion.	count	4	1	2
1590h		Flush Time (Media) {37h:1590h}: Time spent executing operations counted by Flush Count (Media).	msec	6	2	2
15A0h		Flush Relative Time (Media) {37h:15A0h}: Ratio of time spent flushing to media with respect to Write Cycle Time.	% * 65536	4	1	2
15F0h		Flush Buffer Hits {37h:15F0h}: Ratio of flush operations which required media motion.	% * 65536	4	1	2
2000h		Media Idle {37h:2000h}:	msec	6	2	3
2001h		Media Write {37h:2001h}:	msec	6	2	3
2002h		Media Read {37h:2002h}:	msec	6	2	3
2003h		Media Erase {37h:2003h}:	msec	6	2	3
2004h		Media Position {37h:2004h}:	msec	6	2	3
20?0h	1234567F	Media Phase Timing {37h:20?0h}:	msec	6	2	3
20?1h	1234567F	Media Phase Cycles {37h:20?1h}:	count	4	2	3
2?10h	1234567F	Wrap Change Count {37h:2?10h}: Total number of wrap changes.	count	4	2	3
2?11h	1234567F	<b>Band Change Count {37h:2?11h}:</b> Total number of changes to different servo bands.	count	4	2	3
2?50h	13	Datarate Performance Impacting ERPs {37h:2?50h}:	% * 65536	4	1	3
2?51h	13567F	Performance Impacting ERPs {37h:2?51h}:	% * 65536	4	1	3
2?52h	1234567F	Performance Impact by ERPs {37h:2?52h}:	% * 65536	4	1	3
2?60h	135	Uncompressed Data {37h:2?60h}:	bytes	8	2	2
2?61h	135	Compressed Data {37h:2?61h}:	bytes	8	2	2
2?62h	135	Padded Data {37h:2?62h}:	bytes	8	2	2
2?63h	135	Degate Data {37h:2?63h}:	bytes	8	2	2
2?68h	135	Datasets Processed {37h:2?68h}:	datasets	4	2	2
2?6Ch	13	Compression Ratio {37h:2?6Ch}:	% * 65536	4	1	2
2?71h	13F	Compressed Data (Medium) {37h:2?71h}:	bytes	8	2	3
2?72h	13F	Padded Data (Medium) {37h:2?72h}:	bytes	8	2	3
2?80h	13	Maximum Host Transfer Rate {37h:2?80h}:	bytes/sec	4	1	2

Table 260 — LP 37h: Performance Characteristics: Mode Phase Timing Windows (part 3 of 3)

Code	Aspect(s)	Name: Description	Unit	Size	Level	Group
2?81h	13	Average Host Transfer Rate {37h:2?81h}:	bytes/sec	4	1	2
2?82h	13	Average Host Buffer Rate {37h:2?82h}:	bytes/sec	4	1	2
2?83h	13	Window Host Buffer Rate {37h:2?83h}:	bytes/sec	4	1	2
2?84h	13	Host Buffer Efficiency {37h:2?84h}:	% * 65536	4	1	2
2?85h	13	Window Buffer Efficiency {37h:2?85h}:	% * 65536	4	1	2
2?88h	13	Average Host Transfer Length {37h:2?88h}:	bytes	4	2	2
2?8Ch	1	Average Host Sync Length {37h:2?8Ch}:	bytes	6	2	2
2?90h	13	Maximum Comp Transfer Rate {37h:2?90h}:	bytes/sec	4	1	2
2?91h	13	Average Comp Transfer Rate {37h:2?91h}:	bytes/sec	4	1	2
2?92h	13	Average Comp Buffer Rate {37h:2?92h}:	bytes/sec	4	1	2
2?93h	13	Window Comp Buffer Rate {37h:2?93h}:	bytes/sec	4	1	2
2?94h	13	Comp Buffer Efficiency {37h:2?94h}:	% * 65536	4	1	2
2?95h	13	Window Comp Buffer Efficiency {37h:2?95h}:	% * 65536	4	1	2
2?98h	13	Average Comp Transfer Length {37h:2?98h}:	bytes	4	2	2
2?9Ch	1	Average Comp Sync Length {37h:2?9Ch}:	bytes	6	2	2
2?A0h	13	Maximum Tape Transfer Rate {37h:2?A0h}:	bytes/sec	4	1	2
2?A1h	13	Average Tape Buffer Rate {37h:2?A1h}:	bytes/sec	4	2	2
2?A2h	13	Window Tape Buffer Rate {37h:2?A2h}:	bytes/sec	4	2	2
2?A3h	13	Moving Tape Buffer Rate {37h:2?A3h}:	bytes/sec	4	2	2
2?A4h	13	Window Tape Buffer Efficiency {37h:2?A4h}:	% * 65536	4	2	2
2?A5h	13	Moving Tape Buffer Efficiency {37h:2?A5h}:	% * 65536	4	2	2
2?A6h	13	Tape Buffer Efficiency {37h:2?A6h}: Ratio of amount of time we are usefully moving and ready with respect to amount of time the buffer is able to process data. A ratio larger than 1 indicates the compressed host data is arriving faster than the native device rate. Lower values indicate the device has under utilized host bandwidth.	% * 65536	4	2	2
2?A7h	13F	<b>Tape Thrashing {37h:2?A7h}:</b> Ratio of amount of time we are accelerating, decelerating or backhitching with respect to the time in mode.	% * 65536	4	2	2
2?A8h	13F	<b>Tape Efficiency {37h:2?A8h}:</b> Ratio of amount of time we are usefully moving and ready with respect to the time in mode.	% * 65536	4	1	2
2?F0h	13	Speed Changes {37h:2?F0h}:	count	4	2	2
2?F1h	13	Speed Forced {37h:2?F1h}:	count	4	2	2

Table 261 — LP 37h: Performance Characteristics: Servo Speed Characteristics

Code	Aspect(s)	Aspect(s) Name: Description		Size	Level	Group
5Fs0h	123456789ABCDEF	Servo Speed Relative Time {37h:5Fs0h}:	% * 65536	4	2	6

Table 262 — LP 37h: Performance Characteristics: Static Capacity

Code	Aspect(s)	Name: Description	Unit	Size	Level	Group
7000h		Static Capacity Efficiency {37h:7000h}:	% * 65536	4	1	4
7010h		Static Datasets Media {37h:7010h}:	datasets	4	2	4
7011h		Static Datasets Used {37h:7011h}:	datasets	4	2	4
7020h		Static Distance Media {37h:7020h}:	mm	8	2	4
7021h		Static Distance Used {37h:7021h}:	mm	8	2	4
7030h		Static Remaining Capacity in SkipSync Buffer {37h:7030h}:	% * 65536	4	2	4

Table 263 — LP 37h: Performance Characteristics: Active Capacity

Code	Aspect(s)	Name: Description	Unit	Size	Level	Group
7?00h	13F	Active Capacity Efficiency {37h:7?00h}:	% * 65536	4	1	4
7?10h	13F	Active Sync Loss {37h:7?10h}:	% * 65536	4	2	4
7?11h	13F	Active Skip Loss {37h:7?11h}:	% * 65536	4	2	4
7?12h	13F	Active DSS Loss {37h:7?12h}:	% * 65536	4	2	4
7?13h	13F	Active CQs Loss (on-the-fly) {37h:7?13h}:	% * 65536	4	2	4
7?21h	13F	Active Distance Skip {37h:7?21h}:	mm	8	2	4
7?22h	13F	Active Distance DSS {37h:7?22h}:	mm	8	2	4
7?23h	13F	Active Distance CQs (on-the-fly) {37h:7?23h}:	mm	8	2	4
7?2Fh	13F	Active Distance Total {37h:7?2Fh}:	mm	8	2	4

Table 264 — LP 37h: Performance Characteristics: Static Capacity per Partition

Code	Aspect(s)	Name: Description	Unit	Size	Level	Group
8t00h	01	Static Capacity Efficiency (Partition t) {37h:8t00h}:	% * 65536	4	1	4
8t10h	01	Static Datasets Media (Partition t) {37h:8t10h}:	datasets	4	2	4
8t11h	01	Static Datasets Used (Partition t) {37h:8t11h}:	datasets	4	2	4
8t20h	01	Static Distance Media (Partition t) {37h:8t20h}:	mm	8	2	4
8t21h	01	Static Distance Used (Partition t) {37h:8t21h}:	mm	8	2	4

# 6.4.23 LP 38h: Blocks/Bytes Transferred

See <u>LOG SELECT - 4Ch (see 5.2.7 on page 90)</u> and <u>LOG SENSE - 4Dh (see 5.2.8 on page 91)</u> for directions on how to use this page.

# 6.4.23.1 Parameter Reset Behavior (38h)

Parameters in this page are reset when a cartridge is loaded or the entire page is read with a LOG SENSE command.

# 6.4.23.2 Parameter Definitions (38h)

= WARNING =----- WARNING ----- WARNING ----

The parameters in log pages should be dynamically parsed as some parameters may not be present and new parameters may be inserted. The relative location of parameters have changed and are anticipated to continue to change..

- WARNING ----- WARNING ----- WARNING ----

Table 265 — LP 38h: Blocks/Bytes Transferred log parameter codes (part 1 of 2)

Code	Counter: Description	Size
0000h	Host Write Blocks Processed {38h:0000h}: Each count represents a block processed across the host interface during a Write. The count does not include ERP retries.	8
0001h	<b>Host Write Kibibtyes Processed {38h:0001h}:</b> Each count represents a kibibyte (1024 bytes) processed across the host interface during a Write. The count does not include ERP retries. This count may be divided by Device Write Kibibytes Processed, 0005, to calculate an approximate write compression ratio.	8
0002h	<b>Host Read Blocks Processed {38h:0002h}:</b> Each count represents a block processed across the host interface during a Read. The count does not include ERP retries.	8
0003h	Host Read Kibibytes Processed {38h:0003h}: Each count represents a kibibyte (1024 bytes) processed across the host interface during a Read. The count does not include ERP retries. This count may be divided by Device Read Kibibytes Processed, 0007, to calculate an approximate read compression ratio.	8
0004h	<b>Device Write Datasets Processed {38h:0004h}:</b> Each count represents a dataset processed on the medium. The count does not include ERP retries.	4
0005h	<b>Device Write Kibibytes Processed {38h:0005h}:</b> Each count represents a kibibyte (1024 bytes) processed on the medium. The count does not include ERP retries or any tape formatting overhead bytes.	6
0006h	Device Read Datasets Processed {38h:0006h}: Each count represents a dataset processed from the medium. The count does not include ERP retries.	4
0007h	<b>Device Read Kibibytes Processed {38h:0007h}:</b> Each count represents a kibibyte (1024 bytes) processed from the medium. The count does not include ERP retries or any tape formatting overhead bytes.	6
0008h	<b>Device Write Datasets Transferred {38h:0008h}:</b> Each count represents a dataset processed on the medium. The count includes ERP retries.	4
0009h	<b>Device Write Kibibytes Transferred {38h:0009h}:</b> Each count represents a kibibyte (1024 bytes) processed on the medium. The count includes ERP retries and any tape formatting overhead bytes.	6
000Ah	Device Read Datasets Transferred {38h:000Ah}: Each count represents a dataset processed from the medium. The count includes ERP retries.	4
000Bh	<b>Device Read Kibibytes Transferred {38h:000Bh}:</b> Each count represents a kibibyte (1024 bytes) processed from the medium. The count includes ERP retries and any tape formatting overhead bytes.	6

Table 265 — LP 38h: Blocks/Bytes Transferred log parameter codes (part 2 of 2)

Code	Counter: Description	Size			
000Ch	<b>Nominal Capacity of Partition {38h:000Ch}:</b> The nominal capacity of the current partition (in kibibytes).	8			
000Dh	Fraction of Partition Traversed {38h:000Dh}: The fractional part of the current partition traversed (N/255).	1			
000Eh	Nominal Capacity of Volume {38h:000Eh}: The nominal capacity of the mounted volume (in kibibytes). This is determined by the sum of the Nominal Capacity of Partition parameter for each partition.				
000Fh	Fraction of Volume Traversed {38h:000Fh}: The fractional part of the mounted volume traversed (N/255). This reports the value that would be reported by the Fraction of Partition Traversed if the volume were a single partition.				
0010h	Remaining Capacity of Volume {38h:0010h}: The nominal unwritten remaining capacity of the mounted volume (in kibibytes). This is not sensitive to current position. This is determined by the sum of the Remaining Capacity of Partition for each partition. If the tape does not have a valid EOD in at least one existing partition, or if a tape is not loaded, then a value of 'all ones' (-1) is returned.				
0011h	Remaining Capacity of Partition {38h:0011h}: The nominal unwritten remaining capacity of the current partition (in kibibytes). This is not sensitive to current position.				

#### 6.4.24 LP 39h: Host Port 0 Interface Errors

See <u>LOG SELECT - 4Ch (see 5.2.7 on page 90)</u> and <u>LOG SENSE - 4Dh (see 5.2.8 on page 91)</u> for directions on how to use this page. The count of errors occurring on host interface port 0 (while the device is active on the interface).

#### 6.4.24.1 Parameter Reset Behavior (39h)

Parameters in this page are reset when a cartridge is loaded.

#### 6.4.24.2 Parameter Definitions (39h)

WARNING — WARNIN

Table 266 — LP 39h: Host Port Interface Errors log parameter codes

Code	Counter: Description	Size
0000h	Host Protocol Errors {39h:000h}: Each count represents one occurrence. Counts may include occurrences from both temporary and permanent errors. (On SAS attached devices, this parameter is always set to zero. See LP 18h: Protocol-specific port (see 6.4.13 on page 306) for SAS protocol error counts).	2
0007h	Host Aborts {39h:0007h}: Each count represents one occurrence. Counts may include occurrences from both temporary and permanent errors.	2
0008h	Host Resets {39h:0008h}: Each count represents one occurrence. Counts may include occurrences from both temporary and permanent errors.	
0009h	Vendor-Reserved {39h:0009h}:	2
000Ah	Vendor-Reserved {39h:000Ah}:	2
0010h	Host Recoveries {39h:0010h}: Each count represents one occurrence. Counts may include occurrences from both temporary and permanent errors. An example of a host recoveries is a Fibre Channel Sequence Retransmission Request (SRR). On SAS attached devices, this parameter is the count of Transport Layer Recovery (TLR) occurrences.	4

#### 6.4.25 LP 3Ah: Drive control verification

See <u>LOG SELECT - 4Ch (see 5.2.7 on page 90)</u> and <u>LOG SENSE - 4Dh (see 5.2.8 on page 91)</u> for directions on how to use this page. This page is for special drive control mode verification. This page is not included in the list of supported pages (page code 00h) and is not intended for general use. This page is not shown in this document.

#### 6.4.26 LP 3Bh: Host Port 1 Interface Errors

See <u>LOG SELECT - 4Ch (see 5.2.7 on page 90)</u> and <u>LOG SENSE - 4Dh (see 5.2.8 on page 91)</u> for directions on how to use this page. The count of errors occurring on host port 1 (while the device is active on the interface).

#### 6.4.26.1 Parameter Reset Behavior (3Bh)

Parameters in this page are reset when a cartridge is loaded.

#### 6.4.26.2 Parameter Definitions (3Bh)

NOTE 40 - The parameters are identical to those found in <u>LP 39h: Host Port 0 Interface Errors (see 6.4.24 on page 338)</u>, except this data is recorded for incidents which occur on host interface port 1.

#### 6.4.27 LP 3Ch: Drive usage information

See <u>LOG SELECT - 4Ch (see 5.2.7 on page 90)</u> and <u>LOG SENSE - 4Dh (see 5.2.8 on page 91)</u> for directions on how to use this page. The Drive usage information log page only has valid data returned when the drive is configured for use in an eServer® system (i.e., The Product ID returned in Standard Inquiry is "HH LTO Gen x" where "x" is a number).


This page allows users to obtain the information last stored regarding the counts accumulated over the life of the drive.

#### 6.4.27.1 Parameter Reset Behavior (3Ch)

This page is updated as events and tape pulling occurs. The nonvolatile memory is updated upon error events, the tape being unthreaded, or when the cartridge unloads. The counters are not cleared by any reset and cannot be changed with the LOG SELECT command. If power is lost before the updated data is written to the nonvolatile memory, the counts are not updated.

#### 6.4.27.2 Parameter Definitions (3Ch)

Each parameter is a positive value. The counts do not overflow. Once a count reaches its maximum value, that maximum value is always returned. The counts do not roll over at the maximum value.



**Table 267 — LP 3Ch: Drive usage information log parameters** (part 1 of 2)

Parameter Code	Counter: Description	Size				
0001h	Write Media Blocks Counter {3Ch:0001h}: This counter is a lifetime statistic representing the number of physical groups (i.e. Datasets) written during a write operation. Upon reaching the maximum value, the counter does not wrap back to zero, but retains its maximum value (FFFF FFFF FFFFF).	8				
0002h	Rewrite Media Blocks Counter {3Ch:0002h}: This counter is a lifetime statistic representing the number of physical groups (i.e. Datasets) rewritten during a write operation. Upon reaching the maximum value, the counter does not wrap back to zero, but retains its maximum value (FFFF FFFF FFFFFh).					
0003h	Read Media Blocks Counter {3Ch:0003h}: This counter is a lifetime statistic representing the number of physical groups (i.e. Datasets) read during a read or space operation. The counter will not increment/decrement during space reverse, space LEOP, or space fast operations. Upon reaching the maximum value, the counter does not wrap back to zero, but retains its maximum value (FFFF FFFF FFFFFh).	8				
0004h	<b>ECC Corrections Counter {3Ch:0004h}:</b> This counter is a lifetime statistic representing the number of physical groups (i.e. Datasets) corrected during a read operation. Upon reaching the maximum value, the counter does not wrap back to zero, but retains its maximum value (FFFF FFFF FFFFF).	8				
0005h	Reread Media Blocks Counter {3Ch:0005h}: This counter is a lifetime statistic representing the number of physical groups (i.e. Datasets) reread during a read operation. Upon reaching the maximum value, the counter does not wrap back to zero, but retains its maximum value (FFFF FFFF FFFF FFFFh).	8				
0006h	Cumulative Cartridge Loads Counter {3Ch:0006h}: This counter increments each time a new cartridge is loaded. All media types and lengths increments this counter. Cleaning cartridges do not increment the counter. Upon reaching the maximum value, the counter does not wrap back to zero, but retains its maximum value (FF FFFFh).	3				

Table 267 — LP 3Ch: Drive usage information log parameters (part 2 of 2)

Parameter Code	Counter: Description	Size			
0007h	<b>Time Since Last Cleaning Counter {3Ch:0007h}:</b> This counter tracks the tape pulling time since the last cleaning. The count is expressed in minutes. Upon reaching the maximum value, the counter does not wrap back to zero, but retains its maximum value (FF FFFFh). The counter is reset when the drive is cleaned.	3			
0008h	Cumulative Power On Time Counter {3Ch:0008h}: This is a cumulative count of the time the drive has been powered on. The count is expressed in minutes. Upon reaching the maximum value, the counter does not wrap back to zero, but retains its maximum value (FF FFFFh).	3			
0009h	Cumulative Time Tape is Loaded and Tensioned {3Ch:0009h}: This is the number of minutes a tape has been threaded with tension on the tape.				
000Ah	Cumulative Cleaning Counter {3Ch:000Ah}: This is the count of the number of times that a cleaning cartridge was inserted into the drive. Upon reaching the maximum value, the counter does not wrap back to zero, but retains its maximum value (FFFFh).	2			
000Bh	"WORN MEDIA" Flag {3Ch:000Bh}: This flag is used by the drive to recommend retirement of the current cartridge. This flag is set when the condition is detected (e.g. on rewind, processing of Log Sense). This flag is cleared on next cartridge load. This corresponds to TapeAlert Flag 07h. 0001h: Media should be retired. 0000h: Media is still good enough to use or media condition cannot be determined (e.g. No media loaded).				
000Ch	"DEAD MEDIA" Flag {3Ch:000Ch}: This flag is used by the drive to indicate the media is no longer usable. This flag is set when the condition is detected and an error is reported. This flag is cleared on next cartridge load. This corresponds to TapeAlert flag 04h, and the posting of a "DEGRADED MEDIA" message (1/8252h).  0001h: Media is no longer usable.  0000h: Media is still usable or media condition cannot be determined (e.g. No media loaded).				
000Dh	"DEAD DRIVE" Flag {3Ch:000Dh}: This flag is used by the drive to recommend its own replacement. This flag is set when the condition is detected and an error is reported. This flag is never cleared once set.  0001h: Drive hardware failure has occurred or is imminent. Replace drive.  0000h: Drive hardware failure has not been detected. No drive replacement required.				
000Eh	Undefined Parameter (0000h)	2			
000Fh	Undefined Parameter (0000h)	2			
0010h	Undefined Parameter (0000h)	2			
0011h	Clean Requested Flag {3Ch:0011h}: This flag indicates the drive should be cleaned. 02h: Drive is not requesting clean 03h: Drive is requesting clean	1			
0012h	Undefined Parameter (00h)	1			
0013h	Undefined Parameter (00 0000h)	3			
0014h	Undefined Parameter (00 0000h)	3			
0015h	Cartridge Serial Number {3Ch:0015h}: This is right justified with leading spaces (20h). This value is update on cartridge load and retained until the next cartridge load. If no cartridge has been loaded since last power-on this value will be set to all spaces (20h).	12			

#### 6.4.28 LP 3Dh: Subsystem Statistics

See <u>LOG SELECT - 4Ch (see 5.2.7 on page 90)</u> and <u>LOG SENSE - 4Dh (see 5.2.8 on page 91)</u> for directions on how to use this page. The following counters all deal with subsystem statistics and errors.

#### 6.4.28.1 Parameter Reset Behavior (3Dh)

Most of the counters on this page are never reset. Most counters are maintained in VPD and persist across Log Select, Log Sense, Power On Resets, and even microcode download. Lifetime values are written to VPD every eight operating hours when the drive is in a not ready state. The counters lock at maximum values.

## 6.4.28.2 Parameter Definitions (3Dh)

WARNING WARNING

The parameters in log pages should be dynamically parsed as some parameters may not be present and new parameters may be inserted. The relative location of parameters have changed and are anticipated to continue to change..

WARNING WARNING

Table 268 — LP 3Dh: Subsystem Statistics log parameter codes (part 1 of 2)

Code	Counter: Description	Size			
0020h	<b>Volume Lifetime Mounts {3Dh:0020h}:</b> The total number of successful cartridge unloads performed during the lifetime of a cartridge. This field may not be updated for mounts that occur with the volume physically write-protected.	4			
0021h	<b>Volume Lifetime Megabytes Written {3Dh:0021h}:</b> The total amount of data in Megabytes (10 <sup>6</sup> ) written during the lifetime of the cartridge. On each unload, an approximate value is calculated and stored by rounding up to the nearest Megabyte. These bytes are counted as they are processed to the medium (compressed bytes), not at the host interface. This field may not be updated during mounts that occur with the volume physically write-protected.				
0022h	<b>Volume Lifetime Megabytes Read {3Dh:0022h}:</b> The total amount of data in Megabytes (10 <sup>6</sup> ) read during the lifetime of the cartridge. On each unload, an approximate value is calculated and stored by rounding up to the nearest Megabyte. These bytes are counted as they are processed from the medium (compressed bytes), not at the host interface. This field may not be updated during mounts that occur with the volume physically write-protected.	8			
0040h	<b>Drive Lifetime Mounts {3Dh:0040h}:</b> The total number of successful cartridge unloads performed during the lifetime of the drive.	4			
0041h	<b>Drive Lifetime Megabytes Written {3Dh:0041h}:</b> The total amount of data in Megabytes (10 <sup>6</sup> ) written during the lifetime of the drive. On each unload, an approximate value is calculated and stored by rounding up to the nearest Megabyte. These bytes are counted as they are processed to the medium (compressed bytes), not at the host interface.				
0042h	<b>Drive Lifetime Megabytes Read {3Dh:0042h}:</b> The total amount of data in Megabytes (10 <sup>6</sup> ) read during the lifetime of the drive. On each unload, an approximate value is calculated and stored by rounding up to the nearest Megabyte. These bytes are counted as they are processed from the medium (compressed bytes), not at the host interface.	8			
0060h	Clean Lifetime Mounts {3Dh:0060h}: The total number of successful cleaner cartridge operations performed during the lifetime of the drive.	4			
0061h	<b>Megabytes Written since Clean {3Dh:0061h}:</b> The total amount of data in Megabytes (10 <sup>6</sup> ) written since the last successful clean operation. On each unload, an approximate value is calculated and stored by rounding up to the nearest Megabyte. These bytes are counted as they are processed to the medium (compressed bytes), not at the host interface.	8			
0062h	<b>Megabytes Read since Clean {3Dh:0062h}:</b> The total amount of data in Megabytes (10 <sup>6</sup> ) read since the last successful clean operation. On each unload, an approximate value is calculated and stored by rounding up to the nearest Megabyte. These bytes are counted as they are processed from the medium (compressed bytes), not at the host interface.	8			

**Table 268 — LP 3Dh: Subsystem Statistics log parameter codes** (part 2 of 2)

Code	Counter: Description	Size			
0063h	<b>Mounts since Clean {3Dh:0063h}:</b> The total number of mounts performed since the last successful clean operation.	4			
0080h	<b>Library Interface Messages Received {3Dh:0080h}:</b> This counter is not stored in VPD and reflects messages since reset.	4			
0081h	Library Interface Messages Transmitted {3Dh:0081h}: This counter is not stored in VPD and reflects message since reset.				
0082h	<b>Library Interface Resets {3Dh:0082h}:</b> Count of hardware reset or logical reinitializations during normal operation.				
0083h	<b>Library Interface Buffer Errors {3Dh:0083h}:</b> This includes buffer overrun or underrun conditions.	4			
0084h	Library Interface Sync Errors {3Dh:0084h}:	4			
0085h	Library Interface Framing Errors {3Dh:0085h}:	4			
0086h	Library Interface Protocol Errors {3Dh:0086h}:	4			
0087h	Library Interface Logical Errors {3Dh:0087h}:	4			
0088h	Library Interface Loader Failures {3Dh:0088h}: This counter reflects load attempts when the drive is in an incorrect state or was otherwise unable to attempt requested loader action.	4			
0090h	<b>Drive Lifetime Write Perms {3Dh:0090h}:</b> Total number of write permanent errors which occurred on this drive.	4			
0091h	Drive Lifetime Read Perms {3Dh:0091h}: Total number of read permanent errors which occurred on this drive.	4			
0092h	<b>Drive Lifetime Load Perms {3Dh:0092h}:</b> Total number of load permanent errors which occurred on this drive.	4			
0093h	<b>Drive Lifetime Unload Perms {3Dh:0093h}:</b> Total number of unload permanent errors which occurred on this drive.				
00A0h	Drive Lifetime Write Temps {3Dh:00A0h}: Total number of write temporary errors which occurred on this drive.  Note - This is not a count of ERP actions taken, and certain transient errors may not be included in this count.	4			
00A1h	Drive Lifetime Read Temps {3Dh:00A1h}: Total number of read temporary errors which occurred on this drive.  Note - This is not a count of ERP actions taken, and certain transient errors may not be included in this count.	4			
00A2h	Drive Lifetime Load Temps {3Dh:00A2h}: Total number of load temporary errors which occurred on this drive.  Note - This is not a count of ERP actions taken, and certain transient errors may not be included in this count.	4			
00A3h	Drive Lifetime Unload Temps {3Dh:00A3h}: Total number of unload temporary errors which occurred on this drive.  Note - This is not a count of ERP actions taken, and certain transient errors may not be included in this count.				
0100h	Lifetime Power On Seconds {3Dh:0100h}: Cumulative number of seconds which the drive has been powered on.  Note - Since this time is only periodically updated in non-volatile storage, it is possible that this time may not be entirely accurate to the full resolution of the counter.	4			
0101h	Power On Seconds {3Dh:0101h}: Number of seconds since the drive was powered on or has undergone a hard reset condition.	4			
0102h	Reset Seconds {3Dh:0102h}: Number of seconds since the drive has undergone a soft reset condition.	4			

# 6.4.29 LP 3Eh: Engineering Use

See <u>LOG SELECT - 4Ch (see 5.2.7 on page 90)</u> and <u>LOG SENSE - 4Dh (see 5.2.8 on page 91)</u> for directions on how to use this page. This page is for engineering use only and is not included in the list of supported pages (i.e., page code 00h). As such, the counters on this page are not intended for general use and are not shown in this document.

# 6.4.30 LP 3Eh[3Ch]: Drive Control Statistics

See <u>LOG SELECT - 4Ch (see 5.2.7 on page 90)</u> and <u>LOG SENSE - 4Dh (see 5.2.8 on page 91)</u> for directions on how to use this page. This page is for special drive control mode statistics. It is not included in the list of supported pages (page code 00h) and is not intended for general use. This page is not shown in this document.

NOTE 41 - This page was log page 3Ch in Ultrium 2, but was moved to log page 3E[3C] for Ultrium 2 HH and newer generations (eServer support with it's log page 3C was added).

# 6.5 Medium auxiliary memory attributes (MAM)

#### 6.5.1 MAM attribute format

Each medium auxiliary memory attribute shall be communicated between the application client and device server in the format shown in <u>table 269</u>. This format shall be used in the parameter data for the WRITE ATTRIBUTE command (see 5.2.41) and the READ ATTRIBUTE command (see 5.2.13). The MAM attribute format in this standard implies nothing about the physical representation of an attribute in the medium auxiliary memory.

Bit **Byte** 5 2 6 4 3 1 7 msb 0 lsb (MSB) 0 attribute identifier 1 (LSB) 2 **READ ONLY** Reserved **FORMAT** 3 (MSB) ATTRIBUTE LENGTH (n-4) 4 (LSB) 5 attribute value n

Table 269 — MAM ATTRIBUTE format

The ATTRIBUTE IDENTIFIER field contains a code value identifying the attribute (see 6.5.2).

The READ ONLY bit indicates whether the attribute is in the read only state (see 4.17). If the READ ONLY bit is set to one, the attribute is in the read only state. If the READ ONLY bit is set to zero, the attribute is in the read/write state.

The FORMAT field (see table 270) specifies the format of the data in the ATTRIBUTE VALUE field.

Format	Name	Description
00b	BINARY	The ATTRIBUTE VALUE field contains binary data.
01b	ASCII	The ATTRIBUTE VALUE field contains left-aligned ASCII data.
10b	TEXT	The attribute contains textual data. The character set is as described in the TEXT LOCALIZATION IDENTIFIER attribute (see 6.5.2.4.6).
11b		Reserved

Table 270 — MAM attribute FORMAT field

The ATTRIBUTE LENGTH field specifies the length in bytes of the ATTRIBUTE VALUE field.

The ATTRIBUTE VALUE field contains the current value, for the <u>READ ATTRIBUTE - 8Ch (see 5.2.15 on page 107)</u> command, or intended value, for the <u>WRITE ATTRIBUTE - 8Dh (see 5.2.41 on page 182)</u> command, of the attribute.

#### 6.5.2 Attribute identifier values

#### 6.5.2.1 Attribute identifier values overview

The values in the ATTRIBUTE IDENTIFIER field (see 6.5.1) are assigned according to the attribute type (see 4.17) and whether the attribute is standard or vendor specific (see table 271).

Attribute Identifiers	Attribute Type	Standardized	Subclause
0000h to 03FFh	Device	Yes	6.5.2.2
0400h to 07FFh	Medium	Yes	<u>6.5.2.3</u>
0800h to 0BFFh	Host	Yes	<u>6.5.2.4</u>
0C00h to 0FFFh	Device	Vendor specific	
1000h to 13FFh	Medium	Vendor specific	
1400h to 17FFh	Host	Vendor specific	
1800h to FFFFh	Reserved		

Table 271 — MAM attribute identifier range assignments

Device servers may accept and process a WRITE ATTRIBUTE command containing standardized host type attribute identifier values (i.e., 0800h-0BFFh) or vendor specific host type attribute identifier values (i.e., 1400h-17FFh). Standardized host type attribute identifier values may be checked as described in 6.5.2.4.

# 6.5.2.2 Device type attributes

Device type attributes (see table 272) shall be maintained and updated by the device server when the medium and associated medium auxiliary memory are present. All supported medium type attributes shall have a status of read only (see 4.17).

**Table 272 — MAM Device type attributes** (part 1 of 2)

Attribute Identifier	Name	Attribute Length (in bytes)	Format	Subclause
0000h	REMAINING CAPACITY IN PARTITION	8	BINARY	6.5.2.2.1
0001h	MAXIMUM CAPACITY IN PARTITION	8	BINARY	6.5.2.2.1
0002h	TAPEALERT FLAGS	8	BINARY	
0003h	LOAD COUNT	8	BINARY	6.5.2.2.2
0004h	MAM SPACE REMAINING	8	BINARY	6.5.2.2.3
0005h	ASSIGNING ORGANIZATION	8	ASCII	
0006h	FORMATTED DENSITY CODE	1	BINARY	
0007h	INITIALIZATION COUNT	2	BINARY	6.5.2.2.4
0008h	Not Supported (VOLUME IDENTIFIER)	32	ASCII	
0009h	VOLUME CHANGE REFERENCE	4	BINARY	6.5.2.2.5
000Ah to 0209h	Reserved			
020Ah	DEVICE VENDOR/SERIAL NUMBER AT LAST LOAD	40	ASCII	6.5.2.2.6
020Bh	DEVICE VENDOR/SERIAL NUMBER AT LOAD-1	40	ASCII	6.5.2.2.6
020Ch	DEVICE VENDOR/SERIAL NUMBER AT LOAD-2	40	ASCII	6.5.2.2.6
020Dh	DEVICE VENDOR/SERIAL NUMBER AT LOAD-3	40	ASCII	6.5.2.2.6
020Eh to 021Fh	Reserved			
0220h	TOTAL MBYTES WRITTEN IN MEDIUM LIFE	8	BINARY	6.5.2.2.7

Attribute Identifier	Name	Attribute Length (in bytes)	Format	Subclause
0221h	TOTAL MBYTES READ IN MEDIUM LIFE	8	BINARY	6.5.2.2.7
0222h	TOTAL MBYTES WRITTEN IN CURRENT/LAST LOAD	8	BINARY	6.5.2.2.8
0223h	TOTAL MBYTES READ IN CURRENT/LAST LOAD	8	BINARY	6.5.2.2.8
0224h	LOGICAL POSITION OF FIRST ENCRYPTED BLOCK	8	BINARY	6.5.2.2.9
0225h	LOGICAL POSITION OF FIRST UNENCRYPTED BLOCK AFTER THE FIRST ENCRYPTED BLOCK	8	BINARY	6.5.2.2.10
0226h to 033Fh	Reserved			
0340h	Not Supported (MEDIUM USAGE HISTORY)	90	BINARY	
0341h	Not Supported (PARTITION USAGE HISTORY)	60	BINARY	
0342h to 03FFh	Reserved			

Table 272 — MAM Device type attributes (part 2 of 2)

- **6.5.2.2.1 REMAINING CAPACITY IN PARTITION and MAXIMUM CAPACITY IN PARTITION:** Are native capacities (i.e., assuming no data compression for the specified medium partition). These values are expressed in increments of 1 048 576 bytes (e.g., a value of one means 1 048 576 bytes and a value of two means 2 097 152 bytes).
- **6.5.2.2.2 LOAD COUNT:** Indicates how many times this medium has been fully loaded. This attribute should not be reset to zero by any action of the device server. The load counter is a saturating counter.
- **6.5.2.2.3 MAM SPACE REMAINING:** Indicates the space currently available in the medium auxiliary memory. The total medium auxiliary memory capacity is reported in the MAM CAPACITY attribute (see 6.5.2.3.7).
  - NOTE 42 It may not always be possible to utilize all of the available space in a given medium auxiliary memory implementation.
- **6.5.2.2.4 INITIALIZATION COUNT:** Indicates the number of times that a device server has logically formatted the medium. This value is cumulative over the life of the medium and is not reset to zero. The initialization counter is a saturating counter.
- **6.5.2.2.5 VOLUME CHANGE REFERENCE**: The VOLUME CHANGE REFERENCE attribute indicates changes in the state of the medium related to logical objects or format specific symbols of the currently mounted volume. There is one value for the volume change reference and the VOLUME CHANGE REFERENCE attribute for each partition shall use the same value. The VOLUME CHANGE REFERENCE attribute value shall:
  - a) be written to non-volatile medium auxiliary memory before the change on medium is valid for reading;
     and
  - change in a non-repeating fashion (i.e., never repeat for the life of the volume) and defined to be in a consistent manner per volume format.

The VOLUME CHANGE REFERENCE attribute value shall change when:

- a) the first logical object for each mount is written on the medium in any partition;
- b) the first logical object is written after GOOD status has been returned for a READ ATTRIBUTE command with the service action field set to ATTRIBUTE VALUES (i.e., 00h) and the first attribute identifier field set to VOLUME CHANGE REFERENCE (i.e, 0009h);
- c) any logical object on the medium (i.e., in any partition) is overwritten; or
- d) the medium is formatted.

The VOLUME CHANGE REFERENCE attribute may change at other times when the contents on the medium change.

The VOLUME CHANGE REFERENCE attribute should not change if the logical objects on the medium do not change.

A value of zero in the VOLUME CHANGE REFERENCE attribute indicates that the medium has not had any logical objects written to it (i.e., the volume is blank and has never been written to) or the value is unknown.

A value of all ones (e.g., 0xFFFF FFFFh) in the VOLUME CHANGE REFERENCE attribute indicates that all values have been used. This value indicates the VOLUME CHANGE REFERENCE value is no longer able to indicate changes to the volume. The device server does not allow further modifications of the medium.

When adding or modifying logical objects the VOLUME CHANGE REFERENCE attribute should only be read after all writing to the volume has completed and been synchronized.

6.5.2.2.6 DEVICE VENDOR/SERIAL NUMBER AT LAST LOAD, DEVICE VENDOR/SERIAL NUMBER AT LOAD –1, DEVICE VENDOR/SERIAL NUMBER AT LOAD –2 and DEVICE VENDOR/SERIAL NUMBER AT LOAD –3: Give a history of the last four device servers in which the medium has been loaded. The format of the attributes is shown in table 273.

Bit Byte	7	6	5	4	3	2	1	0
0	(MSB)							
7		T10 VENDOR IDENTIFICATION					(LSB)	
8	(MSB)							
39				PRODUCT SE	RIAL NUMBER			(LSB)

Table 273 — DEVICE VENDOR/SERIAL NUMBER MAM attribute format

The T10 VENDOR IDENTIFICATION field shall be the same value returned in the Standard INQUIRY data.

The PRODUCT SERIAL NUMBER field contains ASCII data that is a vendor specific serial number. If the product serial number is not available, the PRODUCT SERIAL NUMBER field shall contain ASCII spaces (20h).

#### 6.5.2.2.7 TOTAL MBYTES WRITTEN IN MEDIUM LIFE and TOTAL MBYTES READ IN MEDIUM LIFE:

Indicate the total number of data bytes that are transferred to or from the medium, after any data compression has been applied, over the entire medium life. These values are cumulative and shall not be reset to zero. These values are expressed in MiB (2<sup>20</sup>).

#### 6.5.2.2.8 TOTAL MBYTES WRITTEN IN CURRENT/LAST LOAD and TOTAL MBYTES READ IN CUR-

**RENT/LAST LOAD:** Indicate the total number of data bytes that are transferred to or from the medium, after any data compression has been applied, during the current load if the medium is currently loaded, or the last load if the medium is currently unloaded. The device server should reset these attributes to zero when the medium is loaded. These values are expressed in MiB  $(2^{20})$ .

**6.5.2.2.9 LOGICAL POSITION OF FIRST ENCRYPTED BLOCK:** Indicates the address of the first logical block on the medium that contains encrypted data.

#### 6.5.2.2.10 LOGICAL POSITION OF FIRST UNENCRYPTED BLOCK AFTER THE FIRST ENCRYPTED

**BLOCK:** Indicates the address of the first logical block in the partition that contains unencrypted data and follows the first logical block in the partition that contains encrypted data. If this attribute is supported, then the LOGICAL POSITION OF FIRST ENCRYPTED BLOCK (see 7.3.2.2.9) attribute shall be supported. The attribute value shall be set to FFFF FFFF FFFF if the attribute value for the LOGICAL POSITION OF FIRST ENCRYPTED BLOCK is set to:

- a) FFFF FFFF FFFFh; or

The attribute value shall be set to FFFF FFFF FFFF fFFFh if the attribute value for the LOGICAL POSITION OF FIRST ENCRYPTED BLOCK is set to:

- a) FFFF FFFF FFFEh; or

#### 6.5.2.3 Medium type attributes

Medium type attributes (see table 274) are stored in the medium auxiliary memory by the manufacturer. The device server shall not alter medium type attributes. All supported medium type attributes shall have a status of read only (see 4.17).

Attribute Identifier	Name	Attribute Length (in bytes)	Format	Subclause
0400h	MEDIUM MANUFACTURER	8	ASCII	6.5.2.3.1
0401h	MEDIUM SERIAL NUMBER	32	ASCII	6.5.2.3.2
0402h	MEDIUM LENGTH	4	BINARY	6.5.2.3.3
0403h	MEDIUM WIDTH	4	BINARY	6.5.2.3.4
0404h	ASSIGNING ORGANIZATION	8	ASCII	<u>6.5.2.3.5</u>
0405h	MEDIUM DENSITY CODE	1	BINARY	
0406h	MEDIUM MANUFACTURE DATE	8	ASCII	6.5.2.3.6
0407h	MAM CAPACITY	8	BINARY	6.5.2.3.7
0408h	MEDIUM TYPE	1	BINARY	6.5.2.3.8
0409h	MEDIUM TYPE INFORMATION	2	BINARY	6.5.2.3.8
040Ah	Not Supported (NUMERIC MEDIUM SERIAL NUMBER)			
040Bh to 07FFh	Reserved			

Table 274 — MAM Medium type attributes

- **6.5.2.3.1 MEDIUM MANUFACTURER:** Contains eight bytes of left-aligned ASCII data identifying the vendor of the media.
- 6.5.2.3.2 MEDIUM SERIAL NUMBER: Contains the manufacturer's serial number for the medium.
- **6.5.2.3.3 MEDIUM LENGTH:** Specifies the length of the medium in meters. A value of 0h specifies that the length of the medium is undefined.
- **6.5.2.3.4 MEDIUM WIDTH:** Specifies the width of the medium supported by this density. This attribute has units of tenths of millimeters. The value in this attribute shall be rounded up if the fractional value of the actual value is greater than or equal to 0,5. The MEDIUM WIDTH attribute may vary for a given density depending on the mounted volume. A value of 0h specifies the width of the medium is undefined.
- **6.5.2.3.5 ASSIGNING ORGANIZATION:** Identifies the organization responsible for the specifications defining the values in the MEDIUM DENSITY CODE attribute. The ASSIGNING ORGANIZATION attribute contains "LTO-CVE".
- **6.5.2.3.6 MEDIUM MANUFACTURE DATE:** Contains the date of manufacture of the medium. The format is YYYYMMDD (i.e., four numeric ASCII characters for the year followed by two numeric ASCII characters for the month followed by two numeric ASCII characters for the day with no intervening spaces).

**6.5.2.3.7 MAM CAPACITY:** Is the total capacity of the medium auxiliary memory, in bytes, at manufacture time. It does not indicate the available space of an unused medium auxiliary memory because some of the medium auxiliary memory space may be reserved for device-specific use making it inaccessible to the application client.

**6.5.2.3.8 MEDIUM TYPE and MEDIUM TYPE INFORMATION:** Give information about non-data media and other types of media. The MEDIUM TYPE INFORMATION attribute is interpreted according to the type of medium indicated by the MEDIUM TYPE (see table 275).

Table 275 —	- MEDIUM TYPE a	and MFDIUM	TYPE INFORMAT	FION MAM attributes

MEDIUM TYPE	Description	MEDIUM TYPE INFORMATION
00h	Data medium	Reserved
01h	Cleaning medium	Maximum number of cleaning cycles permitted
02h to 7Fh	Reserved	Reserved
80h	Write-once medium	Reserved
81h to FFh	Reserved	Reserved

#### 6.5.2.4 Host type attributes

Application clients may use the WRITE ATTRIBUTE and READ ATTRIBUTE commands to maintain the attributes shown in <u>table 276</u>. All existent host type attributes shall have a status of read/write (see 4.17).

Table 276 — MAM Host type attributes

Attribute Identifier	Name	Attribute Length (in bytes)	Format	Subclause
0800h	APPLICATION VENDOR	8	ASCII	6.5.2.4.1
0801h	APPLICATION NAME	32	ASCII	6.5.2.4.2
0802h	APPLICATION VERSION	8	ASCII	6.5.2.4.3
0803h	USER MEDIUM TEXT LABEL	160	TEXT	6.5.2.4.4
0804h	DATE AND TIME LAST WRITTEN	12	ASCII	6.5.2.4.5
0805h	TEXT LOCALIZATION IDENTIFIER	1	BINARY	6.5.2.4.6
0806h	BARCODE	32	ASCII	6.5.2.4.7
0807h	OWNING HOST TEXTUAL NAME	80	TEXT	6.5.2.4.8
0808h	MEDIA POOL	160	TEXT	6.5.2.4.9
0809h	Not Supported (PARTITION USER TEXT LABEL)			
080Ah	Not Supported (LOAD/UNLOAD AT PARTITION)			
080Bh	APPLICATION FORMAT VERSION	16	ASCII	6.5.2.4.10
080Ch	VOLUME COHERENCY INFORMATION	Not Specified	BINARY	6.5.2.4.11
0820h	MEDIUM GLOBALLY UNIQUE IDENTIFIER	36	BINARY	6.5.2.4.12
0821h	MEDIA POOL GLOBALLY UNIQUE IDENTIFIER	36	BINARY	6.5.2.4.13
others between 0800h and BFFh	Reserved			

**6.5.2.4.1 APPLICATION VENDOR:** Contains eight bytes of left-aligned ASCII data identifying the manufacturer of the application client (e.g., class driver or backup program) that last sent a WRITE ATTRIBUTE command to the device server while this medium auxiliary memory was accessible. The application vendor shall be a T10

vendor identification assigned by INCITS. A list of assigned T10 vendor identifications is on the T10 web site (<a href="http://www.T10.org">http://www.T10.org</a>).

- 6.5.2.4.2 APPLICATION NAME: Contains the name of the application client.
- **6.5.2.4.3 APPLICATION VERSION:** Contains the version of the application client.
- **6.5.2.4.4 USER MEDIUM TEXT LABEL:** Contains the user level identifier for the medium.
- **6.5.2.4.5 DATE & TIME LAST WRITTEN:** Contains when the application client last wrote to the medium auxiliary memory. The format is YYYYMMDDHHMM (i.e., four numeric ASCII characters for the year followed by two numeric ASCII characters for the month followed by two numeric ASCII characters for the day followed by two numeric ASCII characters between 00 and 24 for the hour followed by two numeric ASCII characters for the minute with no intervening spaces).
- **6.5.2.4.6 TEXT LOCALIZATION IDENTIFIER:** Defines the character set (see table 277) used for attributes with a TEXT format (see 6.5.1).

Value	Meaning
00h	No code specified (ASCII)
01h	ISO/IEC 8859-1 (Europe, Latin America)
02h	ISO/IEC 8859-2 (Eastern Europe)
03h	ISO/IEC 8859-3 (SE Europe/miscellaneous)
04h	ISO/IEC 8859-4 (Scandinavia/Baltic)
05h	ISO/IEC 8859-5 (Cyrillic)
06h	ISO/IEC 8859-6 (Arabic)
07h	ISO/IEC 8859-7 (Greek)
08h	ISO/IEC 8859-8 (Hebrew)
09h	ISO/IEC 8859-9 (Latin 5)
0Ah	ISO/IEC 8859-10 (Latin 6)
0Bh to 7Fh	Reserved
80h	ISO/IEC 10646-1 (UCS-2BE)
81h	ISO/IEC 10646-1 (UTF-8)
82h to FFh	Reserved

Table 277 — TEXT LOCALIZATION IDENTIFIER MAM attribute values

- **6.5.2.4.7 BARCODE:** Is contents of a barcode associated with the medium in the medium auxiliary memory.
- **6.5.2.4.8 OWNING HOST TEXTUAL NAME:** Indicates the host from which that USER MEDIUM TEXT LABEL (see 6.5.2.4.4) originates.
- **6.5.2.4.9 MEDIA POOL:** Indicates the media pool to which this medium belongs.
- **6.5.2.4.10 APPLICATION FORMAT VERSION:** Indicates the version of the format being used by the application that set this attribute.
- **6.5.2.4.11 VOLUME COHERENCY INFORMATION:** Contains information used to maintain coherency of information on a volume (see 4.18). The VOLUME COHERENCY INFORMATION attribute ATTRIBUTE VALUE field

is defined in table 278

Table 278: VOLUME COHERENCY INFORMATION MAM attribute format

Desta	Bit										
Byte	7 msb	7 msb 6 5 4 3 2 1									
0		VOLUME CHANGE REFERENCE VALUE LENGTH (n)									
1											
n		VOLUME CHANGE REFERENCE VALUE									
n+1											
n+8		VOLUME COHERENCY COUNT									
n+9											
n+16		VOLUME COHERENCY SET IDENTIFIER									
n+17		4.00	LICATION OUE	NIT ODEOLEIO IN	IFODMATION I	ENOTE by to	40\\				
n+18		АРР	LICATION CLIE	NT SPECIFIC IN	FORMATION L	ENGTH (Y-(N+	18))				
n+19			A DDI IOA	TION OF IENT O		DAATION!					
у			APPLICA	ATION CLIENT S	PECIFIC INFOR	RMATION					

The contents of the VOLUME CHANGE REFERENCE VALUE field, the VOLUME COHERENCY SET IDENTIFIER field, the VOLUME COHERENCY COUNT field, and the APPLICATION CLIENT SPECIFIC INFORMATION field are described in 4.18.

The VOLUME CHANGE REFERENCE VALUE LENGTH field contains the length of the VOLUME CHANGE REFERENCE VALUE field.

**6.5.2.4.12 MEDIUM GLOBALLY UNIQUE IDENTIFIER:** This attribute contains a globally unique identifier for the medium that is assigned by the application identified in the APPLICATION NAME (see <u>6.5.2.4.2</u>) attribute.

**6.5.2.4.13 MEDIA POOL GLOBALLY UNIQUE IDENTIFIER:** This attribute contains a globally unique identifier for the media pool that is assigned by the application identified in the APPLICATION NAME (see <u>6.5.2.4.2</u>) attribute.

#### 6.5.2.5 Vendor-Specific Medium Type Attributes

<u>Table 279</u> describes the vendor-specific medium type attributes. Application clients may use the READ ATTRIBUTE command to read the contents of the attributes shown in the table.

Table 279 — MAM Vendor-Specific Medium Type Attributes

Attribute Identifier	Name	Attribute Length (in bytes)	Format	Subclause
1000h	UNIQUE CARTRIDGE IDENTITY (UCI)	28	Binary	<u>6.5.2.5.1</u>
1001h	ALTERNATE UNIQUE CARTRIDGE IDENTITY (Alt-UCI)	24	Binary	<u>6.5.2.5.2</u>
1002h to 13FFh	Reserved			

**6.5.2.5.1 UNIQUE CARTRIDGE IDENTITY (UCI):** The UNIQUE CARTRIDGE IDENTITY (ICU) attribute is read only. Any attempt to access it using the WRITE ATTRIBUTE command is rejected by the drive with a CHECK CONDITION status with the Sense Key set to ILLEGAL REQUEST and the additional sense code set to INVALID FIELD IN PARAMETER LIST (i.e., 5/2600h). If the cartridge has inconsistency between the various sources from which the components of the UCI are derived, then a command to read the UCI is rejected with a CHECK

CONDITION status with the Sense Key set to MEDIUM ERROR and additional sense code set to AUXILIARY MEMORY READ ERROR (i.e., 3/1112h). This error is also reported if the cartridge has not been initialized.

6.5.2.5.2 ALTERNATE UNIQUE CARTRIDGE IDENTITY (Alt-UCI): The ALTERNATE UNIQUE CARTRIDGE IDENTITY (Alt-UCI) attribute is read only and reported for both an initialized cartridge and an uninitialized cartridge. Any attempt to access it using the WRITE ATTRIBUTE command is rejected by the drive with a CHECK CONDITION status with the Sense Key set to ILLEGAL REQUEST and the additional sense code set to INVALID FIELD IN PARAMETER LIST (i.e., 5/2600h). If the cartridge has inconsistency between the various sources from which the components of the Alt-UCI are derived, then a command to read the Alt-UCI is rejected with a CHECK CONDITION status with the Sense Key set to MEDIUM ERROR and additional sense code set to AUXILIARY MEMORY READ ERROR (i.e., 3/1112h).

# 6.6 Mode Parameters (MP)

Mode parameters are used with the <u>MODE SELECT (6/10) - 15h/55h (see 5.2.9)</u> commands and the <u>MODE SENSE (6/10) - 1Ah/5Ah (see 5.2.10)</u> commands. <u>Mode Page Behaviors (see 4.4 on page 33)</u> describes this device's non-standard behaviors related to mode parameters.

#### 6.6.1 Mode Parameter List for Mode Select (6/10)

For Mode Select (6) the mode pages are preceded by a 4-byte mode parameter header below, and an optional 8-byte block descriptor (see 6.6.2.2). Table 280 shows the format of the mode parameter list for Mode Select (6).

Bit Byte 5 7 msb 6 2 0 Isb 3 0 Mode Parameter Header 3 4 **Block Descriptor** (n = 0 or n = 8; if n=0 Block Descriptor does not exist)4+n-1 4+n Mode Pages n

Table 280 — Mode Parameter List for Mode Select (6)

For Mode Select (10) the mode pages are preceded by a 8-byte mode parameter header (see "Mode Parameter Header for Mode Select (6/10)" on page 356) and an optional 8-byte block descriptor (see "Block Descriptor for Mode Select (6/10)" on page 358). Mode page descriptions begin at "MP 01h: Read-Write Error Recovery" on page 363.

Table 281 shows the format of the mode parameter list for Mode Select (10).

Bit Byte 6 5 3 2 7 msb 4 1 0 lsb 0 Mode Parameter Header 7 8 **Block Descriptor** (n = 0 or n = 8; if n=0 Block Descriptor does not exist)8+n-1 8+n Mode Pages

Table 281 — Mode Parameter List for Mode Select (10)

# 6.6.1.1 Mode Parameter Header for Mode Select (6/10)

There is one copy of the mode parameter header for each initiator. <u>Mode parameter header and block descriptor</u> policy (see 4.4.1.1 on page 33) describes this devices non-standard behavior related to fields in the header.

Note that mounting a volume that modifies the value of fields in the mode parameter header does not establish a unit attention condition.

Table 282 shows the format of the mode parameter header for Mode Select (6).

Table 282 — Mode Parameter Header for Mode Select (6)

Deste	Bit									
Byte	7 msb	6	5	4	3	2	1	0 lsb		
0		Reserved (Mode Data Length)								
1		Medium Type								
2	WP	Buffer Mode Speed								
3		Block Descriptor Length								

Table 283 shows the format of the mode parameter header for Mode Select (10).

Table 283 — Mode Parameter Header for Mode Select (10)

Durto		Bit								
Byte	7 msb	6	5	4	3	2	1	0 lsb		
0	MSB	Decembed (Made Date Length)								
1		Reserved (Mode Data Length)  LSB								
2		Medium Type								
3	WP	BUFFERED MODE SPEED								
4		_	Reserved							
5										
6	MSB									
7				BLOCK DESCR	IPTOR LENGTE	1		LSB		

Mode parameter header field descriptions follow:

# Byte Description

0-1 Reserved (Mode Data Length): must be zero.

2 MEDIUM TYPE: (changeable-ignored)

Value	Description
00h	No volume is loaded
18h	Ultrium 1 Data volume is loaded
28h	Ultrium 2 Data volume is loaded
38h	Ultrium 3 Data volume is loaded
3Ch	Ultrium 3 WORM volume is loaded
48h	Ultrium 4 Data volume is loaded
4Ch	Ultrium 4 WORM volume is loaded
58h	Ultrium 5 Data volume is loaded
5Ch	Ultrium 5 WORM volume is loaded
68h	Ultrium 6 Data volume is loaded
6Ch	Ultrium 6 WORM volume is loaded
78h	Ultrium 7 Data volume is loaded
7Ch	Ultrium 7 WORM volume is loaded

3 Device-Specific Parameter - Sequential Access Devices

#### Bit Description

7 WP: (changeable-ignored)

6-4 BUFFERED MODE: 001b <Shared> (changeable)

Value Description

O00b Good status is reported when data on medium
O01b Good status is reported when data is in buffer

010b Not supported 011b - 111b Reserved

3-0 SPEED: 0h (use default read/write speed) <Shared> (changeable)

In this drive, contrary to the standards, speed 1h is the fastest speed and higher numbers are progressively slower speeds.

= WARNING =

= WARNING ==

Setting the SPEED field to a value other than 0h (i.e., selecting a specific speed) is not recommended. The drive is designed to dynamically select the optimal speed to achieve maximum systemic performance. This is based on complex criteria including interface bandwidth, host throughput, data compressibility, etc.

WARNING

= WARNING ==

4-5 Reserved

6-7 BLOCK DESCRIPTOR LENGTH: <Per I\_T nexus> (changeable)

Value Description

0000h No block descriptor follows 0008h A single block descriptor follows

#### 6.6.1.2 Block Descriptor for Mode Select (6/10)

The presence of the block descriptor in the Mode Select command depends on the value of the Block Descriptor Length in the mode parameter header. There is one copy of the block descriptor for each initiator. <u>Table 284</u> shows the format of the block descriptor. The format of the block descriptor is the same for Mode Select (6) and Mode Select (10). <u>Mode parameter header and block descriptor policy (see 4.4.1.1 on page 33)</u> describes this devices non-standard behavior related to fields in the block descriptor.

Note that mounting a volume that modifies the value of fields in the block descriptor does not establish a unit attention condition.

Byte	Bit									
	7 msb	6	5	4	3	2	1	0 lsb		
0			DENSITY CODE							
1	MSB									
3			NUMBER OF BLOCKS  LSB							
4				Rese	erved					
5	MSB									
7			BLOCK LENGTH LS							

Table 284 — Block Descriptor for Mode Select

The block descriptor field definitions follow:

#### Byte Description

Value

0 DENSITY CODE: <u>REPORT DENSITY SUPPORT - 44h (see 5.2.24 on page 137)</u> provides additional information (changeable-ignored)

ription
ne present is unidentified for one of the following reasons:
medium present
nown/Unsupported medium present
ne present is Ultrium 1 volume
ne present is Ultrium 2 volume
ne present is Ultrium 3 volume
ne present is Ultrium 4 volume
ne present is Ultrium 5 volume
ne present is Ultrium 6 volume
ne present is Ultrium 7 volume
ot change density (set only - NOOP)

- 1-3 NUMBER OF BLOCKS: 000000h (non-changeable)
- 4 Reserved
- 5-7 BLOCK LENGTH: 000000h <Per I\_T nexus> (changeable)

Any value of block length can be specified between the minimum and the maximum block lengths, inclusive, specified in the Read Block Limits command.

A Block Length value of 000000h indicates that the logical block size to be written to or read from the medium must be explicitly specified by the Transfer Length field in the CDB and the fixed bit must be 0b (see READ - 08h (see 5.2.14 on page 106), VERIFY(6) - 13h (see 5.2.39 on page 179), and WRITE - 0Ah (see 5.2.40 on page 181)). Additionally the read-type overlength ILI reporting will be suppressed as described in General Read-Type Handling (see 4.9.1 on page 43).

#### 6.6.2 Mode Parameter List for Mode Sense (6/10)

For Mode Sense (6) the mode pages are preceded by a 4-byte mode parameter header below and an optional block descriptor. If the DBD field is 0b, an 8-byte block descriptor follows the mode parameter header (see "Block Descriptor for Mode Sense (6/10)" on page 361). If the DBD field is 1b, the block descriptor is not present and the first mode page follows the mode parameter header. Table 285 shows the format of the mode parameter list.

Bit **Byte** 7 msb 5 4 3 1 0 lsb 0 Mode Parameter Header 4 **Block Descriptor** (if DBD = 0b, then n = 8 and m=12, else (i.e., DBD = 1b), n = 0, and m = 4) 4+n-1 m Mode Pages

Table 285 — Mode Parameter List for Mode Sense (6)

For Mode Sense (10) the mode pages are preceded by an 8-byte mode parameter header (see "Mode Parameter Header for Mode Sense (6/10)" on page 360) and an optional block descriptor. If the DBD field is 0b, an 8-byte block descriptor follows the mode parameter header (see "Block Descriptor for Mode Select (6/10)" on page 358). If the DBD field is 1b, the block descriptor is not present and the first mode page follows the mode parameter header. Mode page descriptions begin at "MP 01h: Read-Write Error Recovery" on page 363.

Table 286 shows the format of the mode parameter list.

Table 286 — Mode Parameter List for Mode Sense (10)

Durte	Bit										
Byte	7 msb	6	5	4	3	2	1	0 lsb			
0		Mode Parameter Header ————————————————————————————————————									
7											
8		Block Descriptor									
8+n-1		(if DBD = 0b, then n = 8 and m=16, else (i.e., DBD = 1b) n = 0,and m = 8)									
m											
р		-	Mode Pages ————								

# 6.6.2.1 Mode Parameter Header for Mode Sense (6/10)

There is one copy of the mode parameter header for each initiator. <u>Table 287</u> shows the format of the mode parameter header for Mode Sense (6).

Note that mounting a volume that modifies the value of fields in the mode parameter header does not establish a unit attention condition.

Table 287 — Mode Parameter Header for Mode Sense (6)

Dista		Bit							
Byte	7 msb	6	5	4	3	2	1	0 lsb	
0		MODE DATA LENGTH							
1		MEDIUM TYPE							
2	WP	Е	BUFFERED MODE			SPEED			
3		BLOCK DESCRIPTOR LENGTH							

Table 288 shows the format of the mode parameter header for Mode Sense (10).

Table 288 — Mode Parameter Header for Mode Sense (10)

Duto	Bit											
Byte	7 msb	6	5	4	3	2	1	0 lsb				
0	MSB											
1			MODE DATA LENGTH  LSE									
2		MEDIUM TYPE										
3	WP	Е	BUFFERED MODE SPEED									
4	MSB	_	Reserved									
5		-										
6	MSB	_		DI GOLL DEGGE	UDTOD I ENOTH							
7		-		BLOCK DESCR	IPTOR LENGTH			LSB				

Mode parameter header field descriptions follow:

#### Byte Description

0-1 MODE DATA LENGTH

The length in bytes of the following data that is available to be transferred. The mode data length does not include itself; that is, the length value is total length of the data available minus the size of this field (1 or 2, depending on Mode Sense (6) or (10), respectively).

- 2 MEDIUM TYPE: See 6.6.1.1 Mode Parameter Header for Mode Select (6/10)
- 3 Device-Specific Parameter Sequential Access Devices See <u>6.6.1.1 Mode Parameter Header for Mode Select (6/10)</u>
- 4-5 Reserved
- 6-7 BLOCK DESCRIPTOR LENGTH: See 6.6.1.1 Mode Parameter Header for Mode Select (6/10)

# 6.6.2.2 Block Descriptor for Mode Sense (6/10)

The presence of the block descriptor in the MODE SENSE command depends on the value of the DBD bit in the CDB. There is one copy of the block descriptor for each initiator. <u>Table 289</u> shows the format of the block descriptor.

Note that mounting a volume that modifies the value of fields in the block descriptor does not establish a unit attention condition.

Bit **Byte** 7 msb 6 5 4 3 2 1 0 lsb 0 **DENSITY CODE MSB** 1 NUMBER OF BLOCKS 3 LSB 4 Reserved 5 MSB **BLOCK LENGTH** 7 LSB

Table 289 — Block Descriptor for Mode Sense (10) or Mode Sense (6)

The block descriptor definition is shown in <u>Block Descriptor for Mode Select (6/10) (see 6.6.1.2 on page 358)</u>

#### 6.6.3 Mode Page Format

Table 290 shows the format of mode pages that do not use subpages.

Bit **Byte** 7 msb 5 4 3 1 6 2 0 lsb 0 PS SPF(0b) PAGE CODE 1 PAGE LENGTH (n-1) 2 Mode Parameters n

Table 290 — Mode Page Format

<u>Table 291</u> shows the format of mode pages that use subpages.

Table 291 — Mode Page Subpage Format

Deste	Bit							
Byte	7 msb	6	5	4	3	2	1	0 lsb
0	PS	SPF(1b)			PAGE	CODE		
1				SUBPAG	E CODE			
2	(MSB)		PAGE LENGTH (n-3) (LSB)					
3								
4			Mode Parameters					
n				Wode Pa	rameters			

The individual mode page descriptions that follow include the field descriptions. Each field is non-changeable unless specifically identified otherwise.

For those mode pages that allow saving of at least one parameter, the PS (Parameter Saveable) bit is returned in a MODE SENSE with a value of 1b. For those mode pages that do not allow saving of at least one parameter, the PS bit is returned in a MODE SENSE with a value of 0b. The PS bit is ignored in the parameter data transferred with a MODE SELECT command.

#### 6.6.4 Supported Mode Pages

The following standards-based mode pages are supported

MP 01h: Read-Write Error Recovery (see 6.6.5 on page 363)

MP 02h: Disconnect-Reconnect (see 6.6.6 on page 364)

MP 0Ah: Control (see 6.6.7 on page 366)

MP 0Ah[01h]: Control Extension (see 6.6.8 on page 367)

MP 0Ah[F0h]: Control Data Protection (see 6.6.9 on page 368)

MP 0Fh: Data Compression (see 6.6.10 on page 370)

MP 10h: Device Configuration (see 6.6.11 on page 371)

MP 10h[01h]: Device Configuration Extension (see 6.6.12 on page 374)

MP 11h: Medium Partition Page (see 6.6.13 on page 376)

MP 18h: Protocol-Specific Logical Unit (see 6.6.14 on page 381)

MP 19h: Protocol specific port (see 6.6.15 on page 383)

MP 1Ah: Power Condition (see 6.6.16 on page 386)

MP 1Ch: Informational Exceptions Control (see 6.6.17 on page 387)

MP 1Dh: Medium Configuration (see 6.6.18 on page 389)

The following vendor-specific mode pages are also supported

MP 24h: Vendor-Specific (see 6.6.19 on page 390)

MP 2Fh: Behavior Configuration (see 6.6.20 on page 393)

MP 30h: Device Attribute Settings (see 6.6.21 on page 396)

MP 30h[01h]: Drive MAC address - Device attribute settings (see 6.6.21.3.2 on page 401)

MP 30h[02h]: Drive IP address and subnet mask - Device attribute settings (see 6.6.21.3.3 on page 403)

MP 30h[20h]: Encryption mode - Device Attribute Settings (see 6.6.21.4.1 on page 405)

MP 30h[40h]: SkipSync - Device attribute settings (see 6.6.21.5.1 on page 407)

MP 30h[42h]: End of partition behavior control - Device attribute settings (see 6.6.21.5.2 on page 410)

MP 30h[43h]: Feature switches - Device attribute settings (see 6.6.21.5.3 on page 410)

MP 3Eh: Engineering Support (see 6.6.22 on page 411)

Mode Page 3Fh: All Pages

NOTE 43 - Mode page 3Eh is for engineering use only and is not included in page 3Fh

# 6.6.5 MP 01h: Read-Write Error Recovery

See MODE SELECT (6/10) - 15h/55h (see 5.2.9 on page 92) for how to set these parameters and MODE SENSE (6/10) - 1Ah/5Ah (see 5.2.10 on page 94) for how to read these parameters. Mode Page Behaviors (see 4.4 on page 33) describes this device's non-standard behaviors related to mode parameters.

The mode page policy for this page is described in Policy — non-standard (see 4.4.1 on page 33).

The Read-Write Error Recovery mode page (see <u>table 292</u>) specifies the error recovery and reporting parameters that the device server shall use when transferring data between the device and the medium. These parameters do not affect protocol-level recovery procedures or positioning error recovery procedures.

NOTE 44 - The parameters in the Read-Write Error Recovery mode page also apply to verify operations.

Table 292 — MP 01h Read-Write Error Recovery mode page

Durte				В	it			
Byte	7 msb	6	5	4	3	2	1	0 lsb
0	PS	SPF(0)			PAGE CO	DE (01h)		
1	PAGE LENGTH (0Ah)							
2	Reserved TB Rsvd EER PER DTE				DTE	DCR		
3	READ RETRY COUNT							
4	Reserved							
5	Reserved							
6	Reserved							
7				Rese	erved			
8				WRITE RET	RY COUNT			
9				Rese	erved			
10				Rese	erved			
11				Rese	erved			

# Byte Description

0

#### Bit Description

7 PS (Parameter Saveable): 0b. Ignored in MODE SELECT. See Parameter Saveable behavior in 4.4.2.2 on page 35

6 Reserved

5-0 PAGE CODE: 01h

1 PAGE LENGTH: 0Ah

2

_										
	Bit	Description								
	7-6	Reserved								
	5	TB (Transfer Block): 1b (non-changeable)								
	4	Reserved								
	3	EER (Enable Early Recovery): 1b (non-changeable) PER (Post Error): 0b (changeable)								
	2	•	, , , , , , , , , , , , , , , , , , , ,							
		<b>Value</b> 0b	<b>Description</b> The device does not create CHECK CONDITION status for Recovered Errors except for non-deferred sense data of:							
			— 1/0017 (Recovered Error, DRIVE NEEDS CLEANING) for a LOAD UNLOAD command							
			<ul> <li>— 1/3700 (Recovered Error, ROUNDED PARAMETER) for a MODE SELECT command, and</li> </ul>							
			<ul> <li>1/8383 (Recovered Error, DRIVE HAS BEEN CLEANED) for a LOAD UNLOAD command.</li> </ul>							
		1b	The device will report a CHECK CONDITION status for all recovered data and non-data errors with a sense key of 1 in non-deferred sense data as well as deferred sense data.							
	1	DTF (Disable	Transfer on Error): 0b (non-changeable)							
	0		e Correction): 0b (non-changeable)							
3	READ RE	•	Th (approximate maximum read recovery limit in seconds) (changeable)							
	Value	Descrip								
	05h		error recovery; < 5 seconds.							
	FFh	Full Red	covery Routines allowed (no time limit).							
	XXh	All othe	r values may be rounded (to non-FFh).							
4-7	Reserve	ed								
8	WRITE R	ETRY LIMIT: F	Fh (approximate maximum write recovery limit in seconds) (changeable)							
	Value	Descrip	otion							
	02h		error recovery; < 2 seconds.							
	05h		error recovery; < 5 seconds.							
	FFh		covery Routines allowed (no time limit).							
0.44	XXh		r values may be rounded (to non-FFh).							
9-11	Reserve	ea								

# 6.6.6 MP 02h: Disconnect-Reconnect

See MODE SELECT (6/10) - 15h/55h (see 5.2.9 on page 92) for how to set these parameters and MODE SENSE (6/10) - 1Ah/5Ah (see 5.2.10 on page 94) for how to read these parameters. Mode Page Behaviors (see 4.4 on page 33) describes this device's non-standard behaviors related to mode parameters.

The mode page policy for this page is described in Policy — non-standard (see 4.4.1 on page 33).

Table 293 — MP 02h Disconnect-Reconnect mode page

Desta				В	it			
Byte	7 msb	6	5	4	3	2	1	0 lsb
0	PS	SPF (0b)		PAGE CODE	(02h)			
1				PAGE LENG	этн (0Eh)			
2		BUFFER FULL RATIO						
3		BUFFER EMPTY RATIO						
4	(MSB)			D. 10 11 14 071				
5		-	BUS INACTIVITY LIMIT					(LSB)
6	(MSB)		DISCONNECT TIME LIMIT					
7		DISCONNECT TIME LIMIT					(LSB)	
8	(MSB)	_	CONNECT TIME LIMIT					
9				CONNECT	IIVIE LIIVII I			(LSB)
10	(MSB)	_		MAXIMUM B	LIDOT CIZE			
11		1		IVIAAIIVIUIVI E	UKST SIZE			(LSB)
12	EMDP	F.A	AIR ARBITRATIO	ON	DIMM		DTDC	
13				Reserved				
14	(MSB)	_		FIRST BURS	T 017E			
15				FIRST BURS	OI SILE			(LSB)

# Byte Description

Bit Description

PS (Parameter Saveable): 0b. Ignored in MODE SELECT. See Parameter Saveable behavior in 4.4.2.2 on page 35.

6 Reserved

5-0 PAGE CODE: 02h

PAGE LENGTH: 0Eh

2 BUFFER FULL RATIO: 00h (non-changeable)

3 BUFFER EMPTY RATIO: 00h (non-changeable)

4-5 BUS INACTIVITY LIMIT: (non-changeable)

6-7 DISCONNECT TIME LIMIT: 0000h (no limit) (non-changeable)

8-9 CONNECT TIME LIMIT: (non-changeable)

10-11 MAXIMUM BURST SIZE: 0000h (no limit) (changeable)

This value is changeable and remembered, but not used.

12

0

Bit Description

7 EMDP (Enable Modify Data Pointers): 0b (non-changeable)

6-4 FAIR ARBITRATION: 000b (non-changeable)

3 DIMM (Disconnect Immediate): 0b (non-changeable)

2-0 DTDC (Data Transfer Disconnect Word): 000b (non-changeable)

13 Reserved

14-15 First Burst Size: 0000h (non-changeable)

#### 6.6.7 MP 0Ah: Control

See MODE SELECT (6/10) - 15h/55h (see 5.2.9 on page 92) for how to set these parameters and MODE SENSE (6/10) - 1Ah/5Ah (see 5.2.10 on page 94) for how to read these parameters. Mode Page Behaviors (see 4.4 on page 33) describes this device's non-standard behaviors related to mode parameters.

The mode page policy for this page is described in Policy — non-standard (see 4.4.1 on page 33).

Table 294 — MP 0Ah Control mode page

<b>D</b> 4				В	Bit				
Byte	7 msb	6	5	5 4 3 2 1					
0	PS	SPF (0b)	SPF (0b) PAGE CODE (0Ah)						
1		PAGE LENGTH (0Ah)							
2		TST			Reserved		GLTSD	RLEC	
3		QUEUE ALGORI	UEUE ALGORITHM MODIFIER			erved	QERR	DQUE	
4	Reserved	RAC	Reserved RAERP				UAAERP	EAERP	
5	Reserved								
6	(MSB)								
7			READY AEN HOLDOFF PERIOD						
8	(MSB)			DU 10) / TIME	OUT DEDUCE				
9		•	BUSY TIME-OUT PERIOD						
10	(MSB)			Door	am rod				
11		•		Rese	erved			(LSB)	

#### Byte Description

0

#### Bit Description

- PS (Parameter Saveable): 0b. Ignored in MODE SELECT. See Parameter Saveable behavior in 4.4.2.2 on page 35.
- 6 SPF: 0b
- 5-0 Page Code: 0Ah
- 1 Page Length: 0Ah

2

#### Bit Description

- 7-5 TST (Task Set Type): 000b (non-changeable)
- 4-2 Reserved
- 1 GLTSD (Global Logging Target Save Disable): 0b (non-changeable)
- 0 RLEC (Report Log Exception Condition): 0b (non-changeable)

3

#### Bit Description

- 7-4 QUEUE ALGORITHM MODIFIER: 0000b (non-changeable)
- 3-2 Reserved
- 1 QERR (Queue Error): 0b (non-changeable)
- 0 DQUE (Disable Queuing): 1b (non-changeable)

4

Bit	Descri	ption

- 7 Reserved
- 6 RAC (Report A Check): 0b (non-changeable)
- 5-3 Reserved
- 2 RAERP (Ready Asynchronous Event Reporting): 0b (non-changeable)
- 1 UAAERP (Unit Attention Asynchronous Event Reporting): 0b (non-changeable)
- 0 EAERP (Error Asynchronous Event Reporting): 0b (non-changeable)
- 5 Reserved
- 6-7 READY AEN HOLDOFF PERIOD: 0000h (non-changeable)

If AEN is disabled (Byte 4 bit 2 = 0b), this field is not meaningful.

- 8-9 BUSY TIME-OUT PERIOD: FFFFh (non-changeable)
- 10 Reserved
- 11 Reserved

#### 6.6.8 MP 0Ah[01h]: Control Extension

See MODE SELECT (6/10) - 15h/55h (see 5.2.9 on page 92) for how to set these parameters and MODE SENSE (6/10) - 1Ah/5Ah (see 5.2.10 on page 94) for how to read these parameters. Mode Page Behaviors (see 4.4 on page 33) describes this device's non-standard behaviors related to mode parameters.

The mode page policy for this page is described in Policy — non-standard (see 4.4.1 on page 33).

Durka	Bit										
Byte	7 msb	6	5	4	3	2	1	0 Isb			
0	PS	SPF (1b)			PAGE CO	DE (0Ah)					
1			SUBPAGE CODE (01h)								
2	(MSB)		DACE LENGTH (1Ch)								
3		PAGE LENGTH (1Ch)									
4			Reserved			TCMOS	SCSIP	IALUAE			
5		Reserved				INITIAL COMM	AND PRIORITY				
6				Dan							
31		-		Rese	erved						

Table 295 — MP 0Ah[01h] Control Extension mode page

# Byte Description

0

#### Bit Description

- PS (Parameter Saveable): 0b. Ignored in MODE SELECT. See Parameter Saveable behavior in 4.4.2.2 on page 35.
- 6 SPF: 1b
- 5-0 PAGE CODE: 0Ah
- 1 SUBPAGE CODE: 01h
- 2-3 PAGE LENGTH: 1Ch

4

#### Bit Description

- 7-3 Reserved
- 2 TCMOS (Timestamp Changeable by Methods Outside this Standard) (non-changeable)

A TCMOS bit set to one specifies that the timestamp may be initialized by methods outside the scope of this standard (for example The LDI Set Timestamp command). A TCMOS bit set to zero specifies that the timestamp shall not be changed by any method except those defined by this standard.

1 SCSIP (SCSI precedence) (changeable)

A SCSIP bit set to one specifies that the timestamp changed using a SET TIMESTAMP command takes precedence over methods outside the scope of this standard (for example the LDI Set Timestamp command). A SCSIP bit set to zero specifies that methods outside this standard (for example the LDI Set Timestamp command) may change the timestamp and that the SET TIMESTAMP command is illegal.

0 IALUAE (implicit asymmetric logical unit access enabled): 0b (non-changeable)

5

#### Bit Description

- 7-4 Reserved
- 3-0 INITIAL COMMAND PRIORITY: 0h (non-changeable)
- 6-31 Reserved

#### 6.6.9 MP 0Ah[F0h]: Control Data Protection

See MODE SELECT (6/10) - 15h/55h (see 5.2.9 on page 92) for how to set these parameters and MODE SENSE (6/10) - 1Ah/5Ah (see 5.2.10 on page 94) for how to read these parameters. Mode Page Behaviors (see 4.4 on page 33) describes this device's non-standard behaviors related to mode parameters.

The Control Data Protection mode page provides controls that allow selective use of logical block protection. <u>Logical block protection (see 4.6 on page 37)</u> describes how this page is used to control logical block protection.

The mode page policy for this page is described in Policy — non-standard (see 4.4.1 on page 33).

Table 296 — MP 0Ah[F0h] Control Data Protection mode page format

Durto				E	it			
Byte	7	6	5	4	3	2	1	0
0	PS	SPF(1b)			PAGE CC	DE (0Ah)		
1				SUBPAGE (	ODE (F0h)			
2	(MSB)			DAGELEN	IOTII (20)			
3	PAGE LENGTH (28) (LSB)							(LSB)
4	LOGICAL BLOCK PROTECTION METHOD							
5	Reserved LOGICAL BLOCK PROTECTION INFORMATION LENGTH							
6	LBP_W	LBP_R	RBDP			Reserved		
7	Reserved							
8				Poor	erved			
31	· · · · · · · · · · · · · · · · · · ·			Resi	erveu			

# Byte Description

0

# Bit Description

7 PS (Parameter Saveable): 0b. Ignored in MODE SELECT. See Parameter Save-

able behavior in 4.4.2.2 on page 35.

6 SPF: 1b

5-0 PAGE CODE: 0Ah

1 SUBPAGE CODE: F0h

2-3 PAGE LENGTH: 1Ch

4 LOGICAL BLOCK PROTECTION METHOD: (changeable)

#### Value Description

00h Do not use logical block protection

01h Use the Reed-Solomon CRC as defined in ECMA-319 as the logical block protection informa-

tion.

Use the CRC32C CRC as the logical block protection information transferred between the drive

and the host.

The CRC32C CRC is transformed to or from the Reed-Solomon CRC by the drive between the block being transferred across the interface and the block saved on the tape in the tape format.

others Reserved.

5

#### Bit Description

7-6 Reserved

5-0 LOGICAL BLOCK PROTECTION INFORMATION LENGTH: 00h. (changeable)

6

Bit Description	Bit	Desc	cription
-----------------	-----	------	----------

7 LBP\_W (logical blocks protected during write): 0 (changeable)

Shall be set to zero if the LOGICAL BLOCK PROTECTION METHOD field is set to zero.

Value	Description
0	Protection information is not included with logical blocks transferred when writing.
1b	Protection information is included with logical blocks transferred during process-
	ing of the commands specified in Protecting logical blocks transferred during
	writes (see 4.6.4 on page 39).

6 LBP\_R (logical block protected during read): 0 (changeable)

Shall be set to zero if the LOGICAL BLOCK PROTECTION METHOD field is set to zero.

Value	Description
0	Protection information is not included with logical blocks transferred when read-
	ing.
1b	Protection information is included with logical blocks transferred during process-
	ing of the commands specified in Protecting logical blocks processed during
	reads and verifies (see 4.6.5 on page 40).
RBDP (recove	er buffered data protected): 0b (non-changeable)
Reserved	

4-0 Reserve 7-31 Reserved

5

# 6.6.10 MP 0Fh: Data Compression

See MODE SELECT (6/10) - 15h/55h (see 5.2.9 on page 92) for how to set these parameters and MODE SENSE (6/10) - 1Ah/5Ah (see 5.2.10 on page 94) for how to read these parameters. Mode Page Behaviors (see 4.4 on page 33) describes this device's non-standard behaviors related to mode parameters.

The Data Compression mode page (see <u>table 297</u>) specifies the parameters for the control of data compression in the device.

The mode page policy for this page is described in Policy — non-standard (see 4.4.1 on page 33).

Table 297 — MP 0Fh Data Compression mode page

Duto	Bit									
Byte	7 msb	6	5	4	3	1	0 lsb			
0	PS	SPF(0)	PAGE CODE (0Fh)							
1	PAGE LENGTH (0Eh)									
2	DCE	DCC	C Reserved							
3	DDE	RI	ED	Reserved						
4	(MSB)									
7		COMPRESSION ALGORITHM (LSB)								
8	(MSB)									
11		DECOMPRESSION ALGORITHM (LSB)								
12		Reserved								
15		Reserveu								

# Byte Description

0

## Bit Description

- PS (Parameter Saveable): 0b. Ignored in MODE SELECT. See Parameter Saveable behavior in 4.4.2.2 on page 35.
- 6 Reserved
- 5-0 PAGE CODE: 0Fh
- 1 PAGE LENGTH: 0Eh

2

#### Bit Description

7 DCE (Data Compression Enabled): 1b (changeable)

# **Value**0 Description 0 Data compression is not enabled

Data compression is not enabled

Data compression is enabled

NOTE 45 - The only advantage to disabling data compression is predictable full tape capacity (see 2.1.39)

NOTE 46 - When the SELECT DATA COMPRESSION ALGORITHM field of MP 10h: Device Configuration (see 6.6.11) is set to one the DCE bit is forced to one, even if both pages are received in the same MODE SELECT command.

- 6 DCC (Data Compression Capable): 1b (non-changeable)
- 5-0 Reserved

3

# Bit Description

- 7 DDE: 1b (non-changeable)
- 6-5 RED (Report Exception on Decompression): 00b (non-changeable)
- 4-0 Reserved
- 4-7 COMPRESSION ALGORITHM: 0000 00FFh (Unregistered algorithm) (non-changeable)

A value of 00000001h which specifies the default algorithm shall be used is accepted on MODE SELECT

In LTO5 this field reports a value of 0000 0001h.

8-11 DECOMPRESSION ALGORITHM: 0000 00FFh (Unregistered algorithm) (non-changeable)
A value of 00000001h which specifies the default algorithm shall be used is accepted on MODE

In LTO5 this field reports a value of 0000 0001h.

12-15 Reserved

SELECT.

#### 6.6.11 MP 10h: Device Configuration

See MODE SELECT (6/10) - 15h/55h (see 5.2.9 on page 92) for how to set these parameters and MODE SENSE (6/10) - 1Ah/5Ah (see 5.2.10 on page 94) for how to read these parameters.

<u>Mode Page Behaviors (see 4.4 on page 33)</u> describes this device's non-standard behaviors related to mode parameters.

The Device Configuration mode page (see <u>table 298</u>) is used to specify the configuration of items specific to tape drives.

The mode page policy for this page is described in Policy — non-standard (see 4.4.1 on page 33).

Bit **Byte** 5 2 1 7 msb 6 4 3 0 lsb 0 PS SPF(0) PAGE CODE (10h) 1 PAGE LENGTH (0Eh) 2 Obsolete Rsvd CAF **ACTIVE FORMAT** 3 ACTIVE PARTITION 4 WRITE OBJECT BUFFER FULL RATIO 5 READ OBJECT BUFFER EMPTY RATIO 6 (MSB) WRITE DELAY TIME 7 (LSB) 8 Obsolete OBR LOIS AVC SOCF **ROBO** REW 9 Obsolete 10 **EOD DEFINED** EEG SEW SWP BAML BAM 11 (MSB) OBJECT BUFFER SIZE AT EARLY WARNING 13 (LSB) 14 SELECT DATA COMPRESSION ALGORITHM 15 WTRE OIR REWIND ON RESET ASOCWP PERSWP PRMWP

Table 298 — MP 10h Device Configuration mode page

# Byte Description

0

#### Bit Description

- PS (Parameter Saveable): 1b. Ignored in MODE SELECT. See Parameter Saveable behavior in 4.4.2.2 on page 35.
- 6 SPF: 0b
- 5-0 PAGE CODE: 10h
- 1 PAGE LENGTH: 0Eh

GA32-0928-02

28 September 2015 2 Bit Description 7 Reserved CAP (Change Active Partition): 0b (Obsolete - Refer to the LOCATE command to change parti-6 tion) (non-changeable) CAF (Change Active Format): 0b (non-changeable) 5 4-0 ACTIVE FORMAT: 00000b (non-changeable) 3 ACTIVE PARTITION (non-changeable) 4 WRITE BUFFER FULL RATIO: 00h (value not specified) (non-changeable) 5 READ BUFFER EMPTY RATIO: 00h (value not specified) (non-changeable) 6-7 WRITE DELAY TIME: 012Ch (30 sec) (changeable) The maximum time, in 100 ms increments, that the device server waits before any buffered data that is to be written, is forced to the medium after the last buffered WRITE command that did not cause the object buffer to exceed the write object buffer full ratio. = WARNING = = WARNING = Changing the WRITE DELAY TIME may result in adverse performance. = WARNING = = WARNING ===== 8 Bit Description 7 OBR (Object Buffer Recovery): 0b (non-changeable) 6 LOIS (Logical Object Identifier Supported): 1b (non-changeable) 5 Obsolete 4 AVC (Automatic Velocity Control): 0b (non-changeable) The speed chosen is defined by the SPEED field in the mode parameter header. 3-2 SOCF (Stop on Consecutive Filemarks): 00b (non-changeable) Read ahead to fill buffer, without regard for filemarks 1 RBO (Recover Buffer Order): 0b (non-changeable) REW (Report Early Warning): 0b (non-changeable) GAP SIZE: 00h (non-changeable) 10 Bit Description 7-5 EOD DEFINED (End Of Data Defined): 000b (non-changeable) 4 EEG (Enable EOD Generation): 1b (non-changeable) 3 SEW (Synchronize at Early-Warning): 0b (non-changeable) The device may retain unwritten buffered logical objects in the object buffer when positioned between early-warning and EOP. 2 SWP (Soft Write Protect): 0b (non-changeable) BAML (Block Address Mode Lock): 0b (non-changeable) 1 BAM (Block Address Mode): 0b (non-changeable) OBJECT BUFFER SIZE AT EARLY WARNING: 000000h (non-changeable) SELECT DATA COMPRESSION ALGORITHM: 01h (changeable) 14 Value Description 00h No compression used

NOTE 47 - The only advantage to disabling data compression is predictable full tape capacity (see 2.1.39)

01 Use default compression algorithm

> NOTE 48 - On a MODE SENSE, the value of byte 14 is consistent with what is found in Mode Page 0F, Byte 2, Bit 7. If this byte alone is updated on a MODE SELECT, and Mode Page 0F is not sent, then Mode Page 0F, Byte 2, Bit 7 is updated according to this field. If both Page 10

and Page 0F are sent, then if either setting is enabled, then compression will be enabled and both fields updated to reflect enablement.

15

Bit	Descri	ption
-----	--------	-------

7-6 WTRE (WORM Tamper Read Enable): 10b (changeable)

Value Description

The device treats a value of 00b the same as if the value were 10b.

01b Detection of compromised integrity on a WORM medium shall not affect process-

ing of a task.

NOTE 49 - An application client should not set the WTRE bit to 01b except for the recovery of data from a WORM medium where the integrity of the stored data has been compromised.

10b If the drive detects compromised integrity on a WORM medium it returns CHECK

CONDITION status with the sense key set to MEDIUM ERROR and the additional sense code set to WORM MEDIUM - INTEGRITY CHECK. (3/300Dh).

The position of the medium may have changed.

11b Reserved

5 OIR (Only If Reserved) 0b (changeable-saveable)

This field dictates the behavior of commands other than PERSISTENT RESERVE IN, PERSISTENT RESERVE OUT, RESERVE, and RELEASE.

Value	Description
0b	Commands processed normally when no reservation exists.per RVC column of
	Table 28, Supported Common SCSI Commands on page 73
1b	Commands listed with a 'Y' in the RVC column of <u>Table 28</u> , <u>Supported Common</u>
	SCSI Commands on page 73 are rejected with ILLEGAL REQUEST, NOT
	RESERVED if received and no reservation is present in the drive. If a reservation
	is present in the drive, the commands are processed only if a reservation exists
	that allows access via the LT nexus from which the command is received.

4-3 REWIND ON RESET: 10b (non-changeable)

The position on medium is not changed due to a logical unit reset.

- 2 ASOCWP (Associated Write Protect): 0b (non-changeable)
- 1 PERSWP (Persistent Write Protect) 0b (non-changeable)
- O PRMWP (Permanent Write Protect): 0b (non-changeable)

#### 6.6.12 MP 10h[01h]: Device Configuration Extension

See MODE SELECT (6/10) - 15h/55h (see 5.2.9 on page 92) for how to set these parameters and MODE SENSE (6/10) - 1Ah/5Ah (see 5.2.10 on page 94) for how to read these parameters.

<u>Mode Page Behaviors (see 4.4 on page 33)</u> describes this device's non-standard behaviors related to mode parameters.

The Device Configuration Extension mode page (see <u>table 299</u>), a subpage of the Device Configuration mode page, provides control of the SCSI features specific to sequential-access devices.

The mode page policy for this page is described in Policy — non-standard (see 4.4.1 on page 33).

Table 299 — MP 10h[01h] Device Configuration Extension mode page

	Bit									
Byte	7 msb	6	5	4	3	2	1	0 Isb		
0	PS	SPF(1b) PAGE CODE (10h)								
1		SUBPAGE CODE (01h)								
2	(MSB)	7.05 ( 5.05 ( 4.0k)								
3		PAGE LENGTH (1Ch)						(LSB)		
4		Reserved TARPF TASER TARPC						TAPLSD		
5		WRITE MODE SHORT ERASE MODE								
6	(MSB)	)								
7		PEWS						(LSB)		
8	Reserved						VCELBRE			
9										
31		<u> </u>	Reserved							

#### Byte Description

0

# Bit Description

- PS (Parameter Saveable): 1b. Ignored in MODE SELECT. See Parameter Saveable behavior in 4.4.2.2 on page 35.
- 6 SPF (Subpage Format): 1b
- 5-0 PAGE CODE: 10h
- SUBPAGE CODE: 01h
- 2-3 PAGE LENGTH: 001Ch

4

#### Bit Description

- 7-4 Reserved
- 3 TARPF (TapeAlert respect parameter fields): 0b (non-changeable)
- 2 TASER (TapeAlert Select exception reporting): 0b (non-changeable)
- 1 TARPC (TapeAlert respect page control): 0b (non-changeable)
- O TAPLSD (TapeAlert prevent LOG SENSE deactivation): 0b (non-changeable)

5

#### Bit Description

7-4 WRITE MODE: (changeable-saveable)

Specifies the write mode (see 4.1) in which to place the device server. If a volume is loaded and an attempt is made to change the WRITE MODE from 01h (i.e., append-only) to 00h (i.e., overwrite-allowed), then the command shall be rejected with ILLEGAL REQUEST, INVALID FIELD IN PARAMETER LIST.

Value Description

00h overwrite-allowed mode (see 4.1.2). 01h append-only mode (see 4.1.3).

3-0 SHORT ERASE MODE: (non-changeable)

Specifies the action to be taken by the device server when an ERASE (16) or ERASE (6) command with the LONG bit set to zero is processed.

Value Description

The device server records an EOD indication at the specified location on the medium.

6-7 PEWS (programmable early warning size): (changeable-saveable)

Specifies the number of megabytes (i.e., 10<sup>6</sup>) native capacity to use in establishing a PEWZ. See (see 4.5) for a description of programmable early warning. Ultrium 4 and earlier drives do not support the PEWS field and require that it be set to 0000h. The Ultrium 5 and later drives support the PEWS field set to any value and does not round the value (e.g., due to volume capacity). The default value is 0000h indicating that there is no PEWZ.

NOTE 50 - It is possible that a partition is set to a capacity less than the size that can be represented by the PEWS field. In this case the first write will get the programmable early warning indication.

NOTE 51 - PEWZ will be created using the amount of medium required to fit PEWS megabytes assuming one-to-one compression (e.g., compression disabled) and the medium is in good condition.

NOTE 52 - The drive employs a design to protect against the number of blocks on medium exceeding a value that can be represented in a 4-byte field. To ensure the programmable early warning indication is reported to an application during this scenario, the drive also uses the number of blocks on medium as a determination of entering PEWZ. The drive calculates how many blocks it will take to fill PEWZ assuming a modest block size of 32KiB (i.e., PEWS/8000h = number\_of\_blocks\_to\_make\_PEWZ) and reports programmable early warning when the number of blocks on medium reaches PEWZ (i.e., Early Warning - number\_of\_blocks\_to\_make\_PEWZ).

8

#### Bit Description

7-1 Reserved

O VCELBRE (volume containing encrypted logical blocks requires encryption):

Value	Description
0b	The device server does not use the VCELB bit in the Data Encryption Status page
	to determine if encryption is required for writing logical blocks.
1b	If the VCELB bit in the Data Encryption Status page is set to one, then the device
	server requires that any logical blocks written to the medium are encrypted.

The encryption mode (see 4.10) setting determines the behavior of the VCELBRE bit. This interaction is described in table 300.

Table 300 — VCELBRE behavior related to encryption modes of MP 10h[01h]

	VCELBRE is			
Encryption mode	Set to	Changeable on LUN 0		
AME	0b	Depends on specific setting		
Transparent Encryption - IBM (e.g., LME)	1b	(non-changeable)		
ADC Controlled	1b	Depends on specific setting		

ADC Controlled — ADC tape data encryption (see ADC-3) using External data encryption control (see SSC-3).

AME — Application Managed Encryption using in-band methods of controlling encryption (e.g., Logical block encryption described in SSC-3 or the method used by TSM).

Transparent Encryption - IBM — Application transparent encryption using a proxy to the IBM EKM or TKLM (e.g., LME; SME).

9-31 Reserved

#### 6.6.13 MP 11h: Medium Partition Page

See MODE SELECT (6/10) - 15h/55h (see 5.2.9 on page 92) for how to set these parameters and MODE SENSE (6/10) - 1Ah/5Ah (see 5.2.10 on page 94) for how to read these parameters. Mode Page Behaviors (see 4.4 on page 33) describes this device's non-standard behaviors related to mode parameters.

The mode page policy for this page is described in Policy — non-standard (see 4.4.1 on page 33).

The Medium Partition mode page (see <u>table 301</u>) is used to specify the group of medium partitions. Fields in the Medium Partition mode page indicating the current state of the partitions for the medium are changed by the device server to the current medium state on a not ready to ready transition when the medium state changes from demounted to mounted.

The FORMAT MEDIUM command uses the settings in the Medium Partition mode page and functions in the constraints dictated by any capacity changes resulting from a previous SET CAPACITY command that was performed on the mounted volume (i.e., The Set Capacity command controls the maximum capacity allowed for the volume and the Format Medium command works inside those constraints).

The partitioning of the mounted volume is not changed until a subsequent FORMAT MEDIUM command is issued while the volume is mounted. Note that mounting a volume that modifies the value of fields in this page does not establish a unit attention condition.

= Warning ----- Warning ---- Warning ----

The fields in this page do not follow normal mode parameter rules. Some fields always return values depending on the mounted volume even after a MODE SELECT command changes them. Other fields return pending values set by a MODE SELECT command instead of values dictated by the mounted volume. Check each field description to understand this behavior.

— WARNING — WARNING —

There is an overhead associated with each additional partition, regardless of the size of the partition, that subtracts from the customer data space on the volume. The larger the number of possible partitions, the more overhead is consumed when the volume is partitioned.

Partitioning and reformatting (see 4.2.5 on page 31) describes restrictions on partitioning.

Table 301 — MP 11h Medium Partition mode page

Duta				В	it			
Byte	7 msb	6 5 4 3 2		2	1	0 lsb		
0	PS(0b)	SPF(0b)	SPF(0b) PAGE CODE (11h)					
1				PAGE LEN	GТН (n-1)			
2			M	AXIMUM ADDITIO	ONAL PARTITIO	NS		
3		ADDITIONAL PARTITIONS DEFINED						
4	FDP	SDP	IDP	PSUM	(11b)	РОFM (1b))	CLEAR (0b)	ADDP(0b)
5	MEDIUM FORMAT RECOGNITION (03h)							
6		PARTITIONING TYPE PARTITION UNITS						
7	Reserved							
			Par	tition size des	criptor(s)			
8	(MSB)							
9		PARTITION SIZE (first) (LSB)				(LSB)		
n-1	(MSB)		4					
n		-		PARTITION	SIZE (last)			(LSB)

#### Byte Description

0

#### Bit Description

- PS (Parameter Saveable): 0b. Ignored in MODE SELECT. See Parameter Saveable behavior in 4.4.2.2 on page 35.
- 6 SPF (SubPage Format): 0b
- 5-0 PAGE CODE: 11h
- 1 PAGE LENGTH:

The page length depends on the number of partitions (i.e., 08h + 2\*ADDITIONAL PARTITIONS DEFINED). In MODE SENSE all four sizes are returned even if they don't exist on the volume (i.e., they report zero).

2 MAXIMUM ADDITIONAL PARTITIONS: (non-changeable)

This field specifies the maximum number of additional partitions supported on the loaded volume. It can be thought of as the value N-1 where N is the maximum number of partitions allowed. In a MODE SENSE command the MAXIMUM ADDITIONAL PARTITIONS field is set to the value indicated by the loaded volume, or the value reported for the previously loaded volume if there is no volume loaded. If there has been no volume loaded since power-on or the mounted volume does not support partitioning (e.g., WORM volume), then the MAXIMUM ADDITIONAL PARTITIONS field is set to 00h.

This value may be changed by the device if:

- A) a volume is loaded; or
- B) other unspecified events occur.

3 ADDITIONAL PARTITIONS DEFINED: (changeable)

This field specifies the number of additional partitions on the mounted volume (in addition to partition 0). It can be thought of as the value N-1 where N is the total number of partitions.

If SDP or IDP is set to one, then this field may be set to 00h, 01h, 02h, or 03h.

If FDP is set to one, then this field is ignored (i.e., any value is allowed and ignored).

This field is not allowed to changed when the drive is not ready.

The partitioning of the mounted volume is not changed until a subsequent Format Medium command is issued while the volume is mounted. If the logical unit is not ready, the ADDITIONAL PARTITIONS DEFINED field is undefined.

NOTE 53 - If a MODE SENSE command is received after a MODE SELECT command but before a FORMAT MEDIUM command, then the ADDITIONAL PARTITIONS DEFINED value returned may not match the value sent in the MODE SELECT command but the device server retains the value sent in the MODE SELECT command until the FORMAT MEDIUM command is performed.

4

#### Bit Description

1b

7 FDP (Fixed Data Partitions): (changeable)

A FDP bit of one in a MODE SELECT command specifies the logical unit shall partition the medium based on its fixed definition of partitions. Setting this bit to one is mutually exclusive with the SDP and IDP bits. The partition size descriptors are ignored by the MODE SELECT command when the FDP bit is set to one. The drive creates two partitions on the volume and assigns one partition as the minimum sized partition and one partition as the remaining available size.

When a MODE SENSE command is received after a MODE SELECT command but before a FORMAT MEDIUM command the FDP bit returned is the value that was set in the MODE SELECT command. When a MODE SENSE command is received and there is no pending change related to a MODE SELECT command for this page the FDP bit is set to zero.

NOTE 54 - The partition size descriptors are present in MODE SENSE data regardless of the settings of the FDP, SDP or IDP fields to give an estimate of the size of each partition.

6 SDP (Select Data Partitions): (changeable)

For Mode Select, either value is allowed

## Value Description

Ob The SDP functionality is not used.

The volume is partitioned into the number of partitions as specified by the ADDITIONAL PARTITIONS DEFINED field (n) using partitions as close to equal size as possible. If rounding is required to meet format requirements, partitions will be rounded up from the equal size and the last partition (i.e., n + 1) will use the remaining capacity. The drive partitions the volume into n+1 partitions numbered 0 through n. Setting this bit to one is mutually exclusive with the FDP and IDP fields. The partition size descriptors are ignored by the MODE SELECT command when the SDP bit is set to one.

If a MODE SENSE command is received after a MODE SELECT command but before a FORMAT command, then the SDP bit returned is the value that was set in the MODE SELECT command. If a MODE SENSE command is received and there is no pending change related to a MODE SELECT command for this page, then the SDP bit is set to zero.

5 IDP (Initiator Defined Partitions): (changeable)

For Mode Select, either value is allowed

Value	Description
0b	The IDP functionality is not used.
1b	The volume is partitioned as specified by the ADDITIONAL PARTITIONS DEFINED field and the partition size descriptors. Setting this bit to one is mutually exclusive with the FDP and SDP fields. The number of non-zero partition size descriptors received

in the Medium Partition mode page shall be at least one more than the ADDITIONAL PARTITIONS DEFINED value. The size of partition 0 shall be non-zero.

If a MODE SENSE command is received after a MODE SELECT command but before a FORMAT MEDIUM command, then the IDP bit returned is the value that was set in the MODE SELECT command. If a MODE SENSE command is received and there is no pending change related to a MODE SELECT command for this page, then the IDP bit is set to one.

- 4-3 PSUM (Partition Size Unit of Measure): 11b (10<sup>(PARTITION UNITS)</sup> bytes) (changeable)
- 2 POFM (Partition on Format Medium): 1b (non-changeable)

This bit indicates that the Mode Select command will not cause changes to the partition sizes or user data, either recorded or buffered. Actual media partitioning occurs with a subsequent Format Medium command using the mode data for this page. Field values specified by a Mode Select command for this page will not be changed by the drive before the volume is unloaded or the drive is reset. Some field checking may be performed by the MODE SELECT command. However, there is no guarantee that any subsequent partitioning during a FORMAT MEDIUM command will complete with no errors.

- 1 CLEAR (Partition clearing): 0b (non-changeable)
- 0 ADDP (Adding Partitions): 0b (non-changeable)

The drive does not retain the method used to partition the volume. The device server sets the IDP field to one in the MODE SENSE data. If a volume was previously partitioned through a MODE SELECT command with FDP or SDP set to one, the device server sets IDP to one in subsequent MODE SENSE data since the volume has been initiator partitioned.

<u>Table 8 on page 29</u> shows the partition sizes that result from a MODE SELECT with the indicated field settings if the SET CAPACITY command has not shortened the tape.

<u>Wrap-wise Partitioning (see 4.2.2 on page 27)</u> describes how to set partition sizes and achieve desired results.

MEDIUM FORMAT RECOGNITION: 03h (Capable of format and partition recognition) (non-changeable)

5 6

#### Bit Description

7-4 PARTITIONING TYPE: (changeable)

The PARTITIONING TYPE field specifies the criteria used to create the partitions.

<b>Value</b> 0h	<b>Description</b> The type of partitioning is vendor-specific or unknown
	The drive sets the PARTITIONING TYPE field to a value of 1h when a 0h is received in a MODE SELECT command. If the volume is not partitioned this value is returned in a MODE SENSE command unless there is a pending action from a MODE SELECT
1h	The type of partitioning is optimized for streaming performance (i.e., wrap-wise partitioning).
2h	Not Supported
3h-Eh	Reserved
Fh	For a MODE SELECT command this value is reserved.

When a MODE SENSE command is received after a MODE SELECT command but before a FORMAT MEDIUM command the PARTITIONING TYPE field returned is the value that was set in the MODE SELECT command. When a MODE SENSE command is received and there is no pending change related to a MODE SELECT command for this page the PARTITIONING TYPE field is set depending on how the volume is currently partitioned.

3-0 PARTITION UNITS: (changeable)

If the PSUM field is set to 11b, then each PARTITION SIZE descriptor specifies the size of a partition in 10<sup>PARTITION UNITS</sup> bytes. The PARTITION UNITS used to partition the volume are not retained.

7 Reserved

8-n PARTITION SIZE descriptors: (n=9, 11, 13, or 15) (changeable)

Each PARTITION SIZE descriptor specifies the size of a partition in 10<sup>PARTITION</sup> UNITS bytes. The device rounds any value received in a PARTITION SIZE descriptor down to the nearest valid partition size that is less than or equal to the requested value.

#### Byte Description

8-9 PARTITION SIZE descriptor for partition 00h

This shall exist and shall be non-zero.

10-11 PARTITION SIZE descriptor for partition 01h, if sent

This descriptor shall be present and non-zero if the ADDITIONAL PARTITIONS DEFINED field is 01h or greater. On Ultrium 5 and later devices this descriptor may be present and set to zero if the ADDITIONAL PARTITIONS DEFINED field is 00h.

12-13 PARTITION SIZE descriptor for partition 02h, if sent

This descriptor shall be present and non-zero if the ADDITIONAL PARTITIONS DEFINED field is 02h or greater. On Ultrium 6 and later devices this descriptor may be present and set to zero if the ADDITIONAL PARTITIONS DEFINED field is less than 02h.

14-15 PARTITION SIZE descriptor for partition 03h, if sent

This descriptor shall be present and non-zero if the ADDITIONAL PARTITIONS DEFINED field is 03h. On Ultrium 6 and later devices this descriptor may be present and set to zero if the ADDITIONAL PARTITIONS DEFINED field is less than 03h.

NOTE 55 - Summing the partition sizes provides a standardized mechanism for an initiator to calculate the volume capacity with MODE SENSE.

#### In a MODE SELECT command:

- a) a value of FFFFh received in a PARTITION SIZE descriptor, requests that the logical unit allocate all remaining partition space to that partition;
- b) if the FDP bit is set to one any values are allowed in the PARTITION SIZE descriptors and ignored. The PARTITION SIZE descriptors are updated by the drive when an initiator specifies a new number of partitions:
- c) if the SDP bit is set to one any values are allowed in the PARTITION SIZE descriptors and ignored.
   The PARTITION SIZE descriptors are updated by the drive when an initiator specifies a new number of partitions; and
- d) the device server returns CHECK CONDITION status with the Sense Key set to ILLEGAL REQUEST and the additional sense code set to INVALID FIELD IN PARAMETER LIST if:
  - A) insufficient space exists on the volume for the requested partition sizes; or
  - B) multiple partition size descriptors are set to FFFFh.

# In a MODE SENSE command:

- a) a value of FFFFh returned in a PARTITION SIZE descriptor, indicates the partition size, in units indicated by PSUM and PARTITION UNITS, is greater than or equal to FFFFh;
- b) if the logical unit is not ready, then the PARTITION SIZE descriptors are undefined;
- c) if a MODE SELECT command has modified values in this page but a FORMAT MEDIUM command has not yet been processed, then the values in the PARTITION SIZE fields are the values set by the MODE SELECT command rounded to a valid partition size as described in table 8 on page 29; and
- d) if the logical unit is ready and there is no pending change related to a MODE SELECT command for this page, then the PARTITION SIZE fields reflect the size on the volume of the related partition.

NOTE 56 - When more than one partition is defined, the sum of the partition sizes may be less than when only a single partition is defined. Each partition requires a certain amount of overhead space on a volume, which reduces the usable customer data space.

#### 6.6.14 MP 18h: Protocol-Specific Logical Unit

See MODE SELECT (6/10) - 15h/55h (see 5.2.9 on page 92) for how to set these parameters and MODE SENSE (6/10) - 1Ah/5Ah (see 5.2.10 on page 94) for how to read these parameters. Mode Page Behaviors (see 4.4 on page 33) describes this device's non-standard behaviors related to mode parameters.

The mode page policy for this page is described in Policy — non-standard (see 4.4.1 on page 33).

The Protocol-specific logical unit mode page for FCP attached devices is defined in <u>6.6.14.1</u>.

The Protocol-specific logical unit mode page for SAS attached devices is defined in 6.6.14.2.

## 6.6.14.1 MP 18h: Fibre Channel Logical Unit

.

# Table 302 — MP 18h Fibre Channel Logical Unit mode page

Desta	Bit									
Byte	7 msb	6	5	4	3	2	1	0 lsb		
0	PS	SPF (0b)		PAGE CODE (18h)						
1	PAGE LENGTH (n-1)									
2	Reserved PROTOCOL IDENTIFIER									
3	Reserved EPD						EPDC			
4										
n			Reserved							

## Byte Description

0

#### Bit Description

- PS (Parameter Saveable): 0b. Ignored in MODE SELECT. See Parameter Saveable behavior in 4.4.2.2 on page 35.
- 6 Reserved
- 5-0 PAGE CODE: 18h
- 1 PAGE LENGTH: 06h

2

# Bit Description

- 7-1 Reserved
- 3-0 PROTOCOL IDENTIFIER: 0h (FCP) (non-changeable)

3

#### Bit Description

- 7-1 Reserved
- 0 EPDC (Enable Precise Delivery Control): 1b (changeable)

#### Value Description

Ob Do not use the FCP precise delivery function and ignore the contents of the COM-

MAND REFERENCE NUMBER field in the FCP\_CMND IU.

1b Use the FCP precise delivery function (checking the contents of the COMMAND

REFERENCE NUMBER field in the FCP\_CMND IU) to ensure that command packets

are delivered in order.

## 4-7 Reserved

## 6.6.14.2 MP 18h: SAS Logical Unit

.

Table 303 — MP 18h SAS Logical Unit mode page

Deste	Bit									
Byte	7 msb	6	5	4	3	2	1	0 Isb		
0	PS	SPF (0b)	PAGE CODE (18h)							
1	PAGE LENGTH (n-1)									
2		Reserved TLR PROTOCOL IDENTIFIER								
3										
n		_	Reserved							

#### Byte Description

0

#### Bit Description

- PS (Parameter Saveable): 0b. Ignored in MODE SELECT. See Parameter Saveable behavior in 4.4.2.2 on page 35.
- 6 Reserved
- 5-0 PAGE CODE: 18h
- 1 PAGE LENGTH: 06h

2

# Bit Description

- 7-5 Reserved
- 4 TLR (Transport Layer Retries): 1b (changeable)
- 3-0 PROTOCOL IDENTIFIER: 6h (Serial Attached SCSI) (non-changeable)
- 3-7 Reserved

# 6.6.15 MP 19h: Protocol specific port

See MODE SELECT (6/10) - 15h/55h (see 5.2.9 on page 92) for how to set these parameters and MODE SENSE (6/10) - 1Ah/5Ah (see 5.2.10 on page 94) for how to read these parameters. Mode Page Behaviors (see 4.4 on page 33) describes this device's non-standard behaviors related to mode parameters.

The mode page policy for this page is described in Policy — non-standard (see 4.4.1 on page 33).

The Protocol specific port mode page for FCP attached devices is defined in 6.6.15.1.

The Protocol specific port mode page for SAS attached devices is defined in 6.6.15.2.

#### 6.6.15.1 MP 19h: FCP port

Table 304 — MP 19h Fibre Channel Port mode page

Deste	Bit									
Byte	7	6	5	4	3	2	1	0		
0	PS (0)	SPF (0)	PAGE CODE (19h)							
1	PAGE LENGTH									
2	Reserved PROTOCOL II					. IDENTIFIER				
3	DTFD (0)	PLPB (0)	DDIS (0)	DLM (0)	RHA (0)	ALWI (0)	DTIPE (0)	DTOLI (0)		
4										
5	Reserved									
6	Reserved RR_TOV UNITS					3				
7	Resource Recovery Time Out Value (RR_TOV)									

## Byte Description

0

#### Bit Description

- PS (Parameter Saveable): 0b. Ignored in MODE SELECT. See Parameter Saveable behavior in 4.4.2.2 on page 35.
- 6 SPF (SubPage Format): 0b
- 5-0 PAGE CODE: 19h
- 1 PAGE LENGTH: 06h

NOTE 57 - A PAGE LENGTH of 0Eh is allowed on Mode Select for backwards compatibility with older devices and levels of the standard. Any fields beyond byte 7 are (changeable-ignored).

2

# Bit Description

- 7-1 Reserved
- 3-0 PROTOCOL IDENTIFIER: 0h (FCP) (non-changeable)

3

## Bit Description

- 7 DTFD (Disable Target Fabric Discovery): 0b (non-changeable)
- 6 PLPB (Prevent Loop Port Bypass): 0b (non-changeable)
- 5 DDIS (Disable Discovery): 0b (non-changeable)
- 4 DLM (Disable Loop Master): 0b (non-changeable)
- 3 RHA (Require Hard Address): 0b (non-changeable)
- 2 ALWI (Allow Login without Loop Initialization): 0b (non-changeable)
- 1 DTIPE (Disable Target Initiated Port Enable): 0b (non-changeable)
- 0 DTOLI (Disable Target Originated Loop Initialization): 0b (non-changeable)

# 4-5 Reserved

Bit	Description	
7-3	Reserved	
2-0	RR_TOV UNIT	s (changeable)
	Value	Description
	000b	No timer is specified: Default value is used and the command returns a CHECK
		CONDITION with Recovered Error, PARAMETERS ROUNDED (1/3700)
	001b	Timer is specified in.001 second units
	011b	Timer is specified in.1 second units
	101b	Timer is specified in 10 second units
	others	Reserved
	<i>_</i>	

7 RR\_TOV (Resource Recovery Time Out Value): (changeable)

NOTE 58 - The default RR\_TOV value is 25 seconds.

## 6.6.15.2 MP 19h: SAS port

Table 305 — MP 19h SAS Port mode page

Dista	Bit									
Byte	7	6	5	4	3	2	1	0		
0	PS	SPF (0)			PAGE CC	DE (19h)				
1				PAGE L	ENGTH					
2	Reserved	CONTINUE AWT	BRDCST ASYNCH EVENT	NCH RLM PROTOCOL IDENTIFIER						
3				Rese	erved					
4	(MSB)		(07001)							
5			I_	_T NEXUS LOS	S TIME (U7 DU	11)		(LSB)		
6	(MSB)		INUTIA	TOD DEODONO	E TIMEOUT (O	7D0h)				
7		1	INITIATOR RESPONSE TIMEOUT (07D0h)					(LSB)		
8	(MSB)			F IFOT TO 655		h)				
9		•	REJECT TO OPEN LIMIT (0000h)					(LSB)		
10			Reserved							
15				Rese	erveu					

# Byte Description

0

# Bit Description

- PS (Parameter Saveable): 0b. Ignored in MODE SELECT. See Parameter Saveable behavior in 4.4.2.2 on page 35.
- 6 SPF (SubPage Format): 0b (non-changeable)
- 5-0 PAGE CODE: 19h
- 1 PAGE LENGTH: 0Eh

2

## Bit Description

- 7 Reserved
- 6 CONTINUE AWT (continue arbitration wait timer): 1b (non-changeable)
- 5 BRDCST ASYNCH EVENT: 0b (non-changeable)
- 4 RLM (Ready LED Meaning): 0b (non-changeable)
- 3-0 PROTOCOL IDENTIFIER: 6h (SAS)

- 3 Reserved
- 4-5 I\_T NEXUS LOSS TIME: 07D0h (non-changeable)
- 6-7 INITIATOR RESPONSE TIMEOUT: 07D0h (non-changeable)
- 8-9 REJECT TO OPEN LIMIT: 0000h (non-changeable)
- 10-15 Reserved

#### 6.6.16 MP 1Ah: Power Condition

See MODE SELECT (6/10) - 15h/55h (see 5.2.9 on page 92) for how to set these parameters and MODE SENSE (6/10) - 1Ah/5Ah (see 5.2.10 on page 94) for how to read these parameters. Mode Page Behaviors (see 4.4 on page 33) describes this device's non-standard behaviors related to mode parameters.

The power condition mode page controls the timers that the drive uses to go into a low-power mode. If any idle condition timer is enabled, then the low power condition is entered as the result of the expiration of one of the power condition timers in this mode page even if a volume is loaded.

The mode page policy for this page is described in Policy — non-standard (see 4.4.1 on page 33).

<u>Table 306</u> defines the Power Condition mode page.

Table 306 — MP 1Ah: Power Condition mode page format

	Bit									
Byte	7	6	5	4	3	2	1	0		
0	PS	SPF (0b)			PAGE CC	DE (1Ah)				
1				PAGE LEN	ıдтн (26h)					
2				Reserved				STANDBY_Y(0)		
3		Rese	erved		IDLE_C	IDLE_B(0)	IDLE_A(0)	STANDBY_Z(0)		
4	(MSB)		(00000001)							
7			IDLE_A CONDITION TIMER (00000000h)					(LSB)		
8	(MSB)		(00000001)							
11			STAND	STANDBY_Z CONDITION TIMER (00000000h)						
12	(MSB)		IDLE_B CONDITION TIMER (0000000h)							
15								(LSB)		
16	(MSB)			IDI E . 0.00M	DITION TIMES					
19				IDLE_C CONDITION TIMER						
20	(MSB)		OTAND	DV V CONDITIO	W TIMED (0000)	0000h)				
23	·		STANDBY_Y CONDITION TIMER (00000000h)							
24				Pag	om/od					
39				Res	erved					

#### Byte Description

0

# Bit Description

- PS (Parameter Saveable): 0b. Ignored in MODE SELECT. See Parameter Saveable behavior in 4.4.2.2 on page 35.
- 6 SPF (SubPage Format): 0b
- 5-0 PAGE CODE: 1Ah
- 1 PAGE LENGTH: 26h

```
2
       Bit
               Description
       7-1
               Reserved
       0
               STANDBY Y: 0b (non-changeable)
3
       Bit
               Description
       7-4
               Reserved
       3
               IDLE_C: 1b (changeable)
               Value
                            Description
               0b
                            The idle_c condition timer is disabled and the power condition is disabled.
               1b
                            The idle c condition timer is enabled.
       2
               IDLE B: 0b (non-changeable)
       1
               IDLE A: 0b (non-changeable)
               STANDBY_Z: 0b (non-changeable)
4-7
       IDLE_A CONDITION TIMER: 00000000h (non-changeable)
8-11
       STANDBY Z CONDITION TIMER: 00000000h (non-changeable)
12-15
       IDLE_B CONDITION TIMER: 00000000h (non-changeable)
      IDLE C CONDITION TIMER: 00002EE0h (i.e., 20 minutes) (changeable)
16-19
       Initial value, in 100 millisecond increments, for the idle c condition timer. This value may be rounded up
       or down to the nearest implemented time. When in the IDLE_C mode, a REQUEST SENSE command
       returns NO SENSE/IDLE C CONDITION ACTIVATED BY TIMER (0/5E07).
20-23 STANDBY_Y CONDITION TIMER:00000000h (non-changeable)
24-39 Reserved
```

## 6.6.17 MP 1Ch: Informational Exceptions Control

See MODE SELECT (6/10) - 15h/55h (see 5.2.9 on page 92) for how to set these parameters and MODE SENSE (6/10) - 1Ah/5Ah (see 5.2.10 on page 94) for how to read these parameters. Mode Page Behaviors (see 4.4 on page 33) describes this device's non-standard behaviors related to mode parameters.

The mode page policy for this page is described in Policy — non-standard (see 4.4.1 on page 33).

Table 307 — MP 1Ch Informational Exceptions Control mode page

D. d.	Bit								
Byte	7	6	5	4	3	2	1	0	
0	PS	SPF (0b)	SPF (0b) PAGE CODE (1Ch)						
1		PAGE LENGTH (0Ah)							
2	PERF	Reserved	EBF	EWASC	DEXCPT	TEST	EBACKERR	LOGERR	
3		Reserved MRIE							
4	(MSB)			INITED) (A	LTIMED				
7			INTERVAL TIMER (LSB)					(LSB)	
8	(MSB)		DEDO	DT COUNT / T		MDED			
11		•	REPO	RT COUNT / T	EST FLAG NU	MREK		(LSB)	

# Byte Description

0

#### Bit Description

7 PS (Page Save): 0b. Ignored in MODE SELECT. See Parameter Saveable behavior in <u>4.4.2.2 on</u> page 35.

6 Reserved

5-0 PAGE CODE: 1Ch

1 PAGE LENGTH: 0Ah

2

## Bit Description

7 PERF: 0b (non-changeable)

6-4 Reserved

3 DEXCPT: 1b (changeable)Value Description

0b Exception Reporting is enabled 1b Exception Reporting is disabled

2 TEST: 0b (changeable-special)

This bit may be written to 1b and the action described under Value 1b is performed. The value returned to a MODE SENSE command is always 0b.

# Value Description

0b Commands are processed normally.

1b The behavior depends on the setting of the DEXCPT bit as follows:

# **DEXCPT Description**

Ob An exception information condition is asserted according to the REPORT COUNT / TEST FLAG NUMBER field as indicated by the MRIE field.

The command is rejected with 5/2600h (ILLEGAL REQUEST, INVALID FIELD IN PARAMETER DATA).

- 1 EBACKERR (enable background error): 0b (non-changeable)
- 0 LOGERR: 0b (non-changeable)

3

Bit	Description
7-4	Reserved
3-0	MRIE: 4h (cha

MRIE: 4h (changeable)Value Description

Value Description

Oh If an exception condition exists, it is not reported.

3h If an exception condition exists and the PER bit in

If an exception condition exists and the PER bit in the Read-Write Error Recovery mode page is set to one, unit attention eligible commands (see UAT in table 28) on this I\_T nexus that complete with status GOOD have the status modified to CHECK CONDITION and return non-deferred sense data of 1/5D00h (RECOV-

ERED ERROR, FAILURE PREDICTION THRESHOLD EXCEEDED).

4h If an exception condition exists, unit attention eligible commands (see UAT in

table 28) on this I\_T nexus that complete with status GOOD have the status modified to CHECK CONDITION and return non-deferred sense data of 1/5D00h (RECOVERED ERROR, FAILURE PREDICTION THRESHOLD EXCEEDED).

4-7 INTERVAL TIMER: 00000000h (non-changeable)

8-11 REPORT COUNT / TEST FLAG NUMBER: 00000000h (changeable-special)

If TEST=0b, this field is not changeable.

If TEST=1b, the value is not retained in the mode page. The following describes the test behavior.

Value Description

The device server shall not activate or deactivate any TapeAlert flag. After the MODE SELECT command completes, the device server reports an informational exception condition one time as specified by MRIE except with the additional sense code set to 5DFFh (FAILOVER PREDICTION THRESHOLD EXCEEDED (FALSE)). Then, if an exception condition exists, it is reported as

specified by MRIE.

0000 0001h to 0000 0040h

0000 0000h

The device server activates the TapeAlert flag specified by the REPORT COUNT/TEST FLAG NUMBER field. After the MODE SELECT completes the device server reports an informational exception condition one time as specified by MRIE except with an additional sense code of 5DFFh (FAILOVER PREDICTION THRESHOLD EXCEEDED (FALSE)). Then, if an exception condition exists, it is reported as specified by MRIE.

NOTE 59 - If the specified TapeAlert flag was already active, then the behavior may be the same as 0000\_0000h. To guarantee that a TapeAlert flag causes a non-test exception condition to exist, the deactivate (i.e., FFFF\_FFFFh to FFFF\_FFC0h) should be used prior to the activate. A non-test exception condition exists in any case where a LOG SENSE of log page 2Eh returns a non-zero TapeAlert flag. Reading log page 2Eh with LOG SENSE effectively clears the exception condition until a TapeAlert condition is activated.

NOTE 60 - While the scope of this page is <Per I\_T nexus>, the activated or deactivated TapeAlerts have the full effects of normally occurring TapeAlerts on other initiators, on libraries, etc. After performing a test, TapeAlert flags activated using this mechanism should be deactivated before resuming normal operation.

FFFF FFFFh to FFFF FFC0h

The device server shall deactivate the TapeAlert flag specified by the absolute value of the REPORT COUNT/TEST FLAG NUMBER field. Deactivating the flag in this way is equivalent to performing the specified corrective action for that flag. Then, if an exception condition exists, it is reported as specified by MRIE.

#### 6.6.18 MP 1Dh: Medium Configuration

See MODE SELECT (6/10) - 15h/55h (see 5.2.9 on page 92) for how to set these parameters and MODE SENSE (6/10) - 1Ah/5Ah (see 5.2.10 on page 94) for how to read these parameters. Mode Page Behaviors (see 4.4 on page 33) describes this device's non-standard behaviors related to mode parameters.

The Medium Configuration mode page (see table 308) specifies any special considerations the device server shall use when processing commands that access the medium.

The mode page policy for this page is described in Policy — non-standard (see 4.4.1 on page 33).

Table 308 — MP 1Dh Medium Configuration mode page

Duta	Bit									
Byte	7	6	5	4	3	2	1	0		
0	PS	SPF(0)	SPF(0) PAGE CODE (1Dh)							
1	PAGE LENGTH (1Eh)									
2	Reserved WORMM									
3	Reserved									
4	WORM MODE LABEL RESTRICTIONS									
5	WORM MODE FILEMARK RESTRICTIONS									
6	_	Reserved								
31				Rese	erveu					

#### Byte Description

0

#### Bit Description

- PS (Parameter Saveable): 0b. Ignored in MODE SELECT. See Parameter Saveable behavior in 4.4.2.2 on page 35.
- 6 SPF (Subpage Format): 0b
- 5-0 PAGE CODE: 1Dh
- 1 PAGE LENGTH: 1Eh

2

# Bit Description

- 7-1 Reserved
- 0 WORMM (WORM mode): (non-changeable)

#### Value Description

The device server is not operating in WORM mode
The device server is operating in WORM mode

This field is changed by the device and is not allowed to be changed in a MODE SELECT command.

- 3 Reserved
- 4 WORM MODE LABEL RESTRICTIONS: 01h (non-changeable)

The device allows a tape label to be overwritten. The tape label is defined as 0, 1, or 2 logical blocks followed by nothing except 0 to n Filemarks and EOD. This must be overwritten from BOP.

5 WORM MODE FILEMARKS RESTRICTIONS: 02h (non-changeable)

The device server shall allow any number of filemarks immediately preceding EOD to be overwritten except the filemark closest to BOP.

6-31 Reserved

## 6.6.19 MP 24h: Vendor-Specific

See MODE SELECT (6/10) - 15h/55h (see 5.2.9 on page 92) for how to set these parameters and MODE SENSE (6/10) - 1Ah/5Ah (see 5.2.10 on page 94) for how to read these parameters. Mode Page Behaviors (see 4.4 on page 33) describes this device's non-standard behaviors related to mode parameters.

The Vendor-Specific Speed Matching Control mode page provides control over undocumented test options. Modifying these values could have adverse effects on the drives operation. As such, this page should never be used in a MODE SELECT operation. A MODE SENSE of this page may be used to determine if the drive supports encryption. The Vendor-Specific mode page is defined in <u>table 309</u>.

The mode page policy for this page is described in Policy — non-standard (see 4.4.1 on page 33).

Table 309 — Vendor-Specific mode page

Disto				Е	Bit			
Byte	7	6	5	4	3	2	1	0
0	PS (0)	SPF(0)		PAGE CODE (24h)				
1		PAGE LENGTH (06h)						
2		Vendor-Specific						
3				Vendor-	-Specific			
4								
6		Reserved						
7	Reserved ENCR_E Reserved FIF				FIPS	ENCR_C		

## Byte Description

0

# Bit Description

- PS (Parameter Saveable): 0b. Ignored in MODE SELECT. See Parameter Saveable behavior in 4.4.2.2 on page 35.
- 6 SPF (SubPage Format): 0b
- 5-0 PAGE CODE: 24h
- 1 PAGE LENGTH: 06h

2

# Bit Description

- 7-1 Reserved
- 0 Vendor-Specific : (changeable)
- 3 Vendor-Specific : (changeable)
- 4-6 Reserved

7

Bit	Description	on						
7-4	Reserved							
3	ENCR_E (D	NCR_E (Device Supports Encryption - Enabled) (changeable-ignored)						
	Value	Description						
	0b	Device does not support encryption						
	1b	Device supports encryption (encryption interface(s) are enabled)						

NOTE 61 - There are multiple encryption methods, Application Managed Encryption (AME), System Managed Encryption (SME), and Library Managed Encryption (LME). When the drive is configured for SME or LME, encryption is transparent to the application and the SECURITY PROTOCOL IN command reports no encryption support.

2 Vendor-Rese	erved
---------------	-------

1	FIPS:	(changeable-ignored)
	Value	Description

0b Code is not FIPS level of code 1b Code is FIPS level of code

0 ENCR\_C (Device Supports Encryption- Capable) (changeable-ignored)

Value Description

Ob Device does not support encryption (does not have encryption hardware)

1b Device supports encryption (encryption interface(s) are not necessarily enabled)

#### 6.6.20 MP 2Fh: Behavior Configuration

There is one copy of this page for the drive.

<u>Mode Page Behaviors (see 4.4 on page 33)</u> describes this device's non-standard behaviors related to mode parameters.

The mode page policy for this page is described in Policy — non-standard (see 4.4.1 on page 33).

Device support for the fields in this page vary by generation and/or code level. To discover if a field can be modified, issue a MODE SENSE with the PC field set to 01b to see if the field is changeable. This will also return the PAGE LENGTH, which must be examined to determined the length of this page, because it is expected to increase as additional Behavior configurations are added to subsequent code levels.

WARNING
 This page changes the normal behavior of the drive. Some settings effect error reporting and may even cause the drive to violate SCSI standards. Care should be taken to ensure that the behavior change and its effects on the system are understood.
 WARNING

Table 310 — MP 2Fh Behavior Configuration Mode Page

1										
Byte	Bit									
Byte	7	6	5	4	3	2	1	0		
0	PS	SPF (0b)			PAGE CO	DE (2Fh)				
1				PAGE LEN	GTH ( <i>n</i> -1)					
2				FENCE B	EHAVIOR					
3		CLEAN BEHAVIOR								
4				WORM B	EHAVIOR					
5				SENSE DAT	A BEHAVIOR					
6	Reporting Behavior									
0			Reserved	CCDM	DDEOR	CLNCHK				
7	Firmware Update Behavior									
7	Reserved									
8	Unload On Error Behavior									
0	Rese	erved	UO	E-C	UO	E-F	UC	E-D		
0	TapeAlert Behavior									
9	Reserved									
				:						
n				Reserved fo	r Future Use					

# Byte Description

0

# Bit Description

PS (Parameter Saveable): 1b. Ignored in MODE SELECT. See Parameter Saveable behavior in 4.4.2.2 on page 35.

6 SPF (SubPage Format): 0b

5-0 PAGE CODE: 2Fh

1 PAGE LENGTH:

2 FENCE BEHAVIOR: 00h (changeable-saveable)

This field defines drive behavior in situations deemed dangerous for either media or data on the media.

Value Description

Normal operation (i.e., MTR Fence) (see 4.16.5.1.4.1 on page 64) 00h

01h Panic Fence operation (see 4.16.5.1.4.2 on page 64)

02h-FFh Reserved

3 CLEAN BEHAVIOR: 01h (non-changeable)

> Value Description

01h Periodic Clean Notification

The device monitors criteria since last cleaning. When that criteria is exceeded, the drive puts itself in a

clean needed notification state. The criteria used is subject to change others Reserved

WORM BEHAVIOR: 00h (non-changeable) 4

> Value Description

00h Normal Operation (reset to this value on Medium Removal)

Reserved others

5 SENSE DATA BEHAVIOR: 01h (non-changeable)

> When the sense data is associated with an Illegal Length read, an 18-byte Request Sense data may be used regardless of the value in this field.

Value Description

00h Obsolete (Earlier generation devices used this to indicate Sense data was 35-bytes in

01h Sense data is 96-bytes in length

02h-FFh Reserved

6 Reporting Behavior

Configures behaviors related to reporting conditions across the primary interface.

#### Bit Description

7-3 Reserved

2 CCDM (Check Condition for Dead Media): 0b (changeable-saveable)

> On eServer enabled drives (i.e., The PRODUCT ID returned in Standard Inquiry is "HH LTO Gen x" where "x" is a number) the default of this field is one.

Value	Description
0b	Does not specify CHECK CONDITION behavior when cleaning is required.
1b	Return a CHECK CONDITION with Sense Key set to 1h and the additional sense
	code set to DEGRADED MEDIA (8252h) after a Rewind command when the cri-
	teria are met to set the DEAD MEDIA flag in Log Page 3Ch.

1 DDEOR (Disable Deferred Error On Rewind): 0b (changeable-saveable)

On eServer enabled drives (i.e., The PRODUCT ID returned in Standard Inquiry is "HH LTO Gen x" where "x" is a number) that are attached to AIX, the DDEOR bit gets set to one by the SCDD.

Value	Description
0b	Deferred error may be reported to a rewind command.
1b	Deferred error shall not be reported to a rewind command.
CLNCHK (C	lean Check): 0b (changeable-saveable)
Value	Description
0b	Does not specify CHECK CONDITION behavior when cleaning is required.
1b	Return a CHECK CONDITION with Sense Key set to 0h and the additional sense
	code set to DRIVE REQUIRES CLEANING (8282h) after a REWIND, SPACE,
	LOCATE, or UNLOAD when cleaning is required.

0

## 7 Firmware Update Behavior

Configures behaviors related to updating device firmware.

## Bit Description

- 7-1 Reserved
- 0 DFMRDL (Disable Field Microcode Replacement Down Level): 0b (changeable-saveable)

This configures the ability to use an FMR tape to update to a lower level of firmware. This bit does not effect code downloads by means other than an FMR tape (e.g. WRITE BUFFER over SCSI interface).

On eServer enabled drives (i.e., The PRODUCT ID returned in Standard Inquiry is "HH LTO Gen x" where "x" is a number) that are attached to AIX, the DFMRDL bit is set to one by the SCDD.

Value	Description
0b	Device may accept down level firmware by FMR tape.
1b	Device shall not accept down level firmware by FMR tape.

8 Unload On Error Behavior

Configures auto unload behaviors of different types of cartridges when the following errors occur:

- a) Bad Media causes a mount failure;
- b) FMR cartridge is loaded when it has not been requested;
- c) Expired cleaner cartridge is loaded; or
- d) An invalid or unsupported cleaner cartridge is loaded.

Settings specified over a library interface (i.e. LDI or ADI) take precedence over these settings, but do not modify these values.

Currently the only values allowed are 00h (no exceptional behavior for any cartridge type) or 15h (do not auto-eject on error for any cartridge type). That is, all fields shall have the same value.

# Bit Description

- 7-6 Reserved
- 5-4 UOE-C (Unload On Error Cleaner): 01b (changeable-saveable)

OOL C (OIIIOAG	Ton End Ocanci). The (changeable saveable
Value	Description
00b	No exceptional behavior specified
01b	Do not auto-eject on error
10b-11b	Reserved
UOE-F (Unload	on Error - FMR): 01b (changeable-saveable)
Value	Description
00b	No exceptional behavior specified
01b	Do not auto-eject on error

10b-11b Reserved

1-0 UOE-D (Unload On Error - Data): 01b (changeable-saveable)

Value Description

00b No exceptional behavior specified

01b Do not auto-eject on error

10b-11b Reserved

9 TapeAlert Behavior

3-2

This field defines unique behaviors for specific TapeAlert flags.

Bit	Description
7-1	Reserved

0 TA10: 1b (changeable-saveable)

Value Description

0b TapeAlert 10h is asserted when a Write, Read, or Verify command is aborted

because the unload button on the panel is pressed

TapeAlert 10h is asserted when the unload button on the panel is pressed and

the tape is away from BOP (channel LBA != 0); TapeAlert 10h will not be asserted

if the tape is at BOP or if the tape is not threaded.

10-n Future behaviors that may have been defined after publication of this document.

#### 6.6.21 MP 30h: Device Attribute Settings

The device attribute settings page and the related subpages are used to query and configure settings used by the drive to control its behavior and configuration in a specified environment. MP 30h: Directory Listing - Device Attribute Settings (see 6.6.21.1 on page 396) is the directory listing of supported subpages and is in the Mode Page Format (see Table 290 — on page 361). Each subpage is for the query and/or setting of device attributes for a specific function and is in the Mode Page Subpage Format (see Table 291 — on page 362). The persistence of parameters and statement of which parameters are settable or only readable is stated in the section describing each subpage.

See MODE SELECT (6/10) - 15h/55h (see 5.2.9 on page 92) for how to set these parameters and MODE SENSE (6/10) - 1Ah/5Ah (see 5.2.10 on page 94) for how to read these parameters.

<u>Mode Page Behaviors (see 4.4 on page 33)</u> describes this device's non-standard behaviors related to mode parameters.

The mode page policy for this page is described in <a href="Policy">Policy</a> — non-standard (see 4.4.1 on page 33).

#### 6.6.21.1 MP 30h: Directory Listing - Device Attribute Settings

The directory listing - device attribute settings mode page is used to report the list of supported subpages in the device attribute settings mode page and subpages. The page is valid only for a Mode Sense command.

This page is defined as common to all initiators.

Bit **Byte** 2 6 5 3 1 7 msb 4 0 Isb 0 PS SPF(0) PAGE CODE (30h) 1 PAGE LENGTH (n-1) Supported subpage list 2 Supported subpage [first] n Supported subpage [last]

Table 311 — MP 30h: Directory Listing - Device Attribute Settings mode page format

The supported subpage list is a list of supported subpages listed in ascending order. Since the list of supported subpages is anticipated to differ between code levels (i.e., newer code levels may add subpages) the complete list is not described here. A user should read this page to determine which subpages may be used.

The following parameters apply:

## Byte Description

0

#### Bit Description

- PS (Parameter Saveable): 0b. Ignored in MODE SELECT. See Parameter Saveable behavior in 4.4.2.2 on page 35.
- 6 SPF (SubPage Format): 0b
- 5-0 PAGE CODE: 30h
- 1 PAGE LENGTH:
- 2-n Supported subpage list: <u>Supported subpage list Device Attribute Settings (see 6.6.21.2 on page 397)</u> describes the subpages that were implemented or planned at the time this document was published.

# 6.6.21.2 Supported subpage list - Device Attribute Settings

The supported subpage list returns the list of supported subpages. These subpages are organized in logical groupings by function.

Range	Description
01h-03h	MP 30h[01h-02h]: Ethernet attributes - Device attribute settings (see 6.6.21.3 on
	<u>page 398)</u> .
04h-1Fh	Reserved
20h	MP 30h[20h-(20h)]: Encryption Attributes - Device Attribute Settings (see 6.6.21.4 on
	<u>page 405)</u> .
21h-3Fh	Reserved
40h-43h	MP 30h[40h-43h]: Data processing attributes - Device attribute settings (see 6.6.21.5 on
	<u>page 407)</u>
44h-FEh	Reserved

The list of supported subpages that were implemented at the time this document was published follows:

2-n Supported subpages: This field is a list of 1-byte long subpage codes and may include some or all of the following:

Code	Mode Page 30h Subpage
01h	MP 30h[01h]: Drive MAC address - Device attribute settings (see 6.6.21.3.2 on page 401)
02h	MP 30h[02h]: Drive IP address and subnet mask - Device attribute settings (see 6.6.21.3.3
	on page 403)
MP 30h[20l	n]: Encryption mode - Device Attribute Settings (see 6.6.21.4.1 on page 405)
40h	MP 30h[40h]: SkipSync - Device attribute settings (see 6.6.21.5.1 on page 407)
42h	MP 30h[42h]: End of partition behavior control - Device attribute settings (see 6.6.21.5.2 on
	<u>page 410)</u>
43h	MP 30h[43h]: Feature switches - Device attribute settings (see 6.6.21.5.3 on page 410)

## 6.6.21.3 MP 30h[01h-02h]: Ethernet attributes - Device attribute settings

#### 6.6.21.3.1 Ethernet attributes overview

The Ethernet attributes subpages of the device attribute mode page describe information related to the drives Ethernet interface. The subclauses to this subclause list structures used by the Ethernet attribute subpages that are described in the subclauses that are at a peer level to this subclause.

## 6.6.21.3.1.1 Ethernet socket address descriptor

The IP address and subnet mask is defined in table 312...

Table 312 — Ethernet socket address descriptor

Deste				Е	it				
Byte	7	6	5	4	3	2	1	0	
0	MSB		ETHERNET OO		DECODINE TO D	1510TH (20h)	`		
1			ETHERNET SOCKET ADDRESS DESCRIPTOR LENGTH (22h)  LSB						
2	MSB								
3			RELATIVE SOCKET ADDRESS IDENTIFIER -						
4			SOCKADDR						
31									
32			SUBNET MASK LENGTH						
33									
35				Rese	erved				

The following parameters apply:

## Byte Description

- 0-1 ETHERNET SOCKET ADDRESS DESCRIPTOR LENGTH The number of bytes to follow in the Ethernet socket address descriptor.
- 2-3 RELATIVE SOCKET ADDRESS IDENTIFIER A unique identifier for this Ethernet socket address.
- 4-31 SOCKADDR defined by type of IP address

 Type
 Description

 IPv4
 6.6.21.3.1.1.1

 IPv6
 6.6.21.3.1.1.2

- 32 SUBNET MASK LENGTH The number of bits set to one in the subnet mask.
- 33-35 Reserved

## 6.6.21.3.1.1.1 Sockaddr for an IPv4 IP address

The sockaddr for an IPv4 IP address is defined in table 313.

Table 313 — Sockaddr format for IPv4

Desta				В	Bit					
Byte	7	6	5	4	3	2	1	0		
0			ADDRESS LENGTH							
1		ADDRESS FAMILY								
2	MSB		PORT							
3										
4	MSB		INTERNET ADDRESS							
7		-								
8		_	Pad bytes							
27				Padi	oytes					

The following parameters apply:

## Byte Description

- 0 ADDRESS LENGTH (10h)
- 1 ADDRESS FAMILY (02h)
- 2-3 PORT The TCP port number, if any. Zero if there is no TCP port number.
- 4-7 INTERNET ADDRESS The IP Address.
- 8-27 Pad bytes All bytes set to zero.

#### 6.6.21.3.1.1.2 Sockaddr for an IPv6 address

The sockaddr for an IPv6 IP address is defined in table 314.

Table 314 — Sockaddr format for IPv6

Dest		Bit								
Byte	7	6	5	4	3	2	1	0		
0			ADDRESS LENGTH							
1		ADDRESS FAMILY								
2	MSB	_								
3			PORT							
4		_		FI 014	INIEO					
7				FLOW	INFO					
8	MSB			INTERNET	4000500					
23		-	INTERNET ADDRESS  LS							
24										
27		-		SCO	'E ID					

The following parameters apply:

# Byte Description O ADDRESS LENGTH (1Ch) 1 ADDRESS FAMILY (0Ah) 2-3 PORT - The TCP port number, if any. Zero if there is no TCP port number. 4-7 FLOW INFO - (0000-\_0000h) 8-23 INTERNET ADDRESS - The IP Address. 24-27 SCOPE ID - (0000\_\_0000h)

## 6.6.21.3.2 MP 30h[01h]: Drive MAC address - Device attribute settings

<u>Mode Page Behaviors (see 4.4 on page 33)</u> describes this device's non-standard behaviors related to mode parameters.

The mode page policy for this page is described in <a href="Policy">Policy</a> — non-standard (see 4.4.1 on page 33).

The drive MAC address is read only and is defined in table 315.

Table 315 — MP 30h[01h] Drive MAC address

D. d.				В	it					
Byte	7	6	5	4	3	2	1	0		
0	ps (0b)	spf(1b)			PAGE CO	DE (30h)				
1		SUBPAGE CODE (01h)								
2	(MSB)			D4.05   5N	OTIL (= 0)					
3				PAGE LENGTH (n-3) (LSB)						
4		Reserved								
5		Reserved								
6		Reserved								
7		number of drive port mac address descriptors								
8		Drive port MAC address descriptor [first]								
15		<u>-</u>	Dilve p	JUIT IVIAC add	ress descript	or [iiist]				
				:						
n-7		-	Drive port MAC address descriptor [last]							
n			Dilve	JULI WIAC AUC	iess uescript	.oi įiasij				

The following parameters apply:

## Byte Description

0

## Bit Description

- PS (Parameter Saveable): 0b. Ignored in MODE SELECT. See Parameter Saveable behavior in 4.4.2.2 on page 35.
- 6 SPF (1b)
- 5-0 PAGE CODE (30h)
- 1 SUBPAGE CODE (01h)
- 2-3 PAGE LENGTH
- 4-6 Reserved
- NUMBER OF DRIVE PORT MAC ADDRESS DESCRIPTORS (non-changeable) The number of descriptors to follow

8-n Drive port MAC address descriptors. (non-changeable)

The Drive port MAC address descriptors are listed in ascending order by RELATIVE TARGET PORT IDENTIFIER. The Drive port MAC address descriptor is defined in <u>table 316</u>.

Table 316 — Drive port MAC address descriptor of MP 30h[01h]

Deste	Bit									
Byte	7	6	5	4	3	2	1	0		
0	MSB									
1			relative target port identifier							
2										
7		•		mac a	aaress					

# Byte Description

- 0-1 RELATIVE TARGET PORT IDENTIFIER The relative port value for the Ethernet port.
- 2-7 MAC ADDRESS The binary representation of the MAC address for that port.

#### 6.6.21.3.3 MP 30h[02h]: Drive IP address and subnet mask - Device attribute settings

The drive IP address and subnet mask subpage is defined in table 317.

<u>Mode Page Behaviors (see 4.4 on page 33)</u> describes this device's non-standard behaviors related to mode parameters.

The mode page policy for this page is described in Policy — non-standard (see 4.4.1 on page 33).

Note that MODE SELECT parameter data is not required to match the structure of the parameter data returned by MODE SENSE. There is a fixed portion of the mode page that is required to be the same, but the descriptor list may contain a subset of descriptors. The Changeable Values are reported in the same structure as Current Values in MODE SENSE but are not used to positionally validate values received in MODE SELECT.

The SP bit of a MODE SELECT command shall be set to one for this mode page. If the SP bit is set to zero, then the drive rejects the command with a CHECK CONDITION and sets the sense key to ILLEGAL REQUEST and the additional sense code to INVALID FIELD IN CDB.

Bit **Byte** 7 6 5 4 3 2 1 0 0 ps spf(1b) PAGE CODE (30h) SUBPAGE CODE (02h) 2 (MSB) PAGE LENGTH (n-3) 3 (LSB) 4 Reserved 5 Reserved 6 Restricted 7 number of drive ethernet port descriptors 8 Drive Ethernet port descriptor [first] m n-k Drive Ethernet port descriptor [last] n

Table 317 — MP 30h[02h] Drive IP address and subnet mask subpage

The following parameters apply:

#### Byte Description

0

# Bit Description

- 7 PS (Parameter Saveable): 4b in a MODE SENSE command. Ignored in a MODE SELECT command. 1b. Ignored in MODE SELECT. See Parameter Saveable behavior in 4.4.2.2 on page 35.
- 6 SPF (1b)
- 5-0 PAGE CODE (30h)
- 1 SUBPAGE CODE (02h)
- 2-3 PAGE LENGTH
- 4-5 Reserved
- 6 Restricted
  - NUMBER OF DRIVE PORT DESCRIPTORS (changeable) May be set to any number between one and the number of drive Ethernet ports inclusive. Changes will only affect the ports for which a drive Ethernet port descriptor is sent.

#### 8-n Drive Ethernet port descriptors.

The drive Ethernet port descriptors shall be sent in ascending order by RELATIVE TARGET PORT IDENTIFIER (see table 318). The drive Ethernet port descriptor is defined in table 318.

Table 318 — Drive Ethernet port descriptor of MP 30h[02h]

<b>D</b> (				В	it					
Byte	7	6	5	4	3	2	1	0		
0	MSB		drive of	baraat nart d	a arintar land	th (n 1)				
1			drive et	thernet port d	escriptor leng	jun (n-1)		LSB		
2	MSB	_	relative target port identifier							
3										
4		_								
5			Reserved							
6		Reserved dhcp_v4								
7		number of ethernet socket address descriptors								
8										
Х			Ethernet socket address descriptor [first]							
				:						
У		_	Ethernet socket address descriptor [last]							
n			Ellielli	et socket add	ess descripti	υι [ιαδί]				

#### Byte Description

- 0-1 DRIVE ETHERNET PORT DESCRIPTOR LENGTH The number of bytes to follow in the drive Ethernet port descriptor.
- 2-3 RELATIVE TARGET PORT IDENTIFIER (changeable) The relative port identifier of the Ethernet port.
- 4-5 Reserved

6

# Bit Description

- 7-1 Reserved
- 0 DHCP\_V4 (changeable-saveable)

Value Description

1b DHCP shall be used to obtain an additional IPv4 address.

0b DHCP shall not be used to obtain an additional IPv4 address.

- 7 NUMBER OF ETHERNET SOCKET ADDRESS DESCRIPTORS (changeable) Shall be set to 01h or 02h.
- 8-n Ethernet socket address descriptors. (changeable-saveable)

The Ethernet socket address descriptor is defined in <u>6.6.21.3.1.1 on page 398</u>.

In each Ethernet socket address descriptor the PORT field of the SOCKADDR (see <u>table 313</u> and <u>table 314</u>) is reserved and shall be set to zero.

In each Ethernet socket address descriptor the FLOW INFO field of the SOCKADDR (see table 314), if any, is reserved and shall be set to zero.

In each Ethernet socket address descriptor the SCOPE ID field of the SOCKADDR (see table 314), if any, is reserved and shall be set to zero.

## 6.6.21.4 MP 30h[20h-(20h)]: Encryption Attributes - Device Attribute Settings

## 6.6.21.4.1 MP 30h[20h]: Encryption mode - Device Attribute Settings

<u>Mode Page Behaviors (see 4.4 on page 33)</u> describes this device's non-standard behaviors related to mode parameters.

The mode page policy for this page is described in Policy — non-standard (see 4.4.1 on page 33).

The Encryption mode - Device attribute settings mode page allows an application client to query the encryption settings in the drive. If the drive receives an encryption mode - device attribute settings mode page in a Mode Select command it shall reject the command with an ILLEGAL REQUEST, INVALID FIELD IN PARAMETER LIST. The encryption mode - Device attribute settings mode page is defined in table 319.

Table 319 — MP 30h[20h] Encryption mode mode page

Byte	Bit									
	7	6	5	4	3	2	1	0		
0	PS	SPF(1b)	SPF(1b) PAGE CODE (30h)							
1	SUBPAGE CODE (20h)									
2	(MSB)	(MSB)								
3		PAGE LENGTH (0005h) (LSB)								
4	Reserved									
5	ENCRYPTION SOLUTION METHOD									
6	KEY PATH									
7	DEFAULT ENCRYPTION STATE									
8	DENSITY REPORTING									

The Encryption mode - Device attribute settings mode page is not allowed in a Mode Select command. The Encryption mode - Device attribute settings mode page may be used in a Mode Sense command to query the current Encryption settings. Some of the settings likely to be reported are listed in table 320.

Table 320 — Expected Encryption settings of MP 30h[20h]

Encryption setting	Method (byte 5)	Key Path (byte 6)	Default Encryption State (byte 7)	Density Reporting (byte 8)
No Encryption	01h	01h	01h	00h
AME (Application Managed Encryption)	03h	01h	01h	00h
LME (Library Managed Encryption) - Barcode policy	04h	01h	03h	00h
LME - Internal label (selects) policy	04h	01h	06h	00h
LME - Internal label (all) policy	04h	01h	07h	00h
LME - Encrypt Always policy	04h	01h	02h	00h
Custom	combinations not listed above			

## Byte Description

0

#### Bit Description

PS (Parameter Saveable): 0b. Ignored in MODE SELECT. See Parameter Saveable behavior in 4.4.2.2 on page 35. Note that the parameters do change in response to configuration changes made via other paths (e.g., through the library).

6 SPF: 1b

5-0 PAGE CODE: 30h

1 SUBPAGE CODE: 20h

2-3 PAGE LENGTH: 05h

4 Reserved

5 ENCRYPTION SOLUTION METHOD:

6 KEY PATH:

7 DEFAULT ENCRYPTION STATE:

8 DENSITY REPORTING:

#### 6.6.21.5 MP 30h[40h-43h]: Data processing attributes - Device attribute settings

# 6.6.21.5.1 MP 30h[40h]: SkipSync - Device attribute settings

See MODE SELECT (6/10) - 15h/55h (see 5.2.9) for how to set these parameters and MODE SENSE (6/10) - 1Ah/5Ah (see 5.2.10) for how to read these parameters.

<u>Mode Page Behaviors (see 4.4 on page 33)</u> describes this device's non-standard behaviors related to mode parameters.

The mode page policy for this page is described in Policy — non-standard (see 4.4.1 on page 33).

Note that mounting a volume that modifies the value of fields in this page does not establish a unit attention condition.

The SkipSync mode page is defined in <u>table 315</u>. SkipSync is a feature that performs a trade-off between how much data can be written to a volume and how fast that data can be written when the data is a small file size. This mode page allows the feature to be enabled and disabled. It also provides information that describes certain aspects of this trade-off, such as the Target Minimum Capacity. This feature is only available for use on volumes that are not scaled and that are not partitioned. The volume must be an Ultrium 5 or newer cartridge.

Bit 7 6 5 4 3 2 1 0 **Byte** 0 PS SPF(1b) PAGE CODE (30h) 1 SUBPAGE CODE (40h) (MSB) 2 PAGE LENGTH 10h 3 (LSB) 4 Reserved sv ENABLE 5 Reserved 6 Reserved 7 SKIPSYNC POLICY 8 (MSB) TARGET MINIMUM CAPACITY 11 (LSB) 12 (MSB) Vendor-restricted 15 (LSB) 16 (MSB) Vendor-restricted 19 (LSB)

Table 321 — MP 30h[40h] SkipSync - Device attribute settings mode page format

## Byte Description

0

#### Bit Description

- PS (Parameter Saveable): 1b. Ignored in MODE SELECT. See Parameter Saveable behavior in 4.4.2.2 on page 35.
  - It is recommended that users set the SP bit of the MODE SELECT command to one.
- 6 SPF (SubPage Format): 1b
- 5-0 PAGE CODE: 30h
- 1 SUBPAGE CODE: 40h

#### 2-3 PAGE LENGTH: 10h

4

# Bit Description

7-3 Reserved

2-1 sv (SkipSync Validity): (changeable-ignored)

Note that mounting a volume that modifies the value of this field does not establish a unit attention condition.

Value	Description	
00b	There is no volume mounted, or SkipSync is not valid for mounted volume.	
01b	SkipSync valid for mounted volume but SKIPSYNC POLICY field not supported	
others	Reserved	
ENABLE: 0b (changeable-saveable)		
Value	Description	

Ob The SkipSync function is disabled.

The SkipSync function is enabled. The drive operates in a manner to increase

performance and reduce backhitches while still performing synchronizations on

small file writes.

#### 5-6 Reserved

0

7 SKIPSYNC POLICY:


The SkipSync Policy field indicates the algorithm used in performing the SkipSync operations.

# Value Description

00h

Sync performance allowing capacity reduction (a MODE SENSE command may be used to report in, other fields, the limits; e.g., TARGET MINIMUM CAPACITY)

The overall capacity may be reduced to the value reported in the TARGET MINIMUM CAPACITY field (at the time of publication this reduction may be up to 33%) depending on the transfer characteristics (e.g., transfer rate and the interval between the sync completion and the next data transfer).

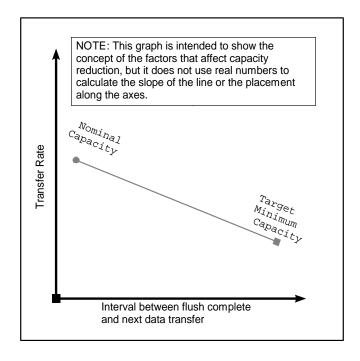

8-11 TARGET MINIMUM CAPACITY (MiB): (changeable-ignored)

This field indicates the target capacity in mebibytes (2<sup>20</sup>) to which the capacity of the current partition when full may be decreased in order to perform SkipSync operations. The total capacity may be smaller than TARGET MINIMUM CAPACITY if the average of transaction sizes is very small.

If the mounted volume is not capable of supporting skipsync this field is set to zero.

- 12-15 Vendor-restricted
- 16-19 Vendor-restricted

#### 6.6.21.5.2 MP 30h[42h]: End of partition behavior control - Device attribute settings

The End of partition behavior control - Device attribute settings mode page is defined in table 315.

<u>Mode Page Behaviors (see 4.4 on page 33)</u> describes this device's non-standard behaviors related to mode parameters.

The mode page policy for this page is described in Policy — non-standard (see 4.4.1 on page 33).

Table 322 — MP 30h[42h] End of partition behavior control - Device attribute settings mode page format

Dort o	Bit									
Byte	7	6	5	4	3	2	1	0		
0	ps	spf(1b)	PAGE CODE (30h)							
1		SUBPAGE CODE (42h)								
2	(MSB)		PAGE LENGTH (n-3) (LSB)							
3		_								
4		leop method								

The following parameters apply:

## Byte Description

0 Byte zero

#### Bit Description

- PS (Parameter Saveable): 1b. Ignored in MODE SELECT. See Parameter Saveable behavior in 4.4.2.2 on page 35.
- 6 SPF (1b)
- 5-0 PAGE CODE: 30h
- 1 SUBPAGE CODE (42h)
- 2-3 PAGE LENGTH
- 4 LEOP METHOD Logical end of partition (LEOP) method: 00h (changeable-saveable)

#### Value Description

00h LEOP is determined by density code

Value Description

58h Constant medium capacity others Maximize medium capacity

- 01h Maximize medium capacity LEOP is based on the amount of physical medium available. Early warning is based on the drive's buffer size, the nominal physical dataset length, and some margin (i.e., the drive will accept write request before LEOP if there is tape available).
- O2h Constant medium capacity LEOP is determined to provide constant medium capacity. Early warning is based on the user's logical data capacity already written to the tape (i.e constant capacity). If the medium condition or drive condition is degraded enough to reach a predetermined LPOS tape region, then LEOP may be reached prior to the constant capacity.

others Reserved

# 6.6.21.5.3 MP 30h[43h]: Feature switches - Device attribute settings

The Feature switches - Device attribute settings mode page is defined in table 323.

This page is defined as common to all initiators.

Table 323 — MP 30h[43h] Feature switches - Device attribute settings mode page format

Dorto	Bit										
Byte	7	6	5	4	3	2	1	0			
0	ps	spf(1b)		PAGE CODE (30h)							
1		SUBPAGE CODE (43h)									
2	(MSB)	7.07.7.207.(40k)									
3			PAGE LENGTH (10h) (LSE								
4				Reserved				D_BOPC			
5		Reserved									
19				Res	erveu						

The following parameters apply:

#### Byte Description

0 Byte zero

#### Bit Description

7PS - parameters saveable: 0b. Ignored in MODE SELECT. See Parameter Saveable behavior in 4.4.2.2 on page 35.

6 SPF (1b)

5-0 PAGE CODE: 30h

1 SUBPAGE CODE (43h)

2-3 PAGE LENGTH

4

#### Bit Description

7-1 Reserved

0 D\_BOPC (Disable BOP Cache): 0b (changeable)

This control indicates if the BOP cache information is used during a reposition operation. It does not alter the accumulation of BOP cache information.

Value	Description
0b	Use cached BOP information (if available) to perform positioning requests (see
	<u>4.3.2)</u>
1b	Ignore cached BOP information when performing positioning requests (e.g., Per-
	form physical positioning and read data sequentially into buffer from BOP)

#### 5-19 Reserved

#### 6.6.22 MP 3Eh: Engineering Support

See MODE SELECT (6/10) - 15h/55h (see 5.2.9 on page 92) for how to set these parameters and MODE SENSE (6/10) - 1Ah/5Ah (see 5.2.10 on page 94) for how to read these parameters.

<u>Mode Page Behaviors (see 4.4 on page 33)</u> describes this device's non-standard behaviors related to mode parameters.

The mode page policy returned in <u>IP 87h: Mode Page Policy (see 6.3.6 on page 246)</u> for this page is described in Policy — non-standard (see 4.1.1 on page 2). However, the behavior related to mode page policy for this page is

not defined, and may contain elements which are common to all initiators, as well as elements which are initiator unique.

NOTE 62 - As this page is not for normal application use, it is not returned in mode page 3Fh (all pages). Consequently, this page must be specifically queried and set.

NOTE 63 - For more information on special needs and the usage of this page contact IBM.

Table 324 — MP 3Eh: Engineering Support mode page

Desta	Bit										
Byte	7	6	5 4 3 2 1 0								
0	PS	SPF (0b)	PAGE CODE (3Eh)								
1	PAGE LENGTH (n-1)										
2											
127		_		vendor-	reserved						

# Byte Description

0

# Bit Description

PS (Parameter Saveable): 0b. Ignored in MODE SELECT. See Parameter Saveable behavior in 4.4.2.2 on page 35.

6 SPF (SubPage Format): 0b

5-0 PAGE CODE: 3Eh

1 PAGE LENGTH: **7E**h

2-127 Vendor-Reserved

# 6.7 Read/Write Buffers (RB)

Read/Write Buffers are used with the READ BUFFER command (see 5.2.17) and/or the WRITE BUFFER command (see 5.2.41).

Supported buffers are described in:

- a) Supported Buffers when the mode field is 00h through 07h, 0Dh, or 0Fh (see 6.7.1 on page 413);
- b) Supported Buffer when the mode is:
  - A) MODE[0Bh] Echo buffer descriptor (see 5.2.17.6 on page 115)
  - B) MODE[0Ah] Write data to echo buffer (see 5.2.41.7 on page 187); and
  - C) MODE[0Ah] Read data from echo buffer (see 5.2.17.5 on page 115);

and

c) Supported Buffers when the mode field is 1Ch (see 6.7.2 on page 420).

# 6.7.1 Supported Buffers when the MODE field is 00h through 07h, 0Dh, or 0Fh

Table 325 lists the supported buffers when the mode field is set to 00h, through 07h, 0Dh, or 0Fh.

Table 325 — Supported Buffer IDs

ID	RB modes	WB modes	Buffer Description	OFFSET BOUNDARY
01h	2,3		Dump Data  Note - Dump data should be read in a series of blocks larger than 64 KiB and smaller than 1  MiB (for example 256 KiB) with strictly increasing offsets	02h
02h	2,3	2	Test	02h
04h		4,5,6, 7,D,F	Firmware  Note - If one of the listed modes is specified, the BUFFER ID is ignored and the command is treated as a Firmware buffer)	02h
05h	2,3		Cartridge Memory	02h
06h	2,3		RB 06h: Error Log (aka. Engineering Log) (see 6.7.1.1 on page 414)	02h
07h	2,3		RB 07h: SCSI Log (aka Error log) (see 6.7.1.2 on page 415)	02h
08h	2,3		RB 08h: World Wide Name (see 6.7.1.3 on page 415)	02h
19h	2,3	2	RB 19h: Host non-volatile (see 6.7.1.4 on page 416)	FFh
20h	2,3		Cartridge Memory (same as Buffer ID 05h)	02h
21h	2,3		RB 21h: Cartridge Memory from EOD dataset (see 6.7.1.5 on page 416)	02h
50h	2,3		RB 50h: Active IP addresses (see 6.7.1.6 on page 416)	00h

#### Legend

R Read Only
W Write Only
R/W Read/Write
- Not Applicable
NS Not Supported

Notes

<sup>&</sup>lt;sup>a</sup> MODE[07h] – Descriptor with algorithmic offset boundary (see 5.2.17.4 on page 115) describes how to interpret the OFFSET BOUNDARY and BUFFER OFFSET fields for buffers that are too large to use the OFFSET BOUNDARY and BUFFER OFFSET fields such as the Format buffer (i.e., BUFFER ID 00h). This interpretation for the Format buffer is only valid for buffer modes 00h, 01h, 02h, 03h, and 07h.

#### 6.7.1.1 RB 06h: Error Log (aka. Engineering Log)

The error log buffer (also known as Engineering Log) contains zero or more entries described in <u>table 326</u>. Entries are returned in order by the most recent entry first.

Bit Byte 7 5 3 4 1 0 0 (MSB) TIME STAMP 3 (LSB) 4 **ENTRY NUMBER** 5 **ERROR CODE** 6 **FSC 1ST TEXT** 7 8 **FSC 1ST DATA** 9 10 **FSC 2ND TEXT** 11 12 FSC 2ND DATA 13 14 CARTRIDGE SERIAL NUMBER 21 22 LINK LEVEL 27 28 HARDWARE LEVEL 31

Table 326 — Error Log Buffer (06h)

The following parameters apply to the Error Log Buffer:

### Byte Description

- 0-3 TIME STAMP: The value of the drive's timestamp at the time of the error. This timestamp may be the power-on seconds or it may be the value of the timestamp as set by the library or the host. It is generally not sufficient on its own to provide relative ordering of the entries.
- 4 ENTRY NUMBER: This is a value used internally to the drive.
- 5 ERROR CODE: The error code used for the Single Character Display.
- 6-7 FSC 1ST TEXT: Fault Symptom Code text
- 8-9 FSC 1ST DATA: Fault Symptom Code data
- 10-11 FSC 2ND TEXT: Fault Symptom Code text
- 12-13 FSC 2ND DATA: Fault Symptom Code data
- 14-21 CARTRIDGE SERIAL NUMBER: This is the cartridge serial number of the volume that was mounted in the drive when the error occurred. The cartridge serial number is set using this priority:
  - 1) Volume Serial Number set by library;
  - 2) Volume Serial Number set by host; then
  - 3) Cartridge Serial Number from Cartridge Memory.
- 22-27 LINK LEVEL: The link level of the code that was loaded in the drive when the error occurred.
- 28-31 HARDWARE LEVEL: Not used.

#### 6.7.1.2 RB 07h: SCSI Log (aka Error log)

The SCSI Log Buffer contains 10 entries, each of which has the format described in <u>table 327</u>. An entry is created each time sense data with a Sense Key 3h or 4h is returned with a CHECK CONDITION Status to a command that is received on LUN 0.

Bit **Byte** 5 7 6 4 3 1 0 (MSB) 0 TIME STAMP (seconds) 3 (LSB) 4 **ENTRY NUMBER** 5 INITIATOR SCSI ID 6 SCSI STATUS 7 Reserved 8 CDB 23 24 SENSE DATA 59

Table 327 — SCSI Log Buffer (07h)

The following parameters apply:

# Byte Description

- 0-3 TIME STAMP: The time stamp in seconds when the entry was created.
- 4 ENTRY NUMBER: A value of 0 indicates that the entry is not valid. The scheme used for setting the Entry Number is not described in this manual.
- 5 INITIATOR SCSI ID: The least significant byte of the address used to identify the initiator (e.g., on Fibre Channel drives the ALPA)
- 6 SCSI STATUS: The value that would be returned as SCSI Status.
- 7 Reserved
- 8-23 CDB: The contents of the CDB that was presented the CHECK CONDITION Status even if that CHECK CONDITION is for a DEFERRED ERROR.
- 24-59 SENSE DATA: The sense data that was created as a result of this error.

# 6.7.1.3 RB 08h: World Wide Name

This buffer contains the World Wide Name values that are used by the drive.

Dirto	Bit									
Byte	7	6	1	0						
0	(MSB)		WORLD WIDE NODE NAME (LSB)							
7										
8	(MSB)									
15				WORLD WIDE	PORT NAME			(LSB)		

Table 328 — World Wide Name Buffer (08h)

The following parameters apply:

### Byte Description

0-7 WORLD WIDE NODE NAME: The world wide identifier used by the drive to identify LUN 0.

8-15 WORLD WODE PORT NAME: The world wide identifier used by the drive port through which the READ BUFFER command was recevied.

#### 6.7.1.4 RB 19h: Host non-volatile

The Host non-volatile buffer is intended for use by an application to write or read information that is to be stored in non-volatile memory. This data is also captured in drive dumps.

The size of this buffer may be determined by using a READ BUFFER (see 5.2.17) with mode 03h (see 5.2.17.3).

# 6.7.1.5 RB 21h: Cartridge Memory from EOD dataset

The Cartridge Memory from EOD dataset buffer provides a method to retrieve the copy of cartridge memory (CM) that exists in the EOD dataset. This is used for debug and error recovery only.

The volume must be positioned at the EOD from which the CM contents will be read (e.g., issue LOCATE to desired partition then issue SPACE EOD then issue the READ BUFFER command). If the medium is not positioned at EOP, then the READ BUFFER command is rejected with CHECK CONDITION status and Sense Key set to ILLEAGAL REQUEST with the additional sense code set to SEQUENTIAL POSITIONING ERROR. If the medium is positioned at EOP and the EOD cannot be found the READ BUFFER command is rejected with CHECK CONDITION status and Sense Key set to MEDIUM ERROR with the additional sense code set to END-OF-DATA NOT FOUND.

#### 6.7.1.6 RB 50h: Active IP addresses

416

The Active IP addresses buffer returns a list of IP addresses that have successfully completed negotiation on the Ethernet link and are active. This list does not contain IP addresses that the drive attempts but cannot use due to conflicts or other errors. The format of the Data field of the active IP addresses buffer depends on the value in byte 0. If byte 0 contains a non-zero value, then the format is defined in <a href="Active IP addresses fixed buffer (LTO5 only)">Active IP addresses fixed buffer (LTO5 only)</a> (see 6.7.1.6.1). If byte 0 contains a zero value, then the format is defined in the <a href="Active IP addresses">Active IP addresses</a> variable buffer (LTO6 and later) (see 6.7.1.6.2).

### 6.7.1.6.1 Active IP addresses fixed buffer (LTO5 only)

The format of the Data field of the active IP addresses fixed buffer is described in table 329

.

Table 329 — Active IP addresses fixed buffer format (50h)

Deste	Bit									
Byte	7	6	5	4	3	2	1	0		
0			١	NUMBER OF ET	HERNET PORT	S				
1	SIZE OF SOCKADDR (m-2)									
2	NUMBER OF SOCKADDR STRUCTURES									
	List of sockaddr structures (see <u>6.6.21.3.1.1.1</u> or <u>6.6.21.3.1.1.2</u> )									
3		_			du [6:na4]					
m				Sockad	dr [first]					
				:						
n-(m-3)										
n		-		sockad	dr [last]					

The following parameters apply:

# Byte Description

- 0 NUMBER OF ETHERNET PORTS The number of physical Ethernet ports functioning in the drive.
- 1 SIZE OF SACKADDR The size of each sockaddr. All sockaddr's are the same size
- 2 NUMBER OF SOCKADDR The number of sockaddr structures returned.
- 3-n List of sockaddr structures. Each sockaddr structure describes one active IP address. The sockaddr structure is defined in clauses <u>Sockaddr for an IPv4 IP address (see 6.6.21.3.1.1.1 on page 399)</u> and <u>Sockaddr for an IPv6 address (see 6.6.21.3.1.1.2 on page 399)</u>.

# 6.7.1.6.2 Active IP addresses variable buffer (LTO6 and later)

The format of the Data field of the active IP addresses buffer is described in table 329

.

Table 330 — Active IP addresses variable buffer format (50h)

Deste				В	it						
Byte	7	6	5	4	3	2	1	0			
0		_		Door	r, od						
1			Reserved								
2		_	4 OT!\ /E .	D 4DDDE00E0	DUEEED I ENG	ντι (n 2)					
3		ACTIVE IP ADDRESSES BUFFER LENGTH (n-3)									
4		Pasanyad									
6		Reserved									
7			N	IUMBER OF ET	HERNET PORT	S					
			List of Et	hernet port de	escriptors						
8		_	Ethor	net port varial	olo docorinto	r [firot]					
			Eulen	net port varial	ne descripto	ı lıngıl					
		i i									
		Ethernet port variable descriptor [last]									
n			Eulei	net port varial	ole descripto	ι [ιαδι]					

The following parameters apply:

### Byte Description

- 0 NUMBER OF ETHERNET PORTS The number of physical Ethernet ports functioning in the drive.
- 1-n List of Ethernet port descriptors. There will be one Ethernet port descriptor (see table 331) for each physical Ethernet port functioning in the drive. The size of each descriptor may vary from Ethernet port to Ethernet port.

The Ethernet port variable descriptor format is defined in table 331

Table 331 — Ethernet port variable descriptor format

5.4	Bit										
Byte	7	6	5	4	3	2	1	0			
0				DECODIDED	5NOTU (m. 4)						
1				DESCRIPTOR I	ENGTH (III-T)						
2		_		DODT ID							
3		PORT IDENTIFIER ————————————————————————————————————									
4		Reserved									
6											
7			NUM	BER OF SOCK	DDR STRUCT	URES					
		List of Eth	ernet socket a	address descr	iptors <u>(see 6</u>	<u>.6.21.3.1.1)</u>					
8		Ethernet socket address descriptor [first]									
				:							
m	_	Ethernet socket address descriptor [last]									

The following parameters apply:

### Byte Description

- 0 SIZE OF SACKADDR The size of each sockaddr. All sockaddr's are the same size
- 1 number of sockaddr The number of sockaddr structures returned.
- 2-n List of Ethernet socket address descriptors. Each Ethernet socket address descriptor describes one active IP address and has the RELATIVE SOCKET ADDRESS IDENTIFIER field set to zero. The Ethernet socket address descriptor is defined in <a href="Ethernet socket address descriptor">Ethernet socket address descriptor</a> (see 6.6.21.3.1.1 on page 398).

#### 6.7.2 Supported Buffers when the MODE field is 1Ch

The BUFFER ID field (see table 332) specifies the action that the device performs, and the parameter data, if any, that the device returns.

Table 332 — Error history BUFFER ID field

	Code	Description	Buffer offset	Error history I_T nexus constrained	Reference
	00h	Return error history directory	0000h	Yes	<u>6.7.2.1</u>
	01h	Return error history directory and create new error history snapshot	0000h	Yes	6.7.2.1
	02h	Return error history directory and establish new error history I_T_L nexus	0000h	No	6.7.2.1
	03h	Return error history directory, establish new error history I_T_L nexus, and create new error history snapshot	0000h	No	6.7.2.1
0	4h to 0Fh	Reserved		Yes	
1	0h to EFh	Return error history	0000h to FFFFh	Yes	6.7.2.3
	10h	Return current error history snapshot: A drive dump created at the most recent snapshot event (i.e. snapshot –no embedded dumps).			6.7.2.3.2
	11h	Return mini dump: A dump created at the most recent Send Diagnostic with Diagnostic ID 0163h.			6.7.2.3.3
	20h	Return emergency dump (e.g., a dump copied to flash by copy to flash request)			6.7.2.3.4
	21h to 28h	Return prioritized dump in flash (i.e., 21h is the highest priority and 28h is the lowest priority)			6.7.2.3.5
	29h to EEh	Reserved for future error histories			
	EFh	Return error history names list			6.7.2.3.6
F	0h to FDh	Reserved		Yes	
	FEh	Clear error history I_T_L nexus	Ignored	Yes	6.7.2.4
	FFh	Clear error history I_T_L nexus and release error history snapshot	Ignored	Yes	6.7.2.5

The command is terminated with CHECK CONDITION status with the sense key set to ILLEGAL REQUEST and the additional sense code set to OPERATION IN PROGRESS if the device receives a READ BUFFER command:

- a) with the MODE field set to 1Ch;
- b) with the BUFFER ID field set to a value that table 332 shows as constrained by error history I\_T\_L nexus;
- c) if an error history I\_T\_L nexus exists and the command is received from an I\_T\_L nexus that is different than that I\_T\_L nexus; and

d) an error history snapshot exists.

The BUFFER OFFSET field specifies the byte offset from the start of the buffer specified by the BUFFER ID field from which the device returns data. The application client should conform to the offset boundary requirements indicated in the READ BUFFER descriptor (see 5.2.17.3). If the buffer offset is not one of those shown in table 332 or the device is unable to accept the specified buffer offset, then the device terminates the READ BUFFER command with CHECK CONDITION status, with the sense key set to ILLEGAL REQUEST, and the additional sense code set to INVALID FIELD IN CDB.

# 6.7.2.1 MODE[1Ch] 00h to 03h: Error history directory

03h

Whenever allowed by established error history I\_T\_L nexus constraints (see 5.2.17.7.1), if any, all error history device actions return an error history directory (see table 334). Some error history device actions also discard the existing error history snapshot and create a new error history snapshot (see table 333). If there is no current error history snapshot and no minidump, then a new Current Error History Snapshot is forced.

	Establish new	Current error history snapshot				
BUFFER ID field	error history I_T_L nexus	Preserved (if exists)	Created			
00h	No_ <del>a</del>	Yes	No_b			
01h	No_ <sup>a</sup>	No	Yes			
02h	Yes	Yes	No_b			

Table 333 — Summary of error history directory device actions

<sup>&</sup>lt;sup>a</sup> If no error history I\_T\_L nexus is established, a new one is established.

b If no Current error history snapshot and no minidump exists, a new one is created.

The error history directory is defined in table 334.

Table 334 — Error history directory

Bit Byte	7	6	5	4	3	2	1	0	
0	(MSB)								
•••				T10 VENDOR	IDENTIFICATI	ON			
7								(LSB)	
8				VERSION					
9		Reserved EHS_RETRIEVED EHS_SOURCE							
10									
•••	Reserved								
29									
30	(MSB)	(MSB) DIRECTORY LENGTH (n-31)							
31				DIRECTORT	ENGTH (II-31	)		(LSB)	
				Error history	directory list	t			
32				Error histor	directory er	atry [firet]			
•••		•		(see table		itry [iiiSt]			
39				<u>(000 tablo</u>	<u>000)</u>				
				:					
n-7	Error history directory entry [last]								
n				(see table					

The following parameters apply:

# Byte Description

0-7 T10 VENDOR IDENTIFICATION: Same as standard inquiry

8 VERSION: 01h

9

# Bit Description

7-5 Reserved

4-3 EHS\_RETRIEVED (error history retrieved): indicates whether a clear error history device action has been requested for the error history snapshot. EHS\_RETRIEVED field is set to 10b when the error history snapshot is created.

	indial y dilapoi	iot io dicatos.
	Value	Description
	00b	No information
	01b	The error history I_T_L nexus has requested buffer ID FEh (i.e., clear error history I_T_L nexus) or buffer ID FFh (i.e., clear error history I_T_L nexus and release snapshot) for the current error history snapshot.
	10b	An error history I_T_L nexus has not requested buffer ID FEh (i.e., clear error history I_T_L nexus) or buffer ID FFh (i.e., clear error history I_T_L nexus and release snapshot) for the current error history snapshot.
	11b	Reserved
-1	EHS_SOURCE (	(error history source): indicates the source of the error history snapshot.
	Value	Description
	00b	The error history snapshot was created by the device and was not created due to processing a READ BUFFER command.
	01b	Error history snapshot was created due to processing of the current READ BUF-FER command
	10b	Error history snapshot was created due to processing of a previous READ BUF-FER command
	11b	Reserved
	CLR_SUP (clea	ar support): 0b

0 CI 10-29 Reserved

2-

30-31 DIRECTORY LENGTH: indicates the number of bytes that follow in the error history directory list.

32-n Error history directory list: contains an error history directory entry (see table 335) for each supported buffer ID in the range of 00h to EFh. The first entry is for buffer ID 00h and the other entries are in order of ascending buffer IDs. The supported buffer IDs are not necessarily contiguous.

# 6.7.2.2 Error history directory entry

An error history directory entry contains information about a buffer that is available to be read with the error history mode. One or more error history directory entries are listed in the error history directory list. The error history directory entry is defined in <u>table 335</u>.

Bit 7 5 6 4 3 2 1 0 **Bvte** SUPPORTED BUFFER ID 1 ••• Reserved 3 4 (MSB) ••• MAXIMUM AVAILABLE LENGTH 7 (LSB)

Table 335 — Error history directory entry

The following parameters apply:

#### Byte Description

0 SUPPORTED BUFFER ID: indicates the error history buffer ID associated with this entry.

- 1-3 Reserved.
- 4-7 MAXIMUM AVAILABLE LENGTH: indicates the current size of the data available for transfer from the buffer indicated in the SUPPORTED BUFFER ID field (i.e., the actual size of the data).

### 6.7.2.3 MODE[1Ch] 10h to FEh: Error history data buffer

# 6.7.2.3.1 MODE[1Ch] 10h to FEh: Error history data buffer overview

Unless an error is encountered, the device returns parameter data that contains the error history from the error history snapshot from the specified buffer at the specified buffer offset.

If the device receives a READ BUFFER command with the MODE field set to 1Ch from the established error history I\_T\_L nexus and the BUFFER ID field is set to a value that the error history directory (see 6.7.2.1) shows as not supported, then the command is terminated with CHECK CONDITION status with the sense key set to ILLEGAL REQUEST and the additional sense code set to INVALID FIELD IN CDB.

If the value in the BUFFER OFFSET field is not supported, the command is terminated with CHECK CONDITION status with the sense key set to ILLEGAL REQUEST and the additional sense code set to INVALID FIELD IN CDB.

The amount of error history in the specified buffer is less than or equal to the number of bytes indicated by the MAXIMUM AVAILABLE LENGTH field in the error history directory (see 6.7.2.1).

### 6.7.2.3.2 MODE[1Ch] 10h: Current error history snapshot

The current error history snapshot is the most recent dump either explicitly forced or implicitly created by internal algorithms. This buffer may or may not exist.

### 6.7.2.3.3 MODE[1Ch] 11h: Mini dump

The minidump is a dump written to volatile memory using Send Diagnostic Force Mini Dump (Diag 0163). This buffer may or may not exist.

#### 6.7.2.3.4 MODE[1Ch] 20h: Emergency dump

The emergency dump is a dump that was written to non-volatile memory using Send Diagnostic Write Dump to FLASH (Diag 0162) or written by internal algorithms. This buffer may or may not exist.

# 6.7.2.3.5 MODE[1Ch] 21h to 28h: Prioritized flash dump

The prioritized flash dumps are written to non-volatile memory and prioritized by internal algorithms that are designed to provide the optimum data capture for debug. The highest priority buffer is 21h and the lowest priority buffer is 28h. These buffers may or may not exist.

424

# 6.7.2.3.6 MODE[1Ch] EFh: Error history names list

The error history names list buffer(i.e., Buffer ID EFh) contains a list of error history buffer ID's and their associated names. The error history names list is defined in <u>table 336</u>.

Table 336 — MODE[1Ch] EFh: Error history names list format

Bit Byte	7	6	5	4	3	2	1	0		
0	(MSB)	NAMES LIST LENGTH (n-1)								
1								(LSB)		
		Error history names list								
2		Error history names entry [first]								
•••		•		(see table		y [iiiSt]				
37				4						
				:						
n-35				Error history	namac antr	v [loct]				
•••		•	Error history names entry [last] (see table 337)							
n				toco tablo	<del></del>					

The following parameters apply:

# Byte Description

- 0-1 NAMES LIST LENGTH: indicates the number of bytes that follow in the error history names list.
- 2-n Error history names list: contains an error history names entry (see table 337) for each supported buffer. An entry in this list does not mean that there is any data currently available in the buffer.

### 6.7.2.3.6.1 Error history names entry

An error history names entry contains the buffer ID and name associated with an error history buffer. The error history names entry is defined in <u>table 337</u>.

Table 337 — Error history names entry

Bit Byte	7	6	5	4	3	2	1	0		
0		SUPPORTED BUFFER ID								
1										
•••				Reserved						
3										
4	(MSB)									
•••				ERROR HISTO	RY NAME					
35								(LSB)		

The following parameters apply:

#### Byte Description

- O SUPPORTED BUFFER ID: indicates the error history buffer ID associated with this entry.
- 1-3 Reserved.

4-35 ERROR HISTORY NAME: contains a 32 character ASCII name assigned to the error history contained in the buffer associated with SUPPORTED BUFFER ID.

# 6.7.2.4 MODE[1Ch] FEh: Clear error history I\_T\_L nexus

If the BUFFER ID field is set to FEh, the device:

- a) clears the error history I\_T\_L nexus, if any; and
- b) does not transfer any data.

### 6.7.2.5 MODE[1Ch] FFh: Clear error history I\_T\_L nexus and release snapshot

If the BUFFER ID field is set to FFh, the device:

- a) clears the error history I\_T\_L nexus, if any,
- b) releases the error history snapshot, if any; and
- c) does not transfer any data.

# 6.8 Security Protocol Parameters (SPP)

Security Protocol parameters are used by the <u>SECURITY PROTOCOL IN (SPIN) - A2h (see 5.2.32 on page 168)</u> command and by the <u>SECURITY PROTOCOL OUT (SPOUT) - B5h (see 5.2.33 on page 169)</u> command.

The following terms are used in this clause:

TermDescriptionSPINSecurity Protocol InSPOUTSecurity Protocol Out

# 6.8.1 SPIN Pages (00h - Security Protocol Information)

See <u>SECURITY PROTOCOL IN (SPIN) - A2h (see 5.2.32 on page 168)</u> for a description of how to request this page. The Security Protocol Specific field of the SPIN CDB is defined by <u>Table 338</u>

Table 338 — SPIN (00h) Security Protocol Specific Definitions for Security Protocol 00h

Code	Reference
0000h	SPIN (00h[0000h]) - Supported Security Protocols List (see 6.8.1.1 on page 428)
0001h	SPIN (00h[0001h]) - Certificate Data (see 6.8.1.2 on page 429)
0002h	SPIN (00h[0002h]) - Security Compliance Information (see 6.8.1.3 on page 430)
0003h - FFFFh	Reserved

# 6.8.1.1 SPIN (00h[0000h]) - Supported Security Protocols List

See <u>SECURITY PROTOCOL IN (SPIN) - A2h (see 5.2.32 on page 168)</u> for a description of how to request this page. If the SECURITY PROTOCOL field is set to 00h and the SECURITY PROTOCOL SPECIFIC field is set to 0000h in a SECURITY PROTOCOL IN command, the parameter data shall have the format shown in <u>Table 339</u>.

Table 339 — SPIN (00h[0000h]) Supported Security Protocols List Structure

Dusta				E	Bit						
Byte	7 msb	6	5	4	3	2	1	0 lsb			
0		<b>.</b>									
5			Reserved								
6	(MSB)		SUPPORTED SECURITY PROTOCOL LIST LENGTH (m-7)								
7			SUPPORTED	SECURITY PRO	TOCOL LIST L	ENGTH (M-7)		(LSB)			
8			Sup	ported Secu	ity Protocol (	first)					
			:								
m		Supported Security Protocol (last)									

The Supported Security Protocol list contains the following supported security protocols:

Value	Description
00h	Security protocol information (see 6.8.1).
20h	Tape Data Encryption (see 6.8.2).

# 6.8.1.2 SPIN (00h[0001h]) - Certificate Data

See <u>SECURITY PROTOCOL IN (SPIN) - A2h (see 5.2.32 on page 168)</u> for a description of how to request this page. The drive certificate (if present) is provided in X.509 format via this interface (see SPC-4).

If the Security Protocol field is set to 00h and the Security Protocol Specific field is set to 0001h in a Security Protocol In command, the parameter data shall have the format shown in <u>Table 340</u>.

Table 340 — SPIN (00h[0001h]) - Certificate Data Structure

Disto				E	Bit						
Byte	7 msb	6	5	4	3	2	1	0 lsb			
0											
1			Reserved								
2	(MSB)		CERTIFICATE LENGTH (m-3) (LSB)								
3											
4											
m				CERTI	FICATE						

The following parameters apply:

- CERTIFICATE LENGTH The total length, in bytes, of the certificate that follows.
- CERTIFICATE The drive certificate set during manufacturing is returned.

### 6.8.1.3 SPIN (00h[0002h]) - Security Compliance Information

See <u>SECURITY PROTOCOL IN (SPIN) - A2h (see 5.2.32 on page 168)</u> for a description of how to request this page. The security compliance information describes this drives security compliance.

— WARNING — WARNING — WARNING —

This page returns information to assist locating potential security compliance information only. It does not indicate that the code or hardware is actually compliant with such certification or used in a manner consistent with such compliance.

— WARNING ———— WARNING ———

If the Security Protocol field is set to 00h and the Security Protocol Specific field is set to 0002h in a Security Protocol In command, the parameter data shall have the format shown in <u>Table 341</u>.

Table 341 — SPIN (00h[0002h]) - Security Compliance Information Structure

5.4				E	Bit					
Byte	7 msb	6	6 5 4 3 2 1							
0		050	LIDITY COMP	LANCE INFO		OTIL (000 00	24.0%\			
3		SEC	URITY COMPL	LIANCE INFO	RMATION LEN	GTH (000 02	21011)			
4	(MSB)		COMPLI	ANOE BEOOF	NOTOD TVDE	(0001b)				
5			COMPLI	ANCE DESCR	RIPTOR TYPE	(000 Th)		(LSB)		
6				D	d					
7				Res	erved					
8	(MSB)		COMPLIANCE DESCRIPTOR LENGTH (0000 0208h) (LSB)							
11										
12				RELATED	STANDARD					
13				OVERALL	SECURITY LE	VEL				
14										
19				Res	erved					
20	(MSB)		0011511							
147			COMPLIANO	CE DESCRIPT	OR HARDWAF	RE VERSION		(LSB)		
148	(MSB)									
275			COMPLIANCE DESCRIPTOR VERSION (LSB)							
276	(MSB)		0011711							
531			COMPLI	ANCE DESCR	IPTOR MODU	LE NAME		(LSB)		

The following parameters apply:

 SECURITY COMPLIANCE INFORMATION LENGTH - The total length, in bytes, of the compliance descriptors that follow.

- COMPLIANCE DESCRIPTOR TYPE The the format of the descriptor specific information. This field is set to 0001h to indicate Security requirements for cryptographic modules.
- COMPLIANCE DESCRIPTOR LENGTH The number of bytes in the compliance descriptor.
- RELATED STANDARD An ASCII data field that indicates the related standard described by this compliance descriptor.
- OVERALL SECURITY LEVEL An ASCII data field that indicates the FIPS 140 overall security level that is reported by NIST or CSEC.
- COMPLIANCE DESCRIPTOR HARDWARE VERSION Null terminated, null padded data that indicates the version number of the hardware in the module, as reported by NIST or CSEC.
- COMPLIANCE DESCRIPTOR VERSION Null terminated, null padded data that indicates the version number of the firmware or software in the module, as reported by NIST or CSEC.
- COMPLIANCE DESCRIPTOR MODULE NAME Null terminated, null padded data that indicates the name or identifier of the cryptographic module, as reported by NIST or CSEC.

# 6.8.2 SPIN Pages (20h - Tape Data Encryption)

See <u>SECURITY PROTOCOL IN (SPIN) - A2h (see 5.2.32 on page 168)</u> for a description of how to request this page. The <u>SECURITY PROTOCOL SPECIFIC</u> field specifies the type of report that the application client is requesting. See <u>SPIN (00h[0000h]) - Supported Security Protocols List (see 6.8.1.1 on page 428)</u> for the supported <u>SECURITY PROTOCOL SPECIFIC</u> field values.

# 6.8.2.1 SPIN (20h[0000h]) - Tape Data Encryption In Support Pages page

See <u>SECURITY PROTOCOL IN (SPIN) - A2h (see 5.2.32 on page 168)</u> for a description of how to request this page. Supported protocol specific in pages for protocol 20h are indicated above (see SSC-3).

Table 342 — SPIN (20h[0000h]) - Tape Data Encryption In Support Pages Structure

D. de		Bit										
Byte	7 msb	6 5 4 3 2 1										
0	(MSB)		(2221)									
1				PAGE COL	E (0000h)			(LSB)				
2	(MSB)		DAGE ( 5)(07) (7-2)									
3			PAGE LENGTH (n-3) (LSB)									
		Тар	e Data Encry	ption In Supp	ort page code	e list						
4	(MSB)		Tona Data	Enomination In	Cuppert per	anda (firat)						
5			Tape Data Encryption In Support page code (first)  (LSB)									
		:										
n-1	(MSB)		Tona Data	Enomention In	Cupport post	anda (last)						
n			Tape Data	Encryption In	Support page	e code (last)		(LSB)				

Table 343 on page 432 show which Tape Data Encryption In page codes are supported:

Table 343 — SPIN (20h[0000h]) - Tape Data Encryption In page codes (SECURITY PROTOCOL SPECIFIC values)

Page Code	Reference
0000h	SPIN (20h[0000h]) - Tape Data Encryption In Support Pages page (see 6.8.2.1 on page 432)
0001h	SPIN (20h[0001h]) - Tape Data Encryption Out Support Pages page (see 6.8.2.2 on page 433)
0010h	SPIN (20h[0010h]) - Data Encryption Capabilities page (see 6.8.2.3 on page 434)
0011h	SPIN (20h[0011h]) - Supported Key Formats page (see 6.8.2.4 on page 439)
0012h	SPIN (20h[0012h]) - Data Encryption Management Capabilities (see 6.8.2.5 on page 440)
0020h	SPIN (20h[0020h]) - Data Encryption Status page (see 6.8.2.6 on page 441)
0021h	SPIN (20h[0021h]) - Next Block Encryption Status page (see 6.8.2.7 on page 444)
0030h	<u>SPIN (20h[0030h]) - Random Number page (see 6.8.2.8 on page 448)</u>
0031h	SPIN (20h[0031h]) - Device Server Key Wrapping Public Key page (see 6.8.2.9 on page 449)

# 6.8.2.2 SPIN (20h[0001h]) - Tape Data Encryption Out Support Pages page

See <u>SECURITY PROTOCOL IN (SPIN) - A2h (see 5.2.32 on page 168)</u> for a description of how to request this page. Supported protocol specific out pages for protocol 20h are indicated above (see SSC-3).

Table 344 — SPIN (20h[0001h]) - Tape Data Encryption Out Support Pages Structure

D. d.		Bit									
Byte	7 msb	6	5	4	3	2	1	0 lsb			
0	(MSB)		D O- d- (0004h)								
1			Page Code (0001h) (LSB)								
2	(MSB)		Describeration (n. 2)								
3			Page Length (n-3) (LSB)								
		Таре	e Data Encryp	otion Out Sup	port page cod	le list					
4	(MSB)	_	Tono Doto E	Enaruption Ou	t Cupport pag	ua aada (firat)					
5			Tape Data E	пстурион О	t Support pag	e code (ilisi)		(LSB)			
		:									
n-1	(MSB)		Tono Doto F	Enaryption Ou	t Cupport pag	ua aada (laat)					
n			rape Data E	ты уриоп О	t Support pag	je code (last)		(LSB)			

Table 345 on page 433 show which Tape Data Encryption Out page codes are supported:

Table 345 — Tape Data Encryption Out page codes

Page Co	ode	Reference
0010	h	SPOUT (20h[0010h]) - Set Data Encryption (see 6.8.3.1 on page 451)

433

# 6.8.2.3 SPIN (20h[0010h]) - Data Encryption Capabilities page

See SECURITY PROTOCOL IN (SPIN) - A2h (see 5.2.32 on page 168) for a description of how to request this page. Table 97 specifies the format of the Data Encryption Capabilities page.

Table 346 — SPIN (20h[0010h]) - Data Encryption Capabilities page

Deste	Bit							
Byte	7 msb	6	5	4	3	2	1	0 lsb
0	(MSB)	PAGE CODE (0010h) (LSB)						
1						(LSB)		
2	(MSB)	PAGE LENGTH (n-3) (LSB)						
3								
4		Reserved EXTDECC CFG_P				G_P		
5		Reserved						
19								
Data Encryption Algorithm descriptor list								
20		Data Francisco Alaccida de acidas (final)						
		Data Encryption Algorithm descriptor (first)						
		:						
		Data Francisian Algorithm descriptor (lock)						
n		Data Encryption Algorithm descriptor (last)						

The Data Encryption Capabilities page description follows:

#### Description Byte

0-1 PAGE CODE: 0010h

2-3 PAGE LENGTH: The number of bytes that follow

4

#### Bit **Description**

7-4 Reserved

3-2

5-19 Reserved

1-0

20-n Data Encryption Algorithm descriptor list. There is one <u>Data Encryption Algorithm Descriptor - Standard Encryption (see 6.8.2.3.1 on page 435)</u> for each supported Data Encryption Algorithm (i.e., one for each generation that supports encryption).

Byte	Description
20-43	Data Encryption Algorithm descriptor [First], if any
44-67	Data Encryption Algorithm descriptor [Second], if any
68-91	Data Encryption Algorithm descriptor [Third], if any

Table 347 — Data Encryption Algorithm descriptor list returned

Data Encryption Algorithm descriptor	On Ultrium 4 drives	On Ultrium 5 drives	On Ultrium 6 drives	On Ultrium 7 drives
First (bytes 20-43)	ALGORITHM INDEX (01h)	ALGORITHM INDEX (01h)	ALGORITHM INDEX (01h)	ALGORITHM INDEX (02h)
Second (bytes 44-67)	N/A	ALGORITHM INDEX (02h)	ALGORITHM INDEX (02h)	ALGORITHM INDEX (03h)
Third (bytes 68-91)	N/A	N/A	ALGORITHM INDEX (03h)	ALGORITHM INDEX (04h)

# 6.8.2.3.1 Data Encryption Algorithm Descriptor - Standard Encryption

The Standard Encryption Algorithm Descriptor is shown in table 348

Table 348 — Data Encryption Algorithm Descriptor - Standard Encryption Structure

_	Bit							
Byte	7 msb	6	5	4	3	2	1	0 lsb
0				ALGORITI	HM INDEX			
1		Reserved						
2	(MSB)	DESCRIPTOR LENGTH (0014h)						
3				JESCRIPTOR LE	INGTH (001411)	)		(LSB)
4	AVFMV	SDK_C (0b) MAC_C (1b) DELB_C (1b) DECRYPT_C (10b) ENCRYPT_			r_c (10b)			
5	AVF	CLP	NONCE_	_c (11b)	KADF_C (1b)	VCELB_C (1b)	UKADF (0b)	AKADF (0b)
6	(MSB)	- NAA VINALINA	LINIALITUENTIC	ATED KEY ACC	OCIATED DATA	(II KAD) BYTE	· (0020b)	
7		MAXIMUM UNAUTHENTICATED KEY-ASSOCIATED DATA (U-KAD) BYTES (0020h) (LSB)						
8	(MSB)	- 144	/INALINA ALITLIENI	TICATED KEV A	CCCCIATED DA	TA (A KAD) DV	TEO	
9		MAXIMUM AUTHENTICATED KEY-ASSOCIATED DATA (A-KAD) BYTES (LSB)						
10	(MSB)	LOGICAL BLOCK ENCRYPTION KEY SIZE (0020h)						
11			LOGICAL	BLOCK ENCRY	TION KET SIZE	(002011)		(LSB)
12	DKAD_6	_C (11b)				EAREM (1b)		
13		Reserved						
14								
15								
16		Pagament						
19		Reserved						
20	(MSB)	SECURITY ALGORITHM CODE (0001_0014h) (LSB)						
23					(LSB)			

Each Data Encryption Algorithm Descriptor is specified by its ALGORITHM INDEX. For fields whose value changes depending on the ALGORITHM INDEX, the value is specified in the description of that field. The Data Encryption Algorithm Descriptor - Standard Encryption Structure description follows:

# Byte Description

- O ALGORITHM INDEX: The index of the Data Encryption Algorithm being described. Used by the SECURITY PROTOCOL OUT command Set Data Encryption page to select this algorithm.
- 1 Reserved
- 2-3 DESCRIPTOR LENGTH:

4

#### Bit Description

AVFMV (algorithm valid for mounted volume): Specifies if the algorithm selected by the ALGORITHM INDEX is valid for the currently mounted volume.

vait	ie Description
0b	There is no volume mounted or the algorithm being described is not valid for the
	currently mounted volume.
1b	A volume is currently mounted and the encryption algorithm being described is
	valid for that volume.
SDK	C (supplemental decryption key capable):

- 6 SDK\_C (supplemental decryption key capable):
- 5 MAC\_C (message authentication code capable):
- 4 DELB\_C (distinguish encrypted logical block capable):
- 3-2 DECRYPT\_C (decryption capabilities):

Value	Description
00b	No capability — The drive has no logical block decryption capability using this algorithm. This value shall be returned if the specified algorithm is disabled.
01b	Software capable — Not Supported.
10b	Hardware capable — The drive has the ability to decrypt logical blocks using this algorithm in hardware.
11b	Capable with external control — The drive has the capability to decrypt logical blocks using this algorithm, but control of the logical block encryption parameters by this device server is prevented.

1-0 ENCRYPT\_C (encryption capabilities):

	noryphon capabilities).
Value	Description
00b	No capability — The drive has no logical block encryption capability using this algorithm. This value shall be returned if the specified algorithm is disabled.
01b	Software capable — Not Supported.
10b	Hardware capable — The drive has the ability to encrypt logical blocks using this algorithm in hardware.
11b	Capable with external control — The drive has the capability to encrypt logical blocks using this algorithm, but control of the logical block encryption parameters by this device server is prevented.

5

Bit	Description

7-6 AVFCLP (algorithm valid for current logical position): Specifies if the encryption algorithm being

specified is v	alid for writing to the mounted volume at the current logical position
Value	Description
00b	Current logical position is not applicable to the encryption algorithm validity or no volume is loaded.
01b	The encryption algorithm being specified is not valid for writing to the mounted volume at the current logical position.
10b	The encryption algorithm being specified is valid for writing to the mounted volume at the current logical position.
11b	Reserved

5-4 NONCE C:

Value Description 00b-10b Not Supported.

11b The drive supports all or part of the nonce value provided by the application client. If the Set Data Encryption page that enables encryption does not include a nonce value descriptor, the drive generates the nonce value.

- 3 KADF\_c (KAD format capable): Indicates if the drive is KAD format capable, that is, it supports: A) the ENCRYPTION PARAMETERS KAD FORMAT field in the Data Encryption Status page (see
  - 6.8.2.6):
  - B) the NEXT BLOCK KAD FORMAT field in the Next Block Encryption Status page (see 6.8.2.7); and
  - C) the KAD FORMAT field in the Set Data Encryption page (see 6.8.3.1).

Value	Description
0b	The drive is not KAD format capable as described herein.
1b	The drive is KAD format capable as described herein.

- 2 VCELB C (volume contains encrypted logical blocks capable):
- UKADF (U-KAD fixed): Specifies restrictions on the length of the U-KAD, if present. 1

#### Value Description 0b If the value in the MAXIMUM UNAUTHENTICATED KEY-ASSOCIATED DATA BYTES field is non-zero, then the length of the U-KAD, if present in the parameter data for a SECURITY PROTOCOL OUT command, shall be a value between one and the value in the MAXIMUM UNAUTHENTICATED KEY-ASSOCIATED DATA BYTES field. The length of the U-KAD in the parameter data for a SECURITY PROTOCOL 1b OUT command shall be MAXIMUM UNAUTHENTICATED KEY-ASSOCIATED DATA BYTES in length and the MAXIMUM UNAUTHENTICATED KEY-ASSOCIATED DATA BYTES field shall contain a non-zero value.

0 AKADF (A-KAD fixed): Specifies restrictions on the length of the A-KAD, if present.

Value **Description** 0b If the value in the MAXIMUM AUTHENTICATED KEY-ASSOCIATED DATA BYTES field is non-zero, then the length of the A-KAD, if present in the parameter data for a SECURITY PROTOCOL OUT command, shall be a value between one and the value in the MAXIMUM AUTHENTICATED KEY-ASSOCIATED DATA BYTES field. The length of A-KAD in the parameter data for a SECURITY PROTOCOL OUT 1b

command shall be MAXIMUM AUTHENTICATED KEY-ASSOCIATED DATA BYTES in length and the MAXIMUM AUTHENTICATED KEY-ASSOCIATED DATA BYTES field shall contain a non-zero value.

6-7 MAXIMUM UNAUTHENTICATED KEY-ASSOCIATED DATA BYTES:

> Indicates the maximum size of the unauthenticated key-associated data supported by the device server for this algorithm.

#### 8-9 MAXIMUM AUTHENTICATED KEY-ASSOCIATED DATA BYTES:

Indicates the maximum size of the authenticated key-associated data supported by the device server for this algorithm. The value for each algorithm follows.

#### ALGORITHM

INDEX	Value
01h	000Ch
02h	003Ch
03h	003Ch

#### 10-11 LOGICAL BLOCK ENCRYPTION KEY SIZE:

Indicates the size in bytes of the logical block encryption key required by the algorithm.

12

#### Bit Description

7-6 DKAD C (decryption KAD capabilties):

> Indicates the decryption capabilities when the DECRYPTION MODE field of the Set Data Encryption page (see 6.8.3.1) is set to DECRYPT or MIXED.

Value	Description
00b	not specified — No capabilities are specified.
01b	KAD Required — Not Supported.
10b	KAD Not Allowed — Not Supported.
11b	KAD Capable — The drive accepts U-KAD and/or A-KAD provided by the appli-
	cation client with the Set Data Encryption page, but is not required.

5-4 EEMC\_C (external encryption mode control capabilities):

> Indicates the capabilities the encryption algorithm provides to the application client to control write operations that transfer encrypted logical blocks while the encryption mode is set to EXTERNAL.

Value	Description
00b	No capabilities are specified.
01b	Not Supported.
10b	The encryption algorithm allows write operations in EXTERNAL encryption mode.
	The device server does act as a KCDLU for this encryption algorithm.
11b	Reserved

3-1 RDMC\_C (raw decryption mode control capabilities):

> Indicates the capabilities the encryption algorithm provides to the application client to control read operations that access encrypted logical blocks while the decryption mode is set to RAW.

Value	Description
000b	No capabilities are specified.
001b	Not Supported.
010b-011b	Reserved
100b	Not Supported.
101b	The encryption algorithm enables read operations in RAW mode by default and allows the application client to control RAW reads via the RDMC field in the Set Data Encryption page (see 6.8.3.1). The device server acts as a KCSLU for this encryption algorithm.
110b	Not Supported.
111b	Not Supported.
EAREM (encry	ption algorithm records encryption mode):
Value	Description

0

	2000p
0b	The encryption mode is not recorded with each encrypted logical block.
1b	The encryption mode is recorded with each encrypted logical block.

- 13 Reserved
- 14-15 MSDK\_COUNT (maximum supplemental decryption key count):
- 16-19 Reserved

438

20-23 SECURITY ALGORITHM CODE:

Contains a security algorithm code (see SPC-4).

# 6.8.2.4 SPIN (20h[0011h]) - Supported Key Formats page

See <u>SECURITY PROTOCOL IN (SPIN) - A2h (see 5.2.32 on page 168)</u> for a description of how to request this page.

The structure of the Supported Key Formats page is shown in <u>Table 349 on page 439</u>

Table 349 — SPIN (20h[0011h]) - Supported Key Formats page Structure

5.4	Bit									
Byte	7 msb	6	5	5 4 3 2 1 0						
0	(MSB)		(22.111)							
1		PAGE CODE (0011h) (LSB)						(LSB)		
2	(MSB)									
3		PAGE LENGTH (n-3) (LSB)								
	Supported Key Format list									
4		Supported Key Format [first]								
		:								
n	Supported Key Format [last]									

Table 350 — Supported Key Formats

Key Format	Reference
00h	Plaintext Key Format (00h) (see 6.8.2.4.1 on page 439)
02h	Key wrapped by device server public key. See SSC.  Note - The device supports only RSA 2048 public key wrapping. The device allows SIGNATURE to be sent, but does not perform signature verification.

# 6.8.2.4.1 Plaintext Key Format (00h)

The Plaintext Key Format structure is shown in Table 351 on page 439

Table 351 — KEY FORMAT 00h - Plaintext Key Format Structure

Dusta				E	Bit			
Byte	7 msb	6	5	4	3	2	1	0 lsb
0								
n		•		K	EY			

# 6.8.2.5 SPIN (20h[0012h]) - Data Encryption Management Capabilities

See <u>SECURITY PROTOCOL IN (SPIN) - A2h (see 5.2.32 on page 168)</u> for a description of how to request this page.

Table 352 on page 440 specifies the format of the Data Encryption Management Capabilities page.

Table 352 — SPIN (20h[0012h]) - Data Encryption Management Capabilities page

D. d.				E	Bit				
Byte	7 msb	6	6 5 4 3 2 1						
0	(MSB)		PAGE CODE (0012h)						
1				PAGE COL	DE (001211)			(LSB)	
2	(MSB)			DAGELENG	Tu (000ab)				
3			PAGE LENGTH (000ch)						
4		Reserved							
5		Reserved CKOD_C CKORP_C (1b) (1b)						CKORL_C (1b)	
6		Reserved							
7		Reserved AITN_C (1b) LOCAL_C (1b)						PUBLIC_C (1b)	
8			Personal						
15			Reserved						

#### 6.8.2.6 SPIN (20h[0020h]) - Data Encryption Status page

Table 353 specifies the format of the Data Encryption Status page

This is a query of information which was set with Security Protocol Out 0010h - Set Data Encryption and does not reflect the actual state of the medium itself or of any data on medium.

Bit **Byte** 5 3 2 7 msb 6 4 1 0 Isb 0 (MSB) PAGE CODE (0020h) (LSB) 1 2 (MSB) PAGE LENGTH (n-3) 3 (LSB) 4 I T NEXUS SCOPE LOGICAL BLOCK ENCRYPTION SCOPE Reserved 5 **ENCRYPTION MODE** 6 **DECRYPTION MODE** 7 ALGORITHM INDEX 8 (MSB) KEY INSTANCE COUNTER 11 (LSB) 12 Reserved PARAMETERS CONTROL **VCELB CEEMS RDMD** 13 **ENCRYPTION PARAMETERS KAD FORMAT** 14 (MSB) ASDK\_COUNT (0000h) 15 (LSB) 16 Reserved 23 Key-associated data descriptor list 24 Key-associated data descriptor (first) Key-associated data descriptor (last)

Table 353 — SPIN (20h[0020h]) - Data Encryption Status page

The I\_T NEXUS SCOPE field shall contain the value from the logical block encryption scope saved for the I\_T\_L nexus through which this command was received.

The LOGICAL BLOCK ENCRYPTION SCOPE field shall contain the value from the logical block encryption scope in the saved logical block encryption parameters currently associated with the I\_T\_L nexus on which this command was received.

The ENCRYPTION MODE field shall contain the value from the encryption mode in the saved logical block encryption parameters currently associated with the I\_T\_L nexus on which this command was received.

The DECRYPTION MODE field shall contain the value from the decryption mode in the saved logical block encryption parameters currently associated with the I\_T\_L nexus on which this command was received.

The ALGORITHM INDEX field shall contain the value from the algorithm index in the saved logical block encryption parameters currently associated with the I\_T\_L nexus on which this command was received. If the ENCRYPTION MODE field and the DECRYPTION MODE field are both set to DISABLE, the value in the ALGORITHM INDEX field is undefined.

The KEY INSTANCE COUNTER field contains the value of the logical block encryption parameters key instance counter assigned to the logical block encryption key indicated by the LOGICAL BLOCK ENCRYPTION SCOPE field value.

The PARAMETERS CONTROL field specifies information on how the logical block encryption parameters are controlled. The PARAMETERS CONTROL field values are specified in table 354.

Code	Description
000b	Logical block encryption parameters control is not reported. This value is returned on Ultrium 4 devices
001b	Logical block encryption parameters are not exclusively controlled by external data encryption control. This value is returned when in AME encryption mode.
010b	Logical block encryption parameters are exclusively controlled by the sequential-access device server.
011b	Logical block encryption parameters are exclusively controlled by the automation/drive interface device server.  This value is returned when in LME or ADC Controlled encryption mode.
100b	Not supported.
101b-111b	Reserved

Table 354 — PARAMETERS CONTROL field

A volume contains encrypted logical blocks (VCELB) bit set to one indicates that the mounted volume contains an encrypted logical block. A VCELB bit set to zero indicates that either:

- a) the mounted volume does not contain any encrypted logical blocks;
- b) there is no volume mounted; or
- c) the VCELB\_C bit in the Data Encryption Capabilities page is set to zero.

The raw decryption mode disabled (RDMD) bit shall be set to one if the device entity is configured to mark each encrypted record as disabled for raw read operations based on the RDMC\_C value and the raw decryption mode disable parameter in the saved logical block encryption parameters currently associated with the I\_T\_L nexus on which the command was received.

The check external encryption mode status (CEEMS) field shall contain the value from the check external encryption mode parameter in the saved logical block encryption parameters currently associated with the I\_T\_L nexus on which the command was received.

The ENCRYPTION PARAMETERS KAD FORMAT field shall contain the value from the KAD\_FORMAT in the saved logical block encryption parameters currently associated with the I\_T\_L nexus on which this command was received. If the encryption algorithm specified in the ALGORITHM INDEX field reports a KADF\_C bit set to zero, then the ENCRYPTION PARAMETERS KAD FORMAT field shall be set to zero.

The available supplemental decryption key count (ASDK\_COUNT) field shall bet set to zero because the device server is not capable of supporting supplemental decryption keys.

If the ENCRYPTION MODE field and the DECRYPTION MODE field are both set to DISABLE, the key-associated data descriptors list shall not be included in the page.

If either the ENCRYPTION MODE field or the DECRYPTION MODE field is set to a value other than DISABLE, the key-associated data descriptors list shall include Tape Data Encryption descriptors describing attributes assigned to the logical block encryption key defined by the I\_T NEXUS SCOPE and LOGICAL BLOCK ENCRYPTION SCOPE fields at the time the logical block encryption key was established in the device entity (see "Key-Associated Data (KAD) Descriptors" on page 454). If more than one key-associated data descriptor is included, they shall be in increasing numeric order of the value in the KEY DESCRIPTOR TYPE field. Descriptors shall be included as defined by the following paragraphs.

An unauthenticated key-associated data descriptor shall be included if an unauthenticated key-associated data descriptor was included when the logical block encryption key was established in the device entity. The AUTHENTICATED field is reserved. The KEY DESCRIPTOR field shall contain the U-KAD value associated with the logical block encryption key.

An authenticated key-associated data descriptor shall be included if an authenticated key-associated data descriptor was included when the logical block encryption key was established in the device entity. The AUTHENTICATED field is reserved. The KEY DESCRIPTOR field shall contain the A-KAD value associated with the logical block encryption key.

A nonce value descriptor shall be included if a nonce value descriptor was included when the logical block encryption key was established in the device entity. The AUTHENTICATED field is reserved. The KEY DESCRIPTOR field shall contain the nonce value associated with the logical block encryption key. A nonce value descriptor may be included if no nonce value descriptor was included when the logical block encryption key was established in the device entity. In this case, the KEY DESCRIPTOR field shall be set to the nonce value established by the device entity for use with the selected logical block encryption key.

A metadata key-associated data descriptor shall be included if the metadata key-associated data descriptor was included when the logical block encryption parameters were established. The KEY DESCRIPTOR field shall contain the M-KAD value associated with the logical block encryption key.

### 6.8.2.7 SPIN (20h[0021h]) - Next Block Encryption Status page

See <u>SECURITY PROTOCOL IN (SPIN) - A2h (see 5.2.32 on page 168)</u> for a description of how to request this page.

NOTE 64 - Next block encryption status may not be available in all situations. When it is not known appropriate values are returned as per the standard. In most situations next block information is available during read operations when read ahead is being performed. This is automatically managed by the device.

Table 355 specifies the format of the Next Block Encryption Status page

Table 355 — SPIN (20h[0021h]) - Next Block Encryption Status page

Disto	Bit									
Byte	7 msb	6	6 5 4 3 2 1							
0	(MSB)		(00041)							
1				PAGE COL	E (0021h)			(LSB)		
2	(MSB)	_		DAGE LEN	OTU (n. 2)					
3				PAGE LEN	Gтн (n-3)			(LSB)		
4	(MSB)	_		1 001041 001	FOT AU MADED					
11				LOGICAL OBJ	ECT NUMBER			(LSB)		
12		COMPRESSION	N STATUS (0h)	ı		ENCRYPTI	ON STATUS			
13				ALGORIT	HM INDEX					
14			Rese	erved			EMES	RDMDS		
15		NEXT BLOCK KAD FORMAT								
	Key-associated data descriptor list									
16		_	Key-associated data descriptor [first]							
	·	·	·	·	·	•	·	·		
		_	Kov	associated da	ata descriptor	[loct]				
n			Ney-		iia uescripior	[iasi]				

The LOGICAL OBJECT NUMBER field contains the logical object identifier of the next logical object.

The COMPRESSION STATUS field values are specified in table 356.

Table 356 — COMPRESSION STATUS field

Code	Description								
0h	The device entity is incapable of determining if the logical object referenced by the LOGICAL OBJECT NUMBER field has been compressed.								
1h	Not Supported.								
2h	Not Supported.								
3h	Not Supported.								
4h	Not Supported.								
5h-Fh	Reserved								

The ENCRYPTION STATUS field values are specified in table 357.

Table 357 — ENCRYPTION STATUS field

Code	Description
0h	The device entity is incapable of determining if the logical object referenced by the LOGICAL OBJECT NUMBER field has been encrypted.
1h	The device entity is capable of determining if the logical object referenced by the LOGICAL OBJECT NUMBER field has been encrypted, but is not able to at this time. Possible reasons are: the next logical block has not yet been read into the buffer; there was an error reading the next logical block; or there are no more logical blocks (i.e., end-of-data).
2h	The device entity has determined that the logical object referenced by the LOGICAL OBJECT NUMBER field is not a logical block.
3h	The device entity has determined that the logical object referenced by the LOGICAL OBJECT NUMBER field is not encrypted.
4h	The device entity has determined that the logical object referenced by the LOGICAL OBJECT NUMBER field is encrypted by an algorithm that is not supported by this device server. The values in the key-associated data descriptors list contain information pertaining to the encrypted logical block.
5h	The device entity has determined that the logical object referenced by the LOGICAL OBJECT NUMBER field is encrypted by an algorithm that is supported by this device server. The values in the ALGORITHM INDEX field and key-associated data descriptors list contain information pertaining to the encrypted logical block.
6h	The device entity has determined that the logical object referenced by the LOGICAL OBJECT NUMBER field is encrypted by an algorithm that is supported by this device server, but the device entity is either not enabled to decrypt or does not have the correct logical block encryption key or nonce value to decrypt the encrypted logical block.
7h-Fh	Reserved

The ALGORITHM INDEX field indicates which of the encryption algorithms reported by the SECURITY PROTOCOL IN command Data Encryption Capabilities page was used to encrypt the logical block. For values in the ENCRYPTION STATUS field (see table 357) that do not indicate the ALGORITHM INDEX field is valid, the algorithm index is undefined.

The encryption mode external status (EMES) bit shall be set to one if:

- a) the ENCRYPTION STATUS field is set to either 5h or 6h;
- b) the EAREM bit in the algorithm descriptor (see 6.8.2.3) for the algorithm specified by the ALGORITHM INDEX field is set to one; and
- the next logical block is marked as having been written to the medium while the encryption mode was set to EXTERNAL.

The EMES bit shall be set to zero if:

- a) the ENCRYPTION STATUS field is set to a value other than 5h or 6h;
- b) the EAREM bit in the algorithm descriptor (see 6.8.2.3) for the algorithm specified by the ALGORITHM INDEX field is set to zero; or
- c) the next logical block is marked as having been written to the medium while the encryption mode was set to ENCRYPT.

The raw decryption mode disabled status (RDMDS) bit shall be set to one if:

- a) the device server supports raw decryption mode;
- b) the ENCRYPTION STATUS field is set to either 5h or 6h; and
- c) the next logical block is marked as disabled for raw decryption mode operations.

The RDMDS bit shall be set to zero if:

- a) the device server does not support raw decryption mode;
- b) the ENCRYPTION STATUS field is set to a value other than 5h or 6h; or
- c) the next logical block is not marked as disabled for raw decryption mode operations.

If the value in the ENCRYPTION STATUS field indicates that the next logical block is encrypted by a supported algorithm, then the NEXT BLOCK KAD FORMAT field shall contain the KAD\_FORMAT logical block encryption parameters associated with the encrypted logical block. If the value in the ENCRYPTION STATUS field does not indicate that the next logical object is an encrypted logical block, then the NEXT BLOCK KAD FORMAT field shall be ignored. If the encryption algorithm specified in the ALGORITHM INDEX field reports a KADF\_C bit set to zero, then the NEXT BLOCK KAD FORMAT field shall be set to zero.

If the value in the ENCRYPTION STATUS field indicates that the next logical block is encrypted by a supported algorithm, then the device server shall include in the key-associated data descriptor list (see <u>"Key-Associated Data (KAD) Descriptors" on page 454</u>) all key-associated data that is associated with the encrypted logical block. If more than one key-associated data descriptor is included in the Next Block Encryption Status page, then they shall be in increasing numeric order of the value in the KEY DESCRIPTOR TYPE field.

An unauthenticated key-associated data descriptor (see 6.8.3.2.1) shall be included if any unauthenticated key-associated data is associated with the next logical block. The AUTHENTICATED field shall be set to 1. The KEY DESCRIPTOR field shall contain the U-KAD value associated with the encrypted logical block.

An authenticated key-associated data descriptor (see 6.8.3.2.2) shall be included if any authenticated key-associated data is associated with the next logical block. The AUTHENTICATED field shall indicate the status of the authentication done by the device entity. The KEY DESCRIPTOR field shall contain the A-KAD value associated with the encrypted logical block.

The Next Block Encryption Status page may include a nonce value descriptor (see 6.8.3.2.3). If a nonce value descriptor is included, then the AUTHENTICATED field shall indicate the status of the authentication done by the device entity. The KEY DESCRIPTOR field shall contain the nonce value associated with the encrypted logical block.

A metadata key-associated data descriptor (see <u>6.8.3.2.4</u>) shall be included if any M-KAD is associated with the next logical block and the decryption mode is set to RAW in the saved logical block encryption parameters currently associated with the I\_T\_L nexus on which this command was received. The KEY DESCRIPTOR field shall contain the M-KAD value associated with the encrypted logical block.

The following table indicates valid combinations of record status, Decryption Mode and returned Key-Associated Descriptors reflecting the currently setup state of the device.

**Key-Associated Descriptors** Record Decryption Read aKAD Meta Status **Notes** uKAD Nonce Information Mode Data (DKi) data 00h 02h 01h 03h Unknown ? 1h 0 O n/a any n/a Filemark 2h n/a n/a n/a n/a n/a may be unknown any **EOD** 0 0 any n/a 2h n/a n/a may be unknown Error 1h 0 0 may be unknown any n/a n/a n/a 0h Disable С Cleartext 3h n/a n/a n/a n/a Cleartext Ε 1h Raw 3h n/a n/a n/a n/a not readable Cleartext Ε 3h 2h Decrypt n/a n/a n/a n/a not readable

n/a

1: Data is decrypted

Notes:

n/a

n/a

n/a

Table 358 — SPIN (20h[0021h]) - KAD Parameters by Mode

Legend:

Y: element is required

Cleartext

O: element is optional

N: element is not present

n/a: not applicable (element is not present)

3h Mixed

С

3h

C: cleartext (not encrypted)

R: raw (compressed encoded/encrypted)

E: error condition, record cannot be read

446

Table 358 — SPIN (20h[0021h]) - KAD Parameters by Mode

				Key-	Associate	d Descrip	tors	
Record Information	Decryption Mode	Read Data	Status	uKAD 00h	aKAD (DKi) 01h	Nonce 02h	Meta data 03h	Notes
Encrypted	0h Disable	Е	1h	0	0	N	N	not readable
Encrypted	1h Raw	R	4h 5h	N	N	N	Υ	
Encrypted	2h Decrypt	C <sup>1</sup>	or	0	0	N	N	
Encrypted	3h Mixed	C <sup>1</sup> 6h		0	0	N	N	
Legend: Y: element is required O: element is optional N: element is not present n/a: not applicable (element is not present) C: cleartext (not encrypted) R: raw (compressed encoded/encrypted) E: error condition, record cannot be read				Notes: 1: Data is	decrypted			

### 6.8.2.7.1 Key-Associated Data (KAD) Descriptors

See <u>"Key-Associated Data (KAD) Descriptors" on page 454</u>

### 6.8.2.8 SPIN (20h[0030h]) - Random Number page

<u>Table 359</u> specifies the format of the Random Number page.

Table 359 — SPIN (20h[0030h]) Random Number page

Duta	Bit									
Byte	7 msb	6	5	5 4 3 2		1	0 lsb			
0	(MSB)		PAGE CODE (0030h) (LSB)							
1		•								
2	(MSB)		PAGE LENGTH (32) (LSB)							
3		•					(LSB)			
4	(MSB)									
35		•		RANDOM	NUMBER			(LSB)		

The RANDOM NUMBER field contains a secure random number, suitable for use as a random nonce, that is generated by the device server using a source of entropy available within the device. Each request for the Random Number page generates a new secure random number for the RANDOM NUMBER field.

#### 6.8.2.9 SPIN (20h[0031h]) - Device Server Key Wrapping Public Key page

<u>Table 359</u> specifies the format of the Device Server Key Wrapping Public Key page. This page returns the drive's key wrapping public key. The device supports only RSA 2048 public key wrapping.

Table 360 — SPIN (20h[0031h]) Device Server Key Wrapping Public Key page

Desta		Bit						
Byte	7 msb	6	5	4	3	2	1	0 lsb
0	(MSB)		PAGE CODE (0031h)					
1								
2	(MSB)		/					
3			PAGE LENGTH (n-3) (LS					(LSB)
4	(MSB)		(20202021)					
7			PC	PUBLIC KEY TYPE (00000000h)				
8	(MSB)		DUD	PUBLIC KEY FORMAT (0000000h)				
11			PUB					(LSB)
12	(MSB)			PUBLIC KEY LENGTH (n-13)				
13								(LSB)
14	(MSB)			DUDU	O KEV			
n				PUBLI	U KEY			(LSB)

#### Byte Description

- 0-1 PAGE CODE: 0031h
- 2-3 PAGE LENGTH: The number of bytes that follow
- 4-7 PUBLIC KEY TYPE: The type of public key in the PUBLIC KEY field. This is set to 00000000h to indicated RSA 2048
- 8-11 PUBLIC KEY FORMAT: This field depends on the public key type. This is set to 00000000h to indicate RSA 2048.
- 12-13 PUBLIC KEY LENGTH: The length of the public key.
- 14-n PUBLIC KEY: This field depends on the public key type.

### 6.8.3 SPOUT Pages (20h - Tape Data Encryption security protocol)

See <u>SECURITY PROTOCOL OUT (SPOUT) - B5h (see 5.2.33 on page 169)</u> for a description of how to send this page.

The Security Protocol Specific field (see <u>Table 124, "SECURITY PROTOCOL OUT B5h CDB," on page 169</u>) specifies the type of page that the application client is sending. <u>Table 361</u> shows supported values.

Table 361 — SPOUT (20h) - Security Protocol Specific Definitions for Security Protocol 20h

Page Code	Reference
0010h	SPOUT (20h[0010h]) - Set Data Encryption (see 6.8.3.1 on page 451)

### 6.8.3.1 SPOUT (20h[0010h]) - Set Data Encryption

See <u>SECURITY PROTOCOL OUT (SPOUT) - B5h (see 5.2.33 on page 169)</u> for a description of how to send this page.

<u>Table 362</u> specifies the format of the Set Data Encryption page.

Table 362 — SPOUT (20h[0010h]) - Set Data Encryption page

Deste		Bit							
Byte	7 msb	6	5	4	3	2	1	0 lsb	
0	(MSB)	(MSB) PAGE CODE (0010h)							
1				PAGE COL	E (UUTUN)			(LSB)	
2	(MSB)	_		DACELEN	GТН (m-3)				
3				PAGE LEN	GIR (III-3)			(LSB)	
4		SCOPE			Rese	erved		LOCK	
5	CE	EM	RD	MC	SDK (0b)	CKOD	CKORP	CKORL	
6				ENCRYPT	ION MODE				
7				DECRYPT	ION MODE				
8				ALGORIT	HM INDEX				
9			LOGICA	AL BLOCK ENC	RYPTION KEY F	ORMAT			
10				KAD F	ORMAT				
11		_		Rase	erved			-	
17				11030	Siveu				
18	(MSB)	LOGICAL BLOCK ENCRYPTION KEY LENGTH (n-19)					-		
19			LOGICAL B	LOCK ENCKIP	TION RET LEIN	31H (II-19)		(LSB)	
20		LOCIONE DE CON ENERGYRTION VEV							
n		LOGICAL BLOCK ENCRYPTION KEY							
	_	Key-associated data descriptor list							
n+1		Key-associated data descriptor [first]							
			i toy-		ata accomptor	[5t]			
		Key-associated data descriptor [last]							
m			ixey-	นออบเกลเซน นัก	ita aesoriptor	liasti			

The following parameters apply:

SCOPE

Value	Description
0h	Public
1h	Local
2h	All I_T Nexus

- LOCK
- CEEM (check external encryption mode)

Value	Description
00h	Use device default behavior (same behavior as 01b).
01b	Do not check the encryption mode that was in use when the logical block was written to the medium.
10b	On read and verify commands, check the encryption mode that was in use when the logical block was written to the medium. Report an error if the logical block was written in EXTERNAL mode
11b	On read and verify commands, check the encryption mode that was in use when the logical block was written to the medium. Report an error if the logical block was written in ENCRYPT mode

• RDMC (raw decryption mode control)

This field is ignored if the ENCRYPTION MODE field is not set to ENCRYPT.

Value	Description
00b	The device entity shall mark each encrypted logical block per the RDMC_C setting for the algorithm.
10b	The device entity shall mark each encrypted logical block written to the medium as enabled for raw decryption mode operations.
11b	The device entity shall mark each encrypted logical block written to the medium as disabled for raw decryption mode operations.

- CKOD (clear key on demount)
- CKORP (clear key on reservation preempt)
- CKORL (clear key on reservation loss)
- ENCRYPTION MODE

Value	Description
0h	Disable
1h	External
2h	Encrypt

DECRYPTION MODE

Value	Description
0h	Disable
1h	Raw
2h	Decrypt
3h	Mixed

- ALGORITHM INDEX: The ALGORITHM INDEX is used based on the underlying format characteristics of each specific
  medium format. The drive allows relaxed usage of the value of this field and only enforces fields which are incompatible with the medium and may do so in a latent fashion (e.g., when operations which need to use such settings are
  attempted). Some examples include larger KAD sizes than supported by a generation which are flagged at write, or
  attempts to use raw copy methods (ENCRYPTION MODE of EXTERNAL between devices with incompatible / mismatched encryption algorithms).
- LOGICAL BLOCK ENCRYPTION KEY FORMAT: (see table 350)
- KAD FORMAT

A non-zero value is only allowed if the algorithm in the ALGORITHM INDEX field reports a KADF\_C bit set to one.

Value	Description
0h	Unspecified
1h	Binary logical block encryption key name
2h	ASCII logical block encryption key name

If the KAD FORMAT value is non-zero, then:

- a) a) only an A-KAD descriptor is provided and the authenticated key-associated data is the key name;
- b) only a U-KAD descriptor is provided and the unauthenticated key-associated data is the key name; or
- c) both an A-KAD descriptor and a U-KAD descriptor is provided and the key name is formed by the authenticated key-associated data followed by the unauthenticated key-associated data.
- LOGICAL BLOCK ENCRYPTION KEY LENGTH

Value	Description
0000h	When no Key is specified
0020h	When Key is specified using Key Format 00h
others	When Key is specified using Key Format 02h

- LOGICAL BLOCK ENCRYPTION KEY
- Key-Associated Descriptors List (See "Key-Associated Data (KAD) Descriptors" on page 454)

The following table indicates valid combinations of Encryption Mode and Decryption Mode and mandatory, optional and prohibited Key and Key-Associated Descriptors.

Table 363 — SPOUT (20h[0010h]) - KAD Parameters by Mode

				Key-	Associate	d Descrip	tors	
Encryption Mode	Decryption Mode	R/W Data	Key	uKAD 00h	aKAD (DKi) 01h	Nonce 02h	Meta data 03h	Notes
0h Disable	0h Disable	C/C	Р	Р	Р	Р	Р	
0h Disable	1h Raw	R/C	Р	Р	Р	Р	Р	not recommended
0h Disable	2h Decrypt	C <sup>4</sup> /C	$M^2$	Р	Р	Р	Р	not recommended
0h Disable	3h Mixed	C <sup>6</sup> /C	M <sup>2</sup>	Р	Р	Р	Р	
1h External	0h Disable	C/R	Р	Р	Р	Р	M <sup>1</sup>	not recommended
1h External	1h Raw	R/R	Р	Р	Р	Р	M <sup>1</sup>	
1h External	2h Decrypt	C <sup>4</sup> /R	M <sup>2</sup>	Р	Р	Р	M <sup>1</sup>	not recommended
1h External	3h Mixed	C <sup>6</sup> /R	M <sup>2</sup>	Р	Р	Р	M <sup>1</sup>	not recommended
2h Encrypt	0h Disable	C/C <sup>4</sup>	M <sup>1</sup>	O <sup>1</sup>	O <sup>1</sup>	O 1,3	Р	
2h Encrypt	1h Raw	R/C <sup>4</sup>	M <sup>1</sup>	O 1	O 1	O 1,3	Р	not recommended
2h Encrypt	2h Decrypt	C <sup>5</sup> /C <sup>4</sup>	М	O 1	O 1	O 1,3	Р	
2h Encrypt	3h Mixed	C <sup>6</sup> /C <sup>4</sup>	М	O <sup>1</sup>	O <sup>1</sup>	O 1,3	Р	
Legend: M: element is mandatory (required) P: element prohibited (must not be present) O: element is optional (may be device generated) I: element is ignored (may be present) C: cleartext (not encrypted) R: raw (compressed encoded/encrypted)				2: Only us 3: May be 4: Data is 5: Data is	sed for writ sed for read partially ig encrypted decrypted decrypted	ding gnored	)	

#### 6.8.3.2 Key-Associated Data (KAD) Descriptors

#### 6.8.3.2.1 KAD 00h - UKAD (Unathenticated KAD)

The UKAD field is an optional field which is used when writing and is recorded with each record.

Table 364 — KAD 00h - UKAD (Unathenticated KAD)

D. d.	Bit										
Byte	7 msb	6	5	4	3	2	1	0 lsb			
0		KEY DESCRIPTOR TYPE (00h)									
1			Reserved	AUTHENTICATED							
2	(MSB)										
3			KEY DESCRIPTOR LENGTH (n-3)  (LSB)								
4											
n			UNAUTHENTICATED DATA								

The following parameters apply:

AUTHENTICATED

ValueDescription0hReserved (must be set for Security Protocol Out)1hNot Covered by Authentication (only Security Protocol In)

- KEY DESCRIPTOR LENGTH: may be up to 0020h bytes.
- UNATHENTICATED DATA

### 6.8.3.2.2 KAD 01h - AKAD (Authenticated KAD) / DKi (Data Key Identifier)

The AKAD field is an optional field which is used when writing and is recorded with each record. This also referred to as the DKi (Data Key Identifier) in some related encryption documentation.

Table 365 — KAD 01h - AKAD (Authenticated KAD) / DKi (Data Key Identifier)

Dista	Bit											
Byte	7 msb	6	5	4	3	2	1	0 lsb				
0		KEY DESCRIPTOR TYPE (01h)										
1			Reserved		AUTHENTICATED							
2	(MSB)		KEY DESCRIPTOR LENGTH (n-3)  (LSB)									
3												
4			AUTHENTICATED DATA / DKi									
n												

The following parameters apply:

AUTHENTICATED

Value Description
Oh Reserved (must be set for Security Protocol Out)

2h No attempt has been made to authenticate (only Security Protocol In)

- KEY DESCRIPTOR LENGTH: maximum size is determined by generation algorithm.
- AUTHENTICATED DATA / DKi

#### 6.8.3.2.3 KAD 02h - Nonce

The Nonce/IV is not technically KAD. The Nonce may be set to provide the initial value for IV generation for write operations. This field is optional and the device is capable of generating high quality random IV values. When an application specifies nonce values, it is possible that a systemic cryptographic weakness may be introduced into the system. It is strongly recommended that nonce values are not supplied by the application.

NOTE 65 - The Nonce KAD is only reported by the device in <u>SPIN (20h[0020h]) - Data Encryption Status page</u> (see 6.8.2.6 on page 441), and the value returned is the exact value specified in <u>SPOUT (20h[0010h]) - Set Data Encryption</u> (see 6.8.3.1 on page 451). This may not reflect the actual nonce or IV used for writing encrypted data.

NOTE 66 - IV values are constructed using only part of the specified Nonce value and are altered for each write in a device dependent manner.

Bit Byte 7 msb 4 1 0 lsb 5 Key Descriptor Type (02h) 0 1 Reserved Authenticated 2 (MSB) KEY DESCRIPTOR LENGTH (000Ch) 3 (LSB) 4 NONCE/IV n

Table 366 — KAD 02h - Nonce

The following parameters apply:

AUTHENTICATED

vaiue	Description
0h	Reserved (must be set for Security Protocol Out)
1h	Not Covered by Authentication (only Security Protocol In)

- KEY DESCRIPTOR LENGTH: the only supported length is 000Ch
- NONCE/IV

### 6.8.3.2.4 KAD 03h - MKAD (Metadata)

The MKAD field is used for a keyless copy operation (i.e., RAW decryption mode and EXTERNAL encryption mode).

Table 367 — KAD 03h - MKAD (Metadata)

Disto		Bit										
Byte	7 msb	6	5	4	3	2	1	0 lsb				
0		KEY DESCRIPTOR TYPE (03h)										
1		Reserved										
2	(MSB)		KEY DESCRIPTOR LENGTH (n-3)									
3												
4			KEY DESCRIPTOR									
n												

The following parameters apply:

• AUTHENTICATED

Value	Description
0h	Reserved (must be set for Security Protocol Out)
2h	No attempt has been made to authenticate (only Security Protocol In)

- KEY DESCRIPTOR LENGTH
- KEY DESCRIPTOR: Data required by the encryption algorithm for a keyless copy operation.

### Annex A. Summary of Drive Generation Differences

This chapter provides a summary of the differences in host attachment protocol between the System Storage Ultrium 5 Tape Drive (Generation 5), the System Storage Ultrium 6 Tape Drive (Generation 6), and the System Storage Ultrium 7 Tape Drive (Generation 7).

The features of the Ultrium 5 Tape Drive that differ from those of the previous generations include the following:

- a) Full-Height and Half-Height drive option with:
  - A) Fibre Channel 8Gbit/sec Interface,or
  - B) Serial Attached SCSI (SAS) 6Gbit/sec Interface
- b) Larger read-and-write cache
- c) Encryption of data on Ultrium 4 and Ultrium 5 cartridges
- d) T10 key management method
- e) Transparent management method
  - A) when using IBM device driver,
  - B) when in an IBM library, or
  - C) when using T10 External Encryption Control
- f) 14 Speeds in Digital Speed Matching
- g) Partition capability up to two partitions (see 6.6.13)
- h) Data Safe Mode (i.e., Append-only mode) capability (see 4.1.3)
- i) SkipSync capability (see 6.6.21.5.1)
- j) Ideal Capacity (see 6.6.21.5.2)
- k) Dynamic Runtime Attributes
- I) Power Condition mode page for user controlled power management (see 6.6.16)
- m) Ethernet port for configuration/debug (see 6.6.21.3)
- n) Standards based setting of time (see 4.14)
- o) Logical block protection (i.e., CRC on bus; fixity checks; tape checksum) (see 4.6)
- p) Command timeout values reported at runtime with Report Supported Opcodes command (see 5.2.26)
- q) Standards based retrieval of drive error logs (i.e., drive dump)
- r) New standardized log pages with expanded counters:
  - A) Extended Device Statistics log page (14h) (see 6.4.10)
  - B) Volume Statistics log page (17h) (see 6.4.12)
  - C) Data Compression log page (1Bh) (see 6.4.15)

The features of the Ultrium 6 Tape Drive that differ from those of the previous generations include the following:

- a) Larger read-and-write cache
- b) Partition capability up to four partitions (see 6.6.13)
- c) Improved SkipSync capability (see 6.6.21.5.1)
- d) Larger compression history buffer enabling improved nominal compression ratio

The features of the Ultrium 7 Tape Drive that differ from those of the previous generations include the following:

- a) Larger read-and-write cache
- b) 32 data channels
- c) Improved rewrite methodology decreases capacity loss due to errors while writing
- d) Ability to disable BOP caching

Table 368 compares features of the different generations of Ultrium tape drives.

Table 368 — Features of the IBM Ultrium Tape Drives and the IBM 3580 Ultrium Tape Drive

Feature	Ultrium 3	Ultrium 3 Half-Height	Ultrium 4	Ultrium 4 Half-Height	Ultrium 5 FH & HH	Ultrium 6 FH & HH	Ultrium 7 FH & HH
Native storage capacity	400 GB	400 GB	800 GB	800 GB	1500 GB	2500 GB	6000 GB
Storage capacity when compression enabled_a	800 GB	800 GB	1.6 TB	1.6 TB	3.0 TB	6250 GB	15000 GB
Native sustained data transfer rate	80 MB/s	60 MB/s or 80 MB/s_ <sup>f</sup>	120 MB/s	120 MB/s	140 MB/s	160 MB/s	300 MB/s
Data transfer rate when compression enabled_a	160 MB/s	120 MB/s or 160 MB/s_ <sup>f</sup>	240 MB/s	240 MB/s	280 MB/s	400 MB/s	800 MB/s
Burst data transfer rate (1GFC)	100 MB/s	N/A	100 MB/s	100 MB/s	100 MB/s	100 MB/s	100 MB/s
Burst data transfer rate (2GFC)	200 MB/S	N/A	200 MB/S	200 MB/S	200 MB/S	200 MB/S	200 MB/S
Burst data transfer rate (4GFC)	400 MB/s	N/A	400 MB/s	400 MB/s	400 MB/s	400 MB/s	400 MB/s
Burst data transfer rate (8GFC)	N/A	N/A	N/A	800 MB/s_f	800 MB/s	800 MB/s	800 MB/s
Burst data transfer rate (3G SAS)	N/A	300 MB/s	300 MB/s	300 MB/s	300 MB/s	300 MB/s	300 MB/s
Burst data transfer rate (6G SAS)	N/A	600 MB/s_f	N/A	600 MB/s_ <u>f</u>	600 MB/s	600 MB/s	600 MB/s
Type of interface	U160_ <del>g</del> LC-D_ <del>b</del>	U160 <u>°</u> SAS <u>°</u>	U160_ <sup><u>e</u></sup> LC-D <sup><u>b</u></sup> SAS_ <u>c</u> U320_ <del>d</del>	LC-D <sup>b</sup> SAS <sup>c</sup> U320 <sup>d</sup>	LC-D <sup>b</sup> SAS <sup>c</sup>	LC-D <sup>b</sup> SAS <sup>c</sup>	LC-D <sup>b</sup> SAS <sup>c</sup>

Note - All sustained data rates are dependent on the capabilities of the interconnect (for example, a 4GFC link is limited to less than 400MB/sec).

<sup>&</sup>lt;sup>a</sup> The compression ratio in Generation 3 through Generation 5 is 2:1; Generation 6 is 2.5:1. Depending on the data, the compression ratio may be higheror lower. The rate may be limited by the attachment interface (e.g., FC or SAS).

b LC-D: LC-Duplex Fibre Channel, with the use of SCSI protocol

<sup>&</sup>lt;sup>c</sup> SAS: Serial-Attached SCSI

<sup>&</sup>lt;sup>d</sup> U320: Ultra 320 LVD SCSI - Not on V2 drives

e U160: Ultra 160 LVD SCSI - Not on V2 drives

f V2 drives only

#### A.1. Differences in Command Timeout Values

Due to differences between each of the Oltrium drives, the maximum amount of time it takes for various SCSI commands to process and return status has changed. Table 369, "Command Timeout Values (Ultrium 1, 2, and 3 Full-Height) - Alphabetic Sort," on page 461, and Table 370, "Command Timeout Values (Ultrium 3 Half-Height and Ultrium 4) - Alphabetic Sort," on page 463 each provides a list of all recommended host command time-outs from commands defined by the referenced SCSI-3 standard or by this product as vendor-unique for sequential access devices. The tables list the following information for each command: the operation code, recommended timeout, and notes.

It is strongly recommended that device drivers or host software implement device reservations using the Reserve or Persistent Reserve commands. Due to the sequential nature of tape devices, many host commands are serialized, and command time-outs consequently have an additive effect. Using reservations will prevent this from causing application disruptions in a multi-initiator or SAN environment. Similar additive timeout effects can occur if the host is using command Queuing (that is, simple queuing).

The time-outs in the following tables are based on the time from the start of the processing of the command, to its reported completion. Since applications are generally concerned with the time from the command being issued, to its reported completion, it should be noted that this overall time may be affected by currently processing operations. Some of these conditions include:

- a) A prior command was issued with the Immediate bit set in the CDB
- b) Multiple concurrent commands with Simple queuing are processed
- c) Multi-initiator configurations without reservations
- d) Non-host operations, such as manual unloads, power-on self tests, and so on
- e) Commands issued shortly after certain aborted commands
- f) Commands that force flushes when unwritten write data is in the buffer
- Ultrium 5 through Ultrium 7 tape drives support the <u>REPORT SUPPORTED OPERATION CODES A3h[0Ch]</u> (see 5.2.26 on page 142) command and provide command timeout values at run time. See the REPORT SUPPORTED OPERATION CODES command for Ultrium 5 through Ultrium 7 tape drive command timeouts. Command timeout values for Ultrium 1 through Ultrium 4 tape drives are listed in the following tables:

Table 369, "Command Timeout Values (Ultrium 1, 2, and 3 Full-Height) - Alphabetic Sort," on page 461
Table 370, "Command Timeout Values (Ultrium 3 Half-Height and Ultrium 4) - Alphabetic Sort," on page 463

Table 369 — Command Timeout Values (Ultrium 1, 2, and 3 Full-Height) - Alphabetic Sort (part 1 of 2)

OpCode	Command	Timeout for Ultrium Tape Drive	Ultri Tape	out for um 2 Drive nutes)	Timeout for Ultrium 3 Full-Height Tape Drive (in minutes)			
		(in minutes)	Gen 1 Cartridge	Gen 2 Cartridge	Gen 1 Cartridge	Gen 2 Cartridge	Gen 3 Cartridge	
19h	ERASE	204	138	151	N/A	160	134	
12h	INQUIRY	1	1	1	1	1	1	
1Bh	LOAD (Cartridge Insert -> BOM)	11	12	12	8	8	8	
IDII	LOAD (LP4 -> BOM)	8	9	8	8	8	9	
2Bh/92h	LOCATE(10/16) (Normal)	16	15	14	14	14	16	
2011/9211	LOCATE(10/16) (Slow)	173	138	151	127	165	140	
4Ch	LOG SELECT	1	1	1	1	1	1	
4Dh	LOG SENSE	1	1	1	1	1	1	
15h/55h	MODE SELECT(6/10)	1	1	1	1	1	1	
1Ah/5Ah	MODE SENSE(6/10)	1	1	1	1	1	1	
5Eh	PERSISTENT RESERVE IN (PRIN)	1	1	1	1	1	1	
5Fh	PERSISTENT RESERVE OUT (PROUT)	1	1	1	1	1	1	
1Eh	PREVENT/ALLOW MEDIUM REMOVAL	1	1	1	1	1	1	
08h	READ	18	18	18	16	16	17	
8Ch	READ ATTRIBUTE	1	1	1	1	1	1	
05h	READ BLOCK LIMITS	1	1	1	1	1	1	
3Ch	READ BUFFER	8	8	8	7	7	8	
34h	READ POSITION	1	1	1	1	1	1	
1Ch	RECEIVE DIAGNOSTIC RESULTS	1	1	1	1	1	1	
17h/57h	RELEASE UNIT(6/10)	1	1	1	1	1	1	
44h	REPORT DENSITY SUPPORT	1	1	1	1	1	1	
A0h	REPORT LUNS	1	1	1	1	1	1	
A3h:0Ch	REPORT SUPPORTED OPERATION CODES	N/A	N/A	N/A	1	1	1	
A3h:0Dh	REPORT SUPPORTED TASK MANAGEMENT FUNCTIONS	N/A	N/A	N/A	1	1	1	
A3h:0Fh	REPORT TIMESTAMP	N/A	N/A	N/A	1	1	1	
03h	REQUEST SENSE	1	1	1	1	1	1	
16h/56h	RESERVE UNIT(6/10)	1	1	1	1	1	1	
01h	REWIND	8	9	8	8	8	9	
A2h	SECURITY PROTOCOL IN (SPIN)	N/A	N/A	N/A	N/A	N/A	1	
B5h	SECURITY PROTOCOL OUT (SPOUT)	N/A	N/A	N/A	N/A	N/A	N/A	
1Dh	SEND DIAGNOSTIC	29	35	35	13	39	34	
0Bh	SET CAPACITY	N/A	13	13	N/A	11	12	
A4h:0Fh	SET TIMESTAMP	N/A	N/A	N/A	1	1	1	

Table 369 — Command Timeout Values (Ultrium 1, 2, and 3 Full-Height) - Alphabetic Sort (part 2 of 2)

OpCode	Command	Timeout for Ultrium Tape	Ultri Tape	out for um 2 Drive nutes)	Timeout for Ultrium 3 Full-Height Tape Drive (in minutes)			
		Drive (in minutes)	Gen 1 Cartridge	Gen 2 Cartridge	Gen 1 Cartridge	Gen 2 Cartridge	Gen 3 Cartridge	
91h	SPACE(16) (Normal)	N/A	N/A	N/A	14	14	16	
9111	SPACE(16) (Slow)	N/A	N/A	N/A	127	165	140	
11h	SPACE(6) (Normal)	16	15	14	14	14	16	
11h	SPACE(6) (Slow)	173	138	151	127	165	140	
00h	TEST UNIT READY	1	1	1	1	1	1	
1Bh	UNLOAD (BOM -> Cartridge Eject)	10	10	10	10	10	11	
IDII	UNLOAD (LP4 -> Cartridge Eject)	11	12	11	11	11	12	
13h	VERIFY	18	18	18				
0Ah	WRITE	18	18	18	N/A	16	18	
8Dh	WRITE ATTRIBUTE	1	1	1	1	1	1	
3Bh	WRITE BUFFER	8	8	8	8	8	8	
10h	WRITE FILEMARK	15	15	15	N/A	15	17	

Table 370 — Command Timeout Values (Ultrium 3 Half-Height and Ultrium 4) - Alphabetic Sort (part 1 of 2)

OpCode	Command	Half-H	out for Ultr leight Tape (in minutes	drive	Timeout for Ultrium 4 Tape Drive (in minutes)			
		Gen 1 Cartridge	Gen 2 Cartridge	Gen 3 Cartridge	Gen 2 Cartridge	Gen 3 Cartridge	Gen 4 Cartridge	
19h	ERASE	N/A	191	255	N/A	134	180 <u>a</u>	
12h	INQUIRY	1	1	1	1	1	1	
1Bh	LOAD (Cartridge Insert -> BOM)	9	9	9	8	8	8	
ТЫП	LOAD (LP4 -> BOM)	11	11	13	8	9	9	
2Bh/92h	LOCATE(10/16) (Normal)	20	20	22	14	16	21	
2011/9211	LOCATE(10/16) (Slow)	199	264	201	165	140	183	
4Ch	LOG SELECT	1	1	1	1	1	1	
4Dh	LOG SENSE	1	1	1	1	1	1	
15h/55h	MODE SELECT (6/10)	1	1	1	1	1	1 <del>_a</del>	
1Ah/5Ah	MODE SENSE (6/10)	1	1	1	1	1	1	
5Eh	PERSISTENT RESERVE IN	1	1	1	1	1	1	
5Fh	PERSISTENT RESERVE OUT	1	1	1	1	1	1	
1Eh	PREVENT/ALLOW MEDIUM REMOVAL	1	1	1	1	1	1	
08h	READ	21	21	23	16	17	22 <u>b</u>	
BCh	READ ATTRIBUTE	1	1	1	1	1	1	
05h	READ BLOCK LIMITS	1	1	1	1	1	1	
3Ch	READ BUFFER	9	9	10	7	8	8	
34h	READ POSITION	1	1	1	1	1	1	
1Ch	RECEIVE DIAGNOSTIC RESULTS	1	1	1	1	1	1	
17h/57h	RELEASE UNIT (6/10)	1	1	1	1	1	1	
44h	REPORT DENSITY SUPPORT	1	1	1	1	1	1	
A0h	REPORT LUNS	1	1	1	1	1	1	
A3h:0Ch	REPORT SUPPORTED OP CODES	1	1	1	1	1	1	
A3h:0Dh	REPORT SUPPORTED TASK MANAGEMENT FUNCTIONS	1	1	1	1	1	1	
A3h:0Fh	REPORT TIMESTAMP	1	1	1	1	1	1	
03h	REQUEST SENSE	1	1	1	1	1	1	
16h/56h	RESERVE UNIT (6/10)	1	1	1	1	1	1	
01h	REWIND	11	11	13	8	9	9	
A2h	SECURITY PROTOCOL IN	N/A	N/A	N/A	N/A	N/A	1	
B5h	SECURITY PROTOCOL OUT	N/A	N/A	N/A	N/A	N/A	1	
1Dh	SEND DIAGNOSTIC	13	39	40	13	34	35	
0Bh	SET CAPACITY	N/A	14	16	N/A	12	12	
A4h:0Fh	SET TIMESTAMP	1	1	1	1	1	1	
	SPACE(16) (Normal)	20	20	22	14	16	21	
11h/91h	SPACE(16) (Slow)	199	264	201	165	140	183	

Table 370 — Command Timeout Values (Ultrium 3 Half-Height and Ultrium 4) - Alphabetic Sort (part 2 of 2)

OpCode	Command	Half-F	out for Ultr leight Tape in minutes	drive	Timeout for Ultrium 4 Tape Drive (in minutes)			
-		Gen 1 Cartridge	Gen 2 Cartridge	Gen 3 Cartridge	Gen 2 Cartridge	Gen 3 Cartridge	Gen 4 Cartridge	
00h	TEST UNIT READY	1	1	1	1	1	1	
451	UNLOAD (BOM -> Cartridge Eject)	12	12	14	10	11	11	
1Bh	UNLOAD (LP4 -> Cartridge Eject)	14	14	16	11	12	13	
13h	VERIFY	21	21	23	16	17	22 <u>-b</u>	
0Ah	WRITE	N/A	21	24	N/A	18	23 <u>-b</u>	
BDh	WRITE ATTRIBUTE	1	1	1	1	1	1	
3Bh	WRITE BUFFER	10	10	11	8	8	8	
10h	WRITE FILEMARK	N/A	21	23	N/A	17	22 <u>-a</u>	

<sup>&</sup>lt;sup>a</sup> When positioned at BOP: These commands require an increased timeout when encryption is active and an out-of-band key manager is used. The command timeout should be increased by 300 seconds.

b These commands require an increased timeout when encryption is active and an out-of-band key manager is used. The command timeout should be increased by 300 seconds.

## A.2. Command and Parameter Differences Between Generations

<u>Table A.1</u> shows commands and parameters added since LTO5 and in which generation(s) it is applicable.

Table A.1 — Command and Parameter differences between generations

Command or Parameter	Ge	nerat	ion
Command or Parameter	5	6	7
READ END OF WRAP POSITION - A3h[1Fh][45h] (see 5.2.19 on page 122)	-	-	Υ
READ LOGGED-IN HOST TABLE - A3h[1Fh][01h] (see 5.2.20 on page 125)	ı	ı	Υ
BOP caching (see 4.3.2 on page 32)	1	Υ	Υ
MP 30h[43h]: Feature switches - Device attribute settings (see 6.6.21.5.3 on page 410)	ı	ı	Υ
Logical block protection support using the CRC32C (Castagnoli) algorithm (see D.2.) was added. See Logical block protection (see 4.6 on page 37)	1	1	Υ
Many counter sizes were increased. See Log Parameters (LP) (see 6.4 on page 262)	-	-	Υ
LTFS MAM parms 0820h & 0821h were added. See Host type attributes (see 6.5.2.4 on page 352)	-	-	Υ
Inquiry Allocation Length expanded. See INQUIRY - 12h (see 5.2.4 on page 80)	-	-	Υ
Mode page behaviors were made consistent and non-standard behaviors better described. See Mode Page Behaviors (see 4.4 on page 33)	-	-	Υ
RB 19h: Host non-volatile (see 6.7.1.4 on page 416) was added	-	-	Υ
MP 1Ch: Informational Exceptions Control (see 6.6.17 on page 387) behaviors were modified	-	-	Υ
IP B3h: Automation Device Serial Number (see 6.3.11 on page 255) added	-	-	Υ
IP B4h: Data Transfer Device Element Address (see 6.3.12 on page 256) added	-	-	Υ
SPIN (00h[0002h]) - Security Compliance Information (see 6.8.1.3 on page 430) added	-	-	Υ
SPIN (20h[0031h]) - Device Server Key Wrapping Public Key page (see 6.8.2.9 on page 449) added	-	-	Υ
Key: - Not Supported			

#### **Annex B. Error Sense Information**

This annex lists all possible combinations of Sense Keys, Additional Sense Codes (ASC), and Additional Sense Code Qualifiers (ASCQ) that are reported by this device.

NOTE 67 - ASCs of EEh and EFh are used for encryption related features and are only supported by encryption capable devices

NOTE 68 - When using encryption enabled devices in an in-band configuration (System method or key path), ASCs of EFh are used to initiate a key management session via a system proxy.

### B.1. Sense Key 0 (No Sense)

Table 371 — ASC, and ASCQ Summary for Sense Key 0 (No Sense)

ASC ASCQ	Description
00 00	NO ADDITIONAL SENSE INFORMATION - (UNSOLICITED, NO CA/CC)
00 00	NO ADDITIONAL SENSE INFORMATION - EOM=1B (EARLY WARNING)
00 00	NO ADDITIONAL SENSE INFORMATION - ILI=1B
00 00	NO ADDITIONAL SENSE INFORMATION - FM=1B
00 01	FILEMARK DETECTED
00 02	END-OF-PARTITION/MEDIUM DETECTED, EARLY WARNING
00 04	BEGINNING-OF-PARTITION/MEDIUM DETECTED
00 07	PROGRAMMABLE EARLY WARNING DETECTED
00 16	OPERATION IN PROGRESS
5E 07	IDLE_C CONDITION ACTIVATED BY TIMER
82 82	DRIVE REQUIRES CLEARING
EF 13	ENCRYPTION - KEY TRANSLATE

Note - ASCs of EEh and EFh are used for encryption related features and are only supported by encryption capable devices

Note - When using encryption enabled devices in an in-band configuration (System method or key path), ASCs of EFh are used to initiate a key management session via a system proxy.

## **B.2. Sense Key 1 (Recovered Error)**

Table 372 — ASC, and ASCQ Summary for Sense Key 1 (Recovered Error)

ASC ASCQ	Description
00 00	NO ADDITIONAL SENSE INFORMATION
00 17	DRIVE NEEDS CLEANING
0C 00	WRITE ERROR: A write error occurred, but was recovered. Data was successfully written to tape.
11 00	READ ERROR: A read error occurred, but was recovered. Data was successfully read from tape.
17 01	RECOVERED DATA WITH RETRIES
37 00	ROUNDED PARAMETER
5D 00	FAILURE PREDICTION THRESHOLD EXCEEDED
5D FF	FAILURE PREDICTION THRESHOLD EXCEEDED (FALSE)
82 52	DEGRADED MEDIA

Note - Many additional ASC ASCQ combinations are possible if recovered error reporting is enabled via Mode Select. Recovered Error Reporting Enabled is the default option with some of the device drivers

# **B.3. Sense Key 2 (Not Ready)**

Table 373 — ASC, and ASCQ Summary for Sense Key 2 (Not Ready)

ASC ASCQ	Description
04 00	LOGICAL UNIT NOT READY, CAUSE NOT REPORTABLE
04 01	LOGICAL UNIT IS IN PROCESS OF BECOMING READY
04 02	INITIALIZING COMMAND REQUIRED: A tape is present in the drive, but it is not logically loaded
04 12	LOGICAL UNIT NOT READY, OFFLINE
04 13	LOGICAL UNIT NOT READY, SA CREATION IN PROGRESS
0B 01	WARNING - SPECIFIED TEMPERATURE EXCEEDED
30 03	CLEANING IN PROGRESS
30 07	CLEANING FAILURE
3A 00	MEDIUM NOT PRESENT
3A 04	NOT READY - MEDIUM AUXILIARY MEMORY ACCESSIBLE
3E 00	LOGICAL UNIT HAS NOT SELF-CONFIGURED
53 00	MEDIA LOAD OR EJECT FAILED
74 11	SA CREATION PARAMETER VALUE REJECTED

## **B.4. Sense Key 3 (Medium Error)**

Table 374 — ASC, and ASCQ Summary for Sense Key 3 (Medium Error)

ASC ASCQ	Description
04 10	LOGICAL UNIT NOT READY, AUXILIARY MEMORY NOT ACCESSIBLE
09 00	TRACK FOLLOWING ERROR
0C 00	WRITE ERROR
11 00	UNRECOVERED READ ERROR
11 12	AUXILIARY MEMORY READ ERROR
14 00	RECORDED ENTITY NOT FOUND
30 00	INCOMPATIBLE MEDIUM INSTALLED
30 01	CANNOT READ MEDIUM, UNKNOWN FORMAT
30 02	CANNOT READ MEDIUM, INCOMPATIBLE FORMAT
30 0D	WORM MEDIUM - TAMPERING DETECTED
31 00	MEDIUM FORMAT CORRUPTED
3B 00	SEQUENTIAL POSITIONING ERROR
50 00	WRITE APPEND ERROR
51 00	ERASE FAILURE
52 00	CARTRIDGE FAULT
53 00	MEDIA LOAD OR EJECT FAILED
53 04	MEDIUM THREAD OR UNTHREAD FAILURE
EE 60	ENCRYPTION - PROXY COMMAND ERROR
EE D0	ENCRYPTION - DATA READ DECRYPTION FAILURE
EE D1	ENCRYPTION - DATA READ AFTER WRITE DECRYPTION FAILURE
EE E0	ENCRYPTION - KEY TRANSLATION FAILURE
EE E1	ENCRYPTION - KEY TRANSLATION AMBIGUOUS
EE F0	ENCRYPTION - DECRYPTION FENCED (READ)
EE F1	ENCRYPTION - ENCRYPTION FENCED (WRITE)

Note - ASCs of EEh and EFh are used for encryption related features and are only supported by encryption capable devices

Note - When using encryption enabled devices in an in-band configuration (System method or key path), ASCs of EFh are used to initiate a key management session via a system proxy.

## **B.5. Sense Key 4 (Hardware Error)**

Table 375 — ASC, and ASCQ Summary for Sense Key 4 (Hardware Error)

ASC ASCQ	Description
04 03	MANUAL INTERVENTION REQUIRED: A tape is present in the drive but could not be loaded or unloaded without manual intervention
10 01	LOGICAL BLOCK GUARD CHECK FAILED
40 XX	DIAGNOSTIC FAILURE: The Additional Sense Code Qualifier (i.e., XX) indicates the failing component
41 00	DATA PATH FAILURE
44 00	INTERNAL TARGET FAILURE Drive Needs Cleaning, Warning Threshold Exceeded
51 00	ERASE FAILURE
52 00	CARTRIDGE FAULT
53 00	MEDIA LOAD OR EJECT FAILED
53 04	MEDIUM THREAD OR UNTHREAD FAILURE
EE 0E	ENCRYPTION - KEY SERVICE TIME-OUT_a
EE 0F	ENCRYPTION - KEY SERVICE FAILURE_ <sup>a</sup>

Note - ASCs of EEh and EFh are used for encryption related features and are only supported by encryption capable devices

Note - When using encryption enabled devices in an in-band configuration (System method or key path), ASCs of EFh are used to initiate a key management session via a system proxy.

<sup>&</sup>lt;sup>a</sup> Returned in LTO5 and earlier

## **B.6. Sense Key 5 (Illegal Request)**

Table 376 — ASC, and ASCQ Summary for Sense Key 5 (Illegal Request) (part 1 of 2)

ASC ASCQ	Description
0E 03	INVALID FIELD IN COMMAND INFORMATION UNIT (e.g., FCP_DL error)
1A 00	PARAMETER LIST LENGTH ERROR
20 00	INVALID COMMAND OPERATION CODE
20 0C	ILLEGAL COMMAND WHEN NOT IN APPEND-ONLY MODE
24 00	INVALID FIELD IN CDB
25 00	LOGICAL UNIT NOT SUPPORTED
26 00	INVALID FIELD IN PARAMETER LIST
26 02	PARAMETER VALUE INVALID
26 04	INVALID RELEASE OF PERSISTENT RESERVATION
26 11	ENCRYPTION - INCOMPLETE KEY-ASSOCIATE DATA SET
26 12	VENDOR SPECIFIC KEY REFERENCE NOT FOUND
29 04	DEVICE INTERNAL RESET
2A 0B	ERROR HISTORY SNAPSHOT RELEASED
2C 00	COMMAND SEQUENCE ERROR
2C 0B	NOT RESERVED - The OIR bit of the Sequential Access Device page is set and the I_T nexus attempting to communicate with the drive does not hold a reservation.
3B 00	SEQUENTIAL POSITIONING ERROR
3B 0C	POSITION PAST BEGINNING OF MEDIUM: A command that required the medium to be at BOP was attempted when the medium was not at BOP (for example, SET CAPACITY)
53 02	MEDIUM REMOVAL PREVENTED
55 08	MAXIMUM NUMBER OF SUPPLEMENTAL DECRYPTION KEYS EXCEEDED
74 08	DIGITAL SIGNATURE VALIDATION FAILURE
74 0C	UNABLE TO DECRYPT PARAMETER LIST
74 10	SA CREATION PARAMETER VALUE INVALID
74 11	SA CREATION PARAMETER VALUE REJECTED
74 12	INVALID SA USAGE
74 30	SA CREATION PARAMETER NOT SUPPORTED
82 83	BAD MICROCODE DETECTED: The data transferred to the drive during a firmware upgrade is corrupted or incompatible with the drive hardware
A3 01	OEM Vendor-specific
EE 00	ENCRYPTION - KEY SERVICE NOT ENABLED
EE 01	ENCRYPTION - KEY SERVICE NOT CONFIGURED
EE 02	ENCRYPTION - KEY SERVICE NOT AVAILABLE
EE 0D	ENCRYPTION - MESSAGE CONTENT ERROR
EE 10	ENCRYPTION - KEY REQUIRED
EE 20	ENCRYPTION - KEY COUNT EXCEEDED
	SCs of EEh and EFh are used for encryption related features and are only supported by encryption apable devices

capable devices

Note - When using encryption enabled devices in an in-band configuration (System method or key path), ASCs of EFh are used to initiate a key management session via a system proxy.

Table 376 — ASC, and ASCQ Summary for Sense Key 5 (Illegal Request) (part 2 of 2)

ASC ASCQ	Description
EE 21	ENCRYPTION - KEY ALIAS EXCEEDED
EE 22	ENCRYPTION - KEY RESERVED
EE 23	ENCRYPTION - KEY CONFLICT
EE 24	ENCRYPTION - KEY METHOD CHANGE
EE 25	ENCRYPTION - KEY FORMAT NOT SUPPORTED
EE 26	ENCRYPTION - UNAUTHORIZED REQUEST - DAK
EE 27	ENCRYPTION - UNAUTHORIZED REQUEST - DSK
EE 28	ENCRYPTION - UNAUTHORIZED REQUEST - EAK
EE 29	ENCRYPTION - AUTHENTICATION FAILURE
EE 2A	ENCRYPTION - INVALID RDKI
EE 2B	ENCRYPTION - KEY INCORRECT
EE 2C	ENCRYPTION - KEY WRAPPING FAILURE
EE 2D	ENCRYPTION - SEQUENCING FAILURE
EE 2E	ENCRYPTION - UNSUPPORTED TYPE
EE 2F	ENCRYPTION - NEW KEY ENCRYPTED WRITE PENDING
EE 30	ENCRYPTION - PROHIBITED REQUEST
EE 31	ENCRYPTION - KEY UNKNOWN
EE 32	ENCRYPTION - UNAUTHORIZED REQUEST - dCERT
EE 42	ENCRYPTION - EKM CHALLENGE PENDING
EE E2	ENCRYPTION - KEY TRANSLATION DISALLOWED
EE FF	ENCRYPTION - SECURITY PROHIBITED FUNCTION
EF 01	ENCRYPTION - KEY SERVICE NOT CONFIGURED

Note - ASCs of EEh and EFh are used for encryption related features and are only supported by encryption capable devices

Note - When using encryption enabled devices in an in-band configuration (System method or key path), ASCs of EFh are used to initiate a key management session via a system proxy.

## **B.7. Sense Key 6 (Unit Attention)**

Table 377 — ASC, and ASCQ Summary for Sense Key 6 (Unit Attention) (part 1 of 2)

ASC ASCQ	Description
28 00	NOT READY TO READY TRANSITION, MEDIUM MAY HAVE CHANGED
28 01	IMPORT OR EXPORT ELEMENT ACCESSED
29 00	POWER ON, RESET, OR BUS DEVICE RESET OCCURRED
29 04	DEVICE INTERNAL RESET
29 05	TRANSCEIVER MODE CHANGED TO SINGLE-ENDED
29 06	TRANSCEIVER MODE CHANGED TO LVD
2A 01	MODE PARAMETERS CHANGED
2A 02	LOG PARAMETERS CHANGED
2A 03	RESERVATIONS PREEMPTED
2A 04	RESERVATIONS RELEASED
2A 05	REGISTRATIONS PREEMPTED
2A 0A	ERROR HISTORY I_T NEXUS CLEARED
2A 11	ENCRYPTION - DATA ENCRYPTION PARAMETERS CHANGED BY ANOTHER I_T NEXUS
2A 12	ENCRYPTION - DATA ENCRYPTION PARAMETERS CHANGED BY VENDOR SPECIFIC EVENT
2A 14	SA CREATION CAPABILITIES DATA HAS CHANGED
2F 00	COMMANDS CLEARED BY ANOTHER INITIATOR
3B 12	MEDIUM MAGAZINE REMOVED
3B 13	MEDIUM MAGAZINE INSERTED
3F 01	MICROCODE HAS BEEN CHANGED
3F 02	CHANGED OPERATING DEFINITION
3F 03	INQUIRY DATA HAS CHANGED
3F 05	DEVICE IDENTIFIER CHANGED
3F 0E	REPORTED LUNS DATA HAS CHANGED
5D FF	FAILURE PREDICTION THRESHOLD EXCEEDED (FALSE)
EE 11	ENCRYPTION - KEY GENERATION
EE 12	ENCRYPTION - KEY CHANGE DETECTED
EE 13	ENCRYPTION - KEY TRANSLATION
EE 18	ENCRYPTION - CHANGED (READ)
EE 19	ENCRYPTION - CHANGED (WRITE)
EE 40	ENCRYPTION - EKM IDENTIFIER CHANGED
EE 41	ENCRYPTION - EKM CHALLENGE CHANGED
EE 50	ENCRYPTION - INITIATOR IDENTIFIER CHANGED
EE 51	ENCRYPTION - INITIATOR RESPONSE CHANGED
EF 01	ENCRYPTION - KEY SERVICE NOT CONFIGURED

Note - ASCs of EEh and EFh are used for encryption related features and are only supported by encryption capable devices

Note - When using encryption enabled devices in an in-band configuration (System method or key path), ASCs of EFh are used to initiate a key management session via a system proxy.

Table 377 — ASC, and ASCQ Summary for Sense Key 6 (Unit Attention) (part 2 of 2)

ASC ASCQ	Description
EF 10	ENCRYPTION - KEY REQUIRED
EF 11	ENCRYPTION - KEY GENERATION
EF 13	ENCRYPTION - KEY TRANSLATION
EF 1A	ENCRYPTION - KEY OPTIONAL (i.e., chose encryption enabled/disabled)
Note - AS	Cs of EEh and EFh are used for encryption related features and are only supported by encryption

lote - ASCs of EEh and EFh are used for encryption related features and are only supported by encryption capable devices

Note - When using encryption enabled devices in an in-band configuration (System method or key path), ASCs of EFh are used to initiate a key management session via a system proxy.

## **B.8. Sense Key 7 (Data Protect)**

Table 378 — ASC, and ASCQ Summary for Sense Key 7 (Data Protect)

ASC ASCQ	Description
26 10	ENCRYPTION - DATA DECRYPTION KEY FAIL LIMIT
27 00	WRITE PROTECTED
2A 13	ENCRYPTION - DATA ENCRYPTION KEY INSTANCE COUNTER HAS CHANGED
30 05	CANNOT WRITE MEDIUM, INCOMPATIBLE FORMAT
30 06	CANNOT FORMAT MEDIUM - INCOMPATIBLE MEDIUM
30 0C	DATA PROTECT/WORM MEDIUM - OVERWRITE ATTEMPTED: Set when the drive rejects a Write operation because the rules for allowing WORM writes have not been met
30 0D	DATA PROTECT/WORM MEDIUM - INTEGRITY CHECK: Set when the drive rejects a Write operation because the current cartridge is a Suspicious WORM cartridge
50 01	WRITE APPEND POSITION ERROR (WORM)
52 00	CARTRIDGE FAULT
5A 02	OPERATOR SELECTED WRITE PROTECT
74 00	SECURITY ERROR
74 01	ENCRYPTION - UNABLE TO DECRYPT DATA
74 02	ENCRYPTION - UNENCRYPTED DATA ENCOUNTERED WHILE DECRYPTING
74 03	ENCRYPTION - INCORRECT DATA ENCRYPTION KEY
74 04	ENCRYPTION - CRYPTOGRAPHIC INTEGRITY VALIDATION FAILED
74 05	ENCRYPTION - ERROR DECRYPTING DATA
74 06	UNKNOWN SIGNATURE VERIFICATION KEY
74 07	ENCRYPTION PARAMETERS NOT USEABLE
74 09	ENCRYPTION MODE MISMATCH ON READ
74 0A	ENCRYPTED BLOCK NOT RAW READ ENABLED
74 0B	INCORRECT ENCRYPTION PARAMETERS
EE 0E	ENCRYPTION - KEY SERVICE TIME-OUT_8
EE 0F	ENCRYPTION - KEY SERVICE FAILURE_a
EF 10	ENCRYPTION - KEY REQUIRED
EF 11	ENCRYPTION - KEY GENERATION
EF 13	ENCRYPTION - KEY TRANSLATE
EF 1A	ENCRYPTION - KEY OPTIONAL
EF A0	ENCRYPTION - KEY REQUIRED (T10)
EF A1	ENCRYPTION - KEY GENERATION (T10)
EF C0	ENCRYPTION - NO OPERATION
Note - V	ASCs of EEh and EFh are used for encryption related features and are only supported by encryption capable devices  When using encryption enabled devices in an in-band configuration (System method or key path),  ASCs of EFh are used to initiate a key management session via a system proxy

ASCs of EFh are used to initiate a key management session via a system proxy.

a Returned in LTO6 and later

# B.9. Sense Key 8 (Blank Check)

Table 379 — ASC, and ASCQ Summary for Sense Key 8 (Blank Check)

ASC ASCQ	Description
00 05	END-OF-DATA DETECTED

## **B.10. Sense Key B (Aborted Command)**

Table 380 — ASC, and ASCQ Summary for Sense Key B (Aborted Command)

ASC ASCQ	Description			
00 1E	CONFLICTING SA CREATION REQUEST			
0B 01	WARNING - SPECIFIED TEMPERATURE EXCEEDED			
2C 00	COMMAND SEQUENCE ERROR			
3D 00	INVALID BITS IN IDENTIFY MESSAGE			
3F 0F	ECHO BUFFER OVERWRITTEN			
43 00	MESSAGE ERROR			
45 00	SELECT OR RESELECT FAILURE			
47 00	SCSI PARITY ERROR			
47 03	INFORMATION UNIT iuCRC ERROR DETECTED			
48 00	INITIATOR DETECTED ERROR MESSAGE RECEIVED			
49 00	INVALID MESSAGE ERROR			
4A 00	COMMAND PHASE ERROR			
4B 00	DATA PHASE ERROR			
4E 00	OVERLAPPED COMMANDS ATTEMPTED			
74 40	AUTHENTICATION FAILED			

# **B.11. Sense Key D (Volume Overflow)**

Table 381 — ASC, and ASCQ Summary for Sense Key D (Volume Overflow)

ASC ASCQ	Description		
00 02	END-OF-PARTITION/MEDIUM DETECTED		

#### Annex C. Firmware Download

This annex describes how to compare a firmware level binary to information returned by a drive and determine which firmware is acceptable in which drive.

### C.1. Identifying Level Hardware of Drive

The firmware that is loaded in the drive will report a LOAD ID and RU NAME in INQUIRY IP 03h: Firmware Designation (see 6.3.2 on page 235). The LOAD ID and RU NAME are used to designate the Level Hardware (i.e., Product). The following table defines the LOAD ID and RU NAME values for each Level Hardware.

Table 382 — Load ID and RU Name Designation for LTO2

Product (Level Hardware)	LOAD ID	RU NAME "EBCDIC" Hex	Product ID (Left-Aligned)		
			IBM	OEM	eServer
U160	A1700299	"AJEFGP99" 0xC1D1C5C6C7D7F9F9	- ULT3580-TD2	ULTRIUM-TD2	
FC2G	A170029A	"AJEFGP9A" 0xC1D1C5C6C7D7F9C1			
U160 RoHS	A1700D67	"AJEFAX67" 0xC1D1C5C6C1E7F6F7			-
FC2G RoHS	A1700D68	"AJEFAX68" 0xC1D1C5C6C1E7F6F8			
- Not Applicable HH - Half-High U - Ultra	)				

Table 383 — Load ID and RU Name Designation for LTO3 (part 1 of 2)

Product (Level	LOAD ID	RU Name "EBCDIC" Hex	Product ID (Left-Aligned)		
Hardware)			IBM	OEM	eServer
U160	A1700D50	"AJEFAX50" 0xC1D1C5C6C1E7F5F0	LU T2500 TD2	ULTRIUM-TD3	-
U160 RoHS <sup>a</sup>					
FC2G	A1700D52	"AJEFAX52"	- ULT3580-TD3		
FC4G RoHS-2		0xC1D1C5C6C1E7F5F2			

<sup>-</sup> Not Applicable

HH - Half-High

U - Ultra

<sup>&</sup>lt;sup>a</sup> Minimum level of firmware is 5BG2

Table 383 — Load ID and RU Name Designation for LTO3 (part 2 of 2)

Product (Level	LOAD ID	RU Name "EBCDIC" Hex	Product ID (Left-Aligned)		
Hardware)			IBM	OEM	eServer
HH SAS	A1700D53	"AJEFAX53" 0xC1D1C5C6C1E7F5F3	-	-	HH LTO Gen 3
HH U160	A1700D69	"AJEFAX69" 0xC1D1C5C6C1E7F6F9			
HH SAS	A1700D64	"AJEFAX64" 0xC1D1C5C6C1E7F6F4			
HH U160	A1700D63	"AJEFAX63" 0xC1D1C5C6C1E7F6F3	ULT3580-HH3	ULTRIUM-HH3	-
HH SAS V2	A1700D79	"AJEFAX79" 0xC1D1C5C6C1E7F7F9			HH LTO Gen 3

<sup>-</sup> Not Applicable

Table 384 — Load ID and RU Name Designation for LTO4

Product (Level Hardware)	LOAD ID	RU Name "EBCDIC" Hex	Product ID (Left-Aligned)		
			IBM	OEM	eServer
U160	A1700D6A	"AJEFAX6A" 0xC1D1C5C6C1E7F6C1	- ULT3580-TD4	ULTRIUM-TD4	
FC4G	A1700D6B	"AJEFAX6B" 0xC1D1C5C6C1E7F6C2			
SAS	A1700D6C	"AJEFAX6C" 0xC1D1C5C6C1E7F6C3			-
U320	A1700D70	"AJEFAX70" 0xC1D1C5C6C1E7F7F0			
HH SAS	A1700D71	"AJEFAX71" 0xC1D1C5C6C1E7F7F1	ULT3580-HH4	ULTRIUM-HH4	HH LTO Gen 4
HH U320	A1700D51	"AJEFAX51" 0xC1D1C5C6C1E7F5F1			
HH FC	A1700D66	"AJEFAX66" 0xC1D1C5C6C1E7F6F6			
HH FC V2	A1700D7B	"AJEFAX7B" 0xC1D1C5C6C1E7F7C2			
HH SAS V2	A1700D7A	"AJEFAX7A" 0xC1D1C5C6C1E7F7C1			

HH - Half-High

U - Ultra

<sup>&</sup>lt;sup>a</sup> Minimum level of firmware is 5BG2

U - Ultra

Table 385 — Load ID and RU Name Designation for LTO5

Product (Level	LOAD ID	RU Name "EBCDIC"	Product ID (Left-Aligned)		
Hardware)		Hex	IBM	OEM	eServer
FC8G	A1700D74 "AJEFAX74" 0xC1D1C5C6C1E7F7F4		LII TOFOO TDF		
SAS	A1700D75	"AJEFAX75" 0xC1D1C5C6C1E7F7F5	ULT3580-TD5	ULTRIUM-TD5	-
HH FC	A4700D76	"AJEFAX76"			
HH FC V2	A1700D76	0xC1D1C5C6C1E7F7F6	LII T2500 LII I5		LILLITO Con 5
HH SAS	A 4 7 0 0 D 7 7	"AJEFAX77"	ULT3580-HH5	ULTRIUM-HH5	HH LTO Gen 5
HH SAS V2	A1700D77	0xC1D1C5C6C1E7F7F7			
	- Not Applicable HH - Half-High				

Table 386 — Load ID and RU Name Designation for LTO6

Product (Level	LOAD ID	RU Name "EBCDIC"	Product ID (Left-Aligned)		
Hardware)		Hex	IBM	OEM	eServer
FC8G	A1700D81	"AJEFAX81" 0xC1D1C5C6C1E7F8F1	LILTAGOO TOO	LII TOU IM TOC	
SAS	A1700D82	"AJEFAX82" 0xC1D1C5C6C1E7F8F2	ULT3580-TD6	ULTRIUM-TD6	-
HH FC	A1700D83	"AJEFAX83" 0xC1D1C5C6C1E7F8F3		LILLITO Con C	
HH SAS	A1700D84	"AJEFAX84" 0xC1D1C5C6C1E7F8F4	ULT3580-HH6	ULTRIUM-HH6	HH LTO Gen 6
- Not Applicabl HH - Half-High	- Not Applicable HH - Half-High				

Table 387 — Load ID and RU Name Designation for LTO7

Product (Level	LOAD ID	RU Name "EBCDIC"	Product ID (Left-Aligned)		
Hardware)		Hex	IBM	OEM	eServer
FC8G	A1700D87	"AJEFAX87" 0xC1D1C5C6C1E7F8F7	111 T2500 TD7	ULTRIUM-TD7	
SAS	A1700D88	"AJEFAX88" 0xC1D1C5C6C1E7F8F8	ULT3580-TD7		-
HH FC	A1700D89	"AJEFAX89" 0xC1D1C5C6C1E7F8F9	III T0500 III I7		
HH SAS	A1700D8A	"AJEFAX8A" 0xC1D1C5C6C1E7F8C1	ULT3580-HH7	ULTRIUM-HH7	HH LTO Gen 7
- Not Applicable HH - Half-High	Э				

# C.2. Identifying the product for which the firmware image is intended

The Firmware Image is defined in <u>Table 398</u>.

Table 388 — Firmware Image

Dista		Bit						
Byte	7 msb	6	5	4	3	2	1	0 osb
0				Not Co	acifical			
3			Not Specified					
4	(MSB)	_	FIRMWARE LENGTH + HEADER LENGTH (m+1)					
7			FIRMWA	KE LENGTH + F	IEADER LENG	IH (III+ I <i>)</i>		(LSB)
8	(MSB)		LOAD ID (See "IP 03h: Firmware Designation" on page 235.)					
11								
12	(MSB)	_	FIRMWARE REVISION LEVEL					
15			(See <u>St</u>	andard Inquir	<u>y Data</u> bytes	32 - 35)		(LSB)
16		_		Daar				
23				Rese	erved			
24	(MSB)			RU N	IAME			
31		-	(See "IP 03h: Firmware Designation" on page 235.)					(LSB)
32			N . O					
m		-	Not Specified					

The LOAD ID and RU NAME fields in the Firmware Image are used to define the product (i.e., Level Hardware) for which the Firmware Image is intended.

## C.3. Download Process

Confirm the Level Hardware of the Firmware Image (see C.2.) to be loaded matches the Level Hardware of the drive (see C.1.).

Download the Firmware Image using the WRITE BUFFER - 3Bh (see 5.2.41 on page 185) command.

#### Annex D. Protection Information CRC's

#### D.1. Reed-Solomon CRC

#### D.1.1. Reed-Solomon CRC Algorithm

The Reed Solomon CRC algorithm defined in ECMA-319 is used in this drive:

- a) as a format specific symbol written to tape with each logical block; and
- b) is available for use as protection information associated with each logical block transferred between the drive and a host (see 4.6).

The CRC bytes are Reed-Solomon (N, N-4) codes over GF (256).

```
A calculation in GF (256) is defined by P(x) = x^8 + x^4 + x^3 + x^2 + 1

\alpha = (0 \ 0 \ 0 \ 0 \ 0 \ 1 \ 0)

G(x) = x^4 + \alpha^{201}x^3 + \alpha^{246}x^2 + \alpha^{201}x + 1
```

#### D.1.2. Sample C program to generate Reed-Solomon CRC

The following is sample C code for generating the Reed-Solomon CRC defined in ECMA-319

```
ABSTRACT: function to compute interim LBP CRC
   INPUTS: crc - initial crc (0 for fresh) (i.e., seed)
* *
                    - the number of data bytes to compute CRC for
              cnt
* *
             start - the starting address of the data bytes (e.g., data buffer)
   OUTPUTS: UINT32 - crc in big endian (MSB is first byte)
* /
UINT32 GenerateRSCRC(UINT32 crc, UINT32 cnt, const void *start)
static const UINT32 crcTable[256]=
 { 0x00000000,0x38CF3801,0x70837002,0x484C4803,0xE01BE004,0xD8D4D805,
   0x90989006,0xA857A807,0xDD36DD08,0xE5F9E509,0xADB5AD0A,0x957A950B,
   0x3D2D3D0C,0x05E2050D,0x4DAE4D0E,0x7561750F,0xA76CA710,0x9FA39F11,
   0xD7EFD712,0xEF20EF13,0x47774714,0x7FB87F15,0x37F43716,0x0F3B0F17,
   0x7A5A7A18,0x42954219,0x0AD90A1A,0x3216321B,0x9A419A1C,0xA28EA21D,
   0xEAC2EA1E,0xD20DD21F,0x53D85320,0x6B176B21,0x235B2322,0x1B941B23,
   0xB3C3B324,0x8B0C8B25,0xC340C326,0xFB8FFB27,0x8EEE8E28,0xB621B629,
   0xFE6DFE2A, 0xC6A2C62B, 0x6EF56E2C, 0x563A562D, 0x1E761E2E, 0x26B9262F,
   0xF4B4F430,0xCC7BCC31,0x84378432,0xBCF8BC33,0x14AF1434,0x2C602C35,
   0x642C6436,0x5CE35C37,0x29822938,0x114D1139,0x5901593A,0x61CE613B,
   0xC999C93C,0xF156F13D,0xB91AB93E,0x81D5813F,0xA6ADA640,0x9E629E41,
   0xD62ED642,0xEEE1EE43,0x46B64644,0x7E797E45,0x36353646,0x0EFA0E47,
   0x7B9B7B48,0x43544349,0x0B180B4A,0x33D7334B,0x9B809B4C,0xA34FA34D,
   0xEB03EB4E,0xD3CCD34F,0x01C10150,0x390E3951,0x71427152,0x498D4953,
   0xE1DAE154,0xD915D955,0x91599156,0xA996A957,0xDCF7DC58,0xE438E459,
   0xAC74AC5A,0x94BB945B,0x3CEC3C5C,0x0423045D,0x4C6F4C5E,0x74A0745F,
   0xF575F560,0xCDBACD61,0x85F68562,0xBD39BD63,0x156E1564,0x2DA12D65,
   0x65ED6566,0x5D225D67,0x28432868,0x108C1069,0x58C0586A,0x600F606B,
   0xC858C86C,0xF097F06D,0xB8DBB86E,0x8014806F,0x52195270,0x6AD66A71,
   0x229A2272,0x1A551A73,0xB202B274,0x8ACD8A75,0xC281C276,0xFA4EFA77,
   0x8F2F8F78,0xB7E0B779,0xFFACFF7A,0xC763C77B,0x6F346F7C,0x57FB577D,
   0x1FB71F7E,0x2778277F,0x51475180,0x69886981,0x21C42182,0x190B1983,
   0xB15CB184,0x89938985,0xC1DFC186,0xF910F987,0x8C718C88,0xB4BEB489,
```

```
0xFCF2FC8A,0xC43DC48B,0x6C6A6C8C,0x54A5548D,0x1CE91C8E,0x2426248F,
   0xF62BF690,0xCEE4CE91,0x86A88692,0xBE67BE93,0x16301694,0x2EFF2E95,
   0x66B36696,0x5E7C5E97,0x2B1D2B98,0x13D21399,0x5B9E5B9A,0x6351639B,
   0xCB06CB9C,0xF3C9F39D,0xBB85BB9E,0x834A839F,0x029F02A0,0x3A503AA1,
   0x721C72A2,0x4AD34AA3,0xE284E2A4,0xDA4BDAA5,0x920792A6,0xAAC8AAA7,
   0xDFA9DFA8,0xE766E7A9,0xAF2AAFAA,0x97E597AB,0x3FB23FAC,0x077D07AD,
   0x4F314FAE,0x77FE77AF,0xA5F3A5B0,0x9D3C9DB1,0xD570D5B2,0xEDBFEDB3,
   0x45E845B4,0x7D277DB5,0x356B35B6,0x0DA40DB7,0x78C578B8,0x400A40B9,
   0x084608BA,0x308930BB,0x98DE98BC,0xA011A0BD,0xE85DE8BE,0xD092D0BF,
   0xF7EAF7C0,0xCF25CFC1,0x876987C2,0xBFA6BFC3,0x17F117C4,0x2F3E2FC5,
   0x677267C6,0x5FBD5FC7,0x2ADC2AC8,0x121312C9,0x5A5F5ACA,0x629062CB,
   0xCAC7CACC, 0xF208F2CD, 0xBA44BACE, 0x828B82CF, 0x508650D0, 0x684968D1,
   0x200520D2,0x18CA18D3,0xB09DB0D4,0x885288D5,0xC01EC0D6,0xF8D1F8D7,
   0x8DB08DD8,0xB57FB5D9,0xFD33FDDA,0xC5FCC5DB,0x6DAB6DDC,0x556455DD,
   0x1D281DDE,0x25E725DF,0xA432A4E0,0x9CFD9CE1,0xD4B1D4E2,0xEC7EECE3,
   0x442944E4,0x7CE67CE5,0x34AA34E6,0x0C650CE7,0x790479E8,0x41CB41E9,
   0x098709EA,0x314831EB,0x991F99EC,0xA1D0A1ED,0xE99CE9EE,0xD153D1EF,
   0x035E03F0,0x3B913BF1,0x73DD73F2,0x4B124BF3,0xE345E3F4,0xDB8ADBF5,
   0x93C693F6,0xAB09ABF7,0xDE68DEF8,0xE6A7E6F9,0xAEEBAEFA,0x962496FB,
   0x3E733EFC, 0x06BC06FD, 0x4EF04EFE, 0x763F76FF};
       UINT32 i;
 const UINT8* d = start;
 for ( i=0; i<cnt; i++ )
   crc = (crc << 8) ^ crcTable[*d ^ (crc >> 24)];
   d++;
return crc;
```

#### D.1.3. Sample C program to compute and append Reed-Solomon CRC to a data block

```
/*______
** ABSTRACT: function to compute and append LBP CRC to a data block
** INPUTS: blkbuf - starting address of the data block to protect
           blklen - length of block to protect (NOT including CRC)
** OUTPUTS: UINT32 - length of protected block (to write) including LBP CRC
* /
UINT32 BlockProtectRSCRC(UINT8 *blkbuf, UINT32 blklen)
UINT32 crc = GenerateRSCRC(0x0000000, blklen, blkbuf);
 if (blklen == 0)
   return 0; //no such thing as a zero length block in SSC (write NOP)
 //append CRC in proper byte order (regardless of system endian-ness)
 blkbuf[blklen+0] = (crc >> 24) & 0xFF;
 blkbuf[blklen+1] = (crc >> 16) & 0xFF;
 blkbuf[blklen+2] = (crc >> 8) & 0xFF;
 blkbuf[blklen+3] = (crc >> 0) & 0xFF;
 return (blklen+4); //size of block to be written includes CRC
```

#### D.1.4. Sample C program to to verify block with Reed-Solomon CRC

```
** ABSTRACT: function to verify block with LBP CRC
** INPUTS: blkbuf - starting address of the data block to protect
            blklen - length of block to verify (INCLUDING CRC)
  OUTPUTS: UINT32 - length of block w/o CRC (0 if verify failed)
* /
UINT32 BlockVerifyRSCRC(const UINT8 *blkbuf, UINT32 blklen)
 if (blklen <= 4)
   return 0; //block is too small to be valid, cannot check CRC
 blklen -= 4; //user data portion does not include CRC
#if 1 //method 1: calculate CRC on data only and compare against CRC from block
  UINT32 crccmp = GenerateRSCRC(0x00000000, blklen, blkbuf);
  UINT32 crcblk;
  //this matches the append method in the function above
   crcblk = (blkbuf[blklen+0] << 24)</pre>
              (blkbuf[blklen+1] << 16)</pre>
              (blkbuf[blklen+2] << 8)
              (blkbuf[blklen+3] << 0);</pre>
   if (crccmp != crcblk)
     return 0; //block CRC is incorrect
   return(blklen);
 }
#endif
#if 1 //method 2: calculate including CRC and check magic constant
   if (GenerateRSCRC(0x00000000, blklen+4, blkbuf) != 0x00000000)
     return 0; //block CRC is incorrect (CRC did not neutralize)
   return(blklen);
 }
#endif
```

### D.2. CRC32C (Castagnoli)

#### D.2.1. CRC32C Algorithm

The CRC32C CRC algorithm is available for use as protection information associated with each logical block transferred between the drive and a host (see 4.6). Some host system architectures may offer higher performance methods to calculate CRCs using this type of polynomial over the Reed-Solomon CRC polynomial.

The algorithm is defined by the equation  $x^{32}+x^{28}+x^{27}+x^{26}+x^{25}+x^{23}+x^{22}+x^{20}+x^{19}+x^{18}+x^{14}+x^{13}+x^{11}+x^{10}+x^{9}+x^{8}+x^{6}+1$  which is sometimes expressed as 0x1EDC6F41.

NOTE 69 - The sample functions for CRC32C in this section use a bit swapped form, which is easier/faster for software implementation as it avoids the need to bit swap bytes of input and output.

NOTE 70 - Many other uses of CRC32C (e.g., iSCSI) pad the data to a 32 bit boundary before computing CRC32C. LBP use of CRC32C is byte oriented (as are SSC data blocks), and computes CRC32C on blocks to

the actual byte size of the block and immediately appends the CRC32C without and pad in the calculation or storage of the CRC.

NOTE 71 - Some host hardware implementations may have standard form polynomial instruction(s) that can be used for high performance computation of CRC32C or other standard form polynomials (the Reed-Solomon CRC is not such an algorithm). These instructions may have particular input data alignment requirements (e.g., 32 or 64 bit). Since LBP has no padding and is byte (8 bit) aligned, special operations (e.g., a mix of hardware and software methods) may be required to properly calculate non-aligned block sizes. Additionally hardware implementations may use the normal form rather than the swapped form shown in the code examples in this section. This can affect the method for storage and compare (magic constant). In any event, take care to ensure the CRC is stored and checked properly in all cases. Some CRC32C test vectors can be found in the iSCSI RFC 3720 (B.4). Further information (e.g., hardware implementation(s)) may be found in RFC 3385 or from other sources.

#### D.2.2. Sample C program to generate CRC32C (Castagnoli)

```
ABSTRACT: function to compute interim LBP CRC (bit-swapped method)
      INPUTS:

    initial crc (0xFFFFFFFF for fresh)

* *
                           cnt
                                       - the number of data bytes to compute CRC for
* *
                           start - the starting address of the data bytes
      OUTPUTS: UINT32 - [inverted] crc in big endian (LSB is first byte)
* /
UINT32 GenerateCRC32C(UINT32 crc, UINT32 cnt, const void *start)
 static const UINT32 crcTable[256]=
  { 0x00000000,0xF26B8303,0xE13B70F7,0x1350F3F4,0xC79A971F,0x35F1141C,
      0x26A1E7E8,0xD4CA64EB,0x8AD958CF,0x78B2DBCC,0x6BE22838,0x9989AB3B,
      0x4D43CFD0,0xBF284CD3,0xAC78BF27,0x5E133C24,0x105EC76F,0xE235446C,
      0xF165B798,0x030E349B,0xD7C45070,0x25AFD373,0x36FF2087,0xC494A384,
      0x9A879FA0,0x68EC1CA3,0x7BBCEF57,0x89D76C54,0x5D1D08BF,0xAF768BBC,
      0xBC267848,0x4E4DFB4B,0x20BD8EDE,0xD2D60DDD,0xC186FE29,0x33ED7D2A,
      0xE72719C1,0x154C9AC2,0x061C6936,0xF477EA35,0xAA64D611,0x580F5512,
      0x4B5FA6E6,0xB93425E5,0x6DFE410E,0x9F95C20D,0x8CC531F9,0x7EAEB2FA,
      0x30E349B1,0xC288CAB2,0xD1D83946,0x23B3BA45,0xF779DEAE,0x05125DAD,
      0x1642AE59,0xE4292D5A,0xBA3A117E,0x4851927D,0x5B016189,0xA96AE28A,
      0x7DA08661,0x8FCB0562,0x9C9BF696,0x6EF07595,0x417B1DBC,0xB3109EBF,
      0xA0406D4B,0x522BEE48,0x86E18AA3,0x748A09A0,0x67DAFA54,0x95B17957,
      0xCBA24573,0x39C9C670,0x2A993584,0xD8F2B687,0x0C38D26C,0xFE53516F,
      0 \times 96 BF4 DCC, 0 \times 64 D4 CECF, 0 \times 77843 D3B, 0 \times 85 EFBE38, 0 \times DBFC821C, 0 \times 2997011F,
      0x3AC7F2EB,0xC8AC71E8,0x1C661503,0xEE0D9600,0xFD5D65F4,0x0F36E6F7,
      0x61C69362,0x93AD1061,0x80FDE395,0x72966096,0xA65C047D,0x5437877E,
      0x4767748A,0xB50CF789,0xEB1FCBAD,0x197448AE,0x0A24BB5A,0xF84F3859,
      0x2C855CB2,0xDEEEDFB1,0xCDBE2C45,0x3FD5AF46,0x7198540D,0x83F3D70E,
      0 \times 90 A 3 24 FA, 0 \times 6 2 C8 A7 F9, 0 \times B60 2 C 3 12, 0 \times 4469 4011, 0 \times 5739 B3 E5, 0 \times A55230 E6,
      0xFB410CC2,0x092A8FC1,0x1A7A7C35,0xE811FF36,0x3CDB9BDD,0xCEB018DE,
      0xDDE0EB2A,0x2F8B6829,0x82F63B78,0x709DB87B,0x63CD4B8F,0x91A6C88C,
      0x456CAC67,0xB7072F64,0xA457DC90,0x563C5F93,0x082F63B7,0xFA44E0B4,
      0xE9141340,0x1B7F9043,0xCFB5F4A8,0x3DDE77AB,0x2E8E845F,0xDCE5075C,
      0x92A8FC17,0x60C37F14,0x73938CE0,0x81F80FE3,0x55326B08,0xA759E80B,
      0xB4091BFF,0x466298FC,0x1871A4D8,0xEA1A27DB,0xF94AD42F,0x0B21572C,
      0xDFEB33C7,0x2D80B0C4,0x3ED04330,0xCCBBC033,0xA24BB5A6,0x502036A5,
      0x4370C551,0xB11B4652,0x65D122B9,0x97BAA1BA,0x84EA524E,0x7681D14D,
      0x2892ED69,0xDAF96E6A,0xC9A99D9E,0x3BC21E9D,0xEF087A76,0x1D63F975,
      0x0E330A81,0xFC588982,0xB21572C9,0x407EF1CA,0x532E023E,0xA145813D,
      0x758FE5D6,0x87E466D5,0x94B49521,0x66DF1622,0x38CC2A06,0xCAA7A905,
      0 \\ \\ \text{xD9F75AF1}, 0 \\ \\ \text{x2B9CD9F2}, 0 \\ \\ \text{xFF56BD19}, 0 \\ \\ \text{x0D3D3E1A}, 0 \\ \\ \text{x1E6DCDEE}, 0 \\ \\ \text{xEC064EED}, 0 \\ 
      0xC38D26C4,0x31E6A5C7,0x22B65633,0xD0DDD530,0x0417B1DB,0xF67C32D8,
      0xE52CC12C,0x1747422F,0x49547E0B,0xBB3FFD08,0xA86F0EFC,0x5A048DFF,
      0x8ECEE914,0x7CA56A17,0x6FF599E3,0x9D9E1AE0,0xD3D3E1AB,0x21B862A8,
      0x32E8915C,0xC083125F,0x144976B4,0xE622F5B7,0xF5720643,0x07198540,
```

```
0x590AB964,0xAB613A67,0xB831C993,0x4A5A4A90,0x9E902E7B,0x6CFBAD78,
0x7FAB5E8C,0x8DC0DD8F,0xE330A81A,0x115B2B19,0x020BD8ED,0xF0605BEE,
0x24AA3F05,0xD6C1BC06,0xC5914FF2,0x37FACCF1,0x69E9F0D5,0x9B8273D6,
0x88D28022,0x7AB90321,0xAE7367CA,0x5C18E4C9,0x4F48173D,0xBD23943E,
0xF36E6F75,0x0105EC76,0x12551F82,0xE03E9C81,0x34F4F86A,0xC69F7B69,
0xD5CF889D,0x27A40B9E,0x79B737BA,0x8BDCB4B9,0x988C474D,0x6AE7C44E,
0xBE2DA0A5,0x4C4623A6,0x5F16D052,0xAD7D5351 };

UINT32 i;
const UINT8* d = start;

for ( i=0; i<cnt; i++ )
{
   crc = (crc >> 8) ^ crcTable[*d ^ (crc & 0xFF)];
   d++;
}
   return crc;
}
```

### D.2.3. Sample C code to compute and append CRC32C to a data block

```
/*-
** ABSTRACT: function to compute and append LBP CRC to a data block
** INPUTS: blkbuf - starting address of the data block to protect
** blklen - length of block to protect (NOT including CRC)
** OUTPUTS: UINT32 - length of protected block (to write) including LBP CRC

*/
UINT32 BlockProtectCRC32C(UINT8 *blkbuf, UINT32 blklen)
{
    UINT32 crc = ~GenerateCRC32C(0xFFFFFFFF, blklen, blkbuf); //note bit inversion
    if (blklen == 0)
        return 0; //no such thing as a zero length block in SSC (write NOP)

//append CRC in proper byte order (regardless of system endian-ness)
    blkbuf[blklen+0] = (crc >> 0) & 0xFF;
    blkbuf[blklen+1] = (crc >> 8) & 0xFF;
    blkbuf[blklen+2] = (crc >> 16) & 0xFF;
    blkbuf[blklen+3] = (crc >> 24) & 0xFF;

    return (blklen+4); //size of block to be written includes CRC
}
```

#### D.2.4. Sample C code to verify block with CRC32C CRC

```
/*----
** ABSTRACT: function to verify block with LBP CRC

** INPUTS: blkbuf - starting address of the data block to protect

** blklen - length of block to verify (INCLUDING CRC)

** OUTPUTS: UINT32 - length of block w/o CRC (0 if verify failed)

*/
UINT32 BlockVerifyCRC32C(const UINT8 *blkbuf, UINT32 blklen)
{
   if (blklen <= 4)
      return 0; //block is too small to be valid, cannot check CRC

   blklen -= 4; //user data portion does not include CRC

#if 1 //method 1: calculate CRC on data only and compare against CRC from block
   {
      UINT32 crccmp = ~GenerateRSCRC(0xFFFFFFFF, blklen, blkbuf); //note bit inversion</pre>
```

```
UINT32 crcblk;
   //this matches the append method in the function above
    crcblk = (blkbuf[blklen+0] << 0)</pre>
               (blkbuf[blklen+1] << 8)</pre>
               (blkbuf[blklen+2] << 16)
              (blkbuf[blklen+3] << 24);</pre>
    if (crccmp != crcblk)
     return 0; //block CRC is incorrect
    return(blklen);
  }
#endif
#if 1 //method 2: calculate including CRC and check magic constant
   //{\tt NOTE:} \ {\tt bit \ swapped \ magic \ constant \ is \ also \ bit+byte \ swapped}
               0x1C2D19ED //"nominal" result including [inverted] CRC
  //
               0xB798B438 //"swapped" result including [inverted] CRC
  //
  //NOTE: magic constant check below does NOT need bit inversion
   if (GenerateCRC32C(0xFFFFFFFF, blklen+4, blkbuf) != 0xB798B438)
      return 0; //block CRC is incorrect (CRC did not neutralize)
   return(blklen);
  }
#endif
```

#### D.3. CRC32-IEEE

#### D.3.1. CRC32-IEEE Algorithm

The CRC32-IEEE algorithm is not used for logical block protection but is used only in the transport layer (i.e., Fibre Channel CRC). This algorithm is defined by the equation  $x^{32}+x^{26}+x^{23}+x^{22}+x^{16}+x^{12}+x^{11}+x^{10}+x^8+x^7+x^5+x^4+x^2+x+1$  which is sometimes expressed as 0x04C11DB7.

#### Annex E. Notices

#### E.1. Trademarks

The following terms are trademarks of International Business Machines Corporation in the United States or other countries (or regions) or both:

AIX® OS/400® i5/OS AS/400® pSeries® RAA eServer $^{\text{TM}}$  SP zSeries

IBM® RS/6000® NetBackup (NBU)

iSeries® TotalStorage®

The following are U. S. trademarks of Hewlett-Packard Company, International Business Machines Corporation, and Seagate Technology:

Linear Tape-Open

LTO

Ultrium

Intel® and Itanium are registered trademarks of Intel Corporation in the United States, or other countries (or regions), or both.

Linux is a register trademark of Linus Torvalds.

NetBackup is a trademark of Symantec

Microsoft®, Windows®, Windows NT®, and the Windows logo are registered trademarks of Microsoft Corporation in the United States, or other countries (or regions), or both.

Other company, product, and service names may be trademarks or service marks of others.

# Index Of Counters (log parameters not in counter format are not included)

	Page
"DEAD DRIVE" Flag {3Ch:000Dh}	
"DEAD MEDIA" Flag {3Ch:000Ch}	
"WORN MEDIA" Flag {3Ch:000Bh}	
Abort Count [by port] {37h:0Fp8h}	
Abort Time [by port] {37h:0Fp9h}	
Accumulated transitions to active	
Accumulated transitions to idle_c	
Active Capacity Efficiency {37h:7?00h}	
Active CQs Loss (on-the-fly) {37h:7?13h}	
Active Distance CQs (on-the-fly) {37h:7?23h}	
Active Distance DSS {37h:7?22h}	
Active Distance Skip {37h:7?21h}	
Active Distance Total {37h:7?2Fh}	
Active DSS Loss {37h:7?12h}	
Active Initiator Count {37h:0E00h}	
Active Skip Loss {37h:7?11h}	
Active Sync Loss {37h:7?10h}	
Activity duty cycle {14h:0013h}	
Approximate native capacity between BOP and EW of the current partition {0Ch:0005h}	
Approximate native capacity from BOP to EOD {0Ch:0004h}	
Approximate native capacity from BOP to the current position of the medium {0Ch:0007h}	
Approximate native capacity of partition(s) {17h:0202h}	
Approximate remaining native capacity to early warning of partition(s) {17h:0204h}	
Approximate used native capacity of partition(s) {17h:0203h}	
Average Command Latency {37h:0DF0h}	
Average Comp Buffer Rate {37h:2?92h}	
Average Comp Sync Length {37h:2?9Ch}	
Average Comp Transfer Length {37h:2?98h}	
Average Comp Transfer Rate {37h:2?91h}	
Average Dequeue Latency {37h:0DF1h}	
Average Host Buffer Rate {37h:2?82h}	
Average Host Sync Length {37h:2?8Ch}	
Average Host Transfer Length {37h:2?88h}	
Average Host Transfer Rate {37h:2?81h}	
Average Tape Buffer Rate {37h:2?A1h}	
Band Change Count {37h:2?11h}	
Beginning of medium passes {17h:0101h}	
Bytes read from medium {1Bh:0005h}	
Bytes read from tape {32h:0005h}	
Bytes transferred from application client {1Bh:0007h}	
Bytes transferred from server {32h:0007h}	
Bytes transferred to application client {1Bh:0003j}	
Bytes transferred to server {32h:0003h}	
Bytes written to medium {1Bh:0009h}	
Bytes written to tape {32h:0009h}	
Cartridge Serial Number {3Ch:0015h}	
Clean Lifetime Mounts {3Dh:0060h}	
Clean Requested Flag {3Ch:0011h}	
Cleaning Requested {0Ch:0100h}:	
Command Count {37h:0Cp0h}	
Command Queue Count {37h:0CpCh}	
Command Queue Latency {37h:0CpDh}	
Command Queue Relative Time {37h:0CpEh}	
Command Relative Time {37h:0Cp2h}	330
COMMINANCE COMMON (A/NOM DIN)	5 5 ( )

Command Transfer Byte Count from Host (out) {37h:0Cp9h}	.330
Command Transfer Byte Count to Host (in) {37h:0Cp5h}	. 330
Command Transfer Count from Host (out) {37h:0Cp8h}	. 330
Command Transfer Count to Host (in) {37h:0Cp4h}	. 330
Command Transfer Timing from Host (out) {37h:0CpAh}	. 330
Command Transfer Timing to Host (in) {37h:0Cp6h}	. 330
Comp Buffer Efficiency {37h:2?94h}	. 334
Compressed Data (Medium) {37h:2?71h}	
Compressed Data {37h:2?61h}	. 333
Compression Ratio {37h:2?6Ch}	. 333
Count {37h:0q00h}	. 328
Cumulative Cartridge Loads Counter {3Ch:0006h}	. 341
Cumulative Cleaning Counter {3Ch:000Ah}	. 342
Cumulative Power On Time Counter {3Ch:0008h}	. 342
Cumulative Time Tape is Loaded and Tensioned {3Ch:0009h}	. 342
Current Initiator {37h:0E03h}	. 331
Data Acquisition Temps {33h:0005h}	
Data Acquisition Temps {34h:0005h}	. 322
Data compression enabled {1Bh:0100h}	. 313
Data Temps {33h:0007h}	
Data Temps {34h:0007h}	
Data Transients {33h:0002h}	
Data Transients {34h:0002h}	. 322
Datarate Performance Impacting ERPs {37h:2?50h}	. 333
Dataset Overrun {34h:0019h}	
Dataset Underrun {33h:000Fh}	
Datasets Corrected {33h:0000h}	
Datasets Corrected {34h:0000h}	
Datasets Processed {37h:2?68h}	
Degate Data {37h:2?63h}	. 333
Device Read Datasets Processed {38h:0006h}	
Device Read Datasets Transferred {38h:000Ah}	. 336
Device Read Kibibytes Processed {38h:0007h}	. 336
Device Read Kibibytes Transferred {38h:000Bh}	. 336
Device Write Datasets Processed {38h:0004h}	. 336
Device Write Datasets Transferred {38h:0008h}	. 336
Device Write Kibibytes Processed {38h:0005h}	
Device Write Kibibytes Transferred {38h:0009h}	. 336
Drive Efficiency {37h:0000h}	
Drive Lifetime Load Perms {3Dh:0092h}	. 344
Drive Lifetime Load Temps {3Dh:00A2h}	
Drive Lifetime Megabytes Read {3Dh:0042h}	. 343
Drive Lifetime Megabytes Written {3Dh:0041h}	. 343
Drive Lifetime Mounts {3Dh:0040h}	. 343
Drive Lifetime Read Perms {3Dh:0091h}	. 344
Drive Lifetime Read Temps {3Dh:00A1h}	. 344
Drive Lifetime Unload Perms {3Dh:0093h}	. 344
Drive Lifetime Unload Temps {3Dh:00A3h}	. 344
Drive Lifetime Write Perms {3Dh:0090h}	. 344
Drive Lifetime Write Temps {3Dh:00A0h}	. 344
Drive manufacturer's serial number {14h:0040h}	. 291
Drive serial number {14h:0041h}	. 291
Drive Status Data {11h:8100h)	
DT device primary port status {11h:0101h+}:	. 270
Duty cycle sample time {14h:0010h}:	. 290
ECC Corrections Counter {3Ch:0004h}	
Encryption Control Descriptor {11h:E00h}	. 271

	ERP Servo Adjust Hi {34h:000Ch}	323
	ERP Servo Adjust Lo {34h:000Dh}	323
Ī	Extended very high frequency data {11h:0004h}	270
	FID Events {33h:000Dh}	321
	FID Events {34h:001Dh}	323
	First encrypted logical object identifier(s) {17h:0200h}	303
	First unencrypted logical object on the EOP side of the first encrypted logical object identifier(s) {17h:0201h}	303
	Flush Buffer Hits {37h:15F0h}	333
	Flush Count (Media) {37h:1580h}	333
	Flush Count {37h:1500h}	333
	Flush Relative Time (Media) {37h:15A0h}	333
	Flush Relative Time {37h:1520h}	333
	Flush Time (Media) {37h:1590h}	333
	Flush Time {37h:1510h}	333
	Fraction of Partition Traversed {38h:000Dh}	337
	Fraction of Volume Traversed {38h:000Fh}	337
	Hard read errors {14h:000Fh}:	290
	Hard write errors {14h:000Eh}:	290
	Host Aborts {39h:0007h}	338
	Host Buffer Efficiency {37h:2?84h}	334
	Host Protocol Errors {39h:000h}	338
	Host Read Blocks Processed {38h:0002h}	336
	Host Read Kibibytes Processed {38h:0003h}	336
	Host Recoveries {39h:0010h}	338
	Host Resets {39h:0008h}	338
	Host Write Blocks Processed {38h:0000h}	336
	Host Write Kibibtyes Processed {38h:0001h}	
	Housekeeping Events {33h:000Ch}	321
	Housekeeping Events {34h:0017h}	323
	Last load read compression ratio {17h:0013h}	
	Last load write compression ratio {17h:0012h}	301
	Last mount megabytes read {17h:000Fh}	
	Last mount megabytes written {17h:000Eh}	
	Last mount unrecovered read errors {17h:000Dh}	
	Last mount unrecovered write errors {17h:000Ch}	
	Library Interface Buffer Errors {3Dh:0083h}	
	Library Interface Efficiency {37h:001Ah}	
	Library Interface Framing Errors {3Dh:0085h}	344
	Library Interface Loader Failures {3Dh:0088h}	
	Library Interface Logical Errors {3Dh:0087h}	
	Library Interface Messages Received {3Dh:0080h}	
	Library Interface Messages Transmitted {3Dh:0081h}	
	Library Interface Protocol Errors {3Dh:0086h}	
	Library Interface Resets {3Dh:0082h}	
	Library Interface Sync Errors {3Dh:0084h}	
	Lifetime cleaning cycles {0Ch:8002h}:	
	Lifetime cleaning operations {14h:0001h}:	
	Lifetime load cycles {0Ch:8001h}:	
	Lifetime medium motion (head) hours when incompatible medium was last loaded {14h:0005h}:	
	Lifetime medium motion (i.e., head) hours {14h:0003h}:	
	Lifetime megabytes read {17h:0011h}	
	Lifetime megabytes written {17h:0010h}	
	Lifetime meters of tape processed {14h:0004h}:	
	Lifetime power cycles {14h:000Ch}:	
	Lifetime power on hours {14h:0002h}:	
	Lifetime power on hours when the last operator initiated forced reset and/or emergency eject occurred {14h:000Bh}:	
	Lifetime power on hours when the last power consumption condition occurred (i.e. TapeAlert code 1Ch) {14h:0007h	· .

289	
Lifetime power on hours when the last temperature condition occurred (i.e., TapeAlert code 24h) {14h:0006h}:	289
Lifetime Power On Seconds {3Dh:0100h}	344
Lifetime Power-on time {0Ch:8003h}:	269
Lifetime volume loads {14h:0000h}:	
Long Queue Latency Count [>1 sec] {37h:0DF8h}	331
Long Queue Latency Count [>10 sec] {37h:0DF9h}	331
Long Queue Latency Count [>100 sec] {37h:0DFAh}	
Long Queue Latency Count [>1000 sec] {37h:0DFBh}	
Match Filter ERP {33h:000Ah}	
Match Filter ERP {34h:0016h}	
Maximum Comp Transfer Rate {37h:2?90h}	
Maximum Host Transfer Rate {37h:2?80h}	
Maximum native capacity that is currently allowed to be in the device object buffer {0Ch:0008h}	
Maximum recommended mechanism temperature exceeded {14h:0081h}	291
Maximum recommended tape path temperature exceeded {17h:0082h}	302
Maximum Tape Transfer Rate {37h:2?A0h}	334
Media Efficiency {37h:0001h}	327
Media Erase {37h:2003h}	333
Media Idle {37h:2000h}	333
Media Phase Cycles {37h:20?1h}	333
Media Phase Timing {37h:20?0h}	333
Media Position {37h:2004h}	333
Media Read {37h:2002h}	333
Media Write {37h:2001h}	333
Medium Clean Count {37h:0059h}	328
Medium Clean Time {37h:0049h}	328
Medium Dwell Count {37h:0058h}	328
Medium Dwell Time {37h:0048h}	328
Medium Eject Count {37h:0056h}	328
Medium Eject Time {37h:0046h}	327
Medium Empty Count {37h:0051h}	328
Medium Empty Time {37h:0041h}	327
Medium Extract Count {37h:0057h}	328
Medium Extract Time {37h:0047h}	327
Medium Insert Count {37h:0052h}	328
Medium Insert Time {37h:0042h}	
Medium Load Count {37h:0054h}	328
Medium Load Time {37h:0044h}	327
Medium motion (i.e., head) hours for each medium type {14h:1000h}	
Medium motion (i.e., head) hours since last successful cleaning operation {14h:0008h}:	
Medium motion (i.e., head) hours since second to last successful cleaning operation {14h:0009h}:	
Medium motion (i.e., head) hours since third to last successful cleaning operation {14h:000Ah}:	
Medium Mount Count {37h:0053h}	
Medium mount time {17h:0014h}	
Medium Mount Time {37h:0043h}	
Medium Ready Count {37h:0055h}	
Medium ready time {17h:0015h}	
Medium Ready Time {37h:0045h}	
Medium removal prevented {14h:0080h}	
Medium Status Data {11h:8001h}	
Medium VolSer {11h:8000h}	
Megabytes read from medium {1Bh:0004h}	
Megabytes read from tape {32h:0004h}	
Megabytes Read since Clean {3Dh:0062h}	
Megabytes transferred from application client {1Bh:0006h}	
Megabytes transferred from server {32h:0006h}	310

Megabytes transferred to application client {1Bh:0002h}:	312
Megabytes transferred to server {32h:0002h}	319
Megabytes Written since Clean {3Dh:0061h}	343
Megabytes written to medium {1Bh:0008h}	312
Megabytes written to tape {32h:0008h}	319
Middle of tape passes {17h:0102h}	303
Minimum native capacity between EW and LEOP of the current partition {0Ch:0006h}	268
Mounts since Clean {3Dh:0063h}	344
Moving Tape Buffer Efficiency {37h:2?A5h}	334
Moving Tape Buffer Rate {37h:2?A3h}	334
Nominal Capacity of Partition {38h:000Ch}	337
Nominal Capacity of Volume {38h:000Eh}	337
Number of mounts for the current volume	317
Padded Data (Medium) {37h:2?72h}	333
Padded Data {37h:2?62h}	333
Page valid {17h:000h}	300
Partition 0 Maximum Capacity {31h:0003h}	318
Partition 0 Remaining Capacity {31h:0001h}	318
Partition 1 Maximum Capacity {31h:0004h}	318
Partition 1 Remaining Capacity {31h:0002h}	318
Performance Impact by ERPs {37h:2?52h}	333
Performance Impacting ERPs {37h:2?51h}	333
Port Rate Changes {37h:0Dp7h}	331
Port Throughput Efficiency {37h:0Dp4h}	331
Port Throughput Rate {37h:0Dp3h}	331
Port Throughput Rate Maximum Bursting {37h:0Dp1h}	331
Port Throughput Rate Maximum Sustained {37h:0Dp2h}	331
Position Buffer Hits {37h:14F0h}	333
Position Count (Media) {37h:1480h}	
Position Count {37h:1400h}	
Position Relative Rate (Media) {37h:14B0h}	
Position Relative Rate {37h:1430h}	
Position Relative Time (Media) {37h:14A0h}	
Position Relative Time {37h:1420h}	
Position Time (Media) {37h:1490h}	
Position Time {37h:1410h}	
Potential conflict list {11h:0201h+)	270
Potential conflict list entries present {11h:0200h}	
Power On Seconds {3Dh:0101h}	
Primary Initiator {37h:0E01h}	
Primary Interface Efficiency {37h:0010h}	
Primary Interface Port 0 Efficiency {37h:0011h}	
Primary Interface Port 1 Efficiency {37h:0012j}	
Primary Port Features {11h:9101h+}	
Read Compression ratio {1Bh:0000h}	
Read Compression ratio x 100 {32h:0000h}	
Read Count {37h:0300h}	
Read Cycle Relative Time {37h:1220h}	
Read Cycle Time {37h:1210h}	
Read Cycles {37h:1200h}	
Read duty cycle {14h:0011h}	
Read Exit Relative Time {37h:1224h}	
Read Filemark (perf) Relative Time {37h:03D4h}	
Read Media Blocks Counter {3Ch:0003h}	
Read Pause Relative Time {37h:1223h}	
Read Pauses {37h:1201h}	
Read Performance Efficiency {37h:03D0h}	329

Read Ready Relative Time {37h:1222h}	. 329
Read Setup Relative Time {37h:1221h}	
Read Timing {37h:0301h}	
Read Traverse EM Relative Time {37h:1225h}	
Ready duty cycle {14h:0015h}	. 291
Relative Time {37h:0q01h}	. 328
Remaining Capacity of Partition {38h:0011h}	
Remaining Capacity of Volume {38h:0010h}	
Reread Media Blocks Counter {3Ch:0005h}	. 341
Reset Count [by port] {37h:0Fp3h}	. 332
Reset Seconds {3Dh:0102h}	. 344
Resource Recoveries [by port] {37h:0Fp2h}	
Rewrite Media Blocks Counter {3Ch:0002h}	. 341
Secondary Initiator {37h:0E02h}	. 331
Seek Block Count {37h:06D1h}	. 330
Seek Count {37h:0600h}	. 330
Seek Relative Time {37h:0602h}	. 330
Seek Timing {37h:0601h}	. 330
Sequence Errors {34h:0008h}	. 322
Servo Acquisition Temps {33h:0004h}	. 320
Servo Acquisition Temps {34h:0004h}	. 322
Servo AGA Gain ERP {34h:0010h}	. 323
Servo Opposite Gap ERP {34h:0012h}	. 323
Servo Position Events {33h:0011h}	. 321
Servo Position Events {34h:001Eh}	. 323
Servo Skip Events {33h:000Bh}	. 321
Servo Skip Events {34h:001Bh}	. 323
Servo Speed Relative Time {37h:5Fs0h}	. 334
Servo Temps {33h:0006h}	. 320
Servo Temps {34h:0006h}	. 322
Servo Transients {33h:0001h}	. 320
Servo Transients {34h:0001h}	. 322
Speed Changes {37h:2?F0h}	. 334
Speed Forced {37h:2?F1h}	. 334
Static Capacity Efficiency (Partition t) {37h:8t00h}	. 335
Static Capacity Efficiency {37h:7000h}	. 335
Static Datasets Media (Partition t) {37h:8t10h}	. 335
Static Datasets Media {37h:7010h}	. 335
Static Datasets Used (Partition t) {37h:8t11h}	. 335
Static Datasets Used {37h:7011h}	. 335
Static Distance Media (Partition t) {37h:8t20h}	. 335
Static Distance Media {37h:7020h}	. 335
Static Distance Used (Partition t) {37h:8t21h}	. 335
Static Distance Used {37h:7021h}	. 335
Static Remaining Capacity in SkipSync Buffer {37h:7030h}	. 335
Sync Count [Host] {37h:0500h}	. 329
Sync Count [Implicit] {37h:05D1h}	. 330
Sync Relative Time [Host] {37h:0502h}	. 330
Sync Relative Time [Implicit] {37h:05D4h}	. 330
Sync Timing [Host] {37h:0501h}	. 330
Sync Timing [Implicit] {37h:05D2h}	. 330
Tape Buffer Efficiency {37h:2?A6h}	. 334
Tape Efficiency {37h:2?A8h}	. 334
Tape lot identifier {17h:0041h}	
Tape Thrashing {37h:2?A7h}	. 334
Time {37h:0040h}	. 327

Time Since Last Cleaning Counter {3Ch:0007h}	. 342
Timing {37h:0q01h}	
Total Channel Read Bytes {0Ch:0003h}:	. 268
Total Channel Write Bytes {0Ch:0000h}:	. 268
Total Corrected Read Errors {03h:0003h}	. 266
Total Corrected Write Errors {02h:0003h}:	. 265
Total Device Read Bytes {0Ch:0002h}:	. 268
Total Device Write Bytes {0Ch:0001h}:	
Total Megabytes Processed Since Cleaning {0Ch:8000h}:	
Total native capacity {17h:0016h}	
Total Non-Medium Error Count {06h:0000h}:	
Total Read Kibibtyes Processed {03h:0005h}	
Total Read Retries {03h:0004h}	
Total Retries {33h:0008h}	
Total Retries {34h:0015h}	
Total Uncorrected Read Errors {03h:0006h}	
Total Uncorrected Write Errors {02h:0006h}:	
Total used native capacity {17h:0017h}	
Total Write Kibibytes Processed {02h:0005h}:	
Total Write Retries {02h:0004h}:	
Transfer Byte Count from Host (out) {37h:0409h}	
Transfer Byte Count from Host (out) {37h:0q09h}	
Transfer Byte Count to Host (in) {37h:0305h}	
Transfer Byte Count to Host (in) {37h:0405h}	
Transfer Byte Count to Host (in) {37h:0505h}	
Transfer Byte Count to Host (in) {37h:0605h}	
Transfer Byte Count to Host (in) {37h:0q05h}	
Transfer Count from Host (out) {37h:0408h}	
Transfer Count from Host (out) {37h:0q08h}	
Transfer Count to Host (in) {37h:0304h}	
Transfer Count to Host (in) {37h:0404h}	
Transfer Count to Host (in) {37h:0504h}	
Transfer Count to Host (in) {37h:0604h}	
Transfer Count to Host (in) {37h:0q04h}	
Transfer Recover Time [by port] {37h:0Fp1h}	
Transfer Recoveries [by port] {37h:0Fp0h}	
Transfer Timing from Host (out) {37h:040Ah}	
Transfer Timing from Host (out) {37h:0q0Ah}	
Transfer Timing to Host (in) {37h:0306h}	
Transfer Timing to Host (in) {37h:0406h}	
Transfer Timing to Host (in) {37h:0506h}	
Transfer Timing to Host (in) {37h:0606h}	
Transfer Timing to Host (in) {37h:0q06h}	
Uncompressed Data {37h:2?60h}	
Velocity Events {33h:0003h}	
Velocity Events {34h:0003h}	
Vendor-Reserved	
Vendor-Reserved (Blocks Lifted) {33h:000Eh}	
Vendor-Reserved {33h:0009h}	
Vendor-Reserved {33h:0011h}	
Vendor-Reserved {34h:0009h}	
Vendor-Reserved {34h:000Ah}	
Vendor-Reserved {34h:000Bh}	
Vendor-Reserved {34h:000Eh}	
Vendor-Reserved {34h:000Fh}	
Vendor-Reserved {34h:0013h}	
Vendor-Reserved {34h:0014h}	.323

Vendor-Reserved {34h:0018h}	323
Vendor-Reserved {34h:001Ch}	323
Vendor-Reserved {39h:0009h}	338
Vendor-Reserved {39h:000Ah}	338
Very high frequency data {11h:0000h}:	
Very high frequency polling delay {11h:0001h}:	
Volume barcode {17h:0042h}	
Volume Datasets Read {17h:0007h}	
Volume Datasets Read {30h:0007h}:	
Volume Datasets Written {17h:0002h}	
Volume Datasets Written {30h:0002h}:	
Volume Fatal Suspended Reads {30h:000Bh}:	
Volume Fatal Suspended Writes {30h:0006h}:	
Volume license code {17h:0044h}	
Volume Lifetime Megabytes Read {3Dh:0022h}	
Volume Lifetime Megabytes Written {3Dh:0021h}	
Volume Lifetime Mounts {3Dh:0020h}	
Volume loads since last parameter reset {14h:000Dh}:	
Volume manufacturer {17h:0043h}	
Volume Mounts {17h:0001h}	
Volume Mounts {30h:0001h}	
Volume not present duty cycle {14h:0014h}	
Volume personality {17h:0045h}	
Volume Read Perms {30h:0009h}:	
Volume Read Retries {30h:0008h}:	
Volume Recovered Read Errors {17h:0008h}	
Volume Recovered Write Data Errors {17h:0003h}	
Volume serial number {17h:0040h}	
Volume Suspended Reads {30h:000Ah}	
Volume Suspended Writes {30h:0005h}:	
Volume Unrecovered Read Errors (i.e., Read Perms) {17h:0009h}	
Volume Unrecovered Write Data Errors (i.e., Write Perms) {17h:0004h}	
Volume Unrecovered Write Servo Errors {17h:0006h}	
Volume Write Perms {30h:0004h}:	
Volume Write Retries {30h:0003h}:	
Volume Write Servo Errors (updated on both temp and perm) {17h:0005h}	
Window Buffer Efficiency {37h:2?85h}	
Window Comp Buffer Efficiency {37h:2?95h}	
Window Comp Buffer Rate {37h:2?93h}	
Window Host Buffer Rate {37h:2?83h}	
Window Tape Buffer Efficiency {37h:2?A4h}	
Window Tape Buffer Rate {37h:2?A2h}	
WORM {17h:0081h}:	
Wrap Change Count {37h:2?10h}	
Write Compression Ratio x 100 {1Bh:0001h}	
Write Compression Ratio x 100 {32h:0001h}	
Write Count {37h:0400h}	
Write Cycle Relative Time {37h:1020h}	
Write Cycle Time {37h:1010h}	
Write Cycles {37h:1000h}	
Write duty cycle {14h:0012h}	
Write Exit Relative Time {37h:1024h}	
Write Filemark Relative Time {37h:04D4j}	
Write Media Blocks Counter {3Ch:0001h}	
Write Pause Relative Time {37h:1023h}	
Write Pauses {37h:1001h}	
Write Performance Efficiency {37h:04D0h}	329

28 September 2015	GA32-0928-02
Write protect {17h:0080h}	302
Write Ready Relative Time {37h:1022h}	332
Write Relative Time {37h:0402h}	329
Write Setup Relative Time {37h:1021h}	332
Write Timing {37h:0401h}	329



Printed in USA

GA32-0928-02

