Week1: Getting Started with Jetson Nano Developer Kit Edge Computing

C. García garsanca@ucm.es

May 4, 2022

"NVIDIA-Jetson: Hello AI World", https://github.com/dusty-nv/jetson-inference/ blob/master/docs/aux-docker.md



Outline

- 1 Intro
- 2 Setup Container
- 3 Installing PyTorch
- 4 Setup ML Container



Setup Jetson-Nano

In theory SD Card has been flashed with a installation (see Slides Week1-Setup_JetsonNano-install)

Credentials

- User name: nano
- User password: nano_pass



Using Camera (CSI Camera)

- CSI camera is the Rpi Camera connected through ribbon cable
 - More info could be consulted in Jetson Nano 2GB Developer Kit User Guide
- To check CSI camera, you can run nvgstcapture-1.0, which will start capture and preview display it on the screen:

```
Terminal #1

nano@jetson-nano:-$ nvgstcapture-1.0
Encoder null, cannot set bitrate!
Encoder Profile = High
Supported resolutions in case of ARGUS Camera
(2): 640x480
(3): 1280x720
(4): 1920x1080
.....
```



Using Camera (CSI Camera)

- Check rotation
- This example command will rotate the image 180 degrees (vertical flip)

```
Terminal #1

nano@jetson-nano:-$ nvgstcapture-1.0 --orientation 2
.....
```



Take a picture and save to disk

- Connect CSI camera
- **2** Execute in a shell the command *nvgstcapture-1.0* –automate -capture-auto
- 3 Open File with eog nvcamtest XX.jpg



Capture a video and save to disk

- Connect CSI camera
- Execute in a shell the command nvgstcapture-1.0 -mode=2 -automate -capture-auto
- 3 Application will record 10 seconds of video
- 4 Play File recorded with totem nvcamtest_XX.mp4



Intro

- There are several pre-configured containers to be able to use the Jetson-Nano board
- The most common are related to their use for artificial intelligence and machine learning



Machine Learning Containers for Jetson and JetPack

- Extracted from https://github.com/dusty-nv/jetson-containers
- Hosted on NVIDIA GPU Cloud (NGC) are the following Docker container images for machine learning on Jetson:
 - I4t-ml
 - I4t-pytorch
 - I4t-tensorflow



Machine Learning Container

- The **I4t-ml** docker image contains *TensorFlow*, *PyTorch*, JupyterLab, and other popular ML and data science frameworks such as scikit-learn, scipy, and Pandas pre-installed in a Python 3.6 environment
 - Latest 14t-ml:r32.6.1-py3
 - TensorFlow 1.15.5
 - PyTorch v1.9.0
 - torchvision v0.10.0
 - torchaudio v0.9.0
 - onnx 1.8.0
 - CuPy 9.2.0
 - numpy 1.19.5
 - numba 0.53.1
 - OpenCV 4.5.0 (with CUDA)
 - pandas 1.1.5 _ colour 1 E /



Pytorch Container

- The **I4t-pytorch** docker image contains *PyTorch* and *torchvision* pre-installed in a Python 3.6 environment
 - Lastest 14t-pytorch:r32.6.1-pth1.9-py3
 - PyTorch v1.9.0
 - torchvision v0.10.0
 - torchaudio v0.9.0



Running Docker Container

- Pre-built Docker container images for this project are hosted on DockerHub
- These containers use the l4t-pytorch base container, so support for transfer learning / re-training is already included



Inference instructions

■ Follow the github https://github.com/dusty-nv/ jetson-inference/blob/master/docs/aux-docker.md



Launching the Container

- It's recommended to use the script docker/run.sh script to run the container
 - docker/run.sh will automatically pull the correct container tag from DockerHub based on your currently-installed version of JetPack-L4T
 - It also mount the appropriate data directories and devices so that you can use cameras/display/ect from within the container
 - More DNN models available in https: //github.com/dusty-nv/jetson-inference/blob/ master/docs/building-repo-2.md#downloading-models



Launching the Container

IMPORTANT: if you are using CSI (Rpi Camera): -volume /tmp/argus_socket:/tmp/argus_socket

```
Terminal #1

nano@jetson-nano:-$ git clone --recursive https://github.com/dusty-nv/jetson-inference
Cloning into jetson-inference...
remote: Enumerating objects: 20861, done.
....

nano@jetson-nano:-$ cd jetson-inference/
nano@jetson-nano:-/jetson-inference/
docker/run.sh --volume /tmp/argus_socket:/tmp/argus_socket
reading L4T version from /etc/nv_tegra_release
L4T BSP Version: L4T R32.6.1
[sudo] password for nano:
size of data/networks: 79397 bytes
....
```



Mount data volumes

- For reference, the following paths automatically get mounted from your host device into the container:
 - jetson-inference/data (stores the network models, serialized TensorRT engines, and test images)
 - jetson-inference/python/training/classification /data (stores classification training datasets)
 - jetson-inference/python/training/classification/models (stores classification models trained by PyTorch)
 - jetson-inference/python/training/detection/ssd/data (stores detection training datasets)
 - jetson-inference/python/training/detection/ssd/models (stores detection models trained by PyTorch)




Once the container is up and running, you can then run example programs from the tutorial like normal inside the container:

```
Terminal #1

root@jetson-nano:/jetson-inference# cd build/aarch64/bin
root@jetson-nano:/jetson-inference/build/aarch64/bin# ./video-viewer
root@jetson-nano:/jetson-inference/build/aarch64/bin# ./imagenet images/jellyfish.jpg images/tes
root@jetson-nano:/jetson-inference/build/aarch64/bin# ./detectnet images/peds_0.jpg images/test/
# (press Ctrl+D to exit the container)
```



■ Note that video-viewer catches the image from webcam

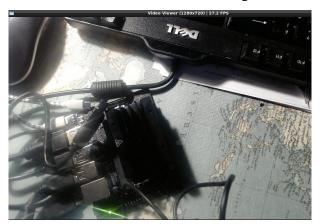






Note that imagenet app classifies the image jellyfish.jpg as a jellyfish and store the image solution in the path data/images/test with a confidence of 99.85%






■ Note that detectnet app detects four persons with a confidence of 70.0%, 97.6%, 98.4% and 86.1% and store the image solution in path *data/images/test*

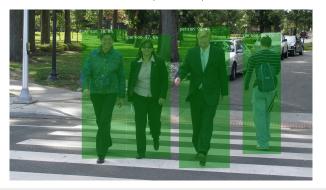



Download other models

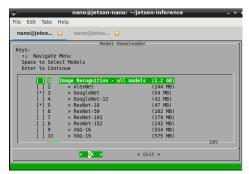

```
Terminal #1

nano@jetson-nano:-$ cd jetson-inference/tools
nano@jetson-nano:-/jetson-inference$ ./download-models.sh
....
```



Installing PyTorch

- If you are running the Docker Container, it should already be installed on your Jetson
- Otherwise you can install it

```
Terminal #1

nano@jetson-nano:-$ cd jetson-inference/build
nano@jetson-nano-/jetson-inference/build$ ./install-pytorch.sh
```



Verifying PyTorch

■ Test the success PyTorch installation by executing the next commands from an interactive Python shell:

```
testing.py
```

```
import torch
print(torch. version )
print('CUDA available: ' + str(torch.cuda.is available()))
a = torch.cuda.FloatTensor(2).zero ()
print('Tensor a = ' + str(a))
b = torch.randn(2).cuda()
print('Tensor b = ' + str(b))
c = a + b
print('Tensor c = ' + str(c))
import torchvisionhttps://developer.nvidia.com/embedded/learn/jetson-ai-
    certification-programs
print(torchvision.__version__)
```



Machine Learning Container

- The **I4t-ml** docker image contains *TensorFlow*, *PyTorch*, *JupyterLab*, and other popular ML and data science frameworks such as scikit-learn, scipy, and Pandas pre-installed in a Python 3.6 environment
 - Latest 14t-ml:r32.6.1-py3
 - TensorFlow 1.15.5
 - PyTorch v1.9.0
 - torchvision v0.10.0
 - torchaudio v0.9.0
 - onnx 1.8.0
 - CuPy 9.2.0
 - numpy 1.19.5
 - numba 0.53.1
 - OpenCV 4.5.0 (with CUDA)
 - pandas 1.1.5



Running the Container

First pull one of the **I4t-ml** container:

```
Terminal #1

nano@jetson-nano:-$ sudo docker pull nvcr.io/nvidia/14t-ml:r32.6.1-py3
....
```

■ Then to start an interactive session in the container, run the following command:

```
Terminal #1

nano@jetson-nano:-$ sudo docker run --it --gpus all -e DISPLAY=:0 -v /tmp/.X11-unix:/tmp/.X11-unix --network host nvcr.io/nvidia/l4t-ml:r32.6.1-py3
```



Mounting Directories

■ To mount scripts, data, ect. from your Jetson's filesystem to run inside the container, use Docker's -v flag when starting your Docker instance:

```
Terminal #1

nano@jetson-nano:-$ sudo docker run -it --rm --runtime nvidia --network host -
v /home/user/project:/location/in/container nvcr.io/nvidia/14t-ml:r32.6.1-py3
```

You should then be able to start a Python3 interpreter



Connecting to JupyterLab Server

- A JupyterLab server instance is automatically started along with the container.
- You can connect http://localhost:8888 (or substitute the IP address of your Jetson device)
 - Password: nvidia





