

Chapter 1: Tour of WICED Wi-Fi

Time 1 Hour

After completing Chapter 1 (this chapter) you will understand a top-level view of the components of the WICED ecosystem including the chips, modules, software, documentation, support infrastructure and development kits.

1.1 TO	UR OF WICED STUDIO SDK	
1.1.1	First Look	2
1.1.2	Project Explorer	4
1.2 TO	UR OF DOCUMENTATION	
1.2.1		
1.2.2	ON THE WEB	
1.3 REI	PORTING ISSUES	9
	UR OF WICED SDK STRUCTURE	
	UR OF WI-FI	
	UR OF CHIPS	
	UR OF PARTNERS	
	UR OF DEVELOPMENT KITS	
1.8.1	CYPRESS CY8CKIT-062-WiFi-BT	
1.8.2	CYPRESS CYW943907AEVAL1F	
1.8.3	CYPRESS CYW94343WWCD1 EVB EVALUATION AND DEVELOPMENT KIT	
1.8.4	FUTURE NEBULA IOT DEVELOPMENT KIT.	
1.8.5	ARROW QUADRO IOT WI-FI KIT	
1.8.6	ARROW QUICKSILVER IOT KIT	14
1.8.7	AVNET BCM4343W IOT STARTER KIT	
1.8.8	ADAFRUIT FEATHER	14
1.8.9	ELECTRIC IMP.	14
1.8.10	Particle Photon	15
1.8.11	SPARKFUN WITH PARTICLE PHOTON MODULE	15
1.8.12	<u>Inventek</u>	
	ERCISE(S)	
Exerci	ISE - 1.1 CREATE A FORUM ACCOUNT	16
Exerci	ISE - 1.2 OPEN THE DOCUMENTATION	16




1.1 Tour of WICED Studio SDK

1.1.1 First Look


The WICED software tool is called "WICED Studio" and it is based on Eclipse.

WICED Studio is installed, by default, in *C:/Users/<UserName>/AppData/Local/WICED*. As a part of installing WICED Studio, an SDK Workspace is created, by default, in *C:/Users/<UserName>/My Documents/WICED-Studio-<version>/43xxx_Wi-Fi*. The SDK Workspace is where you will create your projects. Note that a new set of SDK Workspace files is created for each version of WICED Studio that you install. If you install a newer version of WICED Studio, your projects from the previous version will still be available in the SDK Workspace location associated with that previous version of WICED Studio. You must copy them over manually if you want to access them in the new version.

Once installed, WICED Studio will show up in Windows under Start > All Programs > Cypress > WICED-Studio. The first time you open WICED Studio, you will be asked for which platform you want to use. We will use 43xxx_Wi-Fi for this class, but if you used a different selection don't worry – you can change it easily from inside the tool using the dropdown menu.

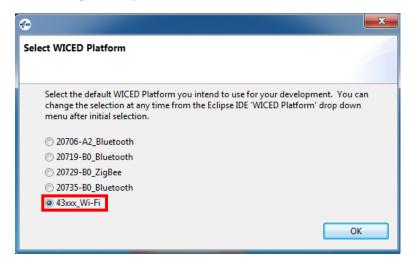



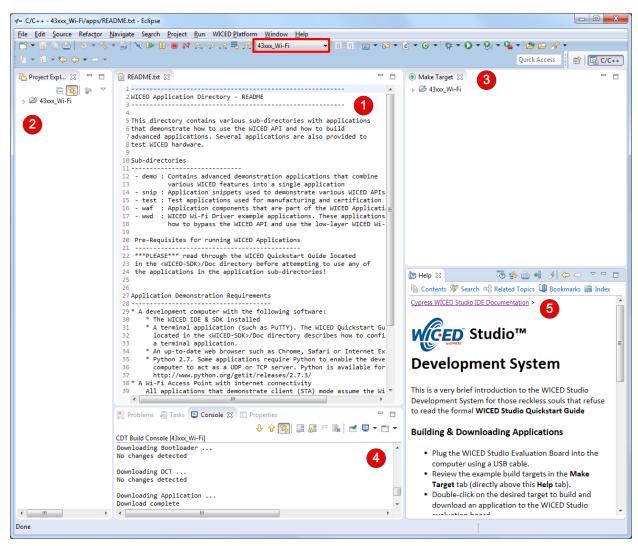

The major windows are:


- 1. File Editor
- 2. Project Explorer
- 3. Make Target
- 4. Console
- 5. Help

If you close a window unintentionally, you can reopen it from the menu *Window > Show View*. Some of the views are under *Window > Show View > Other...* You can drag and drop windows and resize them as you desire.



1.1.2 Project Explorer

If you expand 43xxx_Wi-Fi from the Project Explorer window you will see the following:

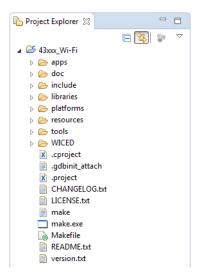

The README.txt file provides basic information about the SDK. This file is open by default in the editor window when the SDK is first opened. The file version.txt contains details of the version of WICED Studio that you have open. Other folders of interest in the Project Explorer are:

1.2.1 Apps

The *apps* folder is where all the example projects reside as well as where you will put your own projects. The SDK Workspace includes a wealth of example projects. These are broken into categories by folder name. A few of the useful ones are:

- 1. *snip*: Short examples that typically demonstrate one feature. For example:
 - a. *snip/gpio* demonstrates GPIO use by reading buttons and blinking LEDs.
 - b. *snip/scan* scans for Wi-Fi access points every 5 seconds and displays the results to a terminal window.
- 2. *demo*: More complex and complete demonstrations. For example:
 - a. *demo/temp_control* demonstrates an application for controlling and reporting temperatures.
 - b. demo/bt smartbridge demonstrates a Bluetooth to Wi-Fi bridge.
- 3. *test*: Test and utility programs.For example:
 - a. test/console provides a console application on a terminal window. Type "help" in the console for a list of all supported commands such as scanning for and connecting to Wi-Fi access points.

1.2.2 Doc


The doc folder contains the documentation for the SDK Workspace. Of particular interest is the API.html file which documents all of the WICED API functions. It is usually easier to use that file if you open it in a web browser of your choice rather than from inside WICED Studio. You can do this from WICED Studio



by right clicking on API.html and choosing "Open With > System Editor". Depending on your web browser and settings, you may have to tell it to allow ActiveX controls to see the menus.

The first window you will see when you open the **API.html** file is shown below. You can enter search strings in the box in the upper-right corner. The list will filter dynamically as you type. For example, if you enter "wiced_gpio" you will see a list of all WICED APIs that are used for controlling IOs.

Note: sometimes the search feature stops working. If this happens, close the browser page and reopen it.

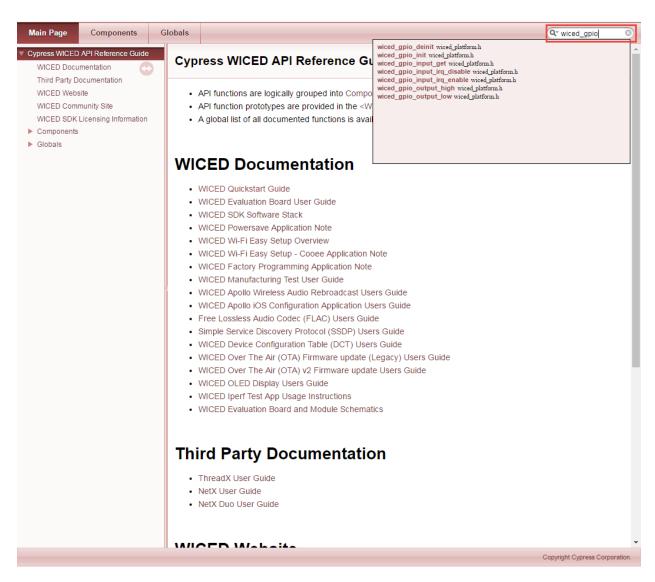

1.2.3 Platforms

The platforms folder contains information on different kits (i.e. hardware platforms). These files are necessary in order to program a given project into specific hardware. In our case, the kit we are using is called CYW943907AEVAL1F. That kit has a platform folder, but since we are also using a shield attached




to it, we will use a custom set of platform files that also includes the peripherals on the shield. You will have to copy over the custom platform files before using the shield and kit (this will be the first exercise in Chapter 2). You can even create platform files for your own custom hardware that you design. We'll discuss the platforms folder in more detail in Chapter 2.

1.2.4 Libraries

The libraries folder contains various sets of library function files. For example, there are libraries for working with file systems (in the filesystems folder), for using U8G graphics displays (in the graphics folder), and for reading JSON (in the utilities folder). We will discuss the libraries folder in more detail in Chapter 4.

1.2.5 Resources

The resources folder is where you store files that are required by your application. For example, if your application contains a web server, the html files for the server would be in the resources folder under apps/https_server. As another example, security certificates also go in the resources folder.

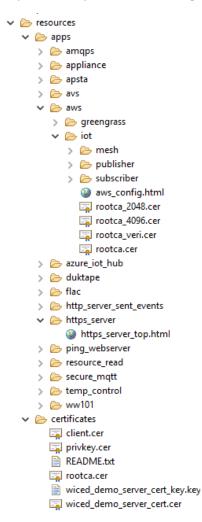




1.2 Tour of Documentation

1.2.1 In the SDK Workspace

As discussed previously, the doc folder in the SDK Workspace contains various documents. The most important of these is the API guide but the folder also contains other useful documents such as the QSG (Quick Start Guide), how to use DCT (Device Configuration Tables), FLAC (Free Lossless Audio Compression), and OTA (Over the Air) Updates. The list of files in the doc directory looks like this:

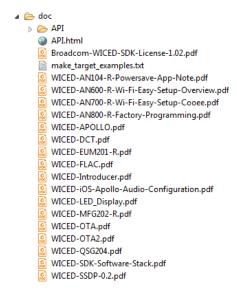

Each of the files in the doc folder can be accessed either from within the WICED Studio (the Project Explorer pane) or from Windows Explorer.

1.2.2 On the Web

Navigating to "<u>www.cypress.com</u> > Design Support > Community" will take you to the following site (the direct link is https://community.cypress.com/welcome):





Clicking on the Wireless icon and then the WICED Studio icon will take you to the community page as shown below. From this page, you can download WICED Studio, purchase kits, search for answers, ask questions, etc.






1.3 Reporting Issues

If you are a Cypress employee and you find an issue in WICED Studio (bug, missing or confusing documentation, enhancement request), please use a "JIRA" to report it. Non-Cypress employees should report issues via the forum. JIRA can be accessed at:


jira.cypress.com

Click on Create to start submitting a JIRA. Use the project type of SW-WICED and fill in as many details as you can to report the issue. If you are reporting an issue with a kit, use "KITS:" as a prefix to the summary.

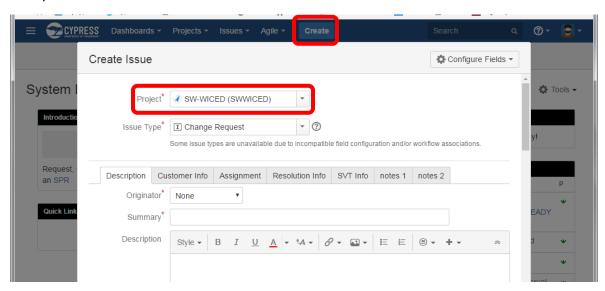



1.4 Tour of WICED SDK Structure

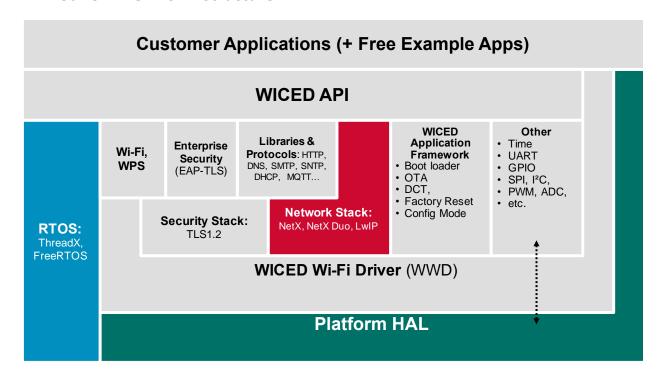

1.5 Tour of Wi-Fi

IEEE Standard	Mbits/s	Freq GHz	# Chan	Chan Width MHz	МІМО	Comment
802.11	2	2.4	14	22	-	
<u>802.11b</u>	11	2.4	14	22	-	Same as 802.11 with new coding scheme
802.11a	54	5	22	20	-	New coding scheme OFDM + 5GHz
<u>802.11g</u>	54	2.4	14	22	-	New coding scheme OFDM
802.11n	600	2.4	14	20/40	4	MIMO=Multiple Antennas
		5	22			4 streams of 150Mbits/s
802.11ac	3600	2.4	22	20	8	433Mbits/s per stream
		5	10	40		Beam forming directional
			5	80		
			1	160		
802.11ax	10,000	2.4		20	4x4	
		5		40		
				80		
				160		




1.6 Tour of Chips


Device	Key Features	Notes
CYW43362	 Single band 2.4GHz 1x1 11n Modules paired w/ STM32F205 and STM32F411 	Recommend new designs with 43364
CYW4390	Single band 2.4GHz1x1 11n	Recommend new designs with BCM43903/7 Black Box Only
CYW43340	 Dual band combo 2.4GHz and 5GHz, 1x1 11n BT4.0/BLE 	Currently only production dual band combo in single chip for WICED RTOS SDK
CYW43364	Single band 2.4GHz, 1x1 11nNext Gen BCM43362	Lower power and cost compared to BCM43362
CYW4343W	Single band combo 2.4GHzBT4.1/BLE	Lower cost and power compared to BCM43340
CYW43903	 Single band 2.4GHz , 1x1 11n SOC w/ ARM CR4 160Mhz 1MB on chip RAM Secure OTP and HW crypto engine 	Lower cost solution for White Box High end Black Box features
CYW43907	 Dual band 2.4 and 5GHz, 1x1 11n SOC w/ dual ARM CR4 320Mhz 2MB on chip RAM Secure OTP and HW crypto engine 	Ideal solution for White Box Multiple low power modes
CYW43012	 Dual band 2.4 and 5GHz, 1x1 11ac "friendly" Single 20 MHz channel compatible with 11ac networks 	Ideal for IOT since it gets power benefits of 11ac without complexity/overhead of 40, 80, and 160 MHz channels or MIMO



1.7 Tour of Partners

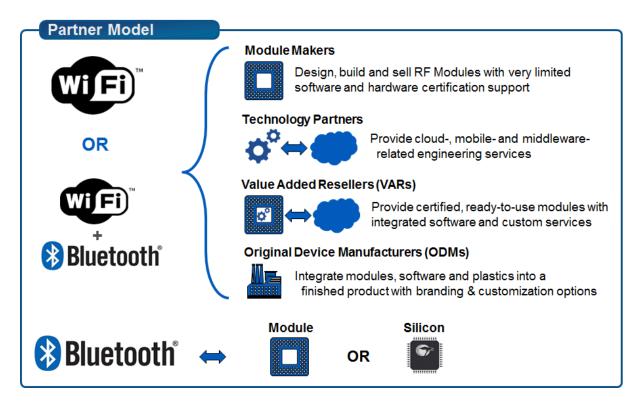

A global partner ecosystem enables you to get the level of support you need for your IoT application

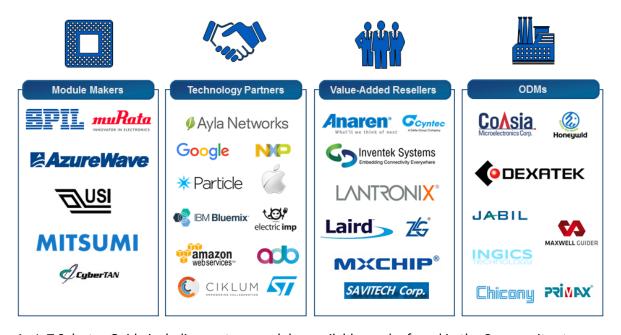

An IoT Selector Guide including partner modules available can be found in the Community at:

https://community.cypress.com/docs/DOC-3021



1.8 Tour of Development Kits

1.8.1 Cypress CY8CKIT-062-WiFi-BT

- Wi-Fi + BLE combo kit (CYW4343W)
- PSoC 6 with 150MHz M4 and 100 MHz M0+
- 1MB Onboard Flash, 512 MB External Flash, 288kB SRAM
- CCG3 USB Type-C Power Delivery
- USB host and device support
- CapSense Buttons, Slider, and Proximity
- 1 User Mechanical Button, 2 LEDs, 1 RGB LED
- Includes a CY8CKIT-028-TFT Display Shield

1.8.2 Cypress CYW943907AEVAL1F

- Dual band 2.4 and 5GHz WiFi, 1x1 11n
- Ethernet
- SOC w/ ARM CR4 320Mhz
- 2MB on chip RAM
- Secure OTP and HW crypto engine
- USB JTAG Programmer/Debugger

1.8.3 <u>Cypress CYW94343WWCD1 EVB Evaluation</u> and Development Kit

- Wi-Fi + BLE combo kit (CYW4343W)
- 512kB Flash, 128kB SRAM, 8Mb SPI Flash
- 2 User Buttons, 2 User LEDs
- Thermistor
- USB JTAG Programmer/Debugger

1.8.4 Future Nebula IoT Development Kit

- Murata 1DX module with
- Wi-Fi + BLE combo kit (CYW4343W)
- 2MB Flash, 256kB SRAM, 8Mb Serial Flash
- 2 User Buttons, 2 User LEDs
- Arduino, PMOD, and mikroBus Interfaces











1.8.5 Arrow Quadro IoT Wi-Fi Kit

- Dual band 2.4 and 5GHz WiFi
- Ethernet
- 2MB on chip RAM
- Designed for mounting on a custom PCB

1.8.6 Arrow Quicksilver IoT Kit

- CWY943907 Wi-Fi
- Ethernet
- Cypress 64Mb QSPI NOR Flash
- Temperature and Humidity Sensors
- Arduino Compatible Headers

1.8.7 Avnet BCM4343W IoT Starter Kit

- Wi-Fi + BLE combo kit (CYW4343W)
- 512kB Flash, 128kB SRAM, 8Mb SPI Flash
- 1 User Button, 2 User LEDs
- Ambient Light Sensor
- Arduino Compatible Headers
- USB JTAG Programmer/Debugger

1.8.8 Adafruit Feather

- Wi-Fi kit (CYW43362)
- 128kB Flash, 16kB SRAM, 16Mb SPI Flash
- Programmable using Arduino IDE
- USB Bootloader



- Wi-Fi kit (IMP003- CYW43362, IMP005 CYW43907)
- Programmable using imp IDE









1.8.10 Particle Photon

- Wi-Fi kit (CYW43362)
- 1MB Flash, 128kB SRAM

•



1.8.11 SparkFun with Particle Photon Module

- Wi-Fi kit (CYW43362)
- 1MB Flash, 128kB SRAM
- Arduino Compatible Headers

1.8.12 Inventek

ISM43362-M3G-EVB

- Wi-Fi Kit (CYW43362)
- 2 User Buttons, 2 User LEDs
- Thermistor
- USB JTAG Programmer/Debugger

ISM43340-M4G-EVB

- Wi-Fi & Bluetooth Combo Kit (CYW43340)
- 2 User Buttons, 2 User LEDs
- Thermistor
- USB JTAG Programmer/Debugger

ISMART Arduino Shield

- Wi-Fi, Bluetooth, NFC Combo (CYW43362)
- Arduino stackable shield

ISM43340-L77-EVB

- Wi-Fi & Bluetooth Combo Kit (CYW43340)
- Wi-Fi over SDIO
- Bluetooth over UART
- Micro-SD Connector









1.9 Exercise(s)

Exercise - 1.1 Create a forum account

- 1. Go to https://community.cypress.com/welcome
- 2. Click "Log in" from the top right corner of the page and login to your Cypress account. If you do not have an account, you will need to create one first.
- 3. Once you are logged in, click the "Wireless" icon and then the "Wi-Fi + Bluetooth Combo" icon.
- 4. Click on the "Forums" button.
- 5. Browse the existing forum articles or search for a particular topic that interests you.

Exercise - 1.2 Open the documentation

1. Open the API.html document from the WICED Studio Project Explorer or using Windows Explorer in the SDK Workspace *doc* directory.

Depending on your browser and security settings, you may need to allow ActiveX controls to get the page to display correctly.

- 2. Navigate through the Project Explorer folders to see what is available in each:
 - a. Apps/demo and Apps/snip for example projects
 - b. Libraries for helpful functions and utilities
 - c. Doc for documentation
 - d. Platforms for the supported kits
 - e. Resources for additional app information