Final Year Report - Investigation into the Precision Time Protocol

James Cox Department of Electrical and Electronic Engineering

University of Bath

April 11, 2014

Abstract

Contents

1	Introd	uction		
	1.1	How N7	ΓP Works	. 8
	1.2	How PT	TP Works	. 9
		1.2.1	PTP Explanation	. 9
		1.2.2	Comparison with Network Time Protocol (NTP)	. 11
		1.2.3	A Typical Precision Time Protocol (PTP) Network	. 11
		1.2.4	Best Master Clock (BMC)	. 12
		1.2.5	Management Commands	. 12
		1.2.6	Issues	. 12
	1.3	Project 1	Description	. 13
2	Litera	ture Revie	ew	. 13
	2.1	Definition	ons and Terminology for Synchronisation in Packet Networks [1]	. 13
		2.1.1	Packet Selection Methods	. 13
		2.1.2	Packet Metrics without Pre-filtering	. 14
		2.1.3	Packet Metrics with Pre-filtering	. 14
	2.2	Other R	elevant Reading	. 14
3	Projec	t Methods	· 8	. 14
4	Data (Collection		. 14
	4.1	Hardwa	re - Timeport [2]	. 15
		4.1.1	Description	. 15
		4.1.2	How to Set Up the TimePort	
	4.2	Hardwa	re - Chronos Syncwatch [?]	16
		4.2.1	Description	
		4.2.2	How to Set Up the SyncWatch	
		4.2.3	Hardware - Beaglebone Black [?]	
		4.2.4	Description	
		4.2.5	How to Set up the Beaglebone Black	
		4.2.6	Sending Data to the Local Machine	
	4.3	Software	e - PTPd	
	4.4		ollection Overview	
	4.5		ns for Clocks	
	4.6		eets	
	4.7		Schedule	
	4.8	_	ocessing	
		4.8.1	Example Data File	
		4.8.2	Script to Parse the Data File	
5	Packet	t Methods	_	
	5.1		ng a suitable language	
	5.2		Packet Metric Implementation	
	5.3		and TDEV derivatives	
	5.4		and MAFE derivatives	
	5.5		Packet Script	
		5.5.1	Flow Chart	
		5.5.2	Input Arguments	
		5.5.3	Logging	
	5.6		n Library	28

	5.7 Testing	8
	5.8 Optimisation	8.
6	Analysis Methods	8.
7	Results	8.
8	Discussion	9
9	Challenges	9
10	Milestones	9
11	Further Work	9
12	Other Work	9
	12.1 Securing PTP against attacks	9
	12.1.1 Issues with NTP	9
	12.1.2 Possible Attack Vectors	9
	12.1.3 Methods to mitigate the above attack vectors	1
	12.1.4 Security Protocol Recommendation	1
	12.2 Sub-microsecond accuracy	2
13	Conclusion	2
14	Acknowledgements	2
Append		-
1		4
2		4
3		4
4	TimePort Documentation	-
5	Syncwatch Documentation	-
6	Test Sheet Example	
7	Test Sheet Summary Sheet	
8	Awk Script	
9		2
10	TDEVAllMethods	
11		4
12	Main Packet Metric Script	4

Acronyms

BMC Best Master Clock

CSAC Chip Scale Atomic Clock

CSMA/CD Carrier Sense Multiple Access with Collision Detection

CSV Comma Seperated Variable

E2E End-to-End

GM Grandmaster

GPS Global Positioning System

IEEE Institute of Electrical and Electronic Engineers

ITU International Telecommunication Union

LAN Local Area Network

MAC Media Access Control

NERC North American Electric Reliability Company

NTP Network Time Protocol

P2P Peer-to-Peer

PPS Pulse per Second

PTP Precision Time Protocol

PTPd PTP Daemon

SA Security Association

SNTP Simple Network Time Protocol

TDEV Time Deviation

UTC Coordinated Universal Time

List of Figures

1	NTF Network filerating [5]	>
2	PTP timing diagram (based on [4])	10
3	A Typical PTP Network	12
4	Examples of some PTP Networks	12
5	Chronos TimePort Labelled Diagrams	15
6	USB to Serial Converter	15
7	TimePort Access	16
8	Chronos Syncwatch Labelled Diagrams	16
9	Syncwatch First Layer Screen	16
11	Labelled BeagleBone Black	17
10	Syncwatch Second Layer Screen	17
12	SSH to Beaglebone	18
13	Rsync Example	19
14	University Map with clock locations labelled	20
15	Network Topology Map	20
16	Example of the File Output	22
17	Awk Script Flow Chart	23
18	General Packet Metric Flowchart	26
19	Overall Packet Script Flow Chart	28
20	Control Plane Attack Vector (taken from ref)	29
21	Sync Plane Attack Vector (taken from ref)	30
22	Management Plane Attack Vector (taken from ref)	30
23	Delay Attack	31
24	Gantt Chart	34

List of Tables

1	NTP vs PTP Version 1 vs PTP Version 2
2	Flags used for PTPd
3	Hardware Summary
4	Clock Locations
5	Execution Times for Awk Script
6	List of Criteria for the Language Options
7	Language Options Ranking Tables
8	List of Arguments

*Listings

1 Introduction

In a few applications there is an ever increasing requirement for high accurate clocks. These clocks mmay be used for either a timestamp, such as in the telecommunications industry, or a way to synchronise processes, as is what happens in the automotive industry. Multiple clocks will be used in these applications, and thus they all should be synchronised with one another.

In some applications it is not feasible to have a high accuracy atomic clock (or Chip Scale Atomic Clock (CSAC)) due to space or cost constraints. An alternative to this could be to use a Global Positioning System (GPS) receiver and time can then be synchronised to the accurate clocks onboard the GPS satellites. Using high accuracy clocks like the ones mentioned would help to reduce any clock accuracies.

There are two types of clock inaccuracies when synchronising clocks. Firstly they may have started at a different time relative to the others, and adjusting for this is called offset correction. The second effect is that clocks do not necessarily run at exactly the same speed. Therefore clocks need to be continuously adjusted, which is called drift correction. The amount of drift correction required depends on the quality of the clock. Appendix 1 shows a table of clocks and their corresponding accuracies.

The following industries are examples that would require highly accurate clocks.

Automation Industry

Processes will need to be synchronised exactly, and can only be if their clocks are in sync with one another. If clocks are in sync then processes can also be separated away from communication between each machine and the processing of the control commands. [5]

Power Transmission

Time synchronisation is very important in the power transmission industry. An example of a situation where timing would have mitigated an event from occurring is the North American blackout in August 2003 [6]. It made it difficult for the investigation team to be able to sort through the data received when the timestamps were gathered from an inaccurate clock. From the events of this blackout a regulation was put in place to define a minimum absolute accuracy for timestamped data. The adoption of the North American Electric Reliability Company (NERC) Standard PRC018-1 in 2006 [7] made it a requirement for any substation in the USA to log data to a minimum accuracy. The timestamped data must be accurate to within 2ms relative to Coordinated Universal Time (UTC).

Telecommunications

In telecommunications, timing protocols are considered when networks need to be synchronised or if mobile base stations need synchronisation pulses. With the increase in GPS jamming, systems such as 4G must rely on other timing methods in case GPS is affected.

All of the industries mentioned above could feasibly use GPS for a highly accurate timing reference. But if there is an issue with the system, for example a jamming incident, then there will be some major consequences should timing drift out of line. It is known that jamming of GPS receivers is becoming more common and thus an alternative method of time synchronisation should be used. [?]

One way of realising this is by using a distributed timing system, such as NTP or PTP. This would allow for nodes to be able to synchronise their clocks with a much more accurate time source without having to rely on GPS

1.1 How NTP Works

This is a technology originally designed in 1985 and is used to synchronise clocks over a packet switched network. It is able to achieve synchronisation with UTC within a few milliseconds, but can maintain sub-millisecond accuracy on a Local Area Network (LAN) if ideal conditions are met. Errors due to different packet routes or network congestion can decrease this accuracy by 100ms or more. [8]

NTP uses a client-server hierarchy split into "Stratums". Figure 1 on the next page shows the Stratums numbered from 0 to 3.

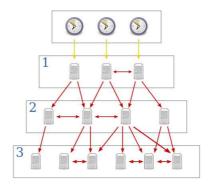


Figure 1: NTP Network Hierarchy [3]

The reference clocks located in Stratum 0 are high precision such as atomic clocks or they use GPS synchronisation. The clocks in Stratum 2 will base their time off of the clocks in Stratum 1. A number of the clocks in Stratum 1 will be used for time synchronising each clock in Stratum 2. This is done so that the time is more accurate and robust. Within a Stratum, clocks may also synchronise for sanity checking to ensure that all clocks within a Stratum are accurate between each other. Any layers below Stratum 2 will mirror the same algorithm, and there can be up to 15 layers. Stratum 16 is reserved for clocks that are not synchronised with NTP [9].

Simple Network Time Protocol (SNTP) is used in applications which do not require a high timing accuracy. It does this by ignoring drift values. Therefore it is recommended that SNTP is only used in the higher Stratums [10]. The SNTP specification is part of the NTP specification, cited here [11].

Issues arise when synchronising time over a packet switched network where sub millisecond accuracies are required. PTP was developed as a successor to the existing NTP standard which aims to reach sub millisecond accuracies. Meeting this value of accuracy is very difficult however with a traditional Ethernet network.

When standard switches are used, the packet delay between two nodes is indeterminate. This may be because the packet route from A to B changes depending on network load, or a packet may be held in a switch for an unspecified amount of time whilst working with other data. Therefore this is undesired for PTP as this packet delay must be taken into account when working out the clock offset. Specific timing switches can be used which will prioritise PTP packets, but these may not be available in existing networks or be too expensive to be suitable.

1.2 How PTP Works

PTP was developed as a successor to the existing NTP standard which aims to reach sub millisecond accuracies. Meeting this value of accuracy is very difficult however with a traditional Ethernet network.

When standard switches are used, the packet delay between two nodes is indeterminate. This may be because the packet route from A to B changes depending on network load, or a packet may be held in a switch for an unspecified amount of time whilst working with other data. Therefore this is undesired for PTP as this packet delay must be taken into account when working out the clock offset. One part of this project will be to investigate the extent of this variation in packet delay on an ethernet network.

There are a few important elements of how PTP works in order to be able to start the project. These are: general PTP operation and the BMC algorithm. There are other aspects that will be covered in this report (such as token passing and Secure PTP), but these will be covered in a later section. A comparison with NTP, a similar technology will also be made. This will be important when considering some security aspects of the technology.

1.2.1 PTP Explanation

PTP uses a similar master-slave hierarchy of NTP, but it does not use the stratum method. Instead it uses domains which separate out PTP synchronisation networks. The master clock for the domain will broadcast out the current time to all of the other clocks on the network using a multicast message. In IEEE1588-2008 this can occur up to one message every 32 and a quarter milliseconds.

The list below shows the basic steps that PTP follows [12]:

1. Broadcast begins at t_1 where the master sends a *sync* message to all clocks on the domain.

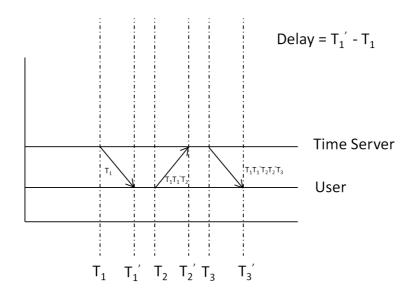


Figure 2: PTP timing diagram (based on [4])

- 2. Each slave clock takes a note of when the message was received using their local clock. This timestamp is labelled t'_1 .
- 3. An optional *follow_up* message may be sent that includes an accurate timestamp of t_1 . this step occurs if the master clock does not have the capability to create an accurate timestamp when sending the *sync* message.
- 4. In order for the slave to synchronise with the master, the round trip delay needs to be known. therefore a *delay_req* message is sent by the slave clock at time t_2 .
- 5. The master will respond to this message with a *delay_resp* message. this timestamp is called $t_2^{'}$.

At this point t_1 , $t_1^{'}$, t_2 and $t_2^{'}$ are now known.

If we define d as the transit time, and \tilde{o} as the constant offset between the two clocks:

$$t_1' - t_2 = \widetilde{o} + d \tag{1}$$

$$t_2' - t_2 = -\widetilde{o} + d \tag{2}$$

If we rearrange equation 2 for d:

$$d = t_2' - t_2 + \widetilde{o} \tag{3}$$

Substituting equation 3 into 1:

$$t_1' - t_1 = \widetilde{o} + t_2' - t_2 + \widetilde{o} \tag{4}$$

$$\dot{t}_{1}^{'} - t_{1} - \dot{t}_{2}^{'} + t_{2} = 2\widetilde{o}
 \widetilde{o} = \frac{\dot{t}_{1}^{'} - t_{1} - \dot{t}_{2}^{'} + t_{2}}{2}$$
(5)

(6)

The offset is now known and can be adjusted for. The following assumptions have been made to create the calculations above.

- 1. Message exchange occurs over a short period of time that the delay is assumed to be constant.
- 2. Transit time is symmetrical (i.e. time from master to slave is the same as slave to master).
- 3. Both the slave and the master can measure the transmit and receive times of messages accurately (ignoring clock drift).

1.2.2 Comparison with NTP

The Precision Time Protocol (PTP) was first developed in 2003 with the intention to build on the existing NTP standard. Version 1 improvement improved on NTP in a number of different ways. A new PTP standard was introduced in 2008 with some new features such as boundary clocks and using domains instead of stratums. These changes and comparison with NTP have been tabulated below, table 1.

Feature **NTP** IEEE1588-2002 IEEE1588-2008 Time System UTC TAI! (TAI!) TAI! - can choose epoch Transparent Clocks No No Yes Unicast No Yes no Subdomain Name Fields Subdomain Name Fields **Domain Numbers Domains** Data Field Stratum Clock Quality None Clock Accuracy / Clock Class For Unknown **Election Based** Hierarchical Selection Algorithm Best Clock Alternate Time Scale Grandmaster Cluster Unique Features None Noise Reduction **Unicast Masters** Alternate Master Path Trace

Table 1: NTP vs PTP Version 1 vs PTP Version 2

1.2.3 A Typical PTP Network

There are several different configurations for a PTP network to take using the following pieces of hardware.

Grandmaster Clock The grandmaster clock is the main source of time synchronisation using PTP within the same PTP domain. This clock will consist of a highly accurate timing source, such as a CSAC or be based off of a GPS time reference. This clock is picked using the BMC algorithm detailed in the next section.

Ordinary Clock An ordinary clock is a PTP clock with a single ethernet port. They are also called nodes in a PTP network. These are the most common types of clocks on the PTP network as these are the end nodes that are then connected to devices that require synchronisation.

Boundary Clock A boundary clock is a replacement to a standalone switch. It usually has multiple PTP ports and thus provides a link between domains.

Transparent Clock A transparent clock main role is to account for switch delay by updating the time interval field of the PTP packet. There are two types of transparent clocks which might be used in a typical network. These are End-to-End (E2E) and Peer-to-Peer (P2P) transparent clocks.

They both measure the event message transit time (also known as the resident time) for both *sync* and *Delay_rq* messages. This information is then added to the correction field in the two messages. The slave clock can then use this information to work out a more accurate offset. Note however that E2E clocks in particular do not account for the propagation delay of the link.

A P2P clock also takes into account the upstream delay, which is the propagation delay between the two transparent clocks. This time is then added on to the offset mentioned previously.

There are several different network configurations that could be used when using a PTP network. The diagram below outlines some possible topologies for PTP networks.

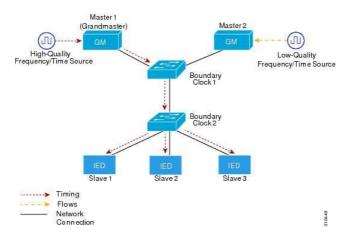


Figure 3: A Typical PTP Network

(a) One Grandmaster Multiple Slaves

(b) One Grandmaster Multiple Slaves with Boundary Clock

Figure 4: Examples of some PTP Networks

1.2.4 Best Master Clock (BMC)

The BMC is used to determine the most suitable clock to be the master (or the grandmaster) of a PTP network. The following criteria are used when determine which clock on the network is the best.

Identifer This is a unique identifier which is constructed from the device's Media Access Control (MAC) address.

Quality This refers to the technology used to implement the clock, and takes into account the expected time deviation.

Priority This is an admin assigned precedence to select a particular grandmaster. In IEEE1588-2008 there are 2 8bit priority fields.

Variance This refers to the stability of the clock based on itsd performance against the PTP reference.

The 2008 standard uses a hierarchical selection algorithm system, which is outlined below.

- 1. Priority 1
- 2. Class
- 3. Accuracy
- 4. Variance
- 5. Priority 2
- 6. Unique Identifier (tie break)

The BMC algorithm is used to determine each master, and ultimately the grandmaster of the entire PTP network.

1.2.5 Management Commands

- explanation of the management portion of PTP + explain the distributed management structure etc

1.2.6 Issues

There are some areas of concern with PTP that will be addressed in this report. Firstly it is unknown how well PTP operates on a busy network when standard switches are used instead of boundary clocks. Secondly there are some security concerns with PTP as all messages are transmitted in plain text.

1.3 Project Description

This project aims to investigate PTP performance on a heavily used Ethernet network, and to attempt to quantify PTP performance using packet metrics.

There are also some deliverables as part of the Final Year Project which are: an interim report, a log book, a final year report and a poster. These deliverables, along with the sub tasks involved in order to complete them have been detailed in the Gantt chart, as seen in Appendix 2.

The following project objectives have been identified:

Learn about PTP and other work in relation to the protocol

This stage would occur at the beginning of the project to understand how PTP works. This is important so work can then be carried out to investigate PTP performance on a network.

Collect PTP Data

In parallel with the above, PTP data can be collected. This will be monitoring the performance of PTP across the network as well as how using multiple types of grandmaster/slaves affect the performance. Different clock locations in the network will also be considered.

Implement some packet metric scripts

To be able to understand the performance of the network, some packet metric scripts will be created. A suitable language will be chosen once this part of the project begins.

Determine packet performance using these scripts

Multiple window sizes and types of metric will be used to quantify network performance.

Test Chronos' equipment and provide feedback

As Chronos has provided this project with some equipment, this equipment will also be thoroughly tested and any information gathered can be passed to them once the project is completed.

Documentation

It was noted that it would be beneficial to document as much as possible about the hardware used, which can then be fed back to Chronos if need be. This would also be useful internally in case the hardware documentation is limited.

Investigate into security measures

Some research into how to secure PTP will be made along with some recommendations in possible.

2 Literature Review

With the following objectives and tasks in mind, a literature review was performed with some suitable documentation: mainly packet metric related, but also on cryptographically signing PTP packets.

The reports below will be discussed in some detail:

Definitions and terminology for synchronization in packet networks [1] A standard regarding different packet metrics that could be used in order to try and quantify network delay.

Prevention of Packet Collisions [13] A journal article describing an algorithm that aims to prevent packet collisions in an Ethernet network.

2.1 Definitions and Terminology for Synchronisation in Packet Networks [1]

The first paper defines a number of definitions and terms when dealing with Packet Synchronisation. The areas of interest in this report were packet metrics which are found in Appendix I3 and I4. These can be split into three sections: Packet Selection Methods, Packet Metrics without Pre-filtering, and Packet Metrics with Pre-filtering.

2.1.1 Packet Selection Methods

There are two main methods of selecting packets when calculating a packet metric: either using a selection technique at the same time as the packet metric calculation, or as a pre-processing technique before the metric calculation is performed.

Packet selection, when integrated with the calculation, is very useful when the behaviour of a network is to be determined with respect to its packet delay variation. This is because it provides a generic method that is independent to a particular slave clock implementation [1]. This packet selection method is also known as a Class B metric.

The other method uses a pre-processing technique which preselects packets from a time window. By doing this the process will average out any inconsistencies in the delays, thus resembling a clock running in steady state. Therefore this method is more suitable when trying to specify network limits. This is known as a class A metric).

There are four examples of packet selection methods that are mentioned in the recommendation report. These are: Minimum Packet Selection Method, Percentile Packet Selection Method, Band Packet Selection Method and Cluster Range Packet Selection Method. These will be discussed in turn and will be implemented.

2.1.2 Packet Metrics without Pre-filtering

The first packet method technique discussed is Time Deviation (TDEV). It is used to specify network wander limits for timing signals and can also be used for packet data

TDEV can be applied to both integrated and pre-processed packet selection methods.

The implementation equations are quoted in the reference. The approximation equations were used when implementing the functions.

2.1.3 Packet Metrics with Pre-filtering

The other method is using pre-filtering before the metric is calculated. An averaging function is applied to the set of data, but care must be taken to not over-filter the input. This filtered packet sequence can then applied to the metrics mentioned previously in the report. Prefiltered metrics are useful as they can help specify network limits.

2.2 Other Relevant Reading

There was other relevant reading performed in the first week of the project to do with cryptography and how packet collisions can be prevented. -cryptography?

3 Project Methods

Based on the objectives mentioned previously, the project can be split into some distinct sections:

Data Collection This part of the project will involve collecting PTP timing data on the university network. It will consist of using a number of different clock types and locations on the network.

Packet Methods This section will mainly involve the implementations of the packet metric scripts based on the referenced report above. Focus on the implementation will be made in this section rather than the metrics themselves.

Calculating/Analysing Results Once the metrics have been implemented fully, there needs to be some supplementary scripts written to process some of this data.

Securing PTP Considerations As PTP is inherently an unsecure system, there will be some work into investigating how PTP could be secured from rogue hosts on the network.

Methods to reduce Packet Collisions Due to the way Ethernet networks work, there is a high probability of packet collisions. Thus it would be useful to investigate, based on the results collected above, ways to reduce these packet collisions.

4 Data Collection

The first step to perform with this part of the project is to work out what hardware is available. The following hardware was identifed as being available to use for the duration of this project.

- Hardware Grandmaster Chronos TimePort [2]
- Hardware Slave Chronos Syncwatch [?]
- Hardware Slave Beaglebone Black [?]

(a) Chronos TimePort Outside

Figure 5: Chronos TimePort Labelled Diagrams

- Software Grandmaster PTP Daemon (PTPd)
- Software Slave PTPd

The above were identified to be suitable enough to carry out this project. If any assistance is required with the two Chronos hardware devices it will be possible to contact Chronos directly.

4.1 Hardware - Timeport [2]

4.1.1 Description

The Chronos CTL4540 Timeport is a low powered portable device that is able to maintain its time to a high accuracy when disconnected from a synchronisation source. It is able to maintain accuracy within a couple hundred nanoseconds without needing to be connected to GPS. It also has an internal LiPo battery. This enables the device to be used to transport and measure time.

With the above features in mind, it is thus suited for a number of markets, including the power industry and telecommunication network operators. It can also be used to correct for any time errors caused by any cabling or equipment.

Typical methods of doing this would involve using a Caesium atomic clock [REF] or setting up a GPS attenna and connecting this to some other equipment. The TimePort is best suited over these two operaitons because it is much lower power and much more transportable than an atomic clock. It also removes the requirement of GPS equipment.

Appendix ?? shows the full specifications of the CTL4540 TimePort. Below are a few labelled photos of the clock. The difference between the release TimePort and the TimePort that will be used in this project is that the firmware on the TimePort is bleeding edge. With that in mind time needs to be allocated to allow for any issues that the clock may have. The university has close links with Chronos thus it should be straightforward to either get our issues solved or to receive a new TimePort.

This clock will mainly be kept in the same position on the network and will acct as a Grandmaster.

In terms of documentation there is not much available for this device apart from some emails sent between Chronos and Dr Robert Watson. Therefore Appendix ?? shows some documentation put together for my own use during this project. The documentation includes details on how to interface with the clock and a list of basic commands.

To access the device it needs to be accessed locally over a USB to Serial connection. SSH is unavailable as the control port has not been implemented yet.

4.1.2 How to Set Up the TimePort

The firmware version that the TimePort we have available does not have the control port active. Therefore the only method to connect to the TimePort is via a serial connection.

To connect to the TimePort: connect the serial to USB cable (seen pictured below, Figure ??).

Figure 6: USB to Serial Converter

Type the following command into a linux terminal:

screen /dev/ttyUSB0 115200, cs8, ixoff

Code Extract 1: "Bash - Using Screen to connect to TimePort"

This will connect you to the first layer of the TimePort. The system is a restricted linux distribution, so some commands you may be familiar with do exist. A full list of commands and the rest of the documentation can be found in Appendix 4. Figure 7 is a screenshot of this first layer

A complete list of commands can be found in the TimePort documentation that has been written (Appendix 4.

Figure 7: TimePort Access

- (a) Chronos Syncwatch Outside
- (b) Chronos Syncwatch Inside

Figure 8: Chronos Syncwatch Labelled Diagrams

4.2 Hardware - Chronos Syncwatch [?]

4.2.1 Description

The Chronos Syncwatch is a hardware slave clock used to synchronise time in a number of different applications. It operates in all of the current synchronisation technologies such as SyncE, ESMC, PTPv2, 1PPS+TOD, 1PPS, Frequencies(64k-200MHz), T1 & E1 protocols and interfaces are supported.

It can be used on both legacy and modern Ethernet/IP networks. It can simultaneously operate on a number of the protocols above. It can also operate in both local and remote modes.

It is a small modular device with a simple user interface. It also integrates with with Symmetricom's TimeMonitor software.

The device markets include telecommunications, TV and radio broadcasting, and the power industry.

The table shown in Appendix ?? details the Syncwatch specifications. The figures below show labelled diagrams of a block diagram and the outside of the Chronos Syncwatch.

This product is similar to the TimePort in the fact that there isn't much documentation around for it. Therefore Appendix 5 shows the documentation written up for the Syncwatch.

The Syncwatch will be mainly kept in the upstairs Level 3 Communications lab as it is a larger device. As this device is a release product, all of the ports used for controlling the device are enabled. Therefore the syncwatch can be set up via SSH or using the program. This is all explained in the documentation in Appendix 5.

4.2.2 How to Set Up the SyncWatch

The device can be accessed using either ssh, serial, or through the Syncwatch-Lab program. As the first two stages are similar, these will be discussed at the same time.

To connect via ssh: log in using a terminal program using the following command:

```
ssh root@eepc-rjw-syncwatch.bath.ac.uk
```

using password: syncwatch.

You are now in the first layer of the Syncwatch device. The alternative method to access this same terminal window is by using a USB to Serial converter, as pictured earlier, Figure ??.

Plug in the device to a computer, and connect to it using the following command:

```
screen /dev/ttyUSB0 115200, cs8, ixoff
```

The username is root and the password is syncwatch. At this point the first layer has been connected to. This brings up the following prompt (shown in Figure ??.

Figure 9: Syncwatch First Layer Screen

Figure 11: Labelled BeagleBone Black

To access the PTP console, type the following into the screen connection:

minicom -S

This then brings up the 2nd layer: the PTP console. The screenshot below (Figure ?? shows a list of commands available. The complete list of commands in both of the modes is shown in the documentation, shown in Appendix 5.

Figure 10: Syncwatch Second Layer Screen

4.2.3 Hardware - Beaglebone Black [?]

4.2.4 Description

The Beaglebone Black is a hardware device but it is running a software PTP Daemon (called PTPd). Throughout this report the Beaglebone Black will be called a hardware clock, but in reality it is running a PTP software implementation.

In terms of hardware capabilities it has an ARM Cortex A-8 processor with 512MB of DDR3 RAM. It runs a cut down version of Linux called Angstrom Linux. It has Ethernet connectivity and runs off of a 5V DC supply.

As it runs Linux and can be connected to the network, an SSH server has been set up on it with a static IP address. This made it easy to start the PTP daemon.

Below (Figure 11 is a labelled picture of the BeagleBone Black.

The Beaglebone will be a useful device to use as a slave clock because of its portability. It would be able to be placed anywhere on the network without any disruption to that particular lecture room or lab space.

4.2.5 How to Set up the Beaglebone Black

When the project was started, Robert Watson had the BeagleBone Black working with PTPd already, so there was only some work to be done in order to automate the process.

To set up the Beaglebone Black:

- 1. Plug in the Beaglebone Black to the 5V adapter.
- 2. Plug in the Ethernet cable
- 3. Once the Beaglebone boots you can then access the device over SSH.

Type:

```
ssh jac50@eepc-rjw-beaglebone.bath.ac.uk
```

to \log in, replacing jac50 with the username on the device. The users on the device were eerjw, jac50, and root.

The screenshot below (Figure 12) demonstrates this. The ls command was typed to show that the connection was successful.

Once SSH'd into the device, then the device can be accessed like any other linux machine. Note however that there is a restricted command set. [?]

When the BeagleBone boots, it was required that the SD card used to store the test data on would be automounted and that the PTP daemon automatically runs. Several attempts in trying to automount the SD card using conventional means such as adding in an entry to fstab were attempted, but this did not work.

The method in getting round this was by creating a script in /etc/init.d. Any script located in that folder will automatically be loaded once the device boots. The PTP daemon was also run from this same script. The script would also need to automatically name the data file or the data would be overwritten every time the device was turned on. A convention

```
Terminal — + x

File Edit View Search Terminal Help

james@james-netbook ~ $ ssh jac50@eepc-rjw-beaglebone.bath.ac.uk
jac50@eepc-rjw-beaglebone.bath.ac.uk's password:
beaglebone:~$ ls
fstab_backup runScript.sh
beaglebone:~$

I
```

Figure 12: SSH to Beaglebone

of timeport_YYYY_MM_DD.txt was decided.

The full bash script is shown below, in Code Extract 2

```
#!/bin/bash
mount /dev/mmcblk1p1 /mnt/sd
date=\$(date +"%Y_%m_%d")
sudo /home/eesrjw/ptpd2 -i eth0 -C -S -g -d 17 -V > /mnt/sd/eesrjw/timeport\_\$date.txt
```

Code Extract 2: Bash Script in init.d for Beaglebone Black

Line 1 is the bash shebang which lets the operating system know that the following script is written in bash. The second line mounts the SD card to the correct location. In this case the SD card is device mmcblk1p1, and the mount location is /mnt/sd/.

The third line defines a date variable in Year_Month_Day format. The forth line runs the PTPd2 daemon. As the script is not saved in the PATH variable, the full path to the script is used. The flags will be discussed in more detail in the later section as similar flags will be used.

Once the script above is run (or if the PTPd2 script is run on its own from the terminal), the output is stored in the text file mentioned on Line 5.

Once the test is completed, the script can be killed by using kill - 9 on ptpd2. The final step is to transfer the text file from the beaglebone to the local machine ready for packet metrics to be run on it.

4.2.6 Sending Data to the Local Machine

There are two ways to retrieve the data from the Beaglebone: either pulling out the SD card and using an SD card reader to transfer the text file, or remotely using a utility such as rsync.

It was decided that as all other commands are sent to the device remotely, that a short rsync script will be made. Code Extract 3 below is the rsync script used.

```
#!/bin/bash
echo "RSync List-only will run"
rsync --list-only jac50@eepc-rjw-beaglebone.bath.ac.uk:/mnt/sd/eesrjw/./
echo "Type filename here: "
read fileName
rsync -v --progress jac50@eepc-rjw-beaglebone.bath.ac.uk:/mnt/sd/eesrjw/i\$fileName ./NotSorted
```

Code Extract 3: Rsync Script

Figure 13: Rsync Example

The script above prompts the user to type in the filename. It lists the files in the correct directory on the beaglebone in case the user does not know the correct file name. Line 6 then performs the sync operation, using the verbose and the progress flag.

The only issue with this script is that it prompts the user twice for the password. As this script was not run very often it was not an issue. If it was however more research would have been done to see if that could be fixed. A screenshot below (Figure ?? shows the rsync script transferring across a gzipped data file.

It was important to gzip the file beforehand or the transfer would have taken a lot longer. The rate of data collection is around RATE OF DATA HERE

4.3 Software - PTPd

The final type of clock that can be used is a software daemon called PTPd (or sometimes PTPd2). It is a program written in C that meets most aspects of the IEEE1588 specification. PTPd2 meets the changes made in the 2008 standard.

In-depth code analysis of the script will not be provided in this report. Instead the different flags that may be used for this project will be tabulated below (Table 2).

Flag Name	Flag Letter V2.3.0 or above	Old Flag Letter	Description
Interface	i	b	Network Interface to use
Domain	d	i	PTP Domain Number
Foreground	С	С	Run program in foreground
Verbose	V	None	Run in Verbose mode
No Clock Adjust	n	t	Do not adjust the local clock
Slave only mode	S	g	Set PTPd as Slave

Table 2: Flags used for PTPd

PTPd can be used as both a slave and a grandmaster. As there is already a dedicated grandmaster, PTPd will be used mainly as a slave, but some software grandmaster clock tests may be performed.

The script call has already been given for the beaglebone. The code extract below has been used for the PTPd_Netbook

```
./ptpd2 -C -S -g -i 17 -t | tee /home/james/FinalYearProject/PTPData/TestData/TimePort-To-Soft-
Test4/RawData.txt
```

The difference in the call to ptpd2 above is that tee has also been used so the data is displayed both on the screen and sent to the text file. An alternative method to this would be to redirect the standard output to the text file, then call $tail - ffile_name_here$ to display the file in the terminal. This script can be run on any linux computer with root access. Note that the above script in Extract 4.3 is already run as a root user. The other method to do this would be to run the script with sudo.

4.4 Data Collection Overview

As the majority of the devices above will be controlled remotely via SSH, it would be useful for all of them to be on static IPs assigned by the university computing services. All devices were able to get a static IP with a domain forwarding in the format eepc-rjw-nameofdevice.bath.ac.uk. This is a local address which isn't forwarded outside of the university network. The summary table below shows what hardware is available, based on class, and IPs for the PTP port and the control port.

Table 3: Hardware Summary

Clock ID	Name	Type	PTP IP	Control IP	MAC Address
001	Chronos TimePort	Hardware GM	TimePort	USB over Serial	
002	Chronos SyncWatch	Hardware	syncwatchptp	syncwatch	
003	BeagleBone Black	Hardware	beaglebone	beaglebone	
004	PTPd_Desktop	Software		•••	•••
005	PTPd_Netbook	Software			

The clock ID was used with internal documentation to know which clock was used where. Note that the IPs listed are just part of the full name. To access one of them on the university network, add the prefix eepc-rjw- and the suffix .bath.ac.uk.

4.5 Locations for Clocks

To get a varied set of data points, it was decided to collect data at a number of locations throughout the network. The following locations were identified, along with some information on the surroundings.

Table 4: Clock Locations

Clock Location	Room number	Room Type	Left Unattended	Distance from Grandmaster
Watson's Office	2E 4.10?	Office	Locked office	Same room
2 nd floor lab	2E 2.10	Lab	Secure lab	Same subnet
Comms Lab	2E 3.xx	Lab	Secure	Same subnet
Library	Library	Library	No. Busy 24/7	Differnet subnet
8W Rooms	8W 2	Lecture room	No	Different subnet
East building	EB 2	Lecture room	No	Differnet subnet

The full list of clock locations have been placed on the map below, Figure ??

Figure 14: University Map with clock locations labelled

A broad range of locations were attempted, within the limitations of the network. Connecting via a VPN was attempted but it was deemed that the PTP packets were not transmitted outside of the network. A network topology map has also been added, see below Figure ??.

Figure 15: Network Topology Map

4.6 Test Sheets

As there will be quite a few tests performed during the project, and it is important to note times and locations of each test, a test sheet has been created using LibreOffice Calc. An example of a test sheet is found in Appendix 6

Each test will have the following:

Test ID Each test gets a unique ID number. The number increments for every test performed.

Test Name A general name for the test. This usually consists of the GM clock type, the slave clock type, and the number associated with that type of test.

Test Date The date at which the test was performed in ISO 8601 format.

File Name The file name for the test file. If the test has to be stopped for any reason, a new file is made with a number at the end. The file name is typically RawData.txt.

Directory The directory where the test data is stored.

Clock Type Each clock will have its clock type listed. The clock types have been mentioned earlier in this report.

Clock Name The name of the clock. This is a unique identifer in case multiple clocks of the same type and model are used.

Clock Model The model of the clock.

Start Time The time that the test started. This is as accurate as possible so network data can be correlated with it.

End Time The time that the test finishes. If the test is stopped prematurely but started up again, the final end time is noted here, but the intermediate start and stop time is listed in the comments section.

Network Activity An average network activity for the day (low, medium, high). This is used to correlate delay spread with network activity.

Test Description Brief description of why the test was performed and what the expected outcome of the test is.

Comments Any comments can be noted here. Start/Stop times, or if any issues come up will be noted here.

All of the test sheets will not be shown in this report, but the information has been compiled into a summary test sheet. The summary sheet will include the Test name, date, directory, and start and end times of the tests. This will show up later in the report, in Appendix ??.

4.7 Testing Schedule

This part of the project will run in parallel with the implementation stage of the packet metrics, as this does not rely on them being completed. The tests that are to be completed will include:

- Hardware to Hardware
- Hardware to Software
- Hardware to Beaglebone
- Different locations
- Different Times

An explicit testing schedule has not been produced, but the full list of tests that would like to be completed have been listed below. Instead there are week blocks allocated in the gantt chart for data collection, and tests will be carried out throughout that time.

The following tests that have been identifed as important tests to run have been included in the table below.

	GM Clock Type	GM Clock Location	Slave Clock Type	Slave Clock Location	Duration heightHardware (Time
	Watson's Office	Hardware (Syncwatch)	2E 3.Comms lab	24 hours	
I	Hardware (TimePort)	Watson's Office	Software (PTPd)	Watson's Office	24 hours
I	Hardware (TimePort)	Watson's Office	Software (PTPd)	2E 2 Lab	24 hours
I	Hardware (TimePort)	Watson's Office	Beaglebone	Anywhere available	24 hours

Any other tests may also be performed, including but not limited to: different grandmaster clock types and for different durations.

4.8 Data Processing

The final section of this part of the project consisted of initially processing the data that is gathered from the various clocks mentioned above. This is important because certain parts of the data is only needed for certain metrics and can thus be reduced to reduce the overall memory usage for the scripts.

iames@iames-netbook -/FinalYe	earProject/PTPData/TestData \$ tail	-n 50 TimePort	t-To-Soft-Test2/F	RawData.txt			
2014-02-28 13:22:53.562901,	slv fcaf6afffe00122b(unknown)/01,	0.000000000,	0.011554454, 0.	000000000,	0.011558941,	512000,	S
2014-02-28 13:22:53.594550, 9	slv fcaf6afffe00122b(unknown)/01,	0.000000000,	0.011565167, 0.	000000000,	0.011571394,	512000,	S
2014-02-28 13:22:53.626307, 9	slv fcaf6afffe00122b(unknown)/01,	0.000000000,	0.011598558, 0.	.000000000,	0.011625722,	512000,	S
2014-02-28 13:22:53.658092, 9	slv fcaf6afffe00122b(unknown)/01,	0.000000000,	0.011640084, 0.	000000000,	0.011654446,	512000,	S
2014-02-28 13:22:53.689762, 9	slv fcaf6afffe00122b(unknown)/01,	0.000000000,	0.011638269, 0.	.000000000,	0.011622092,	512000,	S
	slv fcaf6afffe00122b(unknown)/01,				0.011630622,		
	slv fcaf6afffe00122b(unknown)/01,				0.011647460,		
	slv fcaf6afffe00122b(unknown)/01,				0.011543984,		
	slv fcaf6afffe00122b(unknown)/01,				0.011549164,		
	slv fcaf6afffe00122b(unknown)/01,				0.011652185,		
	slv fcaf6afffe00122b(unknown)/01,				0.011558204,		
	slv fcaf6afffe00122b(unknown)/01,				0.011636218,		
	slv fcaf6afffe00122b(unknown)/01,				0.011628473,		
	slv fcaf6afffe00122b(unknown)/01,	0.000000000,			0.011650155,		
	slv fcaf6afffe00122b(unknown)/01,				0.011652845,		
	slv fcaf6afffe00122b(unknown)/01,				0.011665022,		
	slv fcaf6afffe00122b(unknown)/01,				0.011548513,		
	slv fcaf6afffe00122b(unknown)/01,				0.011669608,		
	slv fcaf6afffe00122b(unknown)/01,				0.011654310,		
	slv fcaf6afffe00122b(unknown)/01,				0.011547145,		
	slv fcaf6afffe00122b(unknown)/01,				0.011649832,		
	slv fcaf6afffe00122b(unknown)/01,	0.000000000,			0.011550936,		
2014-02-28 13:22:54.261190, 9	slv fcaf6afffe00122b(unknown)/01,	0.000000000,	0.011591978, 0.	.000000000,	0.011633021,	512000,	5

Figure 16: Example of the File Output

4.8.1 Example Data File

An example file output for the PTPd implementation which is run on the majority of the clocks is shown below in Figure 16.

This data is formatted as a Comma Seperated Variable (CSV) filetype of the following format:

Timestamp The timestamp includes the big-endian date format specified under ISO 8601 as well as the time. The time is displayed in an HH:MM:SS.##### type format, with the hashes denoting the decimal after the seconds field.

State The state is what state the clock is in, for example a Grandmaster or a Slave.

Clock ID The clock ID is a hardware ID which is specified under IEEE1588.

One Way Delay The one way delay is the average of the Master to Slave and Slave to Master delays. [?].

Offset from Master This is the difference between the master clock timestamp and the current slave clock timestamp.

Slave to Master This is the propagation delay from Slave to Master.

Master to Slave This is the propagation delay from Master to Slave.

Drift

Last Packet Received This is a single character which is the type of packet received. For example, S is a sync packet, and D is a delay packet.

4.8.2 Script to Parse the Data File

It can be seen that depending on what calculation is performed, there is quite a bit of excess data not required. Assuming that there will be 32 of these messages every second, the RAM requirement will be high if a long test was performed. Therefore it was decided to create a script that would parse this data into a correct form for use later on. Even with the data parsed, there may be too many data points. Thus a method to average the data by an arbitary value will also be added into this script.

Because this was a preprocessing step, it is important to try and keep the execution time of this script to as low as possible. Due to the script having to operate on a line by line basis, it was decided to use the scripting language Awk [?].

Awk has several advantages over other similar tools, but its main strength is that it is a very useful and efficient tool in parsing rows and columns of log files[?]. It can perform operations on a line by line basis, or when certain conditions are met (for example every N lines, or at the start and end of the file). Because it's used for file parsing, it has a built in regular expression engine which is handy for string manipulations. Its simple structure makes it a suitable tool for the job. It was also identifed to be a useful tool to know in the future, and thus it was decided to use awk for this part of the project.

Flow Chart The script needs to be able to: read in the text file, save the correct columns to a new file. If appropriate the script should also average N number of data points and save these to the new input file instead. The time field must also be parsed correctly and the time delta added to the new file.

The general script layout has been converted to a flow chart, see below Figure ??.

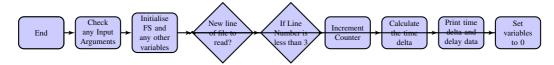


Figure 17: Awk Script Flow Chart

This flowchart was then used to create the final awk script, shown in Appendix 8. Most of the code is self documenting, but the *add_time* will be explained as that was part of the code that required some extra work to get working correctly.

add_time function The role of this function was to amalgamate the times from the first sample to the Nth sample, with N being the size of the window. The main issue with this function was the formatting of the time itself as it was not either an ISO 8601 float nor in the correct format for an inbuilt function *mktime* to be called. Therefore the following steps were performed to convert the time to the correct format.

Before the function is called, a regular expression substitution is used to replace all colons with spaces and all dashes to spashes. This was important because the end goal is to convert the current time format into one seperate by spaces. This step would parse the milliseconds away from the seconds. This was important so the correct sign of the delay was used. Convert time using mktime and take the differences between the delays to work out a delta. Return this difference.

This set of code was tested quite thoroughly to make sure all of the cases were covered, but this was not fully documented.

Conclusion to the Script The script runs very quickly, primarily due to the correct choice in language early on. Any testing for this script was carried out before it was integrated into any other source file. It was important to try and keep this script standalone, so any data file can be parsed independently without needing to call an extra program.

The following table shows some execution times for this part of the script given the number of lines run on a netbook. The above results were taking with a 10point average.

Table 5: Execution Times for Awk Script

Number of Lines | Time (ms)

Number of Lines	Time (ms)
1000	7
10000	28
100000	1384
1000000	14145

Based on the table above, the script is suitable enough considering that this will only be run once then the file is saved.

5 Packet Methods

This section of the project is the bulk of the programming development. Packet metrics will be created in a suitable language and will be run against the data collected in the previous section.

A range of packet metrics were chosen to be implemented from the report detailed in the literature review section of this report. The following packet metrics will be implemented:

Split Seconds portion by full compare the delta times to see if one was bigger than the of labrulate delta TDEV

- minTDEV
- percentileTDEV
- bandTDEV

- MATIE
- MAFE

Note that both MATIE and MAFE can have different packet selection methods (min, percentile, or band), so there may be more than the above implemented in the final script.

5.1 Choosing a suitable language

The first decision to make for this section of the project was to choose a suitable programming language. Based on the languages that would be suitable for a task such as this, the following languages were identified: R, C, Matlab, or Python.

The requirements that the language must meet in order to be suitable for the project are listed below.

Note that parts of this section has been copied from the Individual Technical Report for the Third Year Group Business and Design Project as there are some parts that are applicable.

REQ1- Familiarity with the Language

Spec: Used for a sufficient length of time

If the language was very familiar the development time of the scripts would be quicker. This extra time may be acceptable however if there is a much better language ssuited for the task.

REQ2 - Well Documented

Spec: Not Applicable

The majority of modern high level languages are well documented, with some online resources better than others. The language must be well documented so [REQ7] can be met. This will also make it easier if [REQ1] has not been met fully as it would be easier to learn the language with good documentation.

REQ3 - Plotting Functionality

Spec: Sufficient plotting functionality available

Does the language support complex plotting as standard or are external libraries required?

REQ4 - External libraries already available

Spec: All available

Some external libraries may be needed in case some specific functionality is required. Examples of external libraries that will be required are a command line argument tool and logging functionality.

REQ5 - Speed

Spec: Performs the metrics in a reasonable length of time

The metrics should be able to run on a relatively large dataset in a reasonable length of time. As it is unknown how long the scripts will take, this reasonable length of time will be decided later. If need be optimisation can be made to make the scripts faster.

REQ6 - Linux Compatibility

Spec: Can be developed under Linux

As the rest of the development will be using a Linux Mint netbook, it is a preference for the language to be suitable for a Linux development environment.

To decide on the best solution, a set of ranking criteria was created as well as a ranking table. The table below shows the criteria that the above languages were compared against.

Table 6: List of Criteria for the Language Options

Criterion	Description	Requirement	Weight	Highest - 5	Lowest - 0
Familiarity with the	Is the engineer	[REQ1]	9	Developed a few	No familiarity
Language	familiar with the			large projects.	
	language syntax and				
	style?				
Plotting functionality	What plotting	[REQ3]	8	Lots of plotting	All plotting
	functionality is			functionality	functions would
	available for the				need to be written
	language				from scratch
External Libraries	Are all of the	[REQ4]	7	All of the required	Minimal library
available	libraries available to			libraries are	support.
	complete the			available.	
	project?				
Speed	Is the chosen	[REQ5]	6	Fast enough.	Not fast at all. Needs
	language going to be				careful programming
	fast enough for the				to make as efficient
	application?				as possible.
Linux Compatibility	Is the language	[REQ6]	6	Yes, it is compatible.	No. Windows Only
	compatible in a linux				
	development				
	environment?				
Development Time	How long would it	None	7	Less than a month	Longer than 3
	take to develop the				months
	first program				
Documentation	Is the language	[REQ2]	6	Yes. The language	Very limited.
	mature enough to			has clear and concise	
	have a full set of			for all of the	
	documentation?			documentation.	

Table 7: Language Options Ranking Tables

Programming Language						
Ranking Criteria	Weight		Language			
Kanking Criteria	vveigin	R	Matlab	С		
Familiarity with the Language	9	18	36	45		
Plotting Functionality	8	40	32	0		
External Libraries Available	7	28	21	14		
Speed	7	14	0	28		
Linux Compatibility	7	14	0	28		
Development Time	7	21	28	28		
Documentation	6	18	18	30		
Total Figure	151	115	195			

Therefore based on the ranking table above it was decided that R will be the most suitable language for the task. In addition to this there are some R scripts as part of the PTPd which may also be used if suitable.

R is a programming language that used primarily for statistical computing. It is similar to the S programming language but under the **GNU!** (**GNU!**) umbrella. R has many strengths in statistics due to the wide range of libraries available to it. In addition to this it has extensive plotting functionality, both as standard and those written by thir parties. For computationally difficult tasks functions can also be ported into C, C++ or Fortran.

The development environment used for this project will be between a Linux Mint netbook and a virtual machine running Debian. A standard text editor (vim) and R will be used to run the scripts, rather than using a full **IDE!** (**IDE!**) such as R-Studio. Note that the code will be written so it can run cross platform, provided that the necessary libraries have been installed.

5.2 General Packet Metric Implementation

The packet metric literature review section of this report (Section 2.1) outlines the equations used to calculate the metrics. It can be seen from these different metrics that there is a common format for all of them, and thus this will be exploited where possible.

Therefore each of the packet types will be performed in the smallest number of for loops as possible to cut down on execution time. The general format for the packet metric script in a flowchart is the following (Figure ??)

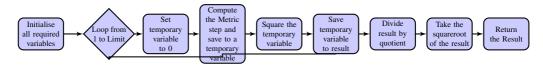


Figure 18: General Packet Metric Flowchart

The flow chart above has been converted into psuedo code, seen below.

Algorithm 1: Psuedo-Code for General Packet Metric Script

The for loop length is determined by the value of N (the number of samples) and n (the current iteration in the set). Note that the algorithm designed above only calculates one result for the particular packet metric. This function would have to be called continuously with an incrementing value of n up to the limit. This limit is determined by the particular metric and has been discussed in the previous section.

Because the TDEV and MATIE packet metrics have different looping conditions, they will be created in two separate scripts, as discussed in the later sections.

5.3 TDEV and TDEV derivatives

Using the above flow chart as a base for the script, the TDEV and TDEV derivative functions were created. As mentioned previously, all of the TDEV scripts will be created in one source file in R.

The four metrics that will be implemented were: TDEV, minTDEV, bandMeanTDEV and percentileTDEV.

TDEV The TDEV script requires means to be taken of the individual slices. As there is a built in mean function to R, this will be used. Optimisation of this mean algorithm will not be looked into.

minTDEV Same as above, as a minimum function exists in R, this function will not be written directly.

bandMeanTDEV A band mean is similar to a mean but is taken over a particular set of values of the window. For example, if the band mean was taken between 20 and 80%, then the mean will use the middle 60% of values. As this function does not exist in R, this would have to be created.

The bandMean implementation can be found below, in Code Listing 6. This can also be found in Appendix 9.

```
Input: window - the samples
                            a
                               - lower band
                                - upper band
                            b
                  Output: mean of window
  bandMean <- function (window, a, b) {
    sum <- 0
    a \leftarrow (a / 100) * length(window)
    b \leftarrow (b / 100) * length(window)
    a = round(a) + 1 # 1 indexed
16
    b = round(b)
    for (i in a:b){
      sum <- sum + window[i] # sum window from a to b</pre>
    average \leftarrow sum / (b - a + 1)
    return (average)
```

Code Extract 4: Band Mean Implementation

The script converts the bands a and b into an integer. If the window size was 5, and a was 0 and b was 100 (i.e the total window size), then a would be 1 and b would be 5. The sum is the computed by looping from a to b. The average is then taken by divided the sum by b - a + 1.

percentileTDEV The percentileTDEV is very similar to the bandTDEV, except that the lower band is forced to 0.

With these four packet types, and referring to the general form of the script in the previous section, the complete TDEV script can be produced. See Appendix 10 for the full implementation of the script in R.

5.4 MATIE and MAFE derivatives

The MATIE and MAFE derivatives were created in a similar method to the TDEV scripts above, but the main difference is that both for loops have different upper bounds, hence why a different script needed to be created. The following MATIE and MAFE packet metrics were used: MATIE, minMATIE, MAFE, and minMAFE.

MATIE MATIE is implemented in a similar fashion to TDEV, using the built in mean function.

minMATIE The built in minimum function was used for this metric, in a similar method to the minTDEV script.

MAFE As described previously, MAFE is very similar to MATIE but there's a scaling value. Therefore only 2 values will be produced in this function, then MAFE will be calculated at the end before the values are returned.

minMAFE This will be calculated based off of the minMATIE result.

The MATIE/MAFE script was then created, which can be found in Appendix 11.

5.5 Overall Packet Script

Once the packet metric functions were created, these will need to be both called from a seperate file which will handle file IO and plotting. The following is a list of functions that the overall script should perform:

Input Arguments For the script to be fully functional, the script must be able to accept input arguments.

Logging The script may end up taking quite a bit of time to compute the packet metrics. Therefore some functionality of logging must be built in to this script. The logs may also be saved to a text file if needed.

Writing to a File To save from calculating the same packet metric data for a particular data set, the results can be saved to a text file.

Plotting The script must have some plotting functionality, as that is how the data will be displayed.

5.5.1 Flow Chart

The general layout of the script will be discussed, then each relevant function will then be discussed in turn. The flow chart for this script can be seen below, in Figure ??.

With the following flowchart, there are some decisions to be made on what libraries to use and how to go about implementing certain functions.

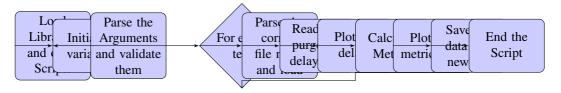


Figure 19: flowchart:overall

5.5.2 Input Arguments

It was intended for this packet metric script to be fairly comprehensive. Thus it would require input arguments so the user can choose what sort of metric to perform or on which set of data. The input argument functionality for R is similar in some respects with C: it only consists of positional arguments and uses an argc / argv type structure. It would be better to use a more substantial input argument library such that optional flags can also be used.

Argparse [?], a library originally written for Python but ported to R, was the most suitable choice. It has numerous useful features including: generates a help command automatically, optional flags, and argument parsing to a data structure.

The next decision would be to see what arguments would be required. The following table outlines what arguments were used.

Table 8: List of Arguments

Argument Name	Description	Argument Flag	Type	Default Value	Destination
Test Number	Which test number should be used?	-nTest	Integer	- 1	nTest
Number of Lines	How many samples should be used?	-nLines	Integer	0	nLines
Directory	What is the test directory?	-directory	String	None	directory
Metric	What metric type do you want to run?	-metric	String	TDEV	metrics
Direction of Delay	Do you want Master to Slave or Slave to Master	-delayDir	String	Master2Slave	direction
CSV File	Do you want to save the data in a CSV file?	-CSV	Boolean	None	CSV
Verbose Mode	Do you want the logging to be verbose?	-v –verbose	Boolean	None	verbose
Quiet Mode	Do you want the logging to be quiet?	-q –quiet	Boolean	None	quiet
Histogram	Do you want a delay histogram saved?	–hist	Boolean	None	hist
Colour Histogram	Do you want a colour delay histogram saved?	-cHist	Boolean	None	cHist
Delay Plot	Do you want the delay plotted?	-plotDelay	Boolean	None	pdelay
Statistics	Do you want to generate a table of Stats?	-stats	Boolean	None	stats
Starting Point	Set the starting point of the test data	-start	Integer	0	start
Interactive Mode	Enable Interactive Mode	-i	Boolean	None	interactiveMode

Input Argument Flow Chart?

- 5.5.3 Logging
- **5.6 Function Library**
- 5.7 Testing
- 5.8 Optimisation
- 6 Analysis Methods
- plotting functions

7 Results

- Info *explain results
- 8 Discussion
- 9 Challenges
- 10 Milestones
- 11 Further Work
- 12 Other Work

12.1 Securing PTP against attacks

PTP Security Tutorial http://www.ispcs.org/security/downloads/PTPSecurityTutorial.pdf

PTP is inherently an unsecure system with no standard methods in either encrypting communications between the master and the slave devices or any method of verifying that a particular grandmaster is legitamate. Therefore the slave clocks rely on trusting the grandmaster is an accurate time reference and blindly syncronising with the masters. The issue arises if a master or grandmaster was compromised and clock shift delays were spoofed. This would cause all of the slave clocks on the network to drift away from the actual time reference. The impact on critical systems mentioned in this report would be huge: timestamps for telecommunications data would be invalid or power transmission relays would trigger in the wrong order. Therefore this section of the report will highlight some of the attack vectors that could affect PTP and methods in which to help mitigate this.

12.1.1 Issues with NTP

* find documentation on the NTP DDOS type attack style * * comment whether it's possible with PTP*

12.1.2 Possible Attack Vectors

There a number of different methods that are possible with the existing PTP standard. These are:

Control Plane Attack

This attack is an attack specifically on the Best Master Clock (BMC) algorithm which is highlighted in Section 1.2.4. It works by having a compromised host (pictured below in red, Figure 20) announcing to the network that it has set the highest priority flag to 1.

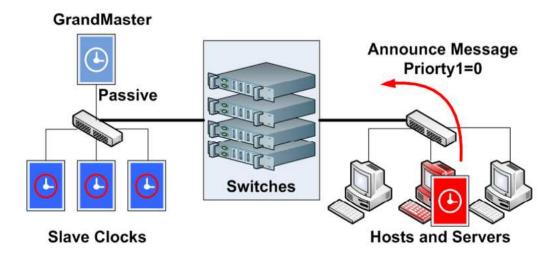


Figure 20: Control Plane Attack Vector (taken from ref)

This would set it to become the Grandmaster clock on the network based on the BMC algorithm. The existing Grandmaster (GM) clock is now passive and the new grandmaster can now steer all of the slave clocks on the network by reporting false timestamps. Provided that the compromised host keeps their priority level at the highest, the only method of fixing this type of attack would be for another master clock to also set their priority to the highest. The BMC algorithm will then drop to the next level, which is Clock Type (need to check).

A more sophisticated version of this attack could be for the compromised clock to eventually mirror all of the parameters for the current grandmaster, such that it would be a random choice which clock would be chosen as the Grandmaster.

Sync Plane Attack

This attack type involves the compromised clock to learn enough about the existing grandmaster to be able to spoof messages as if the compromised clock was the grandmaster. It does this by learning the GM identity, addresses, sync sequence number and interval.

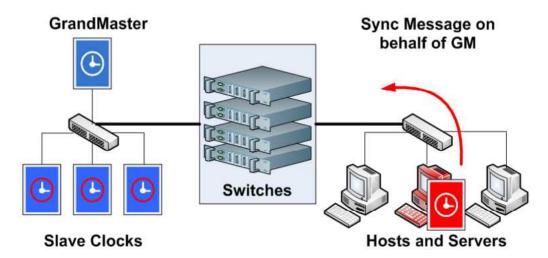


Figure 21: Sync Plane Attack Vector (taken from ref)

From the perspective of one of the slaves, this compromised clock is exactly the same as the current grandmaster. The compromised clock can then send sync messages, thus hijacking the slave clocks on the network. This is a form of a masquerade attack.

Due to the nature of this attack, it would be difficult to attempt to mitigate the risk of this type of attack occurring on a PTP network because the real grandmaster and the hacked host look identical.

One way that network administrators could attempt to mitigate this however is to restrict any two devices with the same parameters on the network from communicating. This would involve some sort of authentication process that cross checks all possible masters.

Management Plane Attack

The final attack type involves using a management command to gain grandmaster access on the network.

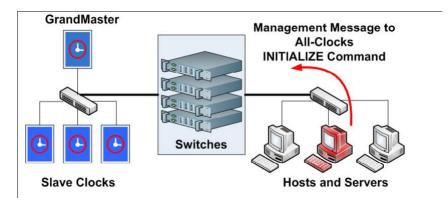


Figure 22: Management Plane Attack Vector (taken from ref)

It involves gaining access to the clocks to disrupt network operation by sending an initialise command.

Delay Attacks

The final attack type is a delay attack, which involves a compromised switch instead of a host.

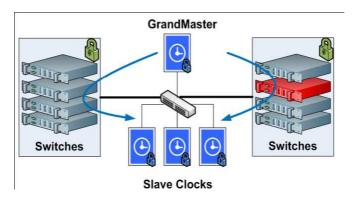


Figure 23: Delay Attack

Confidentiality and Non-Repudiation

Test. add in some info here

Figure 23 demonstrates what would happen if this occured. The hijacked switch (when acting like a boundary clock) would be able to report incorrect delay values which would then propagate these errors across the network.

The problem with mitigating this type of attack is, unlike the three previous attack types, is that it would be difficult to redirect routing of the PTP packets around the compromised switch. One way of mitigating is that the delays could be sanity checked with a number of different routes, similar to how clocks in every stratum in NTP are sanity checked.

12.1.3 Methods to mitigate the above attack vectors

There are several general methods of securing a PTP network in general, with some other specific methods also mentioned in relation to the attacks mentioned above. The general methods are:

• Physically Securing the Network

- Use seperate sub-networks to limit the effect of multicast communication
- Limit the grandmasters to a pre-defined list by implementing a whitelist
- Limit the management address to a pre-defined list
- Snoop source address to attempt to identify masquerade attacks

The above methods would be able to mitigate some of the attack types but they are either not always possible to implement, don't cover some of the more serious threats to the network, or the goal of minimising central administration would not be reached. For example, physically securing the network may not always be fool-proof or may not be possible in certain circumstances. The issue with limiting either the grandmasters or the management addresses is the extra overhead involved in administrating the network, which goes against the original goals of PTP to have distributed control.

IEE1588-2008 standard includes a section on secure PTP which aims to address these concerns. This is in Appendix J of the standard. Some of the solutions mentioned in the standard will be discussed here, along with some comments and suggestions to move forward, and areas that could be later worked on to better improve the security of PTP.

12.1.4 Security Protocol Recommendation

Annex K of the IEEE1588-2008 specification outlines a recommendation to how secure PTP could be implemented. It explicitly states that this section is not a requirement to meet the standard, just a possible way of implementing it. The extension to the standard includes group source authentication, message integrity and replay attack protection, which would help to mitigate some of the attack vectors mentioned previously.

The security protocol includes two main elements: an integrity protection mechanism and a challenge-response mechanism. Symmetric message authentication code functions are used which provides the advantages of replay proection, group source authentication and message integrity. The standard recommends two main authentication standards (HMAC-SHA1-96?? and HMAC-SHA256-128??), but there is a possibility for the standard to support more than these.

Users on the PTP network will share symmetric authentication keys, which can either be shared across an entire domain or in subsections of it. There are two ways of key distribution: either manual or an automatic key management protocol.

Security Associations The method of communication between users on the PTP network is through Security Associations (SAs). The contain the following fields:

- Source (Source port and Protocol Address)
- Destination (Destination Address and Protocol Address)
- key (either SHA256-128 or SHA1-96)
- a random lifeTimeID
- a reply counter

The SA is a unidirectional transaction, therefore each node on the network needs to maintain a list of both incoming SAs as well as outgoing. They can be shared by a single sender and multiple receivers, but each receiver holds its own copy of the SA. This will work provided that each of the receiver copies holds a different value of the reply protection counter at the same time. All of them must be smaller than the counter stored in the sender's copy. The SA is generated by the sender, and can be sent to all of the receivers, or a seperate one to each of them.

Requirements

12.2 Sub-microsecond accuracy

13 Conclusion

14 Acknowledgements

References

- [1] ITU, "Definitions and terminology for synchronization in packet networks," SERIES G: TRANSMISSION SYSTEMS AND MEDIA, DIGITAL SYSTEMS AND NETWORKS: Packet over Transport aspects Quality and availability targets, 2012.
- [2] Chronos, "Ctl4540 timeport." TimePort Datasheet.
- [3] B. D. Esham, "File:network time protocol servers and clients.svg." {http://en.wikipedia.org/wiki/File: Network_Time_Protocol_servers_and_clients.svg}, September2007.newblock Accessed: 2014-02-11.
- [4] RadhaKrishna.Arvapally, "Ieee1588 communication mechanism." http://en.wikipedia.org/wiki/File: IEEE1588_1.jpg. Accessed: 2014-02-15.
- [5] D. S. Mohl, "Ptp applications." http://www.ieee1588.com/IEEE1588_PTP_Applications.html, 2010. Accessed: 2014-02-11.
- [6] M. R. Bernhard Baumgartner, Christian Riesch, "Ieee 1588/ptp: The future of time synchronization in the electric power industry." https://www.picotest.com/downloads/OTMC100/IEEE_1588_PTP_-_The_Future_of_Time_Synchronization_in_the_Electric_Power_Industry.pdf". Accessed: 2014-02-11.
- [7] NERC, "Disturbance monitoring equipment installation and data reporting." http://www.nerc.com/files/prc-018-1.pdf. Accessed: 2014-02-11.
- [8] L. Carroll, "Executive summary: Computer network time synchronization." http://www.eecis.udel.edu/~mills/exec.html. Accessed: 2014-02-11.
- [9] D. L. Mills, "Executive summary: Computer network time synchronization." http://www.eecis.udel.edu/~mills/exec.html. Accessed: 2014-02-19.
- [10] M. R. CLOCKS, "What is the difference between ntp and sntp?." http://www.meinbergglobal.com/english/faq/faq_37.htm. Accessed: 2014-02-17.
- [11] J. B. D. Mills, J. Martin, "Network time protocol version 4: Protocol and algorithms specification." http://tools.ietf.org/html/rfc5905. Accessed: 2014-02-11.
- [12] W. P. N. C. S. W. Group, "1588-2008 ieee standard for a precision clock synchronization protocol for networked measurement and control systems." http://standards.ieee.org/findstds/standard/1588-2008.html, 2008. Accessed: 2014-02-13.
- [13] C. A, "Preventing the collision of requests from slave clocks in the precision time protocol (ptp)," May 2011.

1 Clock Accuracies

	Quartz Oscillators		Atomic Oscillators	
	OCXO	Rubidium	RbXO	Ceasium
Accuracy (per year)	1x10-8	5x10-10	7x10-10	2x10-11
Ageing (per year)	5x10-9	2x10-10	2x10-10	0
Temperature Stability	1x10-9 (-55 to 85)	3x10-10 (-55 to +68)	5x10-10(-55+85)	2x10-11 (-28 to +65)
Stability , Sy $t = 1s$	1x10-12	3x10-12	5x10-12	5x10-11
Size (cm ²)	20-200	800	1200	6000
Warmup Time (minutes)	4 (to 1x10-8)	3 (to 5x10-10)	3 (to 5x10-10)	20 (to 2x10-11)
Power (W) (at lowest temp.)	0.06	20	0.65	30
Price \$	2000	8000	10000	40000

2 Gantt Chart and Table

Figure 24: Gantt Chart

	Task Name	Duration (days)	Start	Finish	Predecessors
A	Deliverables	72	Mon 03/02/14	Tues 13/05/14	
1	Log Book	65	Mon 03/02/14	Fri 02/05/14	
2	Interim Report	9	Fri 07/02/14	Wed 19/02/14	B, 1
3	Final Year Report	17	Mon 14/04/14	Tues 06/05/14	B,C,D,1,2
4	Poster	5	Wed 07/05/14	Tues 13/05/14	1,3
В	Preliminary Reading	7	Mon 03/02/14	Tues 11/02/14	
1	Read up on PTP	7	Mon 03/02/14	Tues 11/02/14	
2	Reading about Metrics	7	Mon 03/02/14	Tues 11/02/14	
C	Packet Metrics	35	Mon 10/02/14	Fri 28/03/14	
1	Decide on Language	1	Mon 10/02/14	Mon 10/02/14	
2	Decide on Metrics	1	Mon 10/02/14	Mon 10/02/14	
3	Implement Metrics	24	Mon 11/02/14	14/03/14	1,2
4	Test all Metrics	33	Wed 12/02/14	Fri 27/03/14	3
5	Run some tests on sample Data	8	Wed 12/02/14	Fri 21/02/14	3
D	Data Collection	45	Mon 03/02/14	Tues 04/04/14	
1	Set up Equipment	5	Mon 03/02/14	Fri 07/02/14	
2	Run Tests w/ Chronos Equipment	10	Mon 24/02/14	Fri 07/03/14	1
3	Run Tests w/ Software	5	Mon 10/03/14	Fri 14/03/14	1
4	Run Tests with w/ Mix	5	Mon 17/03/14	Fri 21/03/14	1
5	Other Tests	10	Mon 24/03/14	04/04/14	1
6	Run scripts on Results	30	Mon 24/02/14	Fri 04/04/14	2,3,4,5
E	Other Work and Buffer	12	Mon 07/04/14	Fri 18/04/14	

3 Chronos CTL4540 TimePort Specification

IPPS 200 nanoseconds over 8 hours (±10 °C temp change) **Holdover** 100 nanoseconds ove 4 hours (±10 °C temp change)

Inputs

+5V DC: MiniB USB
GPS antenna: SMA
Ethernet (PTP and SNTP/NTP): RJ45 10/100
Ethernet (management): RJ45 10/100
1PPS (phase 2): BNC

Outputs

1PPS: BNC
Frequency 1: 2.048 MHz, 10 MHz BNC G.703
Frequency 2: 2.048 MHz, 10 MHz BNC G.703
IRIG-B: BNC

RS232: 9 way D-Type 9600 band RS442: 15 way D-Type 9600 band

Ethernet (PTP and SNTP/NTP) (Max 10 clients): RJ45 10/100 Ethernet (management): RJ45 10/100

Environmental

Operating Temperature: $0 \,^{\circ}\text{C}$ to $+50 \,^{\circ}\text{C}$ Maintain holderover tolderance down to: $-10 \,^{\circ}\text{C}$ for 15 minutes Storage temperature: $-20 \,^{\circ}\text{C}$ to $+80 \,^{\circ}\text{C}$

Physical

Size: 190 x 57 x 170mm (WxHxL)

Weight: 1150g

4 TimePort Documentation

5 Syncwatch Documentation	n
---------------------------	---

6 Test Sheet Example

	Test: T	imeport_to_Software Tes	st One		
Test Name:	TimePort_To_Sof	tware Test One			
Test ID:	001				
Test Date	2014-02-27				
File Name:	RawData.txt				
Directory:	./PTPData/TimeP	ort_To_Software_Test1			
Start Time:	1037				
End Time:	2200				
Clock #1 Type:	Hardware		Clock #2 Type:	Software	
Clock #1 Name:	TimePort_1		Clock #2 Name:	PTPd_Netbook	
Clock #1 Model:	TimePort		Clock #2 Model:	PTPd	
Clock #1 Location:	Watson's Office		Clock #2 Location:	2E 2.13	
Network Activity:	Normal				
Test Description:	An initial test to o	An initial test to collect data to supplement the example data already received.			
Comments	1342: Data seems to be collecting fine. 3hrs20mins: 45MB				

7 Test Sheet Summary Sheet

Test Number	Directory	Master	Slave	Location Master	Location Slave	Start Time
001	27/02/14	TimePort-To-Software-Test1	TimePort_1	PTPd_Netbook	2E	2E 2.13
Finished		'	'		'	'
002	28/02/14	TimePort-To-Software-Test2	TimePort_1	PTPd_Netbook	2E	2E 2.13
Finished			'		•	·
003	28/02/14	TimePort-To-Software-Test3	TimePort_1	PTPd_Desktop	2E	2E 4.
In Progress			•		•	
004	03/03/14	TimePort-To-Software-Test4	TimePort_1	PTPd_Netbook	2E	2E 2.13
Finished						
005	03/03/14	TimePort-To-Software-Test5	TimePort_1	PTPd_Netbook	2E	Library
Finished					•	
006	03/03/14	TimePort-To-Beaglebone-Test1	TimePort_1	Beaglebone_1	2E	2E 4
Finished						
007	04/03/14	TimePort-To-Software-Test6	TimePort_1	PTPd_Netbook	2E	2E 2.13
Finished						
008	05/03/14	TimePort-To-Beaglebone-Test2	TimePort_1	Beaglebone_1	2E	2E 2.13
In Progress					•	
009	05/03/14	TimePort-To-Software-Test7	TimePort_1	PTPd_Netbook	2E	2E 2.13
In Progress						

8 Awk Script

```
9 BEGIN {
# Checks to see if Ratio is correct (ie greater than 0, not too high, and is an integer if (RATIO < 0 || RATIO > 1000000) print "Illegal value of ratio. Will default to 10\n" > "/dev/
        stderr";\
12 if (RATIO == 0) print "RATIO variable not found, will default to 10" > "/dev/stderr";
if (!(RATIO ~ /^[0-9]+$/)) print "RATIO must be an integer. Defaulted to 10" > "/dev/stderr";
FS = ","; RATIO==10; num=0; sum[0]=0; sum[1]=0; #Sets the file seperator, a default ratio value,
        and some initial values
   printf "# TimeDelta, Master2Slave, Slave2Master\n"
16 };\
17 { \
  if (NR < 4) next; #Ignores the first three lines
if (num==0) { firstfield = $1}; # Sets the firstfield (time) to the variable firstfield
20 \mid \text{num} = \text{num} + 1; \setminus
  sum[1] = sum[1] + $4; #Adds the first delay to the first sum
sum[2] = sum[2] + $6; #Adds the second delay to sum
23 if (num == RATIO) { #If we've added up RATIO number of delays
  # --- This section parse
split(firstfield, arrayFirstField,"") #Split old time (at num=0) by space split($1,arraySecond,"") #Split the new time (at num=RATIO) by space
  gsub(/:/," ", arrayFirstField[2]) #Replace all semi colons with a space gsub(/:/," ", arraySecond[2])#Replace all semi colons with a space
  gsub(/:/," ", arraySecond[2])#Replace all semi colons with a space gsub(/-/, " ", arrayFirstField[1])#Replace all dashes with a space gsub(/-/, " ", arraySecond[1]) #Replace all dasheswith a space
stall timeDelta = add_ms(arrayFirstField, arraySecond)
printf "%s, %g, %g \n", abs(timeDelta), sum[1]/num, sum[2]/num; \  
  sum[1] = 0; #reset counters
34
  sum[2] = 0; \setminus
num = 0;
   }; \
18 | lastfield = $1
39 } \
41 END {
     if (num != 0) { #If the number of delays is nonzero, do one final calculation as above
42
43
        split(firstfield, arrayFirstField," ")
44
45
        split($1, arraySecond," ")
       gsub(/:/, " ", arrayFirstField[2])
gsub(/:/, " ", arraySecond[2])
gsub(/-/, " ", arrayFirstField[1])
gsub(/-/, " ", arraySecond[1])
46
47
49
        timeDelta = add\_ms(arrayFirstField, arraySecond)
        printf "%s, %g, %g \n", abs(timeDelta), sum[1]/num, sum[2]/num
52.
54
   function add_ms(time, time2, delta, delta2) {
     split(time[2], delta, "."); #split the old time by .
split(time2[2], delta2, "."); #split the current time by .
57
     #delta?[2] is the ms difference
58
     if (int(delta[2]) > int(delta2[2])) {
59
        # If delta is > delta 2, the time is of the form similar to 3.873 and 4.210.
60
        # You can't take one away from the other, so I did 1000 - 873, then added on the 210. (for
            example)
        return (1000 - int(delta[2]) / 1000 + int(delta2[2]) / 1000)
     } else return( (mktime(time2[1] " " time2[2]) + (int(delta2[2]) / 1000 ))) - (mktime(time[1] " "
            time [2]) + (int (delta [2]) / 1000));
  function abs (value)
66 {
     return (value < 0? - value: value);</pre>
67
```

Code Extract 5: Awk Script

9 Band Mean

```
#!/usr/bin/env Rscript
  #_-
                       Function Name: bandMean
  #--
                      Name: Band Mean
                 Input: window - the samples
                            a - lower band
                            b
                                - upper band
                 Output: mean of window
  bandMean <- function (window, a, b) {
    sum <- 0
    a <- (a / 100) * length(window)
14
    b \leftarrow (b / 100) * length(window)
15
    a = round(a) + 1 # 1 indexed
    b = round(b)
19
    for (i in a:b){
      sum <- sum + window[i] # sum window from a to b</pre>
20
    average \leftarrow sum / (b - a + 1)
23
    return (average)
```

Code Extract 6: Band Mean Implementation

10 TDEVAllMethods

```
#!/usr/bin/env Rscript
     #-
                                                  Function Name: All Methods
     #--
                                                 Name: Time Deviation
     #--
                                      Input: nTo - position in list
                                                      N - number of samples
                                                      x - vector of samples
     #__
                                      Output : time deviation
     #-
     source("bandMean.r")
    TDEVAll \leftarrow function(To, n, N, x, a, b)
13
    # To <- 0.1 #time between samples
    # n <- nTo / To #number of samples to current point
         window <- 35 # Set window Size
          windowSide <- (window - 1) / 2 # Set the length of Side of window
          outerStep \leftarrow 0
18
          interimStep <-c(0,0,0,0)
19
          outerStep <-c(0,0,0,0)
          result <- c(0,0,0,0)
22
          for (i in windowSide +1:(N-3*n + 1) - windowSide) {
23
              interimStep \leftarrow c(0,0,0,0)
                   interimStep[1] \leftarrow interimStep[1] + mean(x[(i + (2*n)) - windowSide:(i + (2*n)) + windowSide])
                               -2* mean(x[i+n - windowSide : i + n + windowSide]) + mean(x[i - windowSide : i +
                             windowSide]) #TDEV (mean)
                   interimStep[2] \leftarrow interimStep[2] + \min(x[(i + (2*n)) - windowSide:(i + (2*n)) + windowSide])
26
                             -2* \min(x[i+n - windowSide : i + n + windowSide]) + \min(x[i - windowSide : i + n + windowSide])
                             windowSide]) #minTDEV
                   interimStep[3] \leftarrow interimStep[3] + bandMean(x[(i + (2*n)) - windowSide:(i + (2*n)) + (2*n)))
                             windowSide],a,b) - 2* bandMean(x[i+n - windowSide : i + n + windowSide],a,b) + bandMean(x
                             [i - windowSide : i + windowSide], a, b) #bandTDEV
              interimStep [4] \leftarrow interimStep [4] + bandMean(x [(i + (2*n)) - windowSide : (i + (2*n)) + windowSide 
28
                        ],0,b) - 2* bandMean(x[i+n - windowSide : i + n + windowSide],0,b) + bandMean(x[i-n])
                        windowSide : i + windowSide],0,b)
30
              interimStep <- interimStep ^ 2
              result <- result + interimStep
32
         result \leftarrow result / (6 * (N - (3*n) + 1))
result \leftarrow sqrt(result)
33
          return (result)
```

36

11 MATIEAllMethods

```
#!/usr/bin/env Rscript
  #-
  #_-
                       Function Name: TDEV
                       Name: Time Deviation
  #--
                  Input: nTo - position in list
  #--
                         N - number of samples
                            - vector of samples
  #--
                  Output: time deviation
  MATIEAllMethods <- function (To, n, N, x) {
  # To <- 0.1 #time between samples
  # n <- nTo / To #number of samples to current point
    window <- 5 # Set window Size
    windowSide <- (window - 1) / 2 # Set the length of Side of window
16
    outerStep <- 0
    #MATIE, MAFE, minMATIE, MAFE
    result \leftarrow matrix(0,4)
19
    interimResult <- matrix (0, (N - 2*n + 10), 4) #fudged because of the 4 truncated rows. will fix
         what N is.
    interimStep \leftarrow matrix(0,2) #only need MATIE and minMATIE
22
     for (i in 1:(N-2*n + 1)){
      interimStep \leftarrow c(0,0,0,0)
        for \ (j \ in \ i \ + \ windowSide: (n+i-1) \ - \ windowSide) \{
24
         interimStep[0] <- interimStep[0] + mean(x[i+n - windowSide: i + n + windowSide]) + mean(x[i
             - windowSide : i + windowSide])
26
         interimStep[1] \leftarrow interimStep[1] + min(x[i + n - windowSide : i + n + windowSide]) + min(x[i + n - windowSide])
             - windowSide : i + windowSide])
28
       for (k in 1:2) {
29
         interimStep[k] <- abs(interimStep[k]) / n</pre>
       interimResult[i,1] <- interimStep[1]</pre>
32
       interimResult[i,2] <- interimStep[1] / (n * To)
33
       interimResult[i,3] <- interimStep[2]</pre>
35
       interimResult[i,4] <- interimStep[2] / (n * To)
    result[1] <- max(interimResult[1])
37
38
    result[2] <- max(interimResult[2])</pre>
     result[3] <- max(interimResult[3])</pre>
39
    result[4] <- max(interimResult[4])
41
    return (result)
```

Code Extract 8: MATIE All Methods implementation

12 Main Packet Metric Script