# Airplane mode by Ethernet of Wireless LAN automated testing

# **Version History**

Version	Date	Handled by	Comments
V1.0	24-June-2019	ZL Chen	First version release.

# **Precondition Setting:**

Please make sure the DUT is connected to the internet.

- ➤ Install the adb interface driver
  - ✓ Please refer to the "ADB interface driver.pdf" attachment. (\automation\sop\other\ADB interface driver.pdf)
- Install the Python 3.6.8.
  - ✓ Please refer to the "Python 3.6.8 installation.pdf" attachment. (\automation\sop\other\Python 3.6.8 installation.pdf)
- Install the third party library.
  - ✓ Double click the "Envir\_Install.exe" under the installer folder. (\automation\installer\Envir\_Install.exe)

Please follow the implement as below:

# Block Diagram:

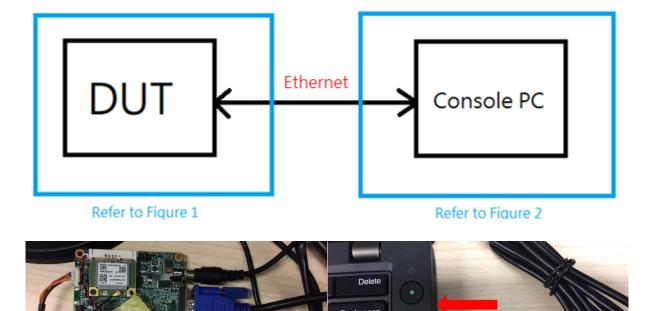



Figure 1 Figure 2

Step 1:

Please make sure the Wi-Fi is connecting to the repeater. (Figure 1)


SSID: siot\_dqa

Password: ad20151225

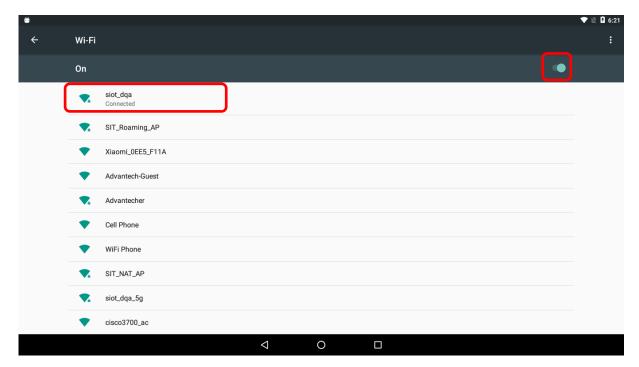


Step 2:

Please delete all of the known networks, because you need make sure the network just only attach to the "siot\_dqa" repeater. (Figure 1)

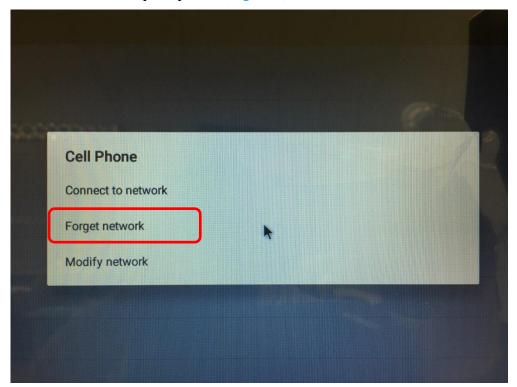

Step 3:

Please copy the airplane\_wlan folder of the suite to the device's desktop. (Figure 2)

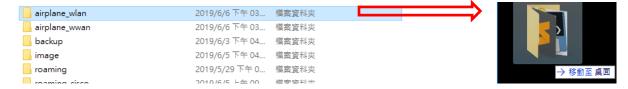

Make sure the adb.exe should be worked, so please input the window command as below: (Figure 2)

Command: "adb.exe kill-server" and "adb.exe start-server"


```
C:\Users\DQA\Desktop\suite\airplane_wlan>adb.exe kill-server
C:\Users\DQA\Desktop\suite\airplane_wlan>adb.exe start-server
* daemon not running. starting it now on port 5037 *
* daemon started successfully *
C:\Users\DQA\Desktop\suite\airplane_wlan>_
```

Command: "adb.exe devices"

```
C:\Users\DQA\Desktop\suite\airplane_wlan>adb devices
List of devices attached
ZDSGAAU07579Q4A6 device

C:\Users\DQA\Desktop\suite\airplane_wlan>
```

Make sure the "Allow USB debugging" alert is pop up on the DUT window. (Figure 1) Please check the "Always allow from this computer" box, then tap the "OK" button.

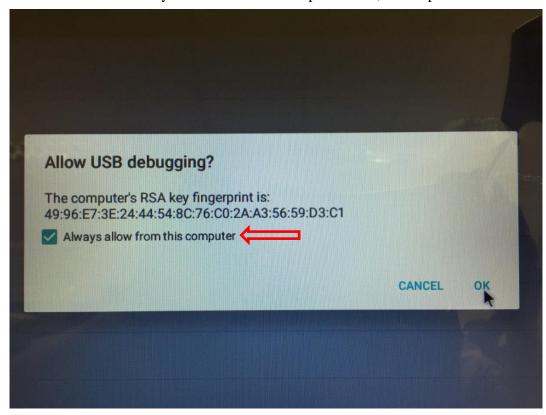

Implement the airplane\_ethernet\_single.exe under the "\airplane\_wlan\" folder. (Figure 2)

```
D:\code\automation\suite\airplane_wlan>airplane_ethernet_single.exe
Created on 2019/06/14
Author: ZL Chen
Title: The Wireless LAN should be worked after the airplane mode is switch on/off.
技不到 D:\code\automation\suite\airplane_wlan\*.txt
技不到 D:\code\automation\suite\airplane_wlan\*.jpg
Please input the 'Cycle Times' you want : _
```

## Step 4:

Please input the "Cycle Times" you want. (Ex: 1), and then tap the "Enter". (Figure 2) Please input the Gateway. (Ex: 192.168.31.1), and tap the "Enter". (Figure 2)

The program is start running.

```
D:\code\automation\suite\airplane_wwan>airplane_ethernet_single.exe
Created on 2019/06/14
Author: ZL Chen
Title: The Wireless WAN should be worked after the airplane mode is switch on/off.


找不到 D:\code\automation\suite\airplane_wwan\*.txt
找不到 D:\code\automation\suite\airplane_wwan\*.jpg
Please input the 'Cycle Times' you want : 1

Cycle Times: 1
```

## Step 5:

When the program is completed, the windows should be closed.

You can see the log under the "\airplane\_wlan\" folder as below: (Figure 2)

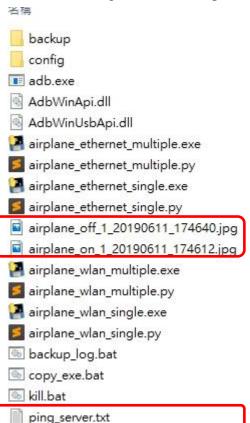

ping\_server.txt is ping log.

```
File Edit Format View Help

Cycle Times: 1
PING 8.8.8.8 (8.8.8.8) 56(84) bytes of data.'
64 bytes from 8.8.8.8: icmp_seq=1 ttl=53 time=106 ms'
64 bytes from 8.8.8.8: icmp_seq=2 ttl=53 time=203 ms'
64 bytes from 8.8.8.8: icmp_seq=3 ttl=53 time=15.2 ms'
64 bytes from 8.8.8.8: icmp_seq=4 ttl=53 time=11.9 ms'


--- 8.8.8.8 ping statistics ---'
4 packets transmitted, 4 received, 0% packet loss, time 3003ms'

The connection is Passed: (PASS)
Cycle Times: 1, Passed: 1, Failed: 0

Total Cycle Times: 1, Passed: 1, Failed: 0
```

The Total Cycle Times is 1, Passed is 1 and Failed is 0.

airplane\_off\_1\_20190611\_174640.jpg is airplane switch off by screenshot.

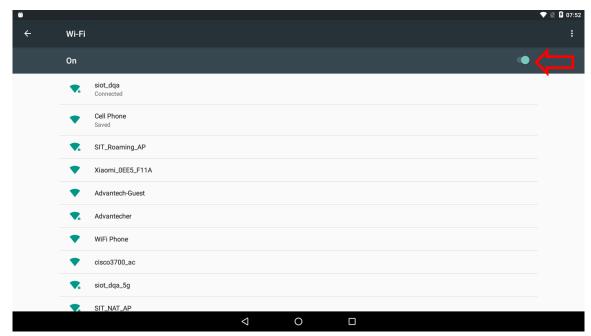

➤ airplane\_on\_1\_20190611\_174612.jpg is airplane switch on by screenshot.

