### CARPENTRY SHOP

**DATE:** / /20

### **EXPERIMENT NO:**

AIM OF THE EXPERIMENT: To study about different hand tools used in carpentry shop.

# **Theory:**

Carpentry is the process of shaping Timber, using hand tools. The products produced are used in building construction, such as doors and windows, furniture manufacturing, patterns for moulding in foundries, etc. Carpentry work mainly involves the joining together of wooden pieces and finishing the surfaces after shaping them. Hence, the term joining is also used commonly for carpentry. A student studying the fundamentals of wood working has to know about timber and other carpentry materials, wood working tools, carpentry operations and the method of making common types of joints.

# **Material Used:**

Basic materials used in carpentry shop are timber and plywood. Auxiliary materials used are nails, screws, adhesives, paints, varnishes, etc.

# **Timber:**

Timber is the name given to wood obtained from exogenous (outward growing) trees. In these trees, the growth is outward from the centre, by adding almost concentric layers of fresh wood every year known as annual rings. After the full growth, these trees are cut and sawed to convert into rectangular sections of various sizes for engineering purposes.

Timber is available in market in various shapes and size. The common shapes and sizes an: given below:

- 1. Log: This is the trunk of die tree which is tree from branches.
- 2. **Balk:** This is the log after sawing roughly to square cross section.
- 3. **Deal:** This is the log after sawing into rectangular cross section of width about 225 mm and thickness up to 100 mm.
- 4. **Plank:** This is the timber piece having width more than 275 mm and thickness 50 lo 150 mm.
- 5. **Board:** This is the timber piece below 50 mm in thickness and above 125 mm in width,
- 6. **Batten:** This is the timber piece below 175 mm in width and thickness between 30 mm to 50 mm in thickness.
- 7. **Scantlings:** These are timber pieces of various assorted and nonstandard sizes other than the types given above.

## **Classification of Wood**

The timber used for commercial purposes can he divided into two classes as soft wood and hard wood

#### Soft wood

A soft wood is light in weight and light colored. They may have distinct annual rings but the medullar rays (radial lines) are not visible and the color of the *sap wood* (outer layers) is not distinctive from the heart wood (inner layers). These woods cannot resist stresses developed across their fibers; hence, not suitable for wood working.

#### Hard wood

In this type of wood the annual rings are compact and thin and the medullar rays (radial lines) are Visible in most cases Figure 6.1. Hard woods are nearly equally strong both along and across the fibers. Hand wood is the material used for wood working

### • Classification of timber

According to the manner of growth of trees, timber can be classified as

- i. Exogenous or out ward growing
- ii. Endogenous or in ward growing

# i) Exogenous or out ward growing

In exogenous trees the growth take place from the centre by the addition of concentric layers of fresh wood every year, known as annual rings. These varieties of trees are suitable for building and other engineering uses the exogenous trees are again classified as

- a) Conifers or ever green trees
- b) Deciduous or broad leaf trees

The conifer gives soft woods and the deciduous gives hard wood common soft wood include kail pine, deodar chair, walnut seemal etc while hard wood are Sal, teak, rose wood, sandal, shisham, oak beach, ash ebony, mango, neem, babool, etc.,.

### ii) Endogenous or in ward growing timber

These trees grow in wards i.e. .every fresh layer of sap wood is added inside instead of outside cane, bamboo, coconut

### • Seasoning

Seasoning of wood carried out for removing the sap and reducing the moisture content the presence of sap and moisture will render the wood unsuitable for engineering works due to uneven shrinkage, crack, wrapping and decay.

## Different methods of seasoning

- 1. Air seasoning or Natural seasoning
- 2. Water seasoning
- 3. Electrical seasoning
- 4. Kiln seasoning

# Ply wood

Thick sheet formed by pasting veneers of wood is called ply. Three or more plys joined by glues is called plywood. The grains of adjacent layers are kept at right angle to each other in order to get better strengthening both directions the outer layer are called facing plys and good hard wood veneers are used for this inner ones are called core plys and low quality wood is used for this the ply wood is made by either cold pressing or hot pressing.

# Tools for wood working

The principle hand tools used in a carpentry workshop can be classified into

- 1) Marking and measuring tool
- 2) Cutting tool
- 3) Planning tool
- 4) Boring tool
- 5) Striking tool
- 6) Holding tool


## Marking and measuring tool

### a) Rules

Rules are used for measuring dimensions. For measuring and setting out dimensions various types of rules are used in carpentry shop.

Steel Rule- Stainless Steel Rule of length 30cm and 60cm.

Flexible Measuring Rule-It is used for measuring large dimensions as well as curved or angular surface dimensions.

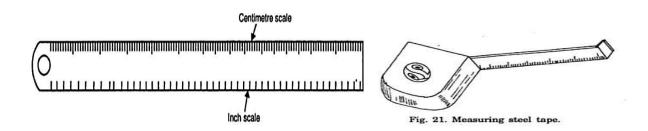

# b) Straight Edge and Squares

This is a machined flat piece wood or metal having perfectly straight and parallel edges.

c) Steel Tape: It is used for large dimensions, such as marking on boards and checking the overall dimensions of the work.

# d) Gauges

Gauges are used to mark lines parallel to the edges of a wooden piece. It mainly consists of a wooden stem sliding inside a wooden stock. The stem carries a steel point for marking lines. The stock position on the stem can be varied and fixed rigidly by tightening the thumb screw.

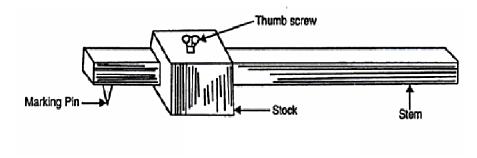


Fig. Marking Gauge

To mark a line parallel to an edge the gauge stock is held freely against the edge and pushed along it, pressing the steel points to the surface

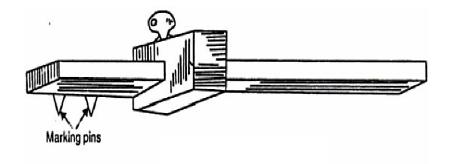


Fig. Mortise Gauge

## c) Try square

Try square consists of rectangular steel blade fixed rigidly to cast iron stock. The length of blade varies from 150mm to 300mm.

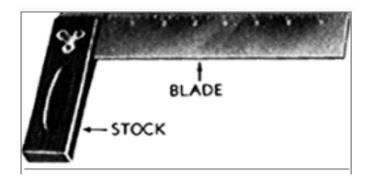


Fig. Try Square


## **Marking Knife or Scriber**

Marking Knives are used to convert the pencil lines drawn on the wooden surface into deep scratch lines on the surface. They are made of steel with a sharp point at one end and flat blade at the other end.



Fig. Marking Knife

**Bevel Square:** it is also called sliding level. It is an adjustable try-square used for measuring/marking angles between  $0^0$  and  $180^0$ .

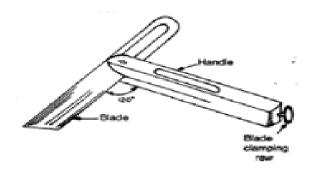

# **Work Holding tools**

## a) Work Bench

This is a table of having size and raised construction made of hard wood. The size ranges from 50-80 cm in length and about 90cm in width. Two or four carpenters can work at a time on the work bench.

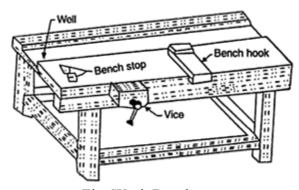


Fig: Work Bench


## **Carpenters Bench Vice**

It consists of jaw fixed on the table side and movable jaw kept in position by means of screw and handle. The body of vice is made of cast iron or steel. The jaws are lined with hard wood which can be removed when it is damaged.

The screw moves inside the fixed half nut which can be engaged or disengaged by operating the lever. This is made up of a bar of steel. The work is clamped between jaws by rotating the screw

using the handle. It is used for clamping glued pieces or holding the work piece of larger size together for various operations.


b) C Clamp: The clamp of the shape of letter C or G is used to clamp short pieces together as the bar clamp. These clamps are available is sizes varying from 70 mm to 800 mm. it is used for holding the planks after gluing

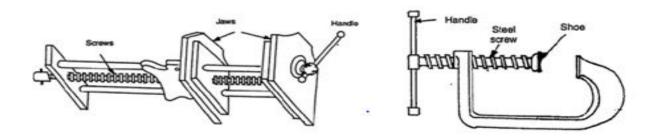

# **Cutting tools**

# a) Saw

Saw is a cutting tool which has teeth on one edge and cutting is affected by reciprocating motion of the edge relative to the work piece. Cutting occurs during the forward motion; such a saw is called push type saw, the cutting occurs during the backward motion.

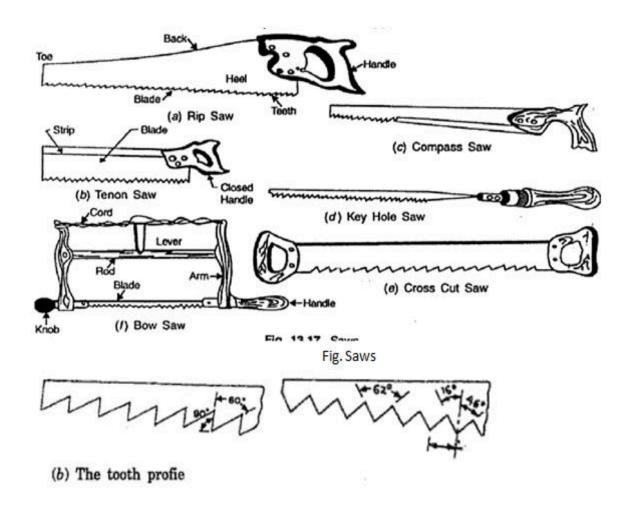

- I. Hand Saw- This saw is used for short straight cuts. It has a blade of 25-40cm length 6-10cm width. The number of teeth per cm length ranges from 3-5.
- II. Tenon Saw (Back Saw)- It has a parallel blade of 25-40cm length and 6-10cm width. The number of teeth per cm length ranges from 5-8.


## b) Files


Filing is one of the methods or removing small amount of material from the surface of a metal part. A file is a hardened steel tool, having slant parallel role of cutting edges or teeth on its surfaces. On the faces, the teeth are usually diagonal to the edge. One end of the file is shaped to fit into a wooden handle. The hand file is of parallel width and tapering slightly in thickness, towards the teeth. It is provided with double cut teeth on the faces, single cut on one edge and no teeth on the other edge, which is known as the safe edge. Files are classified according to their shape, cutting teeth and pitch or grade of the teeth based on the coarseness or the pitch of the teeth.

**Flat file:** Flat files are of rectangular cross-section. The edges along the width of these files are parallel up to the 2/3rd of the length, and then they taper towards the point. The faces are double cut and the edges single cut. They are useful for filing and finishing external and internal surfaces.

**Hand file:** These files are similar to the flat files in their cross section. The edges along the width are parallel throughout the length. The faces are double cut. One edge is a single cut whereas the other is a safe edge. These are useful for filing surfaces which are at right angles to surfaces already finished.

**Wood rasp files:** it is a finishing tool used to make the wood surface smooth, remove sharp edges, and finish fillets and other interior surfaces. Sharp cutting teeth are provided on its surface for the purpose. This file is exclusively used in wood work.

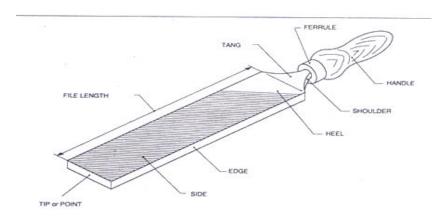

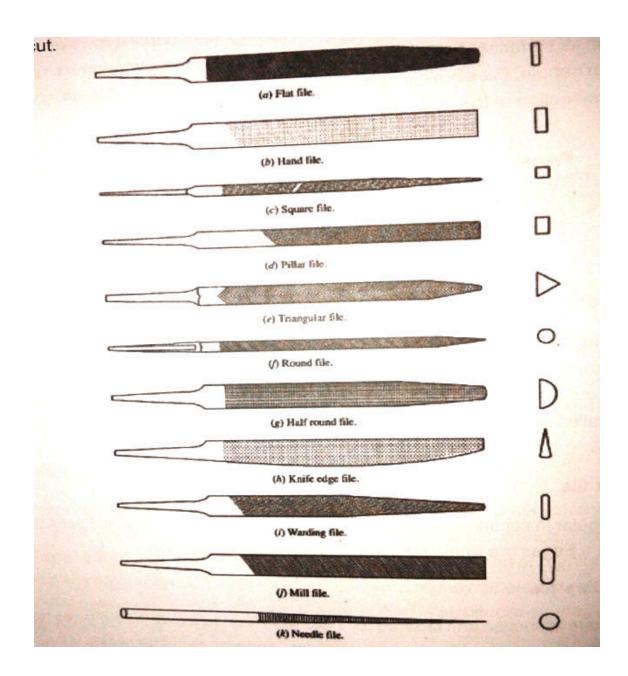


# c) Chisels

The common type of chisels used is briefly explained below.

<u>Firmer Chisels</u>- they are most common and general purpose chisel used by a carpenter. They have flat blade of 15-50mm width and 125mm length.

<u>Dove Tail Chisel</u> (beveled edge firmer chisel) - These chisels are used for fine and delicate works as well as for cutting corners.

<u>Mortise chisel</u> – These chisels are used for heavy and deep cut to remove large quantity of wood. These chisels have width of about 15mm but the blade thickness may range from 6-15mm.

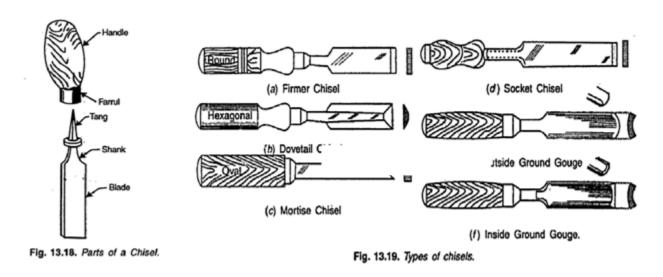


# **Planing Tools**

Planing tool is used to smoothen the wooden surfaces.

### a) Wooden jack plane


This is the most commonly used plane in carpentry shop. The main part of a wooden jack plane is a wooden block called sole, in which steel blade having knife edge is fixed at an angle with the help of wooden edge. The angle of the blade is kept about 45 ° to bottom surface of the blade.

**b) Metal Jack Plane** It serves the same purpose as the wooden jack plane but facilitates a smoother operations and better finish. The body of a metal jack plane is made from a grey iron casting with the side and sole machined and ground to better finish.

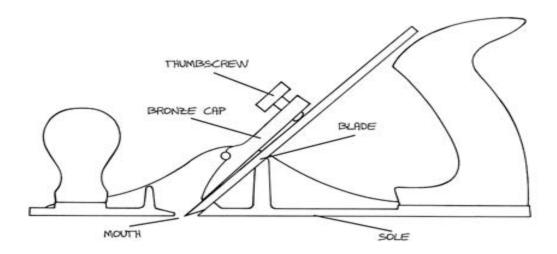

### **DRILLING AND BORING TOOLS:**

a) Bradawl: It is a hand operated tool, used to bore small holes for starting a screw or large nail.

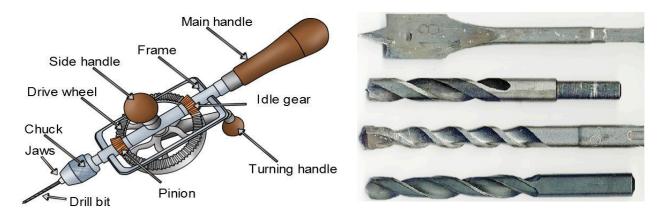

- b) Carpenters brace: it is used for rotating auger bits, twist drills, etc., to produce holes in wood. In some designs, braces are made with ratchet device.
- c) Auger bit: it is the most common tool used for making holes in wood. During drilling, the lead screw of the bit guides into the wood, necessitating only moderate pressure on the brace. The helical flutes on the surface carry the chips to the outer surface.
- d) **Hand drill:** carpenter's brace is used to make relatively large size holes; whereas hand drill is used for drilling small holes. A straight shank drill is used with this tool. It is small, light in weight and may be conveniently used than the brace. The drill bit is clamped in the chuck at its end and is rotated by a handle attached to gear and pinion arrangement.

Gimlet: It has cutting edges like a twist drill. It is used for drilling large diameter holes with the hand pressure.

# **Striking Tools**


### a) Mallet

This is wooden headed hammer of round or rectangular section. The striking face is made flat. Mallet is used for the cutting tools and has wooden handle.

### b) Claw Hammer

This is a hammer having steel head and wooden handle. The flat face of the head and claw portion for extracting nails out of the wood.

c) Pincer: it is made of two forged steel arms with a hinged joint and is used for pulling-out small nails from wood. The inner faces of the pincer jaws are beveled and the outer faces are plain. The end of one arm has a ball and the other has a claw. The

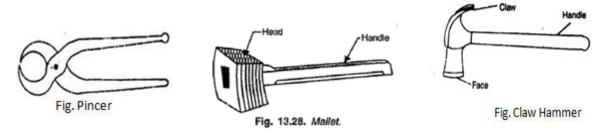

beveled jaws and the claw are used for pulling out small nails, pins and screws from the wood.

**d) Screw Driver:** it is used for driving wood screws into wood or unscrewing them. The length of a screw driver is determined by the length of the blade. As the length of the blade increases, the width and thickness of the tip also increase.

## **T-LAP JOINT**

EXPERIMENT NO: DATE: / / 20

**AIM OF THE EXPERIMENT:** To make a T-lap Joint from the given wood pieces with specified dimensions.

MATERIALS REQUIRED: Kail Wood.

# TOOLS AND EQUIPMENT REQUIRED:

- 1.6" try square
- 2. Steel rule
- 3. Marking Gauge
- 4. Rip Saw
- 5. Tenon Saw
- 6. Mortise chisel
- 7. Firmer chisel
- 8. Iron Jack Planer
- 9. Scriber
- 10. Led Pencil
- 11. Rasp File
- 12. Smooth File
- 13. Carpentry vice
- 14. Iron Hammer

# **Sequence of Operations:**

- 1. Planning
- 2. Measuring
- 3. Marking
- 4. Sawing
- 5. Chiseling
- 6. Filing
- 7. Finishing
- 8. Inspecting

#### **PROCEDURE:**


- 1. The wooden pieces are cut into two halves and both are checked for dimensions.
- 2. One side of pieces is planned with jack plane and checked for straightness.
- 3. An adjacent side is planned and checked for squareness with a try square.
- 4. Marking gauge is set and lines are marked at Specified dimensions to mark the thickness and width according to given figure.
- 5. The surface is planned and excess material is removed to correct size.
- 6. Using tenon saw, the portions to be removed are cut in both the pieces to make grooves as per given dimensions.
- 7. The excess material in part A is chiseled using a proper chisel.
- 8. The excess material in part A in chiseled to match the part B properly with a tight fit.

#### **PRECAUTIONS:**

- 1. Wooden pieces with nails, should never be allowed to remain on floor
- 2. Keep hands free from dirt oil and grease to avoid slip during work
- 3. Do not carry sharp tool in pocket.
- 4. Wear leather shoes all the time during work.
- 5. Apply force only in forward stroke and relieve the force in backward stroke while sawing and filing.
- 6. Never chisels toward any part of the body.
- 7. Use file and hacksaw with properly fitted handle.
- 8. Use only sharp tools. A dull tool requires excessive pressure, causing the tool to slip.
- 9. Filing should be done with proper pressure of hand.
- 10. The perpendicularity of face ends edges is checked carefully by using try square.
- 11. Finishing is given by using only with smooth files.
- 12. Marking is done without parallax error.

**RESULT:** The T-Lap joint is prepared successfully as per given specifications.

# JOB DIAGRAM:

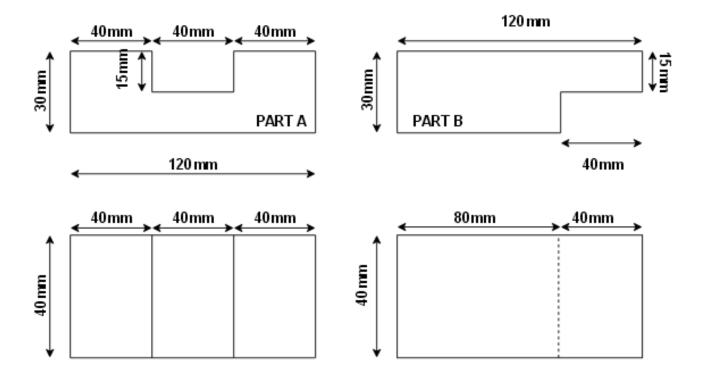

## **DOVE TAIL JOINT**

EXPERIMENT NO: DATE: / /20

**AIM OF THE EXPERIMENT:** To make a Dovetail Joint from the given wood pieces with specified dimensions.

MATERIALS REQUIRED: Kail Wood.

# TOOLS AND EQUIPMENT REQUIRED:

- 1.6" try square
- 2. Steel rule
- 3. Marking Gauge
- 4. Rip Saw
- 5. Tenon Saw
- 6. Mortise chisel
- 7. Firmer chisel
- 8. Iron Jack Planer
- 9. Scriber
- 10. Led Pencil
- 11. Rasp File
- 12. Smooth File
- 13. Carpentry vice
- 14. Iron Hammer

# **Sequence of Operations:**

- 1. Planning
- 2. Measuring
- 3. Marking
- 4. Sawing
- 5. Chiseling
- 6. Filing
- 7. Finishing
- 8. Inspecting

#### **PROCEDURE:**

- 1. The wooden pieces are cut into two halves and both are checked for dimensions.
- 2. One side of pieces is planned with jack plane and checked for straightness.
- 3. An adjacent side is planned and checked for squareness with a try square.
- 4. Marking gauge is set and lines are marked at Specified dimensions to mark the thickness and width according to given figure.
- 5. The surface is planned and excess material is removed to correct size.
- 6. Using tenon saw, the portions to be removed are cut in both the pieces to make grooves as per given dimensions.
- 7. The excess material in part A is chiseled using a proper chisel.
- 8. The excess material in part A in chiseled to match the part B properly with a tight fit.

#### **PRECAUTIONS:**

- 1. Wooden pieces with nails, should never be allowed to remain on floor
- 2. Keep hands free from dirt oil and grease to avoid slip during work
- 3. Do not carry sharp tool in pocket.
- 4. Wear leather shoes all the time during work.
- 5. Apply force only in forward stroke and relieve the force in backward stroke while sawing and filing.
- 6. Never chisels toward any part of the body.
- 7. Use file and hacksaw with properly fitted handle.
- 8. Use only sharp tools. A dull tool requires excessive pressure, causing the tool to slip.
- 9. Filing should be done with proper pressure of hand.
- 10. The perpendicularity of face ends edges is checked carefully by using try square.
- 11. Finishing is given by using only with smooth files.
- 12. Marking is done without parallax error.

**RESULT:** The Dovetail joint is prepared successfully as per given specifications.

# JOB DIAGRAM:

