#### **USER-MANUAL**

# HAZARD-TARGETED TIME-SERIES SIMULATOR (HATSim)

#### 1 Introduction


To assist the structural engineers and designers in obtaining site-specific hazard-targeted ground motion time-series, Graphic-User-Interface (GUI) program developed is by Jawad Fayaz (https://jfayaz.github.io/layouts/codeandsoft.html/) and research team at University of California- Irvine (UCI) and American University of Beirut (AUB). The program is named as "Hazard-Targeted Time-Series Simulator (HATSim)." The program requires minimum inputs from the user to assure ease of usage. Using these modest inputs, HATSim connects to USGS Unified Hazard Tool (UHT) 2008 website to obtain data on hazard curves, and deaggregation of the seismic hazard and the uses the obtained information to simulate n number of ground motions using the DRD site-based simulation model. Among the suggested seismic sources in USGS's deaggregation list for the target site and hazard, n sources (equal to the number of ground motions to be simulated) are randomly selected with replacement and are used to randomize their corresponding near-fault parameters using UCERF2 fault information. The randomized near-fault parameters along with the selected deaggregated source information are then used to simulate the site-specific synthetic ground motions that possess the  $S_{a,haz}(T)$  (RotD50  $S_a$  corresponding to the period of structure (*T*) for the given hazard level) using the algorithm described in Chapter 4 of 'Guidelines for Ground Motion Modeling for Performance-Based Earthquake Engineering of Ordinary Bridges' (Fayaz et. al. 2020).

#### 2 Using HATSim

HATSim is a Windows-based program for PCs with a Graphics-User-Interface (GUI). The program requires a working internet connection and MATLAB-Runtime (9.4)

#### HATSim User Manual

(https://www.mathworks.com/products/compiler/matlab-runtime.html) software installed on the PC. This tool only works with Matlab-Runtime 9.8. To run the program, double click on the executable file "HATSim.exe" (shown in Figure 1); this will open a window as shown in Figure 2. As can be seen from Figure 2, the user is required to assign 11 input values, which are explained briefly in the following section.

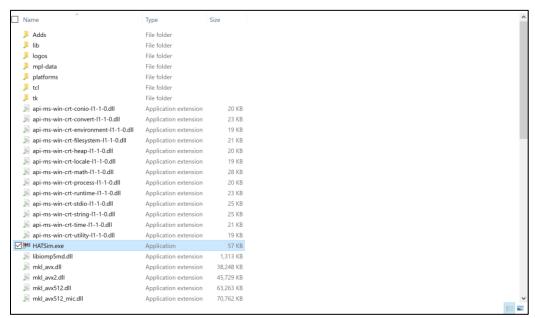

**Figure 1:** Folder containing HATSim program



Figure 2: Start screen of HATSim program

# 2.1 HATSim Inputs

There are ten input values required by the HATSim program. For convenience, the user can click on the Load Sample Values button to populate the associated fields with a sample of the input values. Once all the input values are provided, the user needs to click the Submit button and monitor the progress in the bar available below the inputs. The program connects to USGS UHT (2008) to collect hazard information and then performs the requested simulations. It is important to note that after the inputs are submitted, the user needs to wait until the results are out or an error is raised. User should press the Clear button if they wish to re-use the program. The input values to the program include the following (an example of the inputs is given in Figure 3).

### 1) Region

This describes the region of the United States for which the deaggregation and hazard curves are to be obtained. This is required to obtain the information from the USGS UHT (2008). There are three available options, which include, WUS (Western U.S.), CEUS (Central Eastern U.S.), and COUS. Currently, the tool has only been verified for WUS (Western U.S.), particularly for Southern California.

#### 2) Latitude

This requires the latitude of the site (in degrees) for which the deaggregation and hazard curves are to be obtained, and ground motions need to be generated. The input (along with the site's longitude, next parameter) is required to introduce the site location to USGS UHT through which a shortlist of sources is suggested for simulating ground motions using the DRD model. Currently, the tool has only been verified for WUS (Western U.S.), particularly for Southern California sites.

### *3) Longitude*

This requires the longitude of the site (in degrees) which is used along with the inputted latitude to perform the tasks mentioned above.

#### 4) $V_{s30}$

This is an input to the shear-wave velocity ( $V_{s30}$  in m/s) at top-most 30m of the site. This is required as an input for both obtaining deaggregation and hazard curves at the site, and to simulate the site-based ground motions. Since USGS UHT (2008) contains the data for specific values of  $V_{s30}$ , i.e., 180, 259, 360, 537, 760 and 1150 m/s, only these options are provided to the user, to select their  $V_{s30}$ .

#### *5) Period of the Structure*

This is an input to the first mode period of the structure (T) in seconds. This is required as an input for obtaining deaggregation and hazard curves which are then used to obtain the hazard targeted  $S_a$ . Since USGS UHT (2008) contains data only for the periods of 0 (i.e., PGA level), 0.2, 1.0 and 2.0 sec, the user suggested period is subtracted from the available values, and then the one with an absolute minimum difference is used to conduct seismic hazard deaggregation. The hazard curves are obtained for all the available periods, which are then used to construct the Uniform Design Spectrum for the given hazard level (next input) using Equations 1 to 6 ( $T_L = 8$ ). From the Design Spectrum, the  $S_a$  corresponding to the given period (T),  $S_{a,haz}$ , is obtained.

$$T_0 = 0.2 \left( \frac{S_a(T=1.0)}{S_a(T=0.2)} \right) \tag{1}$$

$$T_{S} = \frac{S_{a}(T=1.0)}{S_{a}(T=0.2)} \tag{2}$$

$$S_a = S_a(T = 0.2) \times \left(0.4 + 0.6\left(\frac{T}{T_0}\right)\right) \quad for \ T < T_0$$
 (3)

$$S_a = S_a(T = 0.2)$$
 for  $T \ge T_0 \& T \le T_s$  (4)

$$S_a = \frac{S_a(T=1.0)}{T} \qquad \qquad for \ T > T_s \ \& \ T \le T_L \ (5)$$

$$S_a = S_a(T = 1.0) \frac{T_L}{T^2}$$
 for  $T > T_L$  (6)

#### 6) Hazard Level

This describes the target hazard level for which the deaggregation is conducted. From the Design Spectrum, the  $S_a$  corresponding to the given period (T),  $S_{a,haz}(T)$ , is obtained which can then be used to simulate ground motions. The user is required to choose one among the 3 options provided for the hazard level: 2% in 50 years (2475 years), 5% in 50 years (975 years), and 10% in 50 years (475 years).

# 7) Required Number of GMs

It requires an integer value suggesting how many ground motions time series are required by the user. The number of ground motions (n) that the user requests, will be generated using the DRD model. If the user's input value is '0' or negative number, then the program will only obtain the data about deaggregation and hazard curves; no ground motion waveforms will be generated.

8) Do you only want the GMs that match the UHS at the specified Period of the Structure?

This is a yes or no input which asks the user whether they want the ground motions to be hazard-targeted (i.e. possess the  $S_{a,haz}(T)$  at the given period of the structure T) or any random simulation of the deaggregated sources. If the user selects the yes option, the ground motions will be generated using the deaggregated event parameters and the randomized near-fault parameters such that the simulated ground motions possess the  $S_{a,haz}(T)$  at the given period of the structure, T. This is done using the algorithm described in Fayaz  $et\ al.\ (2020a)$ . If the user selects the no option, then any random simulation of the ground motions will be generated using the deaggregated event parameters and the randomized near-fault parameters, which may or may not match the  $S_{a,haz}(T)$  at the given period of the structure, T.

#### 9) Sa Tolerance to match UHS


If the user selects the yes for input #8, the ground motions will be simulated such that their  $S_a$  matches the  $S_{a,haz}(T)$  at the given period of the structure, T. However, the two values of  $S_a$  are not exactly same; they are allowed to differ by a tolerance value in units of g (i.e.  $S_{a,haz} - S_a \le S_a$ )  $S_a$  Tolerance to match UHS); this tolerance is only allowed on the positive side. This means that  $S_a$  of the ground motion is by no means allowed to be lower than the  $S_{a,haz}(T)$  at the given period of the structure,  $S_a$ . By default, this value is allotted to be  $S_a$ , which means only those simulated ground motions are selected that possess  $S_a$  between  $S_{a,haz}(T)$  and  $S_{a,haz}(T) + 0.1g$ , at the period of the structure. If the user selects no for input 8, this input becomes inactive and a very large value is allotted to this tolerance.

### 10) Folder containing the Results Output

This is the name of the folder in which the final results will be provided. Since the user may need to use the tool multiple times in the same Windows directory, they can provide a different folder name for the results to be generated. By default, this value is set to be 'RESULTS'.

### 11) Seed No.

This requires a whole number as an input and helps the user with reproducibility. Since the simulation process involves various random processes, this input can be used to recreate the ground motions. This input is concatenated with the input to *Folder containing the Results Output*, and the final results are provided in that folder. By default, this value is set to be as '2', hence a folder named 'RESULTS-2' will be created in the current directory containing all the outputs. Please note since the ground motion generation involves many random process, such as selection of *n* deaggregated sources, simulation of white noise, etc., a value of 10 is added to the inputted *Seed No.* for each process. The final *Seed No.* used to simulate ground motions is provided in the first header line of the .AT2 ground motion time-history file.

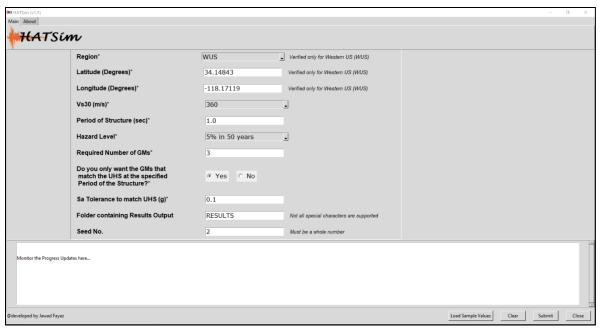

**Figure 3:** Example inputs for HATSim program

# 7.2.2 HATSim Outputs

The output screen of the program is shown in Figure 4a and the output is generated in the Folder containing the Results Output ('RESULTS' folder in this example) as shown in Figure 4b. From Figure 4 it can be observed that the output information provided by the program include the following: Simulated ground motion .AT2 files in the Final GMs folder (Figure 4c), RotD50 spectra .txt files of the simulated ground motions in Spectra folder (Figure 4d), figure of hazard curves Hazard\_Curves.jpeg (Figure 4f), file containing the Design Spectrum, UHS.txt, and the figure of Design Spectrum UHS.jpeg (Figure 4g), figure of Design Spectrum along with the RotD50 Sa spectra of simulated ground motions, UHS\_with\_GMs\_Spectra.jpeg (Figure 4h), and Excel file containing the deaggregation sources and hazard curves of the site, Hazard Output.xlsx. Also, the inputs provided by the user to the program are re-written to the Inputs.txt file (Figure 4e).

Particularly, the n number of ground motion files are saved in the Final GMs folder with the naming convention of GMij. AT2, where i represents the direction of the bi-directional ground motion and j

#### **HATSim** User Manual

represents the number of the ground motion. The value of i can be 1 or 2, representing the two orthogonal directions of ground motions, and j ranges from 1 to n. The .AT2 files contain a four-line header comprehending information about the fault and the source from which the ground motion was generated along with the dt and number of points (npts) of the time-series. The rest of the file contains ground motion acceleration time-history in units of g. Examples of the generated files in the two components of ground motions are shown in Figure 5a and 5b. Furthermore, the output of the deaggregation and hazard curves are provided in the excel file Hazard Output.xlsx. The file contains two sheets named Hazard Curves and Deaggregation. The former contains the hazard curves for all 4 available periods on USGS (which include T = 0, 0.2, 1, and 2 secs) and the later contains information about the deaggregated sources. It is important to note that until now, the deaggregated information only about aFault and bFault types of sources are listed and used for ground motion simulation by the HATSim program. Example of the two sheets of the excel file is provided in Figures 5c and 5d.

#### HATSim User Manual


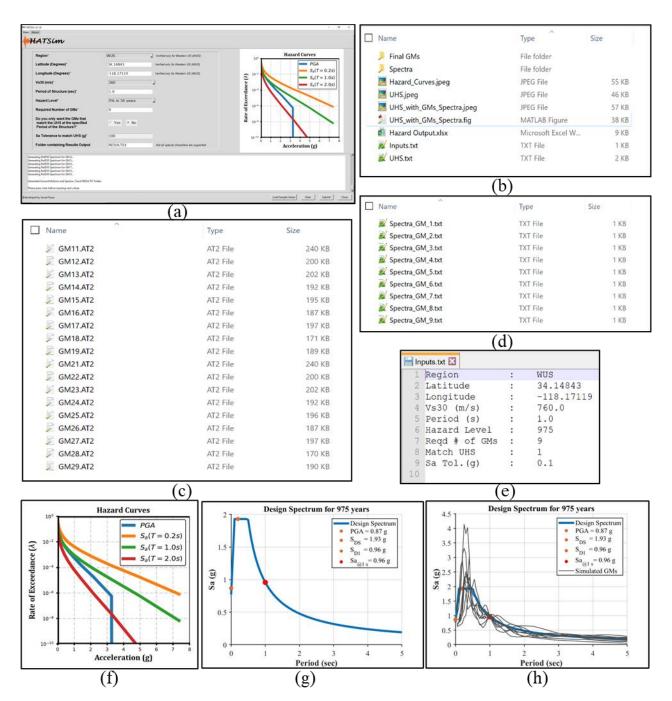


Figure 4: Outputs of the HATSim program

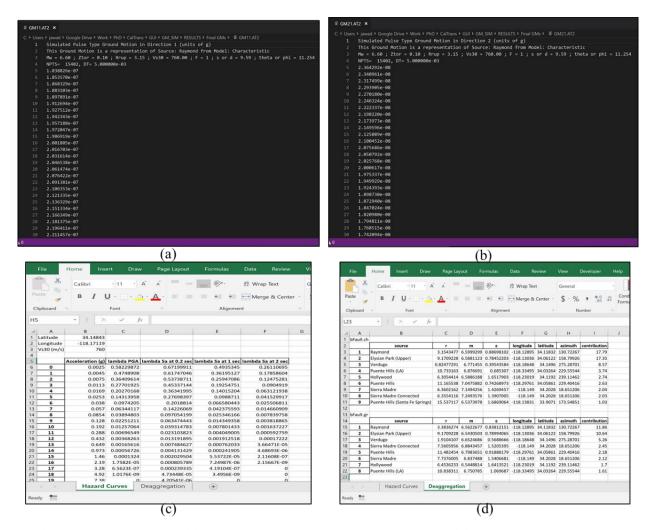

**Figure 5:** Example for (a) GM1 file in direction 1 (GM11.AT2), (b) GM1 file in direction 2 (GM21.AT2), (c) Hazard Curves sheet of excel file (Hazard Output.xlsx), and (d) Deaggregation sheet of excel file (Hazard Output.xlsx)

### References

Jawad Fayaz, Sarah Azar, Mayssa Dabaghi, and Farzin Zareian (2020a). " An Efficient Algorithm to Simulate Hazard-Targeted Site-Based Synthetic Ground Motions", *Earthquake Spectra*.

Jawad Fayaz, Sarah Azar, Mayssa Dabaghi, and Farzin Zareian (2020b). "Guidelines for Ground Motion Modelling for Performance-Based Earthquake Engineering of Ordinary Bridges". *Caltrans Final Report No.* 65A0647

Dabaghi, M., Daoud, Y., Der Kiureghian, A. (2018a). Simulation of near fault ground motions for randomized hypocenter and site locations, *Proceedings of the 11<sup>th</sup> US National Conference on Earthquake Engineering*, July 25-29, 2018, Los Angeles, CA.

HATSIM	Hiser	Manu	al

Dabaghi, M., and Der Kiureghian, A., (2018b). Simulation of orthogonal horizontal components of near-fault ground motion for specified earthquake source and site characteristics, *Earthquake Engineering & Structural Dynamics* 47, 1369–1393.

Rezaeian, S., and Der Kiureghian, A., (2012). Simulation of orthogonal horizontal ground motion components for specified earthquake and site characteristics, *Earthquake Engineering & Structural Dynamics* 41(2), 335-353. doi:10.1002/eqe.1132.