Lab Power Supply Manual

Alex Striff

June 14, 2019

1

1

 $\mathbf{2}$

 2

 2

 $\mathbf{2}$

3

5

5

\mathbf{C}	ont	ents
1	Ack	nowledgments
2	Mot	ivation
3	Safe	ety Notice (Grounding)
4	Usa	ge Instructions
	4.1	Setting the output voltage
	4.2	Setting the current limit
	4.3	Indicator LEDs
	4.4	Monitoring the output current
	4.5	Monitoring the internal temperature
	4.6	Disabling the internal load
	4.7	Calibrating the current limit
	4.8	Calibrating the output error indicator .
5	Pri	nciples of Operation
	5.1	The LT3081 linear regulator
	5.2	The internal load
	5.3	The <i>Hot</i> indicator circuit
	5.4	The $V_{ m out}$ error indicator circuit
6	Pri	nted Circuit Board Layers

would like to thank Edgar Perez for his kind advice, as well as Lucas Illing for supporting this project.

1 2 Motivation

Often when working in electronics, several voltage sources are needed. In addition to a main power rail, one may need a complementary negative power rail for analog circuitry, or a different logic power supply at 3.3 V instead of 5 V. Low-impedance bias voltages are also a frequent requirement, needed for biasing BJTs, comparator inputs, and more.

For most applications, a power supply fulfilling the requirements of these applications need not be capable of supplying much more than 1 A of current, must have a stable voltage output (requiring a linear regulator), and must have a current limiting function. Additionally, it would be nice if the power supply was much smaller than a conventional 30 V, 3 A output bench power supply with a large transformer, being conveniently powered from a common wall plug, batteries, or any other DC power source at hand. I have attempted to construct such a power supply.

List of Tables

1	Electrical Characteristics	4
2	Bill of Materials	8

Colophon

The schematic diagram and printed circuit board layout were both created with KiCAD. This manual was compiled using LATEX. Relatively fine (0.51 mm) leadbased solder and mildly activated rosin flux were required to solder the components to the PCB.

1 Acknowledgments

The creation of this lab power supply was generously funded by the Reed College Physics Department. I

3 Safety Notice (Grounding)

Please note that the negative voltage output of the supply is directly connected to the negative voltage input to the supply. That is, the output voltage of the supply floating relative to earth ground if and only if the input voltage is floating.

If you are uncertain if the supply (or any other piece of equipment) is floating, it is quick and simple to check if this is the case. Set a digital multimeter to its resistance measurement or continuity check mode. Connect one probe to the negative output of the PSU (the black five-way binding post) or to the other terminal in question, and then connect the other probe to earth ground. This can be done either by insertion in to the *earth* socket of a wall outlet, or by touching the outside of a BNC connector on any nearby oscilloscopes, as these are almost always earth grounded. If inserting into a wall outlet, be certain that you know which hole is

which, and that you are using a multimeter approved for wall testing (most are).

If the output is not floating (earth-referenced), then one must be careful to only connect oscilloscope ground leads to the negative output of the supply. Whatever the ground lead is connected to will be shorted to earth ground. If an incorrect connection is made, then connected circuit components, oscilloscopes, or computers (e.g. through USB) may be damaged. If you are uncertain, connect probes as if the circuit is not floating.

If the output is floating (or if you know which terminals are earthed and which are not), then the supply may be safely connected to other voltage sources in whatever configurations are convenient, such as in a dual-rail setup.

4 Usage Instructions

4.1 Setting the output voltage

Connect a voltmeter to the output of the supply. You may use either the binding posts or the test points labeled on the board to achieve this. Turn the PSU on and adjust the voltage using the *coarse* and *fine* adjustment knobs as needed. Note that the maximum output voltage is about 1.5 V below the input voltage.

4.2 Setting the current limit

To set the current limit to its minimum value, *short* the minimum limit jumper (labeled *Min Lim*, JP1). To set the current limit to higher than this value, the jumper must be *open*.

The current limit is set to fixed values by moving the switches on the board. The default values are 1, 2.5, 5, 10, 25, 50, and 100 mA. To set the limit to any of the upper four values, the switch for the lower values must be in its rightmost position, as indicated on the board.

Alternatively, the switch section on the board may not be populated, and a $10\,k\Omega$ (preferably 10-turn) potentiometer (RV4) may be soldered in to provide a continuously variable current limit.

To set the current limit to its maximum value, *open* the no limit jumper (labeled *No Limit*, JP2). To set the current limit to lower than this value, the jumper must be *shorted*. The maximum value is about 2.0 A in normal operation, and less when the device shuts down to prevent overheating.

4.3 Indicator LEDs

The power supply includes two indicator LEDs for when output voltage regulation is not guaranteed.

The *Hot* indicator LED (D2) lights when the main regulation IC (see Section 5.1) starts to get hot (when the junction temperature is about 100 °C or above). This light is a warning, and the output should continue to be regulated as normal. If the IC continues to heat up (to a junction temperature of 125 °C), then internal protection circuitry will prevent damage and reduce the output voltage.

The V_{out} Error (I lim) indicator LED (D1) lights when the actual output voltage is not sufficiently close to the set output voltage. The most common cause for this is if the current limiting function is active, but internal protection circuitry or a set voltage that is too high may also cause an output error.

4.4 Monitoring the output current

If it is not preferred to use an ammeter to measure the output current, the I_{out} test point is provided for convenient measurement or external control of the load current. The signal at I_{out} is one volt for every ampere of output current, *including the internal load* (see Table 1 and Section 5.2). For example, if the supply is outputting 25 mA total, then I_{out} should read 25 mV.

4.5 Monitoring the internal temperature

For more quantitative information about the temperature of the main regulation IC (see Section 5.1) than is provided by the Hot indicator LED, the Temp test point is provided. The signal at Temp is one millivolt for every degree Celsius of junction temperature. For example, if the junction temperature of the IC is about 73 °C (subject to variation inside the IC), then Temp should read 73 mV.

4.6 Disabling the internal load

The internal load may be disabled by *opening* the *Internal Load* jumper. Note that this will increase the current limit by at most 4 mA above the current limit displayed on the switches or that previously set by RV4, if installed. For most purposes, the *Internal Load* jumper should be in its normal, *shorted* position (see Section 5.2).

4.7 Calibrating the current limit

The power supply requires a minimum load in order to regulate the output voltage properly. An internal load usually supplies this minimum load (see Section 5.2), but this offsets the effective current limit on the output.

A trimmer potentiometer is provided to compensate for this offset.

Set the supply to the minimum limit as described in Section 4.2. Using a screwdriver, adjust the potentiometer (labeled *Load Offset*, RV1) until the output voltage is stable (no current limiting), and then carefully reverse direction and adjust until the current limit just starts to activate. This may be judged by checking the output voltage with a voltmeter, or by using the built-in indicator if it is calibrated as described in Section 4.8

4.8 Calibrating the output error indicator

The issues associated with creating a reliable output error indicator are discussed in Section 5.4. If necessary, a trimmer potentiometer (RV5) may be populated to correct the default setting by the resistor R21.

Attach a voltmeter to the PSU and set the output voltage to 1 V. Attach an external potentiometer to the output of the supply, valued to draw a typical current for your application. Set the PSU current limit so that increasing the load current will trigger the limit function. If the 1 V output does not demand enough current, it may be increased, but try to keep it as low as possible (see 5.4 for why). Wait until the temperature of the circuit has stabilized. Error on the side of drawing a slightly lower current than needed, depending on the sensitivity required (see below). Increase the load gradually, and watch the error indicator LED (D1).

If the default indication threshold set by R21 is not sensitive enough for your needs, solder in the 500 k Ω RV5 and try the adjustment procedure below.

If this does not work, or if the default indication did not work at all, solder in RV5 and *remove* R21. This provides a wider range of variation for the indication threshold, at the cost of a coarser adjustment rate.

With the potentiometer RV5 and the default resistor R21 soldered on the board or not depending on your needs, adjust the external load potentiometer until the output is $2-10\,\mathrm{mV}$ below the set voltage. If you intend to use the supply only above about 5 V, the lower the better (you may even be able to remove RV5 and wire a short across R21 for a bit more sensitivity). To complete the calibration, adjust RV5 to the barrier where D1 just barely lights, or perhaps flickers.

Table 1: Electrical characteristics. The \blacklozenge mark indicates specifications which apply over the full operating temperature range. Otherwise, specifications are at (junction) temperatures of 25 °C.

Parameter		Conditions		Min	Тур	Max	Units
Input Voltage	$V_{ m in}$		♦	5.0		32.0	V
Output Voltage	$V_{ m out}$	$I_{\rm load} < I_{\rm lim}$	•	0.0		$V_{ m in} - V_{ m do}$	V
Dropout Voltage	$V_{ m do}$	$I_{\text{load}} = 100 \text{mA}$			1.21		V
		$I_{\rm load} = 1.5{\rm A}$	•		1.23	1.5	V
Internal Current Limit	$I_{ m max}$	$V_{\rm in} = 5 \text{V}, V_{\rm set} = 0 \text{V}, V_{\rm out} = -0.1 \text{V}$	•	1.5	2.0		Α
$I_{ m out}$ Relative Error		$I_{\rm load} = 1.5{\rm A}$		0	6	11	%
$I_{ m out}$ Operating Range			•	$V_{ m out}$ – 40 V		$V_{ m out}$ + 0.4 V	V
Temp Absolute Error		$0^{\circ}\text{C} \le T_J \le 125^{\circ}\text{C}$		-10		10	μA
		$125^{\circ}\text{C} < T_{J} \le 150^{\circ}\text{C}$		-15		15	μA
Ripple Rejection	PSRR	$f = 120 \mathrm{Hz}$		75	90		dB
$V_{\text{ripple}} = 0.5 \text{V}_{\text{pp}}, I_{\text{load}} = 0.1 \text{A},$		$f = 10 \mathrm{kHz}$			75		dB
$V_{\rm in} = V_{\rm out(nom)} + 3 \mathrm{V}$		$f = 1 \mathrm{MHz}$			20		dB
Internal Load	$I_{ m int}$		♦	2	3	4	mA

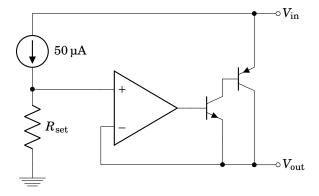


Figure 1: The equivalent voltage regulation circuitry inside the LT3081. The equivalent current regulation circuitry is not depicted here or in the LT3081 datasheet.

5 Principles of Operation

5.1 The LT3081 linear regulator

All of the regulation that the power supply provides is done by the LT3081, a rugged linear regulator IC. The regulation circuitry is depicted in Figure 1. An internal current source of 50 μ A allows the set voltage to be configured with a single resistor $R_{\rm set}$. In the power supply, $R_{\rm set}$ is determined by the two potentiometers RV2 and RV3.

If $V_{\rm out} < V_{\rm set}$, then the error amplifier will increase the base voltage of the NPN transistor until the entire Sziklai pair has $V_{\rm set}$ at its emitter. Similarly, the base voltage will be suitably reduced if $V_{\rm out} > V_{\rm set}$. In this way, the output voltage is regulated by a negative feedback loop.

In practice, it may be difficult to stabilize such a circuit constructed of discrete components against oscillation. Using an integrated circuit solution such as the LT3081 allows us to have matched transistors at close to the same temperature, as well as to take advantage of the work done by previous engineers to make the output voltage stable. We simply add on some additional capacitances (C1 to C4 and C8) to improve noise characteristics, transcient performance, and stability a bit more.

5.2 The internal load

Given the requirement that any circuitry used in the power supply must function consistently over the entire range of $V_{\rm in}$, a simple resistor (as in the LT3081 datasheet) cannot be used as a means of meeting the minimum load requirement of the LT3081. Instead, the LM334 current source (U4) was used. With R23 set to $22\,\Omega$, we expect about $3.1\,\mathrm{mA}$ to be sunk from

the output of the power supply, which is well above the minimum load requirement of the LM3081, over temperature. Since we are manually nulling the offset due to this current, it is allowable to use a common through-hole 5% tolerance resistor for R23, but if your application requires precise current limiting over a wide and changing range of temperatures, a 1% or better tolerance resistor should be used for added thermal stability.

5.3 The Hot indicator circuit

To establish a precise voltage of 100 mV over the entire range of $V_{\rm in}$, corresponding to a junction temperature of 100 °C, a 2.5 V LM4040 voltage reference (U1) and a voltage divider were used. The LM393 comparator (U3B) compares the *Temp* output to this reference temperature, and is configured to pull the open collector output of the comparator low if the Temp output goes above the reference. This connects the indicator LED to ground. A LM317 (U6) configured as a current source supplies a stable current to the LED over the full range of $V_{\rm in}$. Inspection of the circuit shows that errors introduced by resistor tolerances and comparator input offset currents and voltages will result in an absolute error of at most 5 °C. Furthermore, the comparator operates without hysteresis, so the LED may flicker when the actual and reference temperatures coincide. For the purpose of a coarse temperature indication, these undesirable characteristics are inconsequential.

5.4 The V_{out} error indicator circuit

The general configuration of the $V_{\rm out}$ error indicator circuit is similar to that of the Hot indicator circuit, described in Section 5.3. However, the error introduced by that circuit is unacceptable for the purpose of displaying the current status of regulation. Additionally, we *expect* the output voltage to coincide *precisely* (to within a few millivolts) with the set voltage. Without any correction, the LED may reasonably indicate an error indefinitely, or at least flicker, when the output voltage is actually well-regulated.

The standard solution that one may propose is to add hysteresis (in the form of a Schmitt trigger) to the comparator. This will not work. A Schmitt trigger must have an upper trigger threshold that lies *above* the set voltage, but in the course of recovering from current limiting, the output voltage may never overshoot the set voltage. Thus the threshold will never be crossed, and the error indicator may remain on indefinitely. What is needed instead, is a small offset.

If the comparator recieved a set voltage that was, say, 10 mV below V_{set} , then the problem is solved. Hys-

teresis is not even needed, since most all causes for a failure in regulation will not manifest as a steady offset of $10\,\mathrm{mV}$. But how can we create such a small offset over the entire range of V_{out} , especially when the offset is comparable in size to all of the sources of error involved? The main barriers to control that must be addressed include

- Resistor tolerances,
- · Loading of input sources,
- Comparator input offset voltage,
- Comparator input bias current,
- · Comparator input offset current, and
- Noise.

Since the entire point of adding the offset is to allow for errors, we can deal with the comparator input offset voltage and current by lumping in the effect of their worst-case absolute errors with the error in regulation. This increases the minimum offset needed from that due to regulation, but only to about the $10\,\mathrm{mV}$ stated before. However, we cannot increase the offset too much: at an output voltage of $1.00\,\mathrm{V}$, an offset of $10\,\mathrm{mV}$ already represents a $1\,\%$ error in indication. The aim is to keep this level of precision for set voltages from $1.00\,\mathrm{V}$ to $30.0\,\mathrm{V}$.

6 Printed Circuit Board Layers

```
[pages=-,pagecommand=,noautoscale=true,angle=90,addtotoc=1,subsection,2,Front
Copper, fig:psu-F_Cu]../pcb/psu-F_Cu.pdf[pages]
 -, page command
                                                                                                                                                                                                                                            , no autoscale
                                                                                                                                                                                                                               90, add to to c
true, angle
1, subsection, 2, BackCopper, fig: psu-B_Cu]../pcb/psu-B_Cu.pdf[pages =
 -, pagecommand
                                                                                                                                                                                                                                            , no autoscale
true, angle
                                                                                                                                                                                                                               90.addtotoc
1, subsection, 2, FrontSolderMask, fig: psu - F_Mask]./pcb/psu - F_Mask.pdf[pages = 1, subsection, 2, FrontSolderMask, fig: psu - F_Mask]./pcb/psu - F_Mask.pdf[pages = 1, subsection, 2, FrontSolderMask, fig: psu - F_Mask]./pcb/psu - F_Mask.pdf[pages = 1, subsection, 2, FrontSolderMask, fig: psu - F_Mask]./pcb/psu - F_Mask.pdf[pages = 1, subsection, 2, subsection, 2, subsection, 2, subsection, 3, subsection
                                                                                                                                                                                                                                            , no autoscale
 -, pagecommand
true, angle
                                                                                                                                                                                                                               90, addtotoc
1, subsection, 2, BackSolderMask, fig: psu-B_Mask]../pcb/psu-B_Mask.pdf[pages = 1, subsection, 2, subsection, 2, subsection, 2, subsection, 2, subsection, 3, subsection,
 -, pagecommand
                                                                                                                                                                                                                                           , no autoscale
                                                                                                                                                                                                                               90, addtotoc
true, angle
1, subsection, 2, FrontSilkScreen, fig: psu - F_SilkS]../pcb/psu - F_SilkS.pdf[pages = 1, subsection, 2, FrontSilkScreen, fig: psu - F_SilkS]../pcb/psu - F_SilkS.pdf[pages = 1, subsection, 2, FrontSilkScreen, fig: psu - F_SilkS]../pcb/psu - F_SilkS.pdf[pages = 1, subsection, 2, FrontSilkScreen, fig: psu - F_SilkS]../pcb/psu - F_SilkS.pdf[pages = 1, subsection, 2, subsection, 2, subsection, 3, subsection, 3
 -, page command
                                                                                                                                                                                                                                           , no autoscale
                                                                                                                                                                                                                               90, add to to c
true, angle
1, subsection, 2, FrontFabrication, fig: psu - F_Fab]../pcb/psu - F_Fab.pdf[pages =
 -, pagecommand
                                                                                                                                                                                                                                           , no autoscale
true, angle
                                                                                                                                                                                                                               90, addtotoc
1, subsection, 2, PlatedThrough-HoleDrillMap, fig: psu-PTH-drl_map]./pcb/psu-PTH-drl_map.pdf[pages=1] \\
                                                                                                                                                                                                                                           , no autoscale
 -, pagecommand
true, angle
                                                                                                                                                                                                                               90, add to to c
1, subsection, 2, Non-PlatedThrough-HoleDrillMap, fig:psu-NPTH-drl_map]../pcb/psu-NPTH-drl_map.pdf[partial final final
                                                                                                                                                                                                                                            , no autoscale
 -, pagecommand
true, angle
                                                                                                                                                                                                                               90, addtotoc
1, subsection, 2, UserComments, fig: psu-Cmts_User]../pcb/psu-Cmts_User.pdf[pages = 1, subsection, 2, userComments, 3, userComments, 4, userComments, 5, userComm
 -, page command
                                                                                                                                                                                                                                           , no autoscale
true, angle
                                                                                                                                                                                                                               90, add to to c
1, subsection, 2, EdgeCuts(BoardOutline), fig: psu-Edge_Cuts]./pcb/psu-Edge_Cuts.pdf
```

Table 2: Bill of materials with collated items. There are 60 components total.

Item	Qty	Reference(s)	Value	LibPart	Footprint
-	9	C1 C2 C5 C6 C7 C8	011	Device:C. Small	Canacitor THTC Disc D5 0mm W2 5mm P9 50mm
+ 6	0	02, 02, 03, 04, 05	10-	Device: O Small	Capacity of 1900 and 1901 In the capacity of t
7	71	C3, C4	TOR	Device:C_Smail	Capacitor_SMD:C_1200_3216Metric_Faq1.4ZXI./Omm_HandSolder
က	7	D1, D2	LED_RED	Device:LED_ALT	${ m LED_THT:LED_D3.0mm}$
4	Н	$_{ m J1}$	Screw_Terminal_01x02	Connector:Screw_Terminal_01x02	$Termin al Block_MetzConnect: Termin al Block_MetzConnect_Type 094_RT03502 HBLU_1x02_P5.00mm_Horizontal$
5	П	J2	Barrel_Jack	Connector:Barrel_Jack	Connector_BarrelJack:BarrelJack_Horizontal
9	-	J3	Binding posts	Connector_Generic:Conn_01x02	psu-foot:Binding Posts
7	П	JP1	Min Lim	Device:Jumper_NO_Small	Connector PinHeader 2:54mm:PinHeader 1x02_P2:54mm Vertical
80	Н	JP2	No limit	Device:Jumper NO Small	Connector PinHeader 2.54mm:PinHeader 1x02 P2.54mm Vertical
6	П	JP3	Preload	Device:Jumper NO Small	Connector PinHeader 2:54mm:PinHeader 1x02 P2.54mm Vertical
10	2	JP4, JP5	Guard	Device:Jumper NO Small	psn-foot:Guard Jumper
=	_	R1	18.8	Device: R.	Resistor SMD:R 1206 3216Metric Pad1 42x1 75mm HandSolder
12	-	R2	4R7	Device:R	Resistor SMD:R 1206 3216Metric Pad1.42x1.75mm HandSolder
13	-	R3	13R	Device:R	Resistor SMD:R 1206 3216Metric Pad1.42x1.75mm HandSolder
14	Н	R4	27R	Device:R	Resistor SMD:R 1206 3216Metric Pad1.42x1.75mm HandSolder
15	ī	R5	68R	Device:R	Resistor_SMD:R_1206_3216Metric_Pad1.42x1.75mm_HandSolder
16	2	R6, R14	100R	Device:R	Resistor_SMD:R_1206_3216Metric_Pad1.42x1.75mm_HandSolder
17	Н	R7	180R	Device:R	Resistor_SMD:R_1206_3216Metric_Pad1.42x1.75mm_HandSolder
18	4	R8, R10, R11, R12	1R0	Device:R	Resistor_SMD:R_1206_3216Metric_Pad1.42x1.75mm_HandSolder
19	Н	R9	2R2	Device:R	Resistor_SMD:R_1206_3216Metric_Pad1.42x1.75mm_HandSolder
20	Н	R13	39R	Device:R	Resistor_SMD:R_1206_3216Metric_Pad1.42x1.75mm_HandSolder
21	П	R15	4k7	Device:R	Resistor_THT:R_Axial_DIN0207_L6.3mm_D2.5mm_P10.16mm_Horizontal
22	П	R16	390R	Device:R	Resistor_THT:R_Axial_DIN0207_L6.3mm_D2.5mm_P10.16mm_Horizontal
23	П	R17	1k5	Device:R	Resistor_SMD:R_1206_3216Metric_Pad1.42x1.75mm_HandSolder
24	н	R18	1M	Device:R	Resistor_SMD:R_1206_3216Metric_Pad1.42x1.75mm_HandSolder
22	н	R19	24k	Device:R	Resistor_SMD:R_1206_3216Metric_Pad1.42x1.75mm_HandSolder
56	7	R20, R26	1k	Device:R	Resistor_SMD:R_1206_3216Metric_Pad1.42x1.75mm_HandSolder
27	н	R21	150k	Device:R	Resistor_SMD:R_1206_3216Metric_Pad1.42x1.75mm_HandSolder
28	н	R22	1k	Device:R	Resistor_THT:R_Axial_DIN0207_L6.3mm_D2.5mm_P10.16mm_Horizontal
53	Н	R23	22R	Device:R	Resistor_THT:R_Axial_DIN0207_L6.3mm_D2.5mm_P10.16mm_Horizontal
30	7	R24, R25	10k	Device:R	Resistor_SMD:R_1206_3216Metric_Pad1.42x1.75mm_HandSolder
31	7	R27, R28	100R	Device:R	Resistor_THT:R_Axial_DIN0207_L6.3mm_D2.5mm_P10.16mm_Horizontal
32	П	RV1	100R	Device:R_POT_US	psu-foot:Trim_pot_Bourns_TC33X-2-101E
33	н	RV2	500k	Device:R_POT_US	$Potentiometer_THT: Potentiometer_Piher_PC-16_Single_Horizontal$
34	н	RV3	10k	Device:R_POT_US	${ m Potentiometer_THT:Potentiometer_Pher_PC-16_Single_Horizontal}$
35	П	RV4	1k	Device:R_POT_US	$Potentiometer_THT: Potentiometer_Piher_PC-16_Single_Horizontal$
36	П	RV5	500k	Device:R_POT_US	psu-foot:Trim_pot_Bourns_TC33X-2-101E
37	2	SW1, SW2	SW_SP4T	psu-sch:SW_SP4T	psu-foot:SP4T_CK_SK-14D01-G-6
38	П	SW3	Lever toggle	Switch:SW_SPST	psu-foot:SW_SPST_Lever_Rubber
39	-	U1	LM4040DBZ-2.5	Reference_Voltage:LM4040DBZ-2.5	Package_TO_SOT_SMD:SOT-23
40	н.	U2	LT3081	psu-sch:LT3081	Package_SO:HTSSOP-16-1EP_4-4x5mm_P0.65mm_EP3.4x5mm_Mask3x3mm_ThermalVias
41	-	U3	LM393	Comparator:LM393	Package_SO:SOIC-8_3.9x4.9mm_P1.27mm
45	с	U4	LM334M	Reference_Current:LM334M	Package_SO;SOIC-8_3,984.9mm_P1.27mm
40	71	00, 00	LM311L_1092	Kegulator_Linear:LM311L_1092	rackage_10_501_1nt:10-92_mine