# A MODEL-DRIVEN DEVELOPMENT AND VERIFICATION APPROACH FOR MEDICAL DEVICES

by

#### Jakub Jedryszek

B.S., Wroclaw University of Technology, Poland, 2012

B.A., Wroclaw University of Economics, Poland, 2012

#### A THESIS

submitted in partial fulfillment of the requirements for the degree

#### MASTER OF SCIENCE

Department of Computing and Information Sciences College of Engineering

> KANSAS STATE UNIVERSITY Manhattan, Kansas

> > 2014

Approved by:

Major Professor John Hatcliff

## Copyright

Jakub Jedryszek

2014

#### Abstract

Medical devices are safety-critical systems whose failure may put human life in danger. They are becoming more advanced and thus more complex. This leads to bigger and more complicated code-bases that are hard to maintain and verify. Model-driven development provides high-level and abstract description of the system in the form of models that omit details, which are not relevant during the design phase. This allows for certain types of verification and hazard analysis to be performed on the models. These models can then be translated into code. However, errors that do not exist in the models may be introduced during the implementation phase. Automated translation from verified models to code may prevent to some extent.

This thesis proposes approach for model-driven development and verification of medical devices. Models are created in AADL (Architecture Analysis & Design Language), a language for software and hardware architecture modeling. AADL models are translated to SPARK Ada, contract-based programming language, which is suitable for software verification. Generated code base is further extended by developers to implement internals of specific devices. Created programs can be verified using SPARK tools.

A PCA (Patient Controlled Analgesia) pump medical device is used to illustrate the primary artifacts and process steps. The foundation for this work is "Integrated Clinical Environment Patient-Controlled Analgesia Infusion Pump System Requirements" document and AADL Models created by Brian Larson. In addition to proposed model-driven development approach, a PCA pump prototype was created using the BeagleBoard-xM device as a platform. Some components of PCA pump prototype were verified by SPARK tools and Bakar Kiasan.

## Table of Contents

Ta	able (	of Contents	viii
Li	st of	Figures	xii
Li	st of	Tables	xiv
A	ckno	wledgements	xiv
D	edica	ation	xv
1	Intr	roduction	1
	1.1	Motivation	2
	1.2	Technologies	3
	1.3	Goals	3
	1.4	Contribution	4
	1.5	Organization	5
	1.6	Terms and Acronyms	5
2	Bac	ekground	7
	2.1	Integrated Clinical Environment	7
	2.2	Medical Device Coordination Framework	9
	2.3	AADL	10
		2.3.1 OSATE	13
	2.4	BLESS	14

	2.5	SPARK Ada		15
		2.5.1 GNA	$\Gamma$ compiler	20
		2.5.2 GNA	Γ Programming Studio (GPS)	21
		2.5.3 Raver	nscar Tasking Subset	21
	2.6	SPARK Ada	Verification	. 27
		2.6.1 SPAR	K Examiner	29
		2.6.2 SPAR	K Simplifier	. 33
		2.6.3 Zomb	ieScope	. 33
		2.6.4 ViCT	oR	34
		2.6.5 Proof	Checker	34
		2.6.6 SPAR	KSimp Utility	34
		2.6.7 Proof	Obligation Summarizer (POGS)	35
		2.6.8 AUnit	t	35
		2.6.9 Sireur	m Bakar	36
		2.6.10 GNA	Γprove	39
	2.7	AADL/BLES	SS to SPARK Ada code generation	40
		2.7.1 Ocari	na	40
		2.7.2 RAM	SES	40
3	$\mathbf{PC}_{A}$	A Pump		42
	3.1	PCA Pump I	Requirements Document	45
	3.2	PCA Pump	AADL/BLESS Models	48
	3.3	BeagleBoard-	-xM	53
1	A A -	DI/DITESS	to SPARK Ada translation	EE
4		,		55
	4.1	,	SS to SPARK Ada mapping	
		4.1.1 Data	types mapping	56

		4.1.2	AADL ports mapping	66
		4.1.3	Thread to task mapping	69
		4.1.4	Subprograms mapping	69
		4.1.5	Feature groups mapping	70
		4.1.6	AADL package to SPARK Ada package mapping	71
		4.1.7	AADL property set to SPARK Ada package mapping	74
		4.1.8	BLESS mapping	74
	4.2	Port-b	ased communication	76
		4.2.1	Threads communication	76
		4.2.2	Systems communication	84
	4.3	Autom	natic translator	88
5	PC	A pum	p prototype implementation and code generation	90
	5.1	Runni	ng SPARK Ada programs on BeagleBoard-xM	90
		5.1.1	Odometer	92
		5.1.2	Multitasking applications	96
		5.1.3	Controlling PCA pump actuator	101
	5.2	Imple	mentation based on Requirements Document and AADL models	107
	5.3	Code g	generation from AADL/BLESS models	110
6	Ver	ificatio	n	112
	6.1	Verific	ation of implemented prototype	113
	6.2	Monito	oring dosed amount	115
	6.3	Verific	ation of generated code	126
	6.4	AUnit	tests	127
	C F	gnatPl	DOVE	128

7	Summary	135
8	Future work	136
Bi	ibliography	139
A	PCA pump prototype - simple, implemented, working pump	144
В	PCA pump prototype - simple, implemented, working pump	145
$\mathbf{C}$	Simplified PCA pump AADL models	160
D	PCA pump Prototype - translated from simplified AADL models	169
${f E}$	PCA Pump - dose monitor module	<b>19</b> 4

## List of Figures

2.1	ICE Closed Loop Control	8
2.2	MDCF architecture and example app virtual machine (lower right) $\dots \dots$	10
2.3	AADL Application Software Components	11
2.4	AADL model of simple thermometer	12
2.5	Developer responsibility in Ada <sup>1</sup>	16
2.6	Relationship of the Examiner and Proof Tools <sup>2</sup>	28
2.7	Run SPARK Make	31
2.8	Examiner Properties	31
2.9	Bakar Kiasan report	38
3.1	Patient Controlled Analgesia (PCA) pump	42
3.2	Alaris Pump	43
3.3	Standard Process Control Loop	43
3.4	PCA Pump system	44
3.5	Open PCA Pump concept	46
3.6	Open PCA Pump AADL model	49
3.7	BeagleBoard-xM	53
3.8	An example of PWM duty cycles	54
4.1	Example of port communication between threads	77
4.2	Example of two way port communication between threads in different packages	81
4.3	Example of port communication between systems	84

5.1	Edit Project Properties
5.2	Project Main files
6.1	SPARK verification strategy
6.2	Bakar Kiasan verification report
6.3	Bakar Kiasan verification report, second run
6.4	Bakar Kiasan verification report, third run
6.5	Bakar Kiasan verification report, forth run
6.6	Bakar Kiasan verification report, fifth run

## List of Tables

2.1	Fundamental SPARK annotations	18
2.2	Sample SPARK 2005 to 2014 mapping	19
4.1	Base AADL types to SPARK mapping	59
4.2	AADL/BLESS enumeration types to SPARK mapping	63
4.3	AADL types to SPARK mapping: Subtypes	64
4.4	AADL arrays to SPARK Ada mapping	65
4.5	AADL struct to SPARK Ada record mapping	66
4.6	AADL to SPARK ports mapping	67
4.7	AADL threads to SPARK Ada tasks mapping	69
4.8	AADL subprograms to SPARK Ada subprograms mapping	70
4.9	AADL property set to SPARK Ada package mapping	74
4.10	BLESS to SPARK contracts mapping	75
4.11	AADL threads communication to SPARK Ada tasks communication translation $$	78
4.12	AADL threads communication to SPARK Ada tasks communication transla-	
	tion (multiple packages)	79

## Acknowledgments

Say thank you for everybody involved directly and indirectly.

## Dedication

For my family, mentors and all people who inspired me directly or indirectly in things I am doing. I also dedicate this thesis to everyone who have supported me throughout the process.

### Chapter 1

#### Introduction

Software is present in all aspects of our life. From the simple program in alarm clock to iPad, through cars, refrigerators and computers. Furthermore, our lives are getting more and more depended on Software. Usually when we think about Software, we think about Applications for PC or Smart Phone. E.g. Calculator, Word processor or Stock Market application. In this case, rapid development and smooth operation is a key. However, there is also another, very important class of Software: Safety Critical Systems. It comprises software for Airplanes, Medical Devices, Satellites or Rockets.

Software Engineering for Real-Time and Safety-Critical Systems is very different than creating Business applications. In both types of software we want to ensure correctness and security. However, in each of them, to different extent. In case of mentioned Word processor, software assurance is not critical. When it crashes, it can be restarted. In worst case scenario, some part of work might be lost. Airplane software crash may put human life in danger or even cause the death. Thus for Safety-Critical systems, the security and correctness are crucial. Behind these reasons, different Software Design methodology and different properties of programming language and its tools are needed.

The most important part of Safety-Critical Systems Design is hazard analysis. How to avoid unintentional states and how to recover from them. Hazard can cause incident or

accident. Former is an event, which not cause a loss (but undesired), and could lead to accident. Latter cause the loss (and it is also undesired). Hazard analysis can be done manually by human or automatically by software tools. AADL, BLESS and SPARK Ada contains variety of them.

#### 1.1 Motivation

Nowadays, medical devices works rather independently. It leads to many accidents, which could have been avoided by their interoperability. For example some drug (e.g. morphine), which is delivered by Patient-controlled analgesia (PCA) pump after surgery, can cause low oxygen level or even lack of pulse. That can lead to patient's death. PCA pump does not monitor oxygen level, but Oxygen monitoring device does. If these two devices are organized in centralized system, which implements safety interlock mechanism to shutdown the pump when low oxygen level is detected, accident can be avoided.

In order to communicate, devices have to use compatible interfaces and protocols. There is a concept of "Integrated Clinical Environment" (ICE). It is series of standards, which describes medical device integration and interoperability. SAnToS lab created Medical Device Coordination Framework (MDCF), which is prototype implementation of ICE. Standards are captured not only as requirement documents, but also in software and hardware models form. It allows different medical devices, created by different vendors, to be connected and work under supervision of centralized system.

Model-driven development approach proposed in this thesis is a response for need to creating code from models. PCA pump prototype created in this thesis is as an example of Medical Device, which ultimately will work under MDCF.

#### 1.2 Technologies

AADL (Architecture Analysis & Design Language) is modeling language for representing hardware and software. It is used for real-time, safety critical and embedded systems. AADL allows for the description of both software and hardware parts of a system. It is used to describe architecture, but AADL allows to add behavioral extensions through annex languages. BLESS (Behavior Language for Embedded Systems with Software) is AADL annex sub language defining behavior of components. The goal of BLESS is automatically-checked correctness proofs of AADL models of embedded electronic systems with software.

Ada is one of the most popular (along with C/C++) programming language targeted at embedded and real-time systems. SPARK Ada is subset of Ada, designed for the development of safety and security critical systems. It contains subset, which allows to reason about and prove correctness of program and its entities. There are also SPARK tools for software verification.

#### 1.3 Goals

The initial goals, which most of them is accomplished are as follows:

- identify PCA Pump and Infusion pumps properties and internals required for implementation
- SPARK Ada cross-compilation for ARM-device (BeagleBoard-xM)
- implement PCA Pump based on Brian Larson's Requirement Document [LHC13]
- develop AADL/BLESS to SPARK Ada mapping
- mock PCA Pump AADL/BLESS models in SPARK Ada (based on created mapping and implementation)

- implement not generated part (based on implementation) [NOT ACCOMPLISHED REMOVE?]
- create AADL/BLESS to SPARK Ada translator [NOT ACCOMPLISHED RE-MOVE?]
- Use SPARK tool set for software verification:
  - SPARK Examiner
  - SPARK Simplifier
  - Proof Obligation Summarizer (POGS)
  - Bakar Kiasan
  - GNATprove

#### 1.4 Contribution

This thesis demonstrates how AADL/BLESS models can be mapped to SPARK Ada. Additionally it presents current possibilities and limitations of SPARK Ada language, Ravenscar profile and SPARK verification tools. The main contributions of this thesis are as follows:

- Review of PCA Pump Requirements document [LHC13]
- Cross-compilation and testing of SPARK Ada 2005 and 2014 programs on BeagleBoard-xM platform
- Implementation of PCA pump based on Requirements document [LHC13] and AADL/B-LESS models, which validates them
- Analysis of different PCA pump implementation possibilities
- AADL/BLESS to SPARK Ada translation schemes

• Practical demonstration of SPARK 2005 verification tools: its capabilities and limitations

#### 1.5 Organization

The thesis is organized in 8 [fix this: how to count all chapters?] chapters:

- Chapter 1 is the problem description and summary of contribution which has been made.
- Chapter 2 is Background that gives details about ICE, MDCF, Model-Driven Development, AADL, BLESS, SPARK Ada and available tools for such environment.
- Chapter 3 describes Patient-Controlled Analgesia (PCA) pump.
- Chapter 4 presents mappings from AADL/BLESS to SPARK Ada.
- Chapter 5 describes the implementation of PCA Pump Prototype. Faced issues and design decisions made.
- Chapter 6 describes verification of implemented PCA Pump Prototype.
- Chapter 7 summarizes all work which has been done in this thesis.
- Chapter 8 is the future work that can be done on this topic.

#### 1.6 Terms and Acronyms

- AADL Architecture Analysis & Design Language
- BLESS Behavioral Language for Embedded Systems with Software
- ICE Integrated Clinical Environment

- MDCF Medical Device Coordination Framework
- $\bullet$   $\mathbf{PCA}$  Patient-Controlled Analgesia (pump)
- $\bullet~\mathbf{FDA}$  Food and Drug Administration
- **GPS** GNAT Programming Studio
- $\bullet$   $\,$  GCC GNU Compiler Collection
- $\bullet~\mathbf{GUI}$  Graphical user interface
- $\bullet~\mathbf{VC}$  Verification Condition
- **DPC** Dead Path Conjecture
- **POGS** Proof Obligation Summarizer
- ullet VTBI Volume to be infused
- KVO Keep Vein Open

### Chapter 2

### Background

This chapter is a brief introduction of all technologies and tools used in this thesis. There are: AADL modeling language, BLESS (AADL annex language), SPARK Ada programming language and its verification tools. There is also an overview of the context in which this work has been done: Integrated Clinical Environment (ICE) standard and PCA pump (ICE compliant device). This is followed by main topic of the thesis: code generation from AADL and analysis of existing AADL translators (Ocarina, RAMSES).

#### 2.1 Integrated Clinical Environment

Idea of "Integrated Clinical Environment" (ICE) was initiated by Dr. Julian Goldman from Center for Integration of Medicine & Innovative Technology. The main idea is to create environment of medical devices network. It will allow clinician and software system to make decisions based not only on output from one device, but from all of them together. ICE purpose is to solve current issues with medical devices, which usually operate independently. It requires more human attention and control through checking output of every device manually and then making decision. ICE will make it easier, e.g. by introducing alarms, which can not only indicate problem but also interact with other devices and make decision

automatically. E.g. when PCA Pump infuse some drug to patient's vein and Pulse Oximeter detects low oxygen level, ICE can coordinate PCA pump shutdown.

Moreover, ICE comprises components that may be implemented by different vendors. Such components are medical devices and applications to supervise them. Figure 2.1 presents high overview of ICE system. Medical devices (PCA Pump, Respiratory Rate Monitor and Pulse Oximeter) are connected to the system. All of them are monitored and controlled. There is communication between devices and ICE, in order to exchange data between them and Electronic Medical Record (EMR) Database. Informations in EMR comprises drug library, patient's medical records, monitoring logs etc. ICE can make decisions (such as PCA Pump shutdown) based on that informations.

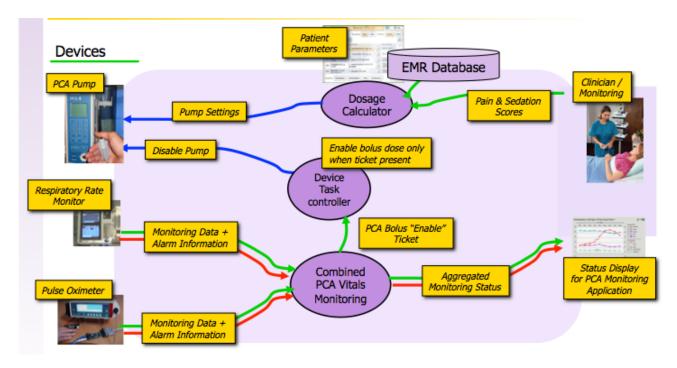


Figure 2.1: ICE Closed Loop Control

[ADD MORE INFORMATION?]

#### 2.2 Medical Device Coordination Framework

Medical Device Coordination Framework (MDCF), jointly developed by SAnToS lab (Kansas State University) and University of Pennsylvania is prototype implementation of ICE. It is an open, experimental platform to bring together academic researchers, industry vendors, and government regulators. Project is response to request from Food and Drug Administration (FDA) to build a prototype of ICE. Medical Devices, which are ICE compliant can be connected to MDCF. The framework enables Medical Devices interoperability. MDCF is designed to illustrate by example the issues related to functional concepts, safety, security, verification and certification.

The goals of MDCF project comprises:

- Open source infrastructure
- Meet performance requirements of realistic clinical scenarios
- Provide middleware with reliability, real-time, security
- Provide an effective app programming model and development environment with integrated verification/validation support and construction of regulatory artifacts
- Support evaluation of device interfacing concepts
- Illustrate how to support real and mock devices
- Illustrate envisioned regulatory oversight and 3rd party certification

In this thesis, part of penultimate point will be illustrated. For now, MDCF use only mock devices, which are Java desktop applications. PCA Pump Prototype aim to be first real-device.

MDCF uses publish-subscribe architecture for communication between components: apps and devices. Figure 2.2 presents MDCF structure. Devices, like PCA pump, are clients.

MDCF Server is integration layer which comprises Core and applications working in top of it. [HLW12].

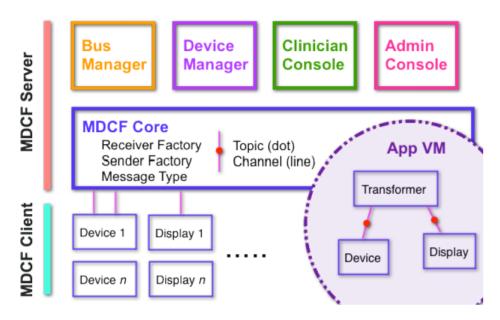


Figure 2.2: MDCF architecture and example app virtual machine (lower right)

[ADD MORE INFORMATION?]

#### 2.3 AADL

AADL stands for Architecture Analysis & Design Language. It is used to model embedded and real-time systems. AADL allows for the description of both software and hardware parts of a system. It can be used not only for design phase of software development process, but also for analysis, verification or code generation.

AADL has its roots in DARPA<sup>1</sup> funded research. The first version (1.0) was approved in 2004 under technical leadership of Peter Feiler<sup>2</sup>. AADL is develop by SAE AADL committee<sup>3</sup>. AADL version 2.0 was published in January 2009. The most recent version (2.1)

<sup>&</sup>lt;sup>1</sup>http://www.darpa.mil

<sup>&</sup>lt;sup>2</sup>http://wiki.sei.cmu.edu/aadl/index.php/The\_Story\_of\_AADL/

<sup>&</sup>lt;sup>3</sup>https://wiki.sei.cmu.edu/aadl/index.php/Main Page

was published in September 2012<sup>4</sup>.

AADL is a language for Model-Based Engineering [FG13]. It can be represented in textual and graphical form. There are tools, like OSATE (see section 2.3.1), which transforms textual representation into graphical or XML.

AADL contains entities for modeling software and hardware components. It allows to create interactions and dependencies between them.

AADL Execution Platform Components and Devices:

- Processor / Virtual Processor Provides thread scheduling and execution services
- Memory provides storage for data and source code
- Bus / Virtual Bus provides physical/logical connectivity between execution platform components
- Device interface to external environment

Application Software Components of AADL (figure 2.3):

- System hierarchical organization of components
- Process protected address space
- Thread group logical organization of threads
- Thread a schedulable unit of concurrent execution
- Data potentially sharable data
- Subprogram callable unit of sequential code

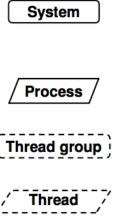






Figure 2.3: AADL Application Software Components

<sup>&</sup>lt;sup>4</sup>https://wiki.sei.cmu.edu/aadl/index.php/Standardization

An example AADL model is shown in graphical representation, in the figure 2.4. Its textual representation is presented in listing 2.3.

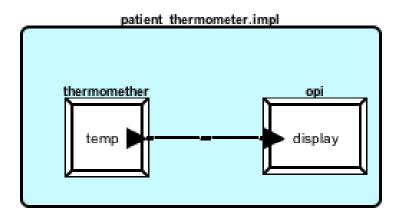


Figure 2.4: AADL model of simple thermometer

```
package Thermometer
public
with Base_Types;
  {\bf system\ patient\_thermometer}
  end patient_thermometer;
  system implementation patient_thermometer.impl
  subcomponents
    thermomether : device thermometer_device.impl;
    opi : device operator_interface.impl;
  {\bf connections}
    tdn : port thermomether.temp -> opi.display;
  end \ {\tt patient\_thermometer.impl;}
  device operator_interface
  features
    display : in data port Base_Types::Integer;
  end operator_interface;
  device implementation operator_interface.impl
  end\ {\tt operator\_interface.impl;}
  {f device} thermometer_device
  features
    temp : out data port Base_Types::Integer;
  end\ {\tt thermometer\_device;}
  device implementation thermometer_device.impl
  end thermometer_device.impl;
end Thermometer;
```

**Listing 2.1**: AADL model of simple thermometer

Recently AADL becomes a new market standard. There are lots of tools for AADL models analysis, such as: OSATE (see section 2.3.1, STOOD<sup>5</sup>, ADELE<sup>6</sup>, Cheddar<sup>7</sup>, AADLInspector<sup>8</sup> or Ocarina<sup>9</sup>.

What is important, AADL is for architectural description. It should not be compared with UML suites, which allows to link with source code.

AADL can be extended with the following methods:

- user-defined properties: user can extend the set of applicable properties and add their own to specify their own requirements
- language annexes (the core language is enhanced by annex languages that enrich the architecture description. For now, the following annexes have been defined):
  - Behavior annex: add components behavior with state machines (e.g. BLESS)
  - Error-model annex: specifies fault and propagation concerns
  - ARINC653 annex: defines modelling patterns for modelling avionics system
  - Data-Model annex: describes the modelling of specific data constraint with AADL

More details about AADL can be found in Peter Feiler's book "Model-Based Engineering with AADL" [FG13].

#### 2.3.1 OSATE

Open Source AADL Tool Environment (OSATE) is a set of plug-ins on top of the open-source Eclipse platform. It provides a tool set for front-end processing of AADL models. OSATE

<sup>&</sup>lt;sup>5</sup>http://www.ellidiss.com/products/stood

<sup>&</sup>lt;sup>6</sup>https://wiki.sei.cmu.edu/aadl/index.php/Adele

<sup>&</sup>lt;sup>7</sup>http://beru.univ-brest.fr/ singhoff/cheddar

<sup>&</sup>lt;sup>8</sup>http://www.ellidiss.com/products/aadl-inspector

<sup>&</sup>lt;sup>9</sup>http://www.openaadl.org

is developed mainly by SEI (Software Engineering Institute - Carnegie Mellon University)<sup>10</sup>. Latest available version of OSATE in the time when this work was published is OSATE2<sup>11</sup>.

OSATE relies on EMF, UML2 and Xtext<sup>12</sup>. It comprises e.g. AADL project wizard, AADL Navigator and AADL syntax analyzer. OSATE enables conversion of AADL in textual representation into graphical. There are also plug-ins for OSATE, like BLESS<sup>13</sup> or OCARINA<sup>14</sup>.

#### 2.4 BLESS

BLESS (Behavior Language for Embedded Systems with Software) is AADL annex sublanguage defining behavior of components. The goal of BLESS is automatically-checked correctness proofs of AADL models of embedded electronic systems with software.

BLESS contains three AADL annex sub-languages:

- Assertion it can be attached individually to AADL features (e.g. ports)
- subBLESS can be attached only to subprograms; it has only value transformations and Assertions without time expressions
- BLESS it can be attached to AADL thread, device or system components; it contains states, transitions, timeouts, actions, events and Assertions with time expressions

BLESS annex subclauses can be added to AADL models transparently to other uses of the system architecture. It includes a verification-condition (VC) generation framework and an accompanying proof tool that enables engineers to prove VCs via proof scripts build from system axioms and rules from a user-customizable rule library. [LCH13]

 $<sup>^{10} \</sup>rm http://www.aadl.info/aadl/currentsite/tool/osate.html$ 

<sup>&</sup>lt;sup>11</sup>https://wiki.sei.cmu.edu/aadl/index.php/Osate\_2

<sup>&</sup>lt;sup>12</sup>http://www.eclipse.org/Xtext/

<sup>&</sup>lt;sup>13</sup>http://bless.santoslab.org/node/5

<sup>&</sup>lt;sup>14</sup>http://libre.adacore.com/tools/ocarina/

The BLESS tool framework is implemented as a publicly available open source plug-in for OSATE (mentioned in section 2.3.1). It includes an editor for BLESS specifications and an environment operating the BLESS proof engine. [LCH13]

Some BLESS constructs can be translated into SPARK contracts, which is part of this thesis. Additionally, BLESS allows to model behavior of components.

[MORE DETAILS? EXAMPLES?]

#### 2.5 SPARK Ada

First version of Ada programming language - Ada 83 - was designed to meet the US Department of Defense Requirements formalized in "Steelman" document <sup>15</sup>. Since that time, Ada evolved. There were Ada 95, Ada 2005 and Ada 2012 (released in December 10, 2012) <sup>16</sup>. Ada is actively used in many Real-World projects <sup>17</sup>, e.g. Aviation (Boeing <sup>18</sup>), Railway Transportation, Commercial Rockets, Satellites and even Banking. One of the main goals of Ada is to ensure software correctness and safety. Due to this requirements, Ada minimize developer responsibility in comparison to other programming languages (see figure 2.5). It is achieved not only by language capabilities, but also by tools for verification.

SPARK is a programming language and static verification technology designed specifically for the development of high integrity software. It is a "safe" subset of Ada designed to be susceptible to formal methods, accompanied with a set of approaches and tools. SPARK 2005 does not include constructs such as pointers, dynamic memory allocation or recursion [IEC+06]. Using SPARK, a developer takes a Z specification and performs a stepwise refinement from the specification to SPARK code. For each refinement step a tool is used to

<sup>&</sup>lt;sup>15</sup>http://www.adahome.com/History/Steelman/steelman.htm

<sup>&</sup>lt;sup>16</sup>http://www.ada2012.org

<sup>&</sup>lt;sup>17</sup>http://www.seas.gwu.edu/ mfeldman/ada-project-summary.html

<sup>&</sup>lt;sup>18</sup>http://archive.adaic.com/projects/atwork/boeing.html

<sup>&</sup>lt;sup>19</sup>http://www.slideshare.net/AdaCore/ada-2012

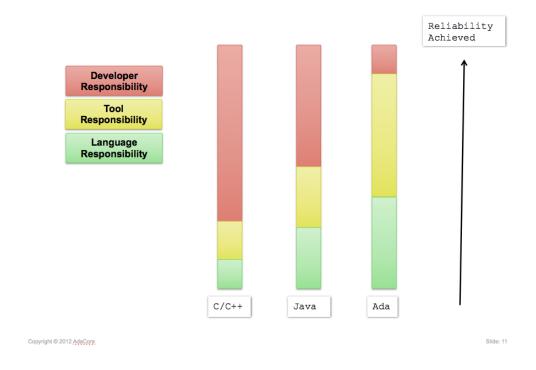


Figure 2.5: Developer responsibility in  $Ada^{19}$ .

produce verification conditions (VC's), which are mathematical theorems. If the VC's can be proved then the refinement step will be known to be valid. However if the VC's cannot be proved then the refinement step may be erroneous<sup>20</sup>. Sample Verification Condition contains checks for:

- array index out of range
- type range violation
- division by zero
- numerical overflow

[Add more examples where SPARK is used?]

SPARK provides a significant degree of automation in proving exception freedom [IEC<sup>+</sup>06]. Some Ada constructs are excluded from SPARK to make static analysis feasible [IEC<sup>+</sup>06].

<sup>&</sup>lt;sup>20</sup>http://www.dwheeler.com/lovelace/s17s4.htm

Additionally SPARK contains tool-set for software verification (see section 2.6). In real-world applications, the embedded critical components are written in SPARK while the non-critical components are written in Ada.

First version of SPARK was based on Ada 83. The second version (SPARK 95) - on Ada 95. SPARK 2005 is based on Ada 2005. It is a subset of Ada 2005 with annotations. The annotation language support flow analysis and formal verification. Annotations are encoded in Ada comments (via the prefix --#). It makes every SPARK 2005 program, valid Ada 2005 program. SPARK annotations contains code contracts, which are analyzed by verification tools, but ignored by Ada compiler.

Listing 2.5 presents simple procedure with code contracts. It increments variable given as parameter by 1. The derives clause specify variable dependency. It future value depends on its current value. There is precondition saying that the value has to be lower than maximum value of Integer type. There is also post condition, which states that the value of variable (given as parameter) after the procedure execution has to be equal to its previous value incremented by 1 ('~' attached to variable means value of this variable, before procedure execution).

```
procedure Increment (X : in out Integer);
--# derives X from X;
--# pre X < Integer'Last;
--# post X = X~ + 1;</pre>
```

**Listing 2.2**: Sample SPARK procedure with code contracts

SPARK 2014<sup>21</sup> (based on Ada 2012) is under development. There is partial tool support (in GNAT Programming Studio), but some language features are still not supported. It is worth to mention, that Ada 2012 contains code contracts (which was inspired by previous versions of SPARK). Thus SPARK 2014 is just a subset of Ada 2012. [DEL+14] It contains all features of Ada 2012 except:

<sup>&</sup>lt;sup>21</sup>http://www.spark-2014.org

- Access types (pointers)
- Exceptions
- Aliasing between variables
- Concurrency features of Ada (Tasking) it's part of SPARK 2014 road-map to include support for tasking in the future, although likely not this year
- Side effects in expressions and functions

Table 2.1 presents fundamental SPARK 2005 annotations and their equivalents in SPARK 2014 and Ada 2012.

Table 2.1: Fundamental SPARK annotations

SPARK 2005	SPARK 2014	Description
# global	Global	list of used global variables within subprogram
# derives	Depends	describe dependencies between variables
# own	Abstract_State	declare variables defined in package body
# initializes	initializes	indicates variables, which are initialized
# inherit	not needed	allows to access entities of other packages
# pre	Pre	pre condition
		Continued on next page

Table 2.1 – continued from previous page

SPARK 2005	SPARK 2014	Description
# post	Post	post condition
# assert	Assert	assertion

Sample mapping from SPARK 2005 to 2014 is shown in the table 2.2. Complete mapping can be found in SPARK 2014 documentation<sup>22</sup> [AL14a].

Table 2.2: Sample SPARK 2005 to 2014 mapping.

SPARK 2005	SPARK 2014
# global in out X, Y;	with Global => (In_Out => (X, Y));
# derives X from Y &# Y from X;	Depends => (X => Y,
# pre Y /= 0 and # X > Integer'First;	<pre>with Pre =&gt; Y /= 0 and     X &gt; Integer'First;</pre>
# post X = Y~ and Y = X~;	with Post => (X = Y'Old and Y = X'Old);

The previous example (listing 2.5) translated to SPARK 2014 is shown in figure 2.5.

```
procedure Increment (X : in out Integer)
with Depends => (X => X),
   Pre => (X < Integer'Last),
   Post => (X = X'Old + 1);
```

 $<sup>^{22}</sup> http://docs.adacore.com/spark2014-docs/html/lrm/mapping-spec.html$ 

#### Listing 2.3: Sample SPARK 2014 procedure and Code Contracts

It is possible to mix SPARK 2014 with Ada 2012. However, only the part which is SPARK 2014 compliant will be verified. As mentioned before, usually SPARK is used in the most critical parts of Software Systems [Cha00]. It means, that some part is written in e.g. Ada or C++ and the rest in SPARK. The reason of that is the SPARK limitation and lack of necessity to verify some not safety-critical modules. SPARK 2014 does not contains Examiner like SPARK 2005. Instead, proofs are made by gnatPROVE (see section 6.5).

The most popular IDE for SPARK Ada is GNAT Programming Studio<sup>23</sup> (see section 2.5.2). There is also Ada plug-in for Eclipse - GNATbench<sup>24</sup> created by AdaCore.

#### 2.5.1 GNAT compiler

GNAT compiler is Ada compiler created by AdaCore<sup>25</sup>. It is part of GNU Compiler Collection (GCC). The GNU Compiler Collection includes front ends for C, C++, Objective-C, Fortran, Java, Ada, and Go. It is one of the most popular compiler systems. It is included in all Linux distributions. GNU is open source, published on GNU General Public License. GCC is divided into front end and back end. It allows to create new front end for some language and reuse existing back end.

GNAT supports Ada 2012, Ada 2005, Ada 95 and Ada 83. The front-end and run-time are written in Ada. To make compilation easier, GNAT provides gnatmake tool. It takes as an argument project file (.gpr) or main program file (file, which contains main procedure) and builds entire program automatically. gnatmake invokes GCC to perform the actual compilation. It check all dependencies contained in .ali files. Each invocation of GCC produce object file (.o) and Ada Library Information file (.ali). Once compilation is done, gnatmake invokes gnatbind

<sup>&</sup>lt;sup>23</sup>http://libre.adacore.com/tools/gps

<sup>&</sup>lt;sup>24</sup>https://www.adacore.com/gnatpro/toolsuite/gnatbench/

<sup>&</sup>lt;sup>25</sup>http://www.adacore.com

tool to check consistency and generate a main program. Then gnatlink performs linking using binding output and all object files.

GNAT compiler is available for all most popular platforms: Windows, Linux and MacOS. AdaCore, released also GNAT cross-compiler for ARM devices. However, for now, the compilation has to be done on 32-bit Linux platform.

#### 2.5.2 GNAT Programming Studio (GPS)

GNAT Programming Studio (GPS) is Integrated development environment for SPARK Ada. It allows to easily manage and compile SPARK Ada projects using .gpr file. GPS includes set of verification tools. More precisely GUI for setting up their options, running them and analyze results. Additionally, it enables to create plug-ins using Python and PyGTK<sup>26</sup>. Sireum Bakar (developed by SAnToS lab) is GPS plug-in written in Python and PyGTK. The same with other plug-ins created by AdaCore like SPARK Examiner or GNATprove.

There are two versions of GPS: free (GPL) and commercial (Pro). There are version for all most popular platforms: Windows, Linux and MacOS.

#### 2.5.3 Ravenscar Tasking Subset

The Ravenscar Profile provides a subset of the tasking facilities of Ada95 and Ada 2005 suitable for the construction of high-integrity concurrent programs [Tea12]. RavenSPARK is SPARK subset of the Ravenscar Profile. The Ravenscar Profile is a subset of the tasking model, restricted to meet the real-time community requirements for determinism, schedulability analysis and memory-boundedness, as well as being suitable for mapping to a small and efficient run-time system that supports task synchronization and communication, and which could be certifiable to the highest integrity levels. The concurrency model promoted by the Ravenscar Profile is consistent with the use of tools that allow the static properties of

<sup>&</sup>lt;sup>26</sup>http://docs.adacore.com/gps-docs/users guide/ build/html/extending.html

programs to be verified. Potential verification techniques include information flow analysis, schedulability analysis, execution-order analysis and model checking. These techniques allow analysis of a system to be performed throughout its development life cycle, thus avoiding the common problem of finding only during system integration and testing that the design fails to meet its non-functional requirements. [AB04]

Ravenscar profile is available in SPARK 2005, but not yet in SPARK 2014<sup>27</sup> [AL14a]. Default profile (sequential) does not enable tasking. In other words, SPARK tools cannot analyze and reason about concurrent programs if Ravenscar profile flag is not provided.

To create a task, the task type has to be declared and task variable of this type. Ravenscar does not allows dynamic task creation. Thus, all tasks have to exists for the full lifetime of the program. [AW01] Tasks can be declared only in packages. Not in subprograms or in other tasks. [Bar13] The priority of each tasks has to be specified by pragma Priority. The range of available priority values is specified in the system package. The default range is 1 to 63. Listing 2.5.3 shows sample package with two tasks.

```
package Some_Pkg
--# own task t1 : Task1;
--# task t2 : Task2;
is
  task type Task1
  is
    pragma Priority(10);
  end Task1;

  task type Task2
  is
    pragma Priority(9);
  end Task2;
end Some_Pkg;
```

Listing 2.4: Sample tasks

Declared tasks have to be implemented in the package body (listing 2.5.3).

```
package body Some_Pkg
is
  t1 : Task1;
  t2 : Task2;
```

<sup>&</sup>lt;sup>27</sup>http://docs.adacore.com/spark2014-docs/html/lrm/tasks-and-synchronization.html

```
task body Task1
is
begin
loop
    -- implementation;
end loop;
end Task1;

task body Task2
is
begin
loop
    -- implementation;
end loop;
end Task2;
end Some_Pkg;
```

Listing 2.5: Sample tasks body

There are two ways to access variable in different tasks:

- It has to be protected object
- It has to be atomic type

Protected object encapsulate variable, in such a way that it is accessible, only through protected subprograms. This mechanism use locking, to ensure atomicity. Protected type declaration is similar to task: specification and body has to be defined. Listing 2.5.3 shows sample tasks with protected type Integer\_Store, which enable to share Integer variable between tasks. What is important, protected type has to be declared before tasks, which will use it. Otherwise, it will be not visible for them.

```
TheStoredData : Integer := 0;
end Integer_Store;

task type Task1
    --# global out Shared_Var;
is
    pragma Priority(10);
end Task1;

task type Task2
    --# global in Shared_Var;
is
    pragma Priority(9);
end Task2;
end Some_Pkg;
```

Listing 2.6: Sample tasks with protected object

Protected type body also has to be defined in package body (listing 2.5.3).

```
package body Some_Pkg
   Shared_Var : Integer_Store;
   t1 : Task1;
   t2 : Task2;
   protected body Integer_Store is
       function Get return Integer
        --# global in TheStoredData;
       is
       begin
           return TheStoredData;
       end Get;
       procedure Put(X : in Integer)
       --# global out TheStoredData;
       --# derives TheStoredData from X;
       is
       begin
           TheStoredData := X;
       end Put;
   end Integer_Store;
   task body Task1
   is
   begin
           Shared_Var.Put(5);
       end loop;
   end Task1;
   task body Task2
       Local_Var : Integer;
   begin
           Local_Var := Shared_Var.Get;
       end loop;
   end Task2;
end Some_Pkg;
```

Listing 2.7: Sample tasks with protected object body

Task1 is writing to shared\_var and Task2 is reading shared\_var. The highest priority is assigned to protected object, to ensure atomicity during operations on it. The lowest priority is assigned to Task2, which is reading shared\_var. Reading is usually less expensive operation than writing. Thus, to avoid starvation, Task1 has higher priority than Task2. Notice, that shared\_var is declared in package body, but refined in package specification.

Protected variables may not be used in proof contexts. Thus, if we try to use protected variable in proofs (pre- or postcondition), then SPARK Examiner returns following error: Semantic Error 940 - Variable is a protected own variable. Protected variables may not be used in proof contexts. Formal reasoning about interactions and especially temporal properties require other techniques such as model checking and lie outside the scope of SPARK [Bar13]. To preserve opportunity to use pre- and postconditions, atomic types have to be used.

To declare atomic type, pragma Atomic has to be used. However, there is restriction, that pragma Atomic cannot be applied to predefined type such as Integer. Thus, custom type has to be defined. It can be just rename of Integer. Then pragma Atomic can be applied on this type. Listing 2.5.3 presents previous example with atomic types instead of protected objects.

```
package Some_Pkg
-- # own Shared_Var;
       task t1 : Task1;
--#
--#
        task t2 : Task2;
--# initializes Shared_Var;
    type Int32 is new Integer;
    task type Task1
      --# global out Shared_Var;
        pragma Priority(10);
   end Task1;
    task type Task2
      --# global in Shared_Var;
       pragma Priority(9);
    end Task2;
end Some_Pkg;
```

```
package body Some_Pkg
   Shared_Var : Int32 := 0;
   t1 : Task1;
   t2: Task2;
   task body Task1
   is
   begin
        loop
            Shared_Var := 5;
        end loop;
   end Task1;
   task body Task2
        Local_Var : Integer;
   begin
           Local_Var := Integer(Shared_Var);
        end loop;
   end Task2;
end Some_Pkg;
```

Listing 2.8: Sample tasks with atomic type

It is important to mention, that pragma Atomic does not guaranty atomicity. In most cases, atomic types should not be used for tasking. Instead, protected types should be used. When an object is declared as atomic, it just means that it will be read from or written to memory atomically. The compiler will not generate atomic instructions or memory barriers when accessing to that object. pragma Atomic force compiler only to:

- check if architecture guarantees atomic memory loads and stores,
- disallow some compiler optimizations, like reordering or suppressing redundant accesses to the object

Another important thing in tasking is Time library: Ada.Real\_Time. It allows to run task periodically, using delay until statement, which suspends task until specified time. To use delay in the task, it has to be declared in declare annotation: --# declare delay; [Bar13].

Details about tasking in SPARK are well described in Chapter 8 of [Bar13]. The "Guide for the use of the Ada Ravenscar profile in high integrity systems" [AB04] and the official

Ravenscar Profile documentation (which includes examples) [Tea12] is another good source. The limitations of Tasking in SPARK are reviewed in Audsley's and Welllings' paper [AW01].

## 2.6 SPARK Ada Verification

The goal of software verification is to assure software correctness and lack of errors. There are two types of verification:

- dynamic performed during the execution of software, e.g. unit tests
- static achieved by formal methods, mathematical calculations and logical evaluations

Dynamic verification starts with a set of possible test cases, simulates the system on each input, and observes the behavior. In general, it does not cover all possible executions. On the other hand, static verification establishes correctness for all possible execution sequences. Static and dynamic verification can be mixed, e.g. by generating test cases with static verification tools and then proving correctness with unit tests during runtime [DRH07].

Techniques for Static Verification:

- Formal verification: prove mathematically that the program is correct this can be difficult for large programs.
- Correctness by construction: follow a well- defined methodology for constructing programs.
- Model checking: enumerate all possible executions and states, and check each state for correctness.

SPARK consists of a verification tool-set:

• SPARKMake - generates index file (.idx) and meta file (.smf)

<sup>&</sup>lt;sup>28</sup>http://docs.adacore.com/sparkdocsdocs/Examiner UM.htm

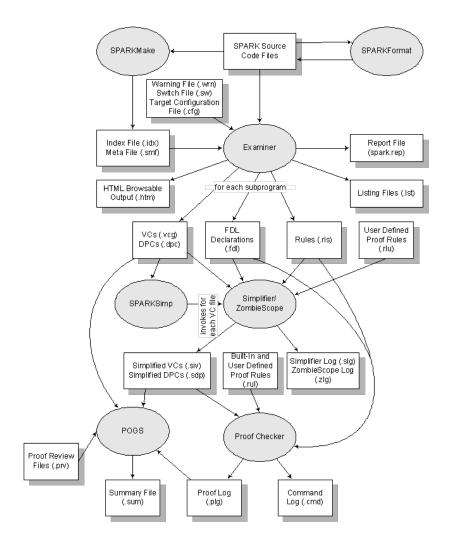


Figure 2.6: Relationship of the Examiner and Proof Tools<sup>28</sup>.

- Examiner check syntax, generates Verification Conditions (VCs) and Dead Path Conjectures (DPCs), and discharge (prove) them
- Simplifier simplify and discharge VCs, which are not discharged by Examiner
- ZombieScope find dead paths
- ViCToR translate VCs and DPCs to format acceptable by SMT solver and prove correctness using specified SMT solver
- SPARKSimp runs Simplifier or/and ZombieScope

- POGS produces verification report
- Proof Checker discharge VCs or DPCs not discharged by Examiner and Simplifier

Relationships between tools and verification flow is presented on figure 2.6. SPARK proof tools use FDL as the modeling language.

## 2.6.1 SPARK Examiner

The main SPARK verification tool is Examiner. It supports several levels of analysis:

- checking of SPARK language syntactic and static semantic rules
- data flow analysis
- data and information flow analysis
- formal program verification via generation of verification conditions
- proof of absence of run-time errors
- dead path analysis

There is also an option to make the Examiner perform syntax checks only. Using this option on a source file does not require access to any other units on which the file depends, so files can be syntax checked on an individual basis. This allows any syntax errors to be corrected before the file is included in a complex examination. This option must only be used as a pre-processor: the absence of syntax errors does NOT indicate that the source text is a legal SPARK program. [Teal1b] [THIS PART IS COPY AND PASTE FROM Examiner doc - is it ok?]

[Put here some examples? E.g.: method without contract, examine, add specification, pass Examiner.]

Examiner can perform data and information analysis of Ravenscar programs in exactly the same manner as for sequential programs [Tea12]. Unfortunately it does not allow protected objects in proof annotations (pre- and post-conditions) as mentioned in section 2.5.3.

When some parts of the system are written in full Ada (with non-valid SPARK constructs), then Examiner returns error. Ada parts can be excluded from Examiner analysis using --# hide annotation. Then, only a warning is returned by Examiner: 10 - The body of subprogram Main is hidden - hidden text is ignored by the Examiner.

Examiner use SPARK index file (.idx) - generated by sparkmake tool - to locate files necessary for verification. [Bar13]

Examiner can be used with spark command and appropriate flags described in Examiner Manual [Teal1b].

To use Examiner in GNAT Programming Studio:

- Run SPARK Make: right click on project / SPARK / SPARK Make (figure 2.7)
- Set SPARK index file (to spark.idx generated by SPARKMake) (figure 2.8)
- (optionally) set configuration file (e.g. Standard.ads)
- Choose appropriate version of SPARK (95 or 2005)
- Choose mode: Sequential (for single tasking programs) or Ravenscar (for multitasking programs)

To generate verification conditions (VCs), the -vcg switch has to be used. It can be set in GNAT Programming Studio (Project / Edit project properties / Switches / Examiner / Generate VCs). In addition to verification conditions, Examiner can check dead path conjectures (DPCs). It checks, whether all of the program is useful. To generate dead path conjectures, the -dpc switch has to be used. It can be also set in GNAT Programming Studio (Project / Edit project properties / Switches / Examiner / Generate DPCs).

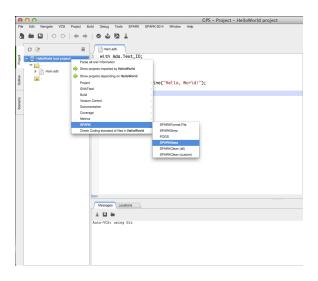


Figure 2.7: Run SPARK Make

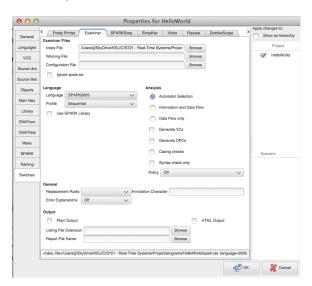


Figure 2.8: Examiner Properties

## Flow analysis

There are two types of flow analysis:

- Data flow analysis:
  - Checks input/output behavior of parameters and variables.

- Checks initialization of variables.
- Checks that changed and imported variables are used later (possibly as output variables).
- Information flow analysis verifies interdependencies between variables.

In data flow analysis, Examiner checks if input parameters are not modified, but used at least once (in at least one branch of program). In the same factor, output parameters cannot be read (before initialization) and has to be initialized (in all branches of program). Input/output parameters has to be both read and write (changed). In similar way, Examiner verify the global variables (specified in annotations). Functions can use only input parameters and can only read global variables. Therefore functions do not have side effects.

Global variables defined in package body (thus private) has to be declared by --# own annotation in package specification. If variable is also initialized, --# initializes annotation has to be used. In Ada, to use package in another package, with clause has to be used. In SPARK Ada, additionally --# inherits annotation has to be specified.

In information flow analysis, dependencies between variables are analyzed. These dependencies are specified by --# derives annotation.

#### Verification conditions

To generate verification conditions, two kinds of annotations are relevant for Examiner:

- preconditions: --# pre
- postconditions: --# post

Notion of pre- and postconditions represents Hoare logic. More precisely, Hoare triple:

$$\{P\}C\{Q\}\tag{2.1}$$

P and Q are assertions. C is a command (action) performed between them. P is precondition and Q is post-condition.

Additionally, assertions (--# assert) and checks (--# check) can be specified in procedure body. Then additional verification conditions are generated.

Functions does not have side effects (as stated in 2.6.1), thus only precondition can be applied. However, there is annotation --# return, which specify function return value.

Verification conditions are generated depended on number of paths in subprogram. Analysis is performed backwards, in other words: we start from post-conditions and consider what must holds before. Flow analysis is well described in chapter 11 of [Bar13].

If preconditions are not present, then the formula expresses that the post-condition holds always.

## 2.6.2 SPARK Simplifier

Simplifier, simplify verification conditions (VCs) generated by Examiner. It can also discharge (prove correctness) of those VCs, which are not proved by Examiner. [Tea11c] It takes as input .vcg files, .fdl files for its data declarations and - if available - proof-rule files (.rls, .rlu). Then it generates .siv files (simplified VCs) and .slg files (details about simplification, which has been made).

## 2.6.3 ZombieScope

ZombieScope is a SPARK tool, that analyze SPARK code to find dead paths, i.e. paths through the code that can never be executed. Program, which contains dead paths may not necessarily be incorrect, but a dead path is an indication of a potential code issue.

ZombieScope reads .dpc files generated by the Examiner. In order to generate dead path conjectures, -dpc flag has to be used or 'Generate DPCs' option has to be checked in Examiner

options, in GPS. It reads also .fal files for its data declarations and the .rls file for proofrules if present. ZombieScope generates two output files: .sdp file (dead path summary) and
.zlg file (details about underlying contradiction search performed). ZombieScope is invoked
by SPARKSimp by default and the summary file generated by POGS includes information
about the dead path analysis.

## 2.6.4 ViCToR

ViCToR is a tool to translate SPARK verification conditions (VCs), as generated by the Examiner, into SMT-LIB (file format used to communicate with SMT solvers). [Tea] SMT (Satisfiability Modulo Theories) solver is a tool for verification and proving the correctness of programs. ViCToR is integrated with SPARKSimp and POGS. To invoke ViCToR from SPARKSimp, flag -victor has to be used.

## 2.6.5 Proof Checker

Proof Checker is advanced verification tool, which require considerable experience in verification of SPARK programs. It is interactive program, which enables the user to direct the Checker to explore the use of various strategies and rules on the condition to be proved. Proof Checker can keep a log of the progress of a proof in plg file. It also keep command record in cmd file. More details about Proof Checker can be found in chapter 12 of [Bar13].

## 2.6.6 SPARKSimp Utility

SPARKSimp is a simple "make" style tool for the SPARK analysis tools. Currently, it supports the Simplifier, ZombieScope and ViCToR. It applies the Simplifier (and ViCToR, if requested) to all .vcg files and ZombieScope to all .dpc files, which it finds in a directory tree. [Tea10]

## 2.6.7 Proof Obligation Summarizer (POGS)

The Proof ObliGation Summarizer tool (POGS) reads and understands the structure of the verification conditions (.vcg files), their simplified version (.siv files) and dead path conjectures (.dpc files). It reports the status of proofs and dead path analyses in a human-readable, text form. [Teal1a]

## 2.6.8 AUnit

AUnit is Unit Test Framework for Ada language. It can be also applied for verify SPARK Ada programs. It was created based on Java JUnit (created by Kent Beck, Erich Gamma) and C++ CppUnit (created by M. Feathers, J. Lacoste, E. Sommerlade, B. Lepilleur, B. Bakker, S. Robbins) unit test frameworks [Ada14]. Similar like mentioned frameworks it enables simple test cases testing, fixtures, suites and provides reporting [Fal14]. As mentioned at the beginning of section 2.6 it is used mainly for dynamic verification.

GNAT Programming Studio can generate test cases skeleton for all subprograms. It can be generated using Tools -> GNATtest -> Generate unit test setup. This generator creates new project with AUnit tests. Project for which tests are generated is referenced in new generated project. In order to run tests, the test project has to be opened in GNAT Programming Studio. The project is created in [project\_dir]/gnattest/harness/test\_[proj\_name].gpr. It generates empty (not implemented) test for each subprogram in project. To add/edit/remove tests or rename names, three files has to be edited:

- [some\_package]-test\_data-tests.ads
- [some\_package]-test\_data-tests.adb
- [some\_package]-test\_data-tests-suite.adb

Test has to be declared in [some\_package]-test\_data-tests.ads and implemented in [some\_package]-test\_data-tests.adb. Then it has to be added to test suite in [some\_package]-test\_data-tests-suite.adb file.

Tests can be also created manually. Then the AUnit distribution has to be referenced in project file and all test cases (and suits) has to be implemented by hand.

## 2.6.9 Sireum Bakar

Sireum<sup>29</sup> is a long-term research conducted by SAnToS lab at Kansas State University. Its goal is to develop an over-arching software analysis platform that incorporates various static analysis techniques such as data-flow framework, model checking, symbolic execution, abstract interpretation, and deductive reasoning techniques (e.g., using weakest precondition calculation). It can be used to build various kinds of software static analyzers for different kinds of properties.

It uses the Pilar language [SC12] as intermediate representation. Any language which can be translated to Pilar can be analyzed by Sireum. For now, there is translator for SPARK and Java.

Bakar is a toolset for analyzing SPARK Ada programs (Bakar means "spark" in Indonesian). Sireum Bakar currently includes:

- Kiasan functional behaviors verification tool
- Alir information flow analysis tool

Sireum distribution is available for Windows (32-bit, 64-bit), Linux (32-bit, 64-bit) and MacOS (64-bit). It can be downloaded from http://www.sireum.org/.

<sup>&</sup>lt;sup>29</sup>http://www.sireum.org/

## Bakar Kiasan

Bakar Kiasan [BHR<sup>+</sup>11] is a fully automated tool for verifying functional behaviors of SPARK programs specified as software contract (Kiasan means "symbolic" in Indonesian). Kiasan use symbolic execution technique. It provides various helpful feedback including generation of counter example for contract refutation, test cases for an evidence of contract satisfaction, verification reports, visual graphs illustrating pre/post states of SPARK procedures/functions, etc. It is much easier for hazard analysis than e.g. analysis of .vcg files generated by SPARK Examiner.

There exists Kiasan Plug-in for GNAT Programming Studio (GPS). Version 1, for GPS 5, supports SPARK 2005. Version 2, for GPS 6, which supports 2014 is under development. Both plug-ins are created by author of this thesis in Python and PyGTK. There is also plug-in for Eclipse, but only for SPARK 2005 programs.

Bakar Kiasan does not support Ravenscar profile. Thus, it can be used only for sequential programs verification. Figure 2.9 depicts sample Kiasan analysis result. Kiasan window has two parts: list of units (packages and subprograms) and analysis cases with pre and post states. Every unit has associated statistics:

- $\bullet$  T# Test cases (expected behavior)
- E# Exception cases (unexpected behavior)
- Instruction coverage amount of code covered by Kiasan analysis
- Branch coverage number of branches covered by analysis (0% in 100% instruction coverage means, that there is no branches in analyzed unit)
- Time in which analysis was performed

After double click on some unit, code which is executed during execution of this unit is highlighted. Additionally below the list of units, there is a combo box which contains all test cases associated with selected (by double click) unit. Once, some case is selected, code coverage equivalent to this test case is highlighted. Additionally, below combo box, there are states of unit execution. On the left hand side, there is pre-state, and on the right hand side there post-state of analysis. Variables with red font color, in post-state, are those which are changed in result of unit execution. The new created variables (during unit execution) are blue, but there are not present in figure 2.9.

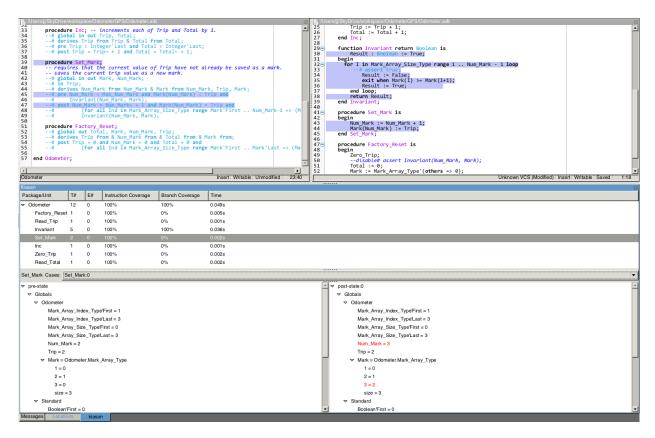


Figure 2.9: Bakar Kiasan report

Bakar Kiasan is useful especially, for solving verification issues. It can generate counter examples, which help to fix the code. [add screenshot with error case and discuss result?]

#### Bakar Alir

Alir is an information flow analysis tool for reasoning about SPARK's derive clauses/information flow (Alir means "flow" in Indonesian). Alir visualizes information flows to ease engineers in understanding information dependencies crucial for specifying and verifying SPARK's derive clauses. It provides various configurable intra-procedural and interprocedural analyses. The inter-procedural analyses are control flow analysis, reaching definition analysis and data dependence analysis. The inter-procedural analysis in Alir includes building, System Dependence Graph (SDG), slicing and chopping on SDG. [Thi11]

## 2.6.10 GNATprove

GNATprove <sup>30</sup> is a formal verification tool for SPARK 2014 programs. It is based on the GNAT compiler. GNATprove interprets SPARK Ada annotations exactly like they are interpreted at run time during tests. It can prove that subprograms respect their contracts, expressed as preconditions and postconditions in the syntax of Ada 2012. The tool automatically discovers the subset of subprograms which can be formally analyzed. GNATprove is currently available for x86 linux, x86 windows and x86-64 linux.

GNATprove consists of two distinct analyses, flow analysis and proof. Flow analysis checks the correctness of aspects related to data flow (Global, Depends, Abstract\_State, Initializes, and refinement versions of these), and verifies the initialization of variables. Proof verifies the absence of runtime errors and the correctness of assertions such as Pre and Post aspects. Using the switch --mode=<mode>, whose possible values are flow, prove and all, only one or both of these analyses can be performed (all is the default). [AL14b]

GNATprove use Alt-Ergo prover for verification.

[Add more details? Some example like in Kiasan section?]

<sup>&</sup>lt;sup>30</sup>http://www.open-do.org/projects/hi-lite/gnatprove/

## 2.7 AADL/BLESS to SPARK Ada code generation

The ultimate goal of long term research, this thesis is part of, is AADL (with BLESS) to SPARK Ada translation. Prototyping Embedded Systems using AADL lasts for a few years [CB09]. There are already existing tools, which performs code generation based on AADL:

- Ocarina
- Ramses

#### 2.7.1 Ocarina

Ocarina [LZPH09] is a tool suite, which contains plug-ins for code generation, model checking and analysis. The code generation plug-in generates code from an AADL architecture model to an Ada or C application running on top of PolyORB framework. In this context, PolyORB acts as both the distribution middleware and execution runtime on all targets supported by PolyORB. Ocarina is written in Ada.

There is plug-in for OSATE (see section 2.3.1), which enables code generation. Example AADL models, suitable for being an input of Ocarina are available on github repository: https://github.com/yoogx/polyorb-hi-ada/tree/master/examples/aadlv2.

Since mid-2009, Telecom ParisTech is no longer involved in Ocarina, and is developing another AADL tool-chain, based on Eclipse, codenamed RAMSES [Hug13].

[Include some examples and generated code? E.g. prod-cons example?]

## 2.7.2 RAMSES

RAMSES (Refinement of AADL Models for Synthesis of Embedded Systems) is a model transformation and code generation tool. It is written in Java. RAMSES produces C code, but does not generate Ada. It simplify AADL models, in order to generate C code. Simplified

AADL models contain behavior annex subclauses. RAMSES can be used as OSATE plug-in or standalone application.

[I didn't find much about RAMSES online...]

# Chapter 3

# PCA Pump

Patient Controlled Analgesia (PCA) pump is a medical device, which allows the patient to self-administer small doses of narcotics (usually Morphine, Dilaudid, Demerol, or Fentanyl). PCA pumps are commonly used after surgery to provide a more effective method of pain control than periodic injections of narcotics. A continuous infusion (called a basal rate) permits the patient to receive a continuous infusion of pain medication. There is no need for a clinician to administer it. Patient can also request additional boluses, but only in specified intervals. It prevents from over infusion. In addition to basal and patient bolus, clinician can also request bolus called clinician bolus or square bolus.



Figure 3.1: Patient Controlled
Analgesia (PCA) pump

Figure 3.1 shows LifeCare PCA pump. On the left hand side, there is drug reservoir.

On the right - clinician panel, which allows to control the pump. Figure 3.2 shows PCA

Pump, made by company Alaris.



Figure 3.2: Alaris Pump

PCA Pump is safety-critical device which works in standard process control loop depicted in the figure 3.3. The controller obtains information about (observes) the process state from measured variables (feedback) and uses this information to initiate action by manipulating controlled variables to keep the process operating within predefined limits or set points (the goal) despite disturbances to the process. Such as different air pressure or device position (gravity impact). In general, the maintenance of any open-

system hierarchy (either biological or man-made) will require a set of processes in which there is communication of information for regulation or control. [Lev12]

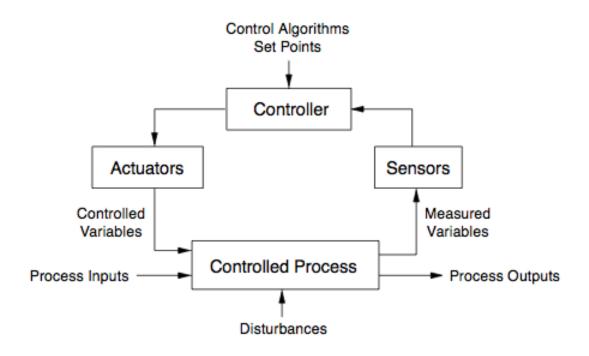


Figure 3.3: Standard Process Control Loop.

PCA Pump actuator is motor, which pump drug to the patient's vein. Controlled process is dosing the drug. Sensors measure amount of dosed drug. They might be used for double-check if ordered (by controller) amount of drug was appropriately delivered. Sometimes there might be some distrubances caused by mechanical issues and environmental conditions. Controller issues appropriate actions based on informations from sensors and clinician or patient's commands. High level overview of PCA Pump is depicted in the figure 3.4.

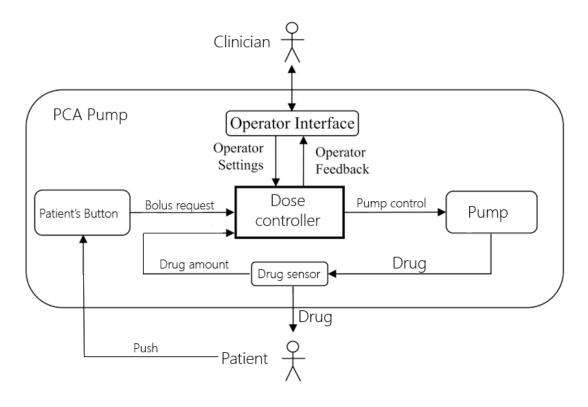


Figure 3.4: PCA Pump system

One of the hazards of using PCA pumps, is that there is inadequate monitoring of patient's levels of oxygen and carbon dioxide. Nursing staff on general medical units typically track respiration rate and other vital signs every four hours, which is not enough. There should be a way to monitor levels continuously. Additionally, it can be hard to tell if a person's breathing rate is dangerously low in certain circumstances. There are cases, where

lack of monitoring carbon dioxide level caused death.<sup>1</sup>

Another hazard is human mistake. For example, there is a case when nurse used a 5 mg/mL morphine cassette because a 1 mg/mL cassette was not available, but she programmed PCA Pump like for 1 mg/mL concentration. In addition to lack of monitoring of the pulse, patient died.<sup>2</sup>

As mentioned in chapter 2, the solution to that problem is medical devices interoperability. In addition, less human error-prone device is needed. It can be assured by using more than one system for their detection.

## 3.1 PCA Pump Requirements Document

Requirements of "Open Source PCA Pump" [LHC13] are captured in "Integrated Clinical Environment Patient-Controlled Analgesia Infusion Pump System Requirements" document [Lar14] created by Brian Larson. It is formalized set of capabilities, which Open PCA Pump should have, based on consultations with domain experts, FDA and Brian Larson's expertise gained while he was working in the medical device industry.

Conceptual model of Open PCA pump is depicted in the figure 3.5. As mentioned earlier, the pump is connected to ICE so it may be integrated with ICE apps and displays. The interface must provide prescription and patient information, current status to be displayed remotely on a supervisor user interface, and a means to stop infusing upon human command, or determination of an ICE app. Such an ICE app could monitor a patient's blood oxygenation and pulse rate, stopping the pump if depressed respiratory function is indicated. [Lar14]

Additionally, it cooperates with Drug Library, which contains information about drugs and its properties (like concentration). Data needed for pump operation, are captured on

<sup>&</sup>lt;sup>1</sup>http://abcnews.go.com/Health/parents-warn-pca-pumps-daughters-death/story?id=16796805

<sup>&</sup>lt;sup>2</sup>http://webmm.ahrq.gov/case.aspx?caseID=291

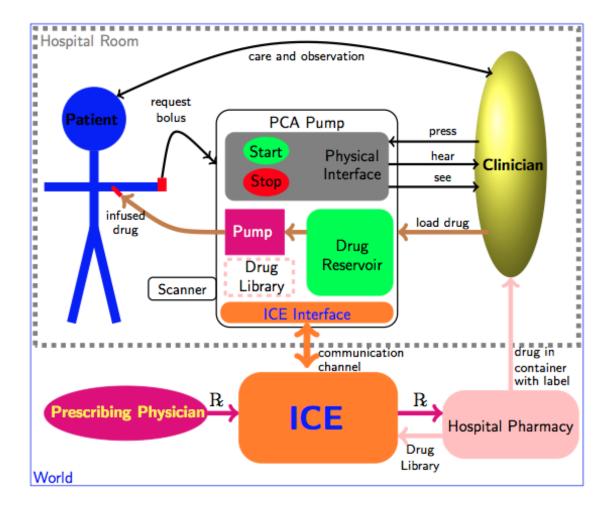


Figure 3.5: Open PCA Pump concept

electronic prescription, which contains:

- Patient's name
- Drug name
- Drug code
- Drug concentration
- Initial volume of drug in the vial
- Basal flow rate the rate of continuous infusion

- Volume to be infused (VTBI) on patient's request
- Maximum amount of drug allowed per hour
- Minimum time between patient boluses
- Date, in which prescription has been filled
- Prescribing physician's name
- Pharmacist name

Pain medication is prescribed by a licensed physician, which is dispensed by the hospital's pharmacy. The drug is placed into a vial labeled with the name of the drug, its concentration, the prescription, and the intended patient. A clinician loads the drug into the pump, and attaches it to the patient. The pump infuses a prescribed basal flow rate which may be augmented by a patient-requested bolus or a clinician-requested bolus. This allows additional pain medication in response to patient need within safe limits. [Lar14]

Prescription captures all data needed for basal infusion and patient requested boluses (referred as bolus). In addition to that, Open PCA Pump allows Clinician Requested Bolus (referred as square bolus). In order to do that, clinician has to enter the time (through PCA Pump panel) in which VTBI, specified in prescription, will be infused.

There can occur situations in which the maximum drug amount infused may exceed the allowed limit. E.g. when clinician issues too many square boluses. In such case, pump is switched to Keep Vein Open (KVO) mode, which has 1 ml/hr drug rate. Pump switches to KVO rate also when ICE interface request it. It may happen e.g. if patient's oxygen level is low. To recover from KVO state, pump has to be restarted by clinician in order to continue operation. In Summary, Open PCA Pump has following modes:

### Stopped

- Basal rate
- Patient's bolus (bolus)
- Clinician bolus (square bolus)
- Keep Vein Open (KVO)

There are also other scenarios, which are captured by Requirements Document [Lar14], like scanner to enable automatic entry of patient's and prescription data, occlusion detection, hardware errors alarms etc. Detailed overview of Open PCA Pump Requirements can be found in [LHC13].

[MORE DETAILS ABOUT PUMP?] [ADD STATE MACHINE IMAGE, LIKE IN UMINN REQ COD?]

# 3.2 PCA Pump AADL/BLESS Models

In addition to PCA Pump Requirements Document [Lar14], Brian Larson created AADL model with formal behavioral specifications written in his BLESS framework. AADL model, graphical representation is depicted on figure 3.6.

AADL model captures structure of device. BLESS - its behavior. Listing 3.2 shows Rate\_Controller thread from PCA\_Operation component with BLESS assertions in thread declaration and BLESS behavioral description in thread implementation. The thread declaration contains input and output ports. In addition to some of them, BLESS assertions are present. Assertions are defined in BLESS annex in thread implementation. In addition to assertions, states and transitions defined in thread implementation can potentially be translated into working SPARK Ada program. Presence of timing properties in states and transitions makes translation extremely difficult, thus there are omitted in this thesis and only assertions are considered. [TRUNCATE CODE LISTING?]

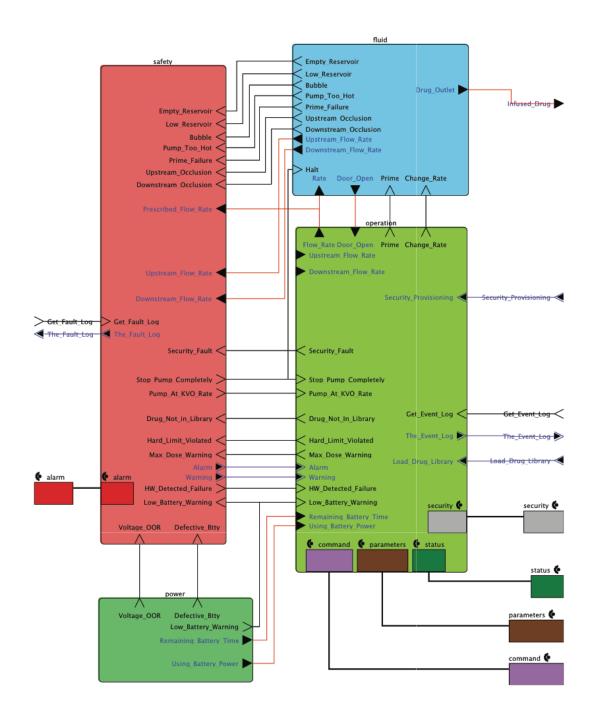


Figure 3.6: Open PCA Pump AADL model

```
thread Rate_Controller
features
    Infusion_Flow_Rate: out data port PCA_Types::Flow_Rate
      {BLESS::Assertion => "<<:=PUMP_RATE()>>";};
    System_Status: out event data port PCA_Types::Status_Type;
    Begin_Infusion: in event port
      {BLESS::Assertion => "<<Rx_APPROVED()>>";};
    Begin_Priming: in event port;
    End_Priming: in event port;
    Halt_Infusion: in event port;
    Square_Bolus_Rate: in data port PCA_Types::Flow_Rate
      {BLESS::Assertion => "<<:=SQUARE_BOLUS_RATE>>";};
    Patient_Bolus_Rate: in data port PCA_Types::Flow_Rate
      {BLESS::Assertion => "<<:=PATIENT_BOLUS_RATE>>";};
    Basal_Rate: in data port PCA_Types::Flow_Rate
      {BLESS::Assertion => "<<:=BASAL_RATE>>";};
    VTBI: in data port PCA_Types::Drug_Volume
      {BLESS::Assertion => "<<:=VTBI>>";};
    HW_Detected_Failure: in event port;
    Stop_Pump_Completely: in event port;
    Pump_At_KVO_Rate: in event port;
    Alarm : in event data port PCA_Types::Alarm_Type;
    Warning : in event data port PCA_Types::Warning_Type;
    Patient_Request_Not_Too_Soon: in event port
      {BLESS::Assertion => "<<:=PATIENT_REQUEST_NOT_TOO_SOON(now)>>";};
    Door_Open: in data port Base_Types::Boolean;
    Pause_Infusion: in event port;
    Resume_Infusion: in event port;
    CP_Clinician_Request_Bolus: in event port;
    CP_Bolus_Duration: in event data port ICE_Types::Minute;
    Near_Max_Drug_Per_Hour: in event port --near maximum drug infused in any hour
      {BLESS::Assertion => "<<PATIENT_NEAR_MAX_DRUG_PER_HOUR()>>";};
    Over_Max_Drug_Per_Hour: in event port --over maximum drug infused in any hour
      {BLESS::Assertion => "<<PATIENT_OVER_MAX_DRUG_PER_HOUR()>>";};
    ICE_Stop_Pump: in event port;
  properties
    Thread_Properties::Dispatch_Protocol => Aperiodic;
end Rate_Controller;
thread implementation Rate_Controller.imp
annex BLESS
{**
assert
<<HALT : :(la=SafetyPumpStop) or (la=StopButton) or (la=EndPriming)>> --pump at 0 if stop button, or
   safety architecture says, or done priming
<<KVO_RATE : :(la=KVOcommand) or (la=KVOalarm) or (la=TooMuchJuice)>> --pump at KVO rate when commanded,
  some alarms, or excedded hourly limit
<<PB_RATE : :la=PatientButton>> --patient button pressed, and allowed
<<CCB_RATE : :(la=StartSquareBolus) or (la=ResumeSquareBolus)>> --clinician-commanded bolus start or
  resumption after patient bolus
<<PRIME_RATE : :la=StartPriming>> --priming pump
<<BASAL_RATE : :(la=StartButton) or (la=ResumeBasal) or (la=SquareBolusDone)>> --regular infusion
<<PUMP_RATE : :=
  (HALT()) \rightarrow 0,
                                                      --no flow
  (KVO_RATE()) -> PCA_Properties::KVO_Rate,
                                                      --KVO rate
  (PB_RATE()) -> Patient_Bolus_Rate, --maximum infusion upon patient request
  (CCB_RATE()) -> Square_Bolus_Rate,
                                                     --square bolus rate=VTBI/duration, from data port
  (PRIME_RATE()) -> PCA_Properties::Prime_Rate,
                                                      --pump priming
  (BASAL_RATE()) -> Basal_Rate
                                                      --basal rate, from data port
invariant <<true>>
variables
  --time of last action
  tla :BLESS_Types::Time := 0;
```

```
la : --last action
   enumeration (
     SafetyStopPump, --safety architecture found a problem
     StopButton,
                       --clinician pressed stop button
     KVOcommand,
                       --from control panel (clinician) or ICE (app) to pump Keep-vein-open rate
                      --some alarms should pump at KVO rate
     KVOalarm,
                      --exceeded max drug per hour, pump at KVO until prescription and patient are re-
     TooMuchJuice.
  authenticated
     PatientButton,
                      --patient requested drug
     ResumeSquareBolus, --infusion of VTBI finished, resume clinician-commanded bolus
     ResumeBasal, --infusion of VTBI finished, resume basal-rate
     StartSquareBolus, --begin clinician-commanded bolus
     {\tt SquareBolusDone, --infusion \ of \ VTBI \ finished}
     {\tt StartPriming, \quad \quad --begin \; pump/line \; priming, \; pressed \; "prime" \; button}
                       --end priming, pressed "prime" button again, or time-out
     EndPriming,
                      --start pumping at basal rate
     StartButton
 pb_duration :BLESS_Types::Time --patient button duration = VTBI/Patient_Bolus_Rate
   <<PB_DURATION : :pb_duration=(VTBI/Patient_Bolus_Rate)>>;
 PowerOn : initial state:
                                 --power-on
 WaitForRx : complete state; --wait for valid prescription
 CheckPBR : state    --check Patient_Bolus_Rate is positive
   <<Rx_APPROVED()>>;
                              --prescription verified
 RxApproved : complete state
   <<Rx_APPROVED() and PB_DURATION()>>;
 Priming : complete state
                               --priming the pump, 1 ml in 6 sec
   <<(la=StartPriming) and (Infusion_Flow_Rate@now = PCA_Properties::Prime_Rate) and PB_DURATION()>>;
 WaitForStart : complete state --wait for clinician to press 'start' button
   <<HALT() and (Infusion_Flow_Rate@now=0) and PB_DURATION()>>;
 PumpBasalRate : complete state --pumping at basal rate
   <>((la=StartButton) or (la=ResumeBasal)) and (Infusion_Flow_Rate@now=Basal_Rate@now) and PB_DURATION()
 PumpPatientButtonVTBI : complete state --pumping patient-requested bolus
   <<(la=PatientButton) and PB_DURATION()
     and (Infusion_Flow_Rate@now=Patient_Bolus_Rate)>>;
 PumpCCBRate : complete state --pumping at clinician-commanded bolus rate
   <>((la=StartSquareBolus) or (la=ResumeSquareBolus)) and (Infusion_Flow_Rate@now=Square_Bolus_Rate@now)
  and PB_DURATION()>>;
 PumpKVORate : complete state
                                 --pumping at keep-vein-open rate
   <<((la=KVOcommand) or (la=KVOalarm) or (la=TooMuchJuice)) and PB_DURATION()
     and (Infusion_Flow_Rate@now=PCA_Properties::KVO_Rate)>>;
 PumpingSuspended: complete state --clinician pressed 'stop' button
   <<((la=StopButton) or (la=SafetyStopPump)) and (Infusion_Flow_Rate@now=0)>>;
 Crash : final state; --abnormal termination
 Done : final state
                      --normal termination
   <<Infusion_Flow_Rate@now=0>>;
transitions
--wait for valid prescription
 go : PowerOn-[ true ]->WaitForRx{};
--prescription validated
 rxo : WaitForRx-[ on dispatch Begin_Infusion ]-> CheckPBR{};
 pbr0 : CheckPBR-[ Patient_Bolus_Rate<=0 ]->Crash{}; --bad Patient_Bolus_Rate
 pbrok : CheckPBR-[ Patient_Bolus_Rate>0 ]->RxApproved
   {<<Rx_APPROVED() and (Patient_Bolus_Rate>0)>> --likely will change from logic variable to predicate
  Rx_APPROVED()
     pb_duration := VTBI/Patient_Bolus_Rate --calculate patient bolus duration
      --note division without knowing divsor is non-zero; should generate additional proof obligations for
  assignment using division
   <<Rx_APPROVED() and PB_DURATION()>>};
--clinician press 'prime' button
 rxpri : RxApproved-[ on dispatch Begin_Priming ]-> Priming
   la :=StartPriming
       <<Begin_Priming@now and Rx_APPROVED() and (la = StartPriming) and PB_DURATION()>>
```

```
Infusion_Flow_Rate!(PCA_Properties::Prime_Rate) --infuse at prime rate
       <<(la = StartPriming) and Rx_APPROVED() and PB_DURATION() and
         (Infusion_Flow_Rate@now=PCA_Properties::Prime_Rate)>>
   };
--priming done, wait for start
 prd: Priming-[ on dispatch End_Priming or timeout (Begin_Priming) PCA_Properties::Prime_Time sec]->
  WaitForStart
   {
   la:=EndPriming
     <<HALT() and PB_DURATION()>> --and Begin_Priming timed out
   Infusion_Flow_Rate!(0) --stop priming flow
     <<HALT() and (Infusion_Flow_Rate@now=0) and PB_DURATION()>>
--prime again
 pri: WaitForStart-[ on dispatch Begin_Priming ]-> Priming
   la:=StartPriming
       <<Begin_Priming@now and PB_DURATION() and PRIME_RATE()>>
   Infusion_Flow_Rate!(PCA_Properties::Prime_Rate) --infuse at prime rate
       <<PRIME_RATE() and PB_DURATION() and
         (Infusion_Flow_Rate@now=PCA_Properties::Prime_Rate)>>
  };
--clinician press 'start' button after priming
 sap: WaitForStart-[ on dispatch Begin_Infusion ]-> PumpBasalRate --start after priming
   la:=StartButton
     <<(la=StartButton) and Begin_Infusion@now and PB_DURATION()>>
   Infusion_Flow_Rate!(Basal_Rate)
                                    --infuse at basal rate
     <<(la=StartButton) and (Infusion_Flow_Rate@now=Basal_Rate@now) and PB_DURATION()>>
--Patient_Request_Bolus during basal rate infusion
 pump_basal_rate:
 PumpBasalRate-[ on dispatch Patient_Request_Not_Too_Soon]-> PumpPatientButtonVTBI
   {
   la := PatientButton
     <<(la=PatientButton) and Patient_Request_Bolus@now and PB_DURATION()>>
   Infusion_Flow_Rate!(Patient_Bolus_Rate)
                                             --infuse at patient button rate
     <<(la=PatientButton) and PB_DURATION()
       and (Infusion_Flow_Rate@now=Patient_Bolus_Rate)>>
   }; --end of pump_basal_rate
--VTBI delivered
 vtbi delivered:
 PumpPatientButtonVTBI -[ on dispatch timeout (Infusion_Flow_Rate) pb_duration ms ]-> PumpBasalRate
   {
   la:=ResumeBasal
   <<(la=ResumeBasal) and PB_DURATION()>> --and timeout of patient button duration
   Infusion_Flow_Rate!(Basal_Rate) --infuse at basal rate
     <<(la=ResumeBasal) and (Infusion_Flow_Rate@now=Basal_Rate@now) and PB_DURATION()>>
   }; --end of vtbi_delivered
**}:
end Rate_Controller.imp;
```

Listing 3.1: Rate\_Controller thread from PCA\_Operation component with BLESS assertions

## 3.3 BeagleBoard-xM

For Research and MDCF purposes, BeagleBoardxM (an open-source hardware single-board computer produced by Texas Instruments), has been chosen as hardware platform for PCA pump prototyping.

BeagleBoard-xM is Embedded device with AM37x 1GHz ARM processor (Cortex-A8 compatible). It has 512 MB RAM, 4 USB 2.0 ports, HDMI port, 28 General-purpose input/output (GPIO) ports and Linux Operating System (on microSD card). Moreover there is PWM support, which enables control of pump actuator.



Figure 3.7: BeagleBoard-xM

Pulse-width modulation (PWM) is a

technique for controlling analog circuits with a processor's digital outputs. The average value of voltage (and current) fed to the electrical load is controlled by turning the switch between supply and load on and off at a fast pace. The longer the switch is on compared to the off periods, the higher the power supplied to the load. Proportion of on and off periods is called the duty cycle and is expressed in percent. 100% means all the time on, 0% - all the time off. Figure 3.8 shows 10%, 30%, 50% and 90% duty cycles.

There is no existing SPARK Ada compiler running on ARM system. Hence, to compile SPARK Ada program for ARM device, cross-compiler is needed. There is GNAT compiler [Hor09] created by AdaCore, but there was no cross-compiler for ARM. However, AdaCore was actively developing cross-compiler. They had working version in 2013, but tested only

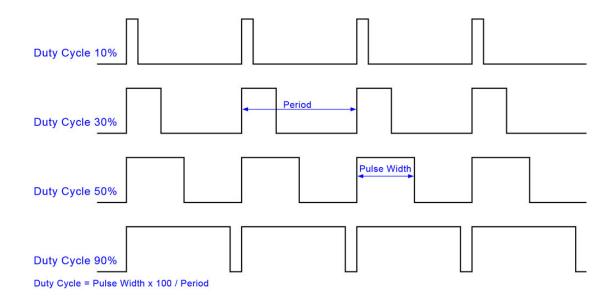


Figure 3.8: An example of PWM duty cycles

on their target Android-based device. In cooperation with AdaCore, cross-compiler for ARM was bundled and tested on BeagleBoard-xM. For now, GNAT cross-compiler works only on Linux 32-bit operating system.

In addition to USB ports, BeagleBoard-xM has also serial port and Ethernet port. It allows to copy programs compiled on Linux, using all three types of ports.

# Chapter 4

# AADL/BLESS to SPARK Ada

# translation

This chapter presents created AADL/BLESS to SPARK Ada translation schemes (4.1), proposed port communication (4.2) and discuss design of automatic translator, which can be created based on translation schemes (4.3). Related work in code generation from AADL, but to Java has been done in [PHR].

# 4.1 AADL/BLESS to SPARK Ada mapping

Mapping of AADL models to SPARK Ada is driven by "Architecture analysis & Design Language (AADL) V2 Programming Language Annex Document" [SCD14]. This document was discussed during AADL User Days in Valencia (February 2013)<sup>1</sup> and in Jacksonville, FL (April 2013)<sup>2</sup>. Ocarina tool suite (based on older AADL annex documents [HZPK08]) and its examples<sup>3</sup> was also helpful in understanding of AADL to Ada translation. Mapping

 $<sup>^{1}</sup> http://www.aadl.info/aadl/downloads/committee/feb2013/presentations/13\_02\_04-AADL-Code\%20Generation.pdf$ 

<sup>&</sup>lt;sup>2</sup>https://wiki.sei.cmu.edu/aadl/images/8/8a/Constraint Annex April22.v3.pdf

 $<sup>^3</sup>$ https://github.com/yoogx/polyorb-hi-ada/tree/master/examples/aadlv2

of BLESS assertions was created in consultation with Brian Larson (BLESS creator).

## 4.1.1 Data types mapping

One of core AADL packages is Base\_Types. It defines fundamental data types for AADL. Its definition is shown in listing 4.1.1.

```
package Base_Types
public
  with Data_Model;
  data Boolean
  properties
   Data_Model::Data_Representation => Boolean;
  end Boolean;
 data Integer
 properties
   Data_Model::Data_Representation => Integer;
 end Integer;
 -- Signed integer of various byte sizes
 data Integer_8 extends Integer
 properties
   Data_Model::Number_Representation => Signed;
   Source_Data_Size => 1 Bytes;
 end Integer_8;
  data Integer_16 extends Integer
 properties
   Data_Model::Number_Representation => Signed;
   Source_Data_Size => 2 Bytes;
  end Integer_16;
  data Integer_32 extends Integer
  properties
   Data_Model::Number_Representation => Signed;
   Source_Data_Size => 4 Bytes;
 end Integer_32;
 data Integer_64 extends Integer
   Data_Model::Number_Representation => Signed;
   Source_Data_Size => 8 Bytes;
 end Integer_64;
 -- Unsigned integer of various byte sizes
 data Unsigned_8 extends Integer
   Data_Model::Number_Representation => Unsigned;
   Source_Data_Size => 1 Bytes;
  end Unsigned_8;
  data Unsigned_16 extends Integer
 properties
```

```
Data_Model::Number_Representation => Unsigned;
   Source_Data_Size => 2 Bytes;
  end Unsigned_16;
  data Unsigned_32 extends Integer
  properties
   Data_Model::Number_Representation => Unsigned;
   Source_Data_Size => 4 Bytes;
 end Unsigned_32;
  data Unsigned_64 extends Integer
 properties
   Data_Model::Number_Representation => Unsigned;
   Source_Data_Size => 8 Bytes;
  end Unsigned_64;
  data Natural extends Integer
 properties
   Data_Model::Integer_Range => 0 .. Max_Target_Integer;
 end Natural;
  data Float
 properties
   Data_Model::Data_Representation => Float;
 end Float;
  data Float_32 extends Float
 properties
   Data_Model::IEEE754_Precision => Simple;
   Source_Data_Size => 4 Bytes;
 end Float_32;
 data Float_64 extends Float
 properties
   Data_Model::IEEE754_Precision => Double;
   Source_Data_Size => 8 Bytes;
 end Float_64;
  data Character
 properties
   Data_Model::Data_Representation => Character;
  end Character;
  data String
 properties
   Data_Model::Data_Representation => String;
 end String;
end Base_Types;
```

Listing 4.1: AADL Base Types package

In Ada 2012, and thus SPARK 2014, there is package Interfaces, which allows for easy mapping of AADL Base\_Types package. Mapping proposed in Annex Document [SCD14] is presented on listing 4.1.1.

```
with Interfaces;

package Base_Types is
```

```
type AADL_Boolean is new Standard.Boolean;
 type AADL_Integer is new Standard.Integer;
 type Integer_8 is new Interfaces.Integer_8;
 type Integer_16 is new Interfaces.Integer_16;
 type Integer_32 is new Interfaces.Integer_32;
 type Integer_64 is new Interfaces.Integer_64;
 type Unsigned_8 is new Interfaces.Unsigned_8;
 type Unsigned_16 is new Interfaces.Unsigned_16;
 type Unsigned_32 is new Interfaces.Unsigned_32;
 type Unsigned_64 is new Interfaces.Unsigned_64;
 type AADL_Natural is new Standard.Integer; -- XXX incomplete range?
 type AADL_Float is new Standard.Float;
 type Float_32 is new Interfaces.IEEE_Float_32;
 type Float_64 is new Interfaces.IEEE_Float_64;
   type AADL_Character is new Standard.Character;
end Base_Types;
```

Listing 4.2: Mapping of Base\_ Types for SPARK 2014

Target language for this thesis is SPARK 2005. SPARK 2014 tools and especially multitasking capabilities were not ready, during the time when this thesis was written. Types: Float, Character and String are also not part of this thesis, because of verification tools limitation. Thus, only Integer, Enumeration, Boolean and Record types are taken into account in mappings.

Each type is translated into simple type definition and protected type. Then it can be used in multitasking programs with Ravescar Profile. For every protected type only setter (Put) and getter (Get) subprograms are defined. It can be extended by developer during development phase. Protected objects can be also removed if they are not needed. Default value for priority, for each generated type is 10. It can be changed during development phase according to implementation details. Types: Integer, Boolean and Natural are already defined in SPARK Ada, thus only protected objects are generated for them. AADL Base\_Types mapping to SPARK 2005 is presented in table 4.1.

Table 4.1: Base AADL types to SPARK mapping.

AADL	SPARK Ada
<pre>data Integer properties   Data_Model::Data_Representation     =&gt; Integer; end Integer;</pre>	<pre>protected type Integer_Store is     pragma Priority (10);  function Get return Integer;    # global in Integer_Store;  procedure Put(X : in Integer);    # global out Integer_Store;    # derives Integer_Store from X; private     TheStoredData : Integer := 0; end Integer_Store;</pre>
<pre>data Integer_16 extends Integer properties   Data_Model::     Number_Representation =&gt;     Signed; Source_Data_Size =&gt; 2 Bytes; end Integer_16;</pre>	<pre>type Integer_16 is new Integer range -2**(2*8-1) 2**(2*8-1-1);  protected type Integer_16_Store     is         pragma Priority (10);          function Get return Integer_16;        # global in Integer_16_Store;          procedure Put(X : in Integer_16);        # global out Integer_16_Store;        # derives Integer_16_Store from X;  private         TheStoredData : Integer_16 := 0; end Integer_16_Store;  protected body Integer_16_Store is         function Get return Integer_16        # global in TheStoredData;         is         begin             return TheStoredData;         end Get;  procedure Put(X : in Integer_16)        # global out TheStoredData;        # derives TheStoredData from X;         is         begin             TheStoredData := X;         end Put; end Integer_16_Store;</pre>
	Continued on next page

Table 4.1 – continued from previous page

<pre>data Unsigned_16 extends Integer properties   Data_Model::      Number_Representation =&gt;      Unsigned;   Source_Data_Size =&gt; 2 Bytes; end Unsigned_16;</pre>	<pre>type Unsigned_16 is new Integer range 0 2**(2*8-1);  protected type Unsigned_16_Store is     pragma Priority (10);  function Get return Unsigned_16;    # global in Unsigned_16_Store;  procedure Put(X : in Unsigned_16);    # global out Unsigned_16_Store;</pre>
	# global out Unsigned_16_Store;# derives Unsigned_16_Store from X; private     TheStoredData : Unsigned_16 := 0; end Unsigned_16_Store;  protected body Unsigned_16_Store is     function Get return Unsigned_16# global in TheStoredData; is
	<pre>begin     return TheStoredData; end Get;  procedure Put(X : in Unsigned_16)    # global out TheStoredData;    # derives TheStoredData from X;</pre>
	is begin TheStoredData := X; end Put; end Unsigned_16_Store;

Table 4.1 – continued from previous page

data Type_With_Range properties  Data_Model:: Data_Representation => Integer; Data_Model::Base_Type => ( classifier (Base_Types:: Unsigned_16)); Data_Model:Integer_Range => 01000; end Type_With_Range;  end Type_With_Range;  type Type_With_Range is new Integer range 0 1000;  protected type Type_With_Range_Store is pragma Priority (10);  function Get return Type_With_Range;# global in Type_With_Range_Store;# derives Type_With_Range_Store;# derives Type_With_Range_Store from X; private TheStoredData : Type_With_Range_Store is function Get return Type_With_Range_Store;# derives Type_With_Range_Store is function Get return Type_With_Range.Store;# global out Type_With_Range_Store is function Get return Type_With_Range := 0; end Unsigned_16_Store;  protected body Type_With_Range_Store is function Get return Type_With_Range := 0; end Unsigned_16_Store;  protected body Type_With_Range := 0; end Unsigned_16_Store;  protected body Type_With_Range := 0; end Unsigned_16_Store;  protected body Type_With_Range := 0; end Unsigned_16_Store;  protected type Type_With_Range_Store is  function Get return Type_With_Range;# global out Type_With_Range.Store;# derives Type_With_Range_Store;# global out TheStoredData; is begin  TheStoredData := X; end Put; seen Type_With_Range Store Integer
end Type_With_Range_Store;

Type range is defined using AADL properties: Data\_Model::Number\_Representation, Source\_Data\_Size and Data\_Model::Integer\_Range. When Data\_Model::Integer\_Range property is not specified, then range is calculated. In case of Integer representation range starts from negative value, for Unsigned - from 0. Maximum value for Integer is calculated using the formula 4.1.

$$Integer\_[Number\_Of\_Bytes * 8]\_Max = 2^{Number\_Of\_Bytes*8-1} - 1 \tag{4.1}$$

The minimum value formula for Integer (4.2) and maximum value for Unsigned (4.3) use similar strategy.

$$Integer_[Number_Of_Bytes * 8]_Min = -2^{Number_Of_Bytes*8-1}$$
 (4.2)

$$Unsigned_[Number_Of_Bytes * 8]_Max = 2^{Number_Of_Bytes * 8} - 1$$
 (4.3)

Mapping for enumeration types, presented on table 4.2, is pretty straightforward. BLESS properties are ignored in translation. In addition to simple types, protected types are generated.

Continued on next page

Table 4.2 – continued from previous page

	1 0
$\mathbf{AADL}$	SPARK Ada

Table 4.2: AADL/BLESS enumeration types to SPARK mapping.

AADL	SPARK Ada
<pre>data Enum_Type   properties   BLESS::Typed=&gt;"enumeration (Enumerator1,         Enumerator2, Enumerator3)";   Data_Model::Data_Representation =&gt; Enum;   Data_Model::Enumerators =&gt; ("Enumerator1", "         Enumerator2", "Enumerator3"); end Enum_Type;</pre>	<pre>type Enum_Type is (Enumerator1, Enumerator2,</pre>

Sometimes it is pragmatic to define a type, which has exactly the same range like some already existing type. Especially when it is used for some specific calculations. E.g. measuring the speed. Let's say, that Unsigned\_16 was used. Then, during development of next car model, it becomes not enough. In case when e.g. speed\_Type is not defined, there are two possible resolutions. First: change definition (range) of Unsigned\_16. That is bad choice,

especially because its name specify the range. Another reason: it might be used not only for measuring the Speed, but maybe also for fuel level, which range is still fine. Second option is to change Unsigned\_16 to e.g. Unsigned\_32 everywhere in Speed Control Module (and maybe also in some external modules). When speed\_Type is defined and used everywhere for speed units, then only definition of speed\_Type has to be changed. To define type, using existing type in AADL, derived type (defined with extends keyword) or Data\_Model::Base\_Type property can be used. Translation to SPARK Ada is shown in table 4.3. There are two ways to define type based on some other type in SPARK Ada:

- subtype it is compatible with its parent, in other words: parent type variable can be assigned to it, if its value is in the subtype range
- derived type it is incompatible with its parent (parent type variable cannot be assigned to it), but inherits its primitive operations

Table 4.3: AADL types to SPARK mapping: Subtypes.

AADL	SPARK Ada
<pre>data Speed_Type extends Base_Types::Integer end Speed_Type;</pre>	<pre>subtype Speed_Type is Base_Types.Integer;</pre>
<pre>data Speed_Type   properties   BLESS::Typed=&gt;"integer";     Data_Model::Base_Type =&gt; (classifier(     Base_Types::Unsigned_16)); end Speed_Type;</pre>	type Speed_Type is new Base_Types.Unsigned_16;

AADL array type can be defined using property Data\_Model::Data\_Representation. In addition to that, size for array has to be specified by Data\_Model::Dimension property. Sample mapping

of array of 10 integers is shown in table 4.4.

Table 4.4: AADL arrays to SPARK Ada mapping

AADL	SPARK Ada
<pre>data Some_Array     properties         BLESS::Typed =&gt; "array [10] of Base_Types::         Integer_32";         Data_Model::Data_Representation =&gt; Array;         Data_Model::Base_Type =&gt; (classifier(         Base_Types::Integer_32));         Data_Model::Dimension =&gt; (10); end Some_Array;</pre>	<pre>subtype Some_Array_Index is Integer range 1     10; type Some_Array is array (Some_Array_Index) of     Base_Types.Integer_32;  protected type Some_Array_Store is     pragma Priority (10);      function Get(Ind : in Integer) return     Base_Types.Integer_32;    # global in Some_Array_Store;      procedure Put(Ind : in Integer; Val : in     Base_Types.Integer_32);    # global in out Some_Array_Store;    # derives Some_Array_Store from     Some_Array_Store, Ind, Val; private     TheStoredData : Some_Array := Some_Array'(     others =&gt; 0); end Some_Array_Store;  protected body Some_Array_Store is     function Get(Ind : in Integer) return     Base_Types.Integer_32    # global in TheStoredData;     is     begin         return TheStoredData(Ind); end Get;  procedure Put(Ind : in Integer; Val : in     Base_Types.Integer_32)    # global in out TheStoredData;    # derives TheStoredData from     TheStoredData, Ind, Val;     is     begin         TheStoredData(Ind) := Val; end Put; end Some_Array_Store;</pre>

AADL v2 allows to create struct data types, using Data\_Model::Data\_Representation => Struct.

AADL Struct is mapped to SPARK Ada record type. The mapping is presented in table

Table 4.5: AADL struct to SPARK Ada record mapping

AADL	SPARK Ada
<pre>data Some_Record_Type   properties   BLESS::Typed =&gt; "record (     Field1 : Base_Types::Integer_32;     Field2 : Base_Types::Boolean;     Field3 : Base_Types::Unsigned_32;     );   Data_Model::Data_Representation =&gt; Struct;   Data_Model::Element_Names =&gt; ("Field1", "Field2", "Field3");   Data_Model::Base_Type =&gt; (     classifier(Base_Types::Integer_32),     classifier(Base_Types::Boolean),     classifier(Base_Types::Unsigned_32)   ); end Some_Record_Type;</pre>	<pre>type Some_Record_Type is record     Field1 : Integer_32;     Field2 : Boolean;     Field3 : Unsigned_32; end record;</pre>

Data types translations are created based on Brian Larson's AADL/BLESS models of PCA Pump. They are syntacticly verified with SPARK Examiner. During development of types mapping, SPARK Examiner was helpful also for detecting inconsistencies in AADL models. Eg. it detected redundancy in enumerators. Both Alarm\_Type and Warning\_Type contained No\_Alarm enumerator, which was a bug. All enumerators, for all types have to be unique. Thus Warning\_Type should have No\_Warning enumerator instead.

# 4.1.2 AADL ports mapping

Proposed ports mapping shown in table 4.6 is based on AADL runtime services from Annex 2 to "Programming Language Annex Document" [SCD14]. Additionally, the mapping contains SPARK 2005 contracts. Data types used by ports has to be defined earlier, to be visible. Moreover, for port communication, protected types are used, to enable concurrency.

Table 4.6: AADL to SPARK ports mapping.

AADL/BLESS	SPARK Ada
Port_Name :   in data port Port_Type;	spec (.ads):# own protected Port_Name : Port_Type_Store(Priority => 10)  procedure Receive_Port_Name;# global out Port_Name;  body (.adb): Port_Name : Port_Type_Store;  procedure Receive_Port_Name is begin TODO: implement receiving Port_Name value e.g.: Port_Name.Put(Some_Pkg.Get_Port_Name); end Receive_Port_Name;
Port_Name :    out data port Port_Type;	spec (.ads)# own protected Port_Name : Port_Type_Store(Priority => 10)  procedure Get_Port_Name(Port_Name_Out : out Port_Type);# global in Port_Name;# derives Port_Name_Out from Port_Name; body (.adb): Port_Name : Port_Type_Store;  procedure Get_Port_Name(Port_Name_Out : out Port_Type) is begin     Port_Name_Out := Port_Name.Get; end Get_Port_Name;
Port_Name : in event port;	spec (.ads) procedure Put_Port_Name;  body (.adb): procedure Put_Port_Name is begin TODO: implement event handler end Put_Port_Name;
	Continued on next page

Table 4.6 – continued from previous page

AADL/BLESS	SPARK Ada
,	
Port_Name :     out event port;	spec (.ads) procedure Send_Port_Name;
	body (.adb): procedure Send_Port_Name
	is begin
	TODO: implement receiving Port_Name value e.g.: Some_Pkg.Put_Port_Name; end Send_Port_Name;
Port_Name : in event data port Port_Type;	spec (.ads)# own protected Port_Name : Port_Type_Store(Priority => 10);
	<pre>procedure Put_Port_Name(Port_Name_In : Port_Type);# global out Port_Name;# derives Port_Name from Port_Name_In;</pre>
	body (.adb): Port_Name : Port_Type_Store;
	<pre>procedure Put_Port_Name (Port_Name_In : Port_Type) is begin</pre>
	<pre>Port_Name.Put(Port_Name_In); end Put_Port_Name;</pre>
David Warra	
Port_Name :     out event data port Port_Type;	spec (.ads)# own protected Port_Name : Port_Type_Store(Priority => 10);
	<pre>procedure Send_Port_Name;   # global in Port_Name;</pre>
	body (.adb): Port_Name : Port_Type_Store;
	procedure Send_Port_Name is
	<pre>begin   TODO: implement receiving Port_Name value   e.g.:</pre>
	Some_Pkg.Put_Port_Name(Port_Name); end Send_Port_Name;

# 4.1.3 Thread to task mapping

AADL Threads are mapped into SPARK Ada tasks according to table 4.7. Communication between threads is described in section 4.2.1.

Table 4.7: AADL threads to SPARK Ada tasks mapping.

,	SPARK Ada
package Some_Pkg	package Some_Pkg
thread Some_Thread	is
features	task type Some_Thread
Some_Port : out data port Port_Type;	# global out Some_Port;
end Some_Thread;	is
	pragma Priority(10);
thread implementation Some_Thread.imp	end Some_Thread;
end Some_Thread.imp;	end Some_Pkg;
end Some_Pkg;	
	package body Some_Pkg
	is
	st : Some_Thread;
	task body Some_Thread
	is
	begin
	loop
	implementation
	end loop;
	end Some_Thread;
	end Some_Pkg;

# 4.1.4 Subprograms mapping

Mappings of subprograms is also straightforward. However, it is different than mapping proposed in "AADL Code Generation Annex" [SCD14]. It does not use renames clause, but mapping directly to subprogram specification and body. For now, body is empty, because behavior (implementation) is not captured. Subprogram mapping should be revised and consulted with AADL committee members, in order to understand their design decisions.

**Table 4.8**: AADL subprograms to SPARK Ada subprograms mapping.

AADL/BLESS	SPARK Ada
subprogram sp features    e : in parameter T;    s : out parameter T; end sp;	<pre>procedure sp(e : in T; s : out T);  procedure sp(e : in T; s : out T) is begin   # implementation end sp;</pre>

# 4.1.5 Feature groups mapping

In SPARK Ada there are nested packages and child packages. Sample nested packages are shown in listing 4.1.5. Equivalent child packages are shown in listing 4.1.5. The name of a child package consists of the parent unit's name followed by the child package's identifier, separated by a period (dot) '.'. Calling convention is the same for child and nested packages (e.g. p.n in listings 4.1.5 and 4.1.5). However, there is a difference between nested packages and child packages. In nested package, declarations become visible as they are introduced, in textual order. For example, in listing 4.1.5 spec n cannot refer to m in any way. In case of child packages, with certain exceptions, all the functionality of the parent is available to a child and parent can access all its child packages. More precisely: all public and private declarations of the parent package are visible to all child packages. Private child package can be accessed only from parent's body.

```
package P is
   D: Integer;

-- a nested package:
   package N is
    X: Integer;
   private
    Foo: Integer;
   end N;

E: Integer;
private
   -- nested package in private section:
   package M is
    Y: Integer;
private
   Bar: Integer;
```

```
end M;
end P;
```

Listing 4.3: Nested packages in SPARK Ada

```
package P is
  D: Integer;
   E: Integer;
end P;
   a child package:
package P.N is
   X: Integer;
 private
   Foo: Integer;
end P.N;
-- a child private package:
private package M is
  Y: Integer;
private
 Bar: Integer;
end M;
```

**Listing 4.4**: Child packages in SPARK Ada

There was an idea to create child package to encapsulate one feature group in it. However, SPARK Ada does not allow to access child packages private part from parent. Thus, it will require to expose feature group internal variable as public. It is definitely not good solution. Thus, feature group is translated with prefix Feature\_Group\_Name\_\*. Feature group mapping is presented in section 4.1.6, in listings 4.1.6 and 4.1.6.

# 4.1.6 AADL package to SPARK Ada package mapping

On listing 4.1.6, there is sample AADL package with system. It contains all types of ports described in section 4.1.2 and one feature group with two ports as example of feature group mapping.

```
package Some_Pkg
public
with Base_Types;

feature group Some_Features
features
  Some_Out_Port: out data port Base_Types::Integer;
```

```
Some_In_Port: in data port Base_Types::Integer;
end Some_Features;

system Some_System
features
   Some_Feature_Group : feature group Some_Features;

In_Data_Port : in data port Base_Types::Integer;
Out_Data_Port : out data port Base_Types::Integer;
In_Event_Port : in event port;
Out_Event_Port : out event port;
In_Event_Data_Port : in event data port Base_Types::Integer;
Out_Event_Data_Port : out event data port Base_Types::Integer;
end Some_System;
end Some_Pkg;
```

Listing 4.5: Sample AADL package with system

For now, only single process SPARK Ada application is considered. Thus, ports are exposed only on system level. Communication between threads in process will be realized by protected objects and only SPARK annotations and data types will be needed as described in section 4.1.3. Based on ports mapping, presented in section 4.1.2, translation to SPARK Ada package is shown in listing 4.1.6.

```
package Some_Pkg
--# own Some_Features_Some_Out_Port : Integer;
--#
       Some_Features_Some_In_Port : Integer;
       In_Data_Port : Integer;
--#
--#
       Out_Data_Port : Integer;
--#
       In_Event_Data_Port : Integer;
       Out_Event_Data_Port : Integer;
--# initializes Some_Features_Some_Out_Port,
              Some_Features_Some_In_Port,
--#
--#
               In_Data_Port,
--#
               Out Data Port.
--#
               In_Event_Data_Port,
--#
               Out_Event_Data_Port;
   function Some_Features_Get_Some_Out_Port return Integer;
   --# global in Some_Features_Some_Out_Port;
   procedure Some_Features_Receive_Some_In_Port;
    --# global out Some_Features_Some_In_Port;
   procedure Receive_In_Data_Port;
    --# global out In_Data_Port;
   function Get_Out_Data_Port return Integer;
   --# global in Out_Data_Port;
   procedure Put_In_Event_Port;
   procedure Send_Out_Event_Port;
```

```
procedure Put_In_Event_Data_Port(In_Event_Data_Port_In : Integer);
   --# global out In_Event_Data_Port;
   --# derives In_Event_Data_Port from In_Event_Data_Port_In;
   procedure Send_Out_Event_Data_Port;
    --# global in Out_Event_Data_Port;
end Some_Pkg;
package body Some_Pkg
is
   Some_Features_Some_Out_Port : Integer := 0;
   Some_Features_Some_In_Port : Integer := 0;
   In_Data_Port : Integer := 0;
   Out_Data_Port : Integer := 0;
   In_Event_Data_Port : Integer := 0;
   Out_Event_Data_Port : Integer := 0;
   function Some_Features_Get_Some_Out_Port return Integer
   is
   begin
       return Some_Features_Some_Out_Port;
   end \ {\tt Some\_Features\_Get\_Some\_Out\_Port};
   procedure Some_Features_Receive_Some_In_Port
   is
   begin
       -- implementation
   end Some_Features_Receive_Some_In_Port;
   procedure Receive_In_Data_Port
   begin
        -- implementation
   end Receive_In_Data_Port;
   function Get_Out_Data_Port return Integer
   is
       return Out_Data_Port;
   end Get_Out_Data_Port;
   procedure Put_In_Event_Port
   begin
        -- implementation
   end Put_In_Event_Port;
   procedure Send_Out_Event_Port
   is
   begin
        -- implementation
   end Send_Out_Event_Port;
   procedure Put_In_Event_Data_Port(In_Event_Data_Port_In : Integer)
   begin
       In_Event_Data_Port := In_Event_Data_Port_In;
   end Put_In_Event_Data_Port;
   procedure Send_Out_Event_Data_Port
   is
   begin
        -- implementation
   end Send_Out_Event_Data_Port;
```

end Some\_Pkg;

**Listing 4.6**: Translation of sample AADL package from listing 4.1.6

# 4.1.7 AADL property set to SPARK Ada package mapping

There is no equivalent construct for AADL property set in SPARK Ada. Thus property set is mapped to SPARK Ada package. In this thesis, only properties of type constant addlinteger are considered. There are issues with using non-constant types in SPARK Ada package (e.g. when using them in some type definition). Table 4.9 shows sample property set mapping to SPARK Ada package.

**Table 4.9**: AADL property set to SPARK Ada package mapping

AADL	SPARK Ada
<pre>property set Some_Properties is    Some_Property1 : constant aadlinteger =&gt; 10;    Some_Property2 : constant aadlinteger =&gt; 27         applies to (all);    Some_Property3 : constant aadlinteger =&gt;</pre>	<pre>package Some_Properties is    Some_Property1 : constant Integer := 10;    Some_Property2 : constant Integer := 27;    Some_Property3 : constant Integer :=         Some_Property1; end Some_Properties;</pre>

In AADL, all declarations must have an applies to clause. It is ignored in resulted SPARK Ada translation. However, it can be used in the future e.g. for automatic generation of with clauses.

# 4.1.8 BLESS mapping

In cooperation with Brian Larson, translations for BLESS assertions, invariant, pre- and postconditions were created. Table 4.10 presents their mapping to SPARK Ada. Generated (translated) code may not be complete. Then developer's effort to implement missing parts

will be required. E.g. when assertion is specified in AADL/BLESS model, but not defined, it has to be implemented.

Table 4.10: BLESS to SPARK contracts mapping

${ m AADL/BLESS}$	SPARK Ada
BLESS::Assertion=>"< <cond1()>&gt;"</cond1()>	# assert COND1;
<pre>thread Some_Thread features   Some_Port : out event port   {BLESS:Assertion =&gt; "&lt;&lt;(Var1 &lt; Var2 and COND2())</pre>	<pre>task body Some_Thread is begin   loop    # assert (Var1 &lt; Var2 and COND2);   end loop; end Some_Thread;</pre>
<pre>thread implementation Some_Thread.imp annex BLESS {**    invariant &lt;&lt;(Some_Var &lt; Other_Var)&gt;&gt; **}; end Some_Thread.imp;</pre>	<pre>task body Some_Thread is begin   loop    # assert (Some_Var &lt; Other_Var);   end loop; end Some_Thread;</pre>
<pre>thread implementation Some_Thread.imp annex BLESS {**    assert    &lt;<state1 :="" :cond1()="" cond2()="" or="">&gt;    &lt;<var :="&lt;/td"><td><pre>task body Some_Thread is begin loop   # assert (COND1 or COND2)   #</pre></td></var></state1></pre>	<pre>task body Some_Thread is begin loop   # assert (COND1 or COND2)   #</pre>
	Continued on next page

Table 4.10 – continued from previous page

${ m AADL/BLESS}$	SPARK Ada
<pre>subprogram Some_Subprogram features   param : out parameter Base_Types::Integer; annex subBless {**    pre &lt;&lt;(param &gt; 0)&gt;&gt;    post &lt;&lt;(param = 0)&gt;&gt; **}; end Some_Subprogram;</pre>	<pre>procedure Some_Subprogram(Param : in out Integer) ;# pre Param &gt; 0;# post Param = 0;</pre>

# 4.2 Port-based communication

Communication between AADL components is realized by ports. AADL ports can be declared in subprograms, threads, processes, systems and other entities. In this section communication between threads in single-process SPARK Ada application (4.2.1) and concept of communication between two systems (4.2.2) are presented.

# 4.2.1 Threads communication

Example of communication between threads, in single process is depicted in the figure 4.2.1. There are two threads (some\_thread and other\_thread) in one process. AADL model and its translation to SPARK Ada is presented in the table 4.11. Connection between threads has to be specified in process implementation. Based on mappings from section 4.1, protected object is defined, but subprograms are skipped, because communication takes place only internally. The result of translation consists of two tasks and private global protected object, which enable communication between them. Additionally, both tasks has global annotation (one with out mode, other with in mode), which announce use of protected object in their bodies.

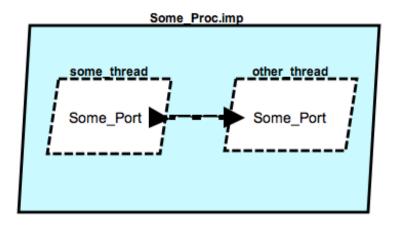


Figure 4.1: Example of port communication between threads

Threads can be also placed in different packages. The same example of two threads within one process, but in different packages is presented in table 4.12. In this case, subprograms present in mapping table, in section 4.2 are also present in resulted translation. Moreover, body of procedure Receive\_Some\_Port is implemented as a result of defined connection between threads in the process implementation, in AADL model.

```
Table 4.11: AADL threads communication to SPARK Ada tasks communication translation
AADL/BLESS SPARK Ada
SPARK Ada
  package Some_Pkg
                                                        with Base_Types;
  public
                                                        --# inherit Base_Types;
  with Base_Types;
                                                        package Some_Pkg
                                                        --# own task st : Some_Thread;
    process Some_Proc
                                                        --#
                                                                task ot : Other_Thread;
                                                                protected Some_Port : Base_Types.
    end Some_Proc;
                                                        --#
                                                            Integer_Store (Priority => 10);
    process implementation Some_Proc.imp
                                                        is
    subcomponents
      some_thread: thread Some_Thread.imp;
                                                        private
      other_thread: thread Other_Thread.imp;
                                                           task type Some_Thread
                                                           --# global out Some_Port;
      connection: port some_thread.Some_Port ->
                                                              pragma Priority (10);
       other_thread.Some_Port;
    end Some_Proc.imp;
                                                           end Some_Thread;
    thread Some_Thread
                                                           task type Other_Thread
      features
                                                           --# global in Some_Port;
        Some_Port : out data port Base_Types::
                                                              pragma Priority (10);
       Integer;
    end Some_Thread;
                                                           end Other_Thread;
                                                        end Some_Pkg;
    thread implementation Some_Thread.imp
    end Some_Thread.imp;
                                                        package body Some_Pkg
                                                        is
    thread Other_Thread
                                                           st : Some_Thread;
      features
                                                           ot : Other_Thread;
        Some_Port : in data port Base_Types::Integer
                                                           Some_Port : Base_Types.Integer_Store;
    end Other_Thread;
                                                           task body Some_Thread
    thread implementation Other_Thread.imp
                                                           begin
    end Other_Thread.imp;
                                                              loop
                                                                  - implementation
                                                              end loop;
  end Some_Pkg;
                                                           end Some_Thread;
                                                           task body Other_Thread
                                                           begin
                                                                  - implementation
                                                              end loop;
                                                           end Other_Thread;
                                                        end Some_Pkg;
```

Table 4.12: AADL threads communication to SPARK Ada tasks communication translation (multiple packages)

### AADL/BLESS SPARK Ada $\mathbf{with}\ \mathtt{Base\_Types};$ package Pkg1 public --# inherit Base\_Types; with Base\_Types, Pkg2; package Pkg1 -- # own task st : Some\_Thread; process Some\_Proc protected Some\_Port : Base\_Types.Integer\_Store (Priority => end Some\_Proc; 10): process implementation procedure Get\_Some\_Port(Some\_Port\_Out : out Integer); Some\_Proc.imp --# global in Some\_Port; --# derives Some\_Port\_Out from Some\_Port; subcomponents some\_thread: thread Some\_Thread.imp; other\_thread: thread Pkg2:: $task\ type\ Some\_Thread$ Other\_Thread.imp; --# global out Some\_Port; connections pragma Priority (10); connection: port some\_thread. Some\_Port -> other\_thread. end Some\_Thread; Some\_Port; end Pkg1; end Some\_Proc.imp; package body Pkg1 thread Some\_Thread features st : Some\_Thread; Some\_Port : out data port Some\_Port : Base\_Types.Integer\_Store; Base\_Types::Integer; end Some\_Thread; procedure Get\_Some\_Port(Some\_Port\_Out : out Integer) isthread implementation Some\_Thread.imp Some\_Port\_Out := Some\_Port.Get; end Some\_Thread.imp; end Get\_Some\_Port; task body Some\_Thread begin loop -- implementation end loop; end Some\_Thread; end Pkg1; Continued on next page

Table 4.12 – continued from previous page

AADL/BLESS	SPARK Ada
·	
package Pkg2	with Base_Types;
public	with Pkg1;
with Base_Types;	# inherit Base_Types,
	# Pkg1;
thread Other_Thread	package Pkg2
features	# own task ot : Other_Thread;
Some_Port : in data port	# protected Some_Port : Base_Types.Integer_Store (Priority =>
Base_Types::Integer;	10); is
end Other_Thread;	procedure Receive_Some_Port;
thread implementation	
	# global out Some_Port;# in Pkg1.Some_Port;
Other_Thread.imp end Other_Thread.imp;	# in Pkg1.Some_Port;
end Pkg2;	private
enu ragz,	task type Other_Thread
	# global in Some_Port;
	is
	pragma Priority (10);
	end Other_Thread;
	end Pkg2;
	package body Pkg2 is
	ot : Other_Thread;
	Some_Port : Base_Types.Integer_Store;
	procedure Receive_Some_Port is
	Temp: Integer; begin
	Pkg1.Get_Some_Port(Temp);
	Some_Port.Put(Temp);
	end Receive_Some_Port;
	task body Other_Thread
	is
	begin
	loop
	implementation
	end loop;
	end Other_Thread;
	end Pkg2;

In the given example, communication is one way: from Pkg1 package to Pkg2 package. Thus, Pkg1 package does not need to know that Pkg2 package exists. In other words: it does not need to "with" it. However, if two way communication is needed (between Pkg1 to Pkg2), then Pkg1 package has to "with" Pkg2 package. It is not a case in first example, where communication between threads take place in the same package. Modified model of second

example, with communication from Pkg2 to Pkg1, is depicted in the figure 4.2.1 and presented in listing 4.2.1.

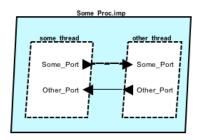


Figure 4.2: Example of two way port communication between threads in different packages

```
package Pkg1TwoWay
public
with Base_Types, Pkg2TwoWay;
  process Some_Proc
 end Some_Proc;
 process implementation Some_Proc.imp
 subcomponents
   some_thread: thread Some_Thread.imp;
   other_thread: thread Pkg2TwoWay::Other_Thread.imp;
 connections
   connection: port some_thread.Some_Port -> other_thread.Some_Port;
   connection2: port some_thread.Other_Port -> other_thread.Other_Port;
 end Some_Proc.imp;
 thread Some_Thread
   features
     Some_Port : out data port Base_Types::Integer;
     Other_Port : in data port Base_Types::Integer;
  end Some_Thread;
  thread implementation Some_Thread.imp
 end Some_Thread.imp;
end Pkg1TwoWay;
package Pkg2TwoWay
public
with Base_Types;
 thread Other_Thread
   features
     Some_Port : in data port Base_Types::Integer;
     Other_Port : out data port Base_Types::Integer;
  end Other_Thread;
 thread implementation Other_Thread.imp
  end Other_Thread.imp;
end Pkg2TwoWay;
```

**Listing 4.7**: AADL model of two way port communication threads in different packages

This model, translated to SPARK Ada is presented in listing 4.2.1. It will not compile. GNAT compiler returns circular unit dependency error. Additionally verification with SPARK Examiner returns error: Semantic Error 135 - The package Pkg2TwoWay is undeclared or not visible, or there is a circularity in the list of inherited packages. Now, the problem is that two-way communication is allowed in AADL, but not in SPARK, nor even in Ada. This require further investigation, which is omitted in this thesis.

```
with Base_Types;
with Pkg2TwoWay;
--# inherit Base_Types,
__#
           Pkg2TwoWay;
package Pkg1TwoWay
-- # own task st : Some_Thread;
--#
       protected Some_Port : Base_Types.Integer_Store (Priority => 10);
--#
       protected Other_Port : Base_Types.Integer_Store (Priority => 10);
is
   procedure Get_Some_Port(Some_Port_Out : out Integer);
   --# global in Some_Port;
   --# derives Some_Port_Out from Some_Port;
   procedure Receive_Other_Port;
   --# global out Other_Port;
   --#
             in Pkg2TwoWay.Other_Port;
private
   task type Some_Thread
   --# global out Some_Port;
      pragma Priority (10);
   end Some_Thread;
end Pkg1TwoWay;
package body Pkg1TwoWay
   st : Some_Thread;
   Some_Port : Base_Types.Integer_Store;
   Other_Port : Base_Types.Integer_Store;
   procedure Get_Some_Port(Some_Port_Out : out Integer)
   is
   begin
      Some_Port_Out := Some_Port.Get;
   end Get_Some_Port;
   procedure Receive_Other_Port
      Temp : Integer;
   begin
      Pkg2TwoWay.Get_Other_Port(Temp);
      Other_Port.Put(Temp);
   end Receive_Other_Port;
   task body Some_Thread
   begin
      loop
```

```
-- implementation
        null;
     end loop;
  end Some_Thread;
end Pkg1TwoWay;
with Base_Types;
with Pkg1TwoWay;
--# inherit Base_Types,
--#
          Pkg1TwoWay;
package Pkg2TwoWay
--# own task ot : Other_Thread;
     protected Some_Port : Base_Types.Integer_Store (Priority => 10);
       protected Other_Port : Base_Types.Integer_Store (Priority => 10);
--#
is
  procedure Receive_Some_Port;
   --# global out Some_Port;
             in Pkg1TwoWay.Some_Port;
  procedure Get_Other_Port(Other_Port_Out : out Integer);
  --# global in Other_Port;
  --# derives Other_Port_Out from Other_Port;
private
  task type Other_Thread
   --# global in Some_Port;
     pragma Priority (10);
   end Other_Thread;
end Pkg2TwoWay;
package body Pkg2TwoWay
  ot : Other_Thread;
  Some_Port : Base_Types.Integer_Store;
  Other_Port : Base_Types.Integer_Store;
   procedure Receive_Some_Port
     Temp : Integer;
  begin
     Pkg1TwoWay.Get_Some_Port(Temp);
     Some_Port.Put(Temp);
   end Receive_Some_Port;
  procedure Get_Other_Port(Other_Port_Out : out Integer)
  begin
     Other_Port_Out := Other_Port.Get;
   end Get_Other_Port;
   task body Other_Thread
   begin
     loop
         -- implementation
        null;
     end loop;
  end Other_Thread;
end Pkg2TwoWay;
```

**Listing 4.8**: Two way port communication translated to SPARK Ada

# 4.2.2 Systems communication

This section is a concept, how communication between different systems can look like. AADL system consists of process(es) and process consists of threads. Ports would be exposed by package if they are specified in system entity. Communication between two systems cab be described by another system. Figure 4.2.2 presents communication between two systems: panel and pump. AADL model of this system comprises 3 packages: Main, Panel and Pump. They are presented in listing 4.2.2. Panel package has one thread Panel\_Thread with two out ports: event port and event data port. Both ports are exposed by process panel\_process and then by system panel. Pump package has similar structure, but two in ports. Both are also exposed by process (pump\_process) and system (pump). Connection between these two packages are defined in Main package.

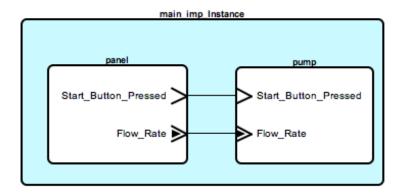


Figure 4.3: Example of port communication between systems

```
package Panel
public
with Base_Types;

thread Panel_Thread
features
   Start_Button_Pressed: out event port;
   Flow_Rate: out event data port Base_Types::Integer;
end Panel_Thread;

thread implementation Panel_Thread.imp
end Panel_Thread.imp;

process panel_process
```

```
features
     Start_Button_Pressed: out event port;
     Flow_Rate: out event data port Base_Types::Integer;
  end panel_process;
 process implementation panel_process.imp
   subcomponents
     panel_thread: thread Panel_Thread.imp;
   connections
     sbp: port panel_thread.Start_Button_Pressed->Start_Button_Pressed;
     fr: port panel_thread.Flow_Rate->Flow_Rate;
 end panel_process.imp;
 system panel
   features
     Start_Button_Pressed: out event port;
     Flow_Rate: out event data port Base_Types::Integer;
 end panel;
 system implementation panel.imp
   subcomponents
     panel_process: process panel_process.imp;
   connections
     sbp: port panel_process.Start_Button_Pressed->Start_Button_Pressed;
     fr: port panel_process.Flow_Rate->Flow_Rate;
 end panel.imp;
end Panel;
package Pump
public
with Base_Types;
  thread Rate_Controller
   features
     Start_Button_Pressed: in event port;
     Flow_Rate: in event data port Base_Types::Integer;
  end Rate_Controller;
  thread implementation Rate_Controller.imp
  end Rate_Controller.imp;
  process pump_process
   features
     Start_Button_Pressed : in event port;
     Flow_Rate: in event data port Base_Types::Integer;
 end pump_process;
 process implementation pump_process.imp
   subcomponents
     Rate_Controller: thread Rate_Controller.imp;
   connections
     sbp: port Start_Button_Pressed->Rate_Controller.Start_Button_Pressed;
     fr: port Flow_Rate->Rate_Controller.Flow_Rate;
 end pump_process.imp;
  system pump
   features
     Start_Button_Pressed : in event port;
     Flow_Rate: in event data port Base_Types::Integer;
  end pump;
  system implementation pump.imp
   subcomponents
     pump_process : process pump_process.imp;
```

```
connections
     sbp: port Start_Button_Pressed->pump_process.Start_Button_Pressed;
     fr: port Flow_Rate->pump_process.Flow_Rate;
 end pump.imp;
end Pump;
package Main
public
with Pump,
 Panel;
  system main
  end main:
  system implementation main.imp
   subcomponents
     panel: system Panel::panel.imp;
     pump: system Pump::pump.imp;
     sbp2sbp: port panel.Start_Button_Pressed->pump.Start_Button_Pressed;
     fr2fr: port panel.Flow_Rate->pump.Flow_Rate;
  end main.imp;
end Main;
```

**Listing 4.9**: AADL model of port communication between systems

Based on mappings from section 4.1, conforming SPARK Ada code is presented in listing 4.2.2. There are two packages: Panel and Pump. Main package is omitted. Both contain procedures representing ports interfaces, according to ports mapping from section 4.1.2. Additionally, both consists of empty thread declarations and bodies, which conforms to translations from section 4.1.3. However, in this case, both packages will work in different systems, thus different processes. To enable communication between different systems, deployment methodology and the middle-ware layer has to be created. It will allow not only for system to system communication, but also for communication with devices. It is omitted in this thesis.

```
with Pump;
with Base_Types;
--# inherit Pump,
--# Base_Types;
package Panel
--# own task pt : Panel_Thread;
--# protected Flow_Rate : Base_Types.Integer_Store (Priority => 10);
is
    procedure Send_Start_Button_Pressed;

procedure Send_Flow_Rate;
--# global in Flow_Rate;
--# out Pump.Flow_Rate;
```

```
private
   task type Panel_Thread
   --# global in out Flow_Rate;
       pragma Priority (10);
   end Panel_Thread;
end Panel;
package body Panel
is
   pt : Panel_Thread;
   Flow_Rate : Base_Types.Integer_Store;
   procedure Send_Start_Button_Pressed
   is
   begin
       Pump.Put_Start_Button_Pressed;
   end Send_Start_Button_Pressed;
   procedure Send_Flow_Rate
       Flow_Rate_Temp : Integer;
   begin
       Flow_Rate_Temp := Flow_Rate.Get;
       Pump.Put_Flow_Rate(Flow_Rate_Temp);
   end Send_Flow_Rate;
   task body Panel_Thread
   begin
     loop
        -- implementation
     end loop;
   end Panel_Thread;
end Panel;
with Base_Types;
--# inherit Base_Types;
package Pump
--# own task rc : Rate_Controller;
--# protected Flow_Rate : Base_Types.Integer_Store (Priority => 10);
   procedure Put_Start_Button_Pressed;
   procedure Put_Flow_Rate(Flow_Rate_In : Integer);
   --# global out Flow_Rate;
   --# derives Flow_Rate from Flow_Rate_In;
   task type Rate_Controller
   --# global in out Flow_Rate;
       pragma Priority (10);
   end Rate_Controller;
end Pump;
package body Pump
   rc : Rate_Controller;
   Flow_Rate : Base_Types.Integer_Store;
   procedure Put_Start_Button_Pressed
   is
   begin
```

```
-- TODO: implement event handler
end Put_Start_Button_Pressed;

procedure Put_Flow_Rate(Flow_Rate_In : Integer)
is
begin
    Flow_Rate.Put(Flow_Rate_In);
end Put_Flow_Rate;

task body Rate_Controller
is
begin
    loop
    -- implementation
    end loop;
end Rate_Controller;
end Pump;
```

Listing 4.10: Port communication translated to SPARK Ada

# 4.3 Automatic translator

The ultimate goal is to create translator, which performs translations described in 4.1 and 4.2 automatically. Automatic translator should enable translation of entire model and parts of the model. Initially, translator should support only subset of AADL entities: the system, process, thread, subprogram and port communication. The following functions should be supported:

- data types translation (as described in section 4.1.1)
- threads to tasks translation (as described in 4.1.3)
- single ports translation (based on section 4.1.2)
- subprogram to procedure/function translation (based on section 4.1.4)
- single package translation with system, which contains ports and feature groups (as described in section 4.1.6)
- property set mapping to SPARK Ada package (like in section 4.1.7)

Second step, would be to introduce BLESS support. Which means, add supported BLESS constructs described in section 4.1.8:

- assertions for threads
- pre- and postconditions for subprograms

Recommended way to create translator is to parse AADL models, create Abstract Syntax Tree (AST) and emit code using Visitor pattern. Parser and AST can be generated using ANTLR<sup>4</sup> (Another Tool for Language Recognition) and its grammar development environment ANTLRWorks<sup>5</sup>. ANTLR 4 (with ANTLRWorks 2) enable automatic AST creation and handle left recursion, which makes parser development much easier and faster. Another tool, Xtext<sup>6</sup> can be also used (instead of ANTLR) for parser and AST generator. For emitting code, StringTemplate<sup>7</sup> (template engine for generating code) can be used.

Development should be performed incrementally. From adding translation for the simplest constructs, like data types or single ports, to port communication and BLESS. First step, would be AADL grammar development. It is recommended to initially, specify only part of required AADL subset and then extend it incrementally. In order to do that, AADL Syntax Card<sup>8</sup> might be helpful. During translator development unit testing and Test Driven Development is recommended. Translation schemes can be used as input and expected output of particular test cases. It will help to ensure correctness of translator while working on new features support.

Additionally, automatic translator should work in two modes:

- Ravenscar: as described above, with protected objects and multiple tasks
- Sequential: single-threaded application, without notion of tasks and protected objects

<sup>&</sup>lt;sup>4</sup>http://www.antlr.org/

<sup>&</sup>lt;sup>5</sup>http://tunnelvisionlabs.com/products/demo/antlrworks

<sup>&</sup>lt;sup>6</sup>http://www.eclipse.org/Xtext/index.html

<sup>&</sup>lt;sup>7</sup>http://www.stringtemplate.org/

<sup>8</sup>https://wiki.sei.cmu.edu/aadl/images/d/d2/AADL V2.1 Syntax Card.pdf

# Chapter 5

# PCA pump prototype implementation and code generation

This chapter describes running SPARK Ada programs on BeagleBoard-xM platform (3.3), implementation details of PCA pump prototype (5.2)) and code generation from simplified AADL/BLESS models of PCA pump (5.3). All programs presented in this section works the same on Intel processor (PC or MacBook) and on BeagleBoard-xM (ARM device).

# 5.1 Running SPARK Ada programs on BeagleBoard-xM

To run SPARK Ada program on BeagleBoard-xM, it has to be cross-compiled. As an IDE for SPARK Ada development, GNAT Programming Studio (GPS) is used (see section 2.5.2). To create "Hello, World!" application, new Ada project has been created (choosing Project/New... from the menu). Then main.adb file, with procedure Main printing "Hello, World!" in standard output, was added. The code is presented in listing 5.1. It is valid Ada 2005 and Ada 2012 code.

with Ada.Text\_IO;

```
procedure Main
is
begin
    Ada.Text_IO.Put_Line("Hello, World!");
end Main;
```

Listing 5.1: "Hello World" in Ada

The main file has to be always specified in project file (.gpr) in order to compile and link application, which can be runnable. It can be done in Project/Edit Project Properties (figure 5.1), tab: Main files (figure 5.1) or directly in project file (.gpr).

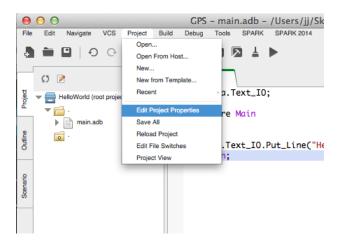


Figure 5.1: Edit Project Properties

To enable cross-compilation, for current version of cross-compiler, environmental variable \\senv\_prefix has to be set to directory, which contains /lib and /usr directories. Latter should also contains /usr/lib and /usr/include subdirectories. After mentioned directories has been copied into /home/super/angstrom-arm directory, \\senv\_prefix has been exported with following command: export env\_prefix=/home/super/angstrom-arm. Entire project can be compiled and linked with following command: arm-linux-gnueabi-gnatmake -d -Phelloworld.gpr (where helloworld.gpr is GNAT Programming Studio project file). Additional flags can be specified in command line or directly in project file (manually or through GNAT Programming Studio Interface).

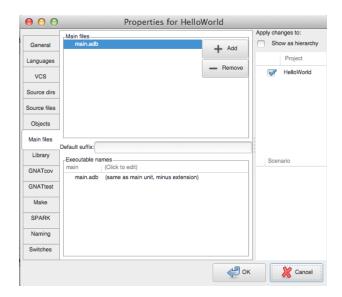


Figure 5.2: Project Main files

More complex example, which takes advantage of SPARK contracts is presented in section 5.1.1.

# 5.1.1 Odometer

Odometer is a simple SPARK Ada program, which implements basic functions of standard Odometer. Listing 5.1.1 shows Odometer in SPARK 2005. In addition to Odometer

```
package Odometer
--# own
--# Trip,
                  -- number of meters so far on this trip (can be reset to 0).
--# Total
                 -- total meters traveled of vehicle since the last factory-reset.
--#
    : Natural; -- has range 0 .. Integer'Last.
--# initializes Trip,
--#
                Total:
is
    \mathbf{procedure} \mathbf{Zero\_Trip}; -- sets \mathsf{Trip} to 0 and clears all saved \mathsf{Trip} marks.
    --# global out Trip;
    --# derives Trip from ;
    --# post Trip = 0;
    function Read_Trip return Natural; -- returns value of Trip.
    --# global in Trip;
    --# return Trip;
    function Read_Total return Natural; -- returns value of Total
    --# global in Total;
    --# return Total;
```

```
procedure Inc; -- increments each of Trip and Total by 1.
   --# global in out Trip, Total;
   --# derives Trip from Trip & Total from Total;
   -- # pre Trip < Integer'Last and Total < Integer'Last;
    --# post Trip = Trip~ + 1 and Total = Total~ + 1;
end Odometer;
package body Odometer is
   Trip : Natural := 0;
   Total : Natural := 0;
   procedure Zero_Trip is
   begin
       Trip := 0;
   end Zero_Trip;
   function Read_Trip return Natural is
   begin
       return Trip;
   end Read_Trip;
   function Read_Total return Natural is
       return Total;
   end Read_Total;
   procedure Inc is
   begin
       Trip := Trip + 1;
       Total := Total + 1;
   end Inc;
end Odometer;
```

Listing 5.2: SPARK 2005 code: Odometer

There are 4 subprograms (2 procedures and 2 functions), which are globally available (through other packages and program units):

- zero\_Trip procedure reset Odometer to 0
- Read\_Trip function returns current distance
- Read Total function returns total distance traveled
- Inc procedure increment total and current distance by 1

Given program contains code contracts. Tough it does not matter in compilation phase, it shows that SPARK verification tools can be used for given example.

Annotation global means that subprogram uses some global variable. Postfix in, out or in out means that particular variable is read, write or read and write respectively. Annotation

derives says that some variable value depends on other variables. E.g. in procedure Inc variable Trip is dependent on its current value (before procedure call). Annotations pre and post define pre- and postconditions of procedure. We can see, that in Zero\_Trip procedure postcondition requires that variable Trip is equal to 0. In procedure Inc, postconditions requires that variables Trip and Total are incremented by 1 ('~' is the value of variable before procedure call). Annotation own expose private variables for use in public methods specification. Annotation initializes ensures that given variables are initializes.

In order to test Odometer package in runtime, the Main procedure has been created. It is presented in listing 5.1.1.

```
with Ada.Text_IO;
with Odometer;
procedure Main
begin
   Ada.Text_IO.Put_Line("Trip: " & Natural', Image(Odometer.Read_Trip));
   Ada.Text_IO.Put_Line("Total: " & Natural', Image(Odometer.Read_Total));
   Odometer.Inc:
   Ada.Text_IO.Put_Line("Trip: " & Natural', Image(Odometer.Read_Trip));
   Ada.Text_IO.Put_Line("Total: " & Natural'Image(Odometer.Read_Total));
   Odometer.Zero_Trip;
   Ada.Text_IO.Put_Line("Trip: " & Natural'Image(Odometer.Read_Trip));
   Ada.Text_IO.Put_Line("Total: " & Natural', Image(Odometer.Read_Total));
   Odometer.Inc;
   Ada.Text_IO.Put_Line("Trip: " & Natural'Image(Odometer.Read_Trip));
   Ada.Text_IO.Put_Line("Total: " & Natural'Image(Odometer.Read_Total));
end Main;
```

Listing 5.3: Main procedure for Daometer package

Odometer in SPARK 2005 works fine on BeagleBoard-xM. In order to test SPARK 2014 program, SPARK 2005 annotations has been converted into Ada 2012 contracts. Listing 5.4 presents Odometer in SPARK 2014.

```
package Odometer
with Abstract_State => (Trip_State, Total_State)
is
   function Trip_State return Integer
   with Convention => Ghost,
   Global => (Input => Trip_State);
```

```
function Total_State return Integer
    with Convention => Ghost,
    Global => (Input => Total_State);
   procedure Zero_Trip -- sets Trip to 0
    with Global => (Output => (Trip_State)),
    Depends => (Trip_State => null),
    Post => Trip_State = 0;
   function Read_Trip return Natural -- returns value of Trip.
    with Global => (Input => Trip_State),
    Post => Read_Trip'Result = Trip_State;
   function Read_Total return Natural -- returns value of Total
    with Global => (Input => Total_State),
    Post => Read_Total'Result = Total_State;
   procedure Inc -- increments each of Trip and Total by 1.
    with Global => (In_Out => (Trip_State, Total_State)),
    Depends => (Trip_State => Trip_State, Total_State => Total_State),
    Pre => Trip_State < Integer'Last and Total_State < Integer'Last,</pre>
    Post => Trip_State = Trip_State'0ld + 1 and Total_State = Total_State'0ld + 1;
end Odometer;
package body Odometer
with
 Refined_State => (Trip_State => (Trip),
                   Total_State => (Total))
  Trip : Natural;
  Total : Natural;
   function Trip_State return Integer
    with Refined_Global => (Input => Trip)
  begin
     return Trip;
   end Trip_State;
   function Total_State return Integer
    with Refined_Global => (Input => Total)
   is
   begin
     return Total;
   end Total_State;
   procedure Zero_Trip
    with Refined_Global => (Output => Trip),
    Refined_Depends => (Trip => null)
   is
   begin
     Trip := 0;
   end Zero_Trip;
   function Read_Trip return Natural
    with Refined_Global => (Input => Trip)
   begin
     return Trip;
   end Read_Trip;
   function Read_Total return Natural
    with Refined_Global => (Input => Total)
```

```
begin
    return Total;
end Read_Total;

procedure Inc
    with Refined_Global => (In_Out => (Trip, Total)),
    Refined_Depends => (Trip => Trip, Total => Total)
is
begin
    Trip := Trip + 1;
    Total := Total + 1;
end Inc;
end Odometer;
```

Listing 5.4: SPARK 2014 code: Odometer

Odometer example was created to check possible limitations and issues related to different platform (ARM-based). No limitations were found.

# 5.1.2 Multitasking applications

In Ada World, concurrency is referred as tasking and the task is the same construct as the thread in other programming languages. In section 5.1.1, single-tasking application was tested. This section presents simple Ada multitasking application and multitasking version of Odometer in SPARK 2005 from section 5.1.1. Both applications compiles correctly and works as expected on BeagleBoard-xM platform.

## Ada multitasking application

Listing 5.1.2 presents a simple multitasking application printing numbers in different time intervals, in Ada 2005. It is also valid code for Ada 2012. There are 3 tasks:

- Main task
- S (type: seconds) simple counter printing numbers form 1 to 10 in every second
- T (type: Tenth\_Seconds) simple counter printing numbers from 0.1 to 10 in every 0.1 second

```
with Ada.Text_IO;
use Ada.Text_IO;
with Ada.Float_Text_IO;
procedure Main is
   task type Seconds is
   end Seconds;
   task type Tenth_Seconds is
   end Tenth_Seconds;
   S : Seconds;
   T : Tenth_Seconds;
   task body Seconds is
   begin
       for I in 1..10 loop
            delay Standard.Duration(1);
           Put_Line(Integer', Image(I));
        end loop;
   end Seconds;
   task body Tenth_Seconds is
   begin
       for I in 1..100 loop
            Ada.Float_Text_IO.Put(Float(I)/Float(10), AFT=>2, EXP=>0);
           Put_Line("");
        end loop;
   end Tenth_Seconds;
begin
   Put_Line("Started");
end Main;
```

Listing 5.5: Simple multitask application in Ada

The program works as expected on BleagleBoard-xM. This is not valid SPARK program though. As mentioned in section 2.5.3, tasks can be declared only in packages. Not in

### SPARK Ada multitasking application

As mentioned in section 2.5.3, in SPARK 2005 multitasking is possible with Ravenscar Profile. Default profile - sequential - does not enable tasking. In other words, SPARK tools cannot analyze and reason about programs if Ravenscar profile flag is not provided. In SPARK 2014 - for now tasking is not possible. It's part of SPARK 2014 road map to include support for tasking in the future. Thus, only SPARK 2005 application was tested.

Tested, multitasking application is extended version of Odometer presented in listing 5.1.1. It has additional variable speed, procedure set\_speed and new task: Drive. Thus, in total it has two tasks:

- Main
- Drive

The Drive task increase Total and Trip variables by Speed (m/s) in every second. Extended Odometer is presented in listing 5.1.2.

```
--# inherit Ada.Real_Time;

package Odometer

--# own Trip: Distance;

--# Total: Distance;

--# Speed: Meters_Per_Second;

--# task d: Drive;

--# initializes Trip,

--# Total,

--# Speed;

is

type Distance is range Natural'First .. Natural'Last;

pragma Atomic (Distance);

type Meters_Per_Second is range Natural'First .. Natural'Last;

pragma Atomic (Meters_Per_Second);
```

```
procedure Zero_Trip; -- sets Trip to 0 and clears all saved Trip marks.
    --# global out Trip;
    --# derives Trip from ;
    --# post Trip = 0;
    function Read_Trip return Distance; -- returns value of Trip.
    --# global in Trip;
    --# return Trip;
    function Read_Total return Distance; -- returns value of Total
    --# global in Total;
    --# return Total;
    \mathbf{procedure} Inc; -- increments each of Trip and Total by 1.
    --# global in out Trip, Total;
    --# derives Trip from Trip & Total from Total;
    --# pre Trip < Distance'Last and Total < Distance'Last;
    --# post Trip = Trip~ + 1 and Total = Total~ + 1;
    procedure Set_Speed(New_Speed : Meters_Per_Second);
    --# global out Speed;
    --# derives Speed from New_Speed;
    --# post Speed = New_Speed;
private
    task type Drive
    --# global in
                     Speed;
    --#
             in out Trip;
             in out Total;
    --#
              in Ada.Real_Time.ClockTime;
    --#
    is
       pragma Priority(10);
    end Drive;
end Odometer;
with Ada.Real_Time;
use type Ada.Real_Time.Time;
package body Odometer is
   Trip : Distance := 0;
```

```
Total : Distance := 0;
Speed : Meters_Per_Second := 0;
d : Drive;
procedure Zero_Trip is
begin
   Trip := 0;
end Zero_Trip;
function Read_Trip return Distance is
begin
   return Trip;
end Read_Trip;
function Read_Total return Distance is
begin
   return Total;
end Read_Total;
procedure Inc is
begin
   Trip := Trip + 1;
   Total := Total + 1;
end Inc;
procedure Set_Speed(New_Speed : Meters_Per_Second)
begin
   Speed := New_Speed;
end Set_Speed;
task body Drive
is
   Release_Time : Ada.Real_Time.Time;
   Period : constant Integer := 1000; -- update in every second
begin
   loop
       Release_Time := Ada.Real_Time.Clock + Ada.Real_Time.Milliseconds(Period);
       delay until Release_Time;
```

```
-- each time round, increase Trip and Total

for I in Meters_Per_Second range 0 .. Speed loop

Inc;

end loop;

end loop;

end Drive;

end Odometer;
```

**Listing 5.6**: Multitasking Odometer

There are two ways to access protected variable in task body:

- It has to be protected object
- It has to be atomic type

Protected variables may not be used in proof contexts. Thus, if we try to use protected variable in proofs (pre- or postcondition), then we get semantic error: Trip is a protected own variable. To preserve pre- and postconditions from original Odometer, atomic types (Distance and Meters\_Per\_Second) has been used. The capability to specify pre- and postconditions has been preserved, but now application is not thread safe.

### 5.1.3 Controlling PCA pump actuator

PCA pump prototype created as part of this thesis interacts with external device (physical pump) through General-purpose input/output (GPIO) pin. To control the pump, Pulse width modulation (described in 3.3) is used. BeagleBoard-xM has 28 GPIO pins. Three of them are PWM enable (pin 4 - mapped as GPIO\_144, pin 6 - GPIO\_146 and pin 10 - GPIO\_145). All of these pins allow to control external device by specifying frequency and duty cycle. However it requires PWM driver<sup>1</sup>. PWM can be also simulated manually. To run the pump, pin has to be turned on and off with specified frequency. In order to do that, sleep function can be used.

<sup>&</sup>lt;sup>1</sup>http://beagleboard.org/project/PWM+driver+for+Beagle+Board/

GPIO ports interact with the BeagleBoard platform through memory maps. This means that turning particular pin on or off is achieved by writing values into a memory segment associated with the pin. Memory segment is further mapped into file system. Memory maps are synchronized via continuous refresh loops.

Pin, used for controlling PCA pump, is the pin 14 (mapped as GPIO\_162). It is mapped into directory /sys/class/gpio/gpio162/. To turn pin on, file /sys/class/gpio/gpio162/value has to contain '1'. To turn it off - '0'. Pump is also connected to ground (GND). In that purpose pin 28 is used. Listing 5.1.3 shows simple bash script, which turns pin on and off every second. Before pin can be used, it has to be opened by writing pin mapping number (in this case: 162 for pin 14) into /sys/class/gpio/export file. When communication is over, connection should be closed with writing the same value to file /sys/class/gpio/unexport. Setting 'high' (1) for 1 second and 'low' (0) also for 1 second gives 50% duty cycle.

```
#!/bin/sh
if [ $# = 0 ]
then
  GPI0=162
else
  GPIO=$1
fi
cleanup() {
  echo $GPIO > /sys/class/gpio/unexport
  exit
}
trap cleanup SIGINT
echo $GPIO > /sys/class/gpio/export
echo "out" > /sys/class/gpio/gpio$GPIO/direction
while [ "1" = "1" ]; do
  echo "1" > /sys/class/gpio/gpio$GPIO/value
```

```
sleep 1
echo "0" > /sys/class/gpio/gpio$GPIO/value
sleep 1
done
```

Listing 5.7: Turning pin on and off

Initial tests of interaction with pump actuator has been made in bash and Java, because it does not require cross-compilation. Bash script runs natively on Angstrom Linux. Java application - on JVM distribution for Angstrom.

BeagleBoard-xM with Linux Angstrom allows to install software packages using package manager opkg<sup>2</sup>. Packages feeds can be found on http://feeds.angstrom-distribution.org/feeds and set in .conf files in /etc/opkg directory. In this thesis version 2012.01 of Angstrom (with Linux 3.0.14+) has been used and the following feeds:

- base-feed.conf: src/gz base http://feeds.angstrom-distribution.org/feeds/v2012.05/ipk/eglibc/armv7a/base
- beagleboard-feed.conf: src/gz beagleboard http://feeds.angstrom-distribution.org/feeds/v2012.05/ipk/eglibc/armv7a/beagleboard
- debug-feed.conf: src/gz debug http://feeds.angstrom-distribution.org/feeds/v2012.05/ipk/eglibc/armv7a/
   debug
- gstreamer-feed.conf: src/gz gstreamer http://feeds.angstrom-distribution.org/feeds/v2012.05/ipk/eglibc/armv7a/gstreamer
- noarch-feed.conf: src/gz no-arch http://feeds.angstrom-distribution.org/feeds/v2012.05/ipk/eglibc/armv7a/all

<sup>&</sup>lt;sup>2</sup>http://wiki.openwrt.org/doc/techref/opkg

- perl-feed.conf: src/gz perl http://feeds.angstrom-distribution.org/feeds/v2012.05/ipk/eglibc/armv7a/perl
- python-feed.conf: src/gz python http://feeds.angstrom-distribution.org/feeds/v2012.05/ipk/eglibc/armv7a/python

Once, feeds are set, it is recommended to update list of available packages with command: opkg update. To update all installed packages, following command has to be used: opkg upgrade. To install Java runtime-environment (JVM), the following command can be used: opkg install openjdk-6-java. Java Development Kit, which contains Java compiler and allows to compile Java programs on BeagleBoard, can be installed with: opkg install openjdk-6-jdk.

Similar program to bash script presented in listing 5.1.3, but working for 20 seconds and terminating, written in Java is presented in listing 5.1.3.

```
import java.io.*;
public class PcaMain {
 public static void main(String[] args) throws IOException, InterruptedException {
   final String GPIO = "162";
   final String BASE_DIR = "/sys/class/gpio";
   WriteToFile(BASE_DIR+"/export", GPIO);
   WriteToFile(BASE_DIR+"/gpio"+GPIO+"/direction", "out");
   for(int i=0; i<10; ++i) {</pre>
            WriteToFile(BASE_DIR+"/gpio"+GPIO+"/value", "1");
            Thread.sleep(1000);
     WriteToFile(BASE_DIR+"/gpio"+GPIO+"/value", "0");
            Thread.sleep(1000);
   WriteToFile(BASE_DIR+"/unexport", GPIO);
 }
 public static void WriteToFile(String filename, String content) throws IOException {
   File file = new File(filename);
   if (!file.exists()) {
     file.createNewFile();
   }
```

```
PrintWriter writer = new PrintWriter(filename, "UTF-8");
    writer.println(content);
    writer.close();
}
```

Listing 5.8: Turning pin on and off

Extended program from listing 5.1.3, with procedures to start and stop the pump, written in Ada, is presented in listing 5.1.3.

```
with Ada.Real_Time;
use type Ada.Real_Time.Time;
package Pca_Pump is
  procedure Start_Pump;
  procedure Stop_Pump;
  procedure Run_Pump(N: in Integer);
  procedure Write_Signal(Signal: in Integer);
end Pca_Pump;
with Ada.Strings.Unbounded;
use type Ada.Strings.Unbounded;
with Ada.Text_IO.Unbounded_IO;
use type Ada.Text_IO;
package body Pca_Pump
   procedure Start_Pump is
          : Ada.Text_IO.File_Type;
     Data : Unbounded_String := To_Unbounded_String("pumping");
     File_Export : Ada.Text_IO.File_Type;
     File_Direction : Ada.Text_IO.File_Type;
   begin
     Create(File_Export, Ada.Text_IO.Out_File, "/sys/class/gpio/export");
     Put_Line(File_Export, "162");
     Close(File_Export);
     Create(File_Direction, Ada.Text_IO.Out_File, "/sys/class/gpio/gpio162/direction");
     Put_Line(File_Direction, "out");
     Close(File_Direction);
```

```
Create(F, Ada.Text_IO.Out_File, "/home/root/pump_status.txt");
   Unbounded_IO.Put_Line(F, Data);
   Put_Line("Pumping...");
   Close(F);
end Start_Pump;
procedure Stop_Pump is
        : Ada.Text_IO.File_Type;
   Data : Unbounded_String := To_Unbounded_String("IDLE");
   File_Unexport : Ada.Text_IO.File_Type;
   Create(File_Unexport, Ada.Text_IO.Out_File, "/sys/class/gpio/unexport");
   Put_Line(File_Unexport, "162");
   Close(File_Unexport);
   Create(F, Ada.Text_IO.Out_File, "/home/root/pump_status.txt");
   Unbounded_IO.Put_Line(F, Data);
   Put_Line("Stopped");
   Close(F);
end Stop_Pump;
procedure Run_Pump(N: in Integer) is
   Interval: constant Ada.Real_Time.Time_Span := Ada.Real_Time.Milliseconds(100);
   Next_Time: Ada.Real_Time.Time;
begin
   Next_Time := Ada.Real_Time.Clock;
   Start_Pump;
   for I in Integer range 1 .. N*1000 loop
Next_Time := Next_Time + Interval;
      Write_Signal(1);
      delay until Next_Time;
      Next_Time := Next_Time + Interval;
      Write_Signal(0);
      delay until Next_Time;
   end loop;
   Stop_Pump;
end Run_Pump;
```

```
procedure Write_Signal(Signal : in Integer) is
     Filename : String := "/sys/class/gpio/gpio162/value";
     File : Ada.Text_IO.File_Type;
     Data : Unbounded_String;
   begin
      Ada.Text_IO.Open (File => File,
                        Mode => Ada.Text_IO.Out_File,
                        Name => Filename);
     if Signal = 1 then
        Data := To_Unbounded_String("1");
        Data := To_Unbounded_String("0");
     end if;
     Unbounded_IO.Put_Line(File, Data);
     Ada.Text_IO.Close(File);
   end Write_Signal;
end Pca_Pump;
```

**Listing 5.9**: Turning pin on and off

# 5.2 Implementation based on Requirements Document and AADL models

In order to confirm that implementation of PCA Pump, specified in Requirements Document, is feasible on BeagleBoard-xM, simple PCA pump prototype has been created. Implemented prototype is multitasking application (using Ravenscar profile) running on BeagleBoard-xM. The base for implementation was Pca\_Operation package. Only two AADL threads are implemented: Rate\_Controler and Max\_Drug\_Per\_Hour\_Watcher. Thus, pump has three tasks in total:

• main task - interface for controlling and monitoring the pump

- Rate\_Controller control the speed of infusion rate
- Max\_Drug\_Per\_Hour\_Watcher control over infusion

The first step was to translate types required by operation module. Strings and float types were skipped to keep verification simple (using only integer types and its subtypes). Besides that, all types from following packages are translated:

- Base\_Types
- Bless\_Types
- Ice\_Types
- Pca\_Types

The Open PCA pump, according to requirements document [Lar14], has 5 operational modes:

- Stopped: F = 0ml/hr
- Keep Vein Open (KVO): F = 0.1ml/hr
- Basal infusion:  $F = F_{Basal}$
- Patient bolus:  $F = F_{Basal} + F_{Bolus}$
- Clinician bolus:  $F = F_{Basal} + F_{Square_{Bolus}}$  (square bolus is calculated value: VTBI divided by the duration chosen by the clinician)

Requirements document does not specify implementation details. One of implementation decisions, which had to be made, was to decide how basal infusion will work. One solution was to run actuator continuously on speed calculated based on current flow rate. Another solution was to dose drug in 0.1 ml increments. This is how CADD-Prizm Ambulatory

Infusion Pump [Med10] works and this implementation was chosen. It allows for easier bolus monitoring and calculations. Pump engine controller is separated module. It is written in Ada, so it will not be verified with SPARK tools. Using increments, instead of continues speed allows to issue request of 0.1 ml dose to engine module, and it is its responsibility to deliver requested amount of dose. Performing calculations based on speed changes would be much more complicated. For monitoring, amount of drug dosed in last hour (to guard against over infusion), array with size = (60 \* 60) has been created. Its elements represents all seconds of last hour. Last element is incremented once request to the engine is issued. This is done in Bate\_Controller task. Max\_Drug\_Per\_Hour\_Watcher checks dosed amount by summing all elements. It also shifts array in every second, so doses older than 1 hour are not take into account anymore.

To avoid using floating point types, internal calculations are in micro liters: 1 micro liter  $(\mu l) = 0.001 \text{ ml}$ , thus 1 ml =  $1000 \mu l$ .

In real-world applications, the embedded critical components are written in SPARK while the non-critical components are written in Ada. Components written in Ada should be hidden for SPARK Examiner with --# hide annotation or being separated entities on which SPARK tools are not run. Pca\_Engine package is separated entity, which control the pump actuator. It use Ada features not present in SPARK, thus it is not verified by SPARK tools.

Implemented PCA pump prototype is console Ada application with textual interface, which has following functionalities:

- Entering prescription, which comprises of following parameters:
  - Basal flow rate
  - Volume to be infused (VTBI) during patient or clinician bolus
  - Maximum dose of drug allowed per hour
  - Minimum time between patient's boluses

- Starting the pump
- Stopping the pump
- Monitoring drug dosed in last hour: when maximum allowed dose is exceeded, it switches pump state to KVO rate
- Performing patient bolus:

Α

- if bolus request too soon (faster than minimum time between bolus) then it is ignored
- if bolus is requested during clinician bolus, then clinician bolus is paused and patient bolus starts; once patient bolus is done, pump switches back to clinician bolus
- Performing clinician bolus (time has to be specified):
  - bolus requested during previously requested (not finished) clinician bolus is ignored
- bolus requested during patient bolus is performed right after patient bolus is done

Code listing of implemented PCA pump along with mapped types is attached in appendix

### 5.3 Code generation from AADL/BLESS models

The original AADL/BLESS models were simplified and truncated to demonstrate sample translation. Finally only PCA\_Operation module with 3 threads (Max\_Drug\_Per\_Hour\_Watcher, Rate\_Controller, Patient\_Bolus\_Checker), types definitions (Base\_Types, PCA\_Types, ICE\_Types, Bless\_Types) and property set PCA\_Properties were used as the source for code translation. Simplified

AADL/BLESS models can be found in appendix C. The translation was performed based on translation schemes from chapter 4. Appendix D contains translated PCA pump code.

Raw, translated code cannot be verified with SPARK tools, because it contains not implemented parts. E.g. translated from BLESS assertions, which are defined but not implemented in models. Once, these missing parts will be implemented, code can be verified.

[ADD SOME LISTINGS HERE? SHOW WHICH PARTS HAVE TO BE IMPLEMENTED?]

# Chapter 6

# Verification

The strategy for Software Verification using SPARK tools is as follows. First, Examiner generates and discharge some Verification Conditions (VCs) and Dead Path Conjectures (DPCs). Next, SPARKSimp runs Simplifier to simplify and discharge some (or all) VCs, which were not discharged by Examiner. SPARKSimp runs also ZombieScope to analyze DPCs and ViCToR to discharge VCs (not discharged by Examiner nor Simplifier) with SMT Solver. To get summary of results, POGS report is generated. In case, when not all Verification Conditions are discharged, analysis continues with Bakar Kiasan. After fixes made with Kiasan help, Examiner and SPARKSimp tools are run again to confirm correctness. This approach is presented in the figure 6. Detailed overview of SPARK verification tools can be found in chapter 12 of SPARK book [Bar13].

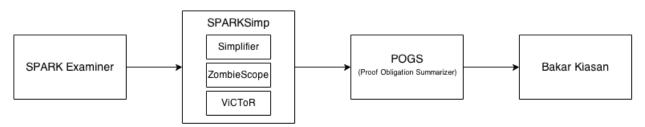


Figure 6.1: SPARK verification strategy

### 6.1 Verification of implemented prototype

During PCA pump prototype implementation, syntax was regularly checked with SPARK Examiner. Complete, manually implemented prototype, which can be found in appendix A, was verified with strategy given at the beginning of this chapter (excluding Bakar Kiasan, which does not handle Ravenscar programs). Thus SPARK Examiner, SPARKSimp (Simplifier, ZombieScope and ViCToR) and POGS were used. The result of this analysis, in the form of POGS report summary, is presented in listing 6.1. Full report can be found in appendix B.

Three false VCs applies to Pca\_Engine module, which should not be taken into account during verification, thus they are ignored. 30% (90) of VCs were discharged by Examiner and 60% (183) by Simplifier. There are 29 undischarged VCs. In addition to VCs, DPCs were generated and 32 dead paths were found. Some undischarged VCs and dead paths come from procedures responsible for maximum dose monitoring. As mentioned in chapter 2.6.9, Bakar Kiasan does not support Ravenscar profile. Thus, to be able to analyze monitoring dosed amount of drug, separate, sequential module was created. Verification process of this module is described in section 6.2.

# Summary: The following subprograms have VCs proved false: 1 /Users/jj/aadl-medical/pca-pump-beagleboard/pca\_ravenscar/pca\_engine/start\_pumping.vcg 1 /Users/jj/aadl-medical/pca-pump-beagleboard/pca\_ravenscar/pca\_engine/stop\_pumping.vcg 1 /Users/jj/aadl-medical/pca-pump-beagleboard/pca\_ravenscar/pca\_engine/write\_signal.vcg The following subprograms have undischarged VCs (excluding those proved false): 2 /Users/jj/aadl-medical/pca-pump-beagleboard/pca\_ravenscar/pca\_operation/get\_time\_between\_activations.vcg 1 /Users/jj/aadl-medical/pca-pump-beagleboard/pca\_ravenscar/pca\_operation/integer\_array\_store/get.vcg 1 /Users/jj/aadl-medical/pca-pump-beagleboard/pca\_ravenscar/pca\_operation/integer\_array\_store/put.vcg 2 /Users/jj/aadl-medical/pca-pump-beagleboard/pca\_ravenscar/pca\_operation/integer\_array\_store/put.vcg 1 /Users/jj/aadl-medical/pca-pump-beagleboard/pca\_ravenscar/pca\_operation/integer\_array\_store/sum.vcg 1 /Users/jj/aadl-medical/pca-pump-beagleboard/pca\_ravenscar/pca\_operation/max\_drug\_per\_hour\_watcher.vcg 1 /Users/jj/aadl-medical/pca-pump-beagleboard/pca\_ravenscar/pca\_operation/max\_drug\_per\_hour\_watcher.vcg 1 /Users/jj/aadl-medical/pca-pump-beagleboard/pca\_ravenscar/pca\_operation/patientbolus.vcg 20 /Users/jj/aadl-medical/pca-pump-beagleboard/pca\_ravenscar/pca\_operation/rate\_controller.vcg Proof strategies used by subprograms

```
Total subprograms with at least one VC proved by examiner:
Total subprograms with at least one VC proved by simplifier:
Total subprograms with at least one VC proved by contradiction:
Total subprograms with at least one VC proved with user proof rule:
Total subprograms with at least one VC proved by Victor:
Total subprograms with at least one VC proved by Riposte:
Total subprograms with at least one VC proved using checker:
Total subprograms with at least one VC discharged by review:
Maximum extent of strategies used for fully proved subprograms:
Total subprograms with proof completed by examiner:
Total subprograms with proof completed by simplifier:
                                                                                       14
Total subprograms with proof completed with user defined rules:
Total subprograms with proof completed by Victor:
Total subprograms with proof completed by Riposte:
Total subprograms with proof completed by checker:
Total subprograms with VCs discharged by review:
Overall subprogram summary:
Total subprograms fully proved:
                                                                                       8 <<<
3 <<<
Total subprograms with at least one undischarged VC:
Total subprograms with at least one false VC:
Total subprograms for which VCs have been generated:
ZombieScope Summary:
Total subprograms for which DPCs have been generated: 25
Total number subprograms with dead paths found:
Total number of dead paths found:
                                                                                         32
VC summary:
Note: (User) denotes where the Simplifier has proved VCs using one or
      more user-defined proof rules.
Total VCs by type:
_____

        Total
        Examiner Simplifier False
        Undisc.

        Assert/Post
        96
        80
        12
        3
        1

        Precondition
        12
        0
        12
        0
        0

        Check stmnt.
        0
        0
        0
        0
        0

        Runtime check
        187
        0
        159
        0
        28

        Refinem. VCs
        10
        10
        0
        0
        0

        Inherit. VCs
        0
        0
        0
        0
        0

_____
Totals: 305 90 183 3 29 <<< %Totals: 30% 60% 1% 10%
```

**Listing 6.1**: Summary of POGS report for PCA Pump prototype

### 6.2 Monitoring dosed amount

This section is case study of verification of module responsible for tracking dosed amount of drug. The module was created with sequential profile, based on implemented PCA prototype presented in appendix A. Isolated module is presented in listing 6.2.

```
package Pca_Pump
--# own Dosed;
--#
      Dose Volume:
--# initializes Dosed,
--#
              Dose_Volume;
is
   subtype Integer_Array_Index is Integer range 1 .. 60*60;
   type Integer_Array is array (Integer_Array_Index) of Integer;
   procedure Increase_Dosed;
   --# global in out Dosed;
           in Dose_Volume;
   --# derives Dosed from Dosed, Dose_Volume;
   function Read_Dosed return Integer;
   --# global in Dosed;
   procedure Move_Dosed;
   --# global in out Dosed;
   --# derives Dosed from Dosed;
end Pca_Pump;
package body Pca_Pump
   Dosed : Integer_Array := Integer_Array'(others => 0);
   Dose_Volume : Integer := 1;
   procedure Increase_Dosed
   is
   begin
       Dosed(Integer_Array_Index'Last) := Dosed(Integer_Array_Index'Last) + Dose_Volume;
   end Increase_Dosed;
   function Read_Dosed return Integer
       Result : Integer := 0;
   begin
       for I in Integer_Array_Index loop
           --# assert I > 1 -> Result >= Dosed(I-1);
           Result := Result + Dosed(I);
       end loop;
       return Result;
   end Read_Dosed;
   procedure Move_Dosed
   begin
       for I in Integer_Array_Index range 1 .. Integer_Array_Index'Last-1 loop
           --# assert I > 1 -> Dosed(I-1) = Dosed(I);
           Dosed(I) := Dosed(I+1);
       Dosed(Integer_Array_Index'Last) := 0;
```

```
end Move_Dosed;
end Pca_Pump;
```

**Listing 6.2**: Dose monitor module specification

Verification strategy is the same like described at the beginning of the chapter and depicted in the figure 6. First, program is verified with Examiner, SPARKSimp (Simplifier, ZombieScope and Victor). Verification report is generated by POGS. In case of any issues, verification is continued with Bakar Kiasan, which gives more user friendly experience that POGS report and generated VC files.

First verification report generated by POGS is presented in listing 6.2. It indicates presence of three undischarged (not proved) VCs.

```
Semantic Analysis Summary
                                POGS GPL 2012
            Copyright (C) 2012 Altran Praxis Limited, Bath, U.K.
Summary of:
Verification Condition files (.vcg)
Simplified Verification Condition files (.siv)
Victor result files (.vct)
Riposte result files (.rsm)
Proof Logs (.plg)
Dead Path Conjecture files (.dpc)
Summary Dead Path files (.sdp)
"status" column keys:
    1st character:
        '-' - No VC
        'S' - No SIV
        'U' - Undischarged
        'E' - Proved by Examiner
        'I' - Proved by Simplifier by Inference
        'X' - Proved by Simplifier by Contradiction
        'P' - Proved by Simplifier using User Defined Proof Rules
        'V' - Proved by Victor
        '0' - Proved by Riposte
        'C' - Proved by Checker
        'R' - Proved by Review
        'F' - VC is False
    2nd character:
        '-' - No DPC
        'S' - No SDP
        'U' - Unchecked
        'D' - Dead path
        'L' - Live path
in the directory:
/Volumes/External/VMS/shared/aadl-medical/pca-pump-beagleboard/Pca_Verification
```

Summary produced: 01-JUL-2014 14:43:18.04

 $\label{lem:polymer} File \ / Volumes/External/VMS/shared/aadl-medical/pca-pump-beagleboard/Pca_Verification/pca_pump/increase\_dosed. \\ vc\sigma$ 

 ${\bf procedure} \ {\tt Pca\_Pump.Increase\_Dosed}$ 

VCs generated 01-JUL-2014 14:42:26

VCs simplified 01-JUL-2014 14:43:04

 $\label{lem:pump-beagleboard/Pca_Verification/pca_pump/increase\_dosed.} In the pump-beagleboard/Pca_Verification/pca\_pump/increase\_dosed. In the pump-beagleboard/Pca_Verification/pca_pump/increase\_dosed. In the pump-beagleboard/Pca_Verification/pca_pump/increase\_dosed. In the pump-beagleboard/Pca_Verification/pca_pump/increase\_dosed. In the pump-beagleboard/Pca_Verification/pca_pump-beagleboard/Pca_Verification/pca_pump-beagleboard/Pca_Verification/pca_pump-beagleboard/Pca_Verification/pca_pump-beagleboard/Pca_Verification/pca_pump-beagleboard/Pca_Verification/pca_pump-beagleboard/Pca_Verification/pca_pump-beagleboard/Pca_Verification/pca_pump-beagleboard/Pca_Verification/pca_pump-beagleboard/Pca_Verification/pca_pump-beagleboard/Pca_Verification/pca_pump-beagleboard/Pca_Verification/pca_pump-beagleboard/Pca_Verification/pca_pump-beagleboard/Pca_Verification/pca_pump-beagleboard/Pca_Verification/pca_Pca_Verification/pca_Pca_Verification/pca_Pca_Verification/pca_Pca_Verification/pca_Pca_Verification/pca_Pca_Verification/pca_Pca_Verification/pca_Verification/pca_Verification/pca_Verification/pca_Verification/pca_Verification/pca_Verification/pca_Verification/pca_Verification/pca_Verification/pca_Verification/pca_Verification/pca_Verification/pca_Verification/pca_Verification/pca_Verification/pca_Veri$ 

DPCs generated 01-JUL-2014 14:42:26

DPC ZombieScoped 01-JUL-2014 14:43:0

VCs for procedure\_increase\_dosed :

# 	From   To	Proved By	Dead Path   Status
	start   rtc check @ 9   start   assert @ finish	•	Unchecked   UU     Live   EL

 $\label{lem:power_pump-beagleboard_Pca_Verification_pca_pump_move_dosed.vcg procedure Pca_Pump.Move_Dosed} Pca_Pump.Move_Dosed \\$ 

VCs generated 01-JUL-2014 14:42:26

VCs simplified 01-JUL-2014 14:43:04

 $\label{lem:pump-beagleboard/Pca_Verification/pca_pump/move_dosed.dpc DPCs generated 01-JUL-2014 14:42:26} IN the pump-beagleboard/Pca_Verification/pca_pump/move_dosed.dpc DPCs generated 01-JUL-2014 14:42:26} IN the pump-beagleboard/Pca_Verification/pca_Pump-beagleboard/Pca_Verification/pca_Pump-beagleboard/Pca_Verification/pca_Pump-beagleboard/Pca_Verification/pca_Pump-beagleboard/Pca_Verification/pca_Pump-beagleboard/Pca_Verification/pca_Pump-beagleboard/Pca_Verification/pca_Pump-beagleboard/Pca_Verification/pca_Pump-beaglebo$ 

DPC ZombieScoped 01-JUL-2014 14:43:0

VCs for procedure\_move\_dosed :

ĺ														
	# 	1	From	I	То			I	Proved By	I	Dead Path	I	Status	١
	1	1 :	start	ı	rtc check	@	26	ı	Inference	1	Unchecked	ı	IU	١
	1 2	- 1 :	start	1	rtc check	0	26	-	Inference	-	${\tt Unchecked}$		IU	-
	3	1.3	start	1	assert	0	27	1	Inference	-	Live		IL	1
	4	1 :	27	1	assert	0	27	1	Inference	-	Live		IL	1
	5	1 :	27	1	rtc check	0	28	1	Inference	-	Unchecked		IU	-
	6	1.3	start	1	rtc check	0	30	1	Inference	-	Unchecked		IU	1
	7	1 :	27	1	rtc check	0	30	1	Inference	-	Unchecked		IU	-
	8	1.3	start	1	assert	0	finish	1	Examiner	-	Dead		ED	-
	9	1 :	27	Ι	assert	0	finish	1	Examiner	-	Live	1	EL	1
ı														

VCs generated 01-JUL-2014 14:42:26

VCs simplified 01-JUL-2014 14:43:05

 $\label{lem:file_file_file} File_{\begin{subarra}{l} Volumes/External/VMS/shared/aadl-medical/pca-pump-beagleboard/Pca_Verification/pca_pump/read_dosed.dpc DPCs_generated_01-JUL-2014_14:42:26 \\ \end{subarray}}$ 

DPC ZombieScoped 01-JUL-2014 14:43:0

VCs f	or function_read_dosed :				
#	From   To	Proved By	Dead Path	Stati	us
		Inference	Live	l IL	•
2		Undischarged		UL	
3		•	Unchecked		l
4	17   assert @ finish	Inference	Live	IL	I
===== Summa				=====	
Damino					
The f	ollowing subprograms have undis	charged VCs (exclud	ding those prove	ed fal	se):
1	/Volumes/External/VMS/shared/a.vcg	adl-medical/pca-pum	np-beagleboard/l	Pca_Ve	rification/pca_pump/increase_dosed
1	0	adl-medical/pca-pum	np-beagleboard/l	Pca_Ve	rification/pca_pump/read_dosed.vcg
Proof	strategies used by subprograms				
Total	subprograms with at least one	VC proved by exami	ner:	2	
1	subprograms with at least one			2	
	subprograms with at least one			0	
	subprograms with at least one			0	
	subprograms with at least one			0	
Total	subprograms with at least one	VC proved by Ripos	te:	0	
Total	subprograms with at least one	VC proved using ch	ecker:	0	
	subprograms with at least one			0	
Maxim	num extent of strategies used fo	r fully proved subp	rograms:		
Total	subprograms with proof complet	ted by examiner:		0	
	subprograms with proof complet			1	
Total	subprograms $\operatorname{\mathbf{with}}$ proof complet	ted $\mathbf{with}$ user defin	ned rules:	0	
	. subprograms $\mathbf{with}$ proof complet			0	
	subprograms $\mathbf{with}$ proof complete			0	
	. subprograms $\mathbf{with}$ proof complet			0	
Total	subprograms with VCs discharge	ed by review:		0	
Overa	ll subprogram summary:				
Total	subprograms fully proved:			1	
Total	subprograms with at least one	undischarged VC:		2	<b>&lt;&lt;&lt;</b>
Total	subprograms with at least one	false VC:	_	0	
Total	subprograms for which VCs have	been generated:		3	
Zombi	eScope Summary:				
Total	subprograms for which DPCs hav	e been generated:		3	
	number subprograms $\mathbf{with}$ dead j	•		1	
1	number of dead paths found:	· · · · · · · · · · · · · · · · · · ·		1	
VC su	ummary:				
Note:	(User) denotes where the Simpl more user-defined proof rules.	_	Cs using one or		
Total	. VCs by type:				

Assert/Post					
	8	3	4	1	
Precondition	0	0	0	0	
Check stmnt.	0	0	0	0	
Runtime check	7	0	5	2	
Refinem. VCs	0	0	0	0	
Inherit. VCs	0	0	0	0	
Totals:	15	 3	9	3	
%Totals:	10	20%	60%	20%	

Listing 6.3: POGS report

Next, according to verification strategy, Bakar Kiasan was run. Kiasan report is presented in the figure 6.2.

First issue we can notice is problem with data types' ranges. To solve it (in SPARK 2005) configuration file standard.ads (presented in listing 6.2) was created. Kiasan verification report created after that is presented in the figure 6.2. Number of errors is reduced, but there is still problem with range violation.

```
e Standard is
pe Integer is range -2**31 .. 2**31-1;
andard;
```

From functional perspective, negative values are not needed it this case, thus new type Drug\_Volume type was created. Integer\_Array type was renamed to Doses\_Array and its type was changed to Drug\_Volume. Result of Kiasan analysis after this change is presented in the figure 6.2.

After this change, only upper overflow in Increase\_Dosed procedure error was left. Fix, for this is introduction of precondition for Increase\_Dosed: --# pre Read\_Dosed(Dosed) <= Drug\_Volume',Last - Dose\_Volume;. It caused semantic error (detected by Examiner): The identifier Read\_Dosed is either undeclared or not visible at this point. The reason of that is definition of Increase\_Dosed procedure before Read\_Dosed procedure. To fix, this Read\_Dosed procedure was moved before Increase\_Dosed. However, after that Examiner returned different error: Binary operator is not declared for types Drug\_Volume and Dose\_Volume\_\_type. To make operator visible, Dose\_Volume type has to be declared in

--# own annotation: --# Dose\_Volume : Drug\_Volume;. After these fixes Kiasan analysis has be run again. Result is depicted in the figure 6.2.

There were no error cases in Move\_Dosed and Increase\_Dosed procedures. Error case in Read\_Dosed is shown in figure 6.2. It is ConstraintError: the value being assigned to Result is too small. This error is not very imformative. After investigation and talk with Kiasan Developer, it was determined that there is a bug in Kiasan v1 (for SPARK 2005). More precisely: in checking overflows. For the purpose of verification  $Drug_volume$  type range was changed to  $0 - (2^{15} - 1)$ . It will give range up to around 1000000. Which is sufficient even if calculations are made in micro liters (as it is in case of PCA pump prototype implementation). 1000000 micro liters is 1000 ml, which is 1 liter. This is extreme amount of drug in case of PCA pump, according to Requirement Document [LHC13]. The bug with type ranges is fixed in Kiasan v2 (for SPARK 2014).

Another problem was the size of posed array (3600 elements). Kiasan allows to set array bound and loop bound. Both had to be increased (from default 10). Another thing was computational complexity. For 3600 elements, state space grows exponentially and it takes a lot of time to analyze it. Thus, for verification purposes, array size was changed to 60 elements. Along with change to array bounds and loop bounds, also to 60.

After rerun Kiasan, there is valid test case for Read\_Dose, but there are also 59 Exception cases: Range violation (UPPER), which means possible overflow. One way of fix it, was to add --# assume annotation to loop in function body, but Kiasan v1 does not support it. Another way was to add precondition, which assure, that sum of elements is lower than Drug\_Volume, Last. SPARK does not provide simple library for summing array (like Contracts language for Java provide). Thus, this function had to be implemented. Its implementation is the same like Read\_Dosed. It sum all elements of array. sum function specification and body is presented in listing 6.4.

function Sum(Arr : Doses\_Array) return Drug\_Volume;

```
function Sum(Arr : Doses_Array) return Drug_Volume
is
    Result : Drug_Volume := 0;
begin
    for I in Doses_Array_Index loop
        --# assert true;
        Result := Result + Arr(I);
    end loop;
    return Result;
end Sum;
```

**Listing 6.4**: Sum function for summing all elements of array

After rerunning Kiasan, only valid test case were found, which is depicted in the figure 6.2.

The last thing which was improved by code contracts is checking if Move\_Dosed procedure works as expected. In that purpose three postconditions were added (listing 6.5). First checks if the last element is equal to 0. Second and third checks two possible scenarios:

- before running procedure, the first element is equal to 0: amount of dosed drug in last hour will not change after Dosed procedure execution
- the first element is greater than 0: after Dosed procedure execution, the amount of drug dosed in last hour will decrease, because first element value will no longer be in last hour range

```
--# post Dosed(Doses_Array_Index'Last) = 0
--# and (Dosed~(Doses_Array_Index'First)=0 -> Read_Dosed(Dosed~) = Read_Dosed(Dosed))
--# and (Dosed~(Doses_Array_Index'First)>0 -> Read_Dosed(Dosed~) > Read_Dosed(Dosed));
```

**Listing 6.5**: Postconditions added to Move Dosed procedure

After adding these postconditions Kiasan generates 2 test cases to check both mentioned scenarios. There is no error cases, which means that procedure works as expected.

Better way to validate such requirements is Unit testing. In section 6.4, there is overview of unit tests created to test behavior described above.

[START FROM HERE] Running Examiner and SPARKSimp after all changes (truncated result):

1	-	ure_increase_dosed :			
	From	То	Proved By	Dead Path	Status
1	start	rtc check @ 20		Unchecked	   UU
2	start	assert @ finish	Examiner	Live	EL
VCs for	r proced	ure_move_dosed :			
	From	To	Proved By	Dead Path	Status
		rtc check @ 37	Inference	Unchecked	   IU
1 -			Inference	Unchecked	l IU
3	start	assert @ 38	Inference	Live	IL
4	38	assert @ 38	Inference	Live	IL
	38	The state of the s	Inference	Unchecked	IU
		rtc check @ 41		Unchecked	
			Inference	Unchecked	
		assert @ finish		Dead	ID
9	38	assert @ finish	Undischarged	Live	l UL
		on_read_dosed :			 L g
	From	10	Proved By 	Dead Path	Status 
1	start	assert @ 28	Inference	Live	IL
1 2	28	assert @ 28	Inference	Live	IL
3	28	rtc check @ 29	Undischarged	Unchecked	l UU
4	28	assert @ finish	Inference	Live	IL
	r functi		Proved By	Dead Path	   Status
1	start		Inference	Live	l IL
1 2	11	assert @ 11	Inference	Live	l IL
3	11	rtc check @ 12	Undischarged	Unchecked	l UU
4	11	assert @ finish	Inference	Live	IL
Summar	у:				
Overal	•	gram summary:			
		ams fully proved:			0
		cams with at least one cams with at least one			4 <<< 0
Total	subprogi	rams for which VCs have	been generated:		4
1	Scope Si				
		ams for which DPCs hav			4
1		subprograms with dead	_		1
		of dead paths found:	•		1
Total	VCs by t	ype:			
		Total Examiner	Simplifier Undi	sc.	

11	1	9	1
0	0	0	0
0	0	0	0
8	0	5	3
0	0	0	0
0	0	0	0
		=======	======
19	1	14	4 <<<
	5%	74%	21%
	0 0 8 0 0	0 0 0 0 8 0 0 0 0 0	0 0 0 0 0 0 8 0 5 0 0 0 0 0 0 0 0 0 0 0

**Listing 6.6**: Third POGS report

Now, there is 4 undischarged VCs, but total number of generated VCs is 19. In previous runs there was only 15. Thus there is 4 new VCs and 2 of them are undischarged. The reason is introduction of sum function of all subprograms which are using it. To confirm this, look at all undischarged VCs. Which is: 1st VC in increase\_dosed.siv file (listing 6.7, 9th VC in move\_dosed.siv file (listing 6.8, 3rd VC in read\_dosed.vcg file (listing 6.9) and 3rd VC in sum.vcg file (listing 6.10). They conform to subprograms: Increase\_Dosed, Move\_Dosed, Read\_Dosed and sum respectively.

[JOIN INTO 1 LISTING?]

```
procedure_increase_dosed_1.
       read_dosed(dosed) <= 32767 - dose_volume .
H1:
H2:
       for_all(i___1 : integer, 1 <= i___1 and i___1 <= 60 -> 0 <= element(
          dosed, [i_1] and element(dosed, [i_1]) <= 32767).
Н3:
       dose_volume >= 0 .
H4:
       dose_volume <= 32767
H5:
       integer__size >= 0 .
       drug_volume__size >= 0
H6:
H7:
       drug_volume__base__first <= drug_volume__base__last .</pre>
H8:
       doses_array_index__size >= 0 .
H9:
       drug_volume__base__first <= 0</pre>
H10:
       drug_volume__base__last >= 32767 .
C1:
       element(dosed, [60]) + dose_volume <= 32767 .</pre>
```

Listing 6.7: Undischarged Verification Condition from increase\_dosed.siv file

```
procedure_move_dosed_9.
       element(dosed, [58]) = element(dosed, [59]) .
H1:
       for_all(i__1 : integer, 1 <= i__1 and i__1 <= 60 -> 0 <= element(
          dosed, [i___1]) and element(dosed, [i___1]) <= 32767) .
Н3:
       element(dosed, [60]) >= 0.
H4:
       element(dosed, [60]) \le 32767.
H5:
       integer__size >= 0 .
H6:
       drug_volume__size >= 0 .
H7:
       drug_volume__base__first <= drug_volume__base__last .</pre>
H8:
       doses_array_index__size >= 0 .
H9:
       drug_volume__base__first <= 0 .</pre>
H10:
       drug_volume__base__last >= 32767 .
```

```
->
C1: element(dosed~, [1]) = 0 -> read_dosed(dosed~) = read_dosed(update(update(update(dosed, [59], element(dosed, [60])), [60], 0)) .

C2: element(dosed~, [1]) > 0 -> read_dosed(dosed~) > read_dosed(update(update(dosed, [59], element(dosed, [60])), [60], 0)) .
```

**Listing 6.8**: Undischarged Verification Condition from move dosed.siv file

```
function_read_dosed_3.
       loop_1_i > 1 \rightarrow result >= element(dosed, [loop_1_i - 1]).
H1:
H2:
       for_all(i___1 : integer, 1 <= i___1 and i___1 <= 60 -> 0 <= element(
          dosed, [i_{-1}]) and element(dosed, [i_{-1}]) <= 32767).
Н3:
       sum(dosed) \le 32767.
H4:
       loop_1_i >= 1.
       loop_1_i <= 60.
H5:
H6:
       result >= 0.
       result <= 32767
H7:
H8:
       integer__size >= 0 .
H9:
       drug_volume__size >= 0
H10:
       drug_volume__base__first <= drug_volume__base__last .</pre>
H11:
       doses_array_index__size >= 0 .
H12:
       drug_volume__base__first <= 0 .</pre>
H13:
       drug_volume__base__last >= 32767 .
       _>
C1:
       result + element(dosed, [loop_1_i]) <= 32767 .
```

**Listing 6.9**: Undischarged Verification Condition from read dosed.siv file

```
function_sum_3.
       for_all(i___1 : integer, 1 <= i___1 and i___1 <= 60 -> 0 <= element(arr,
          [i_{-1}]) and element(arr, [i_{-1}]) <= 32767) .
       loop_1_i >= 1.
H2:
H3:
       loop_1_i <= 60.
       result >= 0.
H4:
H5:
       result <= 32767 .
H6:
       integer__size >= 0 .
H7:
       drug_volume__size >= 0 .
       drug_volume__base__first <= drug_volume__base__last .</pre>
H8:
H9:
       doses_array_index__size >= 0 .
H10:
       drug_volume__base__first <= 0</pre>
H11:
       drug_volume__base__last >= 32767 .
C1:
       result + element(arr, [loop_1_-i]) <= 32767 .
```

**Listing 6.10**: Undischarged Verification Condition from sum.siv file

In Move\_Dosed procedure, tools cannot prove implications in post conditions. Fortunately, it is already proved by Bakar Kiasan. The problem in Increase\_Dosed, Read\_Dosed and sum is the same. Tools cannot verify, that adding Result and some element of Dosed array will not cause overflow. Bakar Kiasan can prove correctness of Increase\_Dosed and Read\_Dosed. However only, with assumption that sum is correct. sum cannot be proved by Bakar Kiasan. Four exception

cases indicating possible overflow are generated. Thus, the only way to prove correctness of this module is to assume, that helper function sum is correct.

In procedure Move\_Dosed, there is one dead path found. POGS report gives only information where dead path exists, but not in which circumstances. The information about conditions, in which dead path occurs is stored in .dpc file. The file path to concrete file is given in the POGS report just before summary table for procedure Move\_Dosed. In this case it is move\_dosed. dpc file. Listing 6.2 presents truncated POGS report, but as an example, full POGS report of implemented PCA prototype can be found in appendix B (e.g. see line 50, which contains DPC analysis for start\_Pumping procedure).

Relevant fragment, which applies to found dead path is presented in listing 6.2. It is a list of hypothesis, in which hypothesis 10 (H10) states that number of elements in Doses\_Array is 1 or less. In this case (or more precisely: in this path), for loop will not be visited. Doses\_Array has always 3600 elements, thus this path is impossible (dead). It does not mean something bad, because dead path indicate possible issues. In this case it is not issue. It is expected behavior.

```
procedure_move_dosed_8.
       for_all(i__1: integer, ((i__1 >= doses_array_index_first) and (
           i___1 <= doses_array_index__last)) -> ((element(
           dosed, [i___1]) >= drug_volume__first) and (element(
           \verb"dosed", [i_{--}1]) <= drug\_volume\__last))) \ .
H2:
       doses_array_index__last - 1 >= integer__first
       doses_array_index__last - 1 <= integer__last .</pre>
H3:
       doses_array_index__last - 1 >= integer__base__first .
H5:
       doses_array_index__last - 1 <= integer__base__last .</pre>
H6:
       doses_array_index__first >= integer__first .
       doses_array_index__first <= integer__last</pre>
H7:
H8:
       (doses_array_index__first <= doses_array_index__last - 1) -> ((
           doses_array_index__last - 1 >= doses_array_index__first) and (
           doses_array_index__last - 1 <= doses_array_index__last))</pre>
H9:
       (doses_array_index__first <= doses_array_index__last - 1) -> ((
           doses_array_index__first >= doses_array_index__first) and (
           doses_array_index__first <= doses_array_index__last)) .</pre>
H10:
       not (doses_array_index__first <= doses_array_index__last - 1) .</pre>
H11:
       0 >= drug_volume__first .
H12:
       0 <= drug_volume__last .</pre>
H13:
       doses_array_index__last >= doses_array_index__first .
H14:
       doses_array_index__last <= doses_array_index__last .</pre>
        ->
C1:
       false .
```

Listing 6.11: Dead path in Move\_Dosed procedure

Complete code of module for dose monitoring can be found in E.

Unfortunately, introduced changes (pre- and postconditions) cannot be applied to PCA Pump prototype implementation, because - as mentioned in chapter 2.6 - protected objects cannot be used in proof annotations (pre- and postconditions).

This shows, how code implemented based on translation from AADL/BLESS can be verified using SPARK tools.

### 6.3 Verification of generated code

Code translated from AADL models is presented in appendix D. Verification with Examiner of package Pca\_Operation specification returns syntax error: Neither KNOWN\_DISCRIMINANT\_PART nor TASK\_TYPE\_ANNOTATION can start with reserved word "IS". It means, that discriminants or task annotation are expected here. In order to pass Examiner syntax check at least one annotation has to be declared. For demonstration purposes, Ada.Real\_Time.ClockTime is used. Complete task declaration is presented in listing 6.3.

```
task type Patient_Bolus_Checker
--# global in Ada.Real_Time.ClockTime;
--# derives null from Ada.Real_Time.ClockTime;
is
    pragma Priority(10);
end Patient_Bolus_Checker;
```

**Listing 6.12**: Undischarged Verification Condition from sum.siv file

Once annotation is added, PCa\_Operation package specification passes Examiner syntax check. Verification of package body returns errors, which are caused by not implemented assertions (translated from BLESS). When all assertions are removed, only flow errors (presented in listing 6.3) are found by Examiner.

```
pca_operation.adb:82:9: Flow Error 30 - The variable Infusion_Flow_Rate is imported but neither referenced nor exported.

pca_operation.adb:92:9: Flow Error 30 - The variable Bolus_Duration is imported but neither referenced nor exported.

pca_operation.adb:92:9: Flow Error 32 - The variable Infusion_Flow_Rate is neither imported nor defined.
```

```
pca_operation.adb:92:9: Flow Error 31 - The variable Infusion_Flow_Rate is exported but not (internally)
defined.
pca_operation.adb:92:9: Flow Error 32 - The variable System_Status is neither imported nor defined.
pca_operation.adb:92:9: Flow Error 31 - The variable System_Status is exported but not (internally) defined.
pca_operation.adb:92:9: Flow Error 30 - The variable Rx is imported but neither referenced nor exported.
pca_operation.adb:92:9: Warning 400 - Variable la is declared but not used.
pca_operation.adb:101:9: Flow Error 35 - Importation of the initial value of variable Ada.Real_Time.ClockTime is ineffective.
```

Listing 6.13: Flow errors returned by Examiner for Pca\_Operation package body

This is nice indication what has to be implemented in particular parts of the program. It is recommended to not use VC and DPC generation until there are some syntax errors. When all errors are fixed, program can be initially verified as described in previous sections.

### 6.4 AUnit tests

Better way to prove expected behavior of Move\_Dosed in Dose monitoring module is to create AUnit test. To check both behaviors of Move\_Dosed procedure, two tests have been created:

- Test\_Move\_Dosed\_First\_Element\_Zero first element is 0, then after execution of the procedure dosed amount of drug should be not changed
- Test\_Move\_Dosed\_First\_Element\_Not\_Zero first element is greater than 0, then after execution of the procedure dosed amount of drug should be smaller than before

Both test cases are presented in listing 6.4.

```
-- Assert
 AUnit.Assertions.Assert
    (Post_Sum = Pre_Sum,
    "Total dose changed: " & Pca_Pump.Drug_Volume'Image(Pre_Sum) & " /= " & Pca_Pump.Drug_Volume'Image(
    Post_Sum));
end Test_Move_Dosed_First_Element_Zero;
procedure Test_Move_Dosed_First_Element_Not_Zero (Gnattest_T : in out Test) is
 pragma Unreferenced (Gnattest_T);
 Pre_Sum : Pca_Pump.Drug_Volume := 0;
 Post_Sum : Pca_Pump.Drug_Volume := 0;
begin
  -- Arrange
 Pca_Pump.Increase_Dosed;
 for I in Pca_Pump.Doses_Array_Index range 1 .. Pca_Pump.Doses_Array_Index'Last-1 loop
    Pca_Pump.Move_Dosed;
 end loop;
 Pre_Sum := Pca_Pump.Read_Dosed;
  -- Act
 Pca_Pump.Move_Dosed;
 Post_Sum := Pca_Pump.Read_Dosed;
  -- Assert
 AUnit.Assertions.Assert
   (Post_Sum < Pre_Sum,
    "Total dose changed: " & Pca_Pump.Drug_Volume'Image(Pre_Sum) & " should be greater than " & Pca_Pump.
    Drug_Volume'Image(Post_Sum));
end Test_Move_Dosed_First_Element_Not_Zero;
```

**Listing 6.14**: AUnit tests for Move\_Dosed procedure


## 6.5 gnatPROVE

The sequential module for monitoring dosed amount verification presented in section 6.2 has been converted to SPARK 2014. In this purpose "SPARK 2005 to 2014" translator created

by AdaCore has been used. Translated code is presented in listing .... It use abstract refinement, which is different than in SPARK 2005. To access private, global variables, ghost functions <code>Dosed\_State</code> and <code>Dose\_Volume\_State</code> have to be used.

Code presented in listing ... passes flow analysis. [START FROM HERE]

In SPARK 2014, the standard.ads file with type ranges is not necessary, because it is handled by language.

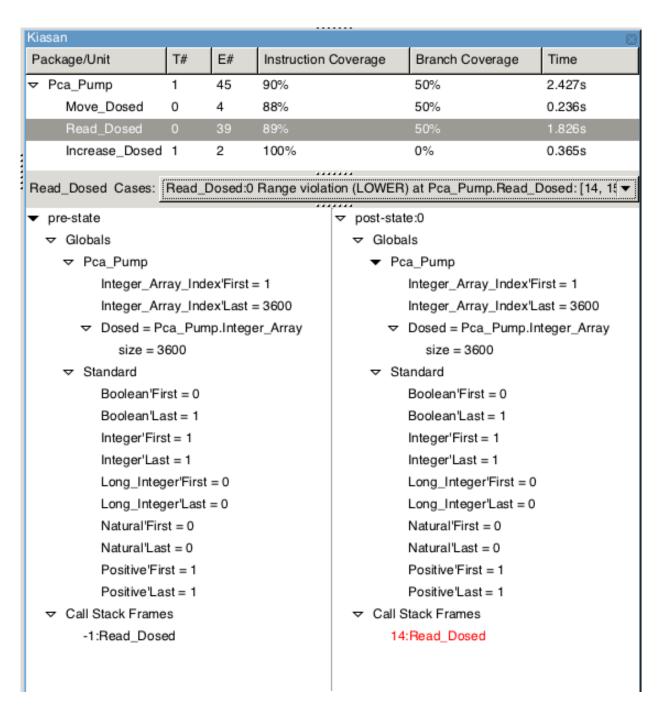

**Figure 6.2**: Bakar Kiasan verification report

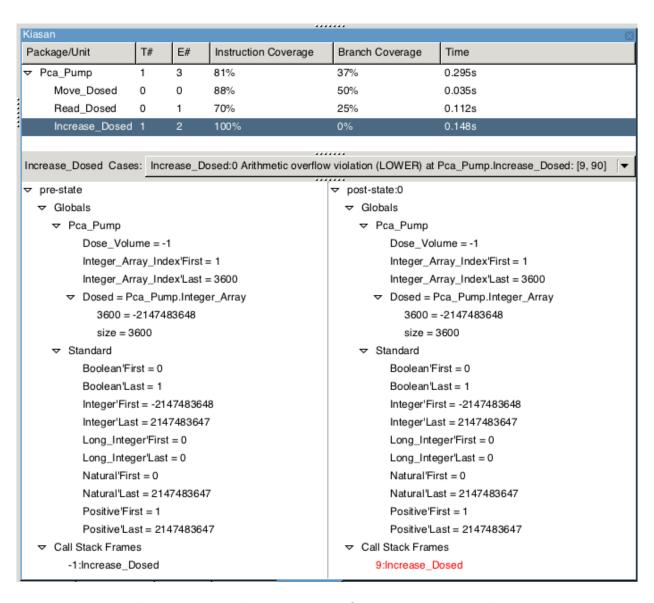


Figure 6.3: Bakar Kiasan verification report, second run

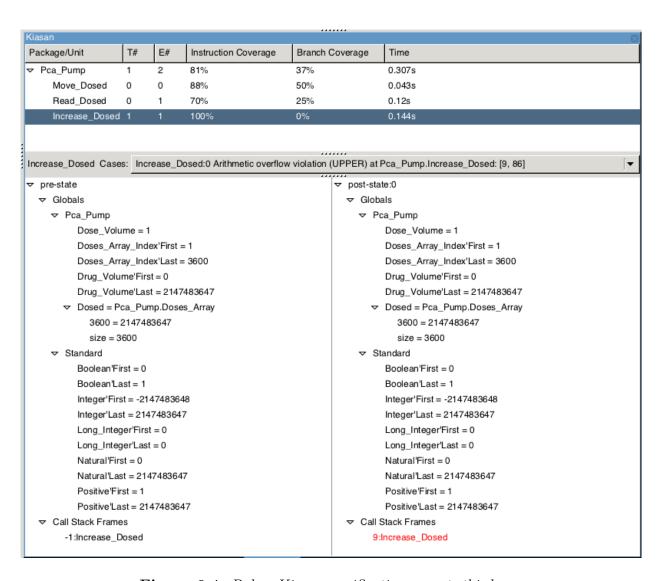


Figure 6.4: Bakar Kiasan verification report, third run

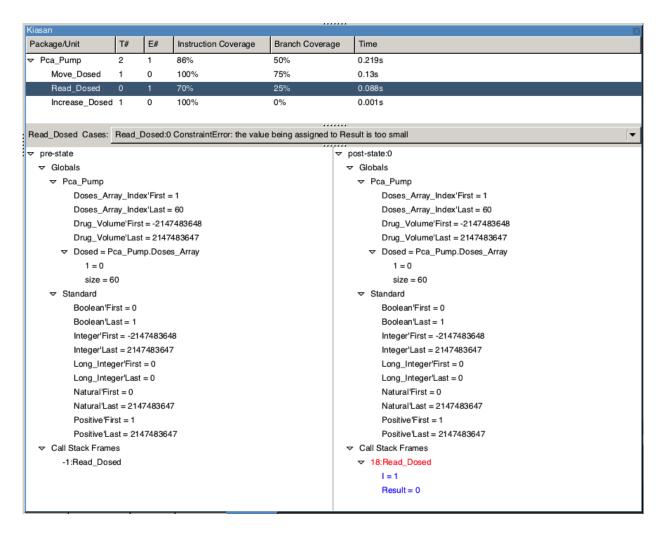


Figure 6.5: Bakar Kiasan verification report, forth run

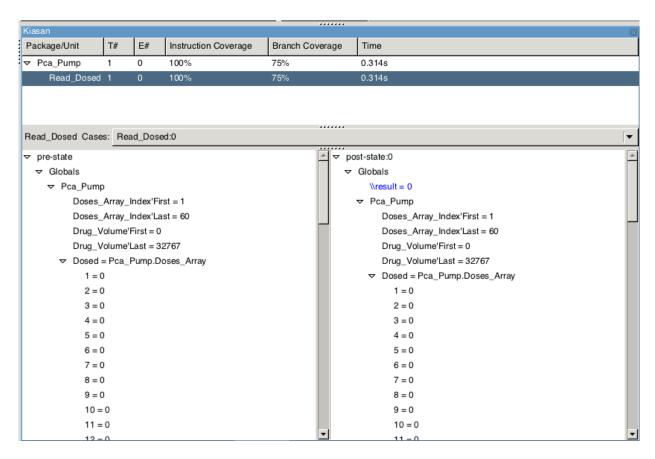


Figure 6.6: Bakar Kiasan verification report, fifth run

#### Chapter 7

#### Summary

What I have done.

The work is done for SPARK 2005. SPARK 2014 and its tools (such as gnatPROVE) were not ready at the time, when this thesis was written.

The biggest challenge during PCA pump development was the SPARK limitations. There are many common libraries, which cannot be verified by SPARK tools. Thus it is required to isolate some functionalities or implement them in different way. Another issue was lack of many resources and SPARK code samples. Most of them are used in research or are protected by intelectual property laws.

#### Issues:

- not many online resources - no access to industry code - everything (AADL, SPARK2014, BLESS, tools) is under development - hard to create running application - need to rely on some resources, which are not nessesarly up to date - AADL models don't contains subprograms, which would be useful in AADL2SPARK translator creation

#### Chapter 8

#### Future work

The following are possible extensions for work done in this thesis:

- Creation of automatic translator described in section 4.3 would be good validation of created translation schemes. It may reveal some issues not present for manual translation.
- Currently AADL thread properties are not take into account in thread to task mapping, in section 4.1.3. Properties like priority or period would be very useful in SPARK Ada programs. For now, former is hard-coded as 10 and latter simply skipped, which requires developer to handle it. However, such property modeled and analyzed in AADL models, should be translated automatically to maintain synchronization between model and the code. AADL properties are described in [FG13], in the Appendix A.
- Data types translation presented in section 4.1.1, in additions to straightforward type mapping, comprises of protected types. However, all protected types has the same set of subprograms (Put and Get). It is worth to consider introduction of generics, which will allow to specify generic protected type and then reuse it for all types.

- In feature groups translation (section 4.1.5), idea of child or nested packages is abandoned. However, it would be good to reconsider it. Maybe by introduction of getter functions in parent package or some other techniques, which will allow for better separation and decomposition.
- AADL property set mapping in section 4.1.7 handles only addinteger type. Thus, it requires extension for handling other, more complex constructs.
- Current translation schemes cause creation of pretty big packages, which will become
  bigger after adding implementation. Thus, some decomposition is desired. Following
  techniques can be considered:
  - partition of packages
  - take advantage of child packages
  - separation of threads to different packages (e.g. one thread per child package and all common functionalities in parent package)

simple package separation

- Mapping for BLESS are limited only to small subset. Development of translations for BLESS state machine (states and transitions) would be good addition. It will allow for behavior translation. Good point to start is Rate\_Controller thread, which can be found in PCA\_Operation\_Threads package in original AADL models created by Brian Larson. The semantics of BLESS contain notions of time that make translation to SPARK difficult. This problem occurs in state machine models. Finding solution for that is needed. Maybe even, by changing BLESS semantics.
- For the time, when this thesis was written, SPARK 2014 did not support multitasking. However, there were plans to introduce it into SPARK 2014 like it took place in case of

SPARK 2005. Once, multitasking support would be present, translations for SPARK 2014 will be possible.

- There is an issue with two way communication between SPARK packages caused by circular dependency. It is described in section 4.2.1.
- Port communication presented in section 4.2 captures only 1:1 connections between ports of the same type and opposite direction. In AADL there are also inter-port connections and one-to-many or many-to-one connections. [FG13] They should be taken into AADL subset for medical devices modeling and translation.
- Created PCA pump prototype contains only basic functionalities. Some parameters (like drug concentration) are ignored. The next step is its development, would be taken skipped parts into account. In addition to that, interaction with external modules, like sensors for monitoring drug flow, or communication with ICE through Ethernet port is desired. It requires creation of communication channel between BeagleBoard (SPARK Ada application) and these systems.

## Bibliography

- [AB04] Tullio Vardanega Alan Burns, Brian Dobbing. Guide for the use of the ada ravenscar profile in high integrity systems. ACM SIGAda Ada Letters, 24(2):1–74, Juin 2004.
- [Ada14] AdaCore. Aunit cookbook. URL: http://docs.adacore.com/aunit-docs/aunit.html, Mars 2014.
- [AL14a] AdaCore and Altran UK Ltd. Spark 2014 reference manual. URL: http://docs.adacore.com/spark2014-docs/html/lrm, 2011-2014.
- [AL14b] AdaCore and Altran UK Ltd. Spark 2014 toolset user's guide. URL: http://docs.adacore.com/spark2014-docs/html/ug, 2011-2014.
- [AW01] Neil Audsley and Andy Wellings. Issues with using ravenscar and the ada distributed systems annex for high-integrity systems. In *IRTAW '00 Proceedings* of the 10th international workshop on Real-time Ada workshop, pages 33 39. ACM New York, NY, USA, 2001.
- [Bar13] John Barnes. SPARK The Proven Approach to High Integrity Software. Altran, 2013.
- [BHR+11] Jason Belt, John Hatcliff, Robby, Patrice Chalin, David Hardin, and Xianghua Deng. Bakar kiasan: Flexibe contract checking for critical systems using symbolic execution. In NASA Formal Methods, pages 58–72. Springer Berlin Heidelberg, 2011.

- [CB09] Mohamed Yassin Chkouri and Marius Bozga. Prototypying of distributed embedded systems using aadl. In ACESMB 2009, Second International Workshop on Model Based Architecting and Construction of Embedded Systems, pages 65–79. Springer Berlin Heidelberg, 2009.
- [Cha00] Roderick Chapman. Industrial experience with spark. ACM SIGAda Ada Letters
   special issue on presentations from SIGAda 2000, XX(4):64–68, Décembre 2000.
- [DEL<sup>+</sup>14] Claire Dross, Pavlos Efstathopoulos, David Lesens, David Mentre, and Yannick Moy. Rail, space security: Three case studies for spark 2014. In *ERTS 2014: Embedded Real Time Software and Systems*, 2014.
- [DRH07] Xianghua Deng, Robby, and John Hatcliff. Kiasan/kunit: Automatic test case generation and analysis feedback for open object-oriented systems. In *Proceedings of the Testing: Academic and Industrial Conference Practice and Research Techniques MUTATION*, pages 3–12. IEEE Computer Society Washington, DC, 2007.
  - [Fal14] Ed Falis. Aunit tutorials. URL: http://libre.adacore.com/tools/aunit, Mars 2014.
  - [FG13] Peter H. Feiler and David P. Gluch. Model-Based Engineering with AADL. Addison-Wesley, 2013.
- [HLW12] John Hatcliff, Kejia Li, and Steve Warren. Component-based app design for platform-oriented devices in a medical device coordination framework. In ACM SIGHIT International Health Informatics Symposium, pages 343 – 352, 2012.
  - [Hor09] Bartlomiej Horn. Ada'05 compiler for arm based systems. thesis, Technical University of Lodz, Poland, 2009.

- [Hug13] Jérôme Hugues. About ocarina. URL: http://www.openaadl.org/ocarina. html, 2013.
- [HZPK08] Jérôme Hugues, Bechir Zalila, Laurent Pautet, and Fabrice Kordon. From the prototype to the final embedded system using the ocarina and tool suite. ACM Transactions on Embedded Computing Systems, 7(4):237–250, Juilliet 2008.
- [IEC<sup>+</sup>06] Andrew Ireland, Bill J. Ellis, Andrew Cook, Roderick Chapman, and Janet Barnes. An integrated approach to high integrity software verification. *Journal of Automated Reasoning*, 36(4):379–410, Avril 2006.
  - [Lar14] Brian R. Larson. Integrated clinical environment patient-controlled analgesia infusion pump system requirements draft 0.10.1, Février 2014.
- [LCH13] Brian R. Larson, Patrice Chalin, and John Hatcliff. Bless: Formal specification and verification of behaviors for embedded systems with software. In NASA Formal Methods, pages 276–290. Springer Berlin Heidelberg, 2013.
  - [Lev12] Nancy G. Leveson. Engineering a Safer World. The MIT Press, 2012.
- [LHC13] Brian R. Larson, John Hatcliff, and Patrice Chalin. Open source patient-controlled analysis pump requirements documentation. In Software Engineering in Health Care (SEHC), 2013 5th International Workshop, pages 28–34. Institute of Electrical and Electronics Engineers (IEEE), 2013.
- [LZPH09] Gilles Lasnier, Bechir Zalila, Laurent Pautet, and Jérôme Hugues. Ocarina: An environment for aadl models analysis and automatic code generation for high integrity applications. In *Reliable Software Technologies Ada-Europe 2009*, pages 237–250. Springer Berlin Heidelberg, 2009.

- [Med10] Smiths Medical. Cadd-prizm ambulatory infusion pump model 6100 and model 6101 technical manual. URL: http://www.smiths-medical.com/upload/products/pdf/cadd\_prizm\_vip\_system/in19824.pdf, Novembre 2010.
  - [PHR] Sam Procted, John Hatcliff, and Robby. Towards an aadl-based definition of app architecture for medical application platforms. In *Proceedings of the 2014 Software Engineering in Health-care (SEHC) Workshop at the International Symposium on Foundations of Health Information Engineering and Systems (FHIES 2014)*.
  - [SC12] Loren Segal and Patrice Chalin. A comparison of intermediate verification languages: Boogie and sireum/pilar. In *Verified Software: Theories, Tools, Experiments*, pages 130–145. Springer, 2012.
- [SCD14] SAE AS-2C Architecture Description Language Subcommittee, Embedded Computing Systems Committee, and Aerospace Avionics Systems Division. Aerospace standard architecture analysis & design language (aadl) v2 programming language annex document draft 0.9, Avril 2014.
  - [Tea] SPARK Team. Victor wrapper user manual.
- [Tea10] SPARK Team. Sparksimp utility user manual. URL: http://docs.adacore.com/sparkdocs-docs/SPARKSimp\_UM.htm, Novembre 2010.
- [Teal1a] SPARK Team. Pogs user manual. URL: http://docs.adacore.com/sparkdocs-docs/Pogs\_UM.htm, Septembre 2011.
- [Tea11b] SPARK Team. Spark examiner user manual. URL: http://docs.adacore.com/sparkdocs-docs/Examiner\_UM.htm, Décembre 2011.

- [Tea11c] SPARK Team. Spark simplifier user manual. URL: http://docs.adacore.com/sparkdocs-docs/Simplifier\_UM.htm, Juin 2011.
- [Tea12] SPARK Team. The spark ravenscar profile. URL: http://docs.adacore.com/sparkdocs-docs/Examiner\_Ravenscar.htm, 2012.
- [Thi11] Hariharan Thiagarajan. Dependence analysis for inferring information flow properties in spark ada programs. thesis, Kansas State University, 2011.

## Appendix A

PCA pump prototype - simple, implemented, working pump

Content of this appendix.

## Appendix B

# PCA pump prototype - simple, implemented, working pump

```
Semantic Analysis Summary
                             POGS GPL 2012
           Copyright (C) 2012 Altran Praxis Limited, Bath, U.K.
Summary of:
Verification Condition files (.vcg)
Simplified Verification Condition files (.siv)
Victor result files (.vct)
Riposte result files (.rsm)
Proof Logs (.plg)
Dead Path Conjecture files (.dpc)
Summary Dead Path files (.sdp)
"status" column keys:
   1st character:
       '-' - No VC
       'S' - No SIV
       'U' - Undischarged
       'E' - Proved by Examiner
        'I' - Proved by Simplifier by Inference
        'X' - Proved by Simplifier by Contradiction
        'P' - Proved by Simplifier using User Defined Proof Rules
        'V' - Proved by Victor
        '0' - Proved by Riposte
        'C' - Proved by Checker
        'R' - Proved by Review
        'F' - VC is False
    2nd character:
       '-' - No DPC
        'S' - No SDP
        'U' - Unchecked
```

```
'D' - Dead path
      'L' - Live path
in the directory:
/Users/jj/aadl-medical/pca-pump-beagleboard/pca_ravenscar
Summary produced: 24-JUL-2014 11:40:08.21
File /Users/jj/aadl-medical/pca-pump-beagleboard/pca_ravenscar/pca_engine/start_pumping.vcg
procedure Pca_Engine.Start_Pumping
VCs generated 21-JUL-2014 21:52:42
VCs simplified 24-JUL-2014 11:39:16
File /Users/jj/aadl-medical/pca-pump-beagleboard/pca_ravenscar/pca_engine/start_pumping.dpc
DPCs generated 21-JUL-2014 21:52:42
DPC ZombieScoped 21-JUL-2014 21:54:5
VCs for procedure_start_pumping :
                   | Proved By | Dead Path | Status |
| # | From | To
File /Users/jj/aadl-medical/pca-pump-beagleboard/pca_ravenscar/pca_engine/stop_pumping.vcg
procedure Pca_Engine.Stop_Pumping
VCs generated 21-JUL-2014 21:52:42
VCs simplified 24-JUL-2014 11:39:16
File /Users/jj/aadl-medical/pca-pump-beagleboard/pca_ravenscar/pca_engine/stop_pumping.dpc
DPCs generated 21-JUL-2014 21:52:42
DPC ZombieScoped 21-JUL-2014 21:54:5
VCs for procedure_stop_pumping :
| # | From | To | Proved By | Dead Path | Status |
| 1 | start | assert @ finish | False
                                              File /Users/jj/aadl-medical/pca-pump-beagleboard/pca_ravenscar/pca_engine/write_signal.vcg
procedure Pca_Engine.Write_Signal
VCs generated 21-JUL-2014 21:52:42
VCs simplified 24-JUL-2014 11:39:16
File /Users/jj/aadl-medical/pca-pump-beagleboard/pca_ravenscar/pca_engine/write_signal.dpc
DPCs generated 21-JUL-2014 21:52:42
DPC ZombieScoped 21-JUL-2014 21:54:5
VCs for procedure_write_signal :
| # | From | To | Proved By | Dead Path | Status |
l-----
| 1 | start | assert @ finish | False
```

File /Users/jj/aadl-medical/pca-pump-beagleboard/pca\_ravenscar/pca\_operation/clinicianbolus.vcg procedure Pca\_Operation.ClinicianBolus VCs generated 24-JUL-2014 11:39:12 VCs simplified 24-JUL-2014 11:39:16 File /Users/jj/aadl-medical/pca-pump-beagleboard/pca\_ravenscar/pca\_operation/clinicianbolus.dpc DPCs generated 24-JUL-2014 11:39:12 DPC ZombieScoped 24-JUL-2014 11:39:1 VCs for procedure\_clinicianbolus : | Proved By | Dead Path | Status | | # | From | To |-----, oncnecked | IU | | Unchecked | IU | | Unchecked | IU | | Live | T | 3 | start | rtc check @ 201 | Inference | 4 | start | rtc check @ 203 | Inference | start | assert @ finish | Examiner | start | assert @ finish | Examiner | 6 | start | | 7 | start | assert @ finish | Examiner File /Users/jj/aadl-medical/pca-pump-beagleboard/pca\_ravenscar/pca\_operation/get\_state.vcg function Pca\_Operation.Get\_State VCs generated 24-JUL-2014 11:39:12 VCs simplified 24-JUL-2014 11:39:16 File /Users/jj/aadl-medical/pca-pump-beagleboard/pca\_ravenscar/pca\_operation/get\_state.dpc DPCs generated 24-JUL-2014 11:39:12 DPC ZombieScoped 24-JUL-2014 11:39:1 VCs for function\_get\_state : | # | From | To | Proved By | Dead Path | Status | l-----File /Users/jj/aadl-medical/pca-pump-beagleboard/pca\_ravenscar/pca\_operation/get\_time\_between\_activations.vcg function Pca\_Operation.Get\_Time\_Between\_Activations VCs generated 24-JUL-2014 11:39:12 VCs simplified 24-JUL-2014 11:39:16 File /Users/jj/aadl-medical/pca-pump-beagleboard/pca\_ravenscar/pca\_operation/get\_time\_between\_activations.dpc DPCs generated 24-JUL-2014 11:39:12 DPC ZombieScoped 24-JUL-2014 11:39:1 VCs for function\_get\_time\_between\_activations : \_\_\_\_\_\_ | Proved By | Dead Path | Status | | # | From | To

```
File /Users/jj/aadl-medical/pca-pump-beagleboard/pca_ravenscar/pca_operation/get_volume_infused.vcg
function Pca_Operation.Get_Volume_Infused
VCs generated 24-JUL-2014 11:39:12
VCs simplified 24-JUL-2014 11:39:17
File \ / Users/jj/aadl-medical/pca-pump-beagleboard/pca\_ravenscar/pca\_operation/get\_volume\_infused.dpc - file \ / Users/jj/aadl-medical/pca-pump-beagleboard/pca\_ravenscar/pca_operation/get\_volume\_infused.dpc - file \ / Users/jj/aadl-medical/pca-pump-beagleboard/pca\_ravenscar/pca_operation/get_volume\_infused.dpc - file \ / Users/jj/aadl-medical/pca-pump-beagleboard/pca_ravenscar/pca_operation/get_volume\_infused.dpc - file \ / Users/jj/aadl-medical/pca_operation/get_volume\_infused.dpc - file \ / Users/jj/aadl-medical/pca_operation/get_
DPCs generated 24-JUL-2014 11:39:12
DPC ZombieScoped 24-JUL-2014 11:39:1
VCs for function_get_volume_infused :
| # | From | To | Proved By | Dead Path | Status |
| 1 | start | assert @ finish | Inference | Live | IL |
File /Users/jj/aadl-medical/pca-pump-beagleboard/pca_ravenscar/pca_operation/integer_array_store/get.vcg
function Pca_Operation.Integer_Array_Store.Get
VCs generated 24-JUL-2014 11:39:12
VCs simplified 24-JUL-2014 11:39:17
File /Users/jj/aadl-medical/pca-pump-beagleboard/pca_ravenscar/pca_operation/integer_array_store/get.dpc
DPCs generated 24-JUL-2014 11:39:12
DPC ZombieScoped 24-JUL-2014 11:39:1
VCs for function_get :
  ______
                                                                  | Proved By | Dead Path | Status |
| # | From | To
File /Users/jj/aadl-medical/pca-pump-beagleboard/pca_ravenscar/pca_operation/integer_array_store/inc.vcg
procedure Pca_Operation.Integer_Array_Store.Inc
VCs generated 24-JUL-2014 11:39:12
VCs simplified 24-JUL-2014 11:39:17
File /Users/jj/aadl-medical/pca-pump-beagleboard/pca_ravenscar/pca_operation/integer_array_store/inc.dpc
DPCs generated 24-JUL-2014 11:39:12
DPC ZombieScoped 24-JUL-2014 11:39:1
VCs for procedure_inc :
```

1	#	From	To	Proved By	١	Dead Path	١	Status	١
i	1	start	rtc check @ 56	Undischarged	I	Unchecked	1	UU	1
	2	start	assert @ finish	Examiner	- 1	Live		EL	
	3	1	refinement	Examiner	- 1	No DPC		E-	
1	4	1	refinement	Examiner	- 1	No DPC		E-	-

-----

 $\label{local_pca_pump-beagleboard_pca_ravenscar_pca_operation_integer_array\_store_pulse.vcg procedure Pca_Operation.Integer_Array\_Store.Pulse \\$ 

VCs generated 24-JUL-2014 11:39:12

VCs simplified 24-JUL-2014 11:39:17

File /Users/jj/aadl-medical/pca-pump-beagleboard/pca\_ravenscar/pca\_operation/integer\_array\_store/pulse.dpc DPCs generated 24-JUL-2014 11:39:12

DPC ZombieScoped 24-JUL-2014 11:39:1

#### VCs for procedure\_pulse :

From	То	Proved By	Dead Path   Status	3
start	rtc check @ 76	Inference	Unchecked   IU	- 1
start	rtc check @ 76	Inference	Unchecked   IU	- 1
start	assert @ 77	Inference	Live   IL	- 1
77	assert @ 77	Inference	Live   IL	- 1
77	rtc check @ 78	Inference	Unchecked   IU	- 1
start	rtc check @ 80	Inference	Unchecked   IU	- 1
77	rtc check @ 80	Inference	Unchecked   IU	- 1
start	assert @ finish	Examiner	Dead   ED	- 1
77	assert @ finish	Examiner	Live   EL	- 1
İ	refinement	Examiner	No DPC   E-	Ĺ
İ	refinement	Examiner	No DPC   E-	Ĺ
	start   start   start   77   77   start   77	start   rtc check @ 76   start   rtc check @ 76   start   assert @ 77   77   assert @ 77   77   rtc check @ 78   start   rtc check @ 80   77   rtc check @ 80   start   assert @ finish   77   assert @ finish   refinement	start   rtc check @ 76	start   rtc check @ 76

 $\label{local_problem} File $$ / Users/jj/aadl-medical/pca-pump-beagleboard/pca_ravenscar/pca_operation/integer_array_store/put.vcg procedure Pca_Operation.Integer_Array_Store.Put$ 

VCs generated 24-JUL-2014 11:39:12

VCs simplified 24-JUL-2014 11:39:18

DPC ZombieScoped 24-JUL-2014 11:39:1

#### VCs for procedure\_put :

i									
1	#	From	То	Proved By	I	Dead Path	I	Status	ı
1	2 3	start 	rtc check @ 48   assert @ finish   refinement   refinement	Examiner   Examiner	1	Unchecked Live No DPC No DPC	1	EL	1

 $\label{linear_file} File $$ $Users/jj/aadl-medical/pca-pump-beagleboard/pca_ravenscar/pca_operation/integer_array_store/sum.vcg function $Pca_Operation.Integer_Array_Store.Sum $$ $Users/j/aadl-medical/pca-pump-beagleboard/pca_ravenscar/pca_operation/integer_array_store/sum.vcg function $$ Pca_Operation.Integer_Array_Store.Sum $$ $Users/j/aadl-medical/pca-pump-beagleboard/pca_ravenscar/pca_operation/integer_array_store/sum.vcg function $$ $Users/j/aadl-medical/pca-pump-beagleboard/pca_ravenscar/pca_operation/integer_array_store/sum.vcg function $$ $Users/j/aadl-medical/pca-pump-beagleboard/pca_ravenscar/pca_operation/integer_array_store/sum.vcg function $$ $Users/j/aadl-medical/pca-pump-beagleboard/pca_ravenscar/pca_operation/integer_array_store/sum.vcg function $$ $Users/j/aadl-medical/pca-pump-beagleboard/pca_ravenscar/pca_operation/integer_array_store/sum.vcg function $$ $Users/j/aadl-medical/pca_ravenscar/pca_operation/integer_array_store/sum.vcg function $$ $Users/j/aadl-medical/pca_ravenscar/pca_operation/sum-pca_op$ 

VCs generated 24-JUL-2014 11:39:12

VCs simplified 24-JUL-2014 11:39:18

 $\label{local_pca_pump-beagleboard_pca_ravenscar_pca_operation_integer_array\_store/sum.dpc DPCs generated 24-JUL-2014 11:39:12$ 

DPC ZombieScoped 24-JUL-2014 11:39:1

#### VCs for function\_sum :

	#	From	То	Proved By	Dead Path   Status
	1	start	assert @ 65	Inference	Live   IL
	1 2	65	assert @ 65	Undischarged	Live
	3	65	rtc check @ 66	Undischarged	Unchecked   UU
	4	65	assert @ finish	Inference	Live
	5	1	refinement	Examiner	No DPC
	6	1	refinement	Examiner	No DPC
i					

VCs generated 24-JUL-2014 11:39:13

VCs simplified 24-JUL-2014 11:39:18

 $File \ / Users/jj/aadl-medical/pca-pump-beagleboard/pca\_ravenscar/pca\_operation/max\_drug\_per\_hour\_watcher.dpc \ DPCs \ generated \ 24-JUL-2014 \ 11:39:13$ 

DPC ZombieScoped 24-JUL-2014 11:39:1

 ${\tt VCs} \ \ {\bf for} \ \ {\tt task\_type\_max\_drug\_per\_hour\_watcher} \ :$ 

_														-
1	#	I	From	I	То			I	Proved By	I	Dead Path	I	Status	١
-	1		start		assert	@	330		Examiner		Live		EL	
1	2	Τ	330	Ι	assert	@	330	1	Examiner	1	Live	Τ	EL	1
1	3	1	330	1	assert	0	330	-	Examiner	1	Live	$\mathbf{I}$	EL	1
1	4	1	330	1	rtc check	@	332	-	Inference	1	Unchecked	1	IU	1
1	5	1	330	1	rtc check	@	333	-	Inference	1	Unchecked	1	IU	1
1	6	1	330	1	rtc check	@	333	-	Undischarged	-	Unchecked	1	UU	-
1	7	1	330	1	rtc check	@	336	-	Inference	-	Unchecked	1	IU	-
1	8	1	330	1	rtc check	0	337	-	Inference	-	Unchecked		IU	-
1	9	1	330	1	rtc check	0	338	-	Inference	-	Unchecked		IU	-
1	10		330		rtc check	0	339		Inference	-	Unchecked		IU	-
1	11	1	330	-	assert	0	finish	-	Examiner	-	Dead		ED	-
1	12	1	330	-	assert	0	finish	-	Examiner	-	Dead		ED	
l														

 $\label{low_rate.vcg} File $$ / Users/jj/aadl-medical/pca-pump-beagleboard/pca_ravenscar/pca_operation/panel_get_basal_flow_rate.vcg function $$ Pca_Operation.Panel_Get_Basal_Flow_Rate $$ $$$ 

VCs generated 24-JUL-2014 11:39:12

VCs simplified 24-JUL-2014 11:39:19

 $File \ / Users/jj/aadl-medical/pca-pump-beagleboard/pca\_ravenscar/pca\_operation/panel\_get\_basal\_flow\_rate.dpc \ DPCs \ generated \ 24-JUL-2014 \ 11:39:12$ 

DPC ZombieScoped 24-JUL-2014 11:39:1

```
VCs for function_panel_get_basal_flow_rate :
| # | From | To | Proved By | Dead Path | Status |
|-----
File \ / Users/jj/aadl-medical/pca-pump-beagleboard/pca_ravenscar/pca\_operation/panel\_get\_max\_drug\_per\_hour.vcg
function Pca_Operation.Panel_Get_Max_Drug_Per_Hour
VCs generated 24-JUL-2014 11:39:12
VCs simplified 24-JUL-2014 11:39:19
File \ / Users/jj/aadl-medical/pca-pump-beagleboard/pca\_ravenscar/pca\_operation/panel\_get\_max\_drug\_per\_hour.dpc
DPCs generated 24-JUL-2014 11:39:12
DPC ZombieScoped 24-JUL-2014 11:39:1
VCs for function_panel_get_max_drug_per_hour :
| # | From | To | Proved By | Dead Path | Status |
| 1 | start | assert @ finish | Inference | Live | IL |
File /Users/jj/aadl-medical/pca-pump-beagleboard/pca_ravenscar/pca_operation/
   panel_get_minimum_time_between_bolus.vcg
function Pca_Operation.Panel_Get_Minimum_Time_Between_Bolus
VCs generated 24-JUL-2014 11:39:12
VCs simplified 24-JUL-2014 11:39:19
File /Users/jj/aadl-medical/pca-pump-beagleboard/pca_ravenscar/pca_operation/
   panel_get_minimum_time_between_bolus.dpc
DPCs generated 24-JUL-2014 11:39:12
DPC ZombieScoped 24-JUL-2014 11:39:1
VCs for function_panel_get_minimum_time_between_bolus :
| # | From | To
                          | Proved By | Dead Path | Status |
|-----
File /Users/jj/aadl-medical/pca-pump-beagleboard/pca_ravenscar/pca_operation/panel_get_vtbi.vcg
function Pca_Operation.Panel_Get_Vtbi
VCs generated 24-JUL-2014 11:39:12
VCs simplified 24-JUL-2014 11:39:19
File /Users/jj/aadl-medical/pca-pump-beagleboard/pca_ravenscar/pca_operation/panel_get_vtbi.dpc
DPCs generated 24-JUL-2014 11:39:12
DPC ZombieScoped 24-JUL-2014 11:39:1
VCs for function_panel_get_vtbi :
______
                          | Proved By | Dead Path | Status |
| # | From | To
```

```
File /Users/jj/aadl-medical/pca-pump-beagleboard/pca_ravenscar/pca_operation/panel_set_basal_flow_rate.vcg
procedure Pca_Operation.Panel_Set_Basal_Flow_Rate
VCs generated 24-JUL-2014 11:39:12
VCs simplified 24-JUL-2014 11:39:19
File /Users/jj/aadl-medical/pca-pump-beagleboard/pca_ravenscar/pca_operation/panel_set_basal_flow_rate.dpc
DPCs generated 24-JUL-2014 11:39:12
DPC ZombieScoped 24-JUL-2014 11:39:1
VCs for procedure_panel_set_basal_flow_rate :
     ______
| # | From | To | Proved By | Dead Path | Status |
|-----
File /Users/jj/aadl-medical/pca-pump-beagleboard/pca_ravenscar/pca_operation/panel_set_max_drug_per_hour.vcg
procedure Pca_Operation.Panel_Set_Max_Drug_Per_Hour
VCs generated 24-JUL-2014 11:39:12
VCs simplified 24-JUL-2014 11:39:19
File /Users/jj/aadl-medical/pca-pump-beagleboard/pca_ravenscar/pca_operation/panel_set_max_drug_per_hour.dpc
DPCs generated 24-JUL-2014 11:39:12
DPC ZombieScoped 24-JUL-2014 11:39:1
VCs for procedure_panel_set_max_drug_per_hour :
______
| # | From | To
                   | Proved By | Dead Path | Status |
1-----
File /Users/jj/aadl-medical/pca-pump-beagleboard/pca_ravenscar/pca_operation/
   panel_set_minimum_time_between_bolus.vcg
procedure Pca_Operation.Panel_Set_Minimum_Time_Between_Bolus
VCs generated 24-JUL-2014 11:39:12
VCs simplified 24-JUL-2014 11:39:20
File /Users/jj/aadl-medical/pca-pump-beagleboard/pca_ravenscar/pca_operation/
   panel_set_minimum_time_between_bolus.dpc
DPCs generated 24-JUL-2014 11:39:12
DPC ZombieScoped 24-JUL-2014 11:39:1
VCs for procedure_panel_set_minimum_time_between_bolus :
| # | From | To | Proved By | Dead Path | Status |
```

```
File /Users/jj/aadl-medical/pca-pump-beagleboard/pca_ravenscar/pca_operation/panel_set_vtbi.vcg
procedure Pca_Operation.Panel_Set_Vtbi
VCs generated 24-JUL-2014 11:39:12
VCs simplified 24-JUL-2014 11:39:20
File /Users/jj/aadl-medical/pca-pump-beagleboard/pca_ravenscar/pca_operation/panel_set_vtbi.dpc
DPCs generated 24-JUL-2014 11:39:12
DPC ZombieScoped 24-JUL-2014 11:39:2
VCs for procedure_panel_set_vtbi :
| # | From | To | Proved By | Dead Path | Status |
|-----
| 1 | start | rtc check @ 129 | Inference | Unchecked | IU |
| 2 | start | assert @ finish | Examiner
                                       File /Users/jj/aadl-medical/pca-pump-beagleboard/pca_ravenscar/pca_operation/patientbolus.vcg
procedure Pca_Operation.PatientBolus
VCs generated 24-JUL-2014 11:39:12
VCs simplified 24-JUL-2014 11:39:20
File \ / Users/jj/aadl-medical/pca-pump-beagleboard/pca\_ravenscar/pca\_operation/patientbolus.dpc
DPCs generated 24-JUL-2014 11:39:12
DPC ZombieScoped 24-JUL-2014 11:39:2
VCs for procedure_patientbolus :
______
                 | Proved By | Dead Path | Status |
| # | From | To
1-----
                                       | 10 | start | assert @ finish | Examiner
                                                        - 1
| 11 | start | assert @ finish | Examiner
                                                        - 1
File /Users/jj/aadl-medical/pca-pump-beagleboard/pca_ravenscar/pca_operation/rate_controller.vcg
task_type Pca_Operation.Rate_Controller
```

VCs generated 24-JUL-2014 11:39:12

VCs simplified 24-JUL-2014 11:39:28

 $\label{local_pca_pump-beagleboard_pca_ravenscar_pca_operation_rate_controller.dpc DPCs generated 24-JUL-2014 11:39:12$ 

DPC ZombieScoped 24-JUL-2014 11:39:2

 ${\tt VCs} \ \ {\bf for} \ \ {\tt task\_type\_rate\_controller} \ :$ 

#	From	To	Proved By	Dead Path	Status
1	start	rtc check @ 231	Inference	Unchecked	l IU
2	234	rtc check @ 231	Inference	Unchecked	IU
3	234	rtc check @ 231	Inference	Unchecked	IU
4	234	rtc check @ 231	Inference	Unchecked	IU
5	234	rtc check @ 231	Inference	Unchecked	IU
6	234	rtc check @ 231	Inference	Unchecked	IU
7	234	rtc check @ 231	Inference	Unchecked	IU
В	234	rtc check @ 231	Inference	Unchecked	IU
9	234	rtc check @ 231	Inference	Unchecked	IU
10	234	rtc check @ 231	Inference	Unchecked	IU
11	234	rtc check @ 231	Inference	Unchecked	IU
12	234	rtc check @ 231	Inference	Unchecked	IU
13	234	rtc check @ 231	Inference	Unchecked	IU
14	234	rtc check @ 231	Inference	Unchecked	IU
15	234	rtc check @ 231	Inference	Unchecked	l IU
16	234	rtc check @ 231	Inference	Unchecked	
		rtc check @ 231	Inference	Unchecked	
		rtc check @ 231	Inference	Unchecked	
		rtc check @ 231	Inference	Unchecked	
		rtc check @ 231	Inference	Unchecked	
		rtc check @ 231	Inference	Unchecked	
		rtc check @ 231	Inference	Unchecked	
		rtc check @ 231	Inference	Unchecked	
		rtc check @ 231			
			Inference	Unchecked	
		rtc check @ 231	Inference	Unchecked	
		rtc check @ 231	Inference	Unchecked	
	234	rtc check @ 231	Inference	Unchecked	
		rtc check @ 231	Inference	Unchecked	
		rtc check @ 231	Inference	Unchecked	
	:	rtc check @ 231	Inference	Unchecked	
	start		Inference	Unchecked	
		rtc check @ 232	Inference	Unchecked	
		rtc check @ 232	Inference	Unchecked	
		rtc check @ 232	Inference	Unchecked	
		rtc check @ 232	Inference	Unchecked	
	234	rtc check @ 232	Inference	Unchecked	IU
37	234	rtc check @ 232	Inference	Unchecked	l IU
38	234	rtc check @ 232	Inference	Unchecked	IU
39	234	rtc check @ 232	Inference	Unchecked	IU
10	234	rtc check @ 232	Inference	Unchecked	l IU
11	234	rtc check @ 232	Inference	Unchecked	l IU
12	234	rtc check @ 232	Inference	Unchecked	l IU
13	234	rtc check @ 232	Inference	Unchecked	IU
14	234	rtc check @ 232	Inference	Unchecked	IU
15	234	rtc check @ 232	Inference	Unchecked	l IU
16	234	rtc check @ 232	Inference	Unchecked	l IU
17	234	rtc check @ 232	Inference	Unchecked	l IU
18	234	rtc check @ 232	Inference	Unchecked	
19		rtc check @ 232	Inference	Unchecked	
		rtc check @ 232	Inference	Unchecked	
51		rtc check @ 232	Inference	Unchecked	
52		rtc check @ 232	Inference	Unchecked	
53	234	rtc check @ 232	Inference	Unchecked	
54		rtc check @ 232	Inference	Unchecked	
		rtc check @ 232	Inference	Unchecked	
56		rtc check @ 232	Inference	Unchecked	
57		rtc check @ 232	Inference	Unchecked	
<i>-</i> 1	, 20 <del>1</del>	I TOO CHECK & TOT	· THIELEUCE	l onchecyed	. 10

59	234	rtc check @ 232	Inference	Unchecked	IU
	1 234	rtc check @ 232	Inference	Unchecked	
		assert @ 234	Examiner	Live	EL I
	1 234	assert @ 234	Examiner	Live	EL
		assert @ 234	Examiner	Live	EL I
	1 234	assert @ 234	Examiner	Live	EL I
	l 234	assert @ 234	Examiner	Live	EL
	l 234	assert @ 234	Examiner	Live	EL
67	l 234	assert @ 234	Examiner	Live	EL İ
	l 234	assert @ 234	Examiner	Live	EL İ
69	234	assert @ 234	Examiner	Live	EL
70	234	assert @ 234	Examiner	Live	EL
71	234	assert @ 234	Examiner	Live	EL
72	234	assert @ 234	Examiner	Live	EL
73	234	assert @ 234	Examiner	Live	EL
74	234	assert @ 234	Examiner	Live	EL
75	234	assert @ 234	Examiner	Live	EL
76	234	assert @ 234	Examiner	Live	EL
77	234	assert @ 234	Examiner	Live	EL
78	234	assert @ 234	Examiner	Live	EL
79	234	assert @ 234	Examiner	Live	EL
	234	assert @ 234	Examiner	Live	EL
	234	assert @ 234	Examiner	Live	EL
	234	assert @ 234	Examiner	Live	EL
	234	assert @ 234	Examiner	Live	EL
		assert @ 234	Examiner	Live	EL
		assert @ 234	Examiner	Live	EL
86	234	assert @ 234	Examiner	Live	EL
	234	assert @ 234   assert @ 234	Examiner	Live	EL
	234   234		Examiner	Live	EL
	l 234 l 234	assert @ 234   assert @ 234	Examiner   Examiner	Live	EL   EL
	234	rtc check @ 240	Inference	Unchecked	
	l 234	rtc check @ 240	Inference	Unchecked	
93	1 234	rtc check @ 241	Inference	Unchecked	
		rtc check @ 241	Undischarged	Unchecked	
		rtc check @ 242	Inference	Unchecked	
	l 234	rtc check @ 243	Inference	Unchecked	
97	234	pre check @ 244	Inference	Unchecked	IU
98	234	rtc check @ 247	Inference	Unchecked	IU
99	234	rtc check @ 248	Inference	Unchecked	IU
100	234	rtc check @ 248	Inference	Unchecked	IU
101	234	rtc check @ 249	Inference	Unchecked	IU
102	234	rtc check @ 249	Undischarged	Unchecked	UU
103	234	rtc check @ 250	Inference	Unchecked	IU
	234	rtc check @ 251	Inference	Unchecked	
105		pre check @ 252	Inference	Unchecked	
	234	rtc check @ 256	Inference	Unchecked	
	234	rtc check @ 257	Inference	Unchecked	
	234	rtc check @ 257	Inference	Unchecked	
		rtc check @ 258	Inference	Unchecked	
		rtc check @ 258	Undischarged	Unchecked	
		rtc check @ 259	Inference	Unchecked	
	234	rtc check @ 260	Inference	Unchecked	-
	234	pre check @ 261	Inference	Unchecked     Unchecked	
		rtc check @ 265   rtc check @ 265	Inference	1 1 1 1 1 1 1 1	
			Inference	Unchecked	
	l 234 l 234	rtc check @ 265   rtc check @ 265	Inference   Inference	Unchecked	
		rtc check @ 266	Inference	Unchecked	
	234	rtc check @ 266	Inference	Unchecked	
		rtc check @ 266	Undischarged	Unchecked	
		rtc check @ 266	Undischarged	Unchecked	
		rtc check @ 267	Inference	Unchecked	
		rtc check @ 267	Inference	Unchecked	
				1	

124			Inference	Unchecked	
125	234	rtc check @ 270	Inference	Unchecked	IU
126	234	rtc check @ 271	Undischarged	Unchecked	ן עט
127	234	rtc check @ 271	Undischarged	Unchecked	UU
128	234	rtc check @ 272	Inference	Unchecked	IU
129	234	rtc check @ 272	Inference	Unchecked	IU
130	234	rtc check @ 275	Inference	Unchecked	IU
131	234	rtc check @ 275	Inference	Unchecked	IU
1 132		rtc check @ 275	Inference	Unchecked	
133		rtc check @ 275	Inference	Unchecked	
134		pre check @ 276	Inference	Unchecked	
135			Inference	Unchecked	
	l 234	pre check @ 276		Unchecked	
		pre check © 276	Inference		
	234	pre check @ 276	Inference	Unchecked	
	234	rtc check @ 278	Undischarged	Unchecked	
	234	rtc check @ 278	Undischarged	Unchecked	
140		rtc check @ 278	Undischarged	Unchecked	UU
141	234	rtc check @ 278	Undischarged	Unchecked	UU
142	234	rtc check @ 282	Inference	Unchecked	IU
143	234	rtc check @ 282	Inference	Unchecked	IU
144	234	rtc check @ 282	Inference	Unchecked	IU
145	234	rtc check @ 282	Inference	Unchecked	IU
146	234	rtc check @ 285	Inference	Unchecked	IU
147	234	rtc check @ 285	Inference	Unchecked	IU
148	234	rtc check @ 285	Inference	Unchecked	IU
	234	rtc check @ 285	Inference	Unchecked	
		rtc check @ 291		Unchecked	
	234	rtc check @ 292	Inference	Unchecked	
152		rtc check @ 292	Inference	Unchecked	
	234	rtc check @ 293	Inference	Unchecked	
1 154		rtc check @ 293		Unchecked	
154		rtc check @ 293	Undischarged Inference	Unchecked	
156		rtc check @ 295	Inference	Unchecked	
	234	pre check @ 296	Inference	Unchecked	
	234	rtc check @ 300	Inference	Unchecked	
		rtc check @ 300	Inference	Unchecked	
	234	rtc check @ 301	Inference	Unchecked	
161		rtc check @ 301	Inference	Unchecked	
162	234	rtc check @ 302	Undischarged	Unchecked	UU
163	234	rtc check @ 302	Undischarged	Unchecked	UU
164	234	rtc check @ 302	Inference	Unchecked	IU
165	234	rtc check @ 302	Inference	Unchecked	IU
166	234	rtc check @ 303	Inference	Unchecked	IU
167	234	rtc check @ 303	Inference	Unchecked	IU
168	234	rtc check @ 303	Undischarged	Unchecked	UU
169	234	rtc check @ 303	Undischarged	Unchecked	UU I
170	234	rtc check @ 304	Inference	Unchecked	IU
171	234	rtc check @ 304	Inference	Unchecked	IU
172	234	rtc check @ 307	Inference	Unchecked	IU
173		rtc check @ 307	Inference	Unchecked	
	234	rtc check @ 308	Inference	Unchecked	IU
175		rtc check @ 308	Inference	Unchecked	
		rtc check @ 311		Unchecked	
	1 234	rtc check @ 311	Inference	Unchecked	
	234	rtc check @ 311	Inference	Unchecked	
	234	rtc check @ 311	Inference	Unchecked     Unchecked	
Į.					
180		pre check @ 312	Inference	Unchecked	
	234	pre check @ 312	Inference	Unchecked	
182		pre check @ 312	Inference	Unchecked	
	234	pre check @ 312		Unchecked	
184		rtc check @ 314	Undischarged	Unchecked	
Į.		rtc check @ 314	Undischarged	Unchecked	
	234	rtc check @ 314	Undischarged	Unchecked	
187		rtc check @ 314	Undischarged	Unchecked	
188	234	rtc check @ 316	Inference	Unchecked	IU

	189   234	rtc check	@ 316	-	Inference	Unchecked		IU	-
İ	190   234	rtc check	@ 316	-	Inference	Unchecked		IU	-
İ	191   234	rtc check	@ 316	-	Inference	Unchecked		IU	-
ĺ	192   234	assert	@ finish		Examiner	Dead		ED	-
	193   234	assert	@ finish	-	Examiner	Dead		ED	-
	194   234	assert	@ finish	-	Examiner	Dead		ED	-
ĺ	195   234	assert	@ finish		Examiner	Dead		ED	-
ĺ	196   234	assert	@ finish	-	Examiner	Dead		ED	-
	197   234	assert	@ finish	-	Examiner	Dead		ED	-
	198   234	assert	@ finish	-	Examiner	Dead		ED	-
ĺ	199   234	assert	@ finish		Examiner	Dead		ED	-
	200   234	assert	@ finish	-	Examiner	Dead		ED	-
	201   234	assert	@ finish		Examiner	Dead		ED	-
	202   234	assert	@ finish	-	Examiner	Dead		ED	-
	203   234	assert	@ finish		Examiner	Dead		ED	
	204   234	assert	@ finish		Examiner	Dead		ED	
	205   234	assert	@ finish	-	Examiner	Dead	l	ED	-
	206   234	assert	@ finish		Examiner	Dead		ED	
	207   234	assert	@ finish	-	Examiner	Dead	l	ED	-
	208   234	assert	@ finish	-	Examiner	Dead	l	ED	-
	209   234	assert	@ finish	-	Examiner	Dead		ED	
	210   234	assert	@ finish	-	Examiner	Dead	l	ED	-
	211   234	assert	@ finish	-	Examiner	Dead	l	ED	-
	212   234	assert	@ finish	-	Examiner	Dead		ED	
	213   234	assert	@ finish	-	Examiner	Dead		ED	
	214   234	assert	@ finish	-	Examiner	Dead	l	ED	-
	215   234	assert	@ finish	-	Examiner	Dead		ED	
	216   234	assert	@ finish	-	Examiner	Dead		ED	
	217   234	assert	@ finish	١	Examiner	Dead	l	ED	-
	218   234	•	@ finish		Examiner	Dead	l	ED	
	219   234	•	@ finish	-	Examiner	Dead		ED	-
	220   234	assert	@ finish	1	Examiner	Dead	l	ED	I

 $\label{local_pca_pump-beagleboard_pca_ravenscar_pca_operation_startpump.vcg procedure Pca_Operation.StartPump} \\$ 

VCs generated 24-JUL-2014 11:39:12

VCs simplified 24-JUL-2014 11:39:36

 $\label{local_pca_pump-beagleboard_pca_ravenscar_pca_operation/startpump.dpc DPCs generated 24-JUL-2014 11:39:12$ 

DPC ZombieScoped 24-JUL-2014 11:39:3

VCs for procedure\_startpump :

	From		Proved By	Dead Path   Status
1	start	rtc check @ 166 assert @ finish		Unchecked   IU     Live   EL

 $\label{local_prop_prop} File $$ /Users/jj/aadl-medical/pca-pump-beagleboard/pca_ravenscar/pca_operation/stoppump.vcg procedure $$ Pca_Operation.StopPump $$$ 

VCs generated 24-JUL-2014 11:39:12

VCs simplified 24-JUL-2014 11:39:36

 $\label{local_pca_pump-beagleboard_pca_ravenscar_pca_operation_stoppump.dpc} \ DPCs \ generated \ 24-JUL-2014 \ 11:39:12$ 

```
DPC ZombieScoped 24-JUL-2014 11:39:3
VCs for procedure_stoppump :
| # | From | To | Proved By | Dead Path | Status |
_____
Summary:
The following subprograms have VCs proved false:
   1 /Users/jj/aadl-medical/pca-pump-beagleboard/pca_ravenscar/pca_engine/start_pumping.vcg
   1 /Users/jj/aadl-medical/pca-pump-beagleboard/pca_ravenscar/pca_engine/stop_pumping.vcg
   {\tt 1 \hspace{0.1cm}/Users/jj/aadl-medical/pca-pump-beagleboard/pca\_ravenscar/pca\_engine/write\_signal.vcg}
The following subprograms have undischarged VCs (excluding those proved false):
   2 /Users/jj/aadl-medical/pca-pump-beagleboard/pca_ravenscar/pca_operation/get_time_between_activations.
  1 /Users/jj/aadl-medical/pca-pump-beagleboard/pca_ravenscar/pca_operation/integer_array_store/get.vcg
  1 /Users/jj/aadl-medical/pca-pump-beagleboard/pca_ravenscar/pca_operation/integer_array_store/inc.vcg
  1 /Users/jj/aadl-medical/pca-pump-beagleboard/pca_ravenscar/pca_operation/integer_array_store/put.vcg
  2 /Users/jj/aadl-medical/pca-pump-beagleboard/pca_ravenscar/pca_operation/integer_array_store/sum.vcg
  1 /Users/jj/aadl-medical/pca-pump-beagleboard/pca_ravenscar/pca_operation/max_drug_per_hour_watcher.vcg
  1 /Users/jj/aadl-medical/pca-pump-beagleboard/pca_ravenscar/pca_operation/patientbolus.vcg
 20 /Users/jj/aadl-medical/pca-pump-beagleboard/pca_ravenscar/pca_operation/rate_controller.vcg
Proof strategies used by subprograms
Total subprograms with at least one VC proved by examiner: 15
Total subprograms with at least one VC proved by simplifier: 20
Total subprograms with at least one VC proved by simplifier: 20
Total subprograms with at least one VC proved by contradiction: 0
Total subprograms with at least one VC proved with user proof rule: 0
Total subprograms with at least one VC proved with user proof rule:
Total subprograms with at least one VC proved by Victor:
Total subprograms with at least one VC proved by Riposte:
Total subprograms with at least one VC proved using checker:
                                                                        0
Total subprograms with at least one VC discharged by review:
Maximum extent of strategies used for fully proved subprograms:
Total subprograms with proof completed by simplifier:
Total subprograms with proof
Total subprograms with proof completed with user defined rules:
Total subprograms with proof completed by Victor:
Total subprograms with proof completed by Riposte:
Total subprograms with proof completed by checker:
                                                                         0
Total subprograms with VCs discharged by review:
Overall subprogram summary:
Total subprograms fully proved:
                                                                      14
                                                                      8 <<<
3 <<<
Total subprograms with at least one undischarged VC:
Total subprograms with at least one false VC:
Total subprograms for which VCs have been generated:
                                                                       25
```

ZombieScope Summary:

```
Total subprograms for which DPCs have been generated:
                                                         25
Total number subprograms with dead paths found:
Total number of dead paths found:
                                                         32
VC summary:
Note: (User) denotes where the Simplifier has proved VCs using one {\bf or}
   more user-defined proof rules.
Total VCs by type:
               Total Examiner Simplifier False
                                            Undisc.
              96 80 12 3
12 0 12 0
0 0 0 0
187 0 159 0
Assert/Post
Precondition
                                                  0
                         0
Check stmnt.
                                                 0
Runtime check
                                                 28
             10
                       10
                                                0
                                0
                                       0
Refinem. VCs
Inherit. VCs
                           0
                                         0
                                                 0
_____
                                   183 3 29 <<<
Totals:
                 305
                          90
%Totals:
                          30%
                                   60% 1%
                                                10%
======= End of Semantic Analysis Summary ==============
```

**Listing B.1**: POGS report for PCA Pump prototype

## Appendix C

1 property set BLESS\_Properties is

## Simplified PCA pump AADL models

This appendix contains simplified AADL/BLESS models. They were created based on AADL/BLESS models of PCA pump, created by Brian Larson.

```
with AADL_Project;
    Supported_Operators : list of aadlstring applies to ( data );
    Supported_Relations : list of aadlstring applies to ( data );
6 Radix : AADL_Project::Size_Units applies to ( data );
7 end BLESS_Properties;
                                Listing C.1: BLESS_Properties property set
1 property set BLESS is
2 Assertion : aadlstring applies to ( all );
   Typed: aadlstring applies to (all);
4 Invariant: aadlstring applies to (all);
5 end BLESS;
                                     Listing C.2: Bless property set
 1 property set PCA_Properties is
   with PCA_Types;
4 Drug_Library_Size : constant aadlinteger => 500;
    Fault_Log_Size : constant aadlinteger => 150;
6 Event_Log_Size : constant aadlinteger => 1500;
7 KVO_Rate_Constant : constant aadlinteger => 1;
8   KVO_Rate : constant aadlinteger => PCA_Properties::KVO_Rate_Constant;
9 Max_Rate : constant addlinteger => 10;
10 end PCA_Properties;
```

Listing C.3: PCA\_Properties property set

```
1 package BLESS_Types public
 2 with Base_Types, BLESS_Properties, Data_Model, Memory_Properties, BLESS;
 4 data Integer extends Base_Types::Integer
     properties --operators and relation symbols defined for Integer
       BLESS::Typed => "integer";
       BLESS_Properties::Supported_Operators => ("+", "*", "-", "/", "mod", "rem", "**");
       BLESS_Properties::Supported_Relations => ("=", "!=", "<", "<=", ">=", ">");
 8
 9 end Integer;
10
11 data Natural extends Base_Types::Natural
     properties --operators and relation symbols defined for Natural
       BLESS::Typed => "natural";
13
       BLESS_Properties::Supported_Operators => ("+", "*", "-", "/", "mod", "rem", "**");
BLESS_Properties::Supported_Relations => ("=", "!=", "<", "<=", ">=", ">=", ">");
14
15
16 end Natural;
17
18 data Real extends Base_Types::Float
19
     properties --operators and relation symbols defined for Float
20
       BLESS::Typed => "real";
       BLESS_Properties::Supported_Operators => ("+", "*", "-", "/", "**");
21
22
       BLESS_Properties::Supported_Relations => ("=", "!=", "<", "<=", ">=", ">");
23 end Real;
24
25 data String extends Base_Types::String
     properties --operators and relation symbols defined for String
27
       BLESS::Typed => "string";
       BLESS_Properties::Supported_Operators => ("+", "-"); --just concatenation
BLESS_Properties::Supported_Relations => ("=", "!=", "<", "<=", ">=", ">=", ">");
28
29
30 end String;
31
32 data Fixed_Point
33 properties --operators and relation symbols defined for fixed-point arithmetic
       BLESS::Typed => "fixed";
       BLESS_Properties::Supported_Operators => ("+", "*", "-", "/", "**");
35
       BLESS_Properties::Supported_Relations => ("=", "!=", "<", "<=", ">=", ">");
37
       Data_Model::Data_Representation => Integer;
38 end Fixed_Point;
39
40 data Time extends Base_Types::Integer_64 --in milliseconds
     properties --operators and relation symbols defined for Time
42
       --don't have a way to say that Time may be multiplied or divided by scalar
43
       --but not another Time
44
       BLESS::Typed => "integer";
       BLESS_Properties::Supported_Operators => ("+", "*", "-", "/");
45
       BLESS_Properties::Supported_Relations => ("=", "!=", "<", "<=", ">=", ">");
46
47 end Time;
49 end BLESS_Types;
```

Listing C.4: BLESS\_Types package

```
1 package ICE_Types
 2 public
 3 with Data_Model;
 4 with Base_Types;
     data Milliliter
     properties
       Data_Model::Data_Representation => Integer;
       Data_Model::Base_Type => (classifier (Base_Types::Unsigned_16)); --two bytes for 0-1000 ml
 8
 9
       Data_Model::Integer_Range => 0 .. 1000;
10
       Data_Model::Measurement_Unit => "ml";
11
     end Milliliter;
12
     data Milliliter_Per_Hour
13
14
     properties
15
       Data_Model::Data_Representation => Integer;
16
       Data_Model::Base_Type => (classifier (Base_Types::Unsigned_16)); --two bytes for 0-1000 ml/hr
17
       Data_Model::Integer_Range => 0 .. 1000;
18
       Data_Model::Measurement_Unit => "ml_per_hr";
19
     end Milliliter_Per_Hour;
20
21
     data Microliter_Per_Hour
22
     properties
23
       Data_Model::Data_Representation => Integer;
24
       Data_Model::Base_Type => (classifier (Base_Types::Unsigned_16)); --two bytes for 0-1000 ul/hr
25
       Data_Model::Integer_Range => 0 .. 1000;
26
      Data_Model::Measurement_Unit => "ul_per_hr";
27
     end Microliter_Per_Hour;
28
29
     data Minute
30
     properties
31
       Data_Model::Data_Representation => Integer;
       Data_Model::Base_Type => (classifier (Base_Types::Unsigned_16)); --two bytes for 0-1000 minutes
33
       Data_Model::Integer_Range => 0 .. 1000;
34
       Data_Model::Measurement_Unit => "min";
35
     end Minute;
36
37
     data Alarm_Signal --according to IEC 60601-1-8/FDIS AAA.201.8 ALARM SIGNAL inactivation states
38
     properties
39
       Data_Model::Data_Representation => Enum;
       Data_Model::Enumerators => ("On", "Alarm_Off", "Alarm_Paused", "Audio_Off", "Audio_Paused");
40
41
     end Alarm_Signal;
42
43
     data Percent
44
     properties
45
       Data_Model::Data_Representation => Integer;
46
       Data_Model::Base_Type => (classifier (Base_Types::Unsigned_8)); -- one byte for 0-100 percent
47
       Data_Model::Integer_Range => 0 .. 100;
48
     end Percent;
49
50
     data Minute_Count extends Base_Types::Integer
51
     end Minute_Count;
52
53
     data Second_Count extends Base_Types::Integer
54
     end Second_Count;
55
56 end ICE_Types;
```

Listing C.5: ICE\_Types package

```
1 package PCA_Types
 2 public
     with Base_Types, Data_Model, PCA_Properties, ICE_Types, BLESS_Types, BLESS;
 4
 5 data Alarm_Type
     properties
       BLESS::Typed=>"enumeration (
 8
             No_Alarm,
 9
             Pump_Overheated,
10
             Defective_Battery,
11
             Low_Battery,
12
                 POST_Failure,
13
             RAM_Failure,
14
             ROM_failure,
15
             CPU_Failure,
16
             Thread_Monitor_Failure,
17
             Air_In_Line,
18
             Upstream_Occlusion,
19
             Downstream_Occlusion,
20
             Empty_Reservoir,
21
             Basal_Overinfusion,
22
             Bolus_Overinfusion,
23
             Square_Bolus_Overinfusion)";
24
       Data_Model::Data_Representation => Enum;
25
       Data_Model::Enumerators => (
26
         "No_Alarm",
27
         "Pump_Overheated",
28
         "Defective_Battery",
29
         "Low_Battery",
30
           "POST_Failure",
31
           "RAM_Failure",
           "ROM_failure",
33
           "CPU_Failure",
34
           "Thread_Monitor_Failure",
           "Air_In_Line",
35
36
           "Upstream_Occlusion",
37
           "Downstream_Occlusion",
38
           "Empty_Reservoir",
39
         "Basal_Overinfusion",
40
         "Bolus_Overinfusion",
41
         "Square_Bolus_Overinfusion");
42 end Alarm_Type;
43
44 data Warning_Type
     properties
45
46
       BLESS::Typed=>
47
         "enumeration (No_Warning,
48
             Over_Max_Drug_Per_Hour,
49
             Soft_Limit,
50
             Low_Reservoir,
51
             Priming_Failure,
52
             Basal_Underinfusion,
53
             Bolus_Underinfusion,
54
             Square_Bolus_Underinfusion,
55
             Input_Needed,
56
             Long_Pause,
57
             Drug_Not_In_Library,
58
             Hard_Limit_Violated,
59
             Voltage_OOR)";
60
       Data_Model::Data_Representation => Enum;
61
       Data_Model::Enumerators => (
62
         "No_Warning",
63
         "Over_Max_Drug_Per_Hour",
64
           "Soft_Limit",
           "Low_Reservoir",
```

```
66
            "Priming_Failure",
 67
          "Basal_Underinfusion",
 68
          "Bolus_Underinfusion",
 69
          "Square_Bolus_Underinfusion",
 70
          "Input_Needed",
 71
          "Long_Pause",
 72
          "Drug_Not_In_Library",
 73
          "Hard_Limit_Violated",
 74
          "Voltage_OOR");
 75 end Warning_Type;
 76
 77 data Status_Type
 78
      properties
 79
        BLESS::Typed=>"enumeration (Stopped,Bolus,Basal,KVO,Square_Bolus)";
 80
        Data_Model::Data_Representation => Enum;
 81
        Data_Model::Enumerators => ("Stopped", "Bolus", "Basal", "KVO", "Square_Bolus");
 82 end Status_Type;
 83
 84 data Flow_Rate --dose rate
 85
      properties
        BLESS::Typed=>"integer";
 86
 87
        Data_Model::Base_Type => (classifier(Base_Types::Integer_16));
 88
        Data_Model::Measurement_Unit => "ml/hr";
 89 end Flow_Rate;
90
91 data Drug_Volume --volume of VTBI
     properties
92
93
        BLESS::Typed=>"integer";
94
        Data_Model::Base_Type => (classifier(Base_Types::Integer_16));
95
        Data_Model::Measurement_Unit => "ml";
96 end Drug_Volume;
97
98 data Drug_Weight --string representing what drug, conectration, and volume is in the reservoir
99
     properties
100
        BLESS::Typed=>"integer";
        Data_Model::Base_Type => (classifier(Base_Types::Integer_16));
        Data_Model::Measurement_Unit => "mg";
103 end Drug_Weight;
104
105 data Drug_Concentration \, --string representing what drug, conectration, and volume is in the reservoir
107
        BLESS::Typed=>"integer";
108
        Data_Model::Base_Type => (classifier(Base_Types::Integer));
109
        Data_Model::Measurement_Unit => "mg/l";
110 end Drug_Concentration;
111
112 data Drug_Record --holds pharmacy data for a drug that may be used with the pump
     properties
113
114
        BLESS::Typed =>
115
        "record (
116
          Amount : PCA_Types::Drug_Weight;
                                                          -- The weight of the drug dissolved in the diluent (mg)
          {\tt Concentration: PCA\_Types::Drug\_Concentration; --Drug \ concentration; \ as \ prescribed}
117
118
          Vtbi_Lower_Soft : PCA_Types::Drug_Volume;
                                                          --Lower soft limit of drug volume to be infused
119
          Vtbi_Lower_Hard : PCA_Types::Drug_Volume;
                                                          --Lower hard limit of drug volume to be infused
120
          Vtbi_Typical : PCA_Types::Drug_Volume;
                                                          --Typical drug volume to be infused
121
          Vtbi_Upper_Soft : PCA_Types::Drug_Volume;
                                                          --Upper soft limit of drug volume to be infused
122
                                                          --Upper hard limit of drug volume to be infused
          Vtbi_Upper_Hard : PCA_Types::Drug_Volume;
123
          Basal_Rate_Lower_Soft : PCA_Types::Flow_Rate;
                                                          --Lower soft limit of basal drug dose rate
124
          Basal_Rate_Lower_Hard : PCA_Types::Flow_Rate;
                                                          --Lower hard limit of basal drug dose rate
125
          Basal_Rate_Typical : PCA_Types::Flow_Rate;
                                                          --Typical basal drug dose rate
126
          Basal_Rate_Upper_Soft : PCA_Types::Flow_Rate;
                                                          --Upper soft limit of basal drug dose rate
          Basal_Rate_Upper_Hard : PCA_Types::Flow_Rate;
127
                                                          --Upper hard limit of basal drug dose rate
128
          Bolus_Typical : PCA_Types::Drug_Volume;
                                                          --Typical Value of Bolus Volume
129
          Square_Bolus_rate_typical : PCA_Types::Flow_Rate;
                                                                    --Typical duration of clinician commanded
```

```
130
          )";
131
        Data_Model::Data_Representation => Struct;
132
        Data_Model::Element_Names =>
133
          ( "Amount",
                                       -- The weight of the drug dissolved in the diluent (mg)
134
          "Concentration",
                                    --Drug concentration; as prescribed
135
          "Vtbi_Lower_Soft",
                                    --Lower soft limit of drug volume to be infused
136
          "Vtbi_Lower_Hard",
                                    --Lower hard limit of drug volume to be infused
          "Vtbi_Typical",
137
                                    --Typical drug volume to be infused
138
          "Vtbi_Upper_Soft",
                                    --Upper soft limit of drug volume to be infused
139
          "Vtbi_Upper_Hard",
                                    --Upper hard limit of drug volume to be infused
                                    --Lower soft limit of basal drug dose rate
140
          "Basal_Rate_Lower_Soft",
                                    --Lower hard limit of basal drug dose rate
141
          "Basal_Rate_Lower_Hard",
          "Basal_Rate_Typical",
142
                                     --Typical basal drug dose rate
143
          "Basal_Rate_Upper_Soft",
                                    --Upper soft limit of basal drug dose rate
144
          "Basal_Rate_Upper_Hard",
                                    --Upper hard limit of basal drug dose rate
                                     --Typical Value of Bolus Volume
145
          "Bolus_Typical",
146
          "Square_Bolus_Rate_Typical"
                                            --Typical rate of clinician commanded bolus
147
          ):
        Data_Model::Base_Type =>
148
149
          ( classifier(Drug_Weight),
                                              --amount
150
            classifier(Drug_Concentration), --concentration
151
            classifier(Drug_Volume),
                                         --vtbi_lower_soft
152
            classifier(Drug_Volume),
                                         --vtbi_lower_hard
153
            classifier(Drug_Volume),
                                          --vtbi_typical
154
            classifier(Drug_Volume),
                                         --vtbi_upper_soft
155
            classifier(Drug_Volume),
                                         --vtbi_upper_hard
156
            classifier(Flow_Rate),
                                              --basal_rate_lower_soft
157
            classifier(Flow_Rate),
                                              --basal_rate_lower_hard
158
            classifier(Flow_Rate),
                                              --basal_rate_typical
159
            classifier(Flow_Rate),
                                              --basal_rate_upper_soft
                                              --basal_rate_upper_hard
160
            classifier(Flow_Rate),
161
            classifier(Drug_Volume),
                                         --bolus_typical
162
            classifier(Flow_Rate)
                                     --ssquare_bolus_rate_typical
163
164 end Drug_Record;
166
167 data Drug_Library --holds drug records for all drugs approved by the hospital pharmacy
168
169
        BLESS::Typed => "array [PCA_Properties::Drug_Library_Size] of PCA_Types::Drug_Record";
170
        Data_Model::Data_Representation => Array;
171
        Data_Model::Base_Type => (classifier(Drug_Record));
172
        Data_Model::Dimension => (PCA_Properties::Drug_Library_Size);
173 end Drug_Library;
174
175 data Prescription
     properties
176
177
        BLESS::Typed =>
178
        "record (
        Concentration : Drug_Concentration;
179
180
        Initial_Volume : Drug_Volume;
181
        Basal_Flow_Rate : Flow_Rate;
182
        Vtbi : Drug_Volume;
183
        Max_Drug_Per_Hour : Drug_Volume;
184
        Minimum_Time_Between_Bolus : ICE_Types::Minute;
185
186
        Data_Model::Data_Representation => Struct;
187
        Data_Model::Element_Names =>
188
          ( "Concentration",
189
        "Initial_Volume",
190
        "Basal_Flow_Rate",
191
        "Vtbi",
192
        "Max_Drug_Per_Hour",
193
        "Minimum_Time_Between_Bolus"
194
```

```
195
        Data_Model::Base_Type =>
196
          ( classifier(Drug_Concentration), --concentration
197
            classifier(Drug_Volume),
                                              --initial volume
198
            classifier(Flow_Rate),
                                              --basal flow rate
199
            classifier(Drug_Volume),
                                              --VTBI
200
            classifier(Drug_Volume),
                                              --maximum drug allowed per hour
201
            classifier(ICE_Types::Minute)
                                             --min time between bolus doses
202
203 end Prescription;
204
205 data Fault_Record --record of fault for log
        BLESS::Typed => "record (Alarm:Alarm_Type; Warning:Warning_Type; Occurrence_Time:BLESS_Types::Time;)";
207
208
        Data_Model::Data_Representation => Struct;
209
        Data_Model::Element_Names => ("Alarm", "Warning", "Occurrence_Time");
210
        Data_Model::Base_Type => ( classifier(Alarm_Type),classifier(Warning_Type),classifier(BLESS_Types::Time))
211 end Fault_Record;
212
213 data Fault_Log --holds records of faults
214
     properties
215
        BLESS::Typed => "array [PCA_Properties::Fault_Log_Size] of PCA_Types::Fault_Record";
216
        Data_Model::Data_Representation => Array;
217
        Data_Model::Base_Type => (classifier(Fault_Record));
        Data_Model::Dimension => (PCA_Properties::Fault_Log_Size);
218
219 end Fault_Log;
220
221 data Event_Record --record of event for log
222
     properties
223
        BLESS::Typed => "record ( Time : BLESS_Types::Time)";
224
        Data_Model::Data_Representation => Struct;
        Data_Model::Element_Names => ( "Time" );
226
        Data_Model::Base_Type => (classifier(BLESS_Types::Time));
227 end Event_Record;
228
229 data Event_Log --holds records of events
230
     properties
231
        BLESS::Typed => "array [PCA_Properties::Event_Log_Size] of PCA_Types::Event_Record";
232
        Data_Model::Data_Representation => Array;
233
        Data_Model::Base_Type => (classifier(Event_Record));
234
        Data_Model::Dimension => (PCA_Properties::Event_Log_Size);
235 end Event_Log;
236
237 data Infusion_Type
                        --used for over- and under-infusion alarms
238
     properties
239
        BLESS::Typed=>"enumeration(Bolus_Infusion, Square_Infusion, Basal_Infusion, KVO_Infusion)";
240
        Data_Model::Data_Representation => Enum;
241
        Data_Model::Enumerators => ("Bolus_Infusion", "Square_Infusion", "Basal_Infusion", "KVO_Infusion");
242 end Infusion_Type;
243
244 data Pump_Fault_Type
245
     properties
246
        BLESS::Typed=>"enumeration(Prime_Failure, Pump_Hot, Bubble, Upstream_Occlusion_Fault,
        Downstream_Occlusion_Fault, Overinfusion, Underinfusion)";
247
        Data_Model::Data_Representation => Enum;
        Data_Model::Enumerators => ("Prime_Failure","Pump_Hot","Bubble","Upstream_Occlusion_Fault","
248
        Downstream_Occlusion_Fault","Overinfusion","Underinfusion");
249 end Pump_Fault_Type;
250
251 end PCA_Types;
```

Listing C.6: PCA\_Types package

```
1 package PCA_Operation
    public
 3
    with PCA_Properties, Base_Types, BLESS, BLESS_Types, ICE_Types, PCA_Types;
 5 \ \mathbf{system} operation
    features
      Start_Button_Pressed: in event port;
 8
      Stop_Button_Pressed: in event port;
9
      Patient_Request_Bolus: in event port;
10
      Clinician_Request_Bolus: in event port;
11
      Bolus_Duration: in event data port ICE_Types::Minute;
      Infusion_Flow_Rate: out data port PCA_Types::Flow_Rate;
12
13
       System_Status: out data port PCA_Types::Status_Type;
14
       Rx: in event data port PCA_Types::Prescription;
15 end operation;
16
17 system implementation operation.imp
18
     subcomponents
19
       operation_process: process operation_process.imp;
20
     connections
      start: port Start_Button_Pressed -> operation_process.Start_Button_Pressed;
21
22
       stop: port Stop_Button_Pressed -> operation_process.Stop_Button_Pressed;
23
       pbp: port Patient_Request_Bolus -> operation_process.Patient_Request_Bolus;
24
       crb: port Clinician_Request_Bolus -> operation_process.Clinician_Request_Bolus;
25
       bd: port Bolus_Duration -> operation_process.Bolus_Duration;
26
       pfr: port operation_process.Infusion_Flow_Rate -> Infusion_Flow_Rate;
27
       stat: port operation_process.System_Status -> System_Status;
28
      rxo: port Rx->operation_process.Rx;
29 end operation.imp;
30
31 process operation_process
32
    features
      Start_Button_Pressed: in event port;
33
34
       Stop_Button_Pressed: in event port;
35
      Patient_Request_Bolus: in event port;
       Clinician_Request_Bolus: in event port;
37
      Bolus_Duration: in event data port ICE_Types::Minute;
38
       Infusion_Flow_Rate: out data port PCA_Types::Flow_Rate;
39
       System_Status: out data port PCA_Types::Status_Type;
40
       Rx: in event data port PCA_Types::Prescription;
41 end operation_process;
42
43 process implementation operation_process.imp
44
    subcomponents
45
      Max_Drug_Per_Hour_Watcher : thread Max_Drug_Per_Hour_Watcher.imp;
46
      Rate_Controller : thread Rate_Controller.imp;
47
      Patient_Bolus_Checker : thread Patient_Bolus_Checker.imp;
48
       start: port Start_Button_Pressed -> Rate_Controller.Start_Button_Pressed;
49
50
       stop: port Stop_Button_Pressed -> Rate_Controller.Stop_Button_Pressed;
51
      pb: port Patient_Request_Bolus -> Patient_Bolus_Checker.Patient_Request_Bolus;
      crb: port Clinician_Request_Bolus -> Rate_Controller.Clinician_Request_Bolus;
52
53
       bd: port Bolus_Duration -> Rate_Controller.Bolus_Duration;
54
       pfr: port Rate_Controller.Infusion_Flow_Rate -> Infusion_Flow_Rate;
55
       ss: port Rate_Controller.System_Status -> System_Status;
       rxrc: port Rx->Rate_Controller.Rx;
57 end operation_process.imp;
58
59 thread Max_Drug_Per_Hour_Watcher
61
       Infusion_Flow_Rate: in data port PCA_Types::Flow_Rate
62
        {BLESS::Assertion => "<<:=PUMP_RATE()>>";};
63
       Max_Drug_Per_Hour: in data port PCA_Types::Drug_Volume
        {BLESS::Assertion => "<<:=MAX_DRUG_PER_HOUR>>";};
65 end Max_Drug_Per_Hour_Watcher;
```

```
67 thread implementation Max_Drug_Per_Hour_Watcher.imp
68 end Max_Drug_Per_Hour_Watcher.imp;
69
 70 thread Rate_Controller
 71 features
     Start_Button_Pressed: in event port;
     Stop_Button_Pressed: in event port;
 74
     Rx: in event data port PCA_Types::Prescription
 75
       {BLESS::Assertion => "<<:=Rx_APPROVED()>>";};
 76
       Clinician_Request_Bolus: in event port;
 77
       Bolus_Duration: in event data port ICE_Types::Minute;
 78
       Infusion_Flow_Rate: out data port PCA_Types::Flow_Rate
         {BLESS::Assertion => "<<:=PUMP_RATE()>>";};
 79
 80
       System_Status: out event data port PCA_Types::Status_Type;
 81 end Rate_Controller;
 83 thread implementation Rate_Controller.imp
 84 annex BLESS
85 {**
86 assert
 87 <<HALT : :(la=StopButton) >>
                                                           --pump at 0 if stop button
88 <<KVO_RATE : :(la=TooMuchJuice)>>
                                                             --pump at KVO rate when commanded, some alarms, or
        excedded hourly limit
89 <<PB_RATE : :la=PatientButton>>
                                                           --patient button pressed, and allowed
90 <<CCB_RATE : :(la=StartSquareBolus) or (la=ResumeSquareBolus)>>
                                                                          --clinician-commanded bolus start or
        resumption after patient bolus
91 <<BASAL_RATE : :(la=StartButton) or (la=ResumeBasal) or (la=SquareBolusDone)>> --regular infusion
92 << PUMP_RATE : :=
93 (HALT()) -> 0,
                                                         --no flow
     (KVO_RATE()) -> PCA_Properties::KVO_Rate,
                                                         --KVO rate
95
     (PB_RATE()) -> Patient_Bolus_Rate,
                                                   --maximum infusion upon patient request
     (CCB_RATE()) -> Square_Bolus_Rate,
                                                        --square bolus rate=VTBI/duration, from data port
97
     (BASAL_RATE()) -> Basal_Rate
                                                         --basal rate, from data port
98 >>
99 invariant <<true>>
100 variables
101 la: --last action
102
       enumeration (
         StopButton,
103
                           --clinician pressed stop button
104
         TooMuchJuice,
                               --exceeded max drug per hour, pump at KVO until prescription and patient are re-
        authenticated
105
         PatientButton,
                             --patient requested drug
106
         ResumeSquareBolus,
                              --infusion of VTBI finished, resume clinician-commanded bolus
107
                             --infusion of VTBI finished, resume basal-rate
         ResumeBasal.
                             --begin clinician-commanded bolus
108
         StartSquareBolus,
109
         SquareBolusDone,
                              --infusion of VTBI finished
110
         StartButton
                           --start pumping at basal rate
111
       );
112 **};
113 end Rate_Controller.imp;
114
115 thread Patient_Bolus_Checker
116 features
117
       Patient_Request_Bolus: in event port;
118 end Patient_Bolus_Checker;
119
120 thread implementation Patient_Bolus_Checker.imp
121 end Patient_Bolus_Checker.imp;
123 end PCA_Operation;
```

Listing C.7: PCA\_Operation package

## Appendix D

## PCA pump Prototype - translated from simplified AADL models

This appendinx presents PCA pump prototype, which was created by direct translation from simplified AADL/BLESS models presented in appendix C.

```
1 package Base_Types
      protected type Boolean_Store
3
5
          pragma Priority (10);
 6
          function Get return Boolean;
8
          --# global in Boolean_Store;
9
10
          procedure Put(X : in Boolean);
          --# global out Boolean_Store;
12
          --# derives Boolean_Store from X;
13
      private
14
          TheStoredData : Boolean := False;
15
      end Boolean_Store;
17
      protected type Integer_Store
18
19
          pragma Priority (10);
20
21
          function Get return Integer;
22
          --# global in Integer_Store;
24
          procedure Put(X : in Integer);
25
          --# global out Integer_Store;
26
          --# derives Integer_Store from X;
27
          TheStoredData : Integer := 0;
      end Integer_Store;
```

```
30
31
       protected type Natural_Store
32
33
           pragma Priority (10);
34
35
           function Get return Natural;
36
           --# global in Natural_Store;
37
38
           procedure Put(X : in Natural);
39
           --# global out Natural_Store;
40
           --# derives Natural_Store from X;
41
42
           TheStoredData : Natural := 0;
43
       end Natural_Store;
44
45
       type Integer_8 is new Integer range -2**(1*8-1) .. 2**(1*8-1)-1;
46
47
       protected type Integer_8_Store
48
49
           pragma Priority (10);
50
51
           function Get return Integer_8;
52
           --# global in Integer_8_Store;
53
54
           procedure Put(X : in Integer_8);
55
           --# global out Integer_8_Store;
56
           --# derives Integer_8_Store from X;
57
       private
58
           TheStoredData : Integer_8 := 0;
59
       end Integer_8_Store;
60
61
       type Integer_16 is new Integer range -2**(2*8-1) .. 2**(2*8-1)-1;
62
63
       protected type Integer_16_Store
64
65
           pragma Priority (10);
66
67
           function Get return Integer_16;
68
           --# global in Integer_16_Store;
69
70
           procedure Put(X : in Integer_16);
71
           --# global out Integer_16_Store;
72
           --# derives Integer_16_Store from X;
73
       private
74
           TheStoredData : Integer_16 := 0;
75
       end Integer_16_Store;
76
77
       type Integer_32 is new Integer range -2**(4*8-1) .. 2**(4*8-1)-1;
78
79
       protected type Integer_32_Store
80
81
           pragma Priority (10);
82
83
           function Get return Integer_32;
84
           --# global in Integer_32_Store;
85
86
           procedure Put(X : in Integer_32);
87
           --# global out Integer_32_Store;
88
           --# derives Integer_32_Store from X;
89
90
           TheStoredData : Integer_32 := 0;
91
       end Integer_32_Store;
92
93
       type Integer_64 is range -2**(8*8-1) .. 2**(8*8-1)-1; -- with new Integer gnat compiler error: value not
       in range of type "Standard.Integer"
```

```
94
95
        protected type Integer_64_Store
96
97
           pragma Priority (10);
98
99
            function Get return Integer_64;
            --# global in Integer_64_Store;
100
101
102
           procedure Put(X : in Integer_64);
103
            --# global out Integer_64_Store;
            --# derives Integer_64_Store from X;
104
105
106
           TheStoredData : Integer_64 := 0;
107
        end Integer_64_Store;
108
109
       type Unsigned_8 is new Integer range 0 .. 2**(1*8)-1;
110
111
        protected type Unsigned_8_Store
112
113
            pragma Priority (10);
114
115
            function Get return Unsigned_8;
116
            --# global in Unsigned_8_Store;
117
118
           procedure Put(X : in Unsigned_8);
119
           --# global out Unsigned_8_Store;
120
            --# derives Unsigned_8_Store from X;
121
       private
122
            TheStoredData : Unsigned_8 := 0;
123
        end Unsigned_8_Store;
124
125
        type Unsigned_16 is new Integer range 0 .. 2**(2*8)-1;
126
127
        protected type Unsigned_16_Store
128
129
           pragma Priority (10);
130
131
           function Get return Unsigned_16;
132
            --# global in Unsigned_16_Store;
133
134
           procedure Put(X : in Unsigned_16);
135
            --# global out Unsigned_16_Store;
136
            --# derives Unsigned_16_Store from X;
137
        private
138
           TheStoredData : Unsigned_16 := 0;
139
       end Unsigned_16_Store;
140
        type Unsigned_32 is range 0 .. 2**(4*8)-1; -- with new Integer gnat compiler error: value not in range of
141
         type "Standard.Integer"
142
143
        protected type Unsigned_32_Store
144
145
           pragma Priority (10);
146
147
           function Get return Unsigned_32;
148
            --# global in Unsigned_32_Store;
149
150
           procedure Put(X : in Unsigned_32);
151
            --# global out Unsigned_32_Store;
152
            --# derives Unsigned_32_Store from X;
153
154
           TheStoredData : Unsigned_32 := 0;
155
        end Unsigned_32_Store;
156
```

```
157
        --type Unsigned_64 is range 0 .. 2**64-1; -- gnat compiler error: integer type definition bounds out of
        range
158
159 end Base_Types;
161 package body Base_Types
162 is
        {\bf protected\ body\ Boolean\_Store\ is}
163
164
            function Get return Boolean
165
            --# global in TheStoredData;
166
            is
167
            begin
168
                return TheStoredData;
            end Get;
169
170
171
            procedure Put(X : in Boolean)
172
              --# global out TheStoredData;
173
              --# derives TheStoredData from X;
174
            is
175
            begin
176
                TheStoredData := X;
177
            end Put;
        end Boolean_Store;
178
179
        protected body Integer_Store is
180
181
            function Get return Integer
182
            --# global in TheStoredData;
183
            is
184
            begin
185
                return TheStoredData;
            end Get;
186
187
188
            procedure Put(X : in Integer)
189
              --# global out TheStoredData;
              --# derives TheStoredData from X;
190
191
            is
192
            begin
193
                TheStoredData := X;
194
            end Put;
195
        end Integer_Store;
196
197
        protected body Natural_Store is
198
            function Get return Natural
199
            --# global in TheStoredData;
200
            is
201
202
                return TheStoredData;
203
            end Get;
204
205
            procedure Put(X : in Natural)
206
              --# global out TheStoredData;
207
              --# derives TheStoredData from X;
208
            is
209
            begin
210
                TheStoredData := X;
211
            end Put;
212
        end Natural_Store;
213
214
        protected body Integer_8_Store is
215
            function Get return Integer_8
216
            --# global in TheStoredData;
217
            is
218
219
                return TheStoredData;
220
            end Get;
```

```
221
222
            procedure Put(X : in Integer_8)
223
              --# global out TheStoredData;
224
              --# derives TheStoredData from X;
225
226
            begin
227
                TheStoredData := X;
228
            end Put;
229
        end Integer_8_Store;
230
231
        protected body Integer_16_Store is
232
            function Get return Integer_16
233
            --# global in TheStoredData;
234
            is
235
            begin
236
                return TheStoredData;
237
            end Get;
238
239
            procedure Put(X : in Integer_16)
240
              --# global out TheStoredData;
241
              --# derives TheStoredData from X;
242
            is
243
            begin
244
                TheStoredData := X;
245
            end Put;
246
        end Integer_16_Store;
247
248
        {\bf protected\ body\ Integer\_32\_Store\ is}
249
            function Get return Integer_32
250
            --# global in TheStoredData;
251
            is
            begin
253
                return TheStoredData;
254
            end Get;
255
256
            procedure Put(X : in Integer_32)
257
              --# global out TheStoredData;
258
              --# derives TheStoredData from X;
259
            is
260
            begin
261
                TheStoredData := X;
            end Put;
262
263
        end Integer_32_Store;
264
265
        protected body Integer_64_Store is
266
            function Get return Integer_64
267
            --# global in TheStoredData;
268
            is
269
            begin
270
                return TheStoredData;
271
            end Get;
272
273
            procedure Put(X : in Integer_64)
274
              --# global out TheStoredData;
275
              --# derives TheStoredData from X;
276
            is
277
            begin
278
                TheStoredData := X;
279
            end Put;
280
        end Integer_64_Store;
281
282
        protected body Unsigned_8_Store is
283
            function Get return Unsigned_8
284
            --# global in TheStoredData;
285
```

```
286
            begin
287
               return TheStoredData;
288
            end Get;
289
290
            procedure Put(X : in Unsigned_8)
291
              --# global out TheStoredData;
292
              --# derives TheStoredData from X;
293
            is
294
            begin
295
                TheStoredData := X;
296
            end Put;
297
        end Unsigned_8_Store;
298
        protected body Unsigned_16_Store is
299
300
            function Get return Unsigned_16
301
            --# global in TheStoredData;
302
303
            begin
304
                return TheStoredData;
305
            end Get;
306
307
            procedure Put(X : in Unsigned_16)
308
              --# global out TheStoredData;
309
              --# derives TheStoredData from X;
310
            is
311
            begin
312
                TheStoredData := X;
313
            end Put;
314
        end Unsigned_16_Store;
315
316
        protected body Unsigned_32_Store is
317
            function Get return Unsigned_32
            --# global in TheStoredData;
318
319
320
            begin
321
               return TheStoredData;
            end Get;
322
323
324
            procedure Put(X : in Unsigned_32)
325
              --# global out TheStoredData;
326
              --# derives TheStoredData from X;
327
            is
328
            begin
329
                TheStoredData := X;
330
            end Put;
331
        end Unsigned_32_Store;
332
333 end Base_Types;
```

Listing D.1: Base\_Types package

```
1 with Base_Types;
 2 --# inherit Base_Types;
 3 package Bless_Types
 4 is
 5
       subtype Fixed_Point is Integer;
 6
       protected type Fixed_Point_Store
 7
 8
           pragma Priority (10);
 9
           function Get return Fixed_Point;
10
           --# global in Fixed_Point_Store;
11
           procedure Put(X : in Fixed_Point);
12
           --# global out Fixed_Point_Store;
13
           --# derives Fixed_Point_Store from X;
       private
14
15
           TheStoredData : Fixed_Point := 0;
16
       end Fixed_Point_Store;
17
18
       subtype Time is Base_Types.Integer_64;
       protected type Time_Store
19
20
21
           pragma Priority (10);
22
           function Get return Time;
23
           --# global in Time_Store;
24
           procedure Put(X : in Time);
25
           --# global out Time_Store;
26
           --# derives Time_Store from X;
27
       private
28
           TheStoredData : Time := 0;
29
       end Time_Store;
30 end Bless_Types;
31
32 package body Bless_Types
33 is
34
       protected body Fixed_Point_Store is
35
           function Get return Fixed_Point
36
           --# global in TheStoredData;
37
           is begin
38
               return TheStoredData;
39
           end Get;
40
           procedure Put(X : in Fixed_Point)
41
             --# global out TheStoredData;
             --# derives TheStoredData from X;
42
43
           is begin
44
               TheStoredData := X;
45
           end Put;
46
       end Fixed_Point_Store;
47
48
       protected body Time_Store is
49
           function Get return Time
50
           --# global in TheStoredData;
51
52
               return TheStoredData;
53
           end Get;
54
           procedure Put(X : in Time)
             --# global out TheStoredData;
55
56
             --# derives TheStoredData from X;
57
           is begin
58
               TheStoredData := X;
59
           end Put;
       end Time_Store;
61 \ \mathbf{end} \ \mathtt{Bless\_Types};
```

Listing D.2: Bless\_Types package

```
1 with Base_Types;
 2 --# inherit Base_Types;
 3 package Ice_Types
 4 is
 5
       subtype Milliliter is Base_Types.Unsigned_16 range 0 .. 1000;
 6
 7
       protected type Milliliter_Store
 8
 9
           pragma Priority (10);
10
           function Get return Milliliter;
11
12
           --# global in Milliliter_Store;
13
14
           procedure Put(X : in Milliliter);
15
           --# global out Milliliter_Store;
16
           --# derives Milliliter_Store from X;
17
18
           TheStoredData : Milliliter := 0;
19
       end Milliliter_Store;
20
21
22
       subtype Milliliter_Per_Hour is Base_Types.Unsigned_16 range 0 .. 1000;
23
24
       protected type Milliliter_Per_Hour_Store
25
26
           pragma Priority (10);
27
28
           function Get return Milliliter_Per_Hour;
29
           --# global in Milliliter_Per_Hour_Store;
30
31
           procedure Put(X : in Milliliter_Per_Hour);
32
           --# global out Milliliter_Per_Hour_Store;
33
           --# derives Milliliter_Per_Hour_Store from X;
34
       private
35
           TheStoredData : Milliliter_Per_Hour := 0;
36
       end Milliliter_Per_Hour_Store;
37
38
39
       subtype Microliter_Per_Hour is Base_Types.Unsigned_16 range 0 .. 1000;
40
41
       protected type Microliter_Per_Hour_Store
42
43
           pragma Priority (10);
44
45
           function Get return Microliter_Per_Hour;
46
           --# global in Microliter_Per_Hour_Store;
47
48
           procedure Put(X : in Microliter_Per_Hour);
49
           --# global out Microliter_Per_Hour_Store;
50
           --# derives Microliter_Per_Hour_Store from X;
51
52
           TheStoredData : Microliter_Per_Hour := 0;
53
       end Microliter_Per_Hour_Store;
54
55
56
       subtype Minute is Base_Types.Unsigned_16 range 0 .. 1000;
57
58
       protected type Minute_Store
59
60
           pragma Priority (10);
61
62
           function Get return Minute;
63
           --# global in Minute_Store;
64
           procedure Put(X : in Minute);
```

```
66
            --# global out Minute_Store;
67
            --# derives Minute_Store from X;
68
        private
69
           TheStoredData : Minute := 0;
 70
        end Minute_Store;
 71
 72
 73
        type Alarm_Signal is (On, Alarm_Off, Alarm_Paused, Audio_Off, Audio_Paused);
 74
 75
        protected type Alarm_Signal_Store
 76
 77
           pragma Priority (10);
 78
 79
           function Get return Alarm_Signal;
 80
            --# global in Alarm_Signal_Store;
 81
 82
           procedure Put(X : in Alarm_Signal);
 83
            --# global out Alarm_Signal_Store;
 84
            --# derives Alarm_Signal_Store from X;
 85
        private
 86
           TheStoredData : Alarm_Signal := Alarm_Signal'First;
 87
       end Alarm_Signal_Store;
 88
 89
90
       subtype Percent is Base_Types.Unsigned_8 range 0 .. 100;
91
92
       protected type Percent_Store
93
94
           pragma Priority (10);
95
96
            function Get return Percent;
97
            --# global in Percent_Store;
98
99
           procedure Put(X : in Percent);
100
            --# global out Percent_Store;
101
            --# derives Percent_Store from X;
102
        private
103
           TheStoredData : Percent := 0;
104
       end Percent_Store;
105
106
107
       type Minute_Count is new Integer;
108
109
       protected type Minute_Count_Store
110
111
           pragma Priority (10);
112
113
            function Get return Minute_Count;
114
            --# global in Minute_Count_Store;
115
116
           procedure Put(X : in Minute_Count);
117
            --# global out Minute_Count_Store;
118
            --# derives Minute_Count_Store from X;
119
       private
120
           TheStoredData : Minute_Count := 0;
121
        end Minute_Count_Store;
122
123
124
        type Second_Count is new Integer;
125
126
       protected type Second_Count_Store
127
128
            pragma Priority (10);
129
```

function Get return Second\_Count;

```
131
            --# global in Second_Count_Store;
132
133
           procedure Put(X : in Second_Count);
134
            -- # global out Second_Count_Store;
135
            --# derives Second_Count_Store from X;
136
       private
137
           TheStoredData : Second_Count := 0;
138
       end Second_Count_Store;
139 end Ice_Types;
140
141 package body Ice_Types
142 is
143
        protected body Milliliter_Store is
144
            function Get return Milliliter
145
            --# global in TheStoredData;
146
            is
147
           begin
148
               return TheStoredData;
149
           end Get;
150
151
           procedure Put(X : in Milliliter)
152
              --# global out TheStoredData;
153
              --# derives TheStoredData from X;
154
            is
155
           begin
156
               TheStoredData := X;
157
            end Put;
158
        end Milliliter_Store;
159
160
        protected body Milliliter_Per_Hour_Store is
161
            function Get return Milliliter_Per_Hour
162
            --# global in TheStoredData;
163
           is
164
           begin
165
               return TheStoredData;
166
           end Get;
167
168
           procedure Put(X : in Milliliter_Per_Hour)
169
              --# global out TheStoredData;
170
              --# derives TheStoredData from X;
171
172
           begin
173
               TheStoredData := X;
174
            end Put;
       end Milliliter_Per_Hour_Store;
175
176
177
        protected body Microliter_Per_Hour_Store is
178
            function Get return Microliter_Per_Hour
179
            --# global in TheStoredData;
180
           is
181
           begin
182
               return TheStoredData;
183
           end Get;
184
185
           procedure Put(X : in Microliter_Per_Hour)
186
              --# global out TheStoredData;
187
              --# derives TheStoredData from X;
188
           is
189
           begin
190
               TheStoredData := X;
            end Put;
191
192
        end Microliter_Per_Hour_Store;
193
194
       protected body Minute_Store is
195
            function Get return Minute
```

```
196
            --# global in TheStoredData;
197
            is
198
            begin
199
               return TheStoredData;
200
            end Get;
201
202
            procedure Put(X : in Minute)
203
              --# global out TheStoredData;
204
              --# derives TheStoredData from X;
205
            is
206
            begin
207
                TheStoredData := X;
208
            end Put;
209
        end Minute_Store;
210
        protected body Alarm_Signal_Store is
211
212
            function Get return Alarm_Signal
213
            --# global in TheStoredData;
214
            is
215
            begin
216
               return TheStoredData;
217
            end Get;
218
219
            procedure Put(X : in Alarm_Signal)
220
              --# global out TheStoredData;
221
              --# derives TheStoredData from X;
222
            is
223
            begin
224
                TheStoredData := X;
225
            end Put;
226
        end Alarm_Signal_Store;
228
        protected body Percent_Store is
229
            function Get return Percent
230
            --# global in TheStoredData;
231
232
            begin
233
                return TheStoredData;
234
            end Get;
235
236
            procedure Put(X : in Percent)
237
              --# global out TheStoredData;
238
              --# derives TheStoredData from X;
239
            is
240
            begin
241
                TheStoredData := X;
242
            end Put;
243
        end Percent_Store;
244
245
        protected body Minute_Count_Store is
246
            function Get return Minute_Count
247
            --# global in TheStoredData;
248
            is
249
            begin
250
               return TheStoredData;
251
            end Get;
252
253
            procedure Put(X : in Minute_Count)
254
              --# global out TheStoredData;
255
              --# derives TheStoredData from X;
256
            is
257
            begin
258
                TheStoredData := X;
259
            end Put;
260
        end Minute_Count_Store;
```

```
261
262
        protected body Second_Count_Store is
263
            function Get return Second_Count
264
            --# global in TheStoredData;
265
266
            begin
267
                return TheStoredData;
268
            end Get;
269
270
            procedure Put(X : in Second_Count)
271
              --# global out TheStoredData;
272
              --# derives TheStoredData from X;
273
            is
274
            begin
275
                TheStoredData := X;
276
            end Put;
277
        end Second_Count_Store;
278
279 end Ice_Types;
```

Listing D.3: Ice\_Types package

```
1 with Base_Types;
 2 with Bless_Types;
 3 with Ice_Types;
 4 with Pca_Properties;
 5 --# inherit Base_Types,
 6 --#
               Bless_Types,
 7 --#
               Ice_Types,
 8 --#
               Pca_Properties;
 9 package Pca_Types
10 is
       type Alarm_Type is (
11
12
                            No_Alarm,
13
                            Pump_Overheated,
14
                            Defective_Battery,
15
                           Low_Battery,
16
                           POST_Failure,
17
                            RAM_Failure,
18
                            ROM_failure,
19
                            CPU_Failure,
20
                            Thread_Monitor_Failure,
21
                            Air_In_Line,
22
                            Upstream_Occlusion,
23
                            Downstream_Occlusion,
24
                            Empty_Reservoir,
25
                           Basal_Overinfusion,
26
                            Bolus_Overinfusion,
27
                            Square_Bolus_Overinfusion
28
                           );
29
30
       protected type Alarm_Type_Store
31
32
           pragma Priority (10);
33
           function Get return Alarm_Type;
34
35
           --# global in Alarm_Type_Store;
36
37
           procedure Put(X : in Alarm_Type);
38
           --# global out Alarm_Type_Store;
           --# derives Alarm_Type_Store from X;
39
       private
40
41
           TheStoredData : Alarm_Type := Alarm_Type'First;
```

```
42
        end Alarm_Type_Store;
43
 44
 45
       type Warning_Type is (No_Warning,
 46
                              Over_Max_Drug_Per_Hour,
47
                              Soft_Limit,
 48
                              Low_Reservoir,
 49
                              Priming_Failure,
 50
                              Basal_Underinfusion,
 51
                              Bolus_Underinfusion,
                              Square_Bolus_Underinfusion,
52
                              Input_Needed,
 54
                              Long_Pause,
 55
                              Drug_Not_In_Library,
 56
                              Hard_Limit_Violated,
57
                              Voltage_OOR
 58
59
 60
       protected type Warning_Type_Store
61
62
           pragma Priority (10);
63
64
           function Get return Warning_Type;
65
            --# global in Warning_Type_Store;
66
67
           procedure Put(X : in Warning_Type);
68
            --# global out Warning_Type_Store;
 69
            --# derives Warning_Type_Store from X;
 70
 71
           TheStoredData : Warning_Type := Warning_Type'First;
 72
       end Warning_Type_Store;
 73
 74
 75
        type Status_Type is (Stopped, Bolus, Basal, KVO, Square_Bolus);
 76
 77
       protected type Status_Type_Store
 78
 79
           pragma Priority (10);
 80
 81
            function Get return Status_Type;
 82
            --# global in Status_Type_Store;
 83
 84
           procedure Put(X : in Status_Type);
 85
            --# global out Status_Type_Store;
 86
            --# derives Status_Type_Store from X;
 87
 88
           TheStoredData : Status_Type := Status_Type'First;
 89
        end Status_Type_Store;
90
91
92
        subtype Flow_Rate is Base_Types.Integer_16;
93
94
       protected type Flow_Rate_Store
95
96
           pragma Priority (10);
97
98
           function Get return Flow_Rate;
99
            --# global in Flow_Rate_Store;
100
101
           procedure Put(X : in Flow_Rate);
102
            --# global out Flow_Rate_Store;
103
            --# derives Flow_Rate_Store from X;
104
        private
105
           TheStoredData : Flow_Rate := 0;
106
       end Flow_Rate_Store;
```

```
107
108
109
        subtype Drug_Volume is Base_Types.Integer_16;
110
111
       protected type Drug_Volume_Store
112
           pragma Priority (10);
113
114
115
            function Get return Drug_Volume;
116
            --# global in Drug_Volume_Store;
117
118
           procedure Put(X : in Drug_Volume);
119
            --# global out Drug_Volume_Store;
120
            --# derives Drug_Volume_Store from X;
121
        private
122
           TheStoredData : Drug_Volume := 0;
123
        end Drug_Volume_Store;
124
125
126
        subtype Drug_Weight is Base_Types.Integer_16;
127
128
        protected type Drug_Weight_Store
129
130
           pragma Priority (10);
131
132
            function Get return Drug_Weight;
133
            --# global in Drug_Weight_Store;
134
135
           procedure Put(X : in Drug_Weight);
136
            --# global out Drug_Weight_Store;
137
            --# derives Drug_Weight_Store from X;
138
        private
139
           TheStoredData : Drug_Weight := 0;
140
        end Drug_Weight_Store;
141
142
143
       type Drug_Concentration is new Integer;
144
145
        protected type Drug_Concentration_Store
146
        is
147
           pragma Priority (10);
148
149
            function Get return Drug_Concentration;
150
            --# global in Drug_Concentration_Store;
151
152
           procedure Put(X : in Drug_Concentration);
153
            --# global out Drug_Concentration_Store;
            --# derives Drug_Concentration_Store from X;
154
155
       private
156
           TheStoredData : Drug_Concentration := 0;
157
        end Drug_Concentration_Store;
158
159
160
        type Drug_Record is record
161
           Amount : Drug_Weight;
162
            Concentration : Drug_Concentration;
163
            Vtbi_Lower_Soft : Drug_Volume;
164
            Vtbi_Lower_Hard : Drug_Volume;
165
           Vtbi_Typical : Drug_Volume;
166
            Vtbi_Upper_Soft : Drug_Volume;
167
           Vtbi_Upper_Hard : Drug_Volume;
168
           Basal_Rate_Lower_Soft : Flow_Rate;
169
           Basal_Rate_Lower_Hard : Flow_Rate;
170
           Basal_Rate_Typical : Flow_Rate;
171
            Basal_Rate_Upper_Soft : Flow_Rate;
```

```
172
            Basal_Rate_Upper_Hard : Flow_Rate;
173
            Bolus_Typical : Drug_Volume;
174
            Bolus_Time_Typical : Ice_Types.Minute;
175
        end record;
176
177
        protected type Drug_Record_Store
178
179
            pragma Priority (10);
180
181
            function Get return Drug_Record;
182
            --# global in Drug_Record_Store;
183
184
            procedure Put(X : in Drug_Record);
185
            --# global out Drug_Record_Store;
            --# derives Drug_Record_Store from X;
186
187
        private
188
            TheStoredData : Drug_Record :=
189
              Drug_Record'(Amount => Drug_Weight'First,
190
                           Concentration => Drug_Concentration'First,
191
                           Vtbi_Lower_Soft => Drug_Volume'First,
192
                           Vtbi_Lower_Hard => Drug_Volume'First,
193
                           Vtbi_Typical => Drug_Volume'First,
                           Vtbi_Upper_Soft => Drug_Volume'First,
194
195
                           Vtbi_Upper_Hard => Drug_Volume'First,
196
                           Basal_Rate_Lower_Soft => Flow_Rate'First,
197
                           Basal_Rate_Lower_Hard => Flow_Rate'First,
198
                           Basal_Rate_Typical => Flow_Rate'First,
199
                           Basal_Rate_Upper_Soft => Flow_Rate'First,
200
                           Basal_Rate_Upper_Hard => Flow_Rate'First,
201
                           Bolus_Typical => Drug_Volume'First,
202
                           Bolus_Time_Typical => Ice_Types.Minute'First
203
204
        end Drug_Record_Store;
205
206
207
        subtype Drug_Library_Index is Integer range 1 .. Pca_Properties.Drug_Library_Size;
208
        type Drug_Library is array (Drug_Library_Index) of Drug_Record;
209
210
        protected type Drug_Library_Store
211
        is
212
            pragma Priority (10);
213
214
            function Get(Ind : in Integer) return Drug_Record;
215
            --# global in Drug_Library_Store;
216
217
            procedure Put(Ind : in Integer; Val : in Drug_Record);
218
            --# global in out Drug_Library_Store;
219
            --# derives Drug_Library_Store from Drug_Library_Store, Ind, Val;
220
       private
221
          TheStoredData : Drug_Library := Drug_Library'(others =>
222
                               Drug_Record'(Amount => Drug_Weight'First,
223
                                            Concentration => Drug_Concentration'First,
224
                                             Vtbi_Lower_Soft => Drug_Volume'First,
225
                                            Vtbi_Lower_Hard => Drug_Volume'First,
226
                                             Vtbi_Typical => Drug_Volume'First,
227
                                             Vtbi_Upper_Soft => Drug_Volume'First,
228
                                             Vtbi_Upper_Hard => Drug_Volume'First,
229
                                             Basal_Rate_Lower_Soft => Flow_Rate'First,
230
                                            Basal_Rate_Lower_Hard => Flow_Rate'First,
231
                                            Basal_Rate_Typical => Flow_Rate'First,
                                            Basal_Rate_Upper_Soft => Flow_Rate'First,
                                            Basal_Rate_Upper_Hard => Flow_Rate'First,
233
234
                                            Bolus_Typical => Drug_Volume'First,
235
                                            Bolus_Time_Typical => Ice_Types.Minute'First
236
```

```
237
        end Drug_Library_Store;
238
239
        type Prescription is record
240
            Concentration : Drug_Concentration;
241
            Initial_Volume : Drug_Volume;
242
            Basal_Flow_Rate : Flow_Rate;
243
            Vtbi : Drug_Volume;
244
            Max_Drug_Per_Hour : Drug_Volume;
245
            Minimum_Time_Between_Bolus : Ice_Types.Minute;
246
        end record;
247
248
        protected type Prescription_Store
249
250
            pragma Priority (10);
251
252
            function Get return Prescription;
253
            --# global in Prescription_Store;
254
255
            procedure Put(Prescription_In : in Prescription);
256
            --# global out Prescription_Store;
257
            --# derives Prescription_Store from Prescription_In;
258
259
        private
260
            TheStoredData : Prescription :=
261
              Prescription'(Concentration => 0,
262
                            Initial_Volume => 0,
263
                            Basal_Flow_Rate => 0,
264
                            Vtbi => 0,
265
                            Max_Drug_Per_Hour => 0,
266
                            Minimum_Time_Between_Bolus => 0
267
                           );
268
269
        end Prescription_Store;
270
271
        type Fault_Record is record
            Alarm : Alarm_Type;
272
273
            Warning : Warning_Type;
274
            Time : Bless_Types.Time;
275
        end record;
276
277
        protected type Fault_Record_Store
278
279
            pragma Priority (10);
280
281
            function Get return Fault_Record;
282
            --# global in Fault_Record_Store;
283
284
            procedure Put(X : in Fault_Record);
285
            --# global out Fault_Record_Store;
286
            --# derives Fault_Record_Store from X;
287
288
            TheStoredData : Fault_Record := Fault_Record'(Alarm => Alarm_Type'First,
289
                                                           Warning => Warning_Type'First,
290
                                                          Time => Bless_Types.Time'First
291
                                                         );
292
        end Fault_Record_Store;
293
294
295
        subtype Fault_Log_Index is Integer range 1 .. Pca_Properties.Fault_Log_Size;
296
        type Fault_Log is array (Fault_Log_Index) of Fault_Record;
297
298
        protected type Fault_Log_Store
299
300
            pragma Priority (10);
301
```

```
302
            function Get(Ind : in Integer) return Fault_Record;
303
            --# global in Fault_Log_Store;
304
305
            procedure Put(Ind : in Integer; Val : in Fault_Record);
306
            --# global in out Fault_Log_Store;
307
            --# derives Fault_Log_Store from Fault_Log_Store, Ind, Val;
308
        private
309
            TheStoredData : Fault_Log := Fault_Log'(others =>
310
                                                            Fault_Record'(Alarm => Alarm_Type'First,
311
                                                                          Warning => Warning_Type'First,
                                                                          Time => Bless_Types.Time'First
312
313
314
        end Fault_Log_Store;
315
316
317
        type Event_Record is record
318
            Time : Bless_Types.Time;
319
        end record;
320
321
        protected type Event_Record_Store
322
323
            pragma Priority (10);
324
325
            function Get return Event_Record;
326
            --# global in Event_Record_Store;
327
328
            procedure Put(X : in Event_Record);
329
            --# global out Event_Record_Store;
330
            --# derives Event_Record_Store from X;
331
332
            TheStoredData : Event_Record := Event_Record'(Time => Bless_Types.Time'First);
333
        end Event_Record_Store;
334
335
336
        subtype Event_Log_Index is Integer range 1 .. Pca_Properties.Event_Log_Size;
337
        type Event_Log is array (Event_Log_Index) of Event_Record;
338
339
        protected type Event_Log_Store
340
341
            pragma Priority (10);
342
343
            function Get(Ind : in Integer) return Event_Record;
344
            --# global in Event_Log_Store;
345
346
            procedure Put(Ind : in Integer; Val : in Event_Record);
347
            --# global in out Event_Log_Store;
348
            --# derives Event_Log_Store from Event_Log_Store, Ind, Val;
349
            TheStoredData : Event_Log := Event_Log'(others => Event_Record'(Time => Bless_Types.Time',First));
350
351
        end Event_Log_Store;
352
353
354
        type Infusion_Type is (Bolus_Infusion, Square_Infusion, Basal_Infusion, KVO_Infusion);
355
356
        protected type Infusion_Type_Store
357
358
            pragma Priority (10);
359
360
            function Get return Infusion_Type;
361
            --# global in Infusion_Type_Store;
362
363
            procedure Put(X : in Infusion_Type);
364
            --# global out Infusion_Type_Store;
365
            --# derives Infusion_Type_Store from X;
366
        private
```

```
367
            TheStoredData : Infusion_Type := Infusion_Type'First;
368
        end Infusion_Type_Store;
369
370
371
        type Pump_Fault_Type is (Prime_Failure, Pump_Hot, Bubble, Upstream_Occlusion_Fault,
        Downstream_Occlusion_Fault, Overinfusion, Underinfusion);
372
        protected type Pump_Fault_Type_Store
373
374
375
            pragma Priority (10);
376
377
            function Get return Pump_Fault_Type;
378
            --# global in Pump_Fault_Type_Store;
379
380
            procedure Put(X : in Pump_Fault_Type);
            --# global out Pump_Fault_Type_Store;
381
382
            --# derives Pump_Fault_Type_Store from X;
383
        private
384
            TheStoredData : Pump_Fault_Type := Pump_Fault_Type'First;
385
        end Pump_Fault_Type_Store;
386
387 end Pca_Types;
388
389 package body Pca_Types
390 is
391
        protected body Alarm_Type_Store is
392
            function Get return Alarm_Type
393
            --# global in TheStoredData;
394
            is
395
            begin
396
                return TheStoredData;
397
            end Get;
398
399
            procedure Put(X : in Alarm_Type)
400
              --# global out TheStoredData;
401
              --# derives TheStoredData from X;
402
            is
403
            begin
404
                TheStoredData := X;
405
            end Put;
406
        end Alarm_Type_Store;
407
408
        protected body Warning_Type_Store is
409
            function Get return Warning_Type
410
            --# global in TheStoredData;
411
            is
412
            begin
413
                return TheStoredData;
414
            end Get;
415
416
            procedure Put(X : in Warning_Type)
417
              --# global out TheStoredData;
418
              --# derives TheStoredData from X;
419
            is
420
            begin
421
                TheStoredData := X;
422
            end Put;
423
        end Warning_Type_Store;
424
425
        protected body Status_Type_Store is
426
            function Get return Status_Type
427
            --# global in TheStoredData;
428
429
            begin
430
                return TheStoredData;
```

```
431
            end Get;
432
433
            procedure Put(X : in Status_Type)
434
              --# global out TheStoredData;
435
              --# derives TheStoredData from X;
436
            is
437
            begin
438
                TheStoredData := X;
439
            end Put;
440
        end Status_Type_Store;
441
442
        protected body Flow_Rate_Store is
443
            function Get return Flow_Rate
444
            --# global in TheStoredData;
445
446
            begin
447
                return TheStoredData;
448
            end Get;
449
450
            procedure Put(X : in Flow_Rate)
451
              --# global out TheStoredData;
452
              --# derives TheStoredData from X;
453
            is
454
            begin
455
                TheStoredData := X;
456
            end Put;
457
        end Flow_Rate_Store;
458
459
        protected body Drug_Volume_Store is
460
            function Get return Drug_Volume
            --# global in TheStoredData;
461
462
            is
            begin
463
464
                return TheStoredData;
465
            end Get;
466
467
            procedure Put(X : in Drug_Volume)
468
              --# global out TheStoredData;
469
              --# derives TheStoredData from X;
470
            is
471
            begin
472
                TheStoredData := X;
473
            end Put;
474
        end Drug_Volume_Store;
475
476
        protected body Drug_Weight_Store is
477
            function Get return Drug_Weight
478
            --# global in TheStoredData;
479
            is
            begin
480
481
                return TheStoredData;
            end Get;
482
483
484
            procedure Put(X : in Drug_Weight)
              --# global out TheStoredData;
485
486
              --# derives TheStoredData from X;
487
            is
488
            begin
489
                TheStoredData := X;
490
            end Put;
491
        end Drug_Weight_Store;
492
493
        protected body Drug_Concentration_Store is
494
            function Get return Drug_Concentration
495
            --# global in TheStoredData;
```

```
496
            is
497
            begin
498
                return TheStoredData;
            end Get;
499
500
501
            {\bf procedure} \ {\tt Put(X:in\ Drug\_Concentration)}
502
              --# global out TheStoredData;
503
              --# derives TheStoredData from X;
504
            is
505
            begin
506
                TheStoredData := X;
507
            end Put;
508
        {\bf end} \ {\tt Drug\_Concentration\_Store};
509
510
        protected body Drug_Record_Store is
511
            function Get return Drug_Record
512
            --# global in TheStoredData;
513
            is
514
            begin
515
                return TheStoredData;
            end Get;
516
517
518
            procedure Put(X : in Drug_Record)
519
              --# global out TheStoredData;
520
              --# derives TheStoredData from {\tt X};
521
            is
522
            begin
523
                TheStoredData := X;
524
            end Put;
525
        end Drug_Record_Store;
526
527
        protected body Drug_Library_Store is
528
            function Get(Ind : in Integer) return Drug_Record
529
            --# global in TheStoredData;
530
            is
531
            begin
532
                return TheStoredData(Ind);
533
            end Get;
534
535
            procedure Put(Ind : in Integer; Val : in Drug_Record)
536
              --# global in out TheStoredData;
537
              --# derives TheStoredData from TheStoredData, Ind, Val;
538
            is
539
            begin
540
                TheStoredData(Ind) := Val;
541
            end Put;
542
        end Drug_Library_Store;
543
544
        protected body Prescription_Store
545
546
            function Get return Prescription
547
            --# global in TheStoredData;
548
            is
549
            begin
550
                return TheStoredData;
551
            end Get;
552
553
            procedure Put(Prescription_In : in Prescription)
554
            --# global out TheStoredData;
555
            --# derives TheStoredData from Prescription_In;
556
            is
557
            begin
558
                TheStoredData := Prescription_In;
559
            end Put;
560
        end Prescription_Store;
```

```
561
562
        protected body Fault_Record_Store is
563
            function Get return Fault_Record
564
            --# global in TheStoredData;
565
566
            begin
567
                return TheStoredData;
            end Get;
568
569
570
            procedure Put(X : in Fault_Record)
571
              --# global out TheStoredData;
572
              --# derives TheStoredData from X;
573
            is
574
            begin
575
                TheStoredData := X;
576
            end Put;
577
        end Fault_Record_Store;
578
579
        protected body Fault_Log_Store is
580
            function Get(Ind : in Integer) return Fault_Record
581
            --# global in TheStoredData;
582
583
            begin
584
                return TheStoredData(Ind);
585
            end Get:
586
587
            procedure Put(Ind : in Integer; Val : in Fault_Record)
588
              --# global in out TheStoredData;
589
              --# derives TheStoredData from TheStoredData, Ind, Val;
590
            is
591
            begin
                TheStoredData(Ind) := Val;
593
            end Put;
594
        end Fault_Log_Store;
595
        protected body Event_Record_Store is
596
597
            function Get return Event_Record
598
            --# global in TheStoredData;
599
            is
600
            begin
601
               return TheStoredData;
602
            end Get;
603
604
            procedure Put(X : in Event_Record)
605
              --# global out TheStoredData;
606
              --# derives TheStoredData from X;
607
            is
608
            begin
                TheStoredData := X;
609
610
            end Put;
611
        end Event_Record_Store;
612
        protected body Event_Log_Store is
613
            function Get(Ind : in Integer) return Event_Record
614
            --# global in TheStoredData;
615
616
            is
617
            begin
618
                return TheStoredData(Ind);
619
            end Get;
620
621
            procedure Put(Ind : in Integer; Val : in Event_Record)
622
              --# global in out TheStoredData;
623
              --# derives TheStoredData from TheStoredData, Ind, Val;
624
            is
625
            begin
```

```
626
                TheStoredData(Ind) := Val;
627
            end Put;
628
        end Event_Log_Store;
629
630
        protected body Infusion_Type_Store is
631
            function Get return Infusion_Type
632
            --# global in TheStoredData;
633
            is
634
            begin
635
                return TheStoredData;
            end Get;
636
637
            procedure Put(X : in Infusion_Type)
638
639
              --# global out TheStoredData;
640
              --# derives TheStoredData from X;
641
            is
642
            begin
643
                TheStoredData := X;
644
            end Put;
645
        end Infusion_Type_Store;
646
647
        protected body Pump_Fault_Type_Store is
648
            function Get return Pump_Fault_Type
649
            --# global in TheStoredData;
650
            is
651
            begin
652
                return TheStoredData;
653
            end Get;
654
655
            procedure Put(X : in Pump_Fault_Type)
              --# global out TheStoredData;
656
657
              --# derives TheStoredData from X;
658
            is
659
            begin
                TheStoredData := X;
660
661
            end Put;
662
        end Pump_Fault_Type_Store;
663
664 end Pca_Types;
```

Listing D.4: Pca\_Types package

Listing D.5: Pca\_Properties package

```
1 with Pca_Properties,
       Base_Types,
 3
       Bless_Types,
 4
       Ice_Types,
       Pca_Types;
 6 --# inherit Pca_Properties,
              Base_Types,
 8 --#
              Bless_Types,
9 --#
               Ice_Types,
10 --#
               Pca_Types;
11 package Pca_Operation
12 --# own protected Bolus_Duration : Ice_Types.Minute_Store (Priority=>10);
13 --#
           protected Infusion_Flow_Rate : PCA_Types.Flow_Rate_Store (Priority=>10);
14 --#
           protected System_Status : Pca_Types.Status_Type_Store (Priority=>10);
15 --#
           protected Rx : Pca_Types.Prescription_Store (Priority=>10);
           task mdphw : Max_Drug_Per_Hour_Watcher;
16 --#
17 --#
           task rc : Rate_Controller;
18 --#
           task pbc : Patient_Bolus_Checker;
19 is
20
       procedure Put_Start_Button_Pressed;
21
22
       procedure Put_Stop_Button_Pressed;
23
24
       procedure Put_Patient_Request_Bolus;
25
26
       procedure Put_Clinician_Request_Bolus;
27
28
       procedure Put_Bolus_Duration (Bolus_Duration_In : Ice_Types.Minute);
29
       --# global out Bolus_Duration;
30
       --# derives Bolus_Duration from Bolus_Duration_In;
31
32
       procedure Get_Infusion_Flow_Rate (Infusion_Flow_Rate_Out : out Pca_Types.Flow_Rate);
       --# global in Infusion_Flow_Rate;
33
34
       --# derives Infusion_Flow_Rate_Out from Infusion_Flow_Rate;
35
36
       procedure Get_System_Status (System_Status_Out : out Pca_Types.Status_Type);
37
       --# global in System_Status;
38
       --# derives System_Status_Out from System_Status;
39
40
       procedure Put_Rx (Rx_In : Pca_Types.Prescription);
41
       --# global out Rx;
       --# derives Rx from Rx_In;
42
43
44
45
       task\ type\ {\tt Max\_Drug\_Per\_Hour\_Watcher}
46
       --# global in Infusion_Flow_Rate;
47
       is
48
           pragma Priority(10);
49
       end Max_Drug_Per_Hour_Watcher;
50
51
       task type Rate_Controller
52
       --# global in Rx;
53
       --#
                  in Bolus_Duration;
54
       --#
                  out Infusion_Flow_Rate;
55
       --#
                  out System_Status;
56
57
           pragma Priority(10);
58
       end Rate_Controller;
59
60
       task type Patient_Bolus_Checker
61
           pragma Priority(10);
62
63
       end Patient_Bolus_Checker;
64
65 end Pca_Operation;
```

```
67 package body Pca_Operation
68 is
69
        type la_type is (
 70
                          StopButton,
 71
                          TooMuchJuice,
 72
                          PatientButton,
 73
                          ResumeSquareBolus,
 74
                          ResumeBasal,
 75
                          StartSquareBolus,
 76
                          SquareBolusDone,
 77
                          StartButton);
 78
 79
        Bolus_Duration : Ice_Types.Minute_Store;
 80
        Infusion_Flow_Rate : PCA_Types.Flow_Rate_Store;
 81
        System_Status : Pca_Types.Status_Type_Store;
 82
        Rx : Pca_Types.Prescription_Store;
 83
 84
        mdphw : Max_Drug_Per_Hour_Watcher;
 85
        rc : Rate_Controller;
 86
        pbc : Patient_Bolus_Checker;
 87
 88
        {\bf procedure} \ {\tt Put\_Start\_Button\_Pressed}
 89
90
        begin
91
            -- TODO: implement event handler
92
93
        end Put_Start_Button_Pressed;
94
95
        procedure Put_Stop_Button_Pressed
96
        is
97
        begin
98
            -- TODO: implement event handler
99
100
        end Put_Stop_Button_Pressed;
101
102
        procedure Put_Patient_Request_Bolus
103
        is
104
105
            -- TODO: implement event handler
106
107
        end Put_Patient_Request_Bolus;
108
109
        procedure Put_Clinician_Request_Bolus
110
111
        begin
112
            -- TODO: implement event handler
113
114
        end Put_Clinician_Request_Bolus;
115
116
        procedure Put_Bolus_Duration (Bolus_Duration_In : ICE_Types.Minute)
117
118
        begin
119
            Bolus_Duration.Put(Bolus_Duration_In);
120
        end Put_Bolus_Duration;
121
        {\bf procedure} \ {\tt Get\_Infusion\_Flow\_Rate} \ ({\tt Infusion\_Flow\_Rate\_Out} \ : \ {\bf out} \ {\tt Pca\_Types.Flow\_Rate})
122
123
        is
124
125
            Infusion_Flow_Rate_Out := Infusion_Flow_Rate.Get;
126
        end Get_Infusion_Flow_Rate;
127
128
        procedure Get_System_Status (System_Status_Out : out Pca_Types.Status_Type)
129
130
        begin
```

```
131
            System_Status_Out := System_Status.Get;
132
        end Get_System_Status;
133
134
       procedure Put_Rx (Rx_In : Pca_Types.Prescription)
135
136
       begin
137
           Rx.Put(Rx_In);
138
        end Put_Rx;
139
140
141
       task\ body\ Max\_Drug\_Per\_Hour\_Watcher
142
143
       begin
144
           loop
145
                --# assert PUMP_RATE;
146
                null;
147
            end loop;
148
       end Max_Drug_Per_Hour_Watcher;
149
150
        task body Rate_Controller
151
152
           la : la_type;
153
       begin
154
           loop
                --# assert true;
155
156
                --# assert Rx_APPROVED;
157
                --# assert PUMP_RATE;
158
                --# assert (la=StopButton) -> HALT;
159
                --# assert (la=TooMuchJuice) -> KVO_RATE;
160
                --# assert (la=PatientButton) -> PB_RATE;
                --# assert ((la=StartSquareBolus) or (la=ResumeSquareBolus)) -> CCB_RATE;
                --# assert ((la=StartButton) or (la=ResumeBasal) or (la=SquareBolusDone)) -> BASAL_RATE;
162
163
                --# assert (PUMP_RATE = 0) -> HALT;
164
                --# assert (PUMP_RATE = Pca_Properties.KVO_Rate) -> KVO_RATE;
                --# assert (PUMP_RATE = Patient_Bolus_Rate) -> PB_RATE;
165
                --# assert (PUMP_RATE = Square_Bolus_Rate) -> CCB_RRATE;
167
                --# assert (PUMP_RATE = Basal_Rate) -> BASAL_RATE;
168
                null;
169
            end loop;
       end Rate_Controller;
170
171
       task\ body\ Patient_Bolus_Checker
172
173
174
       begin
175
           loop
176
                --# assert true;
177
               null;
178
            end loop;
179
        end Patient_Bolus_Checker;
180
181 end Pca_Operation;
```

Listing D.6: Pca\_Operation package

## Appendix E

## PCA Pump - dose monitor module

Final version of PCA\_Verification and AUnit tests.