Lab 3 (EECE 344)

Jeremiah Mahler

March 24, 2012

Contents

1	Introduction	2
2	Pin Assignments	2
3	SPI protocol	3
4	Bus Interface	7
5	Conclusion	7
6	References	8

	R	.AM	CPLD				
pin	label	description	function	Mach XO Ball	Header	Pin	
12	A0	mem_address	PL17D	L4	J4	36	
11	A1	mem_address	PL12D	L2	J4	35	
10	A2	mem_address	PL17C	L5	J4	34	
9	A3	mem_address	PL12C	K2	J4	33	
8	A4	mem_address	PL15C	M2	J4	26	
7	A5	mem_address	PL10C	G1	J4	21	
6	A6	mem_address	PL10D	H1	J4	23	
5	A7	mem_address	PL8D	Н3	J4	19	
27	A8	mem_address	PL15D	N2	J4	28	
26	A9	mem_address	PL11C	J3	J4	29	
23	A10	mem_address	PL19A	N4	J4	38	
25	A11	mem_address	PL11D	K3	J4	31	
4	A12	mem_address	PL8C	G3	J4	17	
28	A13	mem_address	PL16D	R2	J4	32	
3	A14	mem_address	PL7C	E1	J4	13	
31	A15	mem_address	PL7D	F1	J4	15	
2	A16	mem_address	PL6D	D1	J4	11	
13	DQ0	mem_data	PL7A_LV_T	F2	J3	25	
14	DQ1	mem_data	$PL17A_LV_T$	K5	J3	32	
15	DQ2	mem_data	PL18A_LV_T	M5	J3	38	
17	DQ3	mem_data	PL9A_LV_T	H4	J3	37	
18	DQ4	mem_data	PL8A_LV_T	G4	J3	31	
19	DQ5	mem_data	PL16A_LV_T	J4	J3	26	
20	DQ6	mem_data	PL15A_LV_T	L3	J3	20	
21	DQ7	mem_data	PL5A_LV_T	B1	J3	19	
32	Vcc	suppy voltage			J9	5	
16	Vss	ground			J3	36	

Table 1: Pin assignments between RAM chip and the CPLD which are common to both chips. See Table 2 for those pins which are unique for each chip.

1 Introduction

The device described here shows how to construct a bus using a Lattice MachXO[3] board which connects to leds, switches and multiple ram memory chips. And how to control reads/writes to this bus over SPI by an ARM STM32L Discovery[6] board.

2 Pin Assignments

One of the critical design specifications for this device are the pin assignments. Table 4 lists the connections that were used. Keep in mind that these assignments are specific to this design and their choice was somewhat arbitrary. Other pins, such as those for the SPI on the ARM (PA5, PA12, PA11), cannot be changed due conflicts with other resources on the board.

On the CPLD the pins correspond to headers (J9, J7, etc) and pins within those headers [3, Pg. 11-14]. The header and pin numbers are printed at the end of each header. The "Mach XO Ball" is used to identify the location on the chip itself. This is used for assigning pins when configuring the CPLD using Diamond [4].

The pins were configured with standard options: low voltage 3.3 volt CMOS with no pull up or pull down. Output pins to drive the leds were configured for 8 mA drive current.

	RAM #1				CPLD			
pin	label	variable	description	function	Mach XO Ball	Header	Pin	
30	CE2	mem1_ce2	chip enable	PL14C	N1	J4	37	
22	CE#	mem1_ceh_n	chip enable	PL19B	N3	J4	40	
29	WE#	mem1_we_n	write enable	PL14D	P1	J4	39	
24	OE#	mem1_oe_n	output enable	PL16C	R1	J4	30	

	RAM #2				CPLD			
pin	label	variable	description	function	Mach XO Ball	Header	Pin	
30	CE2	mem2_ce2	chip enable	PL8B	G5	J3	33	
22	CE#	mem2_ceh_n	chip enable	PL11B	J2	J3	4	
29	WE#	mem2_we_n	write enable	PL19B	H5	J3	39	
24	OE#	mem2_oe_n	output enable	PL18B	M4	J3	40	

Table 2: Pin assignments between RAM chip and the CPLD which are unique to each RAM chip.

Memory Map					
address (hex)	name	variable			
0x74	switches	switch_ce_n			
0x6C	bar leds	bar_led_ce_n			
0x50 - 0x5F	RAM #2	mem2_ce_n			
0x2F	board leds	board_led_ce_n			
0x00 - 0x0F	RAM #1	mem1_ce_n			

Table 3: Device memory map.

The input switches to the CPLD can be interfaced by connecting one end to ground and the other end to the pin along with a pull up resistor to Vdd. A resistor value between 1k and 10k should be acceptable. And the pull up voltage for Vdd can be sourced from a pin on the board (Table 4).

The output LEDs are connected to the CPLD using a series resistor. Vdd would connect to the resistor which connects to the led (forward biased) which connects to the pin. The value of the resistor should limit the current to approximately 10 mA. A value of 300 Ω is a typical value.

To reset the boards their reset pins must be configured. The ARM board provides a NRST pin which is at Vcc when enabled and goes low when the reset button is pushed[6, Pg. 17, 20]. This can then be connected to the CPLD to cause it to reset using GSRN[2, Pg. 13, 46, 50, 53; 3, Pg. 8]. Table 4 lists the exact pins that were used.

3 SPI protocol

The SPI protocol uses typical SPI transitions [1, Pg. 278; 5, Pg. 665] and the configuration options used are given in Table 5.

Normally the SPI protocol is enabled using the NSS pin at the start of a transaction and disabled at the end of 8-bits. In this case it was necessary to transfer two bytes. And it was also necessary to detect the start/end of the transaction. To accomplish this the SPI protocol was modified so that NSS remains enabled for two bytes (16 bits). This solutions required no additional pins.

To communicate with the bus requires two bytes of data with 8-bits each. The first byte sent from the master to the slave contains the read/write bit and the address. The first return byte is ignored.

For the second byte it depends on whether it is a read or a write operation. For a read any data can be sent and the value read will be returned. This in analogous to a printer "form feed". For a write the data to be written must be sent as the second byte. The value returned should be ignored.

SPI						
Verilog		ARM	CPLD			
name	description	pin	function	Mach XO Ball	Header	Pin
SCLK	SPI clock	PA5	PT9B	D7	J9	11
SS_L	SPI slave select	PB5	PR4C	F13	J7	1
MOSI	SPI master out slave in	PA12	PR4D	F12	J7	3
MISO	SPI master in slave out	PA11	PR5C	B16	J7	5
	ground	GND			J8	5
		switches				
Verilog		input switches		CPLD		
name	description	pin	function	Mach XO Ball	Header	Pin
switches[0]	input switch 8	8	PT2C	B2	J5	1
switches[1]	input switch 7	7	PT9A	D8	J5	2
switches[2]	input switch 6	6	PT2D	B3	J5	3
switches[3]	input switch 5	5	PT9C	E8	J5	4
switches[4]	input switch 4	4	PT3A	A2	J5	5
switches[5]	input switch 3	3	PT9D	E9	J5	6
switches[6]	input switch 2	2	PT3B	A3	J5	7
switches[7]	input switch 1	1	PT10A	A10	J5	8
	power, Vdd, pull up				J9	1
	ground				J6	2
LEDs						
Verilog output LEDs				CPLD		
name	description	pin	function	Mach XO Ball	Header	Pin
$bar_leds[0]$	output led 8	8	PT15D	B5	J5	23
$bar_leds[1]$	output led 7	7	PT12B	A12	J5	24
$bar_leds[2]$	output led 6	6	PT6E	E7	J5	25
$bar_leds[3]$	output led 5	5	PT12C	B11	J5	26
$bar_leds[4]$	output led 4	4	PT6F	E6	J5	27
$bar_leds[5]$	output led 3	3	PT12D	B12	J5	28
$bar_leds[6]$	output led 2	2	PT16C	A5	J5	29
$bar_leds[7]$	output led 1	1	PT13C	C11	J5	30
	ground				J6	16
		reset				
Verilog		ARM		CPLD		
name	description	pin	function	Mach XO Ball	Header	Pin
reset_n	active low reset	NRST	PL7B	G2	J3	27

Table 4: Definition of the pin assignments between the ARM board, the CPLD, and other devices. Notice that the switch and LEDs are reversed. This was done so that the orientation from LSB to MSB is from right to left.

option	value
MSB	first
CPOL	0
CPHA	0
NSS	slave select on low

Table 5: SPI configuration options

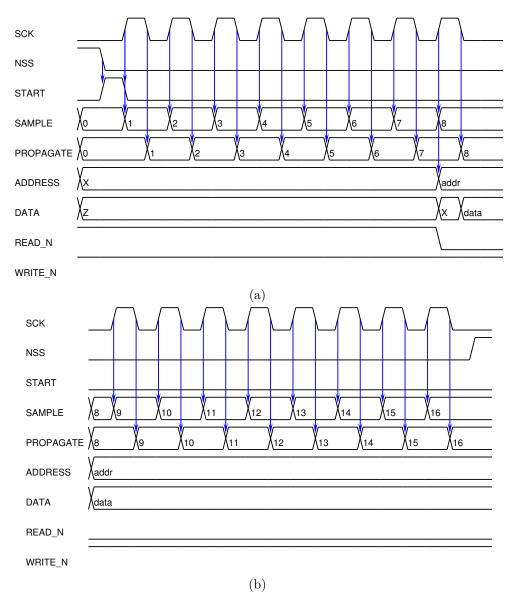


Figure 1: Timing diagram of SPI read cycle. Part (a) is the first 8-bits and part (b) is the second 8-bits continuing from (a). Notice in part (a) where the ADDRESS is set and READ_N becomes active (low). The data is not immediately read but instead it is delayed until the negative edge of the SCK. This is necessary for device such as RAM chips which may not produce valid data until a short time delay.

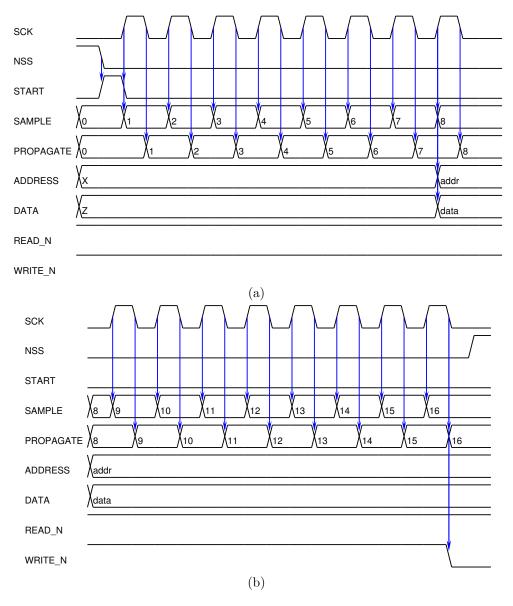


Figure 2: Timing diagram of SPI write cycle. Part (a) is the first 8-bits and part (b) is the second continuing from (a). A write is not initiated until the end of the second byte because it has to read this byte entirely before it can be written.

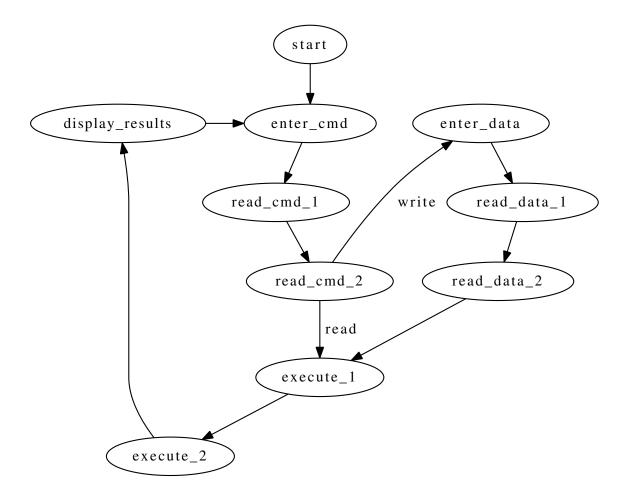


Figure 3: State diagram of ARM board operation. The suffixes _1 and _2 refer to the first and second bytes sent/received over SPI. The states display_results, enter_data and enter_cmd wait for the user set the input switches as necessary and then press the user button. read_cmd reads the input switches to get the command (address and rw bit). If the command is a write read_data reads the switches again to get the data. And execute performed the read/write command.

When values are read or written to the bus they must be held for some amount of time. In this implementation this is accomplished by controlling the pulse width from the end of the 16'th sck edge and the positive edge of nss (going disabled). Since the clock speed of the SPI is on the order of kHz and the clock inside the CPLD is on the order of MHz there should be plenty of time for any memory timings or other operations to be done.

4 Bus Interface

5 Conclusion

6 References

- [1] F.M. Cady. <u>Microcontrollers and microcomputers</u>: principles of software and hardware engineering. Oxford University Press, 2009.
- [2] Lattice Semiconductor Corportation. Machxo family data sheet, 2010. DS1002 Version 02.9, July 2010
- [3] Lattice Semiconductor Corportation. Machxo2280 breakout board evaluation kit users guide, 2011. March 2011, Revision: EB66_01.0.
- [4] Lattice Semiconductor. Lattice diamond design software. http://www.latticesemi.com/products/designsoftware/diamond/index.cfm?source=topnav, 2012. [Online; accessed 23-March-2012].
- [5] ST. Rm0038 reference manual stm32l151xx, stm32l152xx and stm32l162xx advanced arm-based 32-bit mcus, 2012.
- [6] ST. Um1079 user manual stm32l-discovery, 2012. Doc ID 018789 Rev 2.