


VAN'S AIRCRAFT, INC.

Step 1: Separate the A-1006-1 Outboard Hinge Brackets into parts A and B. Separate A-1007-1 Inboard Hinge Brackets into parts A, B, and C. See Figure 1.

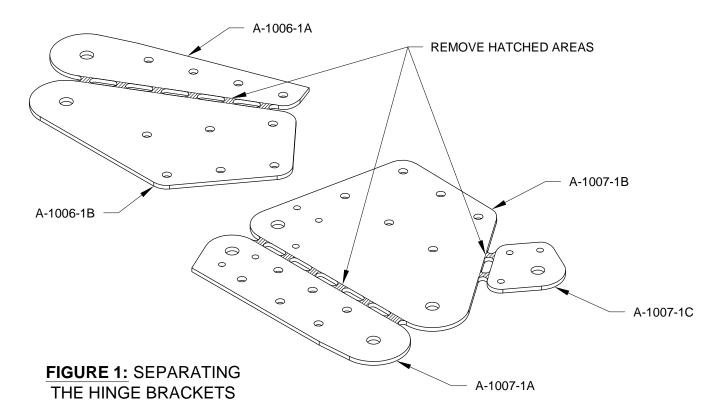

Step 2: Flute and straighten as required to adjust the flanges of the A-1004-1L and A-1004-1R Nose Ribs and A-1015-1L and A-1015-1R Inboard Nose Ribs to 90°.

Final-Drill #40, deburr and dimple all the holes in the flanged of the nose ribs and inboard nose ribs.

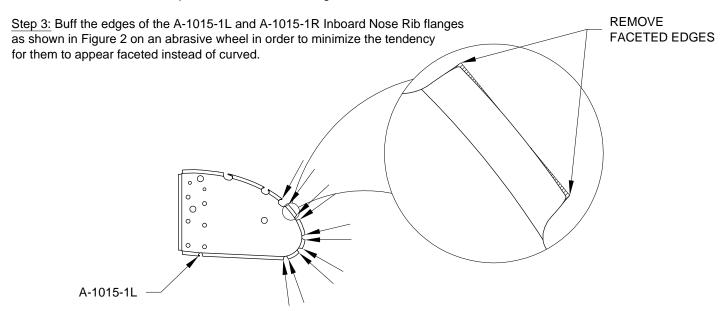


FIGURE 2: BUFF FLANGE EDGES

Step 4: Final-Drill #30 the .129 [3.3 mm] holes common to the A-1006-1A Outboard Hinge Brackets and the A-1004-1R and A-1004-1L Nose Ribs. Machine countersink the outboard hinge brackets for the head of a AN426AD4 rivet as shown in Figure 3. Deburr the outboard hinge brackets and the A-1004-1R and A-1004-1L Nose Ribs.

<u>Step 5:</u> Final-Drill #30 the .129 [3.3 mm] holes common to the A-1007-1A Inboard Hinge Brackets and the A-1015-1L and A-1015-1R Ribs. Final-Drill #12 the bolt holes in the inboard hinge brackets and ribs. Machine countersink the inboard hinge bracket and deburr. See Figure 4.

Step 6: Attach the A-1006-1A Outboard Hinge Brackets to the A-1004-1R and A-1004-1L Nose Ribs with the rivets called out in Figure 3.

<u>Step 7:</u> Rivet the A-1007-1A Inboard Hinge Brackets to the A-1015-1L and A-1015-1R Ribs with the rivets called out in Figure 4. Install the nutplates called out in Figure 4.

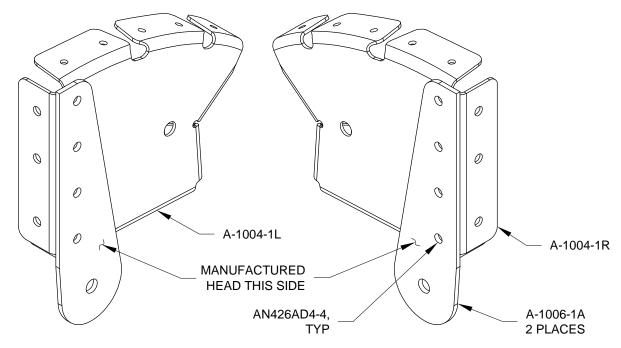


FIGURE 3: OUTBOARD HINGE BRACKET TO NOSE RIB INSTALLATION

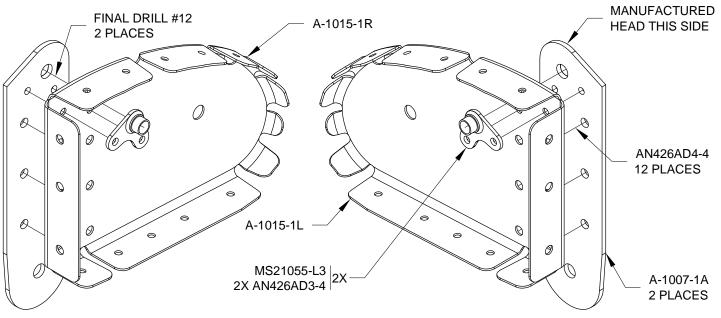


FIGURE 4: INBOARD HINGE BRACKET TO NOSE RIB INSTALLATION

<u>Step 1:</u> Separate the A-1005-1L Main Ribs into A-1005-1A-L and A-1005-1B-L.

Separate the A-1005-1R Main Ribs into A-1005-1A-R and A-1005-1B-R. See Figure 1.

Dimple the .098 [2.5 mm] holes in the main ribs.

<u>Step 2:</u> Deburr the A-1005-1A-L and A-1005-1A-R Main Ribs and the A-1005-1B-L and A-1005-1B-R Main Ribs.

Deburr the A-1006-1B Outboard Hinge Brackets, A-1007-1B and A-1007-1C Inboard Hinge Brackets.


Step 3: Machine countersink the .129 [3.3 mm] holes in the A-1006-1B Outboard Hinge Brackets and A-1007-1B Inboard Hinge Brackets to fit the head of an AN426AD4 rivet. See Figures 2, 4, and 5.


Parts for the right aileron must be countersunk on the side opposite that shown in Figures 2, 4, and 5.

Step 4: Cleco the A-1007-1B and A-1007-1C Inboard Hinge Brackets to each other. Final-Drill #12 the .188 [4.8 mm] hole and machine countersink for the head of an AN509-10 countersunk screw. See Figure 2.

Machine countersink the .098 [2.5 mm] holes in the A-1007-1B Inboard Hinge Bracket to fit the head of an AN426AD3 rivet as shown in Figures 2 and 4.

Parts for the right aileron must be countersunk on the side opposite that shown in Figures 2 and 4.

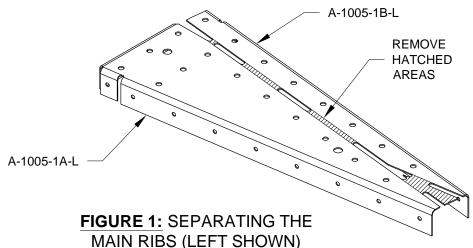

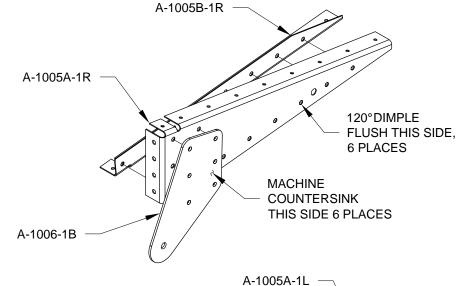

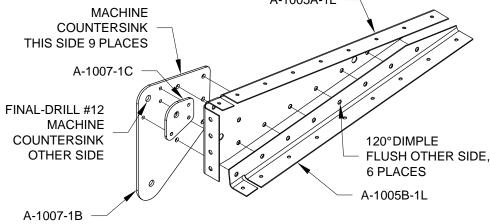


FIGURE 2: MACHINE COUNTERSINK MAIN RIBS AND HINGE BRACKETS

Step 5: Machine countersink the A-1008-1 Doubler for the head of AN426AD3 rivets as shown in Figure 3.

Removed the hatched areas on the doubler as shown in Figure 3 to make 2 parts.

<u>Step 6:</u> Prime all A-1005A-1, A-1005B-1, A-1006-1, A-1007-1, and A-1008-1 parts


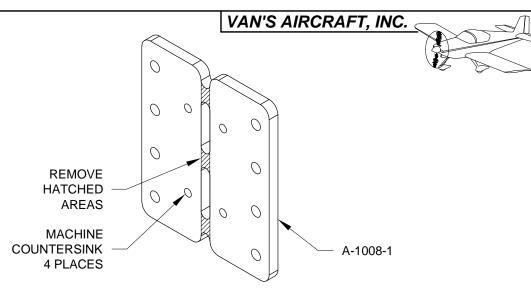


FIGURE 3: SEPARATING THE DOUBLERS

Step 7: Cleco then rivet the A-1007-1B and A-1007-1C Inboard Hinge Brackets to the A-1005A-1L and A-1005A-1R Main Ribs. Leave open the 2 bottom holes as noted in Figure 4.

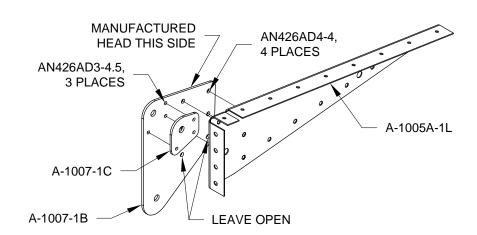

Step 8: Cleco then rivet the A-1006-1B Outboard Hinge Brackets to the A-1005A-1L and A-1005A-1R Main Ribs. Leave open the 2 bottom holes as noted in Figure 5.




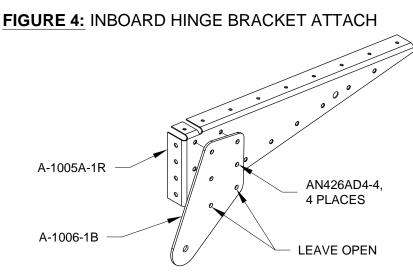


FIGURE 5: OUTBOARD HINGE BRACKET ATTACH

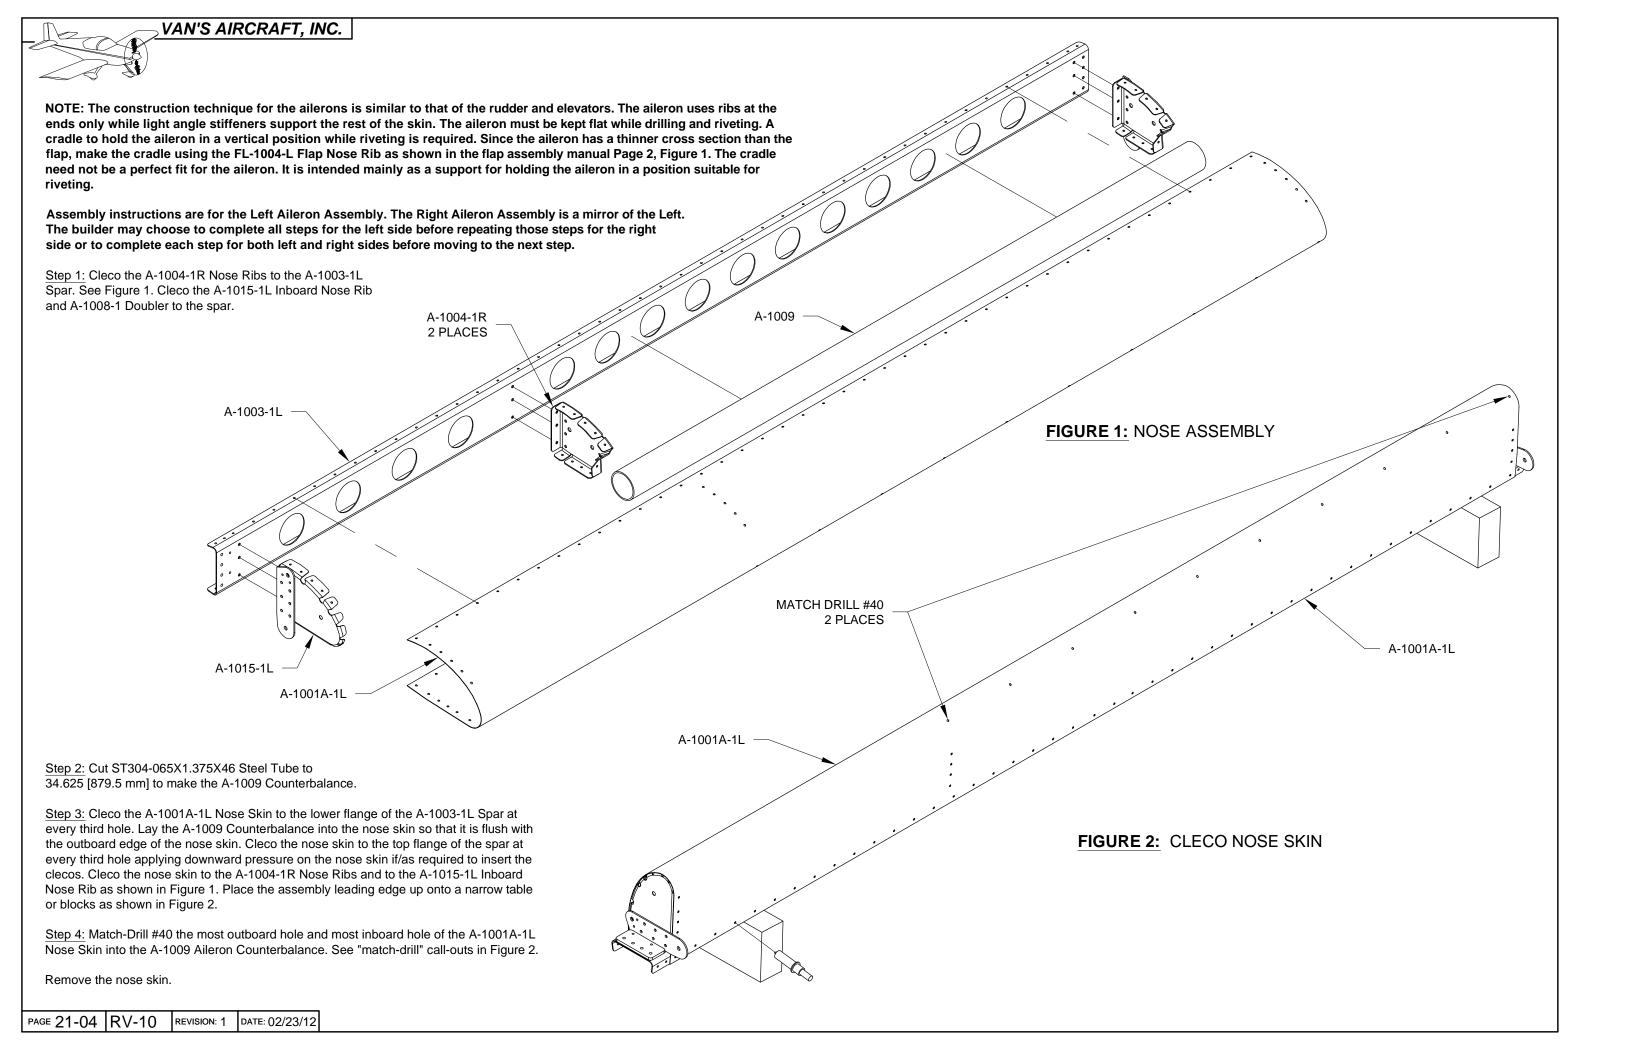

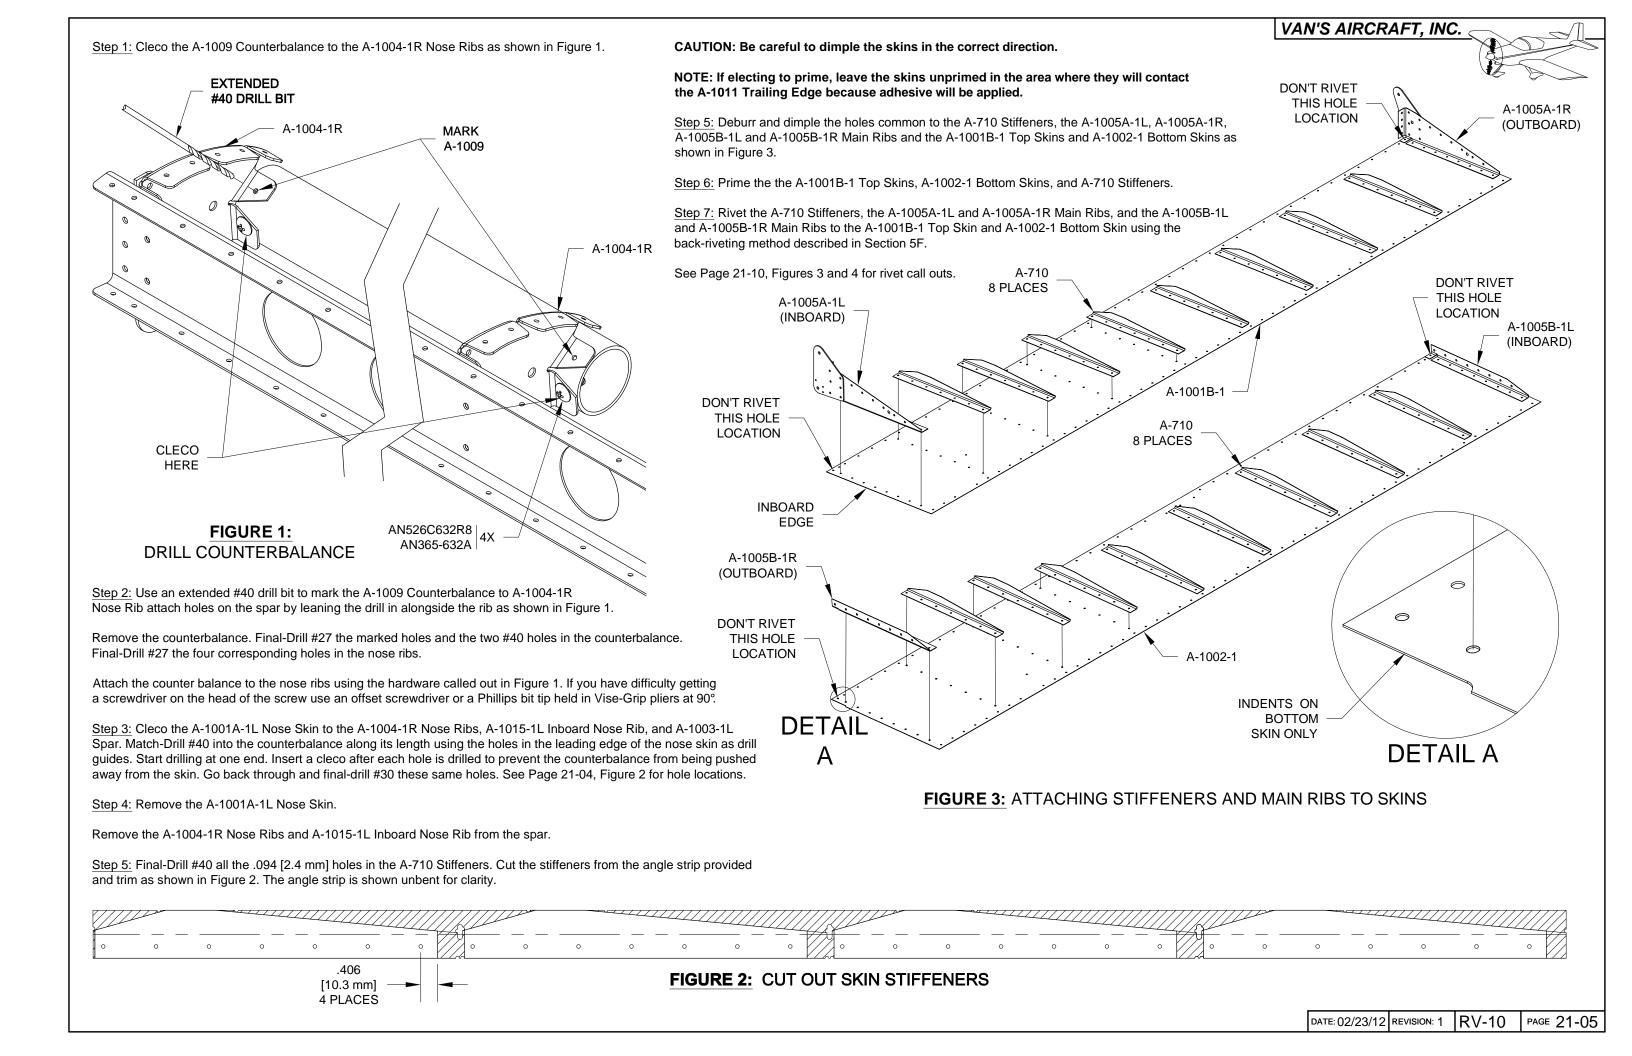



Step 1: Cleco the top skin assembly and the A-1001A-1L Nose Skin to the top flange of the spar at every other hole. Cleco the nose skin to the A-1004-1R Nose Ribs, and A-1015-1L Inboard Nose Rib.

Cleco the A-1005-1A-L and A-1005-1A-R Main Ribs to the spar.

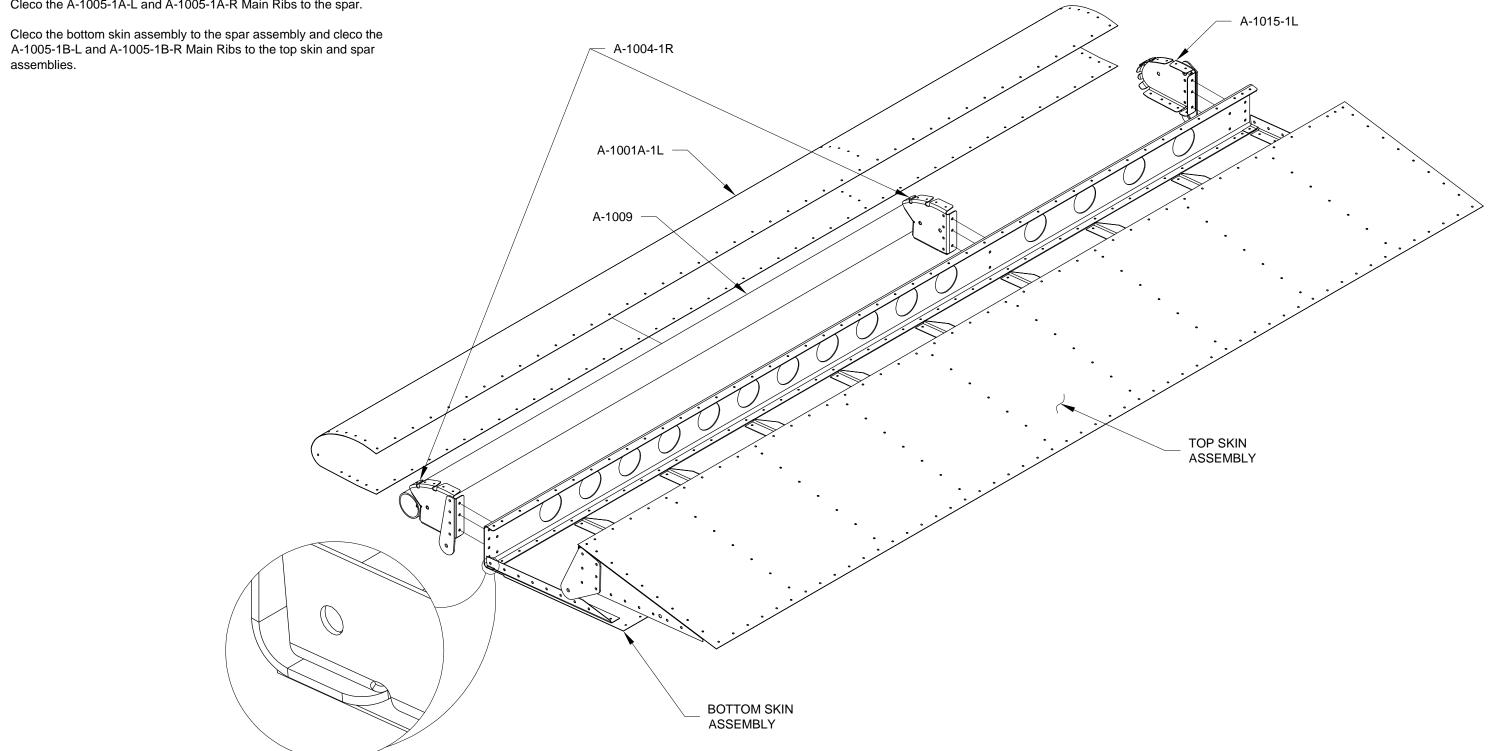


FIGURE 1: FITTING ASSEMBLY

PAGE 21-06 RV-10 DATE: 02/23/12 REVISION: 1

Step 1: Lay the assembly flat on the table top hanging the clecos which are holding the A-1001A-1L Nose Skin to the A-1002-1 Bottom Skin and A-1003-1L Spar over the edge. Use weights over the main ribs to keep it firmly against the table with no twist. A straight board can be used to distribute the weight and hold the aileron flat to the table. See Figure 1.

Step 2: Check the A-1001A-1 Nose Skin for bowing with a straight edge held spanwise midway between the the leading edge and spar. About .063 [1.6 mm] of rise is acceptable. If necessary the skin can be squeezed down by hand to minimize the bow.


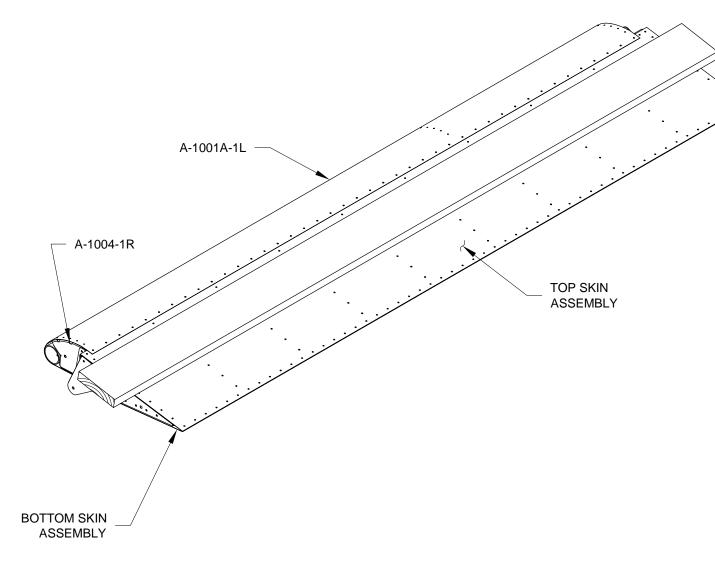


FIGURE 1: FINAL-DRILL SPAR AND NOSE RIBS

Note: Drill perpendicular to the centerline of the extrusion, not the surface of the top skin. The difference is only a few degrees, but using the correct reference will give better results. Step 3: Cleco the A-1011 Trailing Edge, made from VA-140 Trailing

Edge Extrusion, into the aileron's trailing edge. Mark the inboard and outboard ends of the trailing edge where the edge of the top skin assembly meets the trailing edge. See Figure 2.

Final-Drill #40 the holes common to the top skin and bottom skin assemblies and trailing edge.

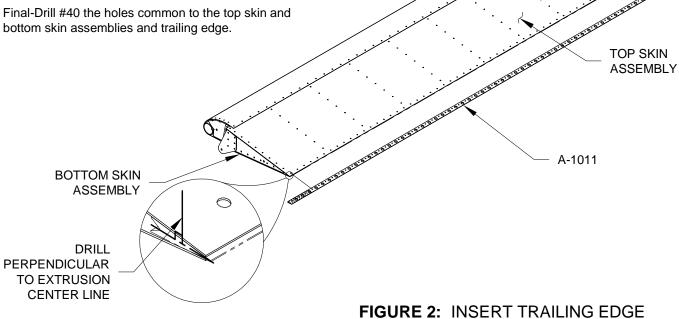

Step 4: Disassemble the aileron. Deburr all the parts including the insides of the lightening holes in the A-1003-1L Spar.

Trim the A-1011 Trailing Edge at the marks made on the inboard and outboard locations as marked in Step 3.

Step 5: Make a edge break in the aft edge of the A-1001A-1L Leading Edge, A-1001B-1 Top Skin, and A-1002-1 Bottom Skin (see Section 5K).


Step 6: With the exception of the A-1011 Trailing Edge, dimple wherever exterior flush rivets will be installed, including the spar flanges. Since the spar is .040 thick it may bow slightly when dimpled but it will straighten during final assembly.

Machine countersink the holes in the trailing edge with the tool perpendicular to the surface of the part.

Dimple all remaining holes in the skins.


If electing to prime, note that the A-1009 Counterbalance is stainless steel and need not be primed. The A-1011 Trailing Edge should not be primed because adhesive will be applied.


Step 7: Rivet the A-1008-1 Doubler to the A-1003-1L Spar using the rivets called out in Figure 3.

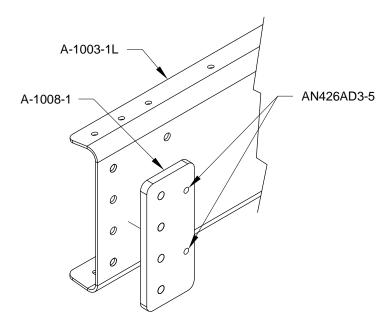

VAN'S AIRCRAFT, INC.

FIGURE 3: ATTACHING THE DOUBLER TO THE SPAR

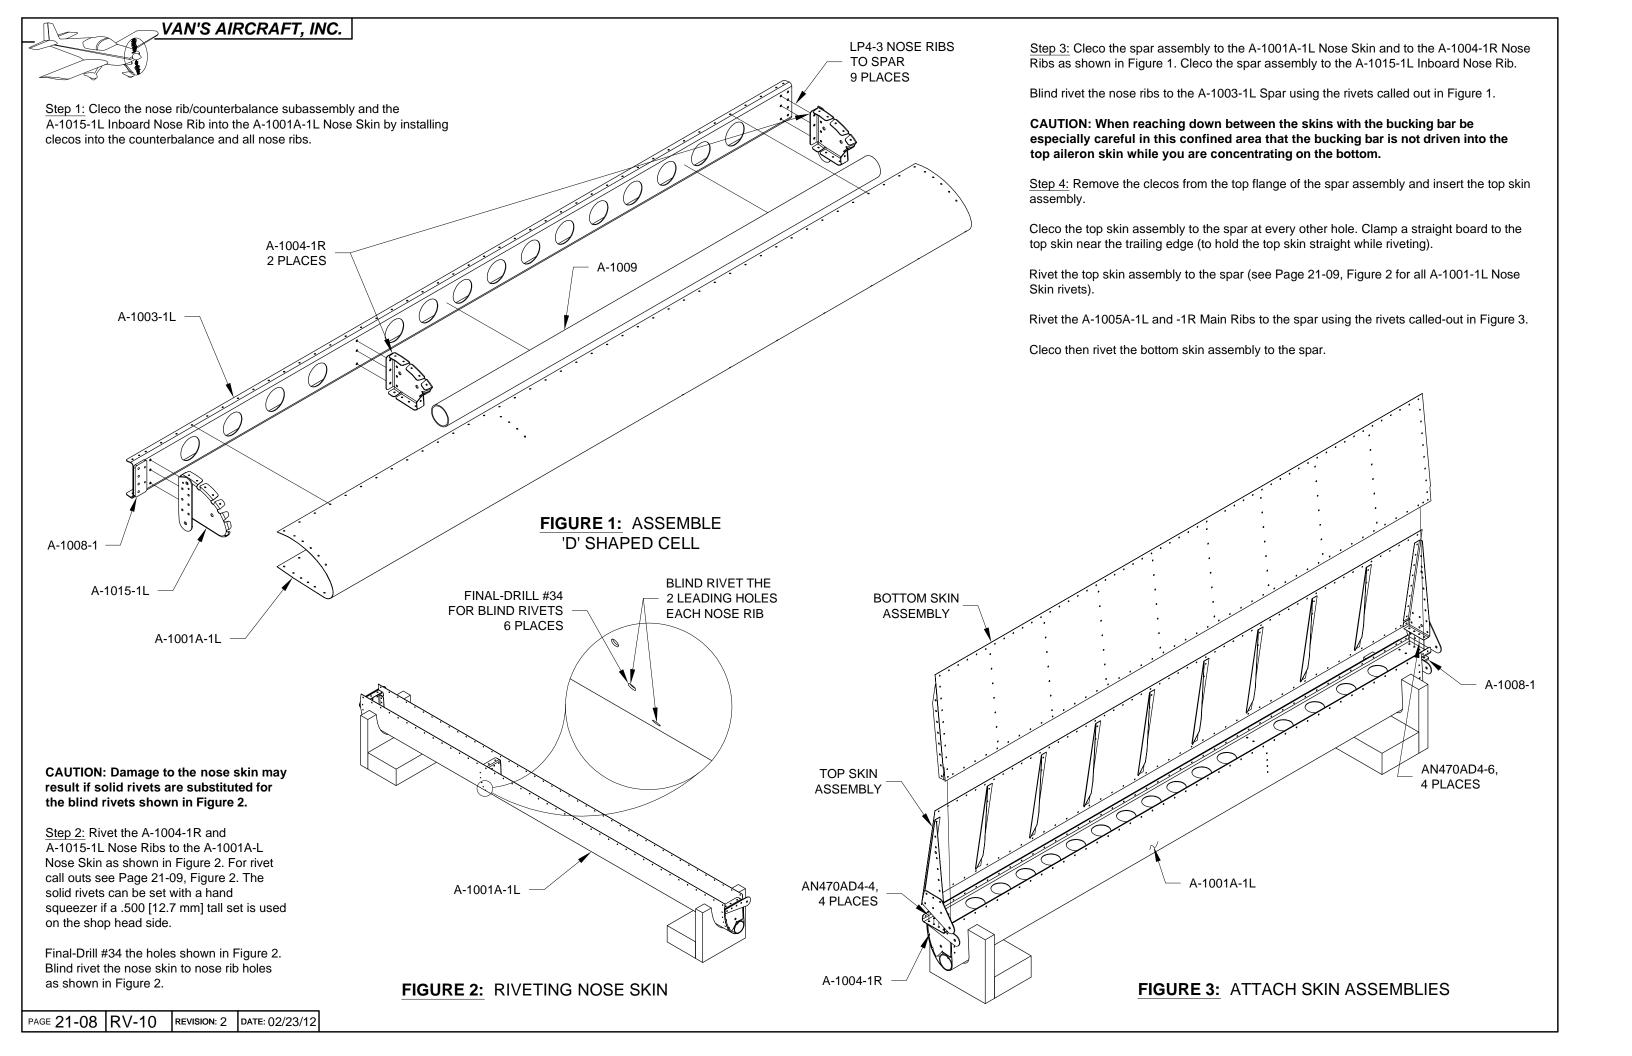

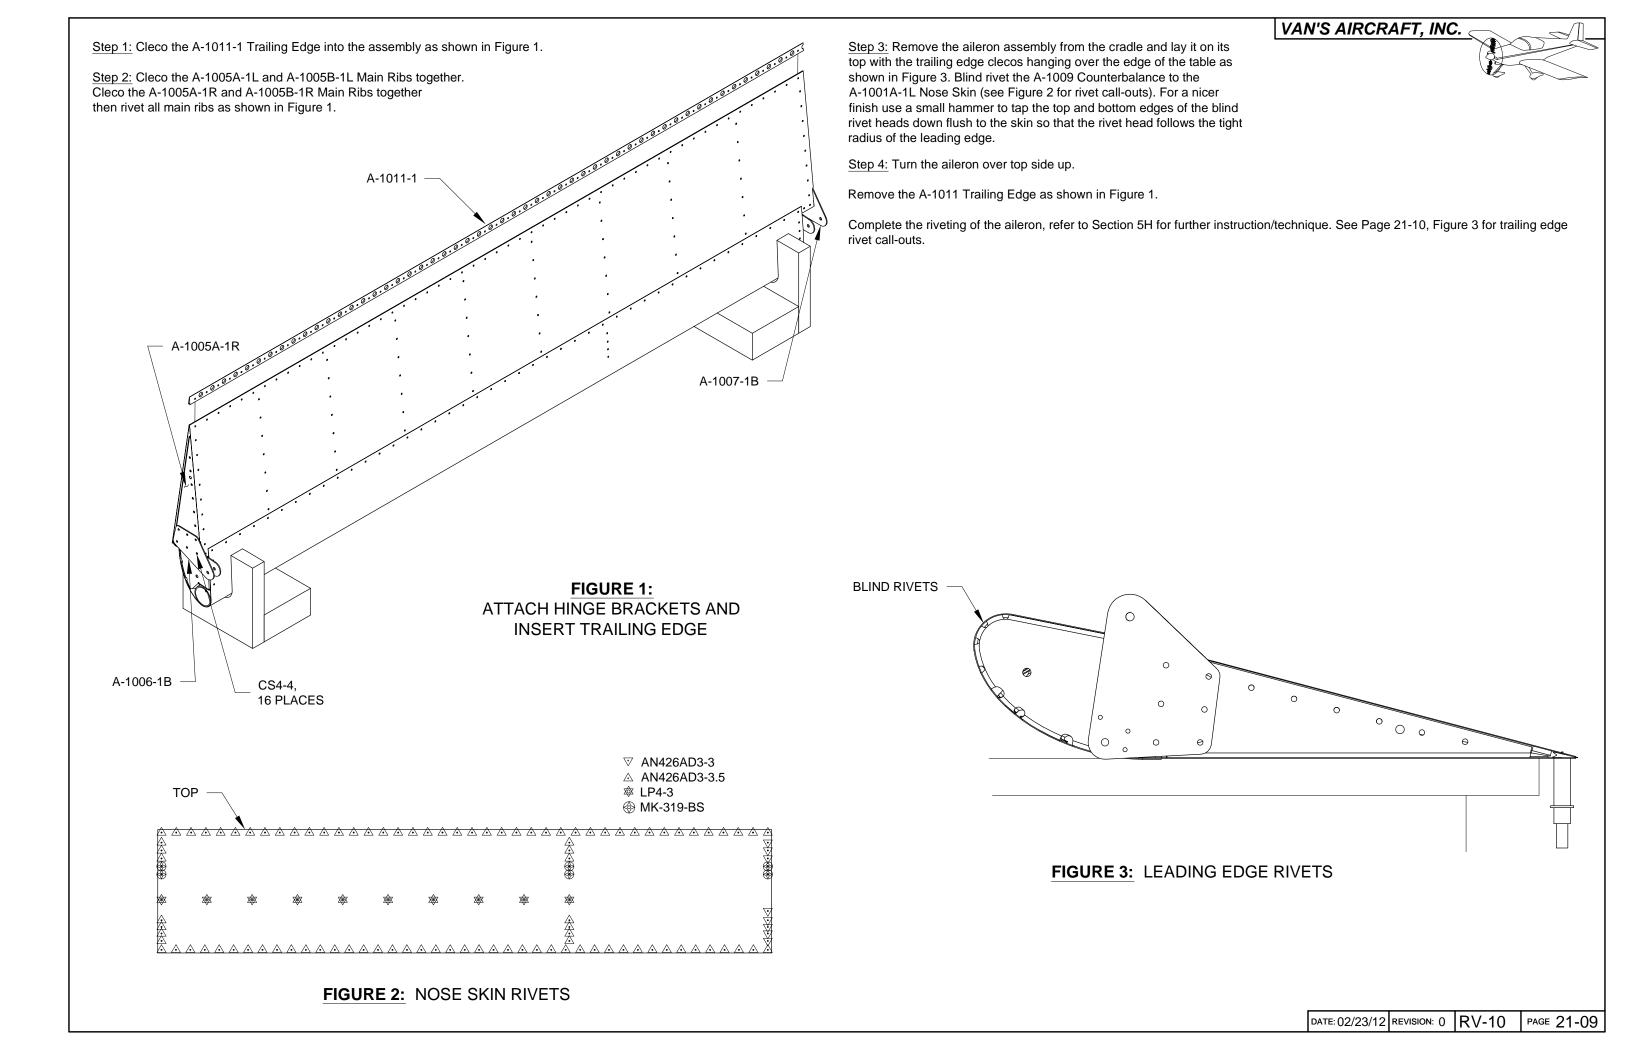

VAN'S AIRCRAFT, INC.

<u>Step 1:</u> The hardware called-out in Figure 1 for attachment of the inboard hinge bracket to the wing will be used during completion of the aileron actuation system as covered in Section 23.

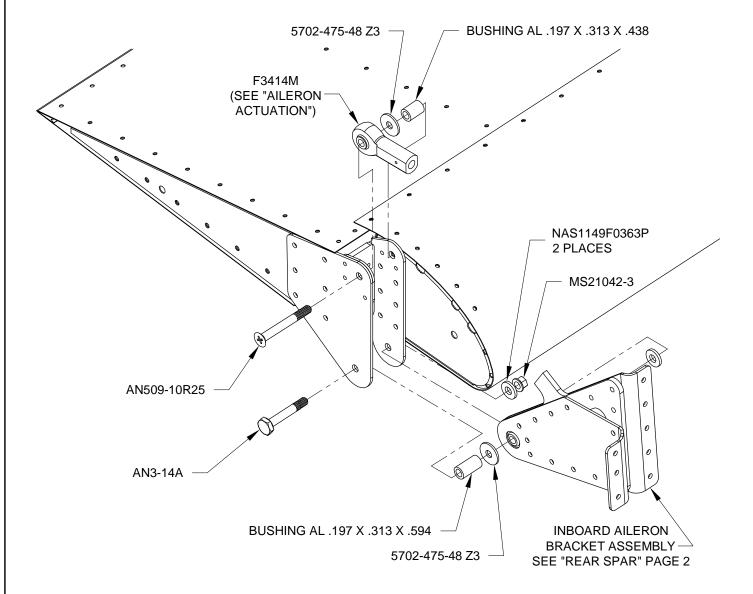


FIGURE 1: INBOARD HINGE BRACKET ATTACH HARDWARE

<u>Step 2:</u> The hardware called-out in Figure 2 for attachment of the outboard hinge bracket to the wing will be used during completion of the aileron actuation system as covered in the "Aileron Actuation" section of the manual.

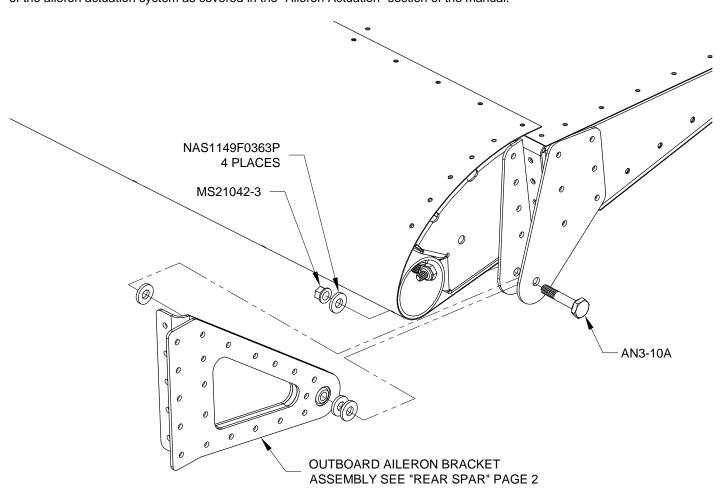


FIGURE 2: OUTBOARD HINGE BRACKET ATTACH HARDWARE

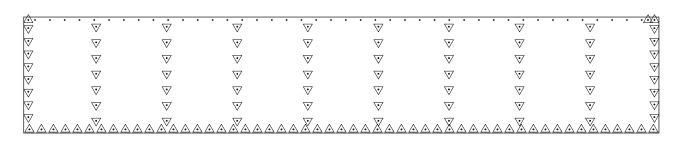


FIGURE 3: A-1001B-1 TOP SKIN RIVETS

KEY: ♥ AN426AD3-3 △ AN426AD3-3.5

<u> </u>	• • • • • •	· · · · · ·	· · · · · ·	· · · · · ·	• • •	• • • •	• • • • • •	• • • • •	• • •
\bigvee	$\overset{\vee}{igotimes}$	$\stackrel{v}{\bigtriangledown}$	$\stackrel{\checkmark}{igotimes}$	$\stackrel{\vee}{\nabla}$	$\stackrel{\checkmark}{\triangledown}$	$\stackrel{V}{\bigtriangledown}$	$\stackrel{V}{\bigtriangledown}$	∇	$\stackrel{\checkmark}{\lor}$
abla	∇	∇	∇	∇	∇	∇	∇	∇	abla
<u>~</u>	∇	$\overline{\nabla}$	∇	∇	∇	∇	∇	∇	Ÿ
Ÿ	∇	∇	∇	∇	∇	$\overline{\nabla}$	\triangledown	$\overline{\nabla}$	Ť
abla	∇	$\overline{\nabla}$	∇	∇	∇	∇	$\overline{\nabla}$	$\overline{\nabla}$	$\overline{\triangledown}$
·	♥	♥	♥	🛡	💎	▽		♥	

FIGURE 4: A-1002-1 BOTTOM SKIN RIVETS