João André de Jesus Cruz Telemetria para Vasilhame baseada em IoT

IoT-based Telemetry for Containers

DOCUMENTO PROVISÓRIO

João André de Jesus Cruz Telemetria para Vasilhame baseada em IoT

IoT-based Telemetry for Containers

DOCUMENTO PROVISÓRIO

o júri / the jury

 $\label{eq:president} \textbf{Prof.}$

Professor

vogais / examiners committee **Prof.**

Professor

Prof.

Professor Auxiliar da Universidade de Aveiro (Orientador)

Prof. Dr.

Professor Auxiliar da Universidade de Aveiro (Co-Orientador)

agradecimentos / acknowledgements

Palavras-Chave

Resumo

Keywords

Abstract

Contents

\mathbf{C}	onter	nts			j
Li	st of	Figur	ces		iii
Li	st of	Figur	es		iii
Li	st of	Table	es es		v
Li	st of	Table	es		v
\mathbf{A}	crony	ms			vi
N	omer	ıclatuı	${f re}$		vii
1	Intr	oduct	cion		1
	1.1	Backg	ground and Motivation		1
	1.2	Scope	3		2
	1.3	Outlin	ne		2
	Refe	rences		 •	3
2	Stat	e of t	the Art		5
	2.1	The L	LPG cylinder		5
	2.2	Meası	uring/Stimulation Techniques		6
		2.2.1	Measuring Techniques		6
		2.2.2	Stimulation Techniques		7
		2.2.3	Don't know yet		8
	2.3	Signal	ds and System		8
		2.3.1	Vibration		8
		2.3.2	Signal definition		8
		2.3.3	Signal and Digitalization		9
		2.3.4	System definition		10
		2.3.5	LTI Systems		13
		2.3.6	Discrete-Time Fourier-Transform		13
	2.4		cylinder Model		14
		2.4.1	Mathematical Model for LPG cylinder		15
		2.4.2	Relation with previous studies		16
		2.4.3	Experimental results		18

	2.5		19
	Refe	rences	23
3	Sys	em Architecture	25
	3.1	System Elements	25
	3.2	Architecture proposal	26
	3.3		26
	3.4	Hardware selection	26
		3.4.1 Microphone	27
		3.4.2 Accelerometer	28
		3.4.3 Piezoelectric	29
		3.4.4 Amplifier circuits	29
		3.4.5 Coupling	29
4	Dev	eloped Architectures	31
	4.1	Software Implementations	31
5	Con	clusions and Future Work	33

List of Figures

2.1	LPG cylinder internal state composition					
2.2	Different LPG cylinder to used to compare the relation between Frequency and					
	Weight for different modelswuLiquidLevelDetector2014b	6				
2.3	The LPG cylinder filled with liquid, with the mechanical representation of the					
	Euler-Bernoulli beam[wuLiquidLevelDetector2014b]	15				
2.4	Clamped-Free Model [chanFreeVibrationCantilever1995]	17				
2.5	Pinned-Pinned Model[chanFREEVIBRATIONSIMPLY1996]	17				
2.6	${\it Clamped-Clamped Model} [{\it jacobsContactlessLiquidDetection2005}] \ . \ . \ . \ .$	18				
2.7	Frequency VS Weight - Practical curve obtained by					
	$wu Liquid Level Detector 2014 b \ldots \ldots \ldots \ldots \ldots \ldots$	18				
2.8	Frequency VS Weight - Practical curve obtained by					
	$wu Liquid Level Detector 2014 b \ldots \ldots \ldots \ldots \ldots \ldots$	19				
2.9	Different LPG cylinder to used to compare the relation between Frequency and					
	Weight for different modelswuLiquidLevelDetector2014b	20				
3.1	Flow of data in the components of the software [WOMicFREE]	27				
3.2	Application landscape for a selection of Analog Devices MEMS accelerometers	s 28				

List of Tables

2.1	Common	$\operatorname{sampling}$	rates	per	
	application[orfar	${f nidis}$ ${f Introduction Signal F}$	$Processing 1996] \dots$		10
3.1	Key specification	s of MEMS accelerometers			29



*Add References chapter at the end

*1-Introduction Chapter Incomplete

Chapter 1

Introduction

*Missing OutLine

1.1 Background and Motivation

*Edit reference number 2

Energy plays an important role in our modern lifestyle and the development process of any country. And studies shown a strong correlation between the energy production/consumption and the economic/scientific development. Back in a couple of centuries ago, the primary source of energy was Wood, as the industrialization evolved the needed of energy sources with higher energy efficiency rates[1]. The first successor was Charcoal followed, a few years latter by Oil and LPG. Compared with the other energy sources, LPG burns very efficiently, realizing smaller amounts of pollutants gases. For example to produce the same amount of energy produced by 1Kg of LPG, burning it in a cookstove, it would be need approximately at least 2.5Kg of Charcoal and 21.Kg of raw Wood[2].

LPG if the second biggest, non-renewable, source of energy in the world, with different consumption areas, as domestic, auto, industrial and agriculture. With the biggest consume in a domestic level, since is used to heating and cooking, with various types of LPG produced by the extraction of natural gas, oil extraction and oil refining, the most common used in house appliances are propane, butane and natural gas[3]. More recently the energy sources have been replaced with renewable energy, to decrease the environmental impact and however LPG has bigger impact, doesn't seem that it won't be replaced by other sources of energy, since recent studies developed what can be considered a renewable method of biosynthesis propane gas[4], commonly used in house appliances.

The LPG use in house appliances, usually is made via pluming systems in the cities, were the agglomeration of population is bigger, which turns the installation of gas pipelines more economic viable when compared with other regions. For smaller villages the solution for the LPG distribution is based on the gas cylinders, which is divided in two main distribution system, Consumer Controlled Cylinder Model (CCCM), where the final consumer is responsible for refueling the cylinder, most commonly used in cars, and Branded Cylinder Recirculation Model (BCRM), where the final consumer only exchange a empty cylinder for a full one, being the supplier responsible for its refill, which require additional logistics for the suppliers distributions systems. For the second, it would be interesting for the suppliers

and the cylinder retailers, to know the amount of gas in the cylinder of each final consumer of a certain region of supply.

This motivated a research in a accurate method of measuring the amount of gas in a LPG cylinder and transmit that information to the supplier, taking advantage of the technology and using a IoT, as a way to transfer the information, suppliers would be able to efficiently plan their distribution routes.

In a initial stage different methods of measuring the level of gas in a LPG cylinder will be explored, and the the work developed is based in one of those methods, all the details will be explained further in the document.

1.2 Scope

Rewrite this, I don't like

In order to develop a system that is robust/precise and featuring a system capable of communicate with the supplier and transmit the necessary information. A previous research must be made, to find similar work developed in the same field.

Taking in consideration previous works, the identification of the measuring method must be made, looking to the pros and cons of all methods, and selecting the one that can provide the robustness and precise needed. For the communication system, should be based in IoT, and its range should cover most of the territory, to allow the information transfer of each LPG cylinder.

The final device, should include all of the features mentioned, and take into consideration the components/development cost, making it relatively cheap to produce and within the business plan of the producer, and affordable for the final user.

1.3 Outline

References

- [1] Ayhan Demirbas, Ayse Sahin-Demirbas, and A. Hilal Demirbas. "Global Energy Sources, Energy Usage, and Future Developments". *Energy Sources* 26.3 (Feb. 2004), 191–204. ISSN: 0090-8312, 1521-0510. DOI: 10.1080/00908310490256518.
- [2] File:2014-03 Multiple Household Cooking Fuels GIZ HERA Eng.Pdf Energypedia.Info. URL: https://energypedia.info/index.php?title=File:2014-03_Multiple_Household_Cooking_Fuels_GIZ_HERA_eng.pdf&page=2 (visited on 10/13/2020).
- [3] Liquefied Petroleum Gas (LPG) Energypedia.Info. URL: https://energypedia.info/wiki/Liquefied_Petroleum_Gas_%28LPG%29 (visited on 10/13/2020).
- [4] Pauli Kallio et al. "An Engineered Pathway for the Biosynthesis of Renewable Propane". Nature Communications 5.1 (2014). DOI: 10.1038/ncomms5731.

Chapter 2

State of the Art

*Order the section in this chapter

*1-The LPG cylinder

*2-Measuring/Stimulation Tecniques

*3-Signals and systems - missing images

*4-LPG cylinder Model

2.1 The LPG cylinder

*Integrate all

The LPG cylinders commonly used in house appliances, usually came in different weight types, that are change according to the cylinder construction, the supplier, his application and composition of gas that is being healed inside the container. One thing that is similar is the state of the gas under certain circumstances, for instance the boiling point of LPG is around -42°C, which means that under ambient pressure/temperature the gas is in his gaseous state.

Usually inside a LPG cylinder, the gas is kept in a liquid and gas form, in a percentage of around 80% and 20%, respectively, with a constant pressure, this percentage allows, when the external temperature rises, affecting the internal temperature, for both gas and liquid to expand until a certain limit, without compromise the safety of the use of the cylinders.

When the cylinders are empty and need to be filled, there is a direct relation between the amount of pressure, needed to fill the cylinders, and the temperature of the gas, the higher the temperature of the gas the higher is the pressure needed to fill the cylinder, this process of turning the LPG in a gas form into a liquid by pressurizing it, is called liquefaction. Another relation that must be taken into consideration, is the weight of the cylinder and the amount of liquid LPG, when the cylinder valve is open and LPG gas is released, the liquid LPG is turns into gas in order to keep a balance of pressure inside the cylinder, since that for the same pressure the density of the LPG liquid is higher then the density of the LPG gas, when the amount of liquid LPG decreases the weight of the cylinder also decreases [1] [2].

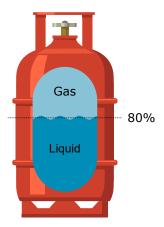


Figure 2.1: LPG cylinder internal state composition

2.2 Measuring/Stimulation Techniques

2.2.1 Measuring Techniques

As the LPG cylinder content is divided in two physical states, liquid and gaseous, over the years several techniques have been used and improved in measuring the liquid level, which is how is determined the amount of LPG in the cylinder, some of the different techniques used are based on the same method. Those methods are usually split in two different categories, contact and contactless. Contact measuring methods usually include, mechanical, electrical or pressure sensing devices. In this methods the sensors are in direct contact with the liquid. In contactless, the methods used usually are more complex to process, when compared with contact methods. In this case the methods of measuring are mainly through optical, ultrasound, vibration and weight analysis[3].

*format correctly

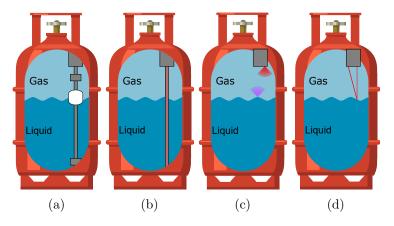


Figure 2.2: Different LPG cylinder to used to compare the relation between Frequency and Weight for different modelsWu and Yang

Taking in consideration the fact that a LPG cylinder is opaque and isolated, some of the methods can't be used in the process, for instance, a mechanical float-type isn't a suitable solution to use inside the cylinder, or in the same way to use an electrode, as a electrical

method, in these cases the device would require to be installed inside the cylinder during his fabrication process, possibly implying the substitution of the current cylinders. In the same way, in contactless methods, the use of different optical techniques and the use of of ultra-sound, would face the same problem mentioned with the contact methods, being also discard as a suitable method in this situation.

From previous research, some work has already been developed with the purpose of measuring the amount of liquid gas inside a LPG cylinder. Being the techniques used based on the methods presented above.

*Pressure based device - add the problems of this method

In a work from Baig and Elahi a pressure sensing device was developed, with the final appliance to a LPG cars, but with the possibility of apply in other circumstances. The device uses the pressure variation to move a magnet and using a Hall Effect sensor, with a fixed position, this motion produces a linear change of the voltage in the sensor, giving an accurate method of measuring the amount of gas in the LPG cylinder, in this case[5].

*Weight device

A common method of evaluate the amount of gas inside a LPG cylinder, is based on the weight change of the cylinder, that decreases with the consumption of liquid gas. As an example, the work developed by da Silva Medeiros et al., Shrestha, Anne, and Chaitanya or Shingan et al. have similar approaches to measure the amount of liquid gas inside the LPG cylinder, since it's quite simple to implement, for a simply measure it only requires a load cell, a amplifier and a microcontroller to display the result. This technique is also very precise, if there isn't a huge temperature change, that would affect the density of the liquid gas[6][7][8]. Several works have been developed based on this technique, since it only requires a load cell and a microcontroller

*Waves based device - rewrite

Another method used that proved to be valid for measuring the amount of liquid inside a closed and opaque container, is based on the analysis of the vibrations. A container filled with liquid, produces different sounds for different types of liquids or their variation. As a example of an implementation based on this principles is the work of Jahn, Ehrle, and Roppel or Wu et al., both cases evaluate the in the LPG cylinder, but they have a different approach.

2.2.2 Stimulation Techniques

Stimulation Tecniques

Taking into consideration, that the measurment of the liquid level is based on the vibration, it was found in previous work two tequniques to induce the vibration in the LPG bottle. The first example of a technique of stimulation the LPG bottle is by using a piezoelectric transducer, attached to the bottom of the container, this transducer produces transversal and longitudinal waves in the surface of the container where the transducer is attached. The frequency of the waves generated is related with the frequency of the system response to a certain level, and changes according to that. The same waves are captured with another piezoelectric transducer and processed[9]. Another method to produce vibration in the LPG bottle, can be archived with a hammer or a device, that hits the surface of the LPG bottle, the captured signal is the appropriated sensor is then processed and the result returns the level of liquid gas inside. In this case, not only vibration in the bottle is produced but a sound

as well[10].

2.2.3 Don't know yet

To the purpose of this dissertation, the approach of Wu et al. is being reproduce, both in the signal acquire and the stimulation technique. This approach allows to measure the vibration and the signal reproduced, which allows a previous study of the system before enter in the development of a more practical prototype.

2.3 Signals and System

- *1-Vibration
- *2-Signal definition
- *3-Signal and Digitalization
- *4-System definition
- *5-LTI Systems
- *6-Discrete-Time Fourier-Transform

2.3.1 Vibration

The vibration and the studies in this field are usually related with the oscillatory motion of a body and the forces associated with them. Bodies with mass and elasticity are capable of experience vibration, knowing that, for example, when a structure is design, is required to take in consideration the oscillatory behavior of the structure. There are two types of vibration, free and forced. The first takes place when a system oscillates under forces natural to the system itself and there is no action of external forces. Under free vibration the system will vibrate at one or more of its natural frequencies, stablished by the properties of the system. Forced vibration occurs when the system is under the excitation of external forces. If it oscillatory, the system will vibrate at the same frequency of the external oscillation, if this frequency matches one of its natural frequencies a resonant state is reached, which may dangerous for a structure stability.

2.3.2 Signal definition

Signals can describe a large variety of physical phenomenon's, bringing a certain information about it, depending of the phenomenon represented. For example, the voltage variation in a capacitor, or the human voice which creates variations in acoustic pressure, captured by a microphone that senses those variations and convert them into a electrical signal. A signal can be represented mathematically as a function of one or more independent variables. To what concern in signal processing, the types of signal considered are two types, continuous-time signals and discrete-time signals. In these cases, the independent variable is continuous and discrete, respectively[11].

2.3.3 Signal and Digitalization

A continuous-time signal can be represented in a discrete-time form by the knowledge of its values at certain points in time equally spaced. This is called sampling theorem, and if the samples are close to each other, less time between samples, the more similar the discrete signal became to the continuous. Sampling plays an important role between the continuous-time and the discrete-time.

Considering a continuous-time signal x(t) is measured at every T seconds. The is discretized in units of the sampling interval T:

$$t = nT_s, n = 0, 1, 2, ...$$

The variable T is called sampling period and the inverse of the period $f_s = \frac{1}{T}$ being the sampling frequency. One of the problems of this conversion is usually related with the correct choose of the sampling period, for that the theorem clearly specifies that the sampling period must be small enough so if there are small variations in the signal, they don't get lost between samples. Therefor the theorem says that the sampling frequency f_s must be chosen to be at least twice the maximum frequency f_{max} . A continuous-time signal x(t) is bandlimited, so its frequency spectrum is limited at maximum frequency f_{max} , and no frequencies above that.

$$f_s \ge 2f_{max} \tag{2.1}$$

$$T \le \frac{1}{2f_{max}} \tag{2.2}$$

The minimum value of the sampling frequency allowed by the theorem, is called the Nyquist rate, and his value is $f_s = 2f_{max}$. Oppositely, for a known value of f_s the maximum frequency of the signal is $f_{max} = \frac{f_s}{2}$ and is called the Nyquist frequency of folding frequency.

For the representation of some signals is usually used a unit impulse as a method to build a block to represent and construct other signals. The simplest representation of a unit impulse (or unit sample), in discrete-time, is defined as follows:

$$\delta[n] = \begin{cases} 0, n \neq 0 \\ 1, n = 0 \end{cases}$$
 (2.3)

Another example of a simple discrete-time signal is the unit step, defined as:

$$u[n] = \begin{cases} 0, n < 0 \\ 1, n \ge 0 \end{cases} \tag{2.4}$$

If a close analysis is made, is possible to conclude that there is a relation between a unit impulse and a unit step, a unit step can be represented as a sum of impulses

$$u[n] = \sum_{k=0}^{\infty} \delta[n-k] \tag{2.5}$$

The equation 2.5 can be seen as a sum of delayed impulses and plays an important role in the sampling property.

The values of the f_{max} and f_s depend on the application, and the Nyquist frequency usually defines the cutoff frequencies used in filters required in DSP applications. A example of the of the typical sampling rates of common DSP applications are shown in the following table:

application	$\int f_m ax$	f_s
geophysical	500 Hz	1 kHz
biomedical	1 kHz	2 kHz
mechanical	2 kHz	4 kHz
speech	4 kHz	8 kHz
audio	20 kHz	40 kHz
video	4 MHz	8MHz

Table 2.1: Common sampling rates per application[12]

2.3.4 System definition

There is no specific nature to a system, and there is vast example of systems all around us, they could be biological, mechanical, electrical, among others. In the signal processing context a system can be viewed as a process in which input signals are transformed by the system or cause the system to respond in some way, with the resulting in new output signals. Simplifying, a system can be described as an entity with a specific function, where the output signal is the result of the manipulation one or more input signals. To the types of signals mentioned, continuous and discrete, the systems usually are represented as in the 2.6, in both cases x represents input and y output.

$$y(t) = H[x(t)]$$

$$y[n] = H[x[n]]$$
(2.6)

One of the motivations for the study/analysis of systems from various applications, thus systems from different applications, with similar behavior, can have similar mathematical descriptions. The description of a system as a mathematical function also allows to simulate the behavior in a certain application, testing the response of it with different techniques.

A system can be described with certain properties, each one having a different effect on the system output. The properties are stability, memory, causality, invertibility, time-invariance and linearity. In signal-processing context, invertibility and time-invariance have special relevance, with a profound study of linear time-invariant (LTI) systems further ahead.[11]

Stability

A system is considered stable if an input signal limited in amplitude, results in a output signal also limited in amplitude. The system operation, H, is stable if the output signal y(t) satisfies the following condition

$$|y(t)| \le M_y < \infty, \forall t \tag{2.7}$$

If the input signal x(t) satisfies the condition

$$|x(t)| \le M_x < \infty, \forall t \tag{2.8}$$

The values of M_x and M_y correspond to finite positive numbers. The conditions for the stability of a discrete-time system can be described in the same way.

Memory

A system has memory, when the output signal depends on past values of the input signal. The temporal extension of the past values on which the output depends, defines how far the memory of the system extends. One example of a system with memory is the current i(t) in a inductor and the relation of his voltage v(t):

$$i(t) = \frac{1}{L} \int_{-\infty} t v(\tau) d\tau \tag{2.9}$$

For a discrete-time system, the conditions are similar.

Causality

A system is considered *causal* if his resulting output signal, only depends in present/past values of the input signal. Opposed to that, a *noncausal* system can have is output depending on future values of the input signal. An example of a *causal* output is the following:

$$y[n] = \frac{1}{3}(x[n+1] + x[n] + x[n-1])$$
(2.10)

On the other hand an example of a noncausal is:

$$y[n] = \frac{1}{3}(x[n] + x[n-1] + x[n-2])$$
(2.11)

Invertibility

A system is considered invertible if is possible to recover the input from the output signal of the system. The operation to recover the signal may be a different system connected to the output of the first. If the operation of a system is represented with H in a continuous-time domain, with x(t) and y(t) being the input and output, respectively. The y(t) is applied to the second system, where the result is expected to be x(t), as follows:

$$H^{-1}y(t) = H^{-1}H\{x(t)\}\$$

$$= H^{-1}H\{x(t)\}\$$
(2.12)

As the $H^{-1}H$ denotes the identity operation. If H^{-1} is the inverse operation of the H then the output of the second operation is the same as the input of the first operation. This property has special relevance in the design of communications systems.

Time-Invariance

A system is considered time invariant if a time delay in the input signal, results as well in a delay of the output signal. This means that a certain system will respond in the same way, whenever a signal is applied in input, meaning that the characteristics of the system won't change with time. Considering a continuous-time system, with x(t) and y(t) being the input and the output, respectively. Represented as follows:

$$y(t) = H\{x(t)\}$$
 (2.13)

If the input signal is delayed by t_0 seconds, the new input signal is $x(t-t_0)$ and an be described as follows:

$$x(t - t_0) = S^{t_0}\{x(t)\}$$
(2.14)

Where the S^{t_0} represents the delay. So the new output signal $y_i(t)$, resulting from the delay applied in the will be:

$$y_i(t) = H\{x(t - t_0)\}\$$

$$= H\{S^{t_0}\{x(t)\}\}\$$

$$= HS^{t_0}\{x(t)\}\$$
(2.15)

Now considering y_o the output signal of the original system delayed by t_0 seconds:

$$y_{i}(t) = S^{t_{0}}\{y(t)\}\$$

$$= S^{t_{0}}\{H\{x(t)\}\}\$$

$$= S^{t_{0}}H\{x(t)\}\$$
(2.16)

The system is time invariant if the outputs are equal for an identical input signal x(t).

$$HS^{t_0} = S^{t_0}H (2.17)$$

This means that, for a system H to be time invariant, the system H and the time delay S^{t_0} must commute with each other for t_0 . A similar relation in the discrete-time system to be time invariant.

Linearity

A system is considered *linear* if fills all the requirements of the *principle of superposition*. That is, if the response of a system to a weighted sum of input signals is equal to the same weighted sum of the output signals, in each one of the output signals being the result of a certain input signal acting independently in the system. If this principle is not fulfilled, the system is called *nonlinear*. A weighted sum of continuous-time signals:

$$x(t) = \sum_{i=1}^{N} a_i x_i(t)$$
 (2.18)

Is applied to a system H, where $a_1, a_2, ..., a_N$ correspond the weight factor and $x_1(t), x_2(t), ..., x_N(t)$ correspond to the input signals. Resulting in the system response as represented:

$$y(t) = H\{x(t)\}\$$

$$= H\{\sum_{i=1}^{N} a_i x_i(t)\}$$
(2.19)

If the system is linear then, the weighted sum of output signals is:

$$y(t) = \sum_{i=1}^{N} a_i y_i(t)$$

$$y_i(t) = H\{x_i(t)\}$$
(2.20)

This result in

$$y(t) = \sum_{i=1}^{N} a_i H\{x_i(t)\}$$
 (2.21)

which is the equivalent mathematical representation as in a weighted sum of inputs. To represent them in the same form, the system operation can commute with the amplitude and sum scaling. This principle also applies to discrete-time systems in a similar form.

2.3.5 LTI Systems

As systems can be found all around us, so does a LPG bottle can be considered as a system. If the mathematical model that represents it meet the last two properties mentioned, it can be referred as a linear time-invariance (LTI) system. These properties combined with the characteristics of the unit impulse, being able to represent common signals as a representation of combined delayed impulses, this allows to completely characterize a LTI to what referrers his impulse response.[11] Similar to a unit step u[n], a common signal x[n] can be represented by unit impulses, as follows:

$$x[n] \sum_{k=-\infty}^{+\infty} x[k]\delta[n-k] \tag{2.22}$$

In this case the weights in the linear combination are x[k]. Another aspect to take in consideration in these types of systems, is the response of the system to a impulse $\delta[n]$, results in $h[n] = H[\delta[n]]$. With this in mind, the response of a linear system y[n] to a common input signal x[n], represented from a combination of shifted impulse, can be represented as:

$$y[n] = H[x[n]]$$

$$= \sum_{k=-\infty}^{+\infty} x[k]h[n-k]$$
(2.23)

The result is known as the *convolution sum* or *superposition sum* and the operation as *convolution* of the sequences x[n] and h[n]. The operation can be represented as:

$$y[n] = x[n] * h[n] \tag{2.24}$$

2.3.6 Discrete-Time Fourier-Transform

For the analysis of LTI systems, one of the most powerful and used tools is the Fourier-Series and Fourier Transform. For the analysis purpose, the focus is only going to be the Discrete-Time Fourier-Transform (DTFT). The study of this type of systems offers two great advantages:

- It is possible to construct a extensive and convenient class of signals, based on a set of simpler signals.
- The response of the LTI signal should be simple enough, to provide a convenient representation of the response from the system to any signal based on the combination of several other basic signals.

The properties are provided by a set of exponential signals, this is important because the response of a LTI system to a complex exponential input, is the same exponential with the

change in amplitude. When dealing with complex exponential signals, for the domain of analysis changes, which is in this case the frequency domain.

For the analysis purpose, is necessary to know the representation of a signal x(n), that later is going to be represented as a input of a system. The signal is represented in the frequency domain, where ω represents the angular frequency, and its period is 2π . The signal is represented as follows:

$$X(e^{j\omega}) = \sum_{n=-\infty}^{+\infty} x[n]e^{-j\omega n}$$
(2.25)

As mentioned in 2.3.5, the response of a LTI system to a impulse, can be represented by the *convolution* operation. This operation can be represented in the frequency domain as:

$$Y(e^{j\omega}) = X(e^{j\omega})H(e^{j\omega}) \tag{2.26}$$

Where the terms $X(e^{j\omega})$, $H(e^{j\omega})$ and $Y(e^{j\omega})$ are the Fourier transforms of x(n), h(n) and y(n), respectively. The *convolution* operation in the LTI system, is easily represented using the Fourier transform with a simple algebraic operation, by multiplying the Fourier transforms. This facilitates the analysis of the signals and systems and increases the understanding in the behavior of the LTI system when a signal is applied to its input.

With this work in consideration, a algorithm was presented by Cooley and Tukey, the fast Fourier Transform, or simply FFT. This algorithm later proved to be suitable for a digital implementation, with its reducing time in computing the transforms by order of magnitude.[11]

2.4 LPG cylinder Model

As already mentioned 2.3.4, is possible to describe an LPG cylinder over a mathematical function, as a system. Being, in many cases, the description similar to other systems. The fact that the system is described as a mathematical model allows to understand what it could be the behavior of it.

The work developed by Wu and Yang proposes a model for the LPG cylinder, based on acoustic principals to perform measurements. The procedure that they implement is quite simple, by knocking on the side of the cylinder, that generates the sound, usually that sound changes according to the amount of liquid inside of the cylinder, to evaluate what is the amount of gas inside, the vibration in the cylinder wall is recorded and the frequency of the sound give is proportional to the amount of gas present inside.

Before them, other researches were conducted to study the transverse vibration of cylindrical tubes with variable levels of liquid inside. One of them is the work of Chan and Zhang who proposed a vibration model (clamped-free model), where a tube, clamped at bottom and free at top, was used to study the relations resonant frequencies versus liquid levels. Their tests were conducted under a controlled environment, for different levels of liquid, and the experimental results obtained were in accordance with the theoretical calculations[13]. Their work was then extended with a different approach by Chan, Leung, and Wong, the model they proposed study the vibration of a simply supported beam with uniform mass, partially loaded, in one of the sides, with a distributed mass(pinned-pinned model). For the conducted tests, the load length added increases until reaching the the length of the beam, the results obtained in their measurements agreed with the results obtained from the previous work[14].

A few years later Jacobs et al. proposed a similar model to Chan and Zhang model, but this time with different boundaries, clamped at bottom and top (clamped-clamped model). The tests conducted measure the resonant frequency of the tube, for different levels of liquid, and their results fitted with the results obtained in the previous mentioned tests[15]. Like in the previous studies, the base of the work developed by Wu and Yang is the Euler-Bernoulli beam theory[16][17], this is used to create a model of a cylindrical tube, allowing to estimate the vibration frequencies for different liquid levels. In their work they were able to prove that this theory can be applied to the vibrations in a LPG cylinder, where the results obtain similar to the results obtained in previous works, also based in the same principal.

2.4.1 Mathematical Model for LPG cylinder

The similarities with the Euler-Bernoulli theory and its models, with a LPG cylinder, is related with the construction of the cylinder. A common LPG cylinder used in house appliances has two welded seams, located at the bottom and the top, and those seams are considered the boundaries of the LPG. These boundaries are not considered to be free, but loose instead, with doesn't allow to immediately conclude which type of the mentioned boundaries the cylinder has. Before getting into a conclusion is necessary to understand the theory behind their work.

If a hammer is used to knock the lateral surface of the LPG cylinder, this will trigger a transverse vibration, considered in this case a mechanical vibration. This vibration is similar to Euler-Bernoulli beam, assuming a distributed mass per unit of length m, partially loaded with a distributed mass as well m_d , corresponding in this situation to the liquid part of the cylinder. In [Insert reference to images] is identified the boundaries and [insert diagram] corresponds to a illustration of the model, the equation 2.27 describe the vibratory model of the LPG cylinder. The liquid-gas interface corresponds to the origin, and EI is a constant value corresponding to the the beam flexural rigidity

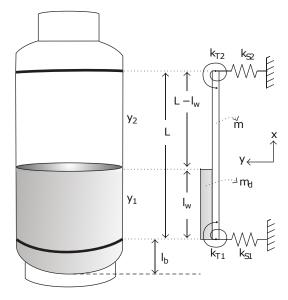


Figure 2.3: The LPG cylinder filled with liquid, with the mechanical representation of the Euler-Bernoulli beam[4]

$$EI\frac{\partial^4 y_1}{\partial x^4} + (m + m_d)\frac{\partial^2 y_1}{\partial t^2} = 0, \text{ for } -l_w \le x < 0$$

$$EI\frac{\partial^4 y_2}{\partial x^4} + m\frac{\partial^2 y_2}{\partial t^2} = 0, \text{ for } 0 < x < L - l_w$$
(2.27)

The variables y_1 and y_2 correspond to the transverse vibratory displacements of the beam. Considering that the seam welding's are not ideally clamped or pinned, and the main transverse vibration is restricted between the two boundaries, is assumed that they have small displacements, that will show flexural vibration. This way their model assumes that there is strong linear springs and torsional springs connected at the boundaries. Which obligates to the boundaries conditions to be formulated taking in consideration these factors, where k_{S1} , k_{T1} are the linear and torsional springs constants for the lower welding, and k_{S2} , k_{T2} are the correspondent spring constants in the upper welding.

$$At x = -l_w \Rightarrow \begin{cases} EI \frac{\partial^2 y_1}{\partial x^2} = -k_{T1} \frac{\partial y_1(-l_w, t)}{\partial x} \\ EI \frac{\partial^3 y_1(-l_w, t)}{\partial x^3} = -k_{S1} \cdot y_1 \end{cases}$$

$$At x = L - l_w \Rightarrow \begin{cases} EI \frac{\partial^2 y_2}{\partial x^2} = -k_{T2} \frac{\partial y_2(L - l_w, t)}{\partial x} \\ EI \frac{\partial^3 y_2(L - l_w, t)}{\partial x^3} = -k_{S2} \cdot y_2 \end{cases}$$

$$(2.28)$$

At the bottom a circular steel plate is attached to make the cylinder more stable in relation with the ground, this turns it more stable the upper part, which allow them to conclude that the value of the constants, linear and torsional springs, of the bottom is higher when compared with the upper values, i.e. $k_{S1} > k_{S2}$ and $k_{T1} > k_{T2}$. The continuity and equilibrium condition at the interface of the liquid, inside the cylinder, are:

$$y_1(0,t) = y_2(0,t), \ y_1'(0,t) = y_2'(0,t) y_1''(0,t) = y_2''(0,t), \ y_1'''(0,t) = y_2'''(0,t)$$
(2.29)

This conditions allow them to investigate the relation of the normalized frequency ratio $f_r = f/f_0$, considering f_0 as the maximum frequency when there is no liquid inside, and the length ratio l_w/L in their experiments.

2.4.2 Relation with previous studies

So far the model presented show very general boundaries conditions, by controlling the variables, the model can be easily compared with models mentioned. Taking that into consideration, a demonstration of this similarities was presented and is the following.

Change the word value to another un the following subsubsections (explanation in notes)

Do the changes to close this section

2.4.2.1 Clamped-free boundaries

For this condition, the values of the variables are considered to be $k_{S1} = k_{T1} \approx \infty$ and $k_{S2} = k_{T2} = 0$. When Chan and Zhang proposed this model to calculate the frequencies of a cantilever tube, partially filled with liquid mercury, the cantilever was clamped at the bottom and free at the top, and the transverse vibration was generated by using a hammer to knock the tube 2.4. If the values of the variables are replaced in the equation 2.27 the result of this

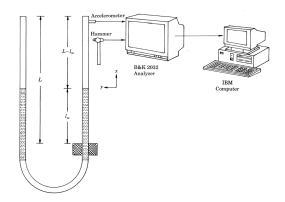


Figure 2.4: Clamped-Free Model [13]

setup makes the boundaries conditions at their limits, $x = -l_w$ and $x = L - l_w$, to be as shown in 2.30, when comparing the results in the boundaries conditions they verify that they were the same as in [13].

$$y_1(-l_w,t) = y_1'(-l_w,t) = y_2''(L-l_w,t) = y_2'''(L-l_w,t) = 0$$
(2.30)

2.4.2.2 Pinned-pinned boundaries

For this condition, the value of the variables considered is $k_{S1} = k_{S2} \approx \infty$ and $k_{T1} = k_{T2} = 0$. In this model, proposed by Chan, Leung, and Wong, the study is made in a simply supported beam partially load, with distributed mass in both cases 2.5. Once again, if the




Figure 2.5: Pinned-Pinned Model[14]

variables in 2.27 are replaced with k_{S1} , k_{T1} , k_{S2} and k_{T2} , the result in this setup will also match the boundaries condition 2.31 at $x = -l_w$ and $x = L - l_w$, obtained in [14].

$$y_1(-l_w,t) = y_1''(-l_w,t) = y_2(L-l_w,t) = y_2''(L-l_w,t) = 0$$
(2.31)

2.4.2.3 Clamped-clamped boundaries

In this case, the value considered to the variables was $k_{S1} = k_{T1} = k_{S2} = k_{T2} \approx \infty$. This model, proposed by Jacobs et al., with a contactless method to measure the vibration of a opaque capillary tube 2.6. Following the same path of the previous two, the variables k_{S1} , k_{T1} , k_{S2} and k_{T2} were once again replaced in 2.27, and the results obtained 2.32 at their boundaries conditions matched results obtained in [15]

$$y_1(-l_w,t) = y_1'(-l_w,t) = y_2(L-l_w,t) = y_2'(L-l_w,t) = 0$$
(2.32)

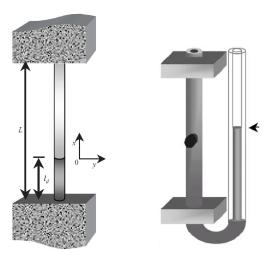


Figure 2.6: Clamped-Clamped Model[15]

2.4.2.4 Relation of Frequency versus Length

As a final comparison, the test between the relation of the frequency with the length of the liquid level was executed. For that, different values were attributed to linear and torsional spring variables, to allow the simulation of theoretical curves of the normalized frequency ratio $f_r(f_i/f_0)$ and length ratio $l_r(l_w/L)$. The values for each of the variables were chosen to be large enough to simulate the different boundaries conditions. As expected the results[reference to all images] of Wu and Yang were very similar with what was previously obtained [13][14][15], confirming what was mention in the beginning of this section. In this

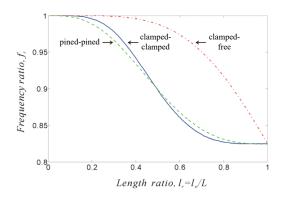


Figure 2.7: Frequency VS Weight - Practical curve obtained by Wu and Yang

relation is important to note that, when the cylinder is almost empty $l_r = 0$ the frequency of the vibration is the highest, in the opposite cases, when the cylinder is full $l_r = 1$ then the vibration frequency is archives the minimum value.

2.4.3 Experimental results

In the tests perform by Wu and Yang[4], their setup consisted in a hammer knocking in the lateral surface of the cylinder, that produces the transversal vibration, which is captured by a microphone, processed with a FFT algorithm. By continuously releasing gas and measure the produced vibration, and the correspondent frequency they obtained the following relation: In the same way of their theoretical simulations, the relation between the vibration frequency

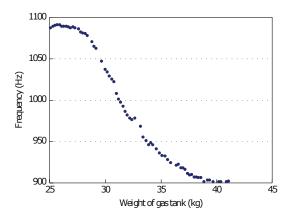


Figure 2.8: Frequency VS Weight - Practical curve obtained by Wu and Yang

and the liquid level (or the length of the liquid) is similar, the highest frequency correspond to the lowest liquid level, and the lowest frequency to the highest liquid level. One thing that is important to refer that is mentioned in their work is, this relation is constant for the different variety of LPG cylinders, but the frequency range of each also varies with the amount of gas that they can store [ref to fig], which means that the device must be adapted to the type of cylinder that is going to be used in. A couple of years latter this work was followed by Wu et al. [10], were they developed a prototype with the function of measure the frequency of the vibration, and thus the returning the liquid level of the LPG cylinder. The setup used and the test conditions were very similar the the previous work.

2.5 Sensors

To acquire and measure the vibration, the sensors used must work according to the system mechanical or optical principals of vibration. There is a large variety of sensors that ca be used for that purpose, although there isn't a direct method, or sensor, to measure the vibration, they can be either mechanical or optical. The sensors can be divided in different groups, based on their behavior, they can be active or passive, the type of measurement can be either absolute or relative, and there is also some specific characteristics of the signals that differ from the type of sensor, like the frequency range, signal dynamic and the quality of the data acquired. Finally sensors are also divided in contact and non-contact measurement and subdivided in path/displacement, speed/velocity or acceleration.

For contact measurements, sensors related to path/displacement can be potentiometric transmitters or Linear Variable Differential Transmitter (LVDT), to speed/velocity it can be applied the principle of electrodynamics or use a seismometer as a sensor and for acceleration the sensors can be piezoelectric, piezo-resistive, resistive or inductive. In non-contact measurements, path/displacement sensors are eddy current sensors, optical sensors and hall sensors, or can be based on the capacitive principle, for speed/velocity is used a Laser-Doppler vibrometer (LDV) and for acceleration isn't possible to measure directly, although it can be derivate from speed/velocity measurement, but induces a lot of

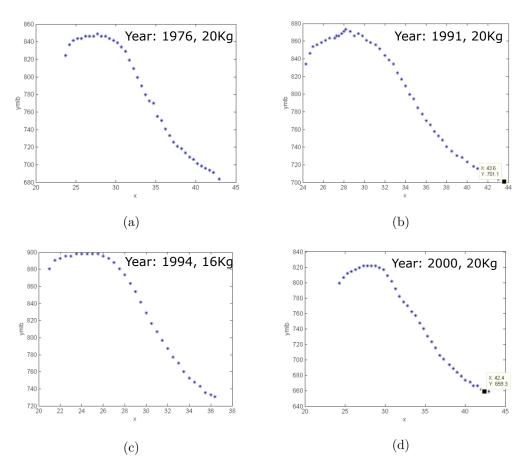


Figure 2.9: Different LPG cylinder to used to compare the relation between Frequency and Weight for different modelsWu and Yang

noise in the data acquired[18][19].

To measure the vibration, usually is the contact acceleration the most common method to measure them, beside the sensors mentioned, is used as well accelerometers, this devices are used in industry to reliably measure vibration in equipment, to monitoring their health. The functioning principles of accelerometers can differ from one to another. The basic principle of a accelerometer is similar to a seismometer, from this there are 3 main types, mechanical, capacitive and piezoelectric. The mechanical is the most similar to a seismometer, with a mass attached to a spring, every time that acceleration occurs, just like in seismometer, the mass moves and a pen attached to the mass traces the vibration captured. Although in the case of the accelerometer, doesn't trace with a pen in paper, instead generates a electrical or magnetic signal. A example of this, is a piezoresistive accelerometer, which has a his mass attached to a potentiometer, and the result of the vibration is a voltage change. When a magnetic variation occurs, usually a hall-effect accelerometer is used for that effect. Similar to the mechanical, a capacitive accelerometer, has one of the plates attached to the mass, and measures the capacitance variation, the vibration of capacitance is related with the In piezoelectric accelerometers, the function principle is similar vibration movement. to the previous, the mass is attached to the piezoelectric and when it moves causes a

deformation. The resulting signal from the deformation is the result of the piezoelectric effect. A piezoelectric consist in two metal plates with piezoceramic material between them, usually a quartz crystal. To produce electricity, the piezoceramic material needs to be under stress, that is, to be compressed or squeezed. This caused a voltage different the two metal plates, this is the result of the collection of charges produced in the piezoceramic material. All the type of accelerometers mentioned have one problem, that is the fact that they aren't practical to use in certain application, as an example a small electronic device. For that, is used the so called MEMS (Micro Electro Mechanical Systems) accelerometers, this type of accelerometer is a combination of electrical and mechanical device, mounted on a silicon chip, this is one advantage of this type of accelerometers, the can be very produced in very small sizes, to allows their application in different types of electronic devices. The functioning of this type of accelerometer can be explained quite easily, an electrode is between two other electrodes, there is a air gap between these two and a small insulation to prevent direct contact between the middle electrode and the other two, on the top and the bottom. The middle electrode is connected with a cantilever, rigid enough to hold his position, but flexible enough to allow the move when the accelerometer moves or tilts, the cantilever is connected to outside of the chip, this is used to measure the difference of capacitance between the middle electrode and the electrodes at the top and at the bottom, the capacitance changes every time the middle electrode moves or tilts.

This type of accelerometers brought important advantages, being their low cost and their small size the most important of it. On the other hand, the use of this devices for condition monitoring is restricted to a small bandwidth, restricted to a few kHz, and it cannot be used to in applications that require lower noise over higher frequency ranges [20][21].

References

- [1] What Are the Properties of LPG & LPG Composition: LPG Chemical Properties, Boiling Point, LPG Density, Flame, Etc. URL: https://www.elgas.com.au/blog/453-the-science-a-properties-of-lpg (visited on 10/13/2020).
- [2] Propane Density and Specific Weight. URL: https://www.engineeringtoolbox.com/propane-C3H8-density-specific-weight-temperature-pressure-d_2033.html (visited on 10/13/2020).
- Tatsuo Nakagawa al. "Contactless Liquid-Level Measurement With Frequency-Modulated Millimeter Wave Through Opaque Container". 2013), 926-933. ISSN: 1558-1748. DOI: IEEE Sensors Journal 13.3(Mar. 10.1109/JSEN.2012.2220346.
- [4] Hsien-Huang P. Wu and Zong-Hao Yang. "Liquid Level Detector for a Sealed Gas Tank Based on Spectral Analysis". 2014 19th International Conference on Digital Signal Processing. 2014 19th International Conference on Digital Signal Processing. Aug. 2014, 68–72. DOI: 10.1109/ICDSP.2014.6900793.
- [5] Muhammad Iram Baig and Taufeeq Elahi. "Accurate Measurement of Pressure in Natural Gas Vehicles: A Digital/Electronic Design and Fabrication". 2008 IEEE International Multitopic Conference. 2008 IEEE International Multitopic Conference. Dec. 2008, 520–524. DOI: 10.1109/INMIC.2008.4777794.
- [6] Gabriel V. da Silva Medeiros et al. "Smartgas: A Smart Platform for Cooking Gas Monitoring". 2017 IEEE First Summer School on Smart Cities (S3C). 2017 IEEE First Summer School on Smart Cities (S3C). Aug. 2017, 97–102. DOI: 10.1109/S3C.2017. 8501387.
- [7] Sony Shrestha, V. P. Krishna Anne, and R. Chaitanya. "IoT Based Smart Gas Management System". 2019 3rd International Conference on Trends in Electronics and Informatics (ICOEI). 2019 3rd International Conference on Trends in Electronics and Informatics (ICOEI). Apr. 2019, 550–555. DOI: 10.1109/ICOEI.2019.8862639.
- [8] Gautami G. Shingan et al. "Smart Gas Cylinder: Leakage Alert and Automatic Booking". 2017 International Conference on Energy, Communication, Data Analytics and Soft Computing (ICECDS). 2017 International Conference on Energy, Communication, Data Analytics and Soft Computing (ICECDS). Aug. 2017, 1127–1130. DOI: 10.1109/ICECDS.2017.8389616.
- [9] Alexander Jahn, Falko Ehrle, and Carsten Roppel. "A Level Sensor for Fluids Based on Hydrostatic Deformation with Piezoelectric Generated Sounds in a Low Frequency Range". 2014 6th European Embedded Design in Education and Research Conference (EDERC). 2014 6th European Embedded Design in Education and Research Conference (EDERC). Sept. 2014, 245–249. DOI: 10.1109/EDERC.2014.6924397.

- [10] Hsien-Huang P. Wu et al. "Analysis and Implementation of Noncontact Level Sensing for a Pressurized Cylinder". *Journal of Sensors* 2016 (2016), 1–10. ISSN: 1687-725X, 1687-7268. DOI: 10.1155/2016/5027916.
- [11] A.V. Oppenheim et al. Signals & Systems. Prentice-Hall Signal Processing Series. Prentice Hall, 1997. ISBN: 978-0-13-814757-0.
- [12] S.J. Orfanidis. *Introduction to Signal Processing*. Prentice Hall International Editions. Prentice Hall, 1996. ISBN: 978-0-13-209172-5.
- [13] K.-T. Chan and J.-Z. Zhang. "Free Vibration of a Cantilever Tube Partially Filled with Liquid". *Journal of Sound and Vibration* 182.2 (Apr. 1995), 185–190. ISSN: 0022460X. DOI: 10.1006/jsvi.1995.0190.
- [14] K.T. Chan, T.P. Leung, and W.O. Wong. "FREE VIBRATION OF SIMPLY SUP-PORTED BEAM PARTIALLY LOADED WITH DISTRIBUTED MASS". *Journal of Sound and Vibration* 191.4 (Apr. 1996), 590–597. ISSN: 0022460X. DOI: 10.1006/jsvi. 1996.0143.
- [15] M.A. Jacobs et al. "Contactless Liquid Detection in a Partly Filled Tube by Resonance". Journal of Sound and Vibration 285.4-5 (Aug. 2005), 1039–1048. ISSN: 0022460X. DOI: 10.1016/j.jsv.2004.09.009.
- [16] S.S. Rao. *Mechanical Vibrations*. Pearson Education, Incorporated, 2017. ISBN: 978-0-13-436130-7.
- [17] W. Thomson. Theory of Vibration with Applications. Taylor & Francis, 1996. ISBN: 978-0.7487-4380-3.
- [18] Sensors for Vibration Measurement: Principles of Operation and Measuring Ranges ZfP TUM Wiki. url: https://wiki.tum.de/display/zfp/Sensors+for+vibration+measurement%3A+Principles+of+operation+and+measuring+ranges#Sensorsforvibrationmeasurement: Principlesofoperationandmeasuringranges-Piezo-resistivesensor (visited on 01/28/2021).
- [19] Vibration Measurement; Vibration Sensors; Measuring Vibration Precisely. Lion Precision. Apr. 19, 2019. URL: https://www.lionprecision.com/vibration-measurement-vibration-sensors-measuring-vibration-precisely/ (visited on 01/27/2021).
- [20] What You Need to Know About MEMS Accelerometers for Condition Monitoring Analog Devices. URL: https://www.analog.com/en/technical-articles/mems-accelerometers-for-condition-monitoring.html (visited on 01/30/2021).
- [21] How Accelerometers Work Types of Accelerometers. Explain that Stuff. Sept. 19, 2009. URL: http://www.explainthatstuff.com/accelerometers.html (visited on 01/29/2021).

Chapter 3

System Architecture

*Chapter Introduction
*1-System Elements
*1-The sensors/Actuator
*2-The processing Unit
*3-Processing type
*2-Architecture proposal
*3-Approach to the problem

3.1 System Elements

In order to develop a system that is able to properly measure and return an good approximation of the liquid level in the LPG bottle, is necessary to identify the elements that must be present in the system. With this information, we must be able to properly chose the components to the system, to develop a solution that fits in the purpose of the work. In 2, several methods/techniques were presented to measure the liquid level inside a LPG bottle, from those the choice fell to the development of a system that analyses the transversal vibration in the LPG bottle, with this in consideration is easier to define the elements that should be part of the system.

Actuator

This element is responsible for the stimulation of the system, is very important that the chosen actuator is capable to produce the transversal vibration in the system. For this specific case, were presented two different methods for that purpose.

Sensor

The amount of sensors that can be used to measure the vibration, not specific to this case only, is very wide. There were presented several types of sensors already, but when choosing a specific one it must be taken into consideration aspects like is practical application, in this

case, the dimensions of the sensor, his cost and the coupling with the system to be measure, as an example. Other aspects that should be taken in consideration when choosing the sensor, are specific to the sensor itself and may vary from one to another, is not relevant to specify them.

The Processing Unit

The selection of the processing unit is quite important, since is the "brain" of the entire system. First of, is responsible for capturing the signal from the sensors, process the signals and at the end being able to return to the user some information, relevant for the application, for this particular application must return some data that is proportional to the liquid level. The processing unit in this case must be equipped with different types of I/O ports, for the specific case, the most important are the ADC for converting the continuous time signal to a discrete signal. Beside the I/O, the system must have the computational power to perform any type of mathematical tasks needed in the signal processing, isn't necessary to have a dedicated DSP hardware, but should be able to perform those tasks in a reasonable period of time.

Processing Type

As a signal is converted and stored in the processing unity, the signal is decomposed in two variables, they are the dependent variable and the independent variable, the first is usually related with the amplitude of the signal and the other with the sample and overall can be seen as the output of a sensor at a certain moment of time. While this data can be used to return a visual information about the state of the sensor, is not the only way, is often used the frequency domain, to determine patterns in the response of the same sensor, that aren't clear in a time domain visualization.

3.2 Architecture proposal

3.3 Introduction

3.4 Hardware selection

The analysis through vibration, is the chosen approach to measure the amount of liquid gas inside the LPG bottle, since the stimulation of the system is by hitting in the surface of the bottle, beside the vibration this will produce a characteristic sound as well. From this, 3 different sensors where chosen to acquire the signals when hitting the surface of the LPG bottle, they are a microphone, a piezoelectric sensor and a MEMS accelerometer.

In all the cases, when hitting the surface of the bottle with a hammer, this will produce a characteristic vibration and sound, in order to characterize the response of the system to the hit of the hammer, the first analysis is made with a microphone, after this the sensors will be chosen and the design the appropriate circuit to capture the same signal.

3.4.1 Microphone

Before trace a curve is important to understand which one is the best point to acquire data, when hitting the surface of the bottle. For that, different point in the bottle were chosen to determine the point. After this several measurements must be conducted in order to have a reliable source of information and trace a curve for the system response.

The point considered are in the side surface of the LPG bottle as illustrated in the following image: To make those measurements a setup must mounted with a microphone, to capture the sound produced and process it. The setup is quite simple, consisting in a microphone and a computer installed with MatLab. The microphone in use is from a phone and to connect it with the computer an software called WO Mic, this allows to used the microphone of the phone in real-time. The software must be installed in both devices, in the phone the software is available for Android and IOS, is responsible to transmit what is captured from the microphone. In the computer the client application and a virtual device must be installed to use the Phone in the computer to perform any type of tasks, this connection can be made by USB, Bluetooth, Wi-Fi and Wi-Fi Direct.

In order to save what is captured from the microphone, the software is split in three main block with different purposes, the WO Mic App runs in the Phone, samples the input of the microphone and transmit it to the computer, the WO Mic Client, runs in the computer, connect to the app in the phone, and receive the data from the microphone, which is transmitted to the WO Mic Virtual Device on which a real microphone device is simulated and provides the audio to any application or program in the computer[1]:

In addition to this, is also necessary to install the drivers of the phone in use, if the connec-

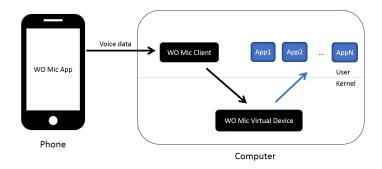


Figure 3.1: Flow of data in the components of the software[1]

tion is made over USB.

To save the acquired data, MatLab was used to record the data of the microphone from the desire time and saved in ".txt" files for further analysis. A script in MatLab was developed in order to perform this measurements and the capture is made once at a time, but not all configurations are done over this script. To start, the phone is connected over USB to the computer, in the application at phone the transport selected must be **USB**, on the app settings and after that started the application, in the top right play shape button. In the computer the client software must be initialized and connected to the phone in the following order *Connection Connect...* a new window will open, on which the **USB** must be selected as transport type and finalizing by pressing *Connect.* In MATLAB the input correspondent

to the microphone must be selected.

When this is done, the script runs and starts to record data from the microphone, for the desire amount of time. When the microphone starts to record, the surface of the LPG bottle is knocked and the captured signal is saved.

3.4.2 Accelerometer

As already mentioned in 2.5, there are various types of accelerometers, however the choice of the one to use depends on various factors, for this particular application is important that the accelerometer in use has a low cost and a small size, for the future application. With this in mind the choice declines over MEMS accelerometers, that are smaller when compared with piezoelectric accelerometers.

The type of MEMS accelerometers available is very wide, some of them started to be used in applications that usually uses piezoelectric accelerometers, like condition-based monitoring (CBM), structural health monitoring (SHM), asset health monitoring (AHM), vital sign monitoring (VSM) and IoT, for example. When selecting the accelerometer is important to take into consideration some parameters, which are responsible to determine the category of the accelerometer, they are the application, the bandwidth and the range. Although there is no standard for the category on each accelerometer fits in, *Analog Devices* has one document where they divide their products in different categories, with the type of application used in each on of them featuring a description of the key parameters that must be taken into consideration when selecting the appropriate accelerometer. The MEMS accelerometers from

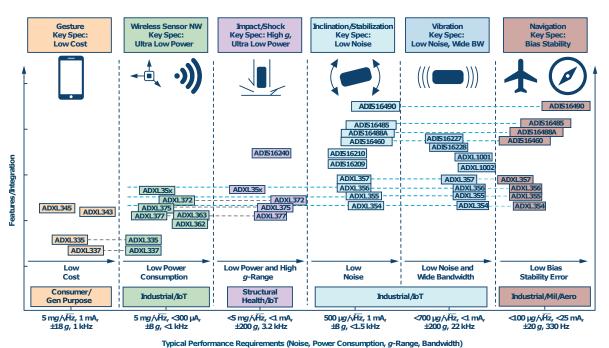


Figure 3.2: Application landscape for a selection of Analog Devices MEMS accelerometers

Analog Devices are divided in two families, the ADXLxxxx and the ADIS16xxxx, the last offers different advantages when compared with he first, more like a plug-and-play solution with features like factory compensation, embedded compensation and signal processing. This

Manufacturer	Analog Devices				
Model	ADXL335	ADXL337	ADXL345	ADXL354/5	ADXL356/7
		OSTADIXL337		Capanasa ADK asa ADK asa ADK asa	ADXL356 ADXL356
Power	350μΑ	300μΑ	23μΑ	150/200μΑ	150/200μΑ
Consumption					
BandWidth	1600Hz	1600Hz	1600Hz	1900Hz	2400kHz
Noise spectral	150/300 μg√Hz	175/300 μg√Hz	0.75/1.1LSB rms	22.5 μg√Hz rms	75 μg√Hz rms
density	rms	rms			
Output type	Analogic	Analogic	Digital	Analogic/Digital	Analogic/Digital
Other			BandWidth is half		
			of Output Data		
			Rate		
Cost (aprox. cost	3€	2€	13€	40€	46€
for the chip)					

Table 3.1: Key specifications of MEMS accelerometers

family obviously has one of the features that has particular interest for the application, in this case the fact that has signal processing on the accelerometer, on the other hand this comes with a price, and this family of products has a higher cost. So is necessary to define the key specifications of the accelerometer, in order to properly chose one[2][3].

The final purpose is to have a cheap and portable prototype, that is capable of accurately measure the vibrations and determine the the liquid level, this implies that his bandwidth covers the spectrum of frequency on which the curve of the relation liquid level vs frequency is. With this the key specifications are the low cost, low power and his bandwidth must close to 2kHz, determine as maximum frequency for a mechanical vibrations in 2.1 and latter proved in the results obtained by Wu and Yang as described in 2.4. Considering these specification, some models where chosen, that integrate this criteria, as follows: Although is doesn't accommodate entirely the specifications but since it was already available for use, the choice fell to the ADXL335. This model offers a low power consumption of around 350μ A, his bandwidth is adjustable with a single capacitor per axis, from 0.5 to 1600 Hz for X and Y axis and 0.5 to 550Hz for Z axis. Beside this the accelerometer itself is very cheap, with a price starting at $3\mathfrak{C}$. To properly acquire the data from this sensor and process it, is necessary to integrate it with a amplifier circuit and a microcontroller, on which more details will be explain further ahead.

3.4.3 Piezoelectric

To what concerns in the choice of a piezoelectric sensor, although there are very types of this kind of transducers and there are various applications for them.

3.4.4 Amplifier circuits

3.4.5 Coupling

Chapter 4

Developed Architectures

- 4.1 Software Implementations
- 4.1.0.1 Tests and Results

Chapter 5

Conclusions and Future Work