


- Outdoor compatible, on-board USB power supply independent of track current
- Electret microphone, nano size micro controller, C++ Arduino software for FFT tone analysis
- No proprietary elements, construction time 2-4 weekends, material cost ca. 60 €

PiedPiper Version 056, J. Ruppert 2021-03-20, GNU GPL v3 GitHub: https://github.com/jorail/PiedPiper



- Outdoor compatible, on-board USB power supply independent of track current
- Electret microphone, nano size micro controller, C++ Arduino software for FFT tone analysis
- No proprietary elements, construction time 2-4 weekends, material cost ca. 60 €

PiedPiper Version 056, J. Ruppert 2020-12-12, GNU GPL v3 GitHub: https://github.com/jorail/PiedPiper

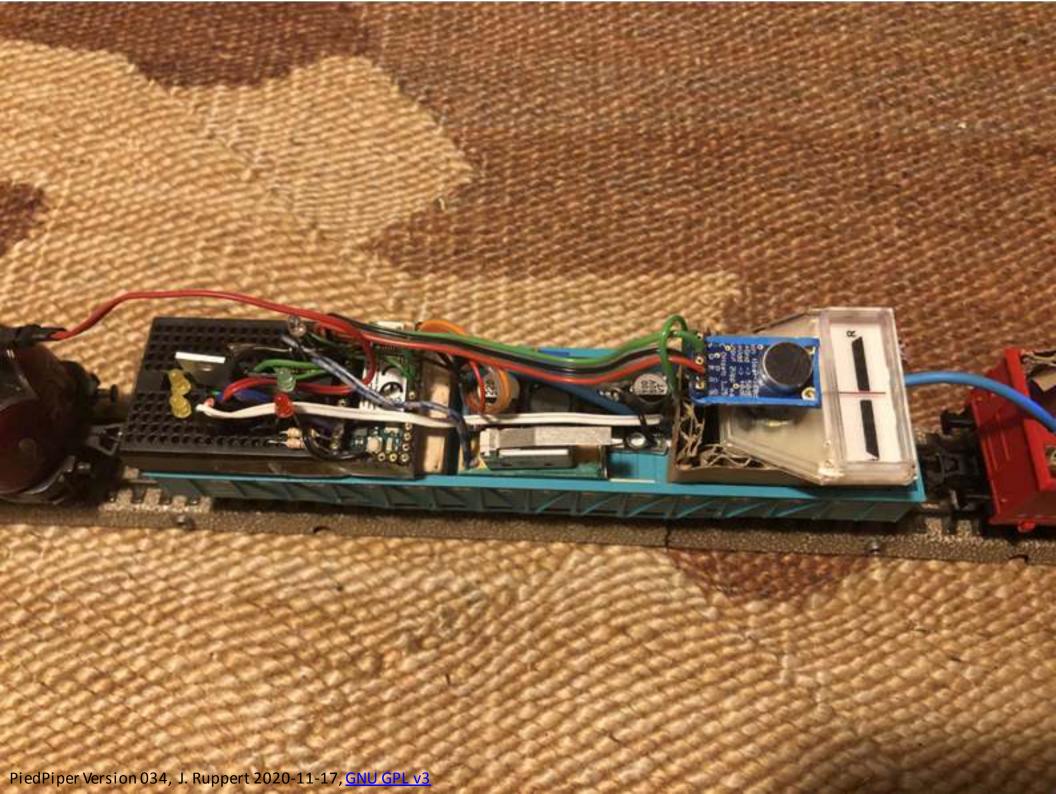

Material demand

for 1 train with whistle control

Electronics

- Nano size microcontroller, e.g. Teensy 4.0, but similar solutions are possible with other microcontrollers like Teensy 3.2, ESP32, etc.
 - 1 analogue in for microphone output
 - 2 PWM outputs for motor control
 - 2 digital outputs for LED indicators
 - 1 digital input for option 1 switch
- Compatible electret microphone module, 3.3 V, e.g. MAX9814, Amplifier with Auto Gain Control
- Step-up DC/DC converter module, 5 V to 12V ... 16 V
- H-Bridge DC motor control IC, e.g. TLE5206-2S
- Small size USB power bank as 5 V DC powers upply it is good to have two, 2nd for replacement when 1st empty
- Small size breadboard, e.g. 170 contacts
- Solder IC pin contacts, single row, separable, total of ca. 50 contacts
- Shrink tube with diameter for holding two IC pin contacts
- Thin USB cable, old and used, but reliable for power connection
- LEDs:1green, 1red, 2 yellow, 3 mm diameter
- 2 x 180 Ω resistors
- 1 kΩ resistor
- 2 pole cable, thin and flexible, ca. 40 cm, for connection to motor
- 3 pole isolated wire for microphone module, 10 cm
- 1 pole wires for breadboard and step up converter connections, ca. 60 cm in total

Other material

- Model train locomotive with 12V ... 16 V DC motor
- Flat wagon for electronics equipment
- Ea os high board open wagon for USB power bank
- Some paper cardboard
- Single and double sided adhesive tape

Tools

- Single tone sound source: Whistle or flute, e.g. recorder
- Fine tip solder iron with equipment
- Cutter, fine pincers
- Multi-meter tool

Option 1 addition

- Micro s witch for testing and manual commands
- 10 kΩ resistor
- 1 pole wire, ca. 15 cm

Option 2 addition


- Small left/right sound balance meter from old equipment, e.g. 270Ω
- Suitable s et of resistors, e.g. 10 kΩ + s e veral 1 to 5 kΩ resistors
- 2 pole cable, thin and flexible, ca. 10 cm

Estimated material cost ca. 60 € excl. other material, tools and additions

Nano size micro controller and electronics stored on first wagon and connected with wires




Soldered IC base contacts and small breadboard

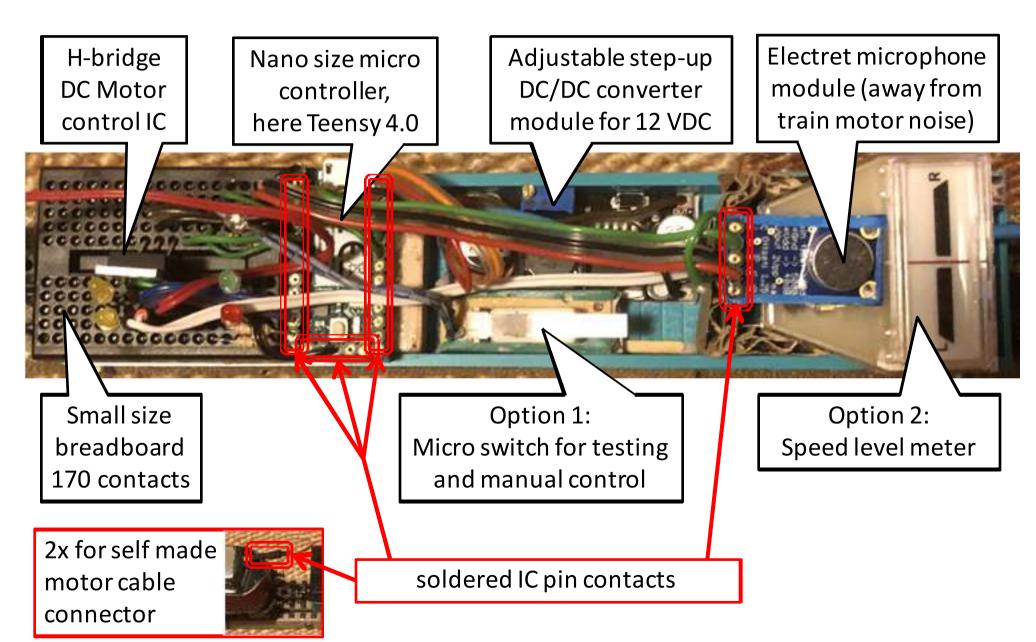

PiedPiper Version 034, J. Ruppert 2020-11-17, GNU GPL v3

Circuit, parts and connections

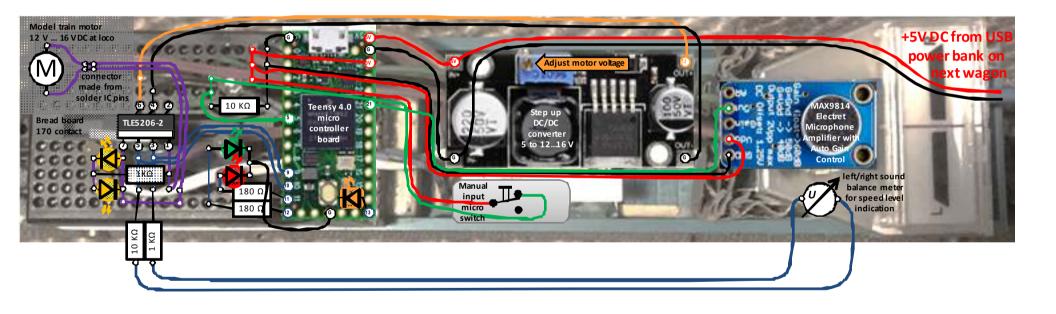

PiedPiper whistle tone commands

Morse code	Command for speed level	Meaning
•		decrease speed
• •		slow down
•••		break to halt
••••	0	fast brake and stop
••••	00<	fast stop, reverse
		direction
• —	++	increase speed
• — —	++++++	speed up
• — — —	++++++++++++	go fast
_	0	fast brake and stop
— —	00	fast brake and stop
	00	fast brake and stop
	?	info?
5	?	info?

PiedPiper LED indicators

LEDs	A A A A A
Motor speed according to pulse width, resulting voltage and polarity	
 forward, voltage + 12 V to + 4 V 	
 backward, voltage - 4 V to - 12 V 	
Information on motor direction and speedlevel:	
 forward = 1 = green LED + 0 to 32 short LED flashes 	••••
 backward = 0 = red LED + 0 to 32 short LED flashes 	
Adjustment of motor speed:	
• 2 green LED flash = speed level + 2;	• •
• 2 red LED flash = speed level - 2;	• •
 green & red LEDs long flash = fast brake, speed level = 0 	_
Change of motor direction:	
green/red/green + green LED flash = forward = 1	
red/green/red + red LED flash = backward = 0	
Tone signal detected:	
 Single FFT analysis, frequency window>THRESHOLD1: red LED 	
 Averaged FFTs, frequency windows>THRESHOLD2: green LED = tone signal active 	
Program running and main loop frequency:	
 orange flash after 5,000,000 main loop cycles and 500,000 times monitoring for input activity 	• • •

Tone frequency table

Tone Hertz	Tone Hertz	Tone Hertz	Tone Hertz	Tone Hertz
''A 27,50	C 65,41	c' 261,63	c''' 1.046,50	c'''' 4.186,01
"B 29,14	Des 69,30	des' 277,18	des''' 1.108,73	
"H 30,87	D 73,42	d' 293,66	d''' 1.174,66	
'C 32,70	Es 77,78	es' 311,13	es''' 1.244,51	
'Des 34,65	E 82,41	e' 329,63	e''' 1.318,51	
'D 36,71	F 87,31	f' 349,23	f''' 1.396,91	
'Es 38,89	Ges 92,50	ges' 369,99	ges''' 1.479,98	
'E 41,20	G 98,00	g' 392,00	g''' 1.567,98	
'F 43,65	As 103,83	as' 415,30	as''' 1.661,22	
'Ges 46,25	A 110,00	a' 440,00	a''' 1.760,00	
'G 49,00	B 116,54	b' 466,16	b''' 1.864,66	
'As 51,91	H 123,47	h' 493,88	h''' 1.975,53	
'A 55,00	c 130,81	c" 523,25	c''' 2.093,00	
'B 58,27	des 138,59	des" 554,37	des'''' 2.217,46	
'H 61,74	d 146,83	d'' 587,33	d'''' 2.349,32	
	es 155,56	es'' 622,25	es''' 2.489,02	
	e 164,81	e'' 659,26	e'''' 2.637,02	
	f 174,61	f'' 698,46	f'''' 2.793,83	
	ges 185,00	ges" 739,99	ges'''' 2.959,96	
	g 196,00	g'' 783,99	g'''' 3.135,96	
	as 207,65	as" 830,61	as'''' 3.322,44	
	a 220,00	a'' 880,00	a'''' 3.520,00	
	b 233,08	b" 932,33	b'''' 3.729,31	
	h 246,94	h" 987,77 =default	h'''' 3.951,07	



