Introduction:

The objective of this experiment is to understand the quantization concept and how to implement it in Matlab. When a signal is quantized, it is actually divided into a quanta (partitions). Quantization is opposite to sampling. It is done on y axis. On the x axis of the signal, are the co-ordinate values, and on the y axis, we have amplitudes. So digitizing the amplitudes is known as Quantization.

Quantization is a non-linear transformation which maps elements from a continuous set to a finite set. It is also the second step required by A/D conversion. And it is opposite to sampling. It is done on y axis. When you are quantizing a signal, you are actually dividing a signal into quanta (partitions). On the x axis of the signal, are the co-ordinate values, and on the y axis, we have amplitudes. So digitizing the amplitudes is known as Quantization.

There are two types of quantization.

- i. Mid-rise type uniform quantization
- ii. Mid-tread type uniform quantization

Performance Task for Lab Report: (ID = 18-39263-3)

- **Generate a analog signal using the following equation, $x1(t) = A1 \cos(2\pi(CDE*100)t)$
- (a) Select the value of the amplitudes as follows: let A1 = GD and A2 = AF.
- (b) Assuming that a 4-bit ADC channel accepts analog input ranging from 0 to 5 volts, determine
 - i. The number of quantization levels.
 - ii. The step size of the quantizer or resolution.
 - iii. The quantization level when the analog voltage is 3.2 volts.
 - iv. The binary code produce by the ADC.
 - v. Implement it in MATLAB


Answer:


```
(a) A1 = GD = 39
A2 = AF = 16
```

Matlab Code:

```
fs=20000;
fc=39;
               * [CDE=392 this value but we can use only CD=39 value because
A1=39;
                         taking three values increases the number of lines]
A2=16;
t=0:1/fs:0.1;
x=A1*cos(2*pi*fc*t);
m=4;
L=(2^m)
delta=(max(x)-min(x))/L
xq=min(x)+(round((x-min(x))/delta))*delta;
figure;
plot(t,x,'r','Linewidth',1.5);
hold on
stairs(t,xq,'b','Linewidth',1.5)
hold off
title('Quantization of Signal')
xlabel('Time')
ylabel('Amplitude')
legend('Original Signal', 'Quantized Signal')
```

Waveform:

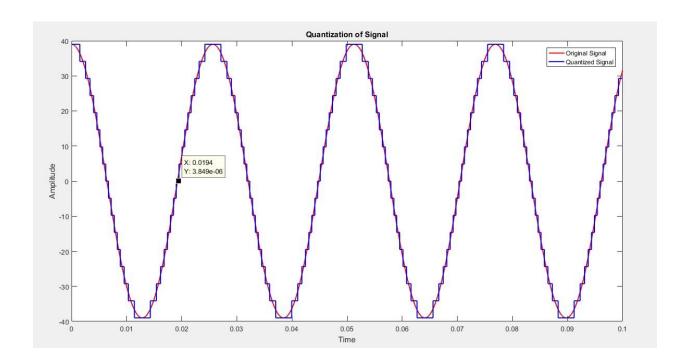

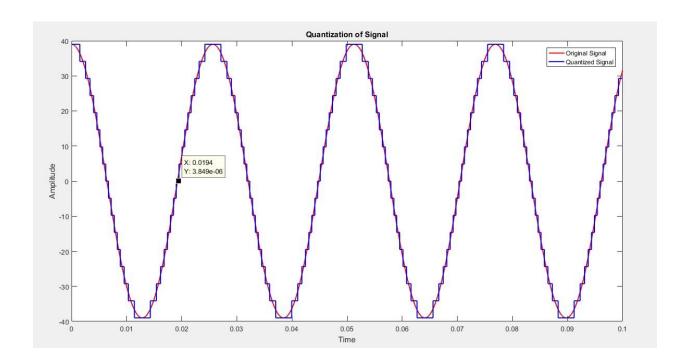

(b)

- i. The number of quantization levels is 16
- ii. The step size of the quantizer or resolution is 12.
- iii. The quantization level is 12 when the analog voltage is 3.2 volts.
- iv. There are 16 levels. So, the binary code produced by the ADC is-

Conclusion: In this following experiment, the quantization of a signal is done using Matlab. The signal is not totally accurate due to the value of amplitudes and frequencies.