FPGA Development for Radar, Radio-Astronomy and Communications





Dept. Electrical Engineering, University of Cape Town Private Bag, Rondebosch, 7701, South Africa http://www.rrsg.uct.ac.za



Presented by Dr John-Philip Taylor Convened by Dr Stephen Paine

Day 2 - 10 September 2024

Outline

Finite State Machines

Simulation

JTAG

Timing Constraints

Advanced Timing Constraints





Outline

Finite State Machines

Simulation

JTAG


Timing Constraints

Advanced Timing Constraints





Finite State Machines

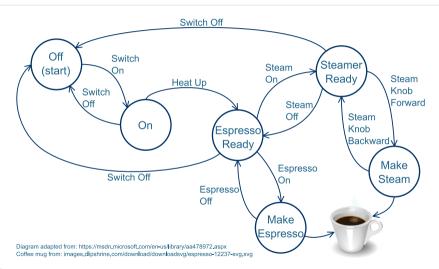





Named States

► Example using Gray code:





Named States

► Example using one-hot encoding:





Named States

► Or let the compiler select the encoding:

```
typedef enum{ // SystemVerilog only
  Off,
  On,
  EspressoReady,
  SteamerReady,
  MakeEspresso,
  MakeSteam
} STATE;
STATE State;
```





FSM Template

```
always @(posedge ipClk) begin
 if(Reset) begin
   State <= Off;
 end else begin
   case (State)
     Off:
                    begin ... end
      On:
                    begin ... end
      EspressoReady: begin ... end
      SteamerReady: begin ... end
      MakeEspresso: begin ... end
      MakeSteam:
                 begin ... end
      default:;
   endcase
 end
end
```






FSM Example

```
case (State)
  Off: begin
    if(Switch_On) State <= On;</pre>
  end
  On: begin
          if(Switch_Off) State <= Off;</pre>
    else if(Heat_Up ) State <= EspressoReady;</pre>
  end
  EspressoReady: begin
          if(Switch Off ) State <= Off;</pre>
    else if(Steam_On ) State <= SteamerReady;</pre>
    else if(Espresso_On) State <= MakeEspresso;</pre>
  end
```





SPI Interface

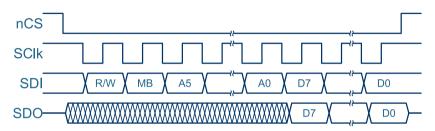

- ► For the ADXL345 Digital Accelerometer:
 - ► Maximum SClk frequency is 5 MHz (200 ns period)
 - ► SDI setup and hold is 5 ns (sampled on rising edge)
 - ► SClk falling edge to SDO delay is 40 ns





The Abstraction

```
module ADXL345 #(
 parameter Clock_kHz,
 parameter Baud_kHz = 5_000
 input ipClk, ipReset,
 // 2's Compliment Output
 output reg [15:0]opX,
 output reg [15:0]opY,
 output reg [15:0]opZ,
 // Physical device interface
 output reg opnCS, opSClk, opSDI,
 input
            ipSDO
localparam ClockDiv = Clock_kHz / Baud_kHz / 2;
```





General Structure

```
req Reset;
reg [3:0]ClockCount = 0;
wire ClockEnable = (ClockCount == ClockDiv);
always @(posedge ipClk) begin
 Reset <= ipReset;</pre>
 if(ClockEnable) ClockCount <= 4'd1;</pre>
 else
            ClockCount <= ClockCount + 1'b1:
 if(Reset) begin
   // Reset the machine here
 end else if(ClockEnable) begin
   // State machine goes here
 end
end
```





```
reg [ 4:0]Count;
reg [15:0]Data; // (R/W, MB, Address, Byte) or (2 Bytes)

typedef enum {
   Setup,
   ReadX, ReadY, ReadZ,
   Transaction
} STATE;

STATE State;
STATE RetState; // Used for function calls
```





```
if(Reset) begin
 opnCS <= 1'b1;
 opSClk <= 1'b1;
 opSDI <= 1'b1;
 State <= Setup;
end else if(ClockEnable) begin
 case (State)
   Setup: begin
      // SPI 4-wire; Full-res; Right-justify; 4g Range
     Data <= {2'b00, 6'h31, 8'b0000 1001};
     Count <= 5'd16;
      State <= Transaction:
     RetState <= ReadX;</pre>
   end
```





```
ReadX: begin
 opZ <= {Data[7:0], Data[15:8]};
 Data \leq \{2'b11, 6'h32, 8'd0\};
 Count <= 5'd24:
  State <= Transaction;</pre>
 RetState <= ReadY;</pre>
end
ReadY: begin
 opX <= {Data[7:0], Data[15:8]};
 Data \leq \{2'b11, 6'h34, 8'd0\};
 Count <= 5'd24;
  State <= Transaction:
 RetState <= ReadZ;</pre>
end
```









Reading Data

```
Transaction: begin
  if(opnCS) begin
    opnCS <= 1'b0;
  end else begin
    if(opSClk) begin
      if(Count == 0) begin
        opnCS <= 1'b1;
        State <= RetState;
      end else begin
        opSClk <= 1'b0;
      end
      Count <= Count - 1'b1;
      {opSDI, Data} <= {Data, ipSDO};
    end else begin
      opSClk <= 1'b1;
```

end end end





Outline

Finite State Machines

Simulation

JTAG


Timing Constraints

Advanced Timing Constraints





Simulation Basics

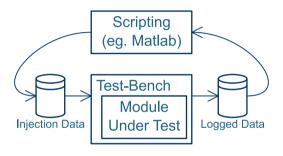


Today we only focus on the test-bench and simulation tool





Simulation Basics

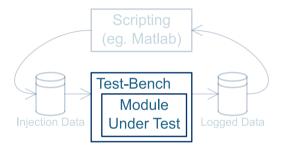


Today we only focus on the test-bench and simulation tool





ADXL345 SPI Interface

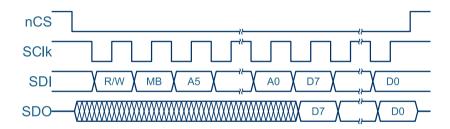





```
`timescale 1ns/1ps
module ADXL345_TB;

// Clock
reg ipClk = 0;
always #10 ipClk <= ~ipClk;

// Reset
reg ipReset = 1;
initial #50 ipReset <= 0;</pre>
```





```
// DUT
wire [15:0]opX, opY, opZ;
wire opnCS, opSClk, opSDI;
reg ipSDO = 0;

ADXL345 #(50_000) Accelerometer( // Set parameter for 50 MHz clock ipClk, ipReset, opX, opY, opZ, opnCS, opSClk, opSDI, ipSDO
);
```





```
req [ 7:0]DataIn;
reg [15:0]DataOut = 0;
integer n;
always begin
  @(negedge opnCS);
  // Instruction word
  for (n = 7; n >= 0; n--) begin
    @(negedge opSClk);
    DataIn[n] <= opSDI;</pre>
  end
```





```
// The first data word
for (n = 7; n >= 0; n--) begin
  @(negedge opSClk); #40 // Output delay;
  ipSDO <= DataOut[n];</pre>
end
// The optional second data word
if(DataIn[6]) begin // More bits
  for (n = 15; n >= 8; n--) begin
    @(negedge opSClk); #40 // Output delay;
    ipSDO <= DataOut[n];</pre>
  end
end
```





```
@ (posedge opnCS);
DataOut <= DataOut + 1;
end
endmodule</pre>
```





Questa

The resulting Questa waveforms:








- ► Questa can simulate IP modules
- ► Add the altera_mf library in the "Start Simulation" dialogue box
- ► Also remember to compile the IP block
- ▶ Questa cannot understand the defparam style of parameters.





- ▶ Questa can simulate IP modules
- ► Add the altera_mf library in the "Start Simulation" dialogue box
- ► Also remember to compile the IP block
- Questa cannot ur start Simulation

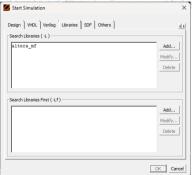


of parameters.





- Questa can simulate IP modules
- ► Add the altera_mf library in the "Start Simulation" dialogue box
- ► Also remember to compile the IP block
- Questa cannot ur Compile Source Files x of parameter

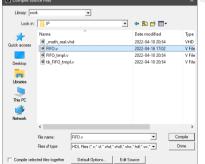





- Questa can simulate IP modules
- ► Add the altera_mf library in the "Start Simulation" dialogue box
- ► Also remember to compile the IP block
- Questa cannot understand the defparam style of parameters.

```
Mod Inst(
    // Port assignments
);
defparam Inst.Param1 = 8'h12;
defparam Inst.Param2 = 8'h23;
```





- Questa can simulate IP modules
- ► Add the altera_mf library in the "Start Simulation" dialogue box
- ► Also remember to compile the IP block
- Questa cannot understand the defparam style of parameters.

```
Mod #(
   .Param1(8'h12),
   .Param2(8'h23)
) Inst(
   // Port assignments
);
```





Outline

Finite State Machines

Simulation

JTAG


Timing Constraints

Advanced Timing Constraints





JTAG – Joint Test Action Group

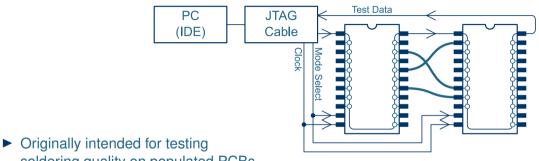


- soldering quality on populated PCBs
- Connects to the PC over USB / Ethernet / etc.
- ► Connected devices form a long chain of shift-registers





JTAG – Joint Test Action Group

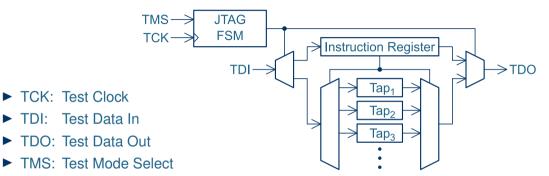


► Taps could include: Device pins; Internal flash; Status registers; Debug registers; Virtual JTAG interface etc





JTAG – Joint Test Action Group

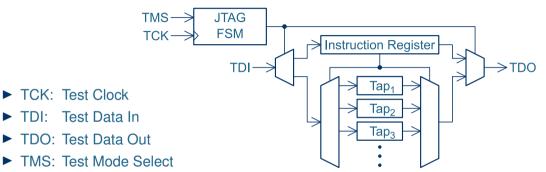


➤ Taps could include: Device pins; Internal flash; Status registers; Debug registers; Virtual JTAG interface; etc.





JTAG Debugging

FPGA IDEs includes powerful JTAG-based debugging tools.

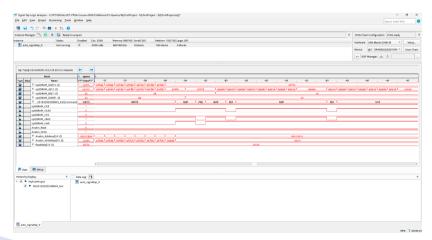





JTAG Debugging

FPGA IDEs includes powerful JTAG-based debugging tools.


- ► Sources and Probes
 https://www.youtube.com/watch?v=Mftgi318Nrc
- ► In-system memory editor
 https://www.youtube.com/watch?v=_VcVtFvJnuY
- ► Signal-tap logic analyser
 https://www.youtube.com/watch?v=vhkzxCEXuaA





JTAG Debugging

You can do some really interesting things using TCL scripting and the JTAG interface.

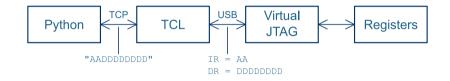

Idle Logic Labs: Talking to the DE0-Nano using the Virtual JTAG interface





Coffee Break...







Outline

Finite State Machines

Simulation

JTAG


Timing Constraints

Advanced Timing Constraints





Internal Timing

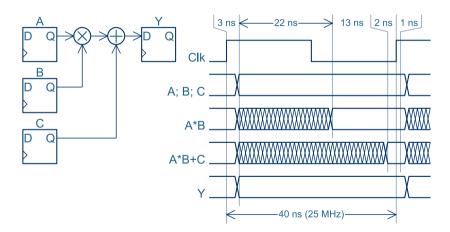





Synopsis Design Constraints

- ▶ De facto industry standard
- ► TCL based, so one can use TCL scripting within the SDC file
- ▶ Only specify what the compiler does not already know:
 - ► Clock frequencies
 - Asynchronous paths
 - ► PCB trace delays
 - ► External device parameters
 - Multi-cycle paths
 - etc.





Synopsis Design Constraints

- ▶ De facto industry standard
- ► TCL based, so one can use TCL scripting within the SDC file
- ► Only specify what the compiler does not already know:
 - ► Clock frequencies
 - Asynchronous paths
 - ► PCB trace delays
 - ► External device parameters
 - Multi-cycle paths
 - etc.





Asynchronous Pins

- ▶ Pins such as LEDs, buttons, RS-232 signals, etc. does not belong to a clock domain
- ▶ Quartus must not try to meet timing on these:

```
set_false_path -from * -to [get_ports opLED*]
set_false_path -to * -from [get_ports ipSwitch*
set_false_path -to * -from [get_ports ipButton*
```





Asynchronous Pins

- ▶ Pins such as LEDs, buttons, RS-232 signals, etc. does not belong to a clock domain
- ► Quartus must not try to meet timing on these:

```
set_false_path -from * -to [get_ports oplen*]
set_false_path -to * -from [get_ports ipSwitch*]
set_false_path -to * -from [get_ports ipButton*]
```





Clock Specification

```
create_clock -period 100 [get_ports ADC_CLK_10]
create_clock -period 20 [get_ports MAX10_CLK1_50]
create_clock -period 20 [get_ports MAX10_CLK2_50]

derive_pll_clocks -create_base_clocks -use_net_name
derive_clock_uncertainty

create_generated_clock \
    -source [get_pins { SDRAM_PLL_Inst|*|clk[1] } ] \
    -name opClk_SDRAM [get_ports opClk_SDRAM]
```

To get the node names, use the "Clocks" report of the Timing Analyzer and copy the name, or use the Timing Analyzer GUI to search for it.





Clock Specification

```
create_clock -period 100 [get_ports ADC_CLK_10]
create_clock -period 20 [get_ports MAX10_CLK1_50]
create_clock -period 20 [get_ports MAX10_CLK2_50]

derive_pll_clocks -create_base_clocks -use_net_name
derive_clock_uncertainty


create_generated_clock \
    -source [get_pins { SDRAM_PLL_Inst|*|clk[1] } ] \
    -name opClk_SDRAM [get_ports opClk_SDRAM]
```

To get the node names, use the "Clocks" report of the Timing Analyzer and copy the name, or use the Timing Analyzer GUI to search for it.





Clock Report

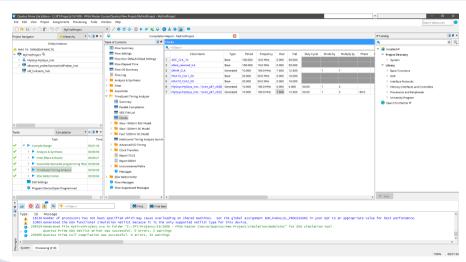





Clock Groups

- ► Unless specified otherwise, Quartus assumes that all clocks are related and in the same clock domain
- ▶ When clocks are unrelated, all paths between them must be marked as "false paths"
- ▶ Do this with clock groups:

```
set_clock_groups -logically_exclusive \
  -group [get_clocks ADC_CLK_10] \
  -group [get_clocks MAX10_CLK1_50] \
  -group [get_clocks MAX10_CLK2_50] \
  -group [get_clocks {opClk_SDRAM *altpll_component*}]
```





Clock Groups

- ► Unless specified otherwise, Quartus assumes that all clocks are related and in the same clock domain
- ► When clocks are unrelated, all paths between them must be marked as "false paths"
- ► Do this with clock groups:

```
set_clock_groups -logically_exclusive \
  -group [get_clocks ADC_CLK_10] \
  -group [get_clocks MAX10_CLK1_50] \
  -group [get_clocks MAX10_CLK2_50] \
  -group [get_clocks {opClk_SDRAM *altpll_component*}]
```





Clock Groups

- ► Unless specified otherwise, Quartus assumes that all clocks are related and in the same clock domain
- ► When clocks are unrelated, all paths between them must be marked as "false paths"
- ► Do this with clock groups:

```
set_clock_groups -logically_exclusive \
  -group [get_clocks ADC_CLK_10] \
  -group [get_clocks MAX10_CLK1_50] \
  -group [get_clocks MAX10_CLK2_50] \
  -group [get_clocks {opClk_SDRAM *altpll_component*}]
```





JTAG Timing Specification

- ► Standard across all Altera FPGAs
- ► Copied from Altera examples:

```
# Don't specify the altera_reserved_tck frequency,
# the compiler knows what it is, but put it in its own group
set_clock_groups -exclusive -group [get_clocks {altera_reserved_tck}]

set_input_delay -clock altera_reserved_tck \
    -clock_fall 3 [get_ports {altera_reserved_tdi}]

set_input_delay -clock altera_reserved_tck \
    -clock_fall 3 [get_ports {altera_reserved_tms}]

set_output_delay -clock altera_reserved_tck \
    -clock_fall 3 [get_ports {altera_reserved_tck}]
```





Outline

Finite State Machines

Simulation

JTAG

Timing Constraints

Advanced Timing Constraints





External Timing Requirements

- ► Synopsis Design Constraints start with the ideal case:
 - ► There are no PCB trace delays
 - ► The external setup requirement is zero
 - ► The external hold requirement is zero
 - ► The external propagation delay is zero
- Increase the maximum output delay for external setup timing
- Decrease the minimum output delay for external hold timing
- ► Specify the minimum and maximum input delays according to the external propagation delay parameters
- ► Worsen the situation with PCB trace delays and uncertainties (clock jitter, manufacturing tolerances, etc.)






External Timing Requirements

- ► Synopsis Design Constraints start with the ideal case:
 - ► There are no PCB trace delays
 - ► The external setup requirement is zero
 - ► The external hold requirement is zero
 - ► The external propagation delay is zero
- Increase the maximum output delay for external setup timing
- ► Decrease the minimum output delay for external hold timing
- Specify the minimum and maximum input delays according to the external propagation delay parameters
- Worsen the situation with PCB trace delays and uncertainties (clock jitter, manufacturing tolerances, etc.)






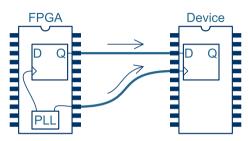

- ► FPGA internal delays and PCB trace delays cancel
- ► The important parameters are:
 - Setup and hold times of the external device
 - Clock jitter and other uncertainties
- ► Shift the external clock to ease the hold margin






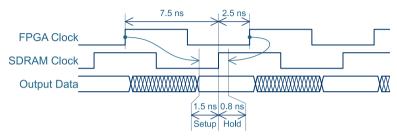

- ► FPGA internal delays and PCB trace delays cancel
- ► The important parameters are:
 - ► Setup and hold times of the external device
 - ► Clock jitter and other uncertainties
- ► Shift the external clock to ease the hold margin






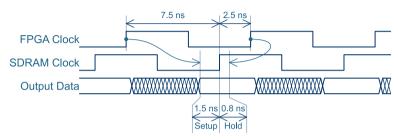

- ► FPGA internal delays and PCB trace delays cancel
- ► The important parameters are:
 - Setup and hold times of the external device
 - ► Clock jitter and other uncertainties
- ► Shift the external clock to ease the hold margin






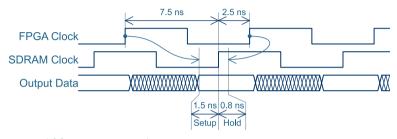

```
# Suppose 100 ps uncertainty
set_output_delay -max -clock opClk_SDRAM 1.6 [get_ports opSDRAM*]
set_output_delay -min -clock opClk_SDRAM -0.9 [get_ports opSDRAM*]
set_output_delay -max -clock opClk_SDRAM 1.6 [get_ports bpSDRAM*]
set_output_delay -min -clock opClk_SDRAM -0.9 [get_ports bpSDRAM*]
```






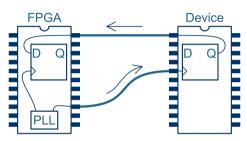

- ► Large FPGA internal delays and PCB trace delays
- ► Shift the external clock to ease the setup margin
- ► Multi-cycle requirement on the setup path (otherwise the compiler uses the 2.5 ns path) – the minimum propagation delay of 2.7 ns makes the 2.5 ns clock shift safe






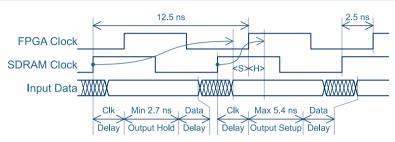

- ► Large FPGA internal delays and PCB trace delays
- ► Shift the external clock to ease the setup margin
- ► Multi-cycle requirement on the setup path (otherwise the compiler uses the 2.5 ns path) – the minimum propagation delay of 2.7 ns makes the 2.5 ns clock shift safe






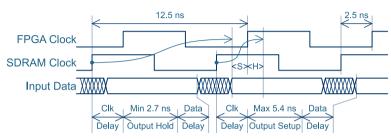

- ► Large FPGA internal delays and PCB trace delays
- ► Shift the external clock to ease the setup margin
- Multi-cycle requirement on the setup path (otherwise the compiler uses the 2.5 ns path) – the minimum propagation delay of 2.7 ns makes the 2.5 ns clock shift safe






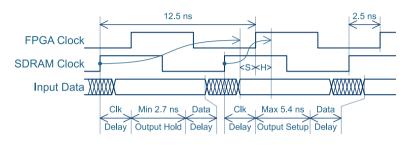

```
set_multicycle_path \
  -from [get_clocks opClk_SDRAM] \
  -to [get_clocks SDRAM_PLL:SDRAM_PLL_Inst|*|wire_pll1_clk[0] ] \
  -setup 2
```






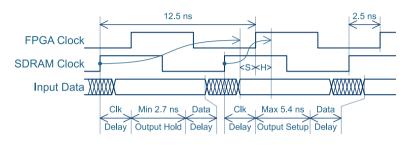

```
# Suppose 100 ps uncertainty and 200 ps PCB delay (each way)
set_input_delay -max -clock opClk_SDRAM 5.9 [get_ports bpSDRAM*]
set_input_delay -min -clock opClk_SDRAM 3.0 [get_ports bpSDRAM*]
```






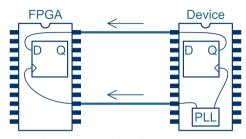

- ► The clock is sourced by the external device
- ► The PCB trace delays cancel
- ► The data is centre-aligned
- ▶ Use the dedicated serial LVDS receivers (on most FPGAs)






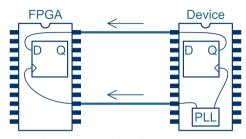

- ► The clock is sourced by the external device
- ► The PCB trace delays cancel
- ► The data is centre-aligned
- ▶ Use the dedicated serial LVDS receivers (on most FPGAs)






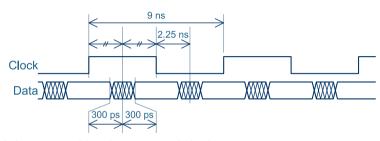

- ► The clock is sourced by the external device
- ► The PCB trace delays cancel
- ► The data is centre-aligned
- ▶ Use the dedicated serial LVDS receivers (on most FPGAs)






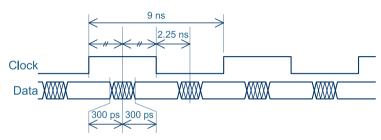

- ► The clock is sourced by the external device
- ► The PCB trace delays cancel
- ► The data is centre-aligned
- ► Use the dedicated serial LVDS receivers (on most FPGAs)






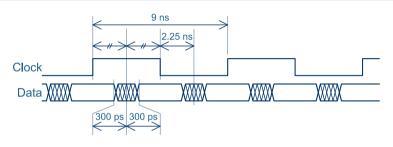

```
# Suppose 100 ps uncertainty
create_clock    -name    ADC_DCO -period 9 [get_ports ipADC_DCLK_P]
set_input_delay -clock    ADC_DCO -min 1.85 [get_ports ipADC_CH*]
set_input_delay -clock    ADC_DCO -max 2.65 [get_ports ipADC_CH*]
```





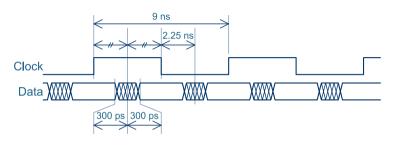

```
set_input_delay -clock ADC_DCO -clock_fall \
    -min 1.85 [get_ports ipADC_CH*] -add_delay
set_input_delay -clock ADC_DCO -clock_fall \
    -max 2.65 [get_ports ipADC_CH*] -add_delay
```





Timing-related Pin Attributes

- ▶ Use the correct I/O standard
- ► Set the correct output current
- ► Set the pin capacitance

```
set_instance_assignment -name IO_STANDARD "3.3-V LVTTL" -to opClk_SDRAM
set_instance_assignment -name IO_STANDARD "3.3-V LVTTL" -to opSDRAM*
set_instance_assignment -name IO_STANDARD "3.3-V LVTTL" -to bpSDRAM*
```





Timing-related Pin Attributes

- ► Use the correct I/O standard
- ► Set the correct output current
- ► Set the pin capacitance

```
set_instance_assignment -name CURRENT_STRENGTH_NEW 8MA -to opClk_SDRAM
set_instance_assignment -name CURRENT_STRENGTH_NEW 8MA -to opSDRAM*
set_instance_assignment -name CURRENT_STRENGTH_NEW 8MA -to bpSDRAM*
```





Timing-related Pin Attributes

- ▶ Use the correct I/O standard
- ► Set the correct output current
- ► Set the pin capacitance

```
set_instance_assignment -name BOARD_MODEL_NEAR_C 3.5P -to opClk_SDRAM
set_instance_assignment -name BOARD_MODEL_NEAR_C 3.8P -to opSDRAM*
set_instance_assignment -name BOARD_MODEL_NEAR_C 6.0P -to bpSDRAM*
```





Select References

- Stephen Brown and Zvonko Vranesic
 Fundamentals of Digital Logic with Verilog Design, 2nd Edition
 ISBN 978-0-07-721164-6
- Merrill L Skolnik
 Introduction to RADAR Systems
 ISBN 978-0-07-288138-7
- Mark A. Richards and James A. Scheer Principles of Modern Radar: Basic Principles ISBN 978-1-89-112152-4
- Deepak Kumar Tala
 World of ASIC
 http://www.asic-world.com/
- Jean P. Nicolle
 FPGA 4 Fun
 http://www.fpga4fun.com/





FPGA Development for Radar, Radio-Astronomy and Communications





Dept. Electrical Engineering, University of Cape Town Private Bag, Rondebosch, 7701, South Africa http://www.rrsg.uct.ac.za



Presented by Dr John-Philip Taylor Convened by Dr Stephen Paine

Day 2 - 10 September 2024