Chapter 1

Implications Of Considering
Transport Type In Vapor
Intrusion Investigations

1.1 Summary

In this chapter, the importance of considering the dominant transport mechanism of contaminant vapors into a building is explored. Advective transport is likely to only be dominant at VI site with some feature or pathway that allows air to bypass the large resistance to transport of the surrounding soil. This in turn increases the importance of finding these sort of features, as these are likely what will make using building pressurization as an ITS or using a technique such as CPM effective tool in VI site investigations. We also explore using weather and temperature as a predictor of building pressurization, which can be used to help explain how VI impacted buildings respond in different climates.

1.2 Advective Transport: Considering Soil And Foundation Type

The modeling in Chapter ?? help explain why building pressurization was much more strongly associated before the closing of the preferential pathway. The preferential pathway lead to advective transport to be the dominant transport mechanism for entry of contaminant vapors through the foundation crack. This finding has wider implications on our understanding of the entry mechanics of VI.

It is commonly assumed that advective transport dominates in the near-foundation region and through breaches in the foundation itself, but our modeling shows that this was only possible because:

- 1. The preferential pathway supplied a source from where air could readily be drawn.
- 2. The permeable gravel sub-base acted as a communication medium between the preferential air source and the building.

In other words, for advective transport to dominate through foundation cracks, some site-specific features were required, and the soil itself presents too much resistance to air flow for this to be possible.

Only one soil type was explored in the modeling work in Chapter ?? - sandy clay, which is itself a relatively impermeable soil, and other soil type should be considered. Furthermore, our modeled house featured a basement, and in such a scenario, the atmosphere is relatively far removed from the foundation crack, and therefore, a slab-on-grade type of foundation should also be considered.

The effect of different soil and foundation types is investigated using the model introduced in Chapter ??; the only difference is that we change the soil type and depth of the foundation. We consider 12 of the soil types studied by the EPA (see Table ??) and for each of these we consider a basement and a slab-on-grade case respectively. The basement and slab-on-grade cases are defined by the bottom of

foundation slab located at 1 m and 15 cm bgs respectively. To building is assumed to be depressurized at $p_{in} = -15 \,\mathrm{Pa}$, a value much greater than "normal", to enhance the advective potential. The analysis in Chapter ?? showed that a gravel sub-base layer, absent a preferential air source, was virtually indistinguishable from the cases where there was no gravel sub-base layer, thus such a feature will not be included in the model.

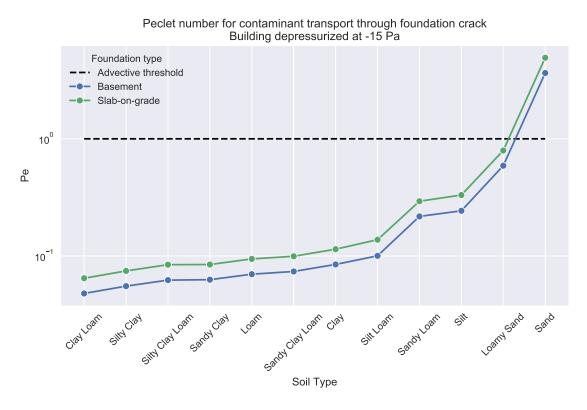


Figure 1.1: Predicted effect of soil and foundation type on the Péclet number of transport through the foundation crack. We consider the 12 different soils studied by the EPA (see Table), and for each of these we consider a house featuring a basement and a slab-on-grade house. The foundation slab is assumed to be 15 cm thick. In the basement case, the bottom of the foundation slab is assumed to be 1 m bgs and 15 cm bgs in the slab-on-grade case. The modeled building is assumed to be depressurized at -15 Pa. The threshold where advective transport begins to overtake diffusive transport, i.e Pe = 1, is marked by the dashed line.

The result of these model cases can be seen in Figure 1.1. This shows that for most soil types, irrespective if a building has a basement or a slab-on-grade foundation, the Péclet number across the foundation slab is not sufficiently high for advection to the dominant transport mechanism; most soils are too impermeable for sufficient airflow to be pulled into the building via the subsurface. Sites characterized

by sand soil are an exception to this, which are permeable enough to sustain such airflows. An example of such a site is a site at North Island Naval Air Station in San Diego, California, which featured sandy soil, and there indoor contaminant concentration and building pressurization was highly correlated [hosangadi'high-frequency'2017].

This indicates that for many sites characterized by other soil types, significant advective transport of contaminant vapors into the building are likely to occur through some preferential air source. It is important to note however, that this is not limited to the sort of preferential pathways we have studied in this work, but such a phenomena could conceivably arise from a wide range of circumstances.

1.3 Applying Transport Classification Concept

Considering if contaminant transport from the subsurface into the a building is dominated by advection or diffusion as it dramatically changes how a structure is expected to respond to change in pressurization; for diffusion dominated sites, contaminant entry rates will be relatively decoupled from building pressurization. This has implications for a wide variety of VI topics, but perhaps most relevant for using CPM and choosing relevant ITS.

1.3.1 Controlled Pressure Method

The idea of CPM is to control the building pressurization, e.g. by using some fans or blowers, which in turn will control the contaminant entry rate. The underlying assumption in its application is that contaminant entry into a building is largely advective in nature; for "diffusion sites" this will not be as effective.

Figure 1.2 illustrates this phenomena. During the period when the land drain preferential pathway was open, CPM dramatically increased indoor contaminant concentrations compared to the when the CPM system was inactive. However, after the closing of the land drain preferential pathway, CPM did not have any significant effect on indoor contaminant concentrations. From the study of the ASU house

and associated modeling explained it was deduced that the presence of the land drain preferential pathway make advection the dominant transport mechanism of contaminant vapors into the building. This shows that CPM may not be universally effective, but could only reasonably expected to be so at "advection sites".

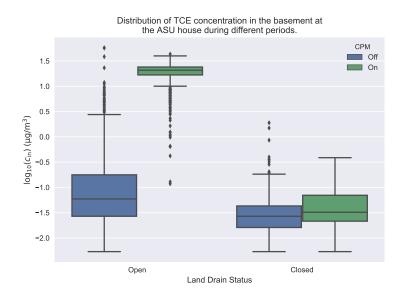


Figure 1.2: Boxplot showing the log-10 transformed TCE concentrations at the ASU house. The CPM and natural periods, and the period before and after the land drain was closed are considered separately. The box signifies the interquartile range (IQR) of values, with the central line representing the median value, and the top and bottom of the box are the 25th and 75th percentiles. The whiskers extend to 1.5 times the IQR. Markers indicate outlier data points that fall outside the whiskers.

CPM not only affects the contaminant vapor entry rate into a building, but will also have an impact on air exchange rates. Figure 1.3 shows the effect that CPM had on air exchange rates at the ASU house, where they increased significantly during the period. The effect of this is that contaminant expulsion from the house is amplified, which decreases the indoor contaminant concentration for a given contaminant entry rate. This is a concern voiced in [holton'long-term'2015][holton'long-term'2015] evaluation of the CPM system at the ASU house, and suggested that a tracer-gas test to measure air exchange rate should be conducted during CPM. This is used to introduce a correction term to account for the elevation of air exchange rate above its "natural" values. Since CPM is used to determine the worst-case scenario, this correction term should be used to calculate the indoor contaminant concentration

with worst-case entry rates, but "natural" air exchange rate values, i.e. $\approx 0.5\,\mathrm{h^{-1}}$ instead of the elevated values.

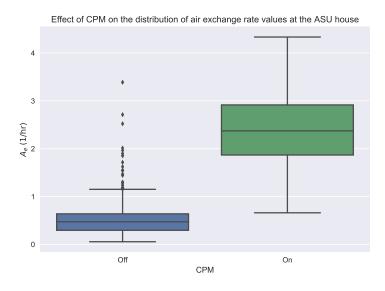


Figure 1.3: Boxplot showing the distribution of air exchange rate values at the ASU house, considering the effect of CPM.

This highlights an issue with CPM at VI sites characterized by diffusive transport. If the increased depressurization doesn't yield higher contaminant entry rates into the building, but elevates air exchange rate, then indoor contaminant concentration may be artificially lowered, and thus underdetermining the VI risk. This further shows the necessity of using tracer-gas monitoring to measure air exchange rates when using CPM.

1.3.2 Indicators, Tracers, And Surrogates

As has been discussed throughout this work, VI can feature great temporal variability in indoor contaminant concentrations. These variations can occur on a variety of time-scales, from days to larger seasonal trends, which can require significant amounts of data collection to fully resolve. To reduce the resources expended on these efforts, and increase the likelihood of determining the relevant VI risk, it is desirable to use some indicators, tracers, and surrogates (ITS) that can be used to readily predict the periods and conditions when the highest indoor contaminant

concentration at a site are likely to manifest. Which specific ITS that are most appropriate for this task, and under which circumstances, are yet to be determined.

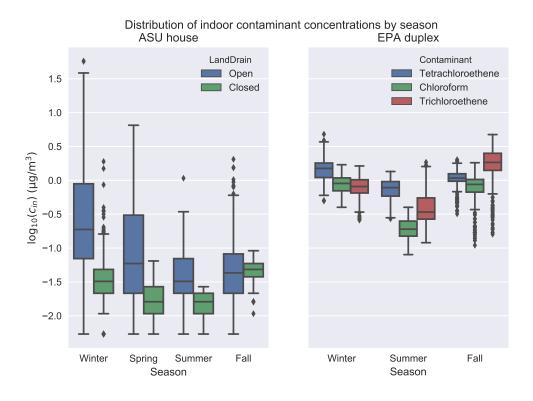


Figure 1.4: Seasonal distribution of indoor contaminant concentration at the ASU house and EPA duplex. At the ASU house, the effect of the land drain preferential pathway is considered. At the EPA duplex, the differences in distribution for three different contaminants are considered. Here "winter" includes December to February, with each subsequent season being defined by the subsequent three months.

Seasonal trends have been found to be common at many VI sites, with winter often cited as the period most likely to feature elevated indoor contaminant concentrations[burke'estimation'2010, hers'evaluation'2014, miles'temporal'2001, schumacher'fluctuation'2012, steck'indoor'2004]. This is a trend that partly occurred at the ASU house as well (see Figure 1.4); indoor contaminant concentrations were highest during winter when the land drain preferential pathway was open, a trend was non-existent after the closing of the land drain. At the EPA duplex, indoor contaminant concentrations were slightly higher during winter and fall than Summer, but only marginally so.

The seasonal trend at the ASU house when the land drain preferential pathway was open, and its disappearance can be understood by examining the seasonal dis-

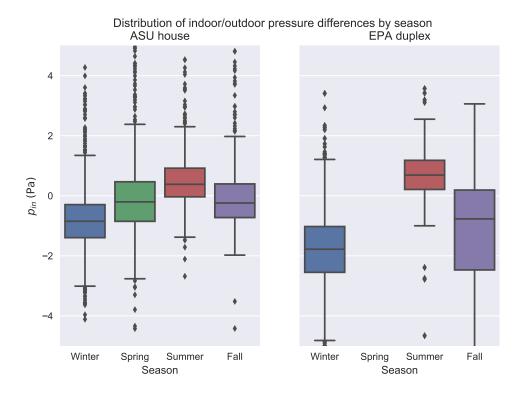


Figure 1.5: Seasonal distribution of indoor contaminant concentration at the ASU house. A negative value indicates that the building is depressurized relative to ambient.

tribution of indoor/outdoor pressure difference values, in Figure 1.5. Here we see that building depressurization is greatest during winter, slightly less depressurized during the shoulder seasons, and usually overpressurized during summer. Putting this together with advective transport dominated period when the land drain preferential pathway was open at the ASU house, explains why indoor contaminant concentrations are higher during the colder seasons. Conversely, when the land drain preferential pathway, contaminant transport was likely diffusion dominated, and such a trend disappears.

The EPA duplex exhibit a similar trend in building pressurization by season, i.e. it is more depressurized during colder seasons, and can help explain why indoor contaminant concentrations were likewise slightly higher during these seasons. While the nature of the contaminant transport into the EPA duplex is not as well understood, it was showed in Chapter ?? that association between building pressurization and indoor contaminant concentrations were somewhere between that of the ASU

house before and after the closing of the land drain (compare Figures ?? and ??), indicating that while advection may not be dominant, it certainly isn't insignificant.

These data and analysis demonstrate that for advection sites, building pressurization could be used as an effective ITS, whereas at a diffusion site, it may not be. However, to use building pressurization effectively as an ITS, it would be useful to be able to predict it based on some easier to measure parameters - such as weather conditions.

1.4 Predicting Building Pressurization

Building pressurization can be used as an effective ITS under the right circumstances. However, determining this requires a measurement device to be installed, and moreover needs to record over some length of time to determine trends. Thus, it would be desirable to use some more readily available metric, such as weather data, to predict building pressurization.

A variety of factors can contribute to determine overall building pressurization. Some of these are artificially controlled and induced, such as the force convection by heating, ventilation, and air conditioning systems. These are of course difficult to use to for prediction purposes, and can at some sites be the dominant means for controlling building pressurization, i.e. some buildings or rooms are forcefully pressurized to keep gases or contamination out.

Weather primarily contributes to building pressurization through two means. The temperature difference between the interior of the building produces a density and subsequent pressure gradient on either side of the building wall - this is commonly called the *stack effect*. Wind striking the building also produces a pressure difference, the magnitude of which is largely dependent on wind speed. However, if the building is pressurized or depressurized by this, is more complicated and generally depends on the wind direction and building characteristics; wind blowing on a leaky window causes a very different effect compared to a featureless wall. Equations for predicting building pressurization as a function of weather is available in

The American Society of Heating, Refrigerating and Air-Conditioning Engineers (ASHRAE) 2017 Handbook[american'society'of heating'2017'nodate] which is used as the primary source in this section.

These weather phenomena likewise can affect air exchange rates, and has been a significant focus in the VI modeling work by **shirazi'three-dimensional'2017**[**shirazi'three-dim** As their work shows, predicting air exchange rate can be challenging, as accurate characterization often require detailed knowledge of the interior of a building, and will not be a focus in this work.

The study of the EPA duplex continuously monitored the indoor and outdoor temperature at the site and wind speed as well as its direction using an on-site weather station mounted on the roof of the building. These data with the recorded indoor/outdoor pressure offers an opportunity how well building pressurization can be predicted using weather, which will be a focus on this section. Ideally, the same would be done for the ASU house, but weather data at the site is not available to the author.

1.4.1 Wind Effects

To truly capture the impact that wind can have on a building and its pressurization, it is usually necessary to conduct wind tunnel tests of scale models of the building, or through detailed computational fluid dynamics (CFD) simulations. This is especially true for buildings of even modest complex geometric shapes, where it is impossible to predict the wind pressure field without these tools. However, it is possible to derive some simple equations to account for wind effects on simple rectangular block-type buildings.

Even with assumption, the inherent turbulent nature of wind means that is truly never at steady-state, and thus wind striking a wall generates a distribution of pressures across the surface, that can vary widely in a short period of time; resolving this with a high degree of accuracy requires a significant computational effort. However, by considering the wind induced pressure field over some timeaveraged period, it is possible to develop some simple equations for predicting wind induced pressurization for a rectangular building. The drawback of this approach is that large pressure fluctuations will not be captured.

As the wind strikes the wall of a house, its velocity falls to zero, and the change in momentum is directly proportional to the change in pressure:

$$\Delta p_w = \frac{1}{2} \rho u_{\text{wind}}^2 \tag{1.1}$$

where $\Delta p_w = p_{\text{wall}} - p_{\text{wind}}$ [Pa] is the change in pressure at the building wall from the wind free-stream pressure; ρ_{air} [kg m⁻³] is the air density; and u_{wind} [m s⁻¹] is the free-stream wind speed, here assumed to be the wind speed measured at some place where it is unaffected by terrain or buildings.

However, (1.1) neglects a variety of factors, such as terrain, vegetation, or other buildings. It also neglects wind striking the wall at an angle. These can be accounted for by introducing a drag or pressure coefficient C_p into (1.1) giving (1.2).

$$\Delta p_w = C_p \frac{1}{2} \rho u_{\text{wind}}^2 \tag{1.2}$$

 C_p is a dimensionless number, varying between -1 and 1, and is a function of wind direction, the building itself, and immediate surrounding area.

Air density ρ changes with temperature and barometric pressure, which can be accounted for via the ideal gas law.

$$\rho = \frac{p_{bar}}{R_{\text{spec}}T} \tag{1.3}$$

here p_{bar} [Pa] is the barometric pressure; $R_{spec} = 287.058 \,\mathrm{J\,kg^{-1}\,K^{-1}}$ is the specific gas constant for dry air; and T [K] is the ambient outside temperature.

To use (1.2) for predicting the EPA duplex pressurization, we need to choose some C_p value; ideally, a CFD simulation of the structure would be used to determine C_p as a function of the wind direction between 0 and 360 degrees. There are some C_p values

available for some generic structures and cases in are available in the American Society of Civil Engineers book for building codes and standards[simiu'design'nodate]. However, none of these seem applicable to a duplex, nor seem to deal with the building located on the eastern side of the EPA duplex. Instead we assume a generic $C_p = 0.35$, as values in this range are common.

Another factor to consider is that a building will be pressurized or depressurized by wind depending how leaky the wall it strikes is. Generally, walls featuring doors, windows, or other opening will cause a depressurization, while a simple flat wall will cause a overpressurization effect¹. By inspection of the EPA duplex, we see that all walls feature windows, but since we're only concerned with the pressurization of the heated side of the duplex (422, the right-hand side half in Figure (??)), we will assume that westerly wind overpressurizes the 422 side.

Wind direction was recorded in degrees relative to northerly wind at the EPA duplex, however, for simplicity we will divide these degrees up into eight cardinal directions (north, north-east, etc) and assign signs to indicate pressurization or depressurization respectively to each direction (see Table 1.1).

Cardinal direction	Wind direction [°]	Pressurization sign
N	0 ± 22.5	1
NE	45 ± 22.5	1
${ m E}$	90 ± 22.5	1
SE	135 ± 22.5	1
S	180 ± 22.5	1
SW	225 ± 22.5	1
W	270 ± 22.5	-1
NW	315 ± 22.5	1

Table 1.1: Division of wind direction into discrete cardinal directions with associated pressurization or depressurization of the EPA duplex.

¹It should be noted that this relationship is not always true, and will depend on the indoor/outdoor temperature difference, as well as the magnitude of the wind speed, as shown by shirazi'three-dimensional'2017[shirazi'three-dimensional'2017].

1.4.2 Temperature Effects

The pressure of any fluid under the influence of gravity varies with elevation and the density of the fluid determines the magnitude of this pressure, which itself is function of the fluids absolute pressure and temperature. If two columns of air are separated on either site of a wall at different temperatures, a pressure difference across the wall be induced, i.e. the *stack effect*.

The pressure of air p as a function of height above some reference plane at height z_0 is given by

$$p = p_0 - \rho gz \tag{1.4}$$

here p_0 [Pa] is air pressure at reference plane z_0 [m]; ρ [kg m⁻¹] is the density of air; $g = 9.82 \,\mathrm{m \, s^{-2}}$ is the acceleration due to gravity; and z [m] is the elevation above z_0 .

Since we're concerned with predicting the stack effect for a relatively short building, we can neglect vertical air density gradients giving the horizontal pressure difference as:

$$\Delta p_s = (\rho_{out} - \rho_{in})g(z - z_0) = \rho_{out} \frac{T_{in} - T_{out}}{T_{in}}g(z - z_0)$$
 (1.5)

 Δp_s [Pa] is the stack effect induced horizontal pressure difference; T [K] is the absolute temperature; and the subscripts in and out are in reference to the indoor and outdoor values respectively. Like in the wind effect section, air density is calculated as function of the barometric pressure and outside temperature.

As a reference height difference $\Delta z = z - z_0$, we use $\Delta z \approx -3$ m. This based on the estimated height difference between the EPA duplex basement and some midpoint of the exterior of the building. The recorded indoor/outdoor pressure difference at the EPA duplex is here defined as the pressure difference between wall-port 1 (WP-1), which was on the outside of the house, and the duplex basement.

1.4.3 Air Exchange Rate

It is possible to predict air exchange rate of a building using a similar approach to the one needed for pressure. However, this approach requires detailed knowledge of the leakiness of a building and how different house compartments communicate, and thus is beyond the scope of this work. Even if possible, air exchange rates were not continuously monitored at the EPA duplex, so evaluation of this approaches efficacy using the recorded weather data is difficult. Predicting air exchange rate of a building by modelling is done in the VI modeling of shirazi'three-dimensional'2017[shirazi'three-dimensional'2017], which has had very positive results with their method so far.

1.4.4 Predicting Pressurization At The EPA Duplex

The indoor/outdoor pressure difference p_{in} is assumed to be the sum of the stack effect (Δp_s) and wind contribution (Δp_w) , here given simply by p_s and p_w respectively.

$$p_{in} = p_s + p_w \tag{1.6}$$

Figure 1.6 shows the recorded indoor/outdoor temperature difference and wind speed, how these two contribute individually to p_{in} , and how they contribute together to p_{in} across the EPA duplex study period.

Figure 1.6 shows that with this relatively simple approach, the general trend of p_{in} is captured. Major errors seem to be mostly due to either a failure to capture large changes in p_{in} , or overpredict changes in p_{in} . Both of these seem to stem from a relatively poor characterization of the wind influence, which strongly seems correlated with large changes in p_{in} in general.

The differences and individual contributions of the temperature and wind effects can be further examined in Figure 1.7 and Table 1.2. These show this approach reasonably predicts most of the p_{in} distribution, specifically the mean pressurization and standard deviation are captured, but fails to capture, in particular, outliers where the building is significantly depressurized. This is again due to poor account of the wind effect, and more advanced modeling of the influence of wind, such in the work by **shirazi'three-dimensional'2017**[shirazi'three-dimensional'2017], this is likely to be more well-captured.


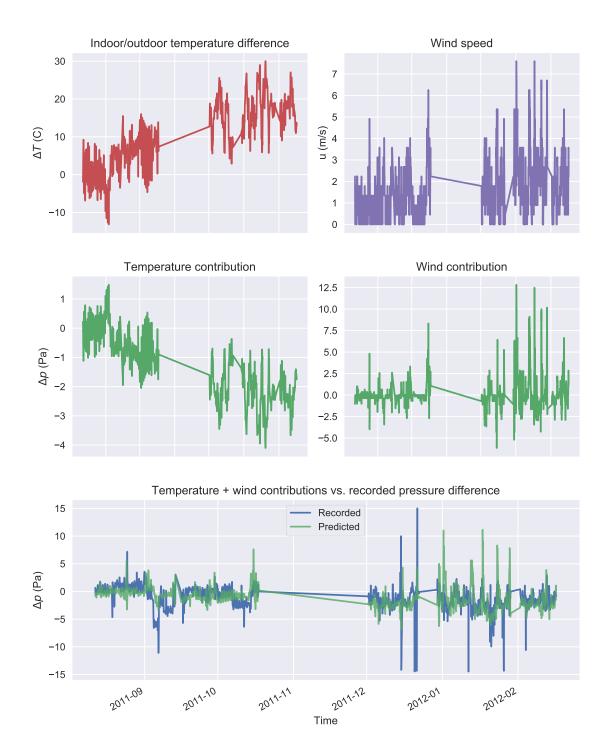


Figure 1.6: How indoor/outdoor temperature difference ΔT and wind contributes to building pressurization at the EPA duplex. The top left panel shows $\Delta T = T_{in} - T_{out}$, i.e. a positive value indicates that it is warmer indoors than outdoors. The top right shows the wind speed u_{wind} . The middle panels shows the contributions of ΔT and u_{wind} to p_{in} respectively. The bottom panel shows the combined contribution of ΔT and u_{wind} to p_{in} , and compared to the recorded p_{in} values. $p_{in} < 0$ indicates that the building is depressurized.

Regardless, this approach shows that using temperature, wind, barometric pressure, and some simple assumptions about a building, it is possible to reasonably

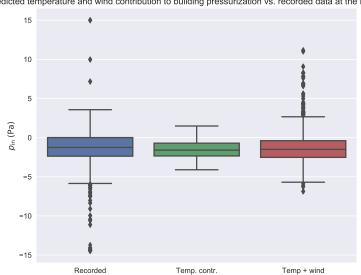

Predicted temperature and wind contribution to building pressurization vs. recorded data at the EPA duplex

Figure 1.7: Boxplot comparing the predicted p_{in} to the recorded values, and how the temperature and wind components contributes to the distribution of values.

		Predictions		
	Data	p_s	$p_s + p_w$	
Mean	-1.33	-1.50	-1.31	
Std.	2.15	1.12	1.96	

Table 1.2: Mean and standard deviation of recorded and predicted building pressurization. Here considering the temperature induced stack effect pressure difference p_s alone, and the combined contribution of wind induced pressure difference p_w and p_s .

accurately characterize how building pressurization may change in the long-term and short-term. This is in particular useful for planning when to conduct testing at sites that are more advection dominated, and one should here strive to collect samples when the building is continuously depressurized, i.e. when $\Delta T > 5$ °C and when there is little wind (to reduce uncertainty); this likely explains why it is often found that VI is most significant during colder months. This gives credence to these weather factors as a reasonable ITS under certain circumstances.

16