
Cardiovascular Magnetic Resonance







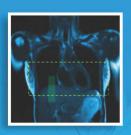

Cardiovascular Magnetic Resonance

Angel Lawrence, RT (MRI), R

This booklet is designed to serve as an easily digestible primer on CMRI that provides guidelines and helpful hints to get you on your way.



Preface

With this book I'd like to have a "heart to heart" discussion with you, the reader, on how to acquire images of the heart.

Cardiovascular Magnetic Resonance imaging (CMR) is an incredibly useful cardiac imaging modality that continues to gain in both popularity and clinical utility. CMR has become one of, if not the most informative noninvasive imaging modalities to evaluate structure and function of the cardiovascular system.

This booklet is aimed to provide a step-by-step guide for MRI technologists new to cardiovascular imaging, and CMR in particular, and to those who may be interested in a concise reference guide to keep by the scanner.

Further, with this information I hope to help you gain the foundation needed to achieve proficiency in CMR.

We will do so with a stepwise approach including cardiac MRI pulse sequences, acquisition approaches, clinical indications, and tips and tricks for CMR that I have learned through clinical practice. Join me as we explore the exciting world of CMR.

Acknowledgements

Words cannot express my deepest gratitude for my advisor and teacher, and the former Section Head of Cardiovascular Imaging at the Cleveland Clinic, Dr. Scott Flamm.

Thank you for generously imparting your knowledge and expertise over the years. Your patience, motivation, constructive feedback, and constant guidance has helped shape all of us around you.

As well, I am grateful for the assistance of, and could not have made this booklet without the kindness and help of Dr. Paul Schoenhagen. Your ever-present willingness to help does not go unrecognized.

And lastly, I need to thank Dr. Deborah Kwon for her encouragement and endless support.

Contents

| Introduction |
|---|
| PrefaceI |
| AcknowledgementsII |
| Contents II-V |
| AbbreviationsVI-IX |
| Part I: Techniques & Applications |
| Double Inversion Recovery and Black Blood Pulse Sequences \dots 1 |
| Steady-State Free-Precession (SSFP) Pulse Sequence 2 |
| Real-time Cine Sequence |
| Cine SSFP Pulse Sequences |
| Myocardial Perfusion Pulse Sequences4 |
| Cardiac Stress Agents5 |
| LGE Pulse Sequences6-7 |
| Phase-Contrast Flow Sequence 8-9 |
| "Whole Heart MRA" Pulse Sequence |
| Contrast-Enhanced MRA Pulse Sequence11 |
| T1-mapping 12 |
| T2-mapping & T2-weighted (T2w) imaging |
| T2-STIR-Weighted Imaging |
| T2* Mapping |
| Part II: Tips & Tricks |
| Patient Preparation |
| Electrocardiographic Gating |
| Different Types of Arrythmias |
| Tips & Tricks |
| CMR Safety23 |
| MRI Zones 24 |
| Gadolinium Based Contrast Agents (GBCA)25-27 |
| CMR in Pregnancy28 |
| Artifacts |

| art III: Gardiac Scan Planning | |
|--|-------|
| ardiac MRI Scan Planning | 33 |
| ardiac Imaging Modules | 34 |
| Survey Module | 34-35 |
| Cine Module | 36-41 |
| LGE Module | 42 |
| Qflow Module | 42-46 |
| MRA Module | 46 |
| Perfusion Module | 47 |
| Tissue Characterization Module | 47 |
| Iron Characterization Module | 47 |
| Pulmonary Vein | 47 |
| art IV: Protocols & Case Studies | |
| iability | 49 |
| ast Viability | |
| litral Valve and Myocardial Viability | |
| lypertrophic Cardiomyopathy & Hypertrophic | |
| bstructive Cardiomyopathy | 52-53 |
| RVD & ARVC | |
| trial Fibrillation | |
| arcoid | |
| ardio-Oncology | |
| tress CMRI | |
| ericarditis and Pericardial Constriction | |
| myloid | |
| lass/Thrombus/Cysthoracic Aorta | |
| horacic Aorta for Aortic Insufficiency | |
| rteritis/ Takayasu | |
| | |

Part IV: Protocols & Case Studies (Continued)

| Valvar Heart Disease | 69 |
|---|---------|
| Atrial Septal Defect (ASD) | 70 |
| Ventricular Septal Defect (VSD) | 70 |
| Transcatheter Aortic Valve Replacement TAVR | 72-73 |
| Pediatric and Adult Congenital Heart Disease (Part 1) | 74-75 |
| Pediatric and Adult Congenital Heart Disease (Part 2) | 76-77 |
| Pediatric and Adult Congenital Heart Disease (Part 3) | 78-79 |
| Diastole and Systole | 80-81 |
| Pulmonary Labeling | 82 |
| Positioning for right Ventricular Outflow Tract | 83 |
| Part V: Quizzes & Notes | |
| Quiz 1: Label the Heart | 85 |
| Quiz 1: Label the Heart - Answers | 86 |
| Quiz 2: Label the Chambers | 87-89 |
| Quiz 2: Label the Chambers - Answers | 90 |
| Quiz 3: Cardiac Identification | 91-93 |
| Quiz 3: Cardiac Identification - Answers | 94 |
| Quiz 4: Cardiac MRI | 95-101 |
| Quiz 4: Cardiac MRI - Answers | 102-103 |
| Quiz 5: MRI Protocols | 104-105 |
| Quiz 5: MRI Protocols - Answers | 106 |
| Quiz 6: Congenital Heart Disease | 107-109 |
| Quiz 6: Congenital Heart Disease - Answers | 110 |
| Quiz 7: Word Finder | 112-113 |
| Quiz 7: Word Finder - Answers | 114 |
| Quiz 8: Crossword | 116-117 |
| Quiz 8: Crossword - Answers | 118 |

Abbreviations

2 CH 2 Chamber view-VLA **EDV** End-diastolic volume **3 CH** 3 Chamber view-LVOT EF Ejection fraction End-systolic volume **3D** 3 Dimensional **ESV** 4 CH 4 Chamber view **FOV** Field of view **ACCF** American College of Cardiology Foundation **FWHM** Full-width half maximum American Heart Association AHA HLA Horizontal long axis Anomalous Left Coronary Artery from PA ALCAPA HR Heart rate APC Aorto-pulmonary collaterals HRS Heart Rhythm Society Inferior vena cava AR Aortic regurgitation IVA Anomalous RCA from PA ARCAPA Left anterior descending (coronary artery) LAD ASD Atrial septal defect LA Left atrium/atrial Atrioventricular AV LCx Left circumflex (coronary artery) Late gadolinium enhancement AVSD Atrioventricular septal defect LGE Body surface area **BSA** LPA Left pulmonary artery Balanced steady- state free- precession LV end-diastolic pressure **bSSFP** LVEDP Blalock- Taussig (shunt) BTLV Left ventricle Coronary artery disease **CAD** MAPCA Major aorto-pulmonary collateral artery **CBTS** Classic BT shunt Modified BT shunt **MBTS** Congenitally corrected TGA CCTGA MIP Maximum intensity projection **CMR** Cardiac Magnetic Resonance Main pulmonary artery **MPA DCRV** Double chamber right ventricle Mitral regurgitation MR Magnetic resonance angiography Descending MRA Desc Digital Imaging and Communications in Medicine **DICOM** MVMitral valve **ECG** Electrocardiogram

| NASCI | North American Society for Cardiovascular Imaging | SA | Short axis | |
|-------|---|------|---|--|
| NSA | Number of signal averages | SCMR | Society for Cardiovascular Magnetic Resonance | |
| PACS | Picture Archiving and Communication System | SVC | Superior Vena Cava | |
| PA | Pulmonary Artery | SD | Standard deviation | |
| PDA | Persistent ductus arteriosus | SI | Signal Intensity | |
| pHLA | Pseudo HLA | SNR | Signal-to-noise ratio | |
| PR | Pulmonary regurgitation | STIR | Short-tau inversion recovery | |
| pSA | Pseudo short axis | SV | Stroke volume | |
| PSIR | Phase sensitive inversion recovery | TE | Time to Echo (aka Echo time) | |
| PS | Pulmonary stenosis | TEE | Transesophageal echocardiogram | |
| pVLA | Pseudo vertical long axis | TOF | Tetralogy of Fallot | |
| RA | Right atrium | TR | Time to Repetition (aka Repetition time) | |
| RCA | Right Coronary Artery | TSE | Turbo spine echo | |
| RF | Regurgitant fraction | TVR | Tricuspid valve replacement | |
| ROI | Region of interest | TV | Tricuspid valve | |
| RV | Right ventricle | VENC | Velocity encoding | |
| RVOT | Right ventricular outflow tract | VLA | Vertical long axis | |
| RWMA | Regional wall motion abnormality | VR | Volume rendering | |

PART I:

Applications & Techniques

Double Inversion Recovery & Black Blood Pulse Sequences

Double Inversion Recovery (DIR) is an inversion recovery variant that uses not one, but two nonselective 180°-inverting pulses. The earliest applications of this type of DIR technique were in brain imaging, particularly for detection of multiple sclerosis plaques and lesions of the cerebral cortex.


CMR takes advantage of this tissue contrast weighting and includes a component to produce "black blood" that allows improved visualization of the soft-tissue structures.

In this method, two 180°-pulses are applied close together in time. The first 180°-pulse is nonselective, meaning that it inverts the magnetization for all tissue within the imaging volume.

Black Blood Pulse Sequences:

- The second 180°-pulse, following immediately after the first 180°-pulse, is slice selective, meaning that it returns the magnetization of the tissues only in that slice back to the +z-direction.
- Thus, the myocardium and other relatively stationary tissues in the imaging slice plane have their signal preserved, but the blood flowing from adjacent slices has an inverted magnetization.

Fig. 1.1 - Black Blood Pulse Sequence

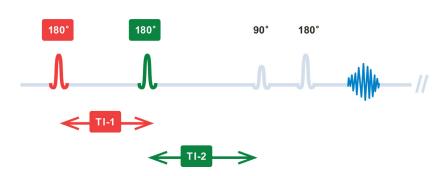

SSFP Pulse Sequence

Steady-state free-precession (SSFP) pulse sequences are a class of rapid magnetic resonance imaging techniques in which a steady, residual transverse magnetization is maintained between successive cycles. The basic idea of SSFP is to apply a series of excitation pulses with a short TR that is shorter than the T2 relaxation time of the tissue. As a result, the transverse magnetization does not fully decay before the next pulse and reaches a steady-state after a few cycles. The flip angle of the pulses is typically between 50° and 80°.


Image Contrast:

- Bright blood sequence with relatively uniform signal intensity of both slowly and rapidly flowing blood.
- Considered T2/T1-weighted. The T2-weighting generally dominates, except after the administration of gadolinium-contrast agent when the T1 effects dominate.

Clinical Utility:

- Best sequence to assess cardiac function.
- Bright blood even with slow flow.
- Typically, shorter TRs and TEs than with gradient-echo imaging.
- Typically has shorter breath-holds and higher spatial resolution for the same breath-hold time compared to gradient-echo images.
- Less sensitive for detecting turbulent flow due to valvular disease or intracardiac shunts as a result of the very short TEs.

Fig. 1.2 - bSSFP Sequence

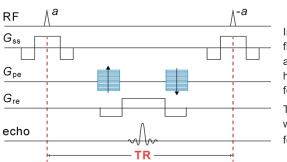

In bSSFP sequences, flow and banding artifacts are increased due to the heightened requirement for field homogeneity.

These artifacts are worst with longer TRs, and near ferromagnetic implants.

Real-time Cine


Real-time cine comprises a group of single-shot echo-planar methods that allow acquisition of bright blood cardiac images continuously, and without breath holding. The trade-off for increased speed is decreased spatial resolution, as can be appreciated from the somewhat blurry images, and coarser temporal resolution.

Cine SSFP Pulse Sequence

Cine SSFP pulse sequences are typically obtained as one or two slices obtained in a single breath hold. Echoes are grouped into cardiac phases with retrospective ECG-gating, then reconstructed and played in a loop.

To fully evaluate the entire heart, separate cine image sets at various locations must be obtained. For example, a standard cine study will include a contiguous set of short-axis slices through the ventricles from base to apex, along with three long-axis images through the left ventricle (2-, 3-, and 4-chamber views). Additional views may include valvular and outflow tract images, as needed.

Fig. 1.3 - Cine SSFP Pulse Sequence

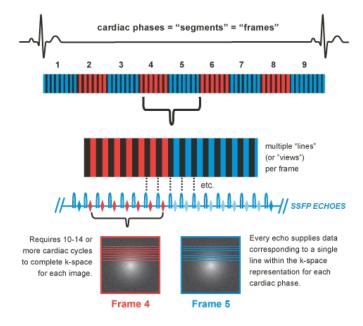

Myocardial Perfusion Pulse Sequences

Imaging Sequence Type:


- A variety of base pulse sequences are used including gradient-echo, gradient-echo variants hybridized with echo-planar readouts, and SSFP sequences.
- A Saturation Recovery (SR) preparatory pulse is used to tip the longitudinal magnetization of all tissues in the imaging volume into the transverse plane. After being tipped into the transverse plane tissues begin to recover longitudinal magnetization as a function of their T1 values. Gadolinium-containing blood and myocardium have short T1s and recover quickly, while non-enhancing myocardium or ischemic myocardium, and other tissues remain relatively saturated or darker appearing.
- Typical image sets obtained are 3-6 short-axis images preferentially acquired over a single heartbeat, though may be acquired over two heartbeats for greater myocardial coverage, and may include selected long-axis images. Anywhere from 30-60 image dynamics are acquired for each imaging slice during a breath hold. These images are acquired after (or during) the administration of a pharmacologic vasodilator, such as adenosine.

Image Contrast:

• Bright blood (following gadolinium/ contrast)

• T1-weighted

Fig. 1.4 - (SR) preparatory pulse

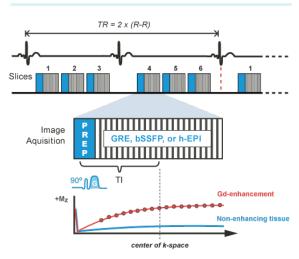

Cardiac Stress Agents:

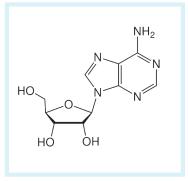


Fig. 1.5 - Adenosine

Adenosine is a strong vasodilator for coronary and most vascular beds, has a short half-life, and is administered continuously over 3-4 minutes. Two separate IV lines are typically necessary so that bolus administration of adenosine does not occur. Caution must be exercised when considering administration of adenosine to patients with a history of valvular stenosis, cerebrovascular insufficiency, or autonomic dysfunction.

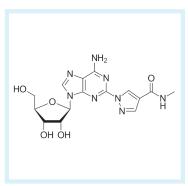


Fig. 1.6 - Regadenoson

Regadenoson, commercially known as Lexiscan, is a systemic vasodilator, similar in action to adenosine, and available in a pre-filled syringe. It specifically acts as an A2A receptor agonist and is recommended for patients with obstructive airway disease or asthma. Regadenoson has a substantially longer half-life than adenosine, and its effects may endure for up to 30 minutes.

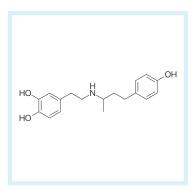


Fig. 1.7 - Dobutamine

Dobutamine. in contrast to Adenosine and Regadenoson, is a positive chrono-trope, and can induce myocardial ischemia by increasing demand for oxygen. Dobutamine may be administered either as "low dose" to determine myocardial viability, or a "high dose" to induce myocardial ischemia manifested as myocardial wall motion abnormalities. Wall motion and perfusion irregularities that might not be evident under non-stressed conditions.

Late Gadolinium Enhancement (LGE) Pulse Sequences

The standard LGE pulse sequence typically is performed using a T1-weighted rapid GRE sequence combined with an inversion- recovery pre-pulse designed and timed to null the signal of normal myocardium.


The images from this sequence demonstrate high contrast between normal myocardium (that is dark or "nulled") and abnormal myocardium (that is bright or "hyper-enhanced").

The sequence relies on choosing a correct inversion time (TI) to optimally suppress the signal from the normal myocardium, and is typically on the order of ~250ms, though can be longer with greater time from administration of contrast agent and image acquisition.

Phase Sensitive Inversion Recovery:

- A newer version of the sequence, called **Phase Sensitive** Inversion Recovery (PSIR), has gained in usage as it requires less precision in choice of T1, thereby allowing more consistently optimized image quality.
- The change in the longitudinal magnetization (Mz) in the infarcted and normal myocardium after a non-selective RF pre-pulse.
- The optimal inversion time (TI) is the time between the RF pulse to the time when the Mz of the normal myocardium is zero (null point). The image data acquisition occurs at this null point so that the signal of the normal myocardium appears dark, whereas the signal of the infarcted myocardium appears bright.

Fig. 1.8 - Phase Sensitive Inversion Recovery (PSIR) Sequence

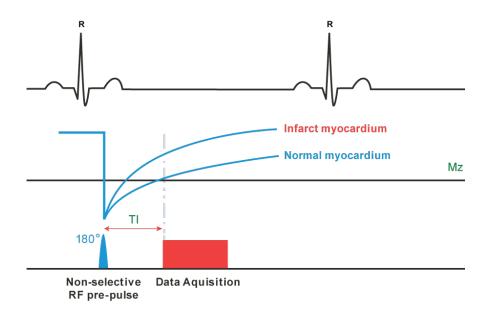

Phase-Contrast Flow Sequence

A 2D phase-contrast velocity-encoded MRI sequence is a type of MRI technique that can measure the velocity of moving protons, such as those in blood vessels. It works by applying a pair of phase encoding pulses that are opposite in polarity, though equal in magnitude. Stationary protons will have no net change in phase, while moving protons will collect a net phase change between the pulses with the difference being proportional to the velocity of the protons.

The sequence requires the selection of a velocity encoding (VENC) parameter, that determines the maximum velocity that can be measured without aliasing. The VENC should be chosen according to the expected flow velocity in the region of interest. For example, typical flow in the ascending aorta may be 1-1.5 meters/sec, but higher velocities may be encountered in patients with hyperdynamic circulation.

The sequence typically also requires the selection of an imaging plane ("through plane") that is perpendicular to the main direction of flow, to avoid errors due to flow obliquity. Imaging may also be performed "in plane", such as to measure aortic stenosis velocity, or in coarctation of the aorta.


The sequence generates two types of images: magnitude, and phase images.

- The **magnitude image** is comparable in appearance to a gradient-echo cine image.
- The phase image contains the velocity information and shows the flow as high or low signal depending on direction, and the background stationary tissue as intermediate grey.

The sequence quantifies the flow by plotting the velocity versus time for a region of interest and calculating the net flow for each cardiac cycle.

The velocity-encoded imaging data is usually acquired over several cardiac cycles during a breath-hold, though free-breathing and single cardiac cycle data can be acquired, though with coarser temporal resolution.

Fig. 1.9 - Phase-Contrast Flow Sequence

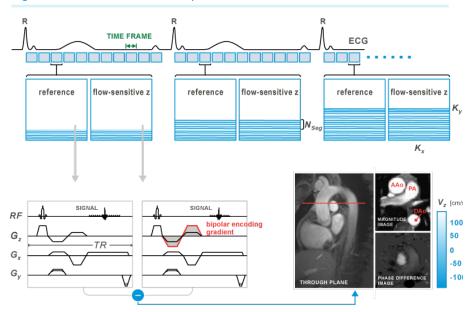


"Whole Heart MRA" **Pulse Sequence**

A Whole Heart MRA is a type of gradient echo MRI pulse sequence (otherwise known as an SSFP MRA sequence) that can generate high-resolution images of blood vessels without using contrast agents. It works by maintaining a steady residual transverse magnetization (Mxy) between successive cycles of radiofrequency pulses and gradients.

The sequence has various clinical applications, such as evaluating the aorta and coronary arteries, and detecting vascular anomalies.

The sequence can also be modified by using inversion recovery (IR) pulses or T2-preparation pulses to enhance the arterial signal and suppress the venous signal. The sequence has some advantages over contrast-enhanced MRA, such as avoiding contrastrelated risks, potentially reducing scan time, and improving image quality.


Fig. 1.10 - How to Set up for Whole Heart

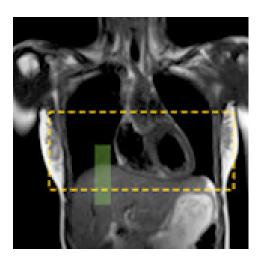

Simplified pulse diagram for SSFP MRA:

• The balanced steady-state free precession sequence employs symmetrical gradients to reverse phase shifts and signal variations (depicted as the black box). This process results in minimal signal loss and the merging of stimulated echoes with free induction decay.

Fig. 1.11 - bSSFP Diagram

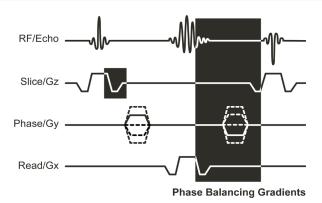

CE-MRA Pulse Sequence

Contrast-enhanced MR angiography (CE-MRA) is similar to contrast-enhanced CT angiography, though is performed following intravenous injection of a gadolinium-based contrast agent (instead of an iodine-based compound, as in computed tomographic angiography).

Once the contrast bolus arrives in the vessel of interest, imaging is performed using a rapid 3D T1-weighted spoiled gradientecho pulse sequence. TR and TE are generally made as short as possible, and gradient-moment nulling is not used.

A wide receiver bandwidth (resulting in a short sampling time) is typically employed in conjunction with partial k-space acquisition and parallel imaging.


T1- Mapping

T1-mapping is a technique performed to quantify the T1 values of tissue before or after contrast administration. The most commonly used techniques are Look Locker imaging: Modified Look Locker Inversion recovery (MOLLI), and shortened MOLLI (ShMOLLI).

The number and orientation of slices obtained will depend upon the indication, though the most common approach is 3-5 short-axis slices that are 6-8 mm thick and have in-plane spatial resolution of 1.6-2.0 mm. Diastolic acquisition is best with the exception of patients in atrial fibrillation where systolic acquisition may be preferred. In patients with higher heart rates, specific sequences designed for these higher heart rates may be used.

When T1-mapping is performed in the absence of contrast agents it is known as "native" T1-mapping. T1-mapping can also be performed both prior to contrast and again between 10- and 30-min post gadolinium contrast administration. When this T1 data is integrated with the patient's hematocrit value the Extracellular Volume (ECV) fraction can be determined. Note that the hematocrit should be measured ideally within 24 h of imaging for the most accurate (ECV) measurement.

Fig. 1.12 - T1-Mapping

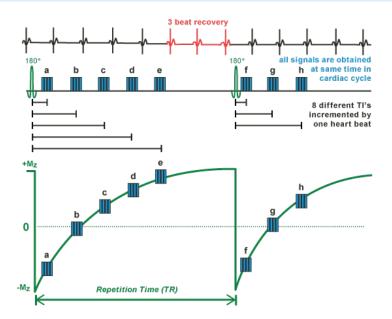

T2 STIR-Weighted Imaging:

Black-blood T2-weighted imaging with Short Tau Inversion Recovery (STIR) is a technique used to preferentially highlight areas of myocardial edema, such as in the setting of myocarditis or acute myocardial infarction

The sequence may be performed in either longor short-axis, and is acquired during a breathhold in diastole.

However, note that this sequence may be prone to artifacts as a result of field heterogeneity, motion, or inadequate thickness of the preparatory pulse, particularly in short-axis slices at the base of the left ventricle. Further artifacts may occur as bright signal intensity in areas of slow flow, such as along the subendocardial border in the left ventricular apical region.

T2-mapping & T2-weighted (T2w) Imaging

T2-mapping, similar to T1-mapping, is performed where quantitation of T2 values is desired, typically in settings where myocardial edema is suspected.

There are two primary pulse sequences employed: a T2-prepared SSFP sequence (T2prep), and a fast Gradient and Spin-Echo (GraSE) pulse sequence. In general, the T2prep sequence may be preferred, as it can be performed in a breath-hold.

The number and orientation of slices obtained, again similar to T1-mapping, will depend upon the indication, though the most common approach is 3-5 short-axis slices that are 6-8 mm thick and have in-plane resolution of 1.6-2.0 mm. Diastolic acquisition is again preferred with the exception of patients in atrial fibrillation where systolic acquisition may be optimal.

T2* Imaging

T2* (pronounced T2-"star") is a technique optimized for rapid determination of tissue iron deposition. This sequence is typically used in patients who have had multiple blood transfusions and are at risk of excessive iron deposition in the myocardium, which can lead to heart failure and death. These patients include those with beta thalassemia, sickle cell disease, and other rare anemias.

The pulse sequence is a single breath-hold, gradientecho scan with a series of 6–9 iterated echoes typically beginning at \sim 2 msec and extending to \sim 16 msec. A single short-axis slice at the mid ventricular level is acquired with a slice thickness of 8mm and an in-plan spatial resolution of ~2mm.

Optional: determination of liver iron deposition can also be obtained by acquiring an axial slice through the midhepatic level. As the liver does not move no ECG-gating is required, and the echo times may be slightly shorter and more closely spaced. This tighter spacing of echo times may be useful for more accurate determination of iron quantification in those patients with severe iron deposition.

PART II:

Tips & Tricks

Patient Preparation


For cardiac imaging the typical field strength of MRI scanners employed is 1.5 T or 3 T. However, promising work is being performed on both lower and higher field strength systems, which may usher in newer capabilities.

- 1. Screen the patient for devices, implants and other patient-specific risks/safety considerations.
- 2. Request the patient to use the rest room before the study.
- Clean skin for optimal ECG lead contact. Shave hair as needed.
- Attach the ECG leads to the patient, and check the ECG trace to ensure adequacy of the ECG signal.
- **5.** Position the respiratory bellow, as appropriate.
- 6. A cardiac imaging specific surface coil with multiple coil elements (typically ≥8 elements) is highly recommended, and is required to employ parallel acceleration techniques that reduce scan and breath-hold times.
- 7. ECG-gating hardware and software are required, and in our experience the inclusion of vector-cardio graphic gating is preferred. ECG-gating capabilities should include the ability to perform prospective, retrospective, and triggered gating techniques.
- **8.** A 20- or 22-gauge Intravenous (IV) catheter is often sufficient. When there is need for rapid injection of contrast, such as in myocardial perfusion exams or MRA acquisitions, an 18-gauge IV catheter may be preferred.
- 9. An MRI compatible power injector is preferred for rapid injection of contrast agent.
- 10. Prepare the injector with an appropriate dose of contrast.
- 11. Inform the patient about breath-holding steps and have them practice. Our preference for breath-holding instructions is to have the patient breathe in, breathe out, breathe in again, and breathe out half way and hold. This allows the patient to have enough air remaining in the lungs to not struggle with the breath-hold, and to allow them to be consistent in their efforts.
- **12.** Place the surface coil over the patient's chest.
- **13.** Supply patient with disposable earplugs or MR-safe headphones.

Electrocardiographic Gating:

Cardiac gating uses the electrical signal detected by leads placed on the patient's chest to trigger and coordinate the MRI pulse sequence data collection. For example, the data acquisition is triggered by each R-wave and is stopped after the prescribed imaging data has been collected. In this way, each image, or image phase is acquired at the same portion of the cardiac cycle, so that blurring from cardiac motion is minimized or eliminated.

Fig. 2.1 - Lead Placement Chart

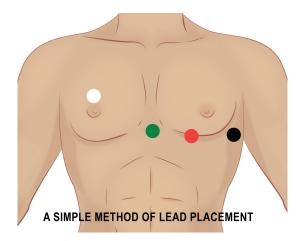

Accurate ECG gating is crucial to optimize image quality.

- 1. Clean patient skin by removing grease, or natural oils that may prevent leads from proper attachment
- 2. Ensure that electrodes are firmly attached to the chest wall.
- 3. In male patients shave any chest hair in the region of the interest.
- 4. There are usually four leads that are color-coded for easy use. Some systems may only use three leads. Directions on lead placement are usually given by the manufacturer.

- 5. If the trace on the ECG monitor is poor try re-positioning of the leads in different order or different locations on the chest in an effort to improve the trace.
- 6. Keep electrodes packed/unopened until you need them. By doing this, we prevent the contact gel from drying out.
- 7. Patient body habitus, previous surgery, and pathology can affect the cardiac axis, potentially impacting your trace. Reposition lead placement accordingly.
- 8. Leads should not form a loop, as this could potentially cause a radiofrequency burn.
- 9. Electrodes must be MRI safe, as radiofrequency burns have been associated with electrodes featuring metal connectors.

After the above steps have been taken, if the ECG trace remains poor, consider changing to peripheral pulse gating, or consider single-shot techniques for static imaging, real-time cine imaging to improve image quality.

Fig. 2.2 - Normal ECG



Different Types of Arrhythmias:

Fig. 2.3 - Atrial Fibrillation

Atrial Fibrillation (A-Fib, or AF) is the most common sustained arrhythmia, and presents unique challenges to CMR. Patients with small beat-to-beat variability may be imaged with minimal adjustments, while those with large beat-to-beat variability can be challenging to image well.




Fig. 2.4 - Premature Ventricular Contraction

Premature Ventricular Contraction (PVC) denotes a heartbeat that happens earlier than it should, and can result in blurring, particularly for cine imaging.



Fig. 2.5 - Bigeminy

Bigeminy is a heart rhythm where a normal beat and an ectopic beat occur in pairs repeatedly.



The quality of MRI ECG traces vary according to rate, rhythm, cardiac output, and body habitus.

Factors that affect and alter the ECG trace:

- Poor cardiac output
- Arrhythmias
- Early repolarization
- Left ventricular hypertrophy
- Mvocardial ischemia and infarction

- Left ventricular aneurysm
- Pericarditis
- Hyperkalemia
- Hypothermia
- Pulmonary Embolism

Tips & Tricks

Patient unable to hold breath-holds consistently

- Reduce number of slices acquired per breath-hold
- Reduce number of phases for each breath-hold
- acquisition matrix (increases voxel size)
- Reduce FOV (reduces number of phase-encoding steps)
- Use parallel imaging
- Acquire images in inspiration instead of exhalation
- Increase NSA (performing non-breath-hold scans)
- Provide supplemental oxygen via nasal cannula

Arrhythmias

- Use arrhythmia rejection
- Use **Prospective triggering** (acquires data during a specific acquisition window between R-waves)
- Use Real-time imaging
- Use **Peripheral pulse gating** (note that peripheral pulse gating detects the pulse wave of the blood at the tip of the fingers or toes. As there is a delay in the beginning of image acquisition, cine data will start being acquired typically during mid-diastole. For static images, such as black-blood imaging, or LGE, there will be a need to incorporate an altered trigger delay to acquire images in the appropriate portion of the cardiac cycle.

Devices: Pacemakers & ICDs

There has been increasing demand to scan patients with implanted devices such as pacemakers and implantable cardioverter-defibrillators (ICDs). As a result of their metal components and associated artifacts, these devices can pose additional challenges in CMR. Prior to and after the CMR exam the pacemaker or ICD must be checked, and placed into an appropriate mode for MRI scanning by an experienced device technician, electrophysiologist or device representative.

During the CMR exam, for safety purposes, the patient ideally will have continuous ECG, BP, and oxygen saturation monitoring, and will be in frequent communication with the MRI technologist.

The imaging challenges that are faced include pronounced susceptibility and other artifacts.

To minimize these artifacts, a number of approaches can be used including:

- 1. Use of a frequency scout to demonstrate the optimal center frequency off-set
- 2. Use of specially designed wide bandwidth ("wide band") pulse sequences
- 3. For cine imaging limiting the use of SSPF sequences and instead switch to GRE cine sequences that are less susceptible to field heterogeneities.
- 4. Have the patient raise their arm over their head in an effort to move the generator box farther away from the heart.
- 5. Consider using skin tape to move the generator box more superiorly and/or laterally to be farther from the heart.
- 6. Retained, temporary epicardial pacing wires are fine, thin wires placed during surgery that are typically removed a few days post-surgery. Occasionally these wires are not able to be removed and are instead cut off at the skin surface with the wires remaining in the chest. These fine, thin wires are not felt to pose any significant hazard and patients with such retained wires can safely undergo a CMR examination.
- 7. Temporary transvenous pacing systems are considered to pose a significant risk due to their long, bulky leads along with the presence of an external generator box. Patients with transvenous pacing systems should not undergo MRI examinations while the device and lead(s) are in place.

CMR Safety

The magnetic resonance imaging environment has the potential to pose serious risks to patients and facility staff in several ways.

To promote awareness and understanding of MR safety guidelines, adhere to ACR and Institution safety policies and procedures.



MR Safe - A designation indicating that the object or device is safe in all MR environments, without conditions. It is reserved for nonmetallic, nonconducting, and nonmagnetic objects that pose no known hazards in any MR environment.



MR Conditional - A designation indicating that the object or device may be safely used in the MR environment, provided the conditions for safe use are met. Decisions based on published MR Conditional or safety claims should recognize that all claims apply to specifically tested static field and spatial gradient field strengths and only apply to the precise model, make, and identification of the tested object.



MR Unsafe - A designation indicating that the object or device is known to present safety risks in the MR environment. These are primarily ferromagnetic objects, implant, device, or objects discovered during MR examination.

MRI Zones


Fig. 2.6 - MRI Zones

Zone I: Facility Entrance - This region includes all areas that are freely accessible to the general public. This area is typically outside the MR environment itself and is the area through which patients, health care personnel, and other employees of the MR facility access the MR environment.

Zone II: Reception - This area is the interface between the publicly accessible, uncontrolled Zone I and the strictly controlled areas of Zones III and IV. Typically, patients are greeted in Zone II and are permitted to move freely throughout, under the supervision of MR Personnel, prior to entry into Zone III. It is recommended that patient preparation for the MRI examination take place in Zone II. This preparation includes MRI screening, medical history, and appropriate patient gowning.

Zone III: Reception - The MR control room only approved MR personnel and patients that have undergone MRI screening are allowed in this zone.

Zone IV: Magnet - The MR scanner room

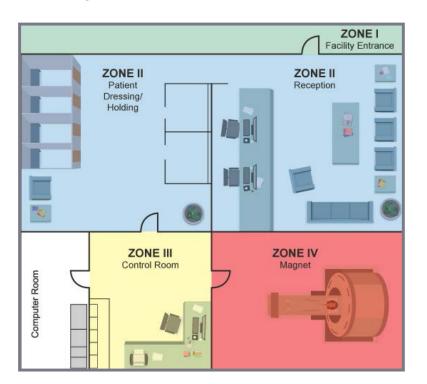

Gadolinium Based Contrast Agents (GBCA)

MRI contrast agents are used to improve the detection and visualization of both normal and abnormal anatomy and conditions. The contrast agents that are commonly used in CMR incorporate a rare earth metal called Gadolinium.

This metal is from the Lanthanide series, has seven unpaired electrons, and strong paramagnetic properties that markedly reduces the T1 relaxation of the surrounding protons, thus increasing the signal intensity on T1-weighted images.

Care must be taken when using contrast agents, as free Gadolinium is toxic to the body when injected, and can deposit in multiple tissues with wide-ranging effects on those tissues.

To make Gadolinium safe for injection into the blood stream for CMR exams, the Gadolinium is "chelated" with larger molecules that bind the Gadolinium tightly, yet allow it to exert its paramagnetic properties and reduce the T1 relaxation on surrounding protons.

There are two categories of commonly used CMR Gadoliniumchelate contrast agents: those with a linear structure, and those with a macrocyclic structure, the latter of which are considered to be the most stable, and therefore safest for use. Below is a table of some commercially available contrast agents that includes their structure, reflexivity, and some physicochemical properties.


| Brand Name | T1 Relaxivity | Osmolality (mOsm/kg) | Viscosity (cP) | Structure |
|------------|------------------|-------------------------|-------------------|-------------|
| Magnevist | 4.1 | 1960 | 2.9 | Linear |
| MultiHance | 6.3 | 1970 | 5.3 | Linear |
| Omniscan | 4.3 | 789 | 1.4 | Linear |
| OptiMARK | 4.7 | 1110 | 2.0 | Linear |
| Dotarem | 3.6 | 1350 | 2.4 | Macrocyclic |
| ProHance | 4.1 | 630 | 1.3 | Macrocyclic |
| Gadavist | 5.2 | 1603 | 5.0 | Macrocyclic |

Contrast Enhancement

Gadolinium based contrast agents distribute in the interstitial and extracellular spaces in the myocardium within minutes after intravenous injection. Both healthy and diseased myocardium will take up gadolinium contrast and exhibit enhancement depending on the pulse sequence used.

- Contrast washout and uptake within the myocardium can depend on multiple factors such as acute heart disease, myocardial blood supply, heart rate, hematocrit, and renal function.
- Hyper-enhancement is a term used to denote the increased signal intensity of irreversibly damaged myocardium (whether chronic scar tissue or acutely infarcted myocardium), in contrast to the "nulled" or dark normal myocardium.
- Within the first 3 minutes the signal intensity related to contrast concentration in tissues is significantly different between and among the blood pool, normal myocardium, and ischemic myocardium (when a vasodilator has been given). Later, that differentiation diminishes substantially among these tissues, while the slower wash-in and wash-out rate of infarcted myocardium allows gadolinium to accumulate and demonstrate a clear contrast between the blood pool and healthy myocardium.

Fig. 2.8 - Contrast Enhancement

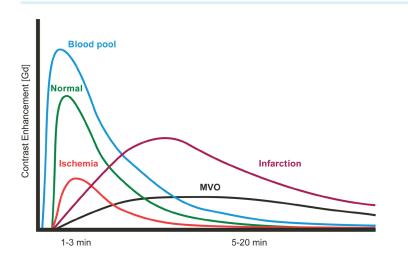


Obtaining accurate conventional 3D contrast

Enhanced MRA for assessing the arterial system with minimal venous contamination relies on the precise timing of contrast material injection. To optimize the quality of images, several parameters must be adjusted, including the volume of contrast material and the amount of saline to follow, delivery rate, scan timing, and sequence duration.

- To ensure excellent image quality and a satisfactory contrast- to-noise ratio, the timing of the sequence is crucial. This means that the acquisition of the center of K-space should align with the peak phase when the contrast material reaches its maximum concentration in the vessel of interest.
- Filling the center portion of K-space prior to peak contrast concentration can lead to artifacts such as ringing or banding. Alternatively, if the images are acquired too late, the blood pool will be in an equilibrium phase and the arterial and venous anatomy will have lesser signal intensity than is optimal.

Fig. 2.9 - Enhanced MRA

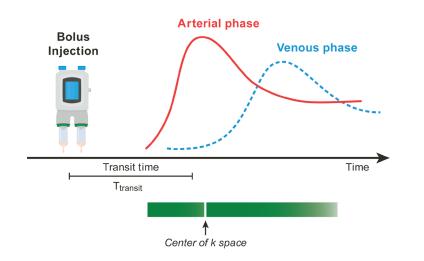

CMR in Pregnancy

Pregnant patients are able to undergo an MRI at any stage of pregnancy, however, both the American College of Gynecology and Obstetrics and the American College of Radiology recommend that performance of MRI in pregnant patients should be evaluated on a case-by-case basis. While there are no known deleterious effects of MRI on a developing fetus, potential effects can not be completely excluded. As a result, any MR imaging performed should be kept to the minimum necessary to answer the relevant clinical question and provide medical benefit to the patient and/or fetus.

In general, gadolinium should not be administered to a pregnant patient. The administration of a gadoliniumbased contrast agent is associated with an increased risk of a broad set of rheumatological, inflammatory, and infiltrative skin conditions, and for as well as, stillbirth or neonatal death, according to a recent Canadian study (Ray JG, et al. JAMA 2016;316(9):952-961).

When considering an MRI in a pregnant patient, following appropriate assessment of the clinical question, a riskbenefit analysis should be documented in the patient's medical record and in the imaging physician's report indicating that the study being performed was warranted. Patient informed consent should be obtained for studies performed in the first and second trimesters, and considered when in the third trimester.

The scans should be as short as possible, with only the essential images acquired. Every attempt should be made to minimize the delivery of FR energy to the pregnant patient. SSFP sequences should be avoided due to the higher RF power deposition.

Artifacts

Bo-field heterogeneity

- Causes signal loss and spatial distortion due to resonance frequency offsets and causing distortion between tissues, and frequently noted involving the heart and lungs.
 - 1. Tighten shimming around the heart and use center frequency adjustment
 - 2. Offset frequency (=50Hz) of the scanner center-frequency
 - 3. Apply wideband, which can reduce banding artifacts

Cardiac Motion

- Caused by ectopic heart beats or arrhythmias
 - 1. Apply signal averaging
 - 2. Motion compensated pulse sequences

III. Breathing Motion

- Inconsistencies between different segments of the acquisition can lead to the appearance of ghosting artifacts on the reconstructed images.
 - 1. Use parallel imaging to shorten acquisition time
 - 2. Signal averaging
 - 3. Decrease scan time

IV. Blood flow

- Caused by increased phase shifts between lines of k-space acquisition.
 - 1. Using pulse sequences with flow compensation gradients
 - 2. Suppression of the blood signal with saturation pulses applied parallel to slices
 - 3. Cardiac triggering
 - 4. Swapping phase and frequency encoding directions

Gibbs Ringing

- This artifact manifests as fine parallel lines adjacent to high-contrast interfaces.
 - 1. Increasing the number of phase-encode steps
 - 2. Use of fat suppression

VI. Aliasing

- When blood flow velocity exceeds the chosen velocity encoding
 - 1. Increase velocity encoding setting

VII. Chemical shift

- Mis-registration between fat and water
 - 1. Shortening the echo time
 - 2. Decrease the voxel size

VIII. Susceptibility artifacts


- Can be caused by sternal wires, artificial heart valve, coils, stents, etc.
 - 1. Shorten the echo time
 - 2. Decrease voxel size
 - 3. Increase bandwidth
 - 4. Aligning the phase-encoding direction with susceptibility gradients
 - 5. Parallel imaging
 - 6. If using SSFP sequences switch to GRE sequences (less sensitive to field distortion and heterogeneity)

At 3T artifacts are more problematic due to Bo and B1 field inhomogeneities.

IX. Black Bounding Artifacts

- Also known as India Ink, result from the presence of fat and water protons within the same imaging voxel.
- This artifact is present in bSSFP sequences.
- The different resonant frequencies of fat and water spins result from their different chemical compositions. When fat and water spins are imaged together, their resonant fr quencies can be slightly offset from each other, resulting in their signals being out of phase. This leads to signal cancellation in areas where fat and water are closely adjacent to each other, creating a dark band or loss of signal and image distortion. This effect is more pronounced at higher magnetic field strengths.
 - 1. Increasing the bandwidth can help minimize these artifacts.
 - Switch to GRE sequence (solid gradient echo).
 - 3. Implementing tighter shimming can also be beneficial.

Fig. 2.9 - Enhanced MRA

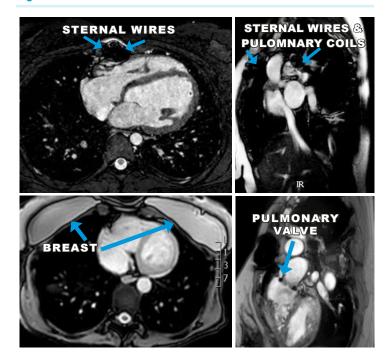

PART III:

Cardiac MRI Scan Planning

This chapter is aimed to provide you with a comprehensive overview of Cardiac MRI scan planning. We will delve into the fundamental aspects of cardiac MRI scan planning, catering specifically to those who are new to this imaging modality. Whether you are a beginner or seeking to expand your expertise, we hope this chapter will serve as a valuable resource in your quest for knowledge in this exciting field.

The understanding of basic cardiac scan planning is crucial for obtaining accurate and meaningful results. and to gather the essential cardiac information.

We will discuss the considerations for patient preparation, explore the key steps involved in planning a cardiac MRI scan, and highlight the essential imaging sequences used.

This chapter will ensure that the reader is optimizing the potential of this imaging technique and delivering accurate results to assist in patient management.

By the end of our journey, you will be equipped with the knowledge and skills needed to confidently plan and execute cardiac MRI scans, thus contributing toward improved patient care and outcomes.

Let's Dive in.

Cardiac Imaging Modules

The majority of cardiac MRI examinations can be accomplished with a standard set of Survey, Cine, LGE, and Qflow sequences.

Additional sequences such as perfusion, tissue characterization, and MRA may be included to further complement examinations or for research purposes at specific centers. We have developed modules of pulse sequences that take one through the planning and implementation of image acquisition in a standardized and reproducible format.

This section will take you through these modules in a descriptive and graphic approach that will allow you to establish the basic building blocks of CMR examinations.


In the following section, Part IV, we will apply, combine, and integrate these modules for specific disease indications.


For each module a series of image sequences will be described. At the beginning of each sequence an abbreviated sequence name is highlighted in yellow within brackets that we use as naming conventions, and to allow for consistent protocol set up and ease of image post-processing.

Survey Module

- Survey, and Axial Bright-blood and Dark-blood imaging of the Chest. We use these images to give us, "The Lay of the Land". Essentially, an understanding of how the heart and vascular structures lie within the chest, and to use these as a benchmark to set up subsequent dedicated imaging of the heart and vascular structures using a variety of pulse sequences.
 - 1. [SURVEY] Axial/Sagittal/Coronal Scouts using GRE or SSFP
 - 2. [SSFP Ax] Axial stack of single-shot SSFP through the chest using 8 mm thick slices and 2 mm gap (Non-ECG- gated; Breath-held).
 - 3. [BB SSh Ax] Axial stack of HASTE (Single-shot Turbo Spin-echo) through the chest using 8 mm thick slices and 2 mm gap (ECG gated; Free breathing).

Fig. 3.1 - Coronal. Axial, and Sagittal Scouts)

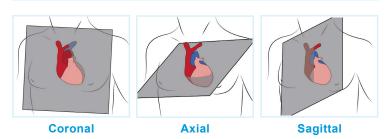

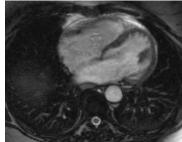


Axial Single Shot SSFP (Non ECG-gated, breath-held)



Axial Dark Blood HASTE (ECG-gated, free breathing)

- Using the [SURVEY] images (Coronal, axial, and sagittal images) the axial bright-blood [SSFP Ax] and dark-blood [BB SSh Ax] image sequences will be positioned. Typically, 24 slices will be acquired for each sequence. Additional slices can be added as needed for larger patients, or special conditions.
- Ensure that the imaging range covers from just above the top of the lungs to the upper third of the liver.
- These are single-shot, single heart-beat acquisitions for each slice.

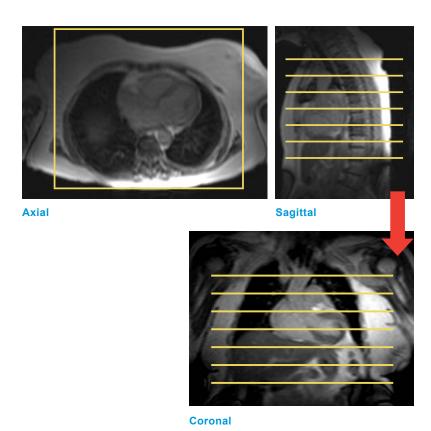


Cine Module

- Cine imaging of the Ventricles, with a focus on the Left Ventricle in long and short axis orientations, typically using SSFP sequences.
- The goal is to obtain long and short axis cine images that are orthogonal to the axes of the left ventricle. These imaging planes are doubly oblique relative to the conventional axial, sagittal, and coronal axes of the body.
- Positioning will differ from patient to patient because of the unique orientation of the left ventricle within each individual's chest.
 - 1. [CINE VLA SSFP] Vertical Long Axis Cine (all cine sequences set to 8 mm thick slices with 2mm gap; <45msec temporal resolution or better; retrospective ECG-gating)
 - 2. [CINE HLA SSFP] Horizontal Long Axis Cine
 - 3. [CINE SA STACK SSFP] LV Short Axis Stack of Cines
 - [CINE 4CH SSFP] 4-Chamber Cine
 - [CINE LVOT SSFP] LVOT/3-Chamber Cine

A. Vertical Long Axis Cine:

Using the [SSFP Ax] images find the axial image that displays both the left and right ventricles along with the interventricular septum and prescribe the Vertical Long Axis imaging plane ([CINE VLA SSFP]) along the left ventricle long axis. Ensure that the slice runs from the middle of the mitral valve and through the apex of the left ventricle. In order to do so you may need to place the imaging plane "pivot point" on the mitral valve plane, find the axial image that includes the left ventricular apex, and then rotate the imaging plane so that it runs through the LV apex.

To ensure no phase wrap, check slice coverage on the coronal and sagittal localizers.

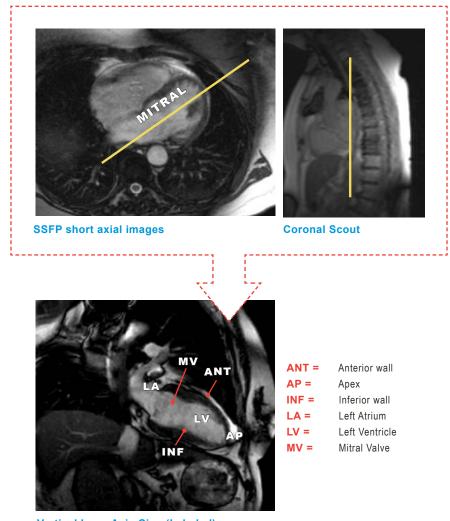


Vertical Long Axis Cine (Labeled)

B. Horizontal Long Axis Cine:


Using the [CINE VLA SSFP] image prescribe the Horizontal Long Axis Cine [CINE HLA SSFP] by aligning the slice orthogonal to the Vertical Long Axis with the imaging plane passing through the center of the mitral valve and continuing through the long axis of the left ventricle.

Do not necessarily have the imaging slice go through the apical tip of the left ventricle, as oftentimes the apex of the left ventricle is relatively downward pointing, which would make the imaging plane tangential, and not parallel to the left ventricular long axis. This is important to ensure that the subsequent short-axis cine images are perpendicular to the left ventricular long axis. To ensure no phase wrap, check slice coverage on the axial localizers.

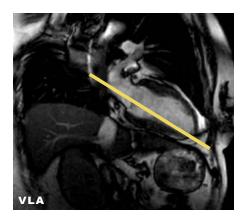

Align slice orthogonal to the VLA (2 Chamber) passing through the center of the mitral valve & left atrium and continuing through the left ventricle.

Prescribing HLA Cine

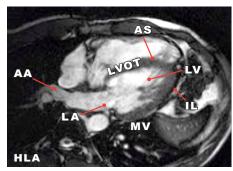


Horizontal Long Axis Cine


AA = Ascending Aorta AS = Anteroseptal wall AV = Aortic Valve IL = Inferolateral wall LA = Left Atrium LV = Left Ventricle LVOT = Left Ventricular **Outflow Tract**

C. LV Short-Axis Stack of Cines:

Using both the [CINE VLA SSFP] and [CINE HLA SSFP] images a stack of contiguous short-axis cine slices, [CINE SA STACK SSFP] is applied perpendicular to the left ventricular long-axis in both views that spans the entirety of the left and right ventricles.

At least one slice should be in the left atrium and one slice just beyond the apical tip to ensure complete coverage of the ventricular volumes and myocardium. To ensure no phase wrap, check slice coverage on both the axial and coronal localizers.

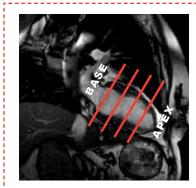


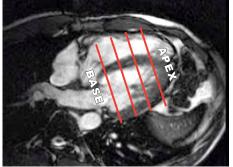

VLA Long Axis

HLA Long Axis

Short axis stack/Left ventricle volume should be planned off VLA & HLA views. Slices are perpendicular to the long-axis of the body of the LV. Acquire slices from base (mitral valve) to apex. 6-8mm thickness 2-4mm gap 12-16 slices depending on the length of the left ventricle.

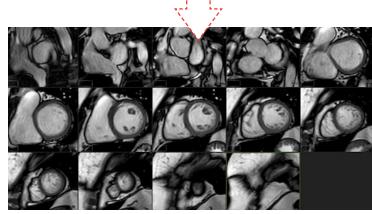


Axis Slices

D. 4-Chamber Cine:

Using a mid-ventricular slice from the stack of contiguous short-axis cine slices [CINE SA STACK SSFP] prescribe an imaging plane that courses through the center of the LV cavity and angles toward the acute margin of the right ventricle. As this imaging plane is being applied to the short-axis slice it should be parallel with the left ventricular long-axis.

To ensure no phase wrap, check slice coverage on the axial localizer.

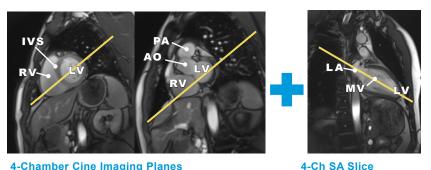

Aorta

Inferior Wall

Interventricular Septum Left Atrium


Left Ventricle

Mitral Valve Right Atrium

Right Ventricle Tricuspid Valve

Pulmonary Artery

4-Chamber Cine Imaging Planes

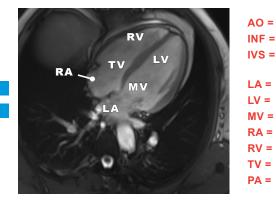


Cine Axial Localizer


E. Left Ventricular Outlow Tract (LVOT) Cine:

Using a basal slice from the stack of contiguous short-axis cine slices [CINE SA STACK SSFP] prescribe an imaging plane that courses through the center of the LV cavity and angles through the aortic root/valve. As this imaging plane is being applied to the short-axis slice it should be parallel with the left ventricular long-axis.

To ensure no phase wrap, check slice coverage on the axial localizer.

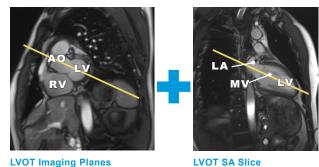


LVOT SA Slice

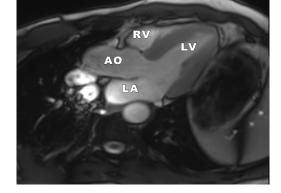

LVOT Cine Axial Localizer


III. LGE Module

- Delayed-enhancement imaging, now more commonly known as Late Gadolinium Enhancement (LGE) imaging is performed following administration of gadolinium contrast agent, typically 10-20 minutes after gadolinium is injected. The focus of this imaging sequence and module, similar to that of cine imaging, is to acquire images and gain information about the Left Ventricular myocardium in long and short axis orientations. There are multiple pulse sequences that have been adapted for LGE imaging, though the most commonly used sequence currently is the Phase-Sensitive Inversion-Recovery sequence, or PSIR.
- LGE images are acquired using the same slice positioning and orientation as the cine images (with the exception of not acquiring the HLA slice orientation). These image positions can be copied directly from the cine images, or using the embedded slice positions from the cine imaging.
- In preparation for the LGE imaging a Look-Locker sequence is acquired to determine the optimal nulling time (or "TI", the inversion time when the myocardium is nulled) that is used for the LGE sequences. The Look-Locker sequence is usually acquired as a single short-axis slice in the mid left ventricle.
 - 1. [IR TFE LL SA] Look Locker sequence for determining Inversion recovery time

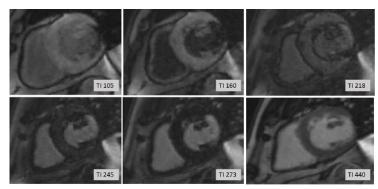


TI Time

2. [PSIR VLA] Phase sensitive inversion recovery – 2 chamber (all PSIR LGE sequences are set to 8 mm thick slices with 2mm gap; prospective ECG-gating; TI time determined from Look-Locker sequence)

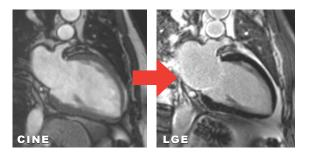

3. [PSIR 4CH] Phase sensitive inversion recovery - 4 chamber

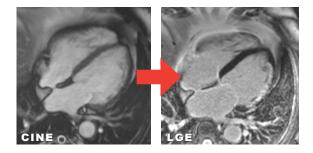

4. [PSIR LVOT] Phase sensitive inversion recovery – 3 chamber

