# Chapter 7 Wireless and Mobile Networks


#### A note on the use of these Powerpoint slides:

We're making these slides freely available to all (faculty, students, readers). They're in PowerPoint form so you see the animations; and can add, modify, and delete slides (including this one) and slide content to suit your needs. They obviously represent a *lot* of work on our part. In return for use, we only ask the following:

- If you use these slides (e.g., in a class) that you mention their source (after all, we'd like people to use our book!)
- If you post any slides on a www site, that you note that they are adapted from (or perhaps identical to) our slides, and note our copyright of this material.

Thanks and enjoy! JFK/KWR

All material copyright 1996-2016
J.F Kurose and K.W. Ross, All Rights Reserved

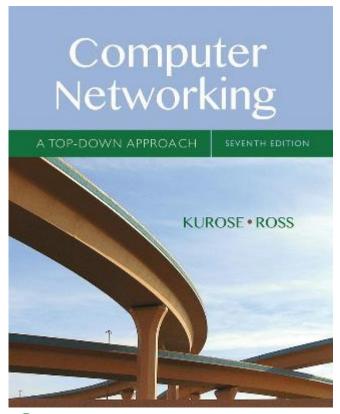

## Computer Networking: A Top Down Approach

7<sup>th</sup> edition
Jim Kurose, Keith Ross
Pearson/Addison Wesley
April 2016

### Ch. 6: Wireless and Mobile Networks

#### **Background:**

- # wireless (mobile) phone subscribers now exceeds # wired phone subscribers (5-to-1)!
- # wireless Internet-connected devices equals # wireline Internet-connected devices
  - laptops, Internet-enabled phones promise anytime untethered Internet access
- two important (but different) challenges
  - wireless: communication over wireless link
  - mobility: handling the mobile user who changes point of attachment to network

## Chapter 7 outline


#### 7.1 Introduction


#### **Wireless**


- 7.2 Wireless links, characteristics
  - CDMA
- 6.73 IEEE 802.11 wireless LANs ("Wi-Fi")
- 67.4 Cellular Internet Access
  - architecture
  - standards (e.g., 3G, LTE)


#### **Mobility**

- 7.5 Principles: addressing and routing to mobile users
- 7.6 Mobile IP
- 7.7 Handling mobility in cellular networks
- 7.8 Mobility and higher-layer protocols

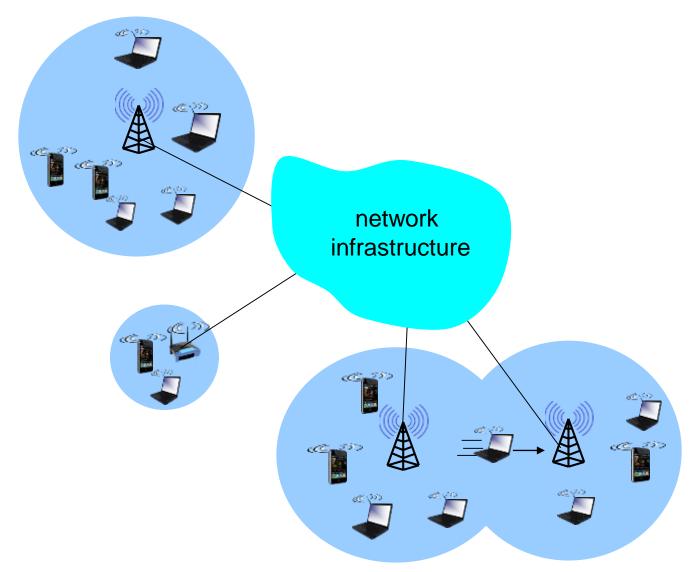


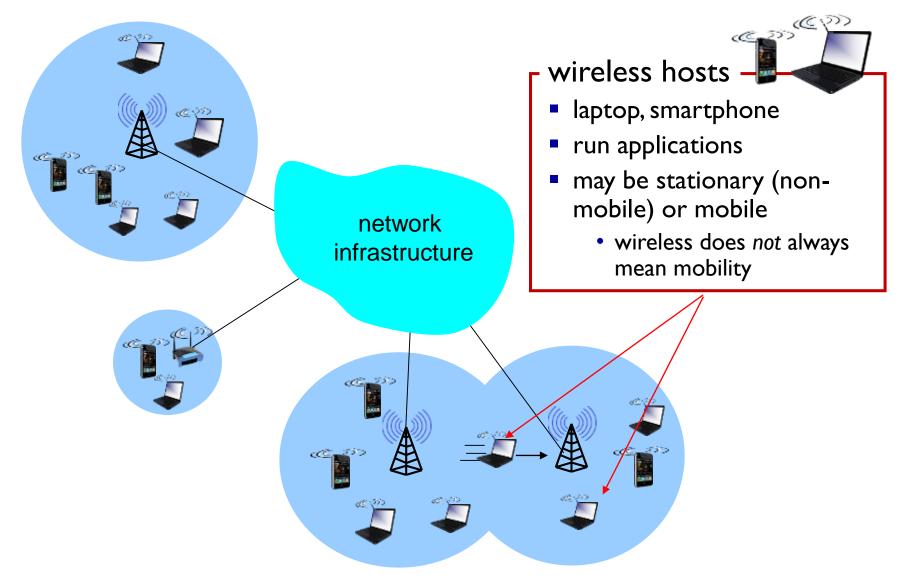


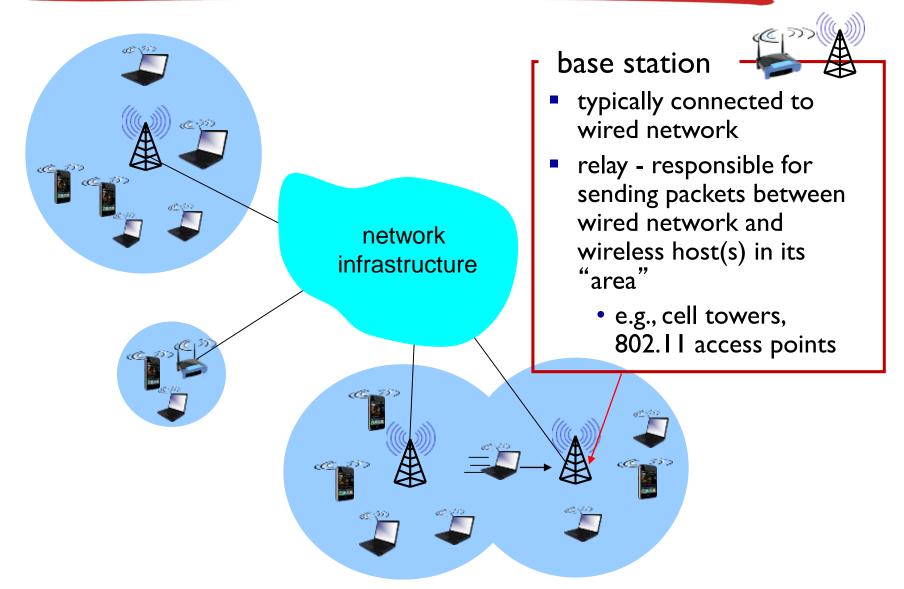


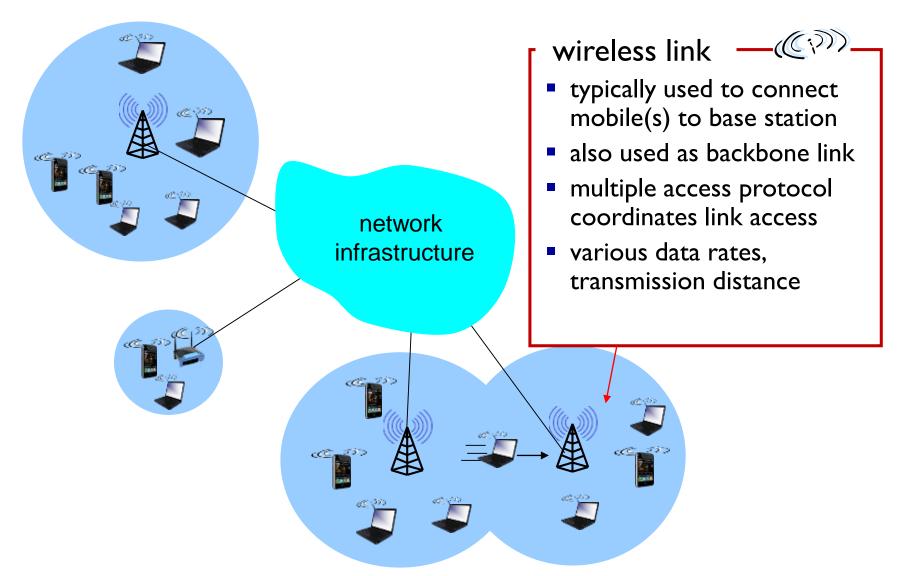

#### Characteristics of selected wireless links

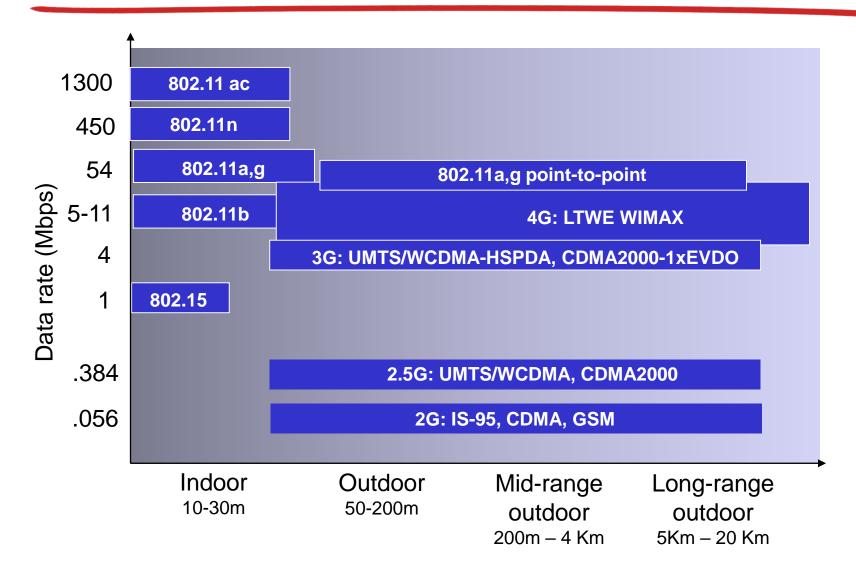

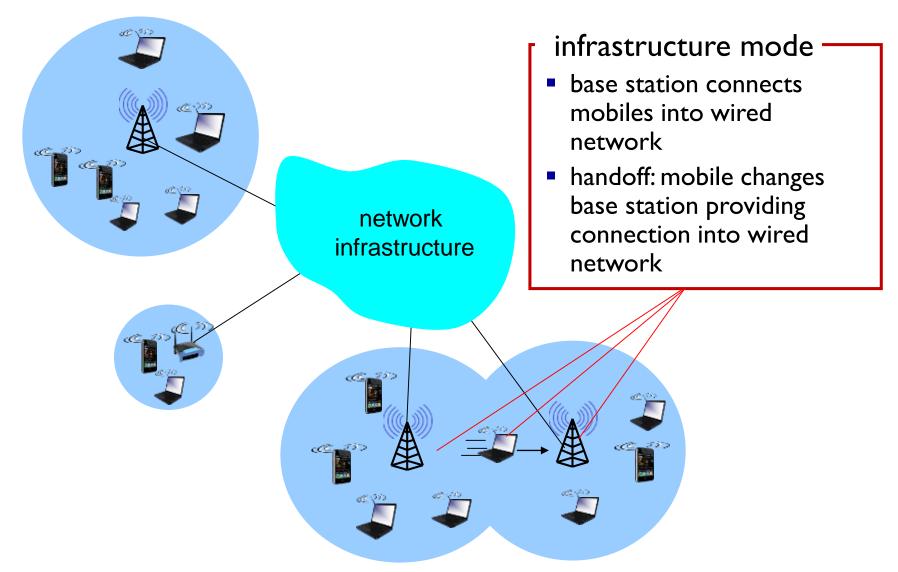

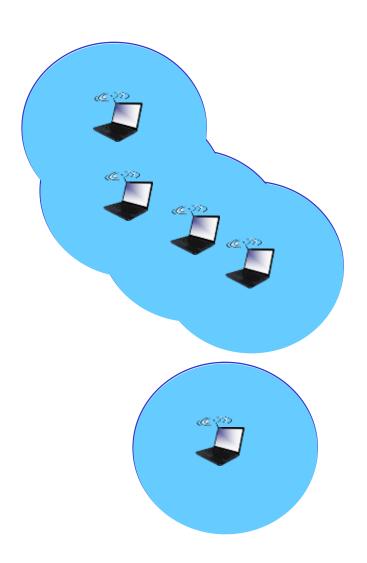

#### ad hoc mode

- no base stations
- nodes can only transmit to other nodes within link coverage
- nodes organize themselves into a network: route among themselves

## Wireless network taxonomy

|                               | single hop  | multiple hops  |
|-------------------------------|---|--|
| infrastructure<br>(e.g., APs) | host connects to<br>base station (WiFi,<br>WiMAX, cellular)<br>which connects to<br>larger Internet | host may have to relay through several wireless nodes to connect to larger Internet: mesh net  |
| no<br>infrastructure          | no base station, no<br>connection to larger<br>Internet (Bluetooth,<br>ad hoc nets)                 | no base station, no<br>connection to larger<br>Internet. May have to<br>relay to reach other<br>a given wireless node<br>MANET,VANET |

## Chapter 7 outline

#### 7. I Introduction

#### **Wireless**

- 7.2 Wireless links, characteristics
  - CDMA
- 7.3 IEEE 802.11 wireless LANs ("Wi-Fi")
- 7.4 Cellular Internet Access
  - architecture
  - standards (e.g., 3G, LTE)

#### **Mobility**

- 7.5 Principles: addressing and routing to mobile users
- 7.6 Mobile IP
- 7.7 Handling mobility in cellular networks
- 7.8 Mobility and higher-layer protocols

## Wireless Link Characteristics (I)


important differences from wired link ....

- decreased signal strength: radio signal attenuates as it propagates through matter (path loss)
- interference from other sources: standardized wireless network frequencies (e.g., 2.4 GHz) shared by other devices (e.g., phone); devices (motors) interfere as well
- multipath propagation: radio signal reflects off objects ground, arriving ad destination at slightly different times

.... make communication across (even a point to point) wireless link much more "difficult"


## Wireless Link Characteristics (2)

- SNR: signal-to-noise ratio
  - larger SNR easier to extract signal from noise (a "good thing")
- SNR versus BER tradeoffs
  - given physical layer: increase power -> increase SNR->decrease BER
  - given SNR: choose physical layer that meets BER requirement, giving highest thruput
    - SNR may change with mobility: dynamically adapt physical layer (modulation technique, rate)

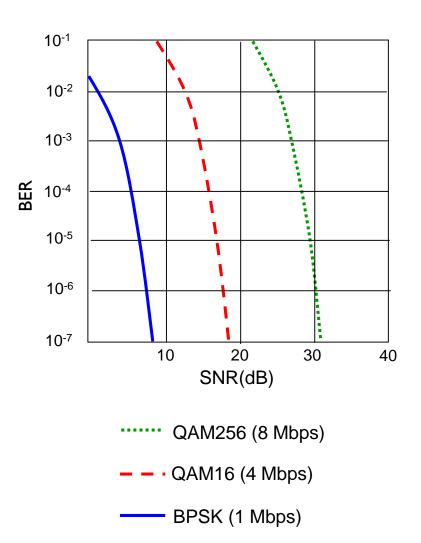


#### Wireless network characteristics

Multiple wireless senders and receivers create additional problems (beyond multiple access):

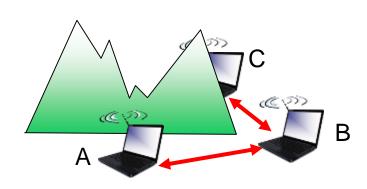

#### Hidden terminal problem

- B,A hear each other
- B, C hear each other
- A, C can not hear each other means A, C unaware of their interference at B

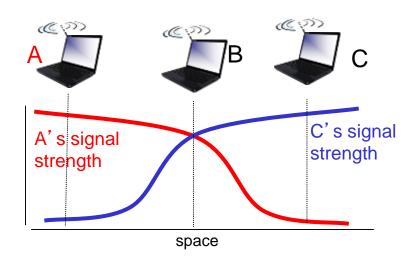

#### Signal attenuation:

- B,A hear each other
- B, C hear each other
- A, C can not hear each other interfering at B

## Chapter 7 outline

#### 7. I Introduction

#### **Wireless**

- 7.2 Wireless links, characteristics
  - CDMA
- 7.3 IEEE 802.11 wireless LANs ("Wi-Fi")
- 7.4 Cellular Internet Access
  - architecture
  - standards (e.g., 3G, LTE)

#### **Mobility**

- 7.5 Principles: addressing and routing to mobile users
- 7.6 Mobile IP
- 7.7 Handling mobility in cellular networks
- 7.8 Mobility and higher-layer protocols

## IEEE 802.11 Wireless LAN

#### 802.11b

- 2.4-5 GHz unlicensed spectrum
- up to 11 Mbps
- direct sequence spread spectrum (DSSS) in physical layer
  - all hosts use same chipping code

#### 802.11a

- 5-6 GHz range
- up to 54 Mbps

#### 802.11g


- 2.4-5 GHz range
- up to 54 Mbps

#### 802. I In: multiple antennae

- 2.4-5 GHz range
- up to 200 Mbps

- all use CSMA/CA for multiple access
- all have base-station and ad-hoc network versions

## 802.11 LAN architecture

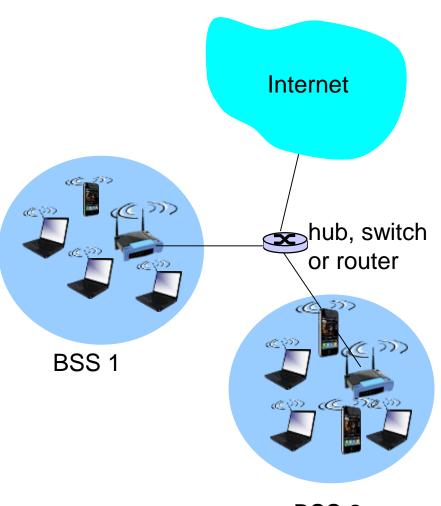


BSS 2


- wireless host communicates with base station
  - base station = access point (AP)
- Basic Service Set (BSS) (aka "cell") in infrastructure mode contains:
  - wireless hosts
  - access point (AP): base station
  - ad hoc mode: hosts only

## 802.11: Channels, association

- 802.11b: 2.4GHz-2.485GHz spectrum divided into 11 channels at different frequencies
  - AP admin chooses frequency for AP
  - interference possible: channel can be same as that chosen by neighboring AP!
- host: must associate with an AP
  - scans channels, listening for beacon frames containing AP's name (SSID) and MAC address
  - selects AP to associate with
  - may perform authentication [Chapter 8]
  - will typically run DHCP to get IP address in AP's subnet

## 802.11: passive/active scanning

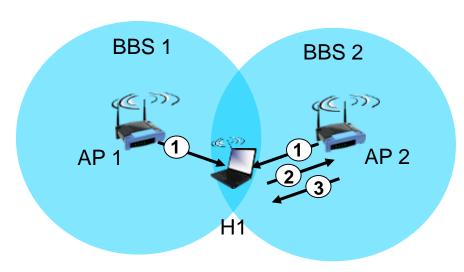

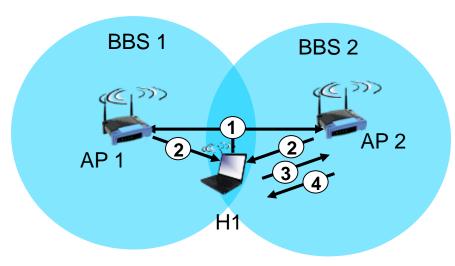

#### passive scanning:


- (I) beacon frames sent from APs
- (2) association Request frame sent: H1 to selected AP
- (3) association Response frame sent from selected AP to HI


#### active scanning:

- (1) Probe Request frame broadcast from H1
- (2) Probe Response frames sent from APs
- (3) Association Request frame sent: H1 to selected AP
- (4) Association Response frame sent from selected AP to H1

## IEEE 802.11: multiple access

- avoid collisions: 2<sup>+</sup> nodes transmitting at same time
- 802.11: CSMA sense before transmitting
  - don't collide with ongoing transmission by other node
- 802.11: no collision detection!
  - difficult to receive (sense collisions) when transmitting due to weak received signals (fading)
  - · can't sense all collisions in any case: hidden terminal, fading
  - goal: avoid collisions: CSMA/C(ollision)A(voidance)

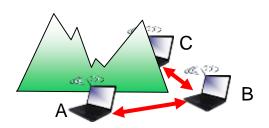

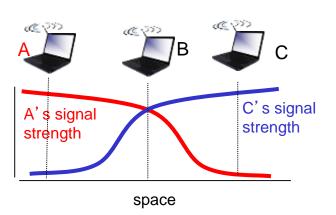

#### IEEE 802.11 MAC Protocol: CSMA/CA

#### 802.11 sender

1 if sense channel idle for **DIFS** then transmit entire frame (no CD)

2 if sense channel busy then


start random backoff time
timer counts down while channel idle
transmit when timer expires
if no ACK, increase random backoff interval,

802.11 receiver

- if frame received OK

repeat 2

return ACK after **SIFS** (ACK needed due to hidden terminal problem)

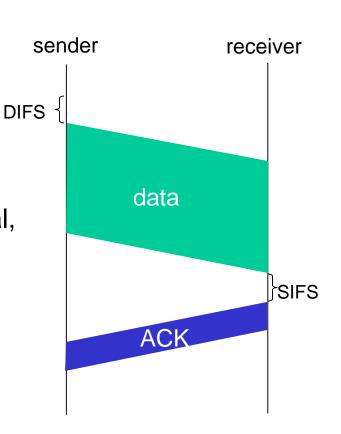


## Avoiding collisions (more)

idea: allow sender to "reserve" channel rather than random access of data frames: avoid collisions of long data frames


- sender first transmits small request-to-send (RTS) packets to BS using CSMA
  - RTSs may still collide with each other (but they' re short)
- BS broadcasts clear-to-send CTS in response to RTS
- CTS heard by all nodes
  - sender transmits data frame
  - other stations defer transmissions

avoid data frame collisions completely using small reservation packets!

#### Collision Avoidance: RTS-CTS exchange

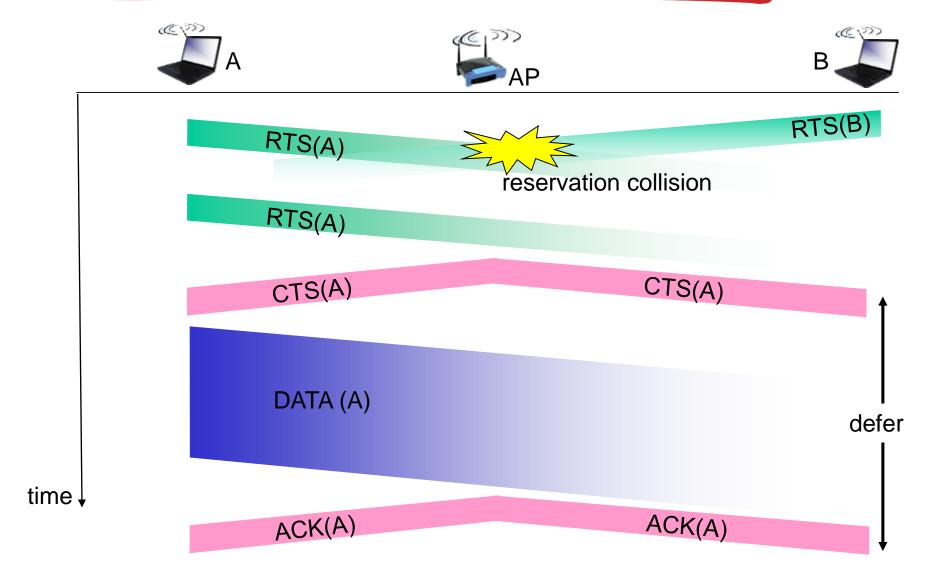

## 802.11 frame: addressing

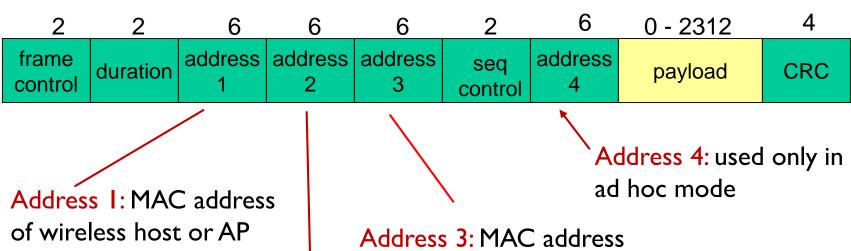


Address 2: MAC address of wireless host or AP transmitting this frame


to receive this frame

Address 3: MAC address of router interface to which AP is attached

## 802.11 frame: addressing

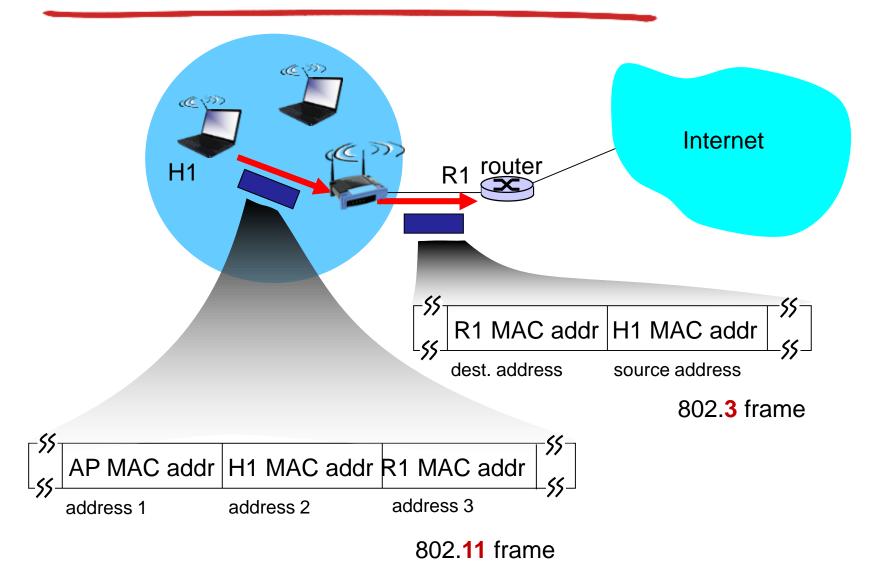


## 802.11 frame: more

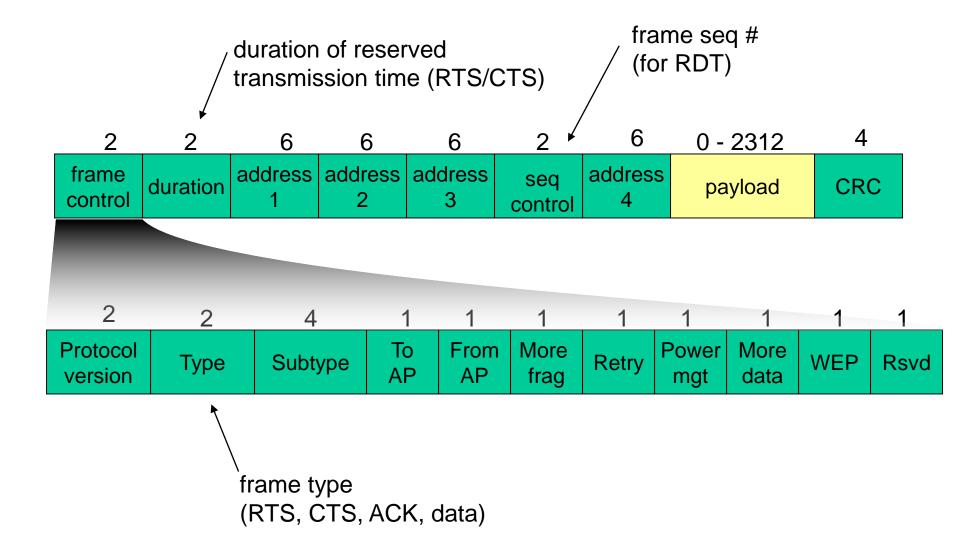

## 802.11: mobility within same subnet


- HI remains in same
   IP subnet: IP address
   can remain same
- switch: which AP is associated with HI?
  - self-learning (Ch. 5): switch will see frame from HI and "remember" which switch port can be used to reach HI

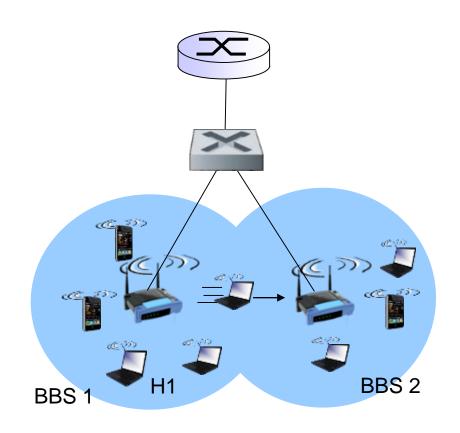


## 802. I I: advanced capabilities

#### Rate adaptation

 base station, mobile dynamically change transmission rate (physical layer modulation technique) as mobile moves, SNR varies

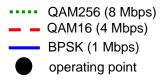

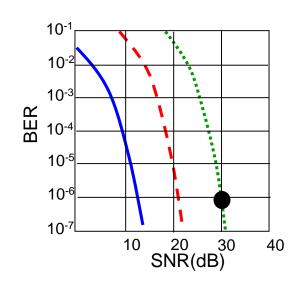

- 1. SNR decreases, BER increase as node moves away from base station
- 2. When BER becomes too high, switch to lower transmission rate but with lower BER


## 802. I I: advanced capabilities

#### power management

- node-to-AP: "I am going to sleep until next beacon frame"
  - AP knows not to transmit frames to this node
  - node wakes up before next beacon frame
- beacon frame: contains list of mobiles with APto-mobile frames waiting to be sent
  - node will stay awake if AP-to-mobile frames to be sent; otherwise sleep again until next beacon frame

## 802.15: personal area network

- less than 10 m diameter
- replacement for cables (mouse, keyboard, headphones)
- ad hoc: no infrastructure
- master/slaves:
  - slaves request permission to send (to master)
  - master grants requests
- 802.15: evolved from Bluetooth specification
  - 2.4-2.5 GHz radio band
  - up to 721 kbps

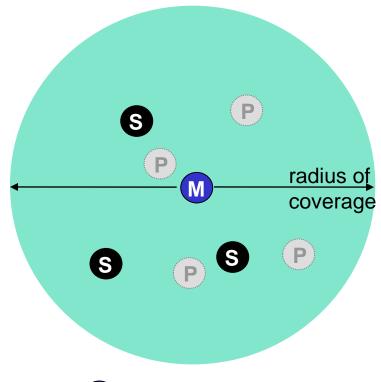

- Master device
- S Slave device
- P Parked device (inactive)